

Type 6:

Installation instructions, half round outlet for Wingrail, outlet with Fasttrack

Installation instructions

Inspect your shipment carefully matching contents with packing slip information. Make sure everything is present. Note any missing or damaged pieces listed on the Bill of Lading before accepting the shipment in order to facilitate a claim for shipping damage.

Euro Air products are for use only as described in the brochure and catalogue published by Euro Air. All other use is without liability for Euro Air A/S. If you have any questions about Euro Air products please contact your local Euro Air office.

Special tips:

1. All outlet components are given a position number which can be found on the washing label (washing label is sewn onto the inside of the outlet, one present at all joints). **When mounting, always connect continuous numbers, example: Pos. 1.1 => Pos. 1.2 => Pos. 1.2 => Pos. 1.3 (by identical pieces, the components are given the same position number).**
2. To hide the clamp you can wrap the collar piece over the clamp
3. When the unit is turned on, gently pull the sock on one end to straighten out any wrinkles, and fix the clip at the end of the outlet to the suspension wire, using the included wire locknut.

Type 6:

Montage vejledning, Wingrail, halvrund posekanal med Fasttrack

Montage vejledning




Inspicer forsendelse omhyggeligt, indhold i kasser skal svare nøjagtigt til vedlagt pakkeliste. Såfremt enkelte dele er blevet beskadiget under transporten, skal dette noteres på fragtbrev før forsendelse accepteres.

Anvendelse af Euro Air's produkter, begrænser sig til de i brochure og katalog nævnte områder. Al anden anvendelse sker på eget ansvar og absolut uden ansvar for Euro Air.



Ved tvivlsspørgsmål, henvend Dem da altid til Euro Air's hovedkontor i Rødning.

Specielle tips:


1. Alle delkomponenter til posen er tildelt et individuelt positionsnummer. Dette nummer kan findes på indvendig side af posen, på det isyede vaskemærke. **Ved montage monteres altid efter fortløbende numre, eksempel: Pos. 1.1 => Pos. 1.2 => Pos. 1.2 => Pos. 1.3 (såfremt flere delkomponenter er identiske har disse identiske positionsnumre).**
2. Buk posekanal rundt om spændebånd så dette skjules
3. Efter opstart træk da forsigtigt i ende af posekanal så eventuelle rynker udglattes, og fiksér sidste clips på montage wiren vha. medleverede wirelås.

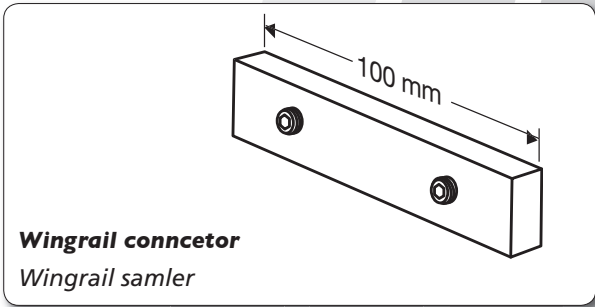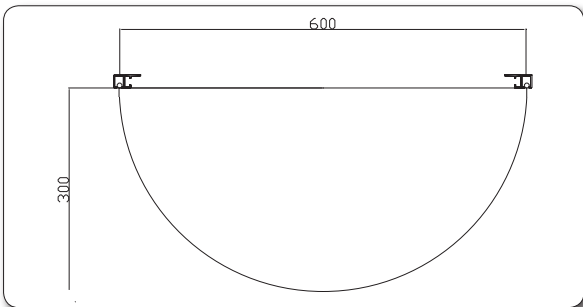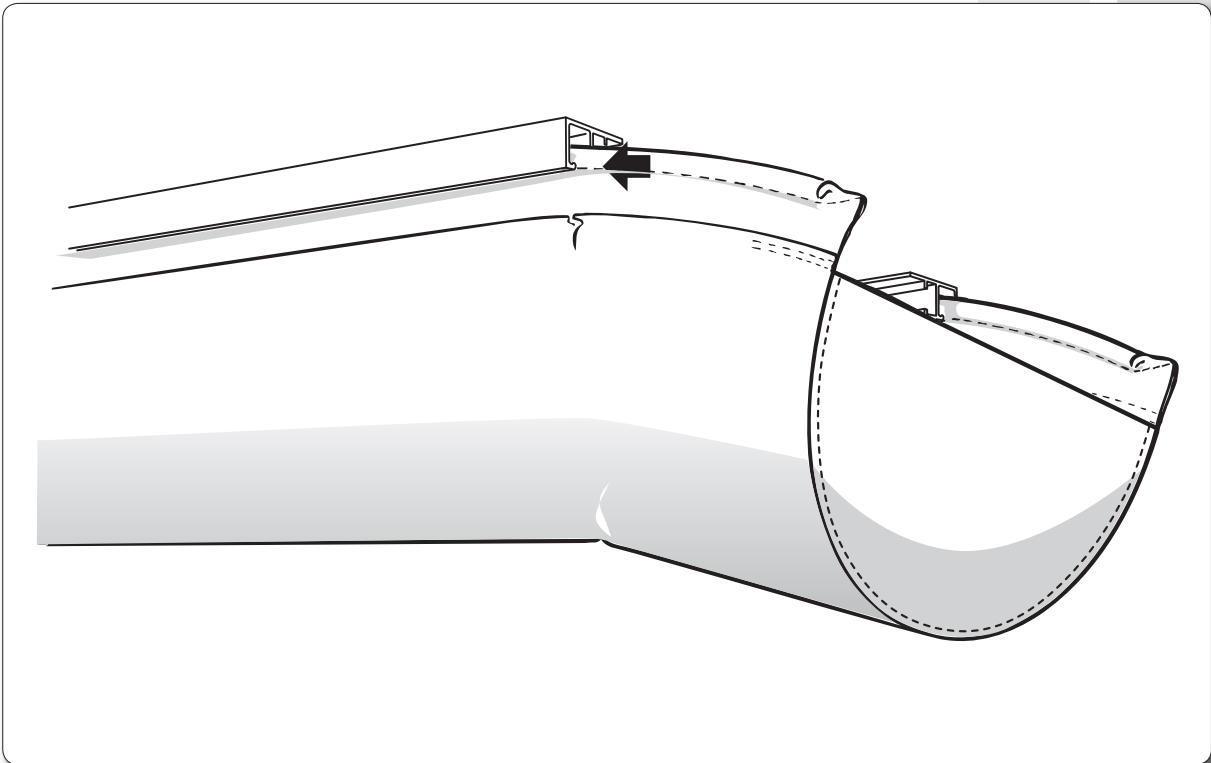

Wingrail conncetor
Wingrail samler

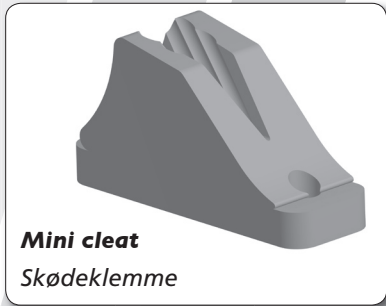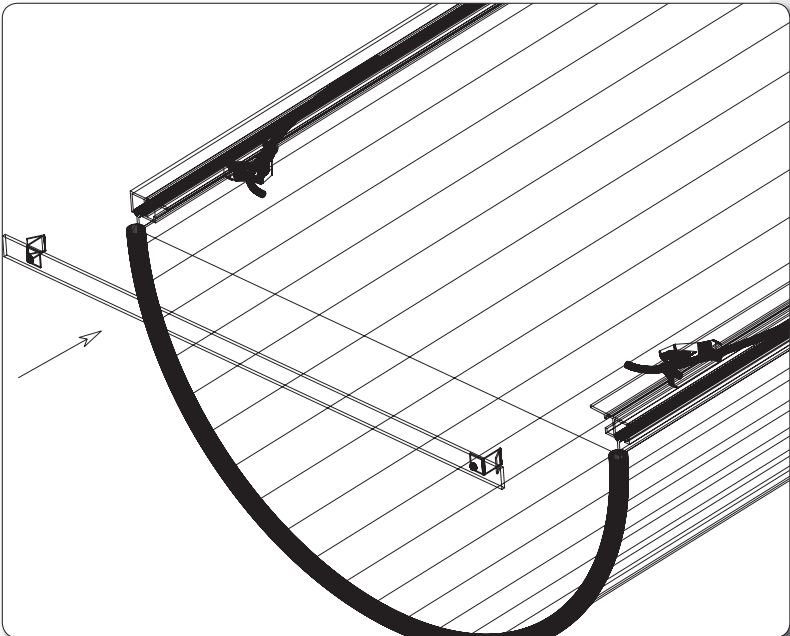

Mini cleat
Skødeklemme

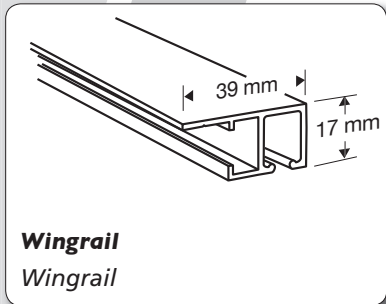

Wingrail
Wingrail



1. Installing half round outlets with Fasttrack into Wingrail

- Attach parallel runs of Wingrail to ceiling using screw every 300-1000mm depending on type of ceiling and size of outlet. Please note, the wing on the rail has a groove for lining up when drilling the holes needed in the rail. Important note: The distance between the rails must be the same as the nominal measure of the outlet, example: a D600 outlet must have rails fitted with distance 600mm center edge to center edge (see drawing left).
- Sections of Wingrail is joined by sliding a Wingrail connector into the side groove of the rail, and then tightening the allen screws. When tightening the allen screws, the 2 rail sections will self-align.
- *Slide outlet onto the Wingrail to fully extended position
- Fix outlet to steel duct/fan by means of clamp

*If you have ordered our special Fasttrack feeder for Wingrail, this is inserted in the side groove of the rail, prior to sliding outlet onto track. This will greatly increase the speed with which an outlet can be mounted.

If "D-Luxe bottom" was ordered you will also have received a set of 2 "mini cleats", and the outlet will have 2 pull cords attached near the bottom end of the outlet. Also you will have received a flat aluminum strip w. two spring steel clips attached.

To mount "D-Luxe bottom":

- Fit the cleats approx. 50mm from the end of the track (the end where the bottom of the outlet will be) using the special flat nuts and screws delivered.
- Pull the two cords tight, and lock these into the cleats, then hide the cord ends over roof of half round outlet.
- To complete the installation click the aluminum strip into the side grooves of the Wingrail.

1. Montage af halvrund posekanal med Fasttrack på Wingrail

- Fastgør de to rækker Wingrail skinne parallelt til loftet med skrue per 300-1000mm afhængig af posekanalens størrelse og loftets beskaffenhed. Bemærk, skinnen har en forpræget borerille for at sikre at boret ikke skrider under boring. Vigtigt: Afstanden mellem skinnerne skal svare til posens nominelle mål, eksempel: for en posekanal D600 monteres skinnerne med 600mm indbyrdes afstand, målt center-center skinne (se illustration, venstre)!
- Wingrail skinner samles ved at skyde den medleverede skinnesamler ind i samler sporet, hvorefter samlerens unbraco skrue spændes. Herved vil skinnen rette sig op, hvorved der sikres en ret montage.
- *Træk posesektionerne på skinnen, lyn delkomponenter sammen, og stræk derefter posen helt ud.
- Fastgør pose til stålkanal/ventilator ved hjælp af spændebånd.

*Såfremt der er bestilt vort specielle montage værktøj (sæt af 2 stk.) for Wingrail skydes disse først ind i samler sporet på skinnen. Herefter kan posen ganske ubesværet trækkes på skinnen, med et minimum af trækpåvirkning nødvendig.

Såfremt der er bestilt "D-luxe bund" til posen medfølger ligeledes 2 stk. "Mini Cleat" (skødeklemme) per pose, og posen vil være udstyret med 2 kraftige træksnore nær bunden. Der medfølger ligeledes en flad aluminiumsprofil med 2 låse clips (fjederstål).

Montage af D-Luxe bund:

- Monter skødeklemmerne ca. 50mm fra skinnens ende (i den ende hvor posens bund vil være). Skødeklemmerne skrues fast i samler sporet vha. medleverede fladmøtrikker samt skruer.
- Posen strækkes helt ud vha. de to træksnore, hvorefter disse fastlåses i skødeklemmen. Den resterende længde træk snor kan placeres ovenpå posens tag.
- Den flade aluminiumsprofil trykkes ind i de to skinneåbninger.

GB

Washing instructions

Cleaning of polyester and Trevira CS

Wash 2-4 times at max 40°C with washing powder in accordance to instructions by manufacturer.

If outlets are heavily soiled, they should be rinsed between washes.

If the outlets are to be disinfected, add up to 200 grams of active chlorine to the final rinse water (N.B. colored socks can lose some of their color when disinfected)

Rinse outlets in clean cold water.

Socks can be spin dried, the exception being outlets with internal rings. Here the rings must be removed prior to drying.

Chemical cleaning of polyester and Trevira CS

Chemical cleaning of outlets should only be attempted in cases where the outlets are slightly dirty. To achieve some degree of disinfection, it is recommended to use chemical cleaning with perchlorethylene.

Washing or chemical cleaning, clean room materials

Washing or chemical cleaning of clean room materials is not recommended under normal circumstances, but is possible following the procedures given for Polyester and Trevira CS material. If the fabric turns slightly grey during operation, the pre-filtration should be examined and possibly exchanged for a filter better suited. During the washing procedure, particles can be picked up by the fabric and later blown into the room. If the clean room socks are being washed there is no further guarantee for the function of the socks from EURO AIR, with regards to particle count.

Cleaning of Inject outlets

EURO AIR Inject outlets do not require cleaning from a flow technical point of view, however aesthetics or hygiene conditions may necessitate the cleaning of the outlets. EURO AIR Inject systems can be cleaned manually on the outside and on the inside. For this purpose a thin water/soap dilution and a brush or a sponge should be used (standard grade washing detergent can be used). After the cleaning the Inject Socks should be rinsed with clean water. If the Inject Sock is very dirty the inside of the sock should be turned out and swept or vacuumed. Use of Hydrocarbon based solvents can cause damage. Under no circumstances use solvents containing Chlorate, this will deteriorate the PVC coating, causing the material to turn brittle, eventually cracking can occur.

Cleaning of M0 Outlets (Glass fibre weave)

These outlets must only be cleaned by means of a damp cloth. A standard commercial grade detergent can be used in a watery solution for this purpose. Outlets must be allowed to drip dry.

DK

Vaskeanvisning

Vask af polyester og Trevira CS

Vask 2-4 gange ved max. 40°C, tilsæt vaskepulver i dosering svarende til fabrikantens anvisning. Såfremt posekanalerne er meget snavsede bør disse skylles mellem hver vask. Efter endt vask efterskylles i rent koldt vand. Såfremt poserne ønskes desinficeret kan dette opnås ved at tilsætte max. 200g aktivt klor til sidste hold skyllevand (vær opmærksom på at farvede kanaler ved denne desinficering kan blive let blegede). Såfremt der desinficeres efterskylles igen med rent koldt vand. Kanaler med interne ringe kan centrifugeres, blot skal ringene demonteres før dette kan foretages.

Kemisk rens af polyester og Trevira CS

Kemisk rens af tekstil kanaler bør kun anvendes i tilfælde hvor disse har en lav- til middel tilsmudsgrad. Ved kemisk rens bør der anvendes perkloræthylen, og kanalerne bør udluftes.

Vask eller kemisk rens af renrumsmaterialer

Vask eller kemisk rens af renrumsmaterialer anbefales ikke under normale omstændigheder, men er dog muligt som nævnt ovenfor for polyester og Trevira CS materiale. Hvis kanalen har en tendens til at blive grålig i farven bør forfiltret efterses, og eventuelt udskiftes med filter af højere filterklasse. Under rense- eller vaskeprocessen kan pose materialet blive forurenet med støvpartikler og lignede, hvorfor Euro Air A/S fralægger sig ansvaret for renrumsklassen efter en eventuel vask.

Rengøring af injekt materiale

Kan ikke maskinvaskes. Euro Air injekt kanaler kræver ikke vask eller rens ud fra et luftteknisk synspunkt, idet dette materiale er ikke-permeabelt, det vil sige, materialet stopper ikke til selv om der støvpartikler tilstede i indblæsningsluften. Poserne kan rengøres manuelt på yder- og inderside med en tynd sæbeopløsning vha. svamp og børste. Efter rengøring vaskes poserne over med rent vand. Der må under ingen omstændigheder bruges klorholdige rengøringsprodukter, idet klor kan nedbryde PVC-belægningen.

Rengøring af glasfibervæv

Kan ikke maskinvaskes. Kan rengøres med fnugfri klud påført tynd opløsning af sæbevand. Skylles efterfølgende med rent vand og dryp tørrer.



MI500006