



DATA BOOK

STANDARD INVERTER PACKAGED AIR-CONDITIONERS

(Split system, air to air heat pump type)

CEILINGING CASSETTE-4 WAY TYPE

FDT71VNPVG
FDT90VNP1VG

DUCT CONNECTED-HIGH STATIC PRESSURE TYPE

FDU71VNPVF1
FDU90VNP1VF2

DUCT CONNECTED-LOW/MIDDLE STATIC PRESSURE TYPE

FDUM71VNPVF1
FDUM90VNP1VF2

CEILING SUSPENDED TYPE

FDE71VNPVG
FDE90VNP1VG

FLOOR STANDING TYPE

FDF71VNPVD1
FDF90VNP1VD2

• Note:

(1) Outdoor unit in this data book will have the service code "/M".

- FDC71VNP → FDC71VNP/M
- FDC90VNP1 → FDC90VNP1/M


CONTENTS

1. SPECIFICATIONS	4
(1) Ceiling cassette-4 way type (FDT).....	4
(2) Duct connected-High static pressure type (FDU)	6
(3) Duct connected-Low / Middle static pressure type (FDUM).....	8
(4) Ceiling suspended type (FDE)	10
(5) Floor standing type (FDF)	12
2. EXTERIOR DIMENSIONS	14
(1) Indoor units	14
(2) Outdoor units	23
(3) Remote control	25
3. ELECTRICAL WIRING	28
(1) Indoor units	28
(2) Outdoor units	35
4. NOISE LEVEL	37
(1) Indoor units	37
(2) Outdoor units	39
5. CHARACTERISTICS OF FAN	40
(1) Duct connected-High static pressure type (FDU)	40
(2) Duct connected-Low / Middle static pressure type (FDUM)	42
6. TEMPERATURE AND VELOCITY DISTRIBUTION	43
(1) Ceiling cassette-4 way type (FDT).....	43
(2) Ceiling suspended type (FDE)	45
(3) Floor standing type (FDF)	47
7. PIPING SYSTEM	48
8. RANGE OF USAGE & LIMITATIONS	49
9. SELECTION CHART	52
9.1 Capacity tables	52
9.2 Correction of cooling and heating capacity in relation to air flow rate control (Fan speed)	59
9.3 Correction of cooling and heating capacity in relation to one way length of refrigerant piping	59
9.4 Height difference between the indoor unit and outdoor unit	59
10. APPLICATION DATA	60
10.1 Installation of indoor unit	60
(1) Ceiling cassette-4 way type (FDT).....	60
(2) Duct connected-High static pressure type (FDU).....	67
(3) Duct connected-Low / Middle static pressure type (FDUM)	73
(4) Ceiling suspended type (FDE)	79

(5) Floor standing type (FDF)	83
(6) Effective range of cool/hot wind (Reference)	87
10.2 Electric wiring work installation	88
(1) FDT series	88
(2) FDU series	92
(3) FDUM, FDE series	96
(4) FDF series	100
10.3 Installation of wired remote control (Option parts)	104
10.4 Installation of outdoor unit	116
11. OPTION PARTS	130
11.1 Wireless kit	130
(1) FDT series (RCN-T-5AW-E2)	130
(2) FDU, FDUM series (RCN-KIT4-E2)	138
(3) FDE series (RCN-E-E3)	146
(4) FDF series (RCN-KIT3-E)	154
11.2 Motion sensor kit	156
(1) FDU, FDUM series (LB-KIT)	156
(2) FDE series (LB-E)	162
(3) User's manual (FDU, FDUM, FDE series)	166
11.3 Current and new models compatibility	168
11.4 Simple wired remote control (RCH-E3)	173
11.5 Filter kit (FDUM series)	179
11.6 Interface kit (SC-BIKN2-E)	181
11.7 Superlink E board (SC-ADNA-E)	185
12. TECHNICAL INFORMATION	187
(1) Ceiling cassette-4 way type (FDT)	187
(2) Duct connected-High static pressure type (FDU)	189
(3) Duct connected-Low/Middle static pressure type (FDUM)	191
(4) Ceiling suspended type (FDE)	193
(5) Floor standing type (FDF)	195

■ How to read the model name


Example: **FDT 90 VNP1 VG**

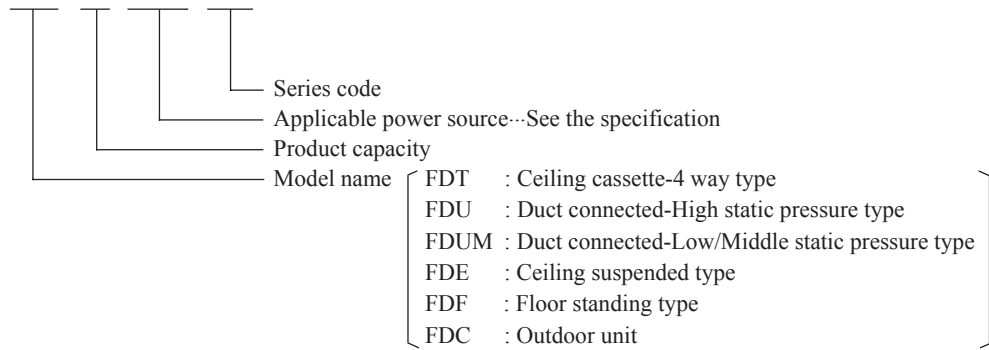


1. SPECIFICATIONS

(1) Ceiling cassette-4 way type (FDT)

Item		Model	FDT71VNPVG			
			Indoor unit	Outdoor unit		
Power source			FDT71VG	FDC71VNP		
			1 Phase 220-240V 50Hz / 220V 60Hz			
Operation data	Nominal cooling capacity (range)	kW	7.1 [1.4(Min.)-7.1(Max.)]			
	Nominal heating capacity (range)	kW	7.1 [1.0(Min.)-7.1(Max.)]			
	Power consumption	Cooling	kW	2.31		
		Heating		1.73		
	Max power consumption		3.27			
	Running current	Cooling	A	10.3 / 10.8		
		Heating		7.7 / 8.1		
	Inrush current, max current		5, 14.5			
	Power factor	Cooling	%	98 / 98		
		Heating		98 / 98		
	EER	Cooling		3.07		
	COP	Heating		4.10		
Sound power level	Cooling	dB(A)	62			
	Heating		67			
Sound pressure level	Cooling	dB(A)	P-Hi : 46 Hi : 35 Me : 34 Lo : 29			
	Heating		54			
Silent mode sound pressure level			49			
Exterior dimensions (Height x Width x Depth)	mm		Unit 236 × 840 × 840 Panel 35 × 950 × 950	640×800(+71)×290		
Exterior appearance (Munsell color)			Plaster white (6.8Y8.9/0.2) near equivalent	Stucco white (4.2Y7.5/1.1) near equivalent		
Net weight	kg		Unit 21 Panel 5	45		
Compressor type & Q'ty			—	RMT5113MDE2 (Twin rotary type)×1		
Compressor motor (Starting method)	kW		—	Direct line start		
Refrigerant oil (Amount, type)	ℓ		—	0.45 (MA68)		
Refrigerant (Type, Amount, pre-charge length)	kg		R410A 1.6kg in outdoor unit (Incl. the amount for the piping of : 15m)			
Heat exchanger			Louver fin & inner grooved tubing	M shape fin & inner grooved tubing		
Refrigerant control			Capillary tubes + Electronic expansion valve			
Fan type & Q'ty			Turbo fan ×1	Propeller fan ×1		
Fan motor (Starting method)	W		50 < Direct line start >	34 < Direct line start >		
Air flow	Cooling	m³/min	P-Hi : 28 Hi : 18 Me : 15 Lo : 12			
	Heating		36			
Available external static pressure	Pa		0	—		
Outside air intake			Possible	—		
Air filter, Quality / Quantity			Pocket plastic net ×1(Washable)	—		
Shock & vibration absorber			Rubber sleeve(for fan motor)	Rubber sleeve(for compressor)		
Electric heater	W		—	—		
Operation control	Remote control		(Option) Wired : RC-EX3 , RC-E5 , RCH-E3 Wireless : RCN-T-5AW-E2			
	Room temperature control		Thermostat by electronics			
	Operation display		—			
Safety equipments			Compressor overheat protection, Overcurrent protection, Frost protection, Serial signal error protection, Indoor fan motor error protection, Heating overload protection(High pressure control), Cooling overload protection, Abnormal discharge temperature protection			
Installation data	Refrigerant piping size (O.D.)	mm	Liquid line: I/U φ 9.52 (3/8") Pipe φ 6.35(1/4")×0.8 O/U φ 6.35 (1/4") Gas line: I/U φ 15.88 (5/8") Pipe φ 12.7(1/2")×0.8 O/U φ 12.7 (1/2")			
	Connecting method		Flare piping	Flare piping		
	Attached length of piping	m	—	—		
	Insulation for piping		Necessary (both Liquid & Gas lines)			
	Refrigerant line (one way) length	m	Max.30m			
	Vertical height diff. between O/U and I/U	m	Max.20m (Outdoor unit is higher)	Max.20m (Outdoor unit is lower)		
Drain hose			Hose connectable with VP25(O.D.32)	Hole size φ 20 x 5pcs		
Drain pump, max lift height	mm		Built-in drain pump , 850	—		
Recommended breaker size	A		—			
L.R.A. (Locked rotor ampere)	A		5.0			
Interconnecting wires	Size x Core number		1.5mm² x4 cores (Including earth cable) / Terminal block (Screw fixing type)			
IP number			IPX0	IPX4		
Standard accessories			Mounting kit, Drain hose	Drain elbow, Drain hole grommet		
Option parts			—			
Notes	(1) The data are measured at the following conditions. The pipe length is 7.5m.					
	Item	Indoor air temperature		Outdoor air temperature	Standards	
Operation		DB	WB	DB		WB
Cooling		27°C	19°C	35°C		24°C
Heating		20°C	—	7°C		6°C
	(2) This air-conditioner is manufactured and tested in conformity with the ISO.					
	(3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.					
	(4) Select the breaker size according to the own national standard.					
	(5) The operation data indicate when the air-conditioner is operated at 230V 50Hz or 220V 60Hz.					

PJF000Z425 

Item		Model	FDT90VNP1VG				
			Indoor unit	FDT100VG	Outdoor unit	FDC90VNP1	
Power source			1 Phase 220-240V 50Hz / 220V 60Hz				
Operation data	Nominal cooling capacity (range)	kW	9.0 [1.9(Min.)-9.0(Max.)]				
	Nominal heating capacity (range)	kW	9.0 [1.5(Min.)-9.0(Max.)]				
	Power consumption	Cooling	kW	2.67			
		Heating		2.19			
	Max power consumption		4.19				
	Running current	Cooling	A	12.0 / 12.5			
		Heating		9.9 / 10.4			
	Inrush current, max current			5, 18			
	Power factor	Cooling	%	97 / 97			
		Heating		96 / 96			
	EER	Cooling		3.37			
	COP	Heating		4.11			
Sound power level	Cooling	dB(A)	63		69		
	Heating		P-Hi : 48 Hi : 39 Me : 37 Lo : 31		57		
Sound pressure level	Cooling	dB(A)	—		55		
	Heating		—		Cooling:52 / Heating:50		
Silent mode sound pressure level			—				
Exterior dimensions (Height x Width x Depth)		mm	Unit 298 × 840 × 840 Panel 35 × 950 × 950		750 x 880(+88) x 340		
Exterior appearance (Munsell color)			Plaster white (6.8Y8.9/0.2) near equivalent		Stucco white (4.2Y7.5/1.1) near equivalent		
Net weight		kg	Unit 25 Panel 5		57		
Compressor type & Q'ty			—		RMT5118MDE2 (Twin rotary type)×1		
Compressor motor (Starting method)		kW	—		Direct line start		
Refrigerant oil (Amount, type)		ℓ	—		0.675 (MA68)		
Refrigerant (Type, amount, pre-charge length)		kg	R410A 2.1kg in outdoor unit (Incl. the amount for the piping of : 15m)				
Heat exchanger			Louver fin & inner grooved tubing		M shape fin & inner grooved tubing		
Refrigerant control			Capillary tubes + Electronic expansion valve				
Fan type & Q'ty			Turbo fan ×1		Propeller fan ×1		
Fan motor (Starting method)		W	140 < Direct line start >		86 < Direct line start >		
Air flow	Cooling	m³/min	P-Hi : 37 Hi : 26 Me : 23 Lo : 17			63	
	Heating					49.5	
Available external static pressure		Pa	0		—		
Outside air intake			Possible				
Air filter, Quality / Quantity			Pocket plastic net ×1(Washable)				
Shock & vibration absorber			Rubber sleeve(for fan motor)		Rubber sleeve (for fan motor & compressor)		
Electric heater		W	—				
Operation control	Remote control		(Option) Wired : RC-EX3, RC-E5, RCH-E3 Wireless : RCN-T-5AW-E2				
	Room temperature control		Thermostat by electronics				
	Operation display		—				
Safety equipments			Compressor overheat protection, Overcurrent protection, Frost protection, Serial signal error protection, Indoor fan motor error protection, Heating overload protection(High pressure control), Cooling overload protection, Abnormal discharge temperature protection				
Installation data	Refrigerant piping size (O.D.)	mm	Liquid line: I/U φ 9.52 (3/8") Pipe φ 6.35(1/4")×0.8 O/U φ 6.35 (1/4") Gas line: I/U φ 15.88 (5/8") Pipe φ 15.88(5/8")×1.0 O/U φ 15.88 (5/8")				
	Connecting method		Flare piping		Flare piping		
	Attached length of piping	m	—				
	Insulation for piping		Necessary (both Liquid & Gas lines)				
	Refrigerant line (one way) length	m	Max.30m				
	Vertical height diff. between O/U and I/U	m	Max.20m (Outdoor unit is higher)		Max.20m (Outdoor unit is lower)		
Drain hose		Hose connectable with VP25(O.D.32)		Hole size φ 20 x 3pcs			
Drain pump, max lift height		mm	Built-in drain pump , 850				
Recommended breaker size		A	—				
L.R.A. (Locked rotor ampere)		A	5.0				
Interconnecting wires		Size x Core number	1.5mm² x 4 cores (Including earth cable) / Terminal block (Screw fixing type)				
IP number			IPX0		IPX4		
Standard accessories			Mounting kit, Drain hose		Drain elbow, Drain hole grommet		
Option parts			—				
Notes		(1) The data are measured at the following conditions. The pipe length is 7.5m.					
Operation	Item	Indoor air temperature		Outdoor air temperature		Standards	
		DB	WB	DB	WB		
	Cooling	27°C	19°C	35°C	24°C		ISO5151-T1
Heating	20°C	—	7°C	6°C			
(2) This air-conditioner is manufactured and tested in conformity with the ISO.							
(3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.							
(4) Select the breaker size according to the own national standard.							
(5) The operation data indicate when the air-conditioner is operated at 230V 50Hz or 220V 60Hz.							

PJF000Z425 

(2) Duct connected-High static pressure type (FDU)

Item		Model	FDU71VNPVF1			
			Indoor unit FDU71VF1	Outdoor unit FDC71VNP		
Power source			1 phase 220-240V 50Hz / 220V 60Hz			
Operation data	Nominal cooling capacity (range)	kW	7.1 [1.4(Min.)-7.1(Max.)]			
	Nominal heating capacity (range)	kW	7.1 [1.0(Min.)-7.1(Max.)]			
	Power consumption	Cooling	kW	2.60		
		Heating		1.89		
	Max power consumption		3.27			
	Running current	Cooling	A	11.5 / 12.0		
		Heating		8.5 / 8.9		
	Inrush current, max current		5, 14.5			
	Power factor	Cooling	%	98 / 98		
		Heating		97 / 97		
	EER	Cooling		2.73		
	COP	Heating		3.76		
	Sound power level	Cooling	dB(A)	65	67	
Heating						
Sound pressure level	Cooling	dB(A)	P-Hi : 38 Hi : 33 Me : 29 Lo : 25			
	Heating					
Silent mode sound pressure level			—	49		
Exterior dimensions (Height × Width × Depth)	mm		280 × 950 × 635	640×800(+71)×290		
Exterior appearance (Munsell color)			—	Stucco white (4.2Y7.5/1.1) near equivalent		
Net weight	kg		34	45		
Compressor type & Q'ty			—	RMT5113MDE2 (Twin rotary type)×1		
Compressor motor (Starting method)	kW		—	Direct line start		
Refrigerant oil (Amount, type)	ℓ		—	0.45 (M-MA68)		
Refrigerant (Type, amount, pre-charge length)	kg		R410A 1.6kg in outdoor unit (Incl. the amount for the piping of : 15m)			
Heat exchanger			Louver fin & inner grooved tubing	M shape fin & inner grooved tubing		
Refrigerant control			Capillary tubes + Electronic expansion valve			
Fan type & Q'ty			Centrifugal fan ×2	Propeller fan ×1		
Fan motor (Starting method)	W		130 < Direct line start >	34 < Direct line start >		
Air flow	Cooling	m ³ /min	P-Hi : 24 Hi : 19 Me : 15 Lo : 10			
	Heating		36			
Available external static pressure	Pa		Standard : 35 Max : 200	—		
Outside air intake			Possible	—		
Air filter, Quality / Quantity			Procure locally	—		
Shock & vibration absorber			Rubber sleeve(for fan motor)	Rubber sleeve(for compressor)		
Electric heater	W		—	—		
Operation control	Remote control		(Option) Wired :RC-EX3, RC-E5,RCH-E3 Wireless : RCN-KIT4-E2			
	Room temperature control		Thermostat by electronics			
	Operation display		—			
Safety equipments			Compressor overheat protection, Overcurrent protection, Frost protection, Serial signal error protection, Indoor fan motor error protection, Heating overload protection(High pressure control), Cooling overload protection			
Installation data	Refrigerant piping size (O.D.)	mm	Liquid line: I/U ϕ 9.52 (3/8") Pipe ϕ 6.35(1/4")×0.8 O/U ϕ 6.35 (1/4") Gas line: I/U ϕ 15.88 (5/8") Pipe ϕ 12.7(1/2")×0.8 O/U ϕ 12.7 (1/2")			
	Connecting method		Flare piping	Flare piping		
	Attached length of piping	m	—	—		
	Insulation for piping		Necessary (both Liquid & Gas lines)			
	Refrigerant line (one way) length	m	Max.30m			
	Vertical height diff. between O/U and I/U	m	Max.20m (Outdoor unit is higher)	Max.20m (Outdoor unit is lower)		
Drain hose			Hose connectable VP25 (I.D.25, O.D.32)	Holes size ϕ 20 × 5pcs		
Drain pump, max lift height	mm		Built-in Drain pump,600	—		
Recommended breaker size	A		—			
L.R.A. (Locked rotor ampere)	A		5.0			
Interconnecting wires	Size × Core number		1.5mm ² ×4 cores(Including earth cable)/ Terminal block(Screw fixing type)			
IP number			IPX0	IPX4		
Standard accessories			Mounting kit, Drain hose	Drain elbow, Drain hole grommet		
Option parts			Motion sensor : LB-KIT			
Notes		(1) The data are measured at the following conditions.			The pipe length is 7.5m.	
Operation	Cooling	Indoor air temperature	Outdoor air temperature	External static pressure of indoor unit	Standards	
		DB	WB			
	27°C	19°C	35°C			24°C
Heating	20°C	—	7°C	6°C	35Pa	ISO5151-T1
<p>(2) This air-conditioner is manufactured and tested in conformity with the ISO.</p> <p>(3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.</p> <p>(4) Select the breaker size according to the own national standard.</p> <p>(5) When wireless remote control is used, fan is 3 speed setting (Hi-Me-Lo) only.</p> <p>(6) The operation data indicates when the air-conditioner is operated at 230V 50Hz or 220V 60Hz.</p> <p>(7) The factory E.S.P. setting is set within the range of 80 - 150 Pa.If SW8-4 is turned to "ON", E.S.P. setting range can be changed to 10 - 200 Pa.(For RC-EX3 and RC-E5 only)</p>						

Item		Model		FDU90VNP1VF2			
				Indoor unit FDU100VF2	Outdoor unit FDC90VNP1		
Power source		1 phase 220-240V 50Hz / 220V 60Hz					
Operation data	Nominal cooling capacity (range)	kW	9.0 [1.9(Min.)-9.0(Max.)]				
	Nominal heating capacity (range)	kW	9.0 [1.5(Min.)-9.0(Max.)]				
	Power consumption	Cooling	kW	2.69			
		Heating	kW	2.25			
	Max power consumption		4.19				
	Running current	Cooling	A	12.0 / 12.5			
		Heating	A	10.1 / 10.6			
	Inrush current, max current		5, 18.0				
	Power factor	Cooling	%	97 / 97			
		Heating	%	97 / 97			
	EER	Cooling		3.35			
	COP	Heating		4.00			
	Sound power level	Cooling	dB(A)	65		69	
		Heating		P-Hi : 44 Hi : 38 Me : 36 Lo : 30		57	
Sound pressure level	Cooling	dB(A)			55		
	Heating				55		
Silent mode sound pressure level			Cooling:52 / Heating:50				
Exterior dimensions (Height × Width × Depth)	mm	280 × 1,370 × 740		750 × 880(+88) × 340			
Exterior appearance (Munsell color)		-		Stucco white (4.2Y7.5/1.1)near equivalent			
Net weight	kg	54		57			
Compressor type & Q'ty		-		RMT5118MDE2 (Twin rotary type)×1			
Compressor motor (Starting method)	kW	-		Direct line start			
Refrigerant oil (Amount, type)	ℓ	-		0.675 (M-MA68)			
Refrigerant (Type, amount, pre-charge length)	kg	R410A 2.1kg in outdoor unit (Incl. the amount for the piping of : 15m)					
Heat exchanger		Louver fin & inner grooved tubing		M shape fin & inner grooved tubing			
Refrigerant control		Capillary tubes + Electronic expansion valve					
Fan type & Q'ty		Centrifugal fan ×3		Propeller fan ×1			
Fan motor (Starting method)	W	100 + 130 < Direct line start >		86 < Direct line start >			
Air flow	Cooling	m³/min	P-Hi : 36 Hi : 28 Me : 25 Lo : 19				
	Heating					63	
Available external static pressure	Pa	Standard : 60 Max : 200		0			
Outside air intake		Possible		-			
Air filter, Quality / Quantity		Procure locally		-			
Shock & vibration absorber		Rubber sleeve(for fan motor)		Rubber sleeve (for fan motor & compressor)			
Electric heater	W	-		-			
Operation control	Remote control	(Option) Wired :RC-EX3, RC-E5,RCH-E3 Wireless : RCN-KIT4-E2					
	Room temperature control	Thermostat by electronics					
	Operation display	-					
Safety equipments		Compressor overheat protection, Overcurrent protection, Frost protection, Serial signal error protection, Indoor fan motor error protection, Heating overload protection(High pressure control), Cooling overload protection					
Installation data	Refrigerant piping size (O.D.)	mm	Liquid line: I/U φ 9.52 (3/8") Pipe φ 6.35(1/4")×0.8 O/U φ 6.35 (1/4") Gas line: I/U φ 15.88 (5/8") Pipe φ 15.88(5/8")×1.0 O/U φ 15.88 (5/8")				
	Connecting method		Flare piping		Flare piping		
	Attached length of piping	m	-		-		
	Insulation for piping		Necessary (both Liquid & Gas lines)				
	Refrigerant line (one way) length	m	Max.30m				
	Vertical height diff. between O/U and I/U	m	Max.20m (Outdoor unit is higher)		Max.20m (Outdoor unit is lower)		
Drain hose		Hose connectable VP25(I.D.25, O.D.32)		Hole size φ 20 × 3pcs			
Drain pump, max lift height	mm	Built-in Drain pump,600		-			
Recommended breaker size	A	-					
L.R.A. (Locked rotor ampere)	A	5.0					
Interconnecting wires	Size × Core number	1.5mm ² ×4 cores (Including earth cable)/ Terminal block (Screw fixing type)					
IP number		IPX0		IPX4			
Standard accessories		Mounting kit, Drain hose		Drain elbow, Drain hole grommet			
Option parts		Motion sensor : LB-KIT					
Notes		(1) The data are measured at the following conditions.		The pipe length is 7.5m.			
Operation	Cooling	Indoor air temperature		Outdoor air temperature		External static pressure of indoor unit	Standards
		DB	WB	DB	WB		
	27°C	19°C	35°C	24°C			
Heating	Indoor air temperature		Outdoor air temperature		60Pa	ISO5151-T1	
	20°C	-	7°C	6°C			
(2) This air-conditioner is manufactured and tested in conformity with the ISO. (3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions. (4) Select the breaker size according to the own national standard. (5) When wireless remote control is used, fan is 3 speed setting (Hi-Me-Lo) only. (6) The operation data indicates when the air-conditioner is operated at 230V 50Hz or 220V 60Hz. (7) The factory E.S.P. setting is set within the range of 80 - 150 Pa.If SW8-4 is turned to "ON", E.S.P. setting range can be changed to 10 - 200 Pa.(For RC-EX3 and RC-E5 only)							

(3) Duct connected-Low / Middle static pressure type (FDUM)

Item		Model		FDUM71VNPVF1			
				Indoor unit FDUM71VF1	Outdoor unit FDC71VNP		
Power source		1 phase 220-240V 50Hz / 220V 60Hz					
Operation data	Nominal cooling capacity (range)	kW	7.1 [1.4(Min.)-7.1(Max.)]				
	Nominal heating capacity (range)	kW	7.1 [1.0(Min.)-7.1(Max.)]				
	Power consumption	Cooling	kW	2.60			
		Heating		1.89			
	Max power consumption		3.27				
	Running current	Cooling	A	11.5 / 12.0			
		Heating		8.5 / 8.9			
	Inrush current, max current		5, 14.5				
	Power factor	Cooling	%	98 / 98			
		Heating		97 / 97			
	EER	Cooling		2.73			
	COP	Heating		3.76			
	Sound power level	Cooling	dB(A)	65		67	
Heating		P-Hi : 38 Hi : 33 Me : 29 Lo : 25		54			
Sound pressure level	Cooling	dB(A)	—		49		
	Heating		—		49		
Exterior dimensions (Height × Width × Depth)	mm	280 × 950 × 635		640×800(+71)×290			
Exterior appearance (Munsell color)		—		Stucco white (4.2Y7.5/1.1)near equivalent			
Net weight	kg	34		45			
Compressor type & Q'ty		—		RMT5113MDE2 (Twin rotary type)×1			
Compressor motor (Starting method)	kW	—		Direct line start			
Refrigerant oil (Amount, type)	ℓ	—		0.45 (M-MA68)			
Refrigerant (Type, amount, pre-charge length)	kg	R410A 1.6kg in outdoor unit (Incl. the amount for the piping of : 15m)					
Heat exchanger		Louver fin & inner grooved tubing		M shape fin & inner grooved tubing			
Refrigerant control		Capillary tubes + Electronic expansion valve					
Fan type & Q'ty		Centrifugal fan ×2		Propeller fan ×1			
Fan motor (Starting method)	W	130 < Direct line start >		34 < Direct line start >			
Air flow	Cooling	m³/min	P-Hi : 24 Hi : 19 Me : 15 Lo : 10		36		
	Heating						
Available external static pressure	Pa	Standard : 35 Max : 100		—			
Outside air intake		Possible		—			
Air filter, Quality / Quantity		Procure locally		—			
Shock & vibration absorber		Rubber sleeve(for fan motor)		Rubber sleeve(for compressor)			
Electric heater	W	—		—			
Operation control	Remote control	(Option) Wired :RC-EX3, RC-E5,RCH-E3 Wireless : RCN-KIT4-E2					
	Room temperature control	Thermostat by electronics					
	Operation display	—					
Safety equipments		Compressor overheat protection, Overcurrent protection, Frost protection, Serial signal error protection, Indoor fan motor error protection, Heating overload protection(High pressure control), Cooling overload protection					
Installation data	Refrigerant piping size (O.D.)	mm	Liquid line: I/U ϕ 9.52 (3/8") Pipe ϕ 6.35(1/4")×0.8 O/U ϕ 6.35 (1/4") Gas line: I/U ϕ 15.88 (5/8") Pipe ϕ 12.7(1/2")×0.8 O/U ϕ 12.7 (1/2")				
	Connecting method		Flare piping		Flare piping		
	Attached length of piping	m	—		—		
	Insulation for piping		Necessary (both Liquid & Gas lines)				
	Refrigerant line (one way) length	m	Max.30m				
	Vertical height diff. between O/U and I/U	m	Max.20m (Outdoor unit is higher)		Max.20m (Outdoor unit is lower)		
Drain hose		Hose connectable VP25 (I.D.25, O.D.32)		Hole size ϕ 20 x 5pcs			
Drain pump, max lift height	mm	Built-in Drain pump,600		—			
Recommended breaker size	A	—					
L.R.A. (Locked rotor ampere)	A	5.0					
Interconnecting wires	Size × Core number	1.5mm ² ×4 cores (Including earth cable)/ Terminal block (Screw fixing type)					
IP number		IPX0		IPX4			
Standard accessories		Mounting kit, Drain hose		Drain elbow, Drain hole grommet			
Option parts		Filter set : UM-FL2EF, Motion sensor : LB-KIT					
Notes		(1) The data are measured at the following conditions.		The pipe length is 7.5m.			
Operation	Cooling	Indoor air temperature		Outdoor air temperature		External static pressure of indoor unit	Standards
		DB	WB	DB	WB		
	27°C	19°C	35°C	24°C			
Heating	20°C	—	7°C	6°C	35Pa	ISO5151-T1	
<p>(2) This air-conditioner is manufactured and tested in conformity with the ISO.</p> <p>(3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.</p> <p>(4) Select the breaker size according to the own national standard.</p> <p>(5) The operation data indicates when the air-conditioner is operated at 230V 50Hz or 220V 60Hz.</p> <p>(6) Static pressure of optional air filter "UM-FL2EF" is 5Pa initially.</p> <p>(7)The external static pressure setting can be changed to 10-100Pa. (For RC-EX3 and RC-E5 only)</p>							

Item		Model	FDUM90VNP1VF2			
			Indoor unit FDUM100VF2	Outdoor unit FDC90VNP1		
Power source			1 phase 220-240V 50Hz / 220V 60Hz			
Operation data	Nominal cooling capacity (range)	kW	9.0 [1.9(Min.)-9.0(Max.)]			
	Nominal heating capacity (range)	kW	9.0 [1.5(Min.)-9.0(Max.)]			
	Power consumption	Cooling	kW	2.69		
		Heating		2.25		
	Max power consumption		4.19			
	Running current	Cooling	A	12.0 / 12.5		
		Heating		10.1 / 10.6		
	Inrush current, max current		5, 18.0			
	Power factor	Cooling	%	97 / 97		
		Heating		97 / 97		
	EER	Cooling		3.35		
	COP	Heating		4.00		
	Sound power level	Cooling	dB(A)	65	69	
		Heating				
Sound pressure level	Cooling	dB(A)	P-Hi : 44 Hi : 38 Me : 36 Lo : 30			
	Heating		57 55			
Silent mode sound pressure level			Cooling:52 / Heating:50			
Exterior dimensions (Height × Width × Depth)	mm	280 × 1370 × 740		750 × 880(+88) × 340		
Exterior appearance (Munsell color)		-		Stucco white (4.2Y7.5/1.1)near equivalent		
Net weight	kg	54		57		
Compressor type & Q'ty		-		RMT5118MDE2 (Twin rotary type)×1		
Compressor motor (Starting method)	kW	-		Direct line start		
Refrigerant oil (Amount, type)	ℓ	-		0.675 (M-MA68)		
Refrigerant (Type, amount, pre-charge length)	kg	R410A 2.1kg in outdoor unit (Incl. the amount for the piping of : 15m)				
Heat exchanger		Louver fin & inner grooved tubing		M shape fin & inner grooved tubing		
Refrigerant control		Capillary tubes + Electronic expansion valve				
Fan type & Q'ty		Centrifugal fan ×3		Propeller fan ×1		
Fan motor (Starting method)	W	100 + 130 < Direct line start >		86 < Direct line start >		
Air flow	Cooling	m³/min	P-Hi : 36 Hi : 28 Me : 25 Lo : 19			
	Heating		63 49.5			
Available external static pressure	Pa	Standard : 60 Max : 100		0		
Outside air intake		Possible		-		
Air filter, Quality / Quantity		Procure locally		-		
Shock & vibration absorber		Rubber sleeve(for fan motor)		Rubber sleeve (for fan motor & compressor)		
Electric heater	W	-		-		
Operation control	Remote control	(Option) Wired :RC-EX3, RC-E5,RCH-E3 Wireless : RCN-KIT4-E2				
	Room temperature control	Thermostat by electronics				
	Operation display	-				
Safety equipments		Compressor overheat protection, Overcurrent protection, Frost protection, Serial signal error protection, Indoor fan motor error protection, Heating overload protection(High pressure control), Cooling overload protection				
Installation data	Refrigerant piping size (O.D.)	mm	Liquid line: I/U φ 9.52 (3/8") Pipe φ 6.35(1/4")×0.8 O/U φ 6.35 (1/4") Gas line: I/U φ 15.88 (5/8") Pipe φ 15.88(5/8")×1.0 O/U φ 15.88 (5/8")			
	Connecting method		Flare piping			
	Attached length of piping	m	-			
	Insulation for piping		Necessary (both Liquid & Gas lines)			
	Refrigerant line (one way) length	m	Max.30m			
	Vertical height diff. between O/U and I/U	m	Max.20m (Outdoor unit is higher)		Max.20m (Outdoor unit is lower)	
Drain hose		Hose connectable VP25(I.D.25, O.D.32)		Hole size φ 20 x 3pcs		
Drain pump, max lift height	mm	Built-in Drain pump,600		-		
Recommended breaker size	A	-				
L.R.A. (Locked rotor ampere)	A	5.0				
Interconnecting wires	Size × Core number	1.5mm²×4 cores (Including earth cable)/ Terminal block (Screw fixing type)				
IP number		IPX0		IPX4		
Standard accessories		Mounting kit, Drain hose		Drain elbow, Drain hole grommet		
Option parts		Filter set : UM-FL3EF, Motion sensor : LB-KIT				
Notes		(1) The data are measured at the following conditions.		The pipe length is 7.5m.		
Operation	Cooling	Indoor air temperature		External static pressure of indoor unit	Standards	
		DB	WB			DB
	27°C	19°C	35°C			24°C
Heating	20°C	-	7°C	6°C	60Pa	ISO5151-T1
<p>(2) This air-conditioner is manufactured and tested in conformity with the ISO.</p> <p>(3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.</p> <p>(4) Select the breaker size according to the own national standard.</p> <p>(5) The operation data indicates when the air-conditioner is operated at 230V 50Hz or 220V 60Hz.</p> <p>(6) Static pressure of optional air filter "UM-FL3EF" is 5Pa initially.</p> <p>(7)The external static pressure setting can be changed to 10-100Pa. (For RC-EX3 and RC-E5 only)</p>						


(4) Ceiling suspended type (FDE)

Item		Model	FDE71VNPVG			
			Indoor unit FDE71VG	Outdoor unit FDC71VNP		
Power source			1 Phase 220-240V 50Hz / 220V 60Hz			
Operation data	Nominal cooling capacity (range)	kW	7.1 [1.4(Min.)-7.1(Max.)]			
	Nominal heating capacity (range)	kW	7.1 [1.0(Min.)-7.1(Max.)]			
	Power consumption	Cooling	kW	2.50		
		Heating		1.96		
	Max power consumption		3.27			
	Running current	Cooling	A	11.3 / 11.8		
		Heating		8.8 / 9.2		
	Inrush current, max current		5 , 14.5			
	Power factor	Cooling	%	96		
		Heating		97		
	EER	Cooling		2.84		
	COP	Heating		3.62		
	Sound power level	Cooling	dB(A)	60	67	
Heating						
Sound pressure level	Cooling	dB(A)	P-Hi : 47 Hi : 41 Me : 37 Lo : 32			
	Heating					
Silent mode sound pressure level			—	49		
Exterior dimensions (Height x Width x Depth)	mm		210 × 1,320 × 690	640×800(+71)×290		
Exterior appearance (Munsell color)			Plaster white (6.8Y8.9/0.2) near equivalent	Stucco white (4.2Y7.5/1.1) near equivalent		
Net weight	kg		33	45		
Compressor type & Q'ty			—	RMT5113MDE2 (Twin rotary type)×1		
Compressor motor (Starting method)	kW		—	Direct line start		
Refrigerant oil (Amount, type)	ℓ		—	0.45 (M-MA68)		
Refrigerant (Type, amount, pre-charge length)	kg		R410A 1.6kg in outdoor unit (Incl. the amount for the piping of : 15m)			
Heat exchanger			Louver fin & inner grooved tubing	M shape fin & inner grooved tubing		
Refrigerant control			Capillary tubes + Electronic expansion valve			
Fan type & Q'ty			Centrifugal fan ×4	Propeller fan ×1		
Fan motor (Starting method)	W		50 < Direct line start >	34 < Direct line start >		
Air flow	Cooling	m³/min	P-Hi : 20 Hi : 16 Me : 13 Lo : 10			
	Heating		36			
Available external static pressure	Pa		0	—		
Outside air intake			Not possible	—		
Air filter, Quality / Quantity			Pocket plastic net ×2(Washable)	—		
Shock & vibration absorber			Rubber sleeve(for fan motor)	Rubber sleeve(for compressor)		
Electric heater	W		—	—		
Operation control	Remote control		(Option) Wired :RC-EX3, RC-E5,RCH-E3 Wireless : RCN-E-E3			
	Room temperature control		Thermostat by electronics			
	Operation display		—			
Safety equipments			Compressor overheat protection, Overcurrent protection, Frost protection, Serial signal error protection, Indoor fan motor error protection, Heating overload protection(High pressure control), Cooling overload protection			
Installation data	Refrigerant piping size (O.D.)	mm	Liquid line: I/U φ 9.52 (3/8") Pipe φ 6.35(1/4")×0.8 O/U φ 6.35 (1/4")			
			Gas line: I/U φ 15.88 (5/8") Pipe φ 12.7(1/2")×0.8 O/U φ 12.7 (1/2")			
	Connecting method		Flare piping	Flare piping		
	Attached length of piping	m	—	—		
	Insulation for piping		Necessary (both Liquid & Gas lines)			
	Refrigerant line (one way) length	m	Max.30m			
Vertical height diff. between O/U and I/U	m	Max.20m (Outdoor unit is higher)	Max.20m (Outdoor unit is lower)			
Drain hose		Hose connectable with VP20(O.D.26)		Hole size φ 20 x 5pcs		
Drain pump, max lift height	mm		—	—		
Recommended breaker size	A		—			
L.R.A. (Locked rotor ampere)	A		5.0			
Interconnecting wires	Size x Core number		1.5mm²×4 cores (Including earth cable) / Terminal block (Screw fixing type)			
IP number			IPX0	IPX4		
Standard accessories			Mounting kit, Drain hose	Drain elbow, Drain hole grommet		
Option parts			Motion sensor : LB-E			
Notes	(1) The data are measured at the following conditions. The pipe length is 7.5m.					
	Item	Indoor air temperature		Outdoor air temperature		Standards
Operation		DB	WB	DB	WB	
	Cooling	27°C	19°C	35°C	24°C	
	Heating	20°C	—	7°C	6°C	ISO5151-T1
	(2) This air-conditioner is manufactured and tested in conformity with the ISO.					
	(3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.					
	(4) Select the breaker size according to the own national standard.					
	(5) The operation data indicate when the air-conditioner is operated at 230V 50Hz or 220V 60Hz.					

Item		Model	FDE90VNP1VG																											
			Indoor unit FDE100VG	Outdoor unit FDC90VNP1																										
Power source			1 Phase 220-240V 50Hz / 220V 60Hz																											
Operation data	Nominal cooling capacity (range)	kW	9.0 [1.9(Min.)-9.0(Max.)]																											
	Nominal heating capacity (range)	kW	9.0 [1.5(Min.)-9.0(Max.)]																											
	Power consumption	Cooling	kW	2.75																										
		Heating		2.22																										
	Max power consumption		4.19																											
	Running current	Cooling	A	12.3 / 12.9																										
		Heating		10.0 / 10.4																										
	Inrush current, max current		5 , 18.0																											
	Power factor	Cooling	%	97																										
		Heating		97																										
	EER	Cooling		3.27																										
	COP	Heating		4.05																										
	Sound power level	Cooling	dB(A)	64																										
Heating		69																												
Sound pressure level	Cooling	dB(A)	P-Hi : 48 Hi : 43 Me : 38 Lo : 34																											
	Heating		57																											
Silent mode sound pressure level			55																											
Exterior dimensions (Height x Width x Depth)		mm	250 x 1,620 x 690																											
Exterior appearance (Munsell color)			Plaster white (6.8Y8.9/0.2) near equivalent																											
Net weight		kg	43																											
Compressor type & Q'ty			RMT5118MDE2 (Twin rotary type)x1																											
Compressor motor (Starting method)		kW	Direct line start																											
Refrigerant oil (Amount, type)		ℓ	0.675 (M-MA68)																											
Refrigerant (Type, amount, pre-charge length)		kg	R410A 2.1kg in outdoor unit (Incl. the amount for the piping of : 15m)																											
Heat exchanger			Louver fin & inner grooved tubing																											
Refrigerant control			M shape fin & inner grooved tubing																											
Fan type & Q'ty			Capillary tubes + Electronic expansion valve																											
Fan motor (Starting method)		W	Centrifugal fan x4																											
Air flow		m³/min	Propeller fan x1																											
Available external static pressure		Pa	80 < Direct line start >																											
Outside air intake			86 < Direct line start >																											
Air filter, Quality / Quantity			P-Hi : 32 Hi : 26 Me : 21 Lo : 16.5																											
Shock & vibration absorber			63																											
Electric heater		W	49.5																											
Remote control			0																											
Room temperature control			Not possible																											
Operation display			Pocket plastic net x2(Washable)																											
Safety equipments			Rubber sleeve(for fan motor)																											
Refrigerant piping size (O.D.)		mm	Rubber sleeve (for fan motor & compressor)																											
Connecting method			Electric heater																											
Attached length of piping		m	(Option) Wired :RC-EX3, RC-E5,RCH-E3 Wireless : RCN-E-E3																											
Insulation for piping			Thermostat by electronics																											
Refrigerant line (one way) length		m	Compressor overheat protection, Overcurrent protection, Frost protection, Serial signal error protection, Indoor fan motor error protection, Heating overload protection(High pressure control), Cooling overload protection																											
Vertical height diff. between O/U and I/U		m	Liquid line: I/U φ 9.52 (3/8") Pipe φ 6.35(1/4")x0.8 O/U φ 6.35 (1/4")																											
Drain hose		mm	Gas line: I/U φ 15.88 (5/8") Pipe φ 15.88 (5/8")x1.0 O/U φ 15.88 (5/8")																											
Recommended breaker size		A	Flare piping																											
L.R.A. (Locked rotor ampere)		A	Flare piping																											
Interconnecting wires		Size x Core number	Necessary (both Liquid & Gas lines)																											
IP number			Max.30m																											
Standard accessories			Max.20m (Outdoor unit is higher)																											
Option parts			Max.20m (Outdoor unit is lower)																											
Notes			Hose connectable with VP20(O.D.26)																											
			Hole size φ 20 x 3pcs																											
			—																											
			—																											
			5.0																											
			1.5mm²x4 cores (Including earth cable) / Terminal block (Screw fixing type)																											
			IPX0																											
			IPX4																											
			Mounting kit, Drain hose																											
			Drain elbow, Drain hole grommet																											
			Motion sensor : LB-E																											
<p>Notes (1) The data are measured at the following conditions. The pipe length is 7.5m.</p> <table border="1"> <thead> <tr> <th rowspan="2">Item</th> <th colspan="2">Indoor air temperature</th> <th colspan="2">Outdoor air temperature</th> <th rowspan="2">Standards</th> </tr> <tr> <th>DB</th> <th>WB</th> <th>DB</th> <th>WB</th> </tr> </thead> <tbody> <tr> <td>Operation</td> <td>27°C</td> <td>19°C</td> <td>35°C</td> <td>24°C</td> <td rowspan="3">ISO5151-T1</td> </tr> <tr> <td>Cooling</td> <td>27°C</td> <td>19°C</td> <td>35°C</td> <td>24°C</td> </tr> <tr> <td>Heating</td> <td>20°C</td> <td>—</td> <td>7°C</td> <td>6°C</td> </tr> </tbody> </table> <p>(2) This air-conditioner is manufactured and tested in conformity with the ISO.</p> <p>(3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.</p> <p>(4) Select the breaker size according to the own national standard.</p> <p>(5) The operation data indicate when the air-conditioner is operated at 230V 50Hz or 220V 60Hz.</p>					Item	Indoor air temperature		Outdoor air temperature		Standards	DB	WB	DB	WB	Operation	27°C	19°C	35°C	24°C	ISO5151-T1	Cooling	27°C	19°C	35°C	24°C	Heating	20°C	—	7°C	6°C
Item	Indoor air temperature		Outdoor air temperature			Standards																								
	DB	WB	DB	WB																										
Operation	27°C	19°C	35°C	24°C	ISO5151-T1																									
Cooling	27°C	19°C	35°C	24°C																										
Heating	20°C	—	7°C	6°C																										

(5) Floor standing type (FDF)

Item		Model	FDF71VNPVD1			
			Indoor unit FDF71VD1	Outdoor unit FDC71VNP		
Power source			1 phase 220-240V 50Hz / 220V 60Hz			
Operation data	Nominal cooling capacity (range)	kW	7.1 [1.4(Min.)-7.1(Max.)]			
	Nominal heating capacity (range)	kW	7.1 [1.0(Min.)-7.1(Max.)]			
	Power consumption	Cooling	kW	2.67		
		Heating		2.04		
	Max power consumption		3.27			
	Running current	Cooling	A	11.9 / 12.4		
		Heating		9.1 / 9.5		
	Inrush current, max current		5, 14.5			
	Power factor	Cooling	%	98 / 98		
		Heating		97 / 97		
	EER	Cooling		2.66		
	COP	Heating		3.48		
	Sound power level	Cooling	dB(A)	61	67	
Heating		P-Hi : 42 Hi : 39 Me : 35 Lo : 33				
Sound pressure level	Cooling	dB(A)	54			
	Heating		54			
Silent mode sound pressure level			49			
Exterior dimensions (Height × Width × Depth)	mm		1,850 × 600 × 320	640×800(+71)×290		
Exterior appearance (Munsell color)			Ceramic white (N8.0)near equivalent	Stucco white (4.2Y7.5/1.1)near equivalent		
Net weight	kg		49	45		
Compressor type & Q'ty			—	RMT5113MDE2 (Twin rotary type)×1		
Compressor motor (Starting method)	kW		—	Direct line start		
Refrigerant oil (Amount, type)	ℓ		—	0.45 MA68		
Refrigerant (Type, amount, pre-charge length)	kg		R410A 1.6kg in outdoor unit (Incl. the amount for the piping of : 8m)			
Heat exchanger			Louver fin & inner grooved tubing	M shape fin & inner grooved tubing		
Refrigerant control			Capillary tubes + Electronic expansion valve			
Fan type & Q'ty			Centrifugal fan ×1	Propeller fan ×1		
Fan motor (Starting method)	W		157 < Direct line start >	34 < Direct line start >		
Air flow	Cooling	m³/min	P-Hi : 20 Hi : 18 Me : 16 Lo : 14			
	Heating		36			
Available external static pressure	Pa		0	—		
Outside air intake			Not possible			
Air filter, Quality / Quantity			Plastic net ×1(Washable)			
Shock & vibration absorber			Rubber sleeve(for fan motor)	Rubber sleeve(for compressor)		
Electric heater	W		—			
Operation control	Remote control		RC-E5 (Installed) / Wireless : RCN-KIT3-E (Option)			
	Room temperature control		Thermostat by electronics			
	Operation display		—			
Safety equipments			Compressor overheat protection, Overcurrent protection, Frost protection, Serial signal error protection, Indoor fan motor error protection, Heating overload protection(High pressure control), Cooling overload protection			
Installation data	Refrigerant piping size (O.D.)	mm	Liquid line: I/U φ 9.52 (3/8") Pipe φ 6.35(1/4")×0.8 O/U φ 6.35 (1/4") Gas line: I/U φ 15.88 (5/8") Pipe φ 12.7(1/2")×0.8 O/U φ 12.7 (1/2")			
	Connecting method		Flare piping	Flare piping		
	Attached length of piping	m	—			
	Insulation for piping		Necessary (both Liquid & Gas lines)			
	Refrigerant line (one way) length	m	Max.23m			
	Vertical height diff. between O/U and I/U	m	Max.20m (Outdoor unit is higher)	Max.20m (Outdoor unit is lower)		
Drain hose			Hose Connectable with VP20	Hole size φ 20 × 5pcs		
Drain pump, max lift height	mm		—			
Recommended breaker size	A		—			
L.R.A. (Locked rotor ampere)	A		5.0			
Interconnecting wires	Size x Core number		1.5mm²×4 cores(Including earth cable)/ Terminal block(Screw fixing type)			
IP number			IPX0	IPX4		
Standard accessories			Mounting kit	Drain elbow, Drain hole grommet		
Option parts			—			
Notes		(1) The data are measured at the following conditions. The pipe length is 7.5m.				
Operation	Item	Indoor air temperature		Outdoor air temperature		Standards
		DB	WB	DB	WB	
	Cooling	27°C	19°C	35°C	24°C	
Heating	20°C	—	7°C	6°C		
(2) This air-conditioner is manufactured and tested in conformity with the ISO.						
(3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.						
(4) Select the breaker size according to the own national standard.						
(5) When wireless remote control is used, fan is 3 speed setting (Hi-Me-Lo) only.						
(6) The operation data indicates when the air-conditioner is operated at 230V 50Hz or 220V 60Hz.						

PGA000Z812 

Item		Model	FDF90VNP1VD2		
			Indoor unit FDF100VD2	Outdoor unit FDC90VNP1	
Power source			1 phase 220-240V 50Hz / 220V 60Hz		
Operation data	Nominal cooling capacity (range)	kW	9.0 [1.9(Min.)-9.0(Max.)]		
	Nominal heating capacity (range)	kW	9.0 [1.5(Min.)-9.0(Max.)]		
	Power consumption	Cooling	kW	2.81	
		Heating		2.25	
	Max power consumption		4.19		
	Running current	Cooling	A	12.6 / 13.2	
		Heating		10.1 / 10.6	
	Inrush current, max current		5, 18.0		
	Power factor	Cooling	%	97 / 97	
		Heating		97 / 97	
	EER	Cooling		3.20	
	COP	Heating		4.00	
	Sound power level	Cooling	dB(A)	65	
Heating		69			
Sound pressure level	Cooling	dB(A)	P-Hi : 54 Hi : 50 Me : 48 Lo : 44		
	Heating		57 55		
Silent mode sound pressure level			Cooling:52 / Heating:50		
Exterior dimensions (Height × Width × Depth)	mm		1,850 × 600 × 320	750 × 880(+88) × 340	
Exterior appearance (Munsell color)			Ceramic white (N8.0)near equivalent	Stucco white (4.2Y7.5/1.1)near equivalent	
Net weight	kg		52	57	
Compressor type & Q'ty			—	RMT5118MDE2 (Twin rotary type)×1	
Compressor motor (Starting method)	kW		—	Direct line start	
Refrigerant oil (Amount, type)	ℓ		—	0.675 MA68	
Refrigerant (Type, amount, pre-charge length)	kg		R410A 2.1kg in outdoor unit (Incl. the amount for the piping of : 8m)		
Heat exchanger			Louver fin & inner grooved tubing	M shape fin & inner grooved tubing	
Refrigerant control			Capillary tubes + Electronic expansion valve		
Fan type & Q'ty			Centrifugal fan ×1	Propeller fan ×1	
Fan motor (Starting method)	W		157 < Direct line start >	86 < Direct line start >	
Air flow	Cooling	m³/min	P-Hi : 29 Hi : 26 Me : 23 Lo : 19		
	Heating		63 49.5		
Available external static pressure	Pa		0	0	
Outside air intake			Not possible	—	
Air filter, Quality / Quantity			Plastic net ×1(Washable)	—	
Shock & vibration absorber			Rubber sleeve(for fan motor)	Rubber sleeve (for fan motor & compressor)	
Electric heater	W		—	—	
Operation control	Remote control		RC-E5 (Installed) / Wireless : RCN-KIT3-E (Option)		
	Room temperature control		Thermostat by electronics		
	Operation display		—		
Safety equipments			Compressor overheat protection, Overcurrent protection, Frost protection, Serial signal error protection, Indoor fan motor error protection, Heating overload protection(High pressure control), Cooling overload protection		
Installation data	Refrigerant piping size (O.D.)	mm	Liquid line: I/U φ 9.52 (3/8") Pipe φ 6.35(1/4")×0.8 O/U φ 6.35 (1/4") Gas line: I/U φ 15.88 (5/8") Pipe φ 15.88(5/8")×1.0 O/U φ 15.88 (5/8")		
	Connecting method		Flare piping	Flare piping	
	Attached length of piping	m	—	—	
	Insulation for piping		Necessary (both Liquid & Gas lines)		
	Refrigerant line (one way) length	m	Max.23m		
	Vertical height diff. between O/U and I/U	m	Max.20m(Outdoor unit is higher)	Max.20m(Outdoor unit is lower)	
Drain hose			Hose connectable with VP20	Hole size φ 20 × 3pcs	
Drain pump, max lift height	mm		—	—	
Recommended breaker size	A		5.0		
L.R.A. (Locked rotor ampere)	A		5.0		
Interconnecting wires	Size × Core number		1.5mm ² ×4 cores(Including earth cable)/ Terminal block(Screw fixing type)		
IP number			IPX0	IPX4	
Standard accessories			Mounting kit	Drain elbow, Drain hole grommet	
Option parts			—		

Notes (1) The data are measured at the following conditions.

The pipe length is 7.5m.

Operation	Indoor air temperature		Outdoor air temperature		Standards
	DB	WB	DB	WB	
Cooling	27°C	19°C	35°C	24°C	ISO5151-T1
Heating	20°C	—	7°C	6°C	


(2) This air-conditioner is manufactured and tested in conformity with the ISO.

(3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.

(4) Select the breaker size according to the own national standard.

(5) When wireless remote control is used, fan is 3 speed setting (Hi-Me-Lo) only.

(6) The operation data indicates when the air-conditioner is operated at 230V 50Hz or 220V 60Hz.

PGA000Z812 







2. EXTERIOR DIMENSIONS

(1) Indoor units

(a) Ceiling cassette-4 way type (FDT)


Model FDT71VG

Symbol	Content
A	Gas piping φ15.88(5/8") (Flare)
B	Liquid piping φ9.52(3/8") (Flare)
C	Drain piping VP25 (O.D.32)
D	Hole for wiring (M10 or M8)
F	Suspension bolts (Knock out)
G	Outside air opening for ducting (Knock out)
H1	Air outlet opening for ducting φ125 (Knock out)
H2	Air outlet opening for ducting φ200 (Knock out)

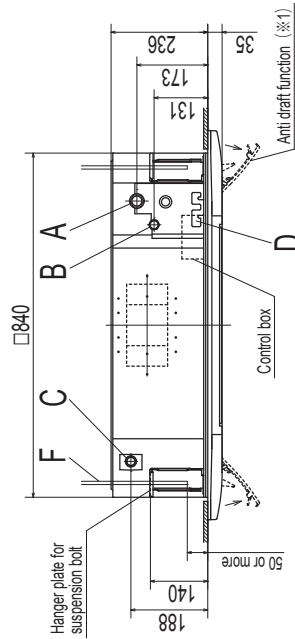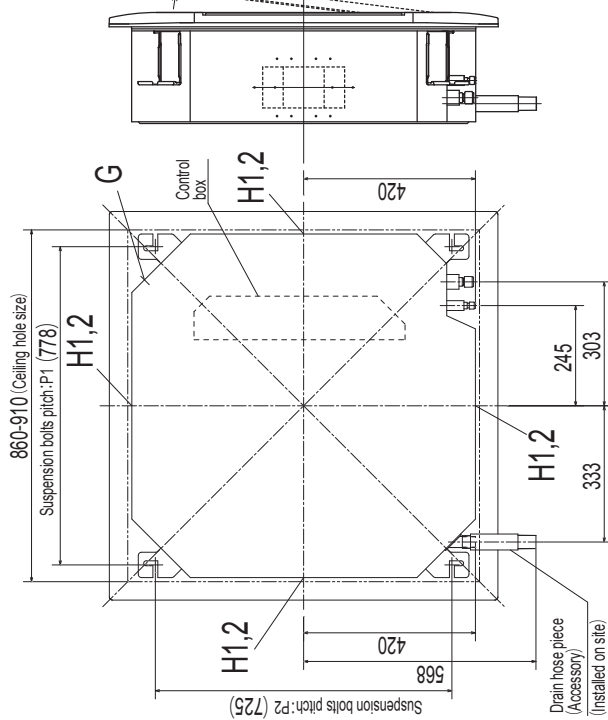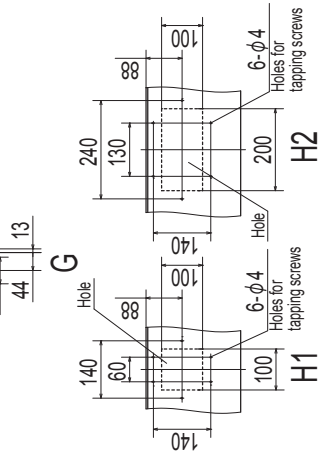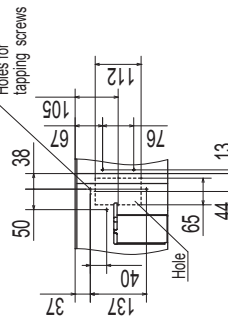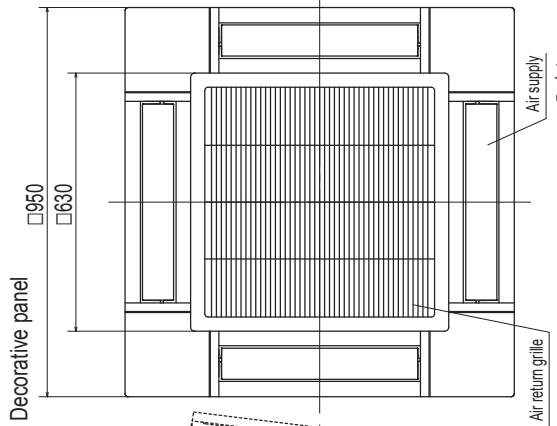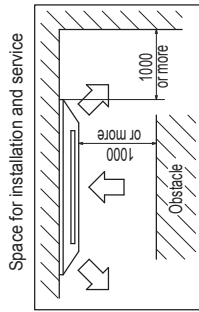


Symbol	P1	P2
Pattern	770	725-770
	770-800	725

Notes (1) The model name label is attached to the control box lid.
 (2) Suspension bolt pitch P1, P2 is adjustable by a pattern of the right table.
 (3) Section 1 (*1) is provided on the panel T-PSAE-5AW-E only.







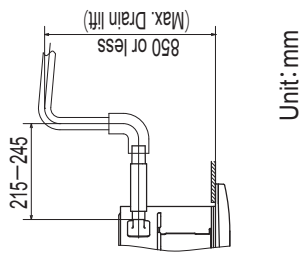


Unit: mm



Model FDT100VG


Symbol	Content
A	Gas piping φ15.88 (5/8") (Flare)
B	Liquid piping φ9.52 (3/8") (Flare)
C	Drain piping VP25 (O.D.32)
D	Hole for wiring (M10 or M8)
F	Suspension bolts Outside air opening (Knock out)
G	Air outlet opening for ducting φ125 (Knock out) φ200 (Knock out)

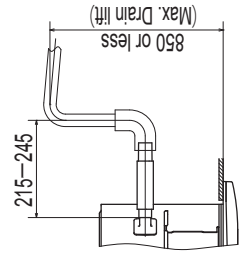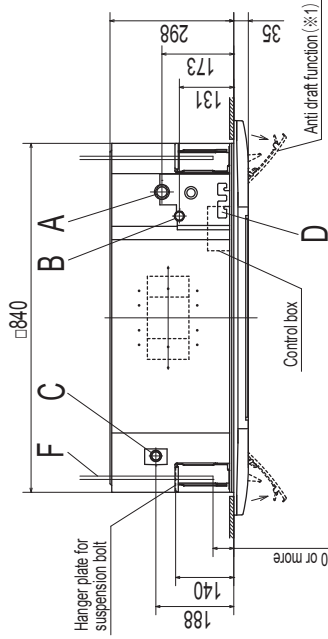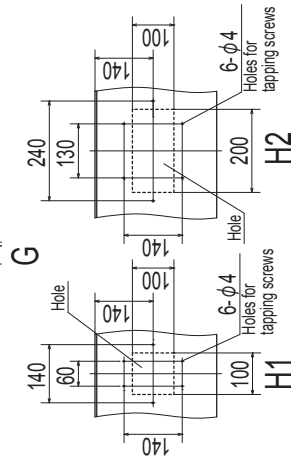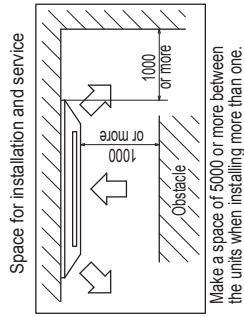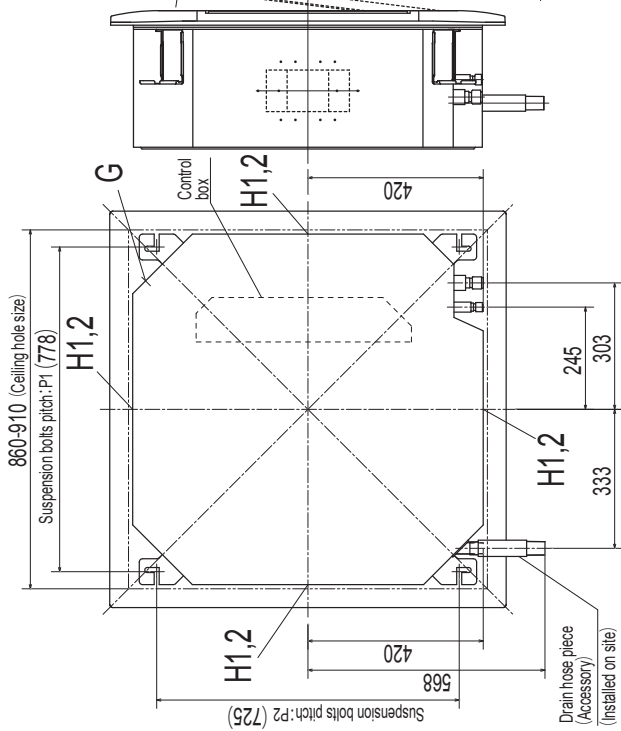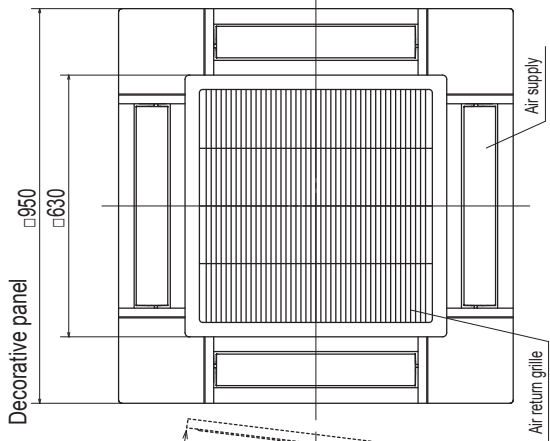


Unit:mm

Symbol	P1	P2
Pattern 1	770	725-770
Pattern 2	770-800	725

- Notes (1) The model name label is attached to the control box lid.
 (2) Suspension bolt pitch P1,P2 is adjustable by a pattern of the right table.
 (3) Section 1 (※1) is provided on the panel T-PSAE-5AW-E only.




**(b) Duct connected-High static pressure type (FDU)
Model FDU71VF1**

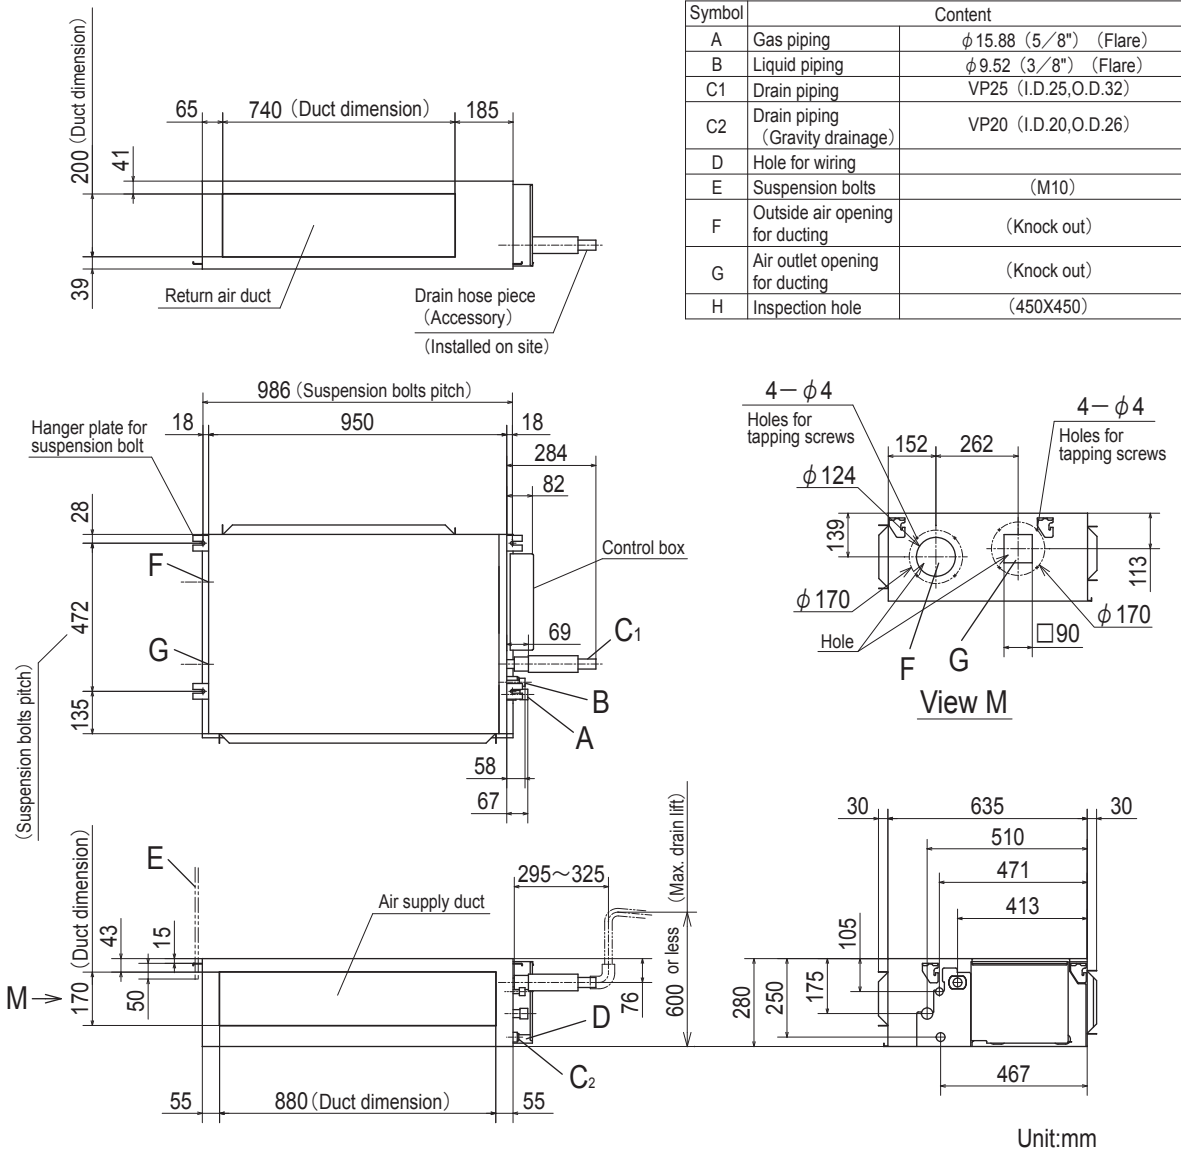

Space for installation and service


Select either of two cases to keep space for installation and services.

(Case 1) From side of unit

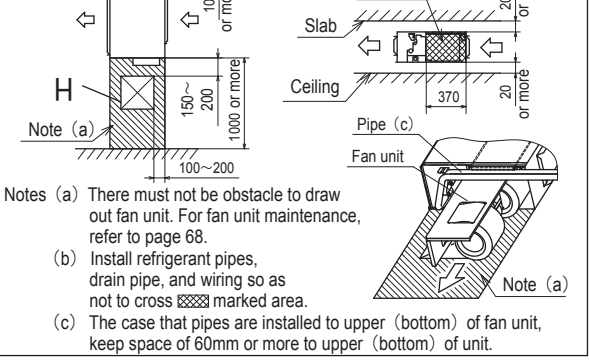


- Notes
- (a) There must not be obstacle to draw out fan unit. For fan unit maintenance, refer to page 68.
 - (b) Install refrigerant pipes, drain pipe, and wiring so as not to cross marked area.
 - (c) The case that pipes are installed to upper (bottom) of fan unit, keep space of 60mm or more to upper (bottom) of unit.


(Case 2) From bottom of unit

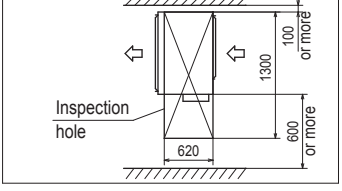

Notes (1) The model name label is attached on the lid of the control box.





Model FDU100VF2

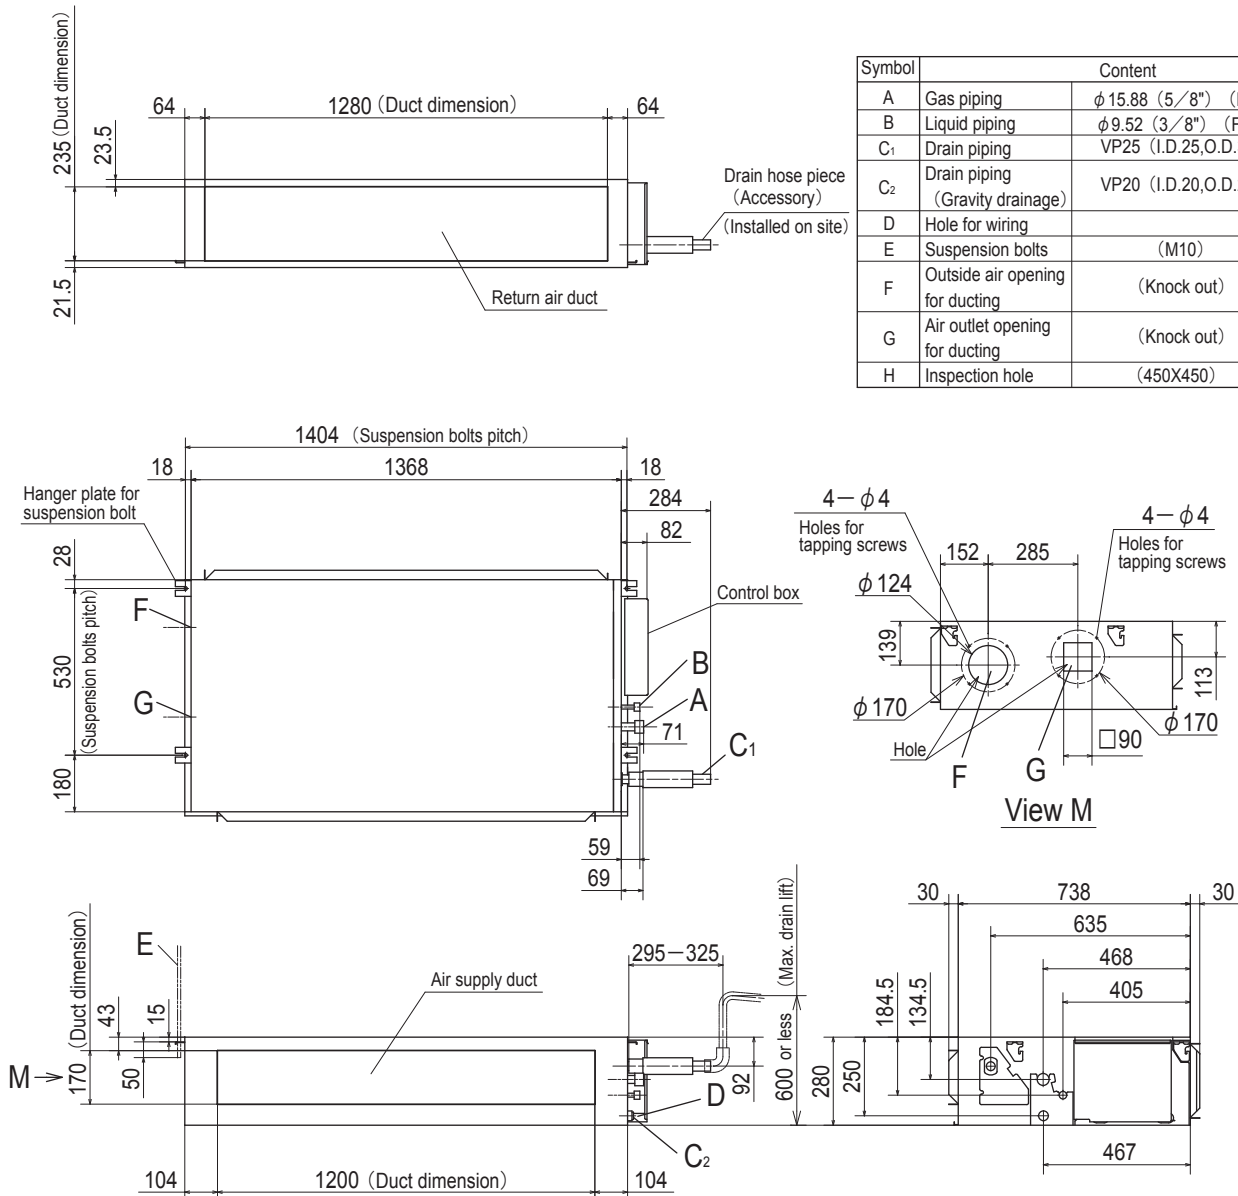

Symbol	Content	
A	Gas piping	φ 15.88 (5/8") (Flare)
B	Liquid piping	φ 9.52 (3/8") (Flare)
C ₁	Drain piping	VP25 (I.D.25,O.D.32)
C ₂	Drain piping (Gravity drainage)	VP20 (I.D.20,O.D.26)
D	Hole for wiring	
E	Suspension bolts	(M10)
F	Outside air opening for ducting	(Knock out)
G	Air outlet opening for ducting	(Knock out)
H	Inspection hole	(450X450)


Unit:mm

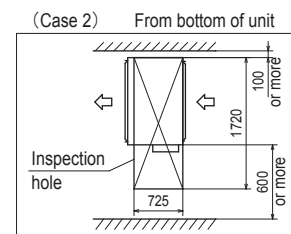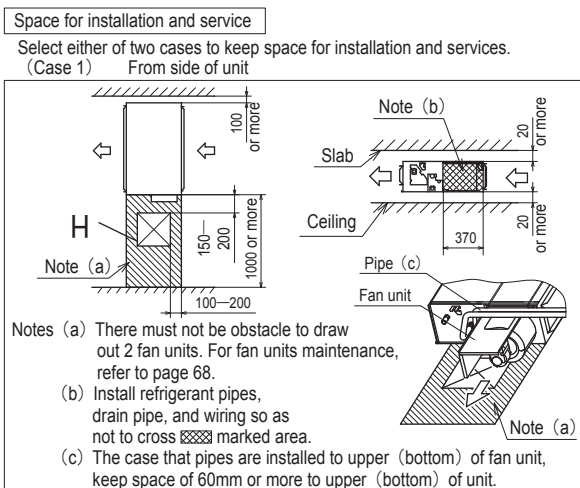

Notes (1) The model name label is attached on the lid of the control box.




PJG000Z048

(c) Duct connected-Low/Middle static pressure type (FDUM)
Model FDUM71VF1

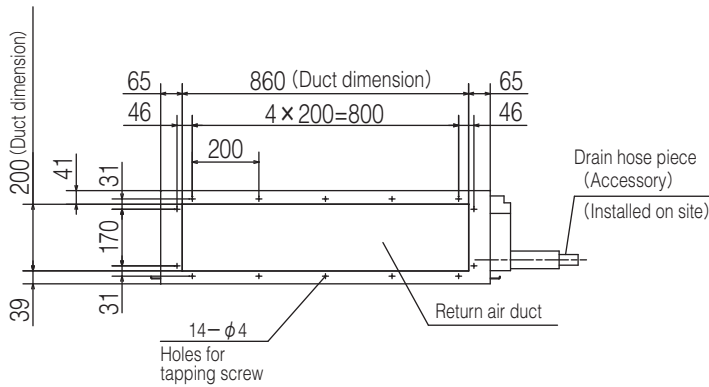

Symbol	Content	
A	Gas piping	φ 15.88 (5/8") (Flare)
B	Liquid piping	φ 9.52 (3/8") (Flare)
C1	Drain piping	VP25 (I.D.25, O.D.32)
C2	Drain piping (Gravity drainage)	VP20 (I.D.20, O.D.26)
D	Hole for wiring	
E	Suspension bolts	(M10)
F	Outside air opening for ducting	(φ 150) (Knock out)
G	Air outlet opening for ducting	(φ 125) (Knock out)
H	Inspection hole	(450X450)


Note (1) The model name label is attached on the lid of the control box.

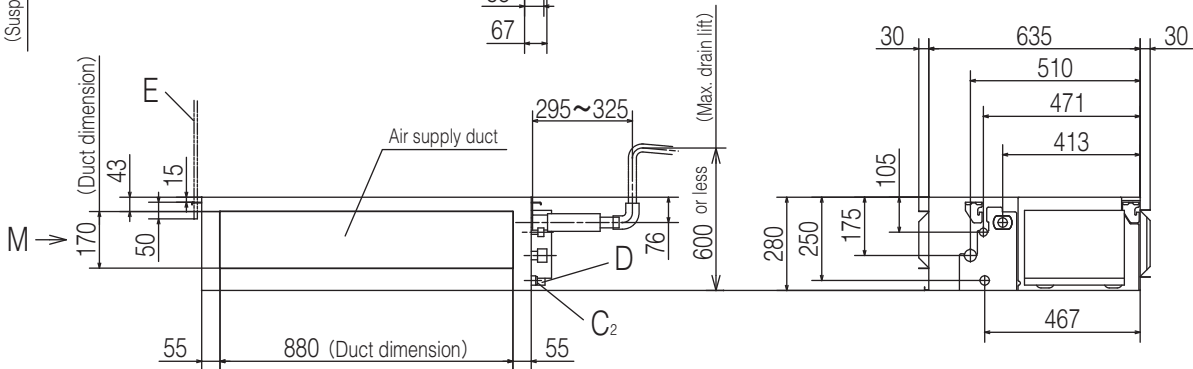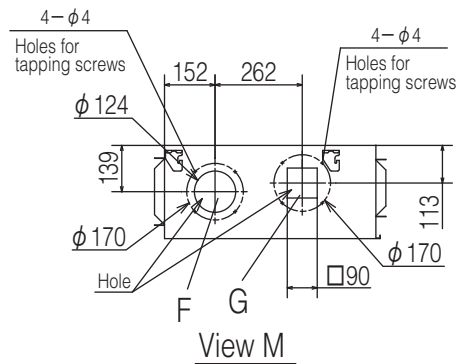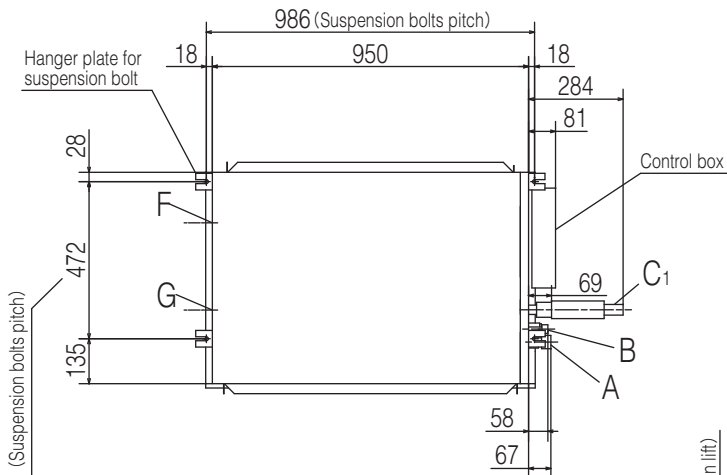


Space for installation and service

Select either of two cases to keep space for installation and services.

(Case 1) From side of unit

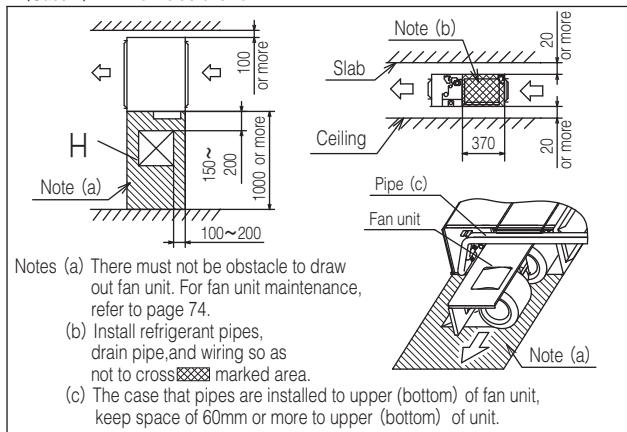


(Case 2) From bottom of unit

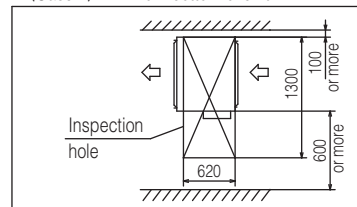

Model FDUM100VF2

Symbol	Content	
A	Gas piping	φ 15.88 (5/8") (Flare)
B	Liquid piping	φ 9.52 (3/8") (Flare)
C ₁	Drain piping	VP25 (I.D.25,O.D.32)
C ₂	Drain piping (Gravity drainage)	VP20 (I.D.20,O.D.26)
D	Hole for wiring	
E	Suspension bolts	(M10)
F	Outside air opening for ducting	(φ 150) (Knock out)
G	Air outlet opening for ducting	(φ 125) (Knock out)
H	Inspection hole	(450X450)

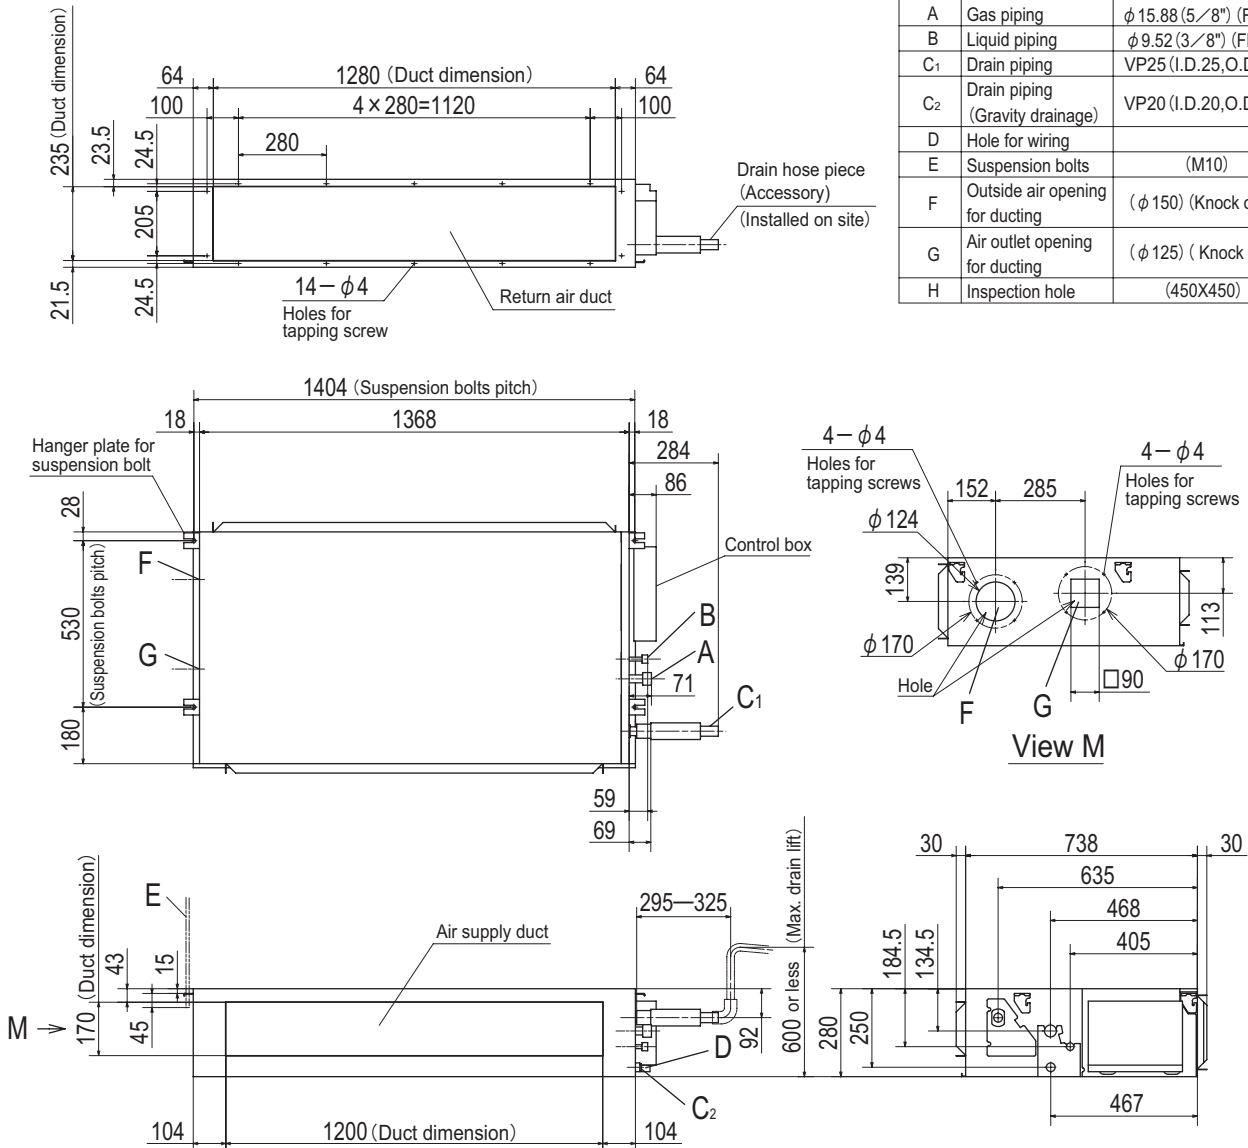


Unit:mm


Space for installation and service

Select either of two cases to keep space for installation and services.

(Case 1) From side of unit

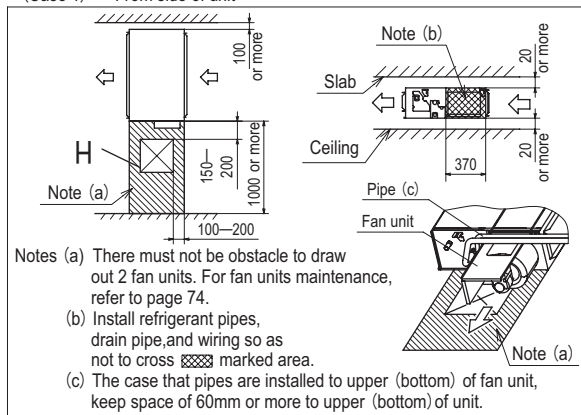




(Case 2) From bottom of unit

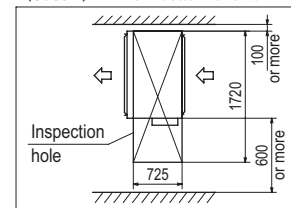

Note (1) The model name label is attached on the lid of the control box.



PJG000Z004

**(d) Ceiling suspended type (FDE)
Model FDE71VG**

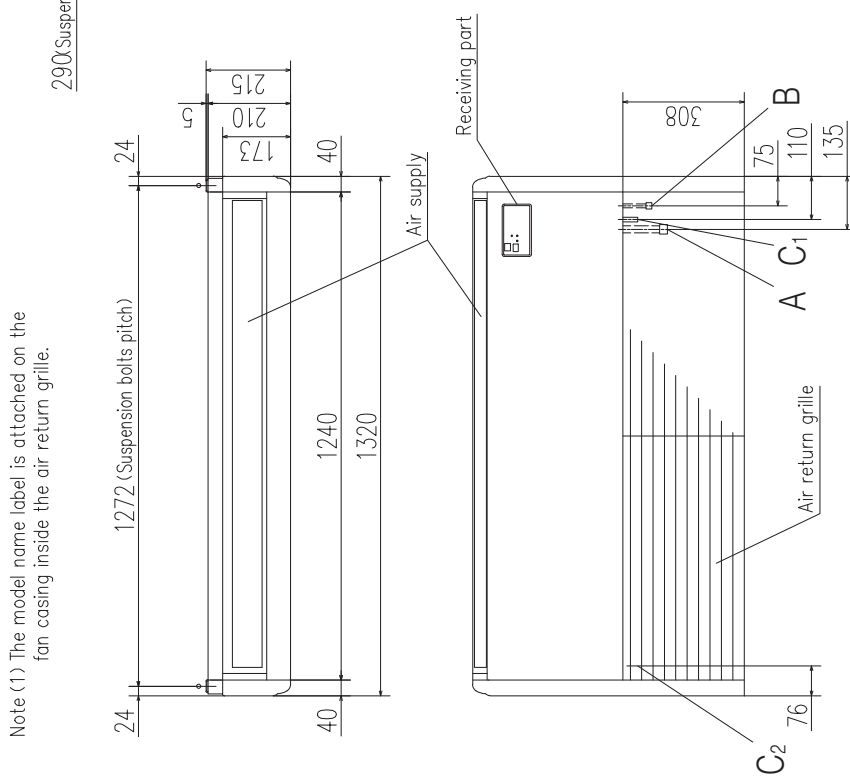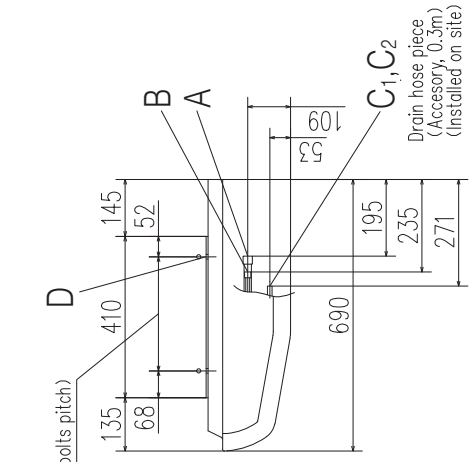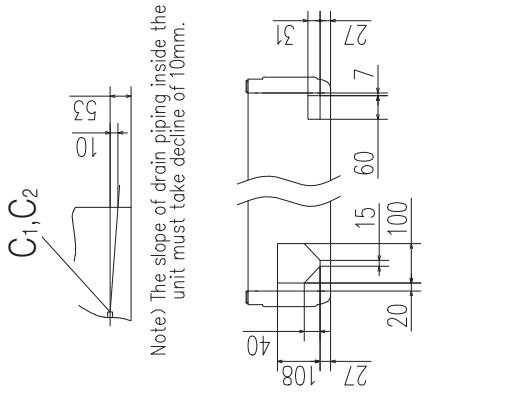

Symbol	Content
A	Gas piping φ15.88 (5/8") (Flare)
B	Liquid piping φ9.52 (3/8") (Flare)
C 1,2	Drain piping VP20 (I.D.20, O.D.26)
D	Hole for suspension bolts (M10 or M8)
E	Back cutout PE cover
F	Top cutout Plate cover
G	Hole for drain piping (for left back)


Unit: mm

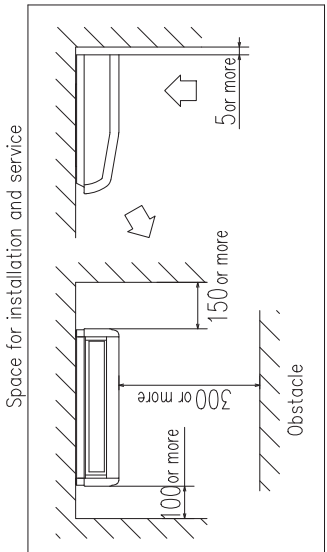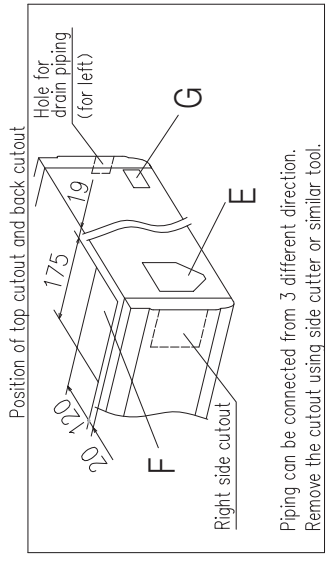

PFA004Z026



Model FDE100VG

Note (1) The model name label is attached on the fan casing inside the air return grille.

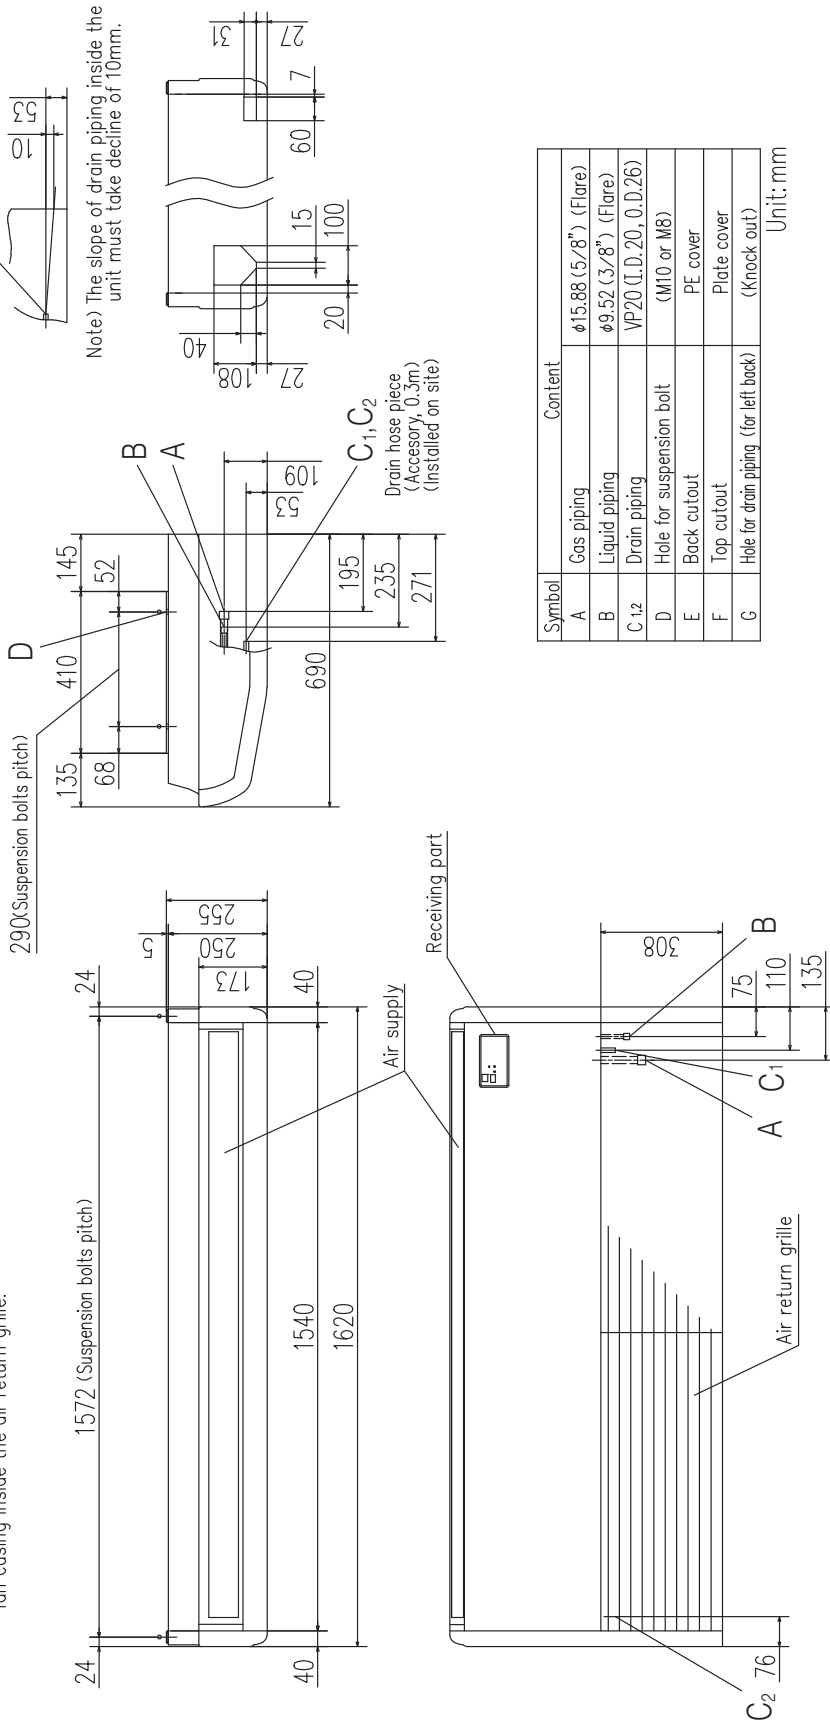


Symbol	Content
A	Gas piping φ15.88 (5/8") (Flare)
B	Liquid piping φ9.52 (3/8") (Flare)
C 1,2	Drain piping VP20 (I.D. 20, O.D. 26)
D	Hole for suspension bolt (M10 or M8)
E	Back cutout PE cover
F	Top cutout Plate cover
G	Hole for drain piping (for left back) (knock out)

Unit: mm

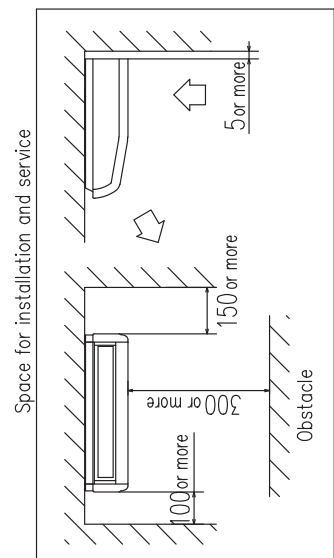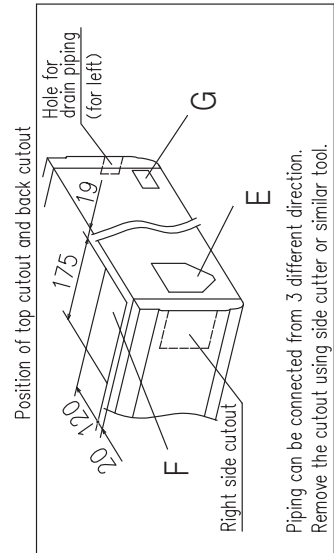


PFA004Z027

(e) Floor standing type (FDF)
Models FDF71VD1, 100VD2

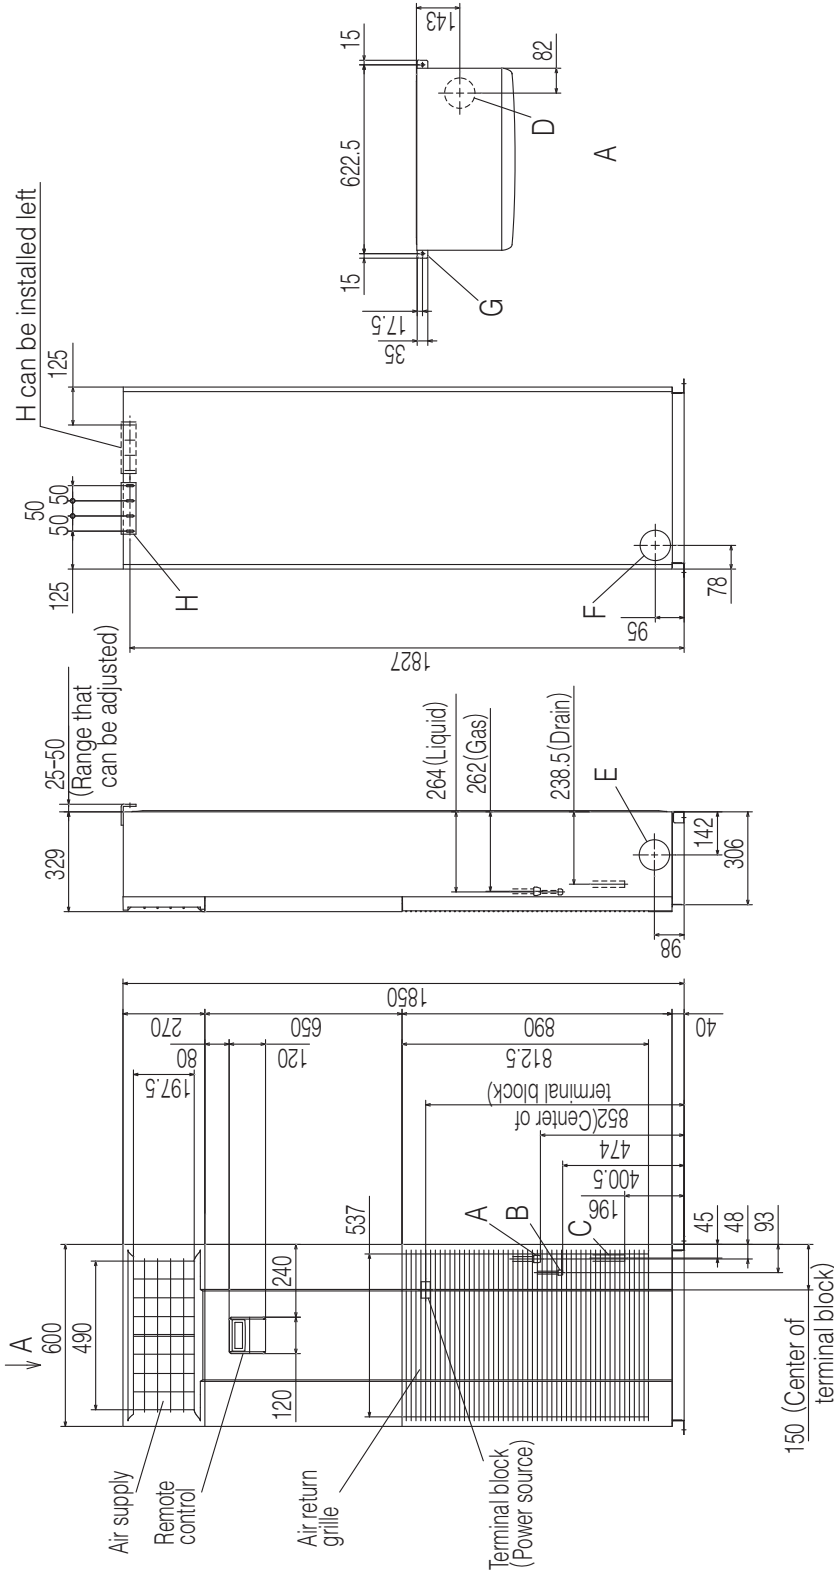


Space for installation and service

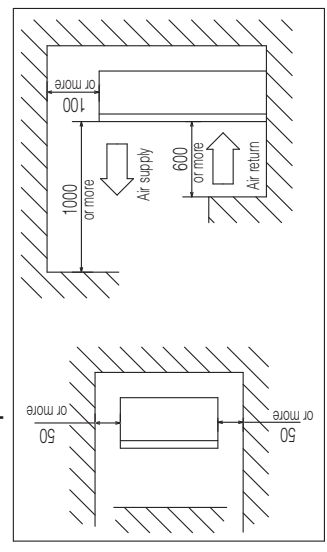

Symbol	Content
A	Gas piping
B	Liquid piping
C	Drain piping
D	Hole on wall for bottom piping
E	Hole on wall for side piping/
F	Hole on wall for rear piping
G	Metal fittings to fix to floor face
H	Fall prevention metal fittings

Note(1) The model name label is attached on the left lower side panel inside the air return grille.
 Unit:mm





(2) Outdoor units
Model FDC71VNP

Symbol	Content
A	Service valve connection (gas side) $\phi 12.7 (1/2")$ (Flare)
B	Service valve connection (liquid side) $\phi 6.35 (1/4")$ (Flare)
C	Pipe / cable draw-out hole
D	Drain discharge hole
E	Anchor bolt hole



Notes

- (1) It must not be surrounded by walls on the four sides.
- (2) The unit must be fixed with anchor bolts. An anchor bolt must not protrude more than 15mm.
- (3) Where the unit is subject to strong winds, lay it in such a direction that the blower outlet faces perpendicularly to the dominant wind direction.
- (4) Leave 1m or more space above the unit.
- (5) A wall in front of the blower outlet must not exceed the units height.
- (6) The model name label is attached on the lower right corner of the front panel.

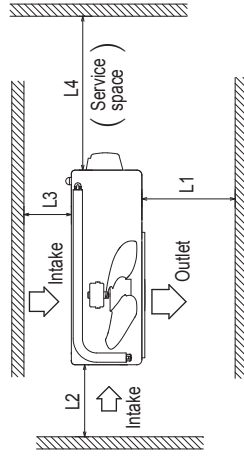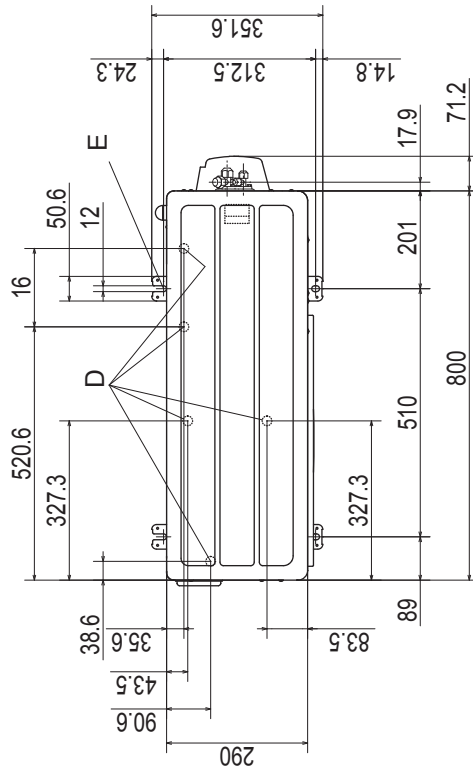

Minimum installation space

Examples of installation Dimensions	I	II	III	IV
L1	Open	280	280	180
L2	100	75	Open	Open
L3	100	80	80	80
L4	250	Open	250	Open

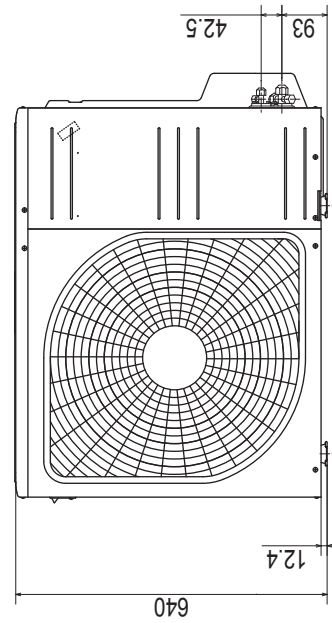
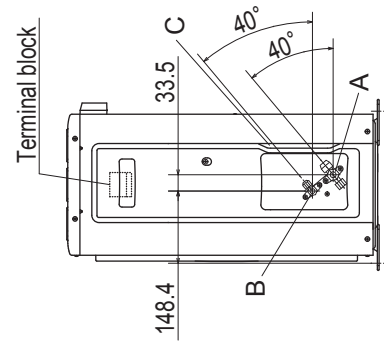


Unit:mm

PCA001Z713


Model FDC90VNP1

Symbol	Content
A	Service valve connection (gas side) $\phi 15.88(5/8")$ (Flare)
B	Service valve connection (liquid side) $\phi 6.35(1/4")$ (Flare)
C	Pipe / cable draw-out hole
D	Drain discharge hole
E	Anchor bolt hole

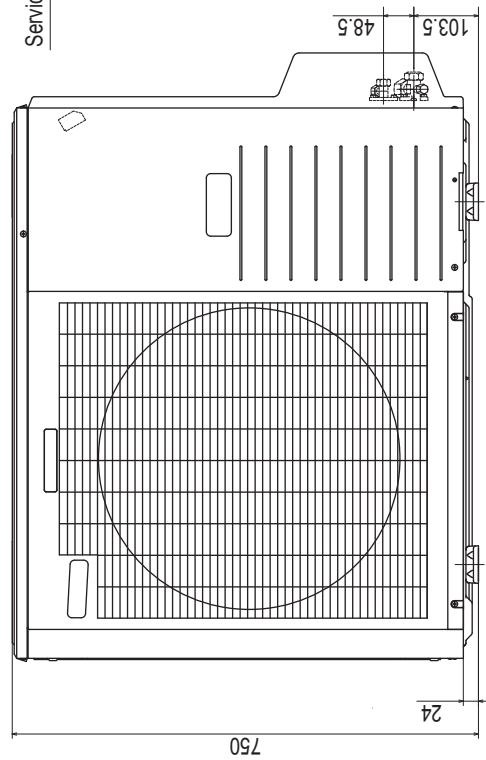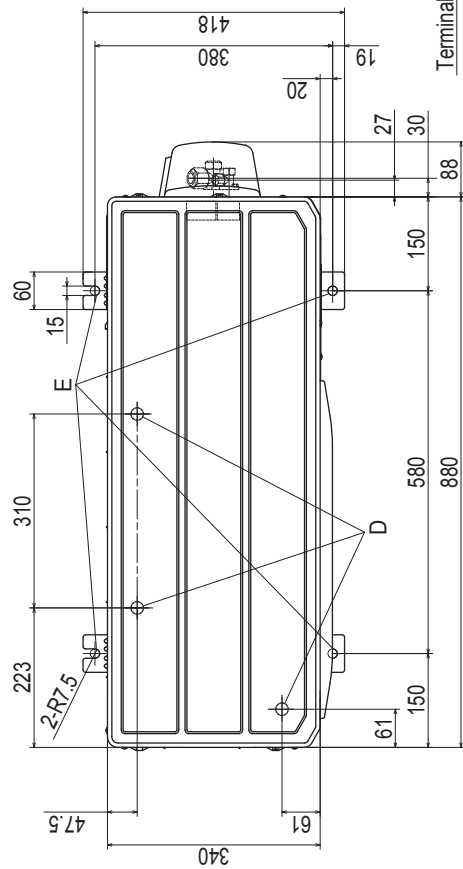

Note

- (1) It must not be surrounded by walls on four sides.
- (2) The unit must be fixed with anchor bolts. An anchor bolt must not protrude more than 15mm.
- (3) Where the unit is subjected to strong winds, lay it in such a direction that the blower outlet faces perpendicularly to the dominant wind direction.
- (4) Leave 1m or more space above the unit.
- (5) A wall in front of the blower outlet must not exceed the unit's height.
- (6) The model name label is attached on the lower right corner of the front panel.

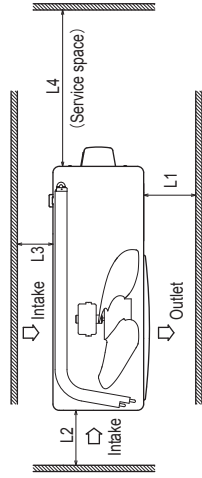

Minimum installation space

Examples of installation	I	II	III
Dimensions	Open	Open	500
L1	300	250	Open
L2	100	150	100
L3	250	250	250
L4	250	250	250

Unit:mm


PCA001Z714

(3) Remote control

(a) Wired remote control


Model RC-EX3

Dimensions (Viewed from front)

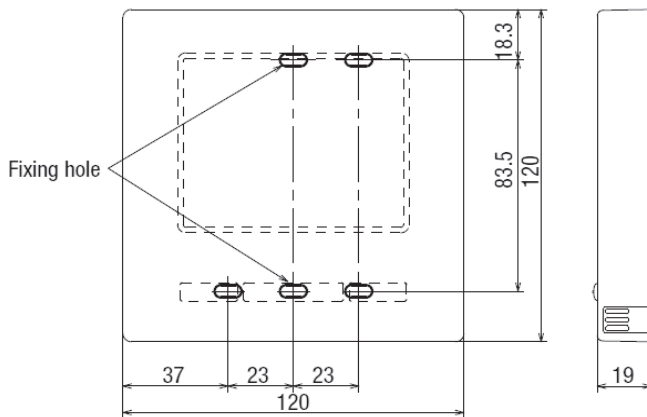

Exterior appearance (Munsell color)	Pearl white (N8.5) near equivalent
-------------------------------------	------------------------------------

Installation space

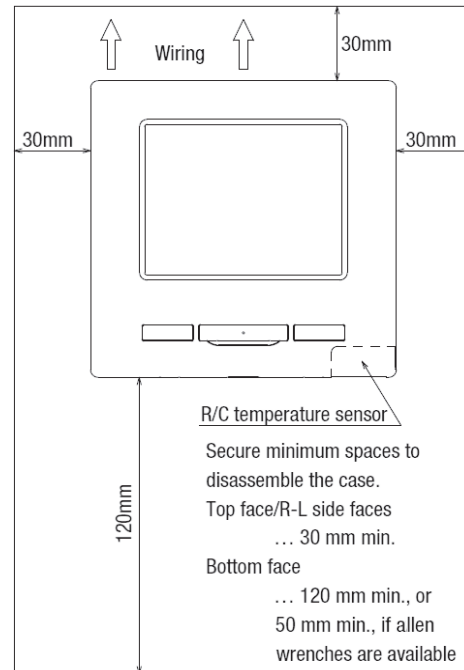

Cautions for selecting installation place

- (1) Installation surface must be flat and sufficiently strong. R/C case must not be deformed.
- (2) Where the R/C can detect room temperatures accurately. This is a must when detecting room temperatures with the temperature sensor of R/C.
 - Install the R/C where it can detect the average temperature in the room.
 - Install the R/C sufficiently separated from a heat source.
 - Install the R/C where it will not be influenced by the turbulence of air when the door is opened or closed.
 Select a place where the R/C is not exposed to direct sunlight or blown by winds from the air-conditioner or temperatures on the wall surface will not deviate largely from indoor air temperatures.
- (3) When using the panel provided with the automatic filter elevating function, select a place where the movement of grill can be seen easily.

R/C cable: 0.3mm² × 2 cores


When the cable length is longer than 100 m, the max size for wires used in the R/C case is 0.5 mm². Connect them to wires of larger size near the outside of R/C. When wires are connected, take measures to prevent water, etc. from entering inside.

< 200 m	0.5 mm ² x 2 cores
< 300 m	0.75 mm ² x 2 cores
< 400 m	1.25 mm ² x 2 cores
< 600 m	2.0 mm ² x 2 cores


Adapted to **RoHS** directive

PJZ000Z321


Model RC-E5

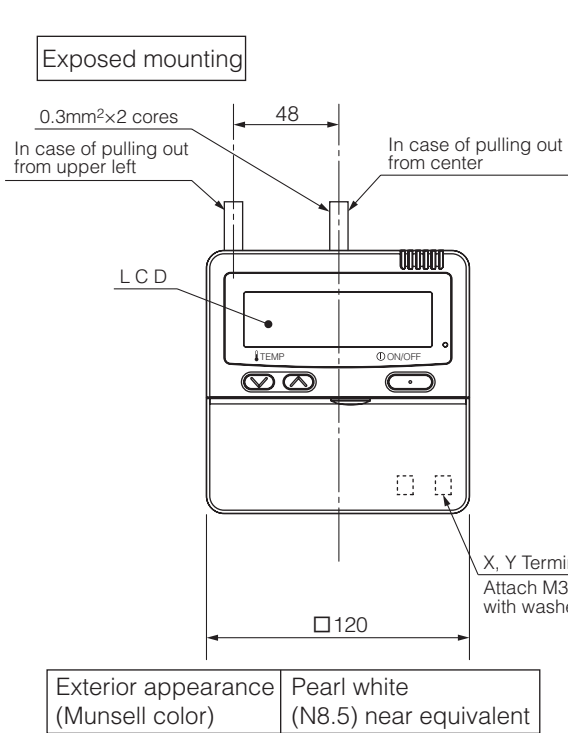


Wiring outlet
Cut off the upper thin part of remote control lower case with a nipper or knife, and grind burrs with a file etc.

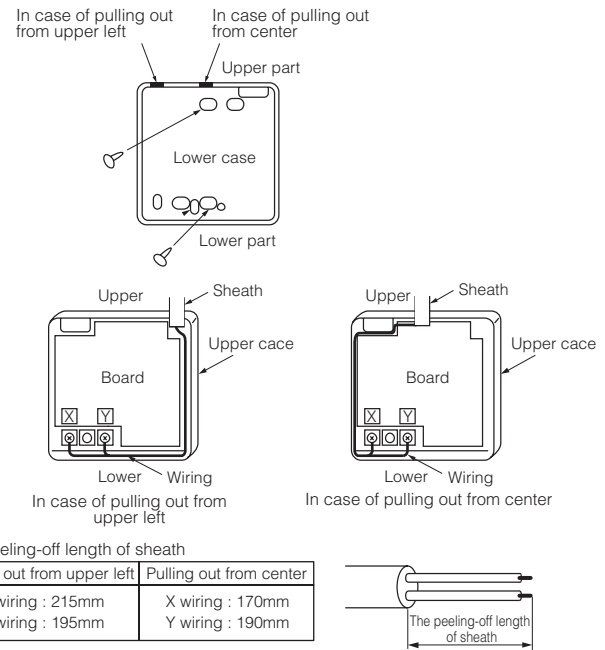

Embedded mounting

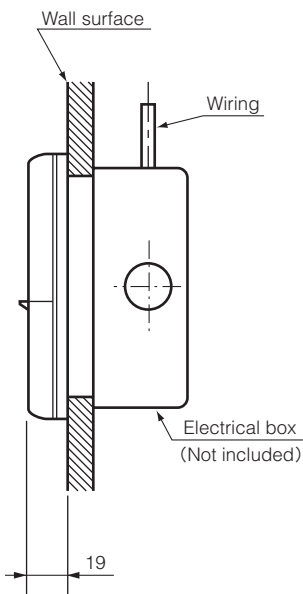

Remote control installation dimensions

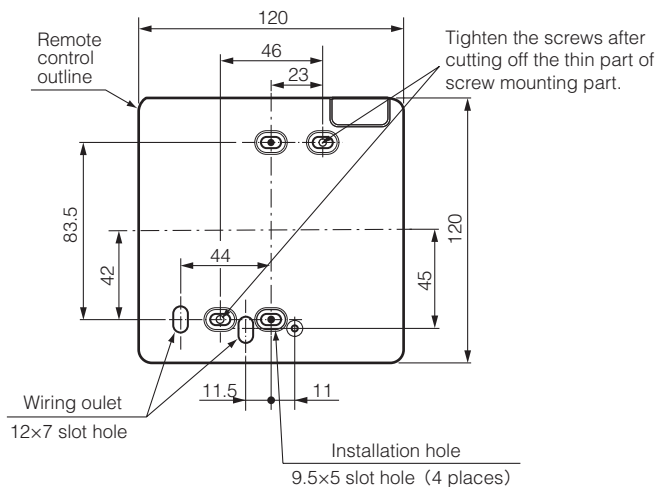

(1) Installation screw for remote control
M4 screw (2 pieces)

Unit:mm

Wiring specifications


(1) If the prolongation is over 100m, change to the size below.
But, wiring in the remote control case should be under 0.5mm². Change the wire size outside of the case according to wire connecting. Waterproof treatment is necessary at the wire connecting section. Be careful about contact failure.

Length	Wiring thickness
100 to 200m	0.5mm ² ×2 cores
Under 300m	0.75mm ² ×2 cores
Under 400m	1.25mm ² ×2 cores
Under 600m	2.0mm ² ×2 cores

PJZ000Z295


**(b) Wireless remote control
RCN-E2 (Option parts) (Except FDF series)**

Unit: mm

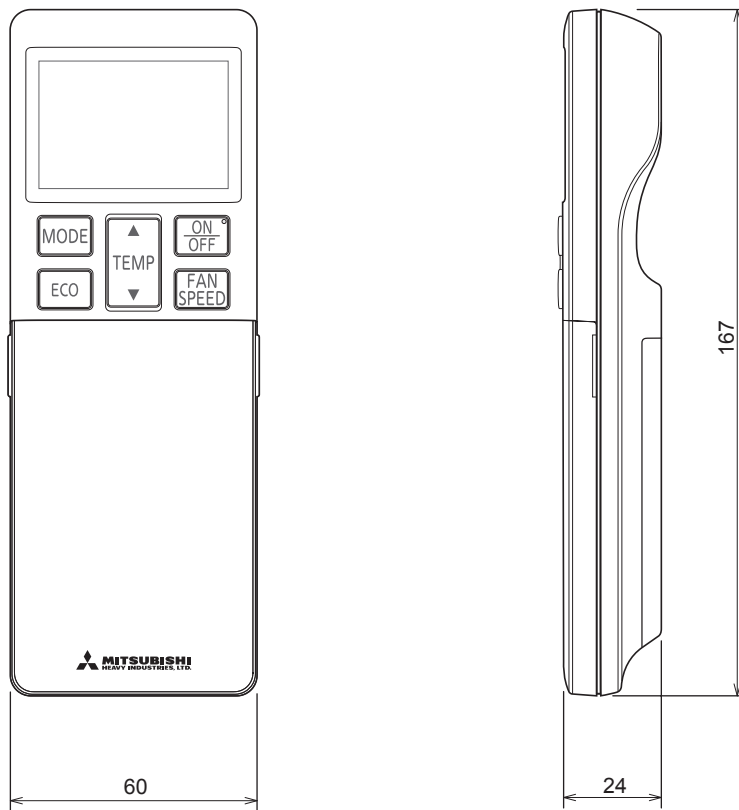

RCN-E1R (Option parts) (FDF series only)

Unit: mm

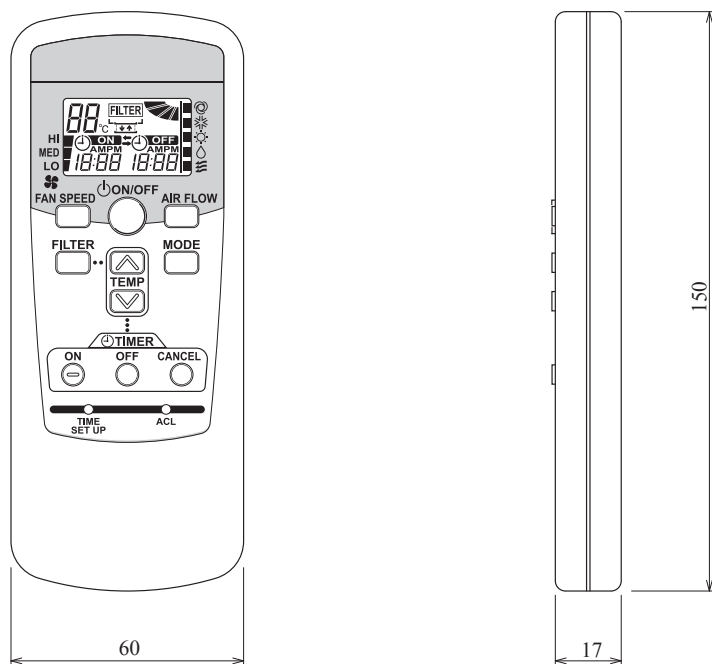

3. ELECTRICAL WIRING

(1) Indoor units

(a) Ceiling cassette-4 way type (FDT)


Models FDT71VG, 100VG

Meaning of marks

Item	Description
AM1-4	Anti draft motor
CNB-Z	Connector
DM	Drain motor
F1,2	Fuse
FMI	Fan motor
FS	Float switch
HS	Humidity sensor
L	Reactor
LED • 2	Indication lamp (Green-Normal operation)
LED • 3	Indication lamp (Red-Inspection)
LM1-4	Louver motor
PIS	Motion sensor
SW2	Remote control communication address
SW5	Plural units Master / Slave setting
SW6	Model capacity setting
SW7-1	Operation check, drain motor test run
TB1	Terminal block (Power source)(□ mark)
TB2	Terminal block (Signal line)(□ mark)
Thc	Thermistor (Remote control)
Thi-A	Thermistor (Return air)
Thi-R1,2,3	Thermistor (Heat exchanger)

Color marks

Mark	Color	Mark	Color
BK	Black	WH	White
BL	Blue	YE	Yellow
BR	Brown	GY	Gray
OR	Orange	YE/GN	Yellow/Green
RD	Red		

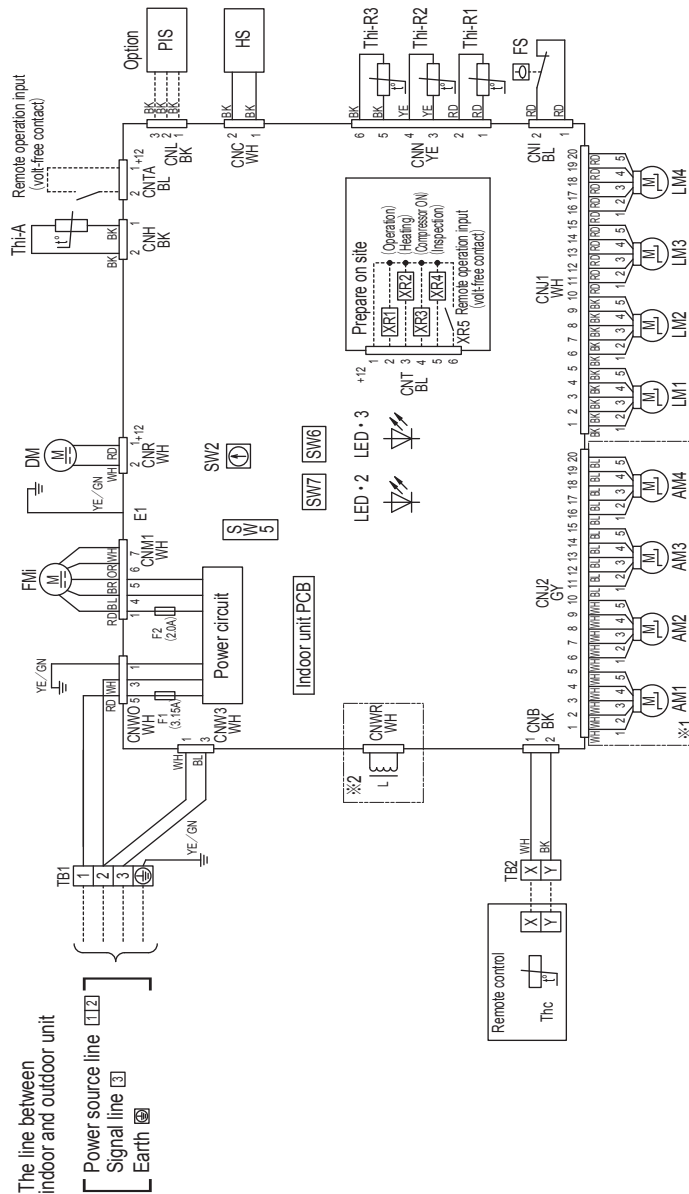

- Notes
- indicates wiring on site.
 - See the wiring diagram of outside unit about the line between inside unit and outside unit.
 - Use twin core cord (0.3mm²) at remote control line. See spec sheet of remote control in case that the total length is more than 100m.
 - Do not put remote control line alongside power source line.
 - Section 1 (※1) is provided on the panel T-PSAE-5AW-E only.
 - Section 2 (※2) is provided on the models 100,125 only.


PJF000Z430

(b) Duct connected-High static pressure type (FDU)
Model FDU71VF1

Meaning of marks

Item	Description
CNB-Z	Connector
DM	Drain motor
F1,3,4	Fuse
FMT1,2	Fan motor
FS	Float switch
L	Reactor
LED-2	Indication lamp (Green-Normal operation)
LED-3	Indication lamp (Red-Inspection)
PIS	Motion sensor
SW2	Remote control communication address
SW5	Plural units Master / Slave setting
SW6	Model capacity setting
SW7-1	Operation check, Drain motor test run
TB1	Terminal block (Power source) (□mark)
TB2	Terminal block (Signal line) (□mark)
Thc	Thermistor (Remote control)
Thi-A	Thermistor (Return air)
Thi-R1,2,3	Thermistor (Heat exchanger)
□mark	Closed-end connector

Mark	Color
BK	Black
BL	Blue
RD	Red
WH	White
YE	Yellow
YE/GN	Yellow/Green

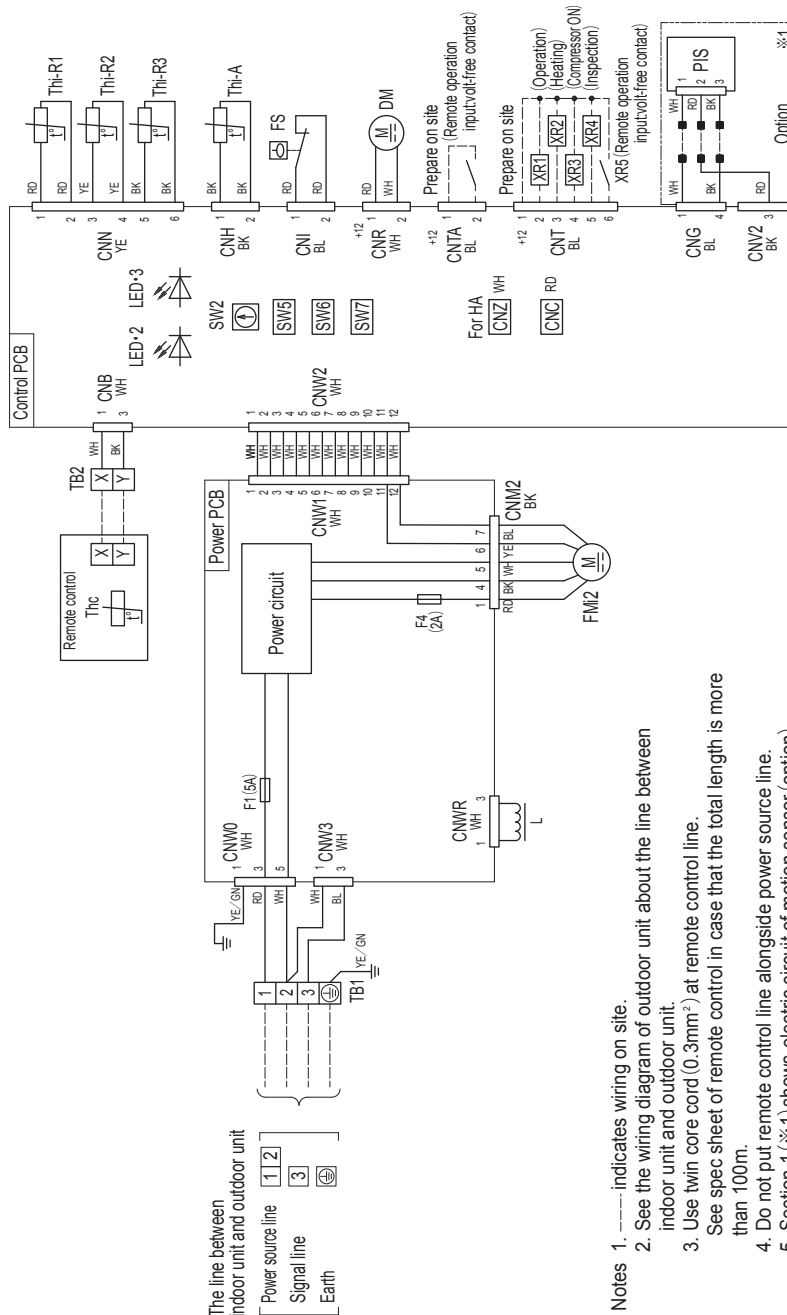

- Notes
1. ----- indicates wiring on site.
 2. See the wiring diagram of outdoor unit about the line between indoor unit and outdoor unit.
 3. Use twin core cord (0.3mm²) at remote control line.
See spec sheet of remote control in case that the total length is more than 100m.
 4. Do not put remote control line alongside power source line.
 5. Section 1 (※1) shows electric circuit of motion sensor (option).


PJG000Z463

Model FDU100VF2

Meaning of marks

Item	Description
CNB-Z	Connector
DM	Drain motor
F1,3,4	Fuse
FM1,2	Fan motor
FS	Float switch
L	Reactor
LED-2	Indication lamp (Green-Normal operation)
LED-3	Indication lamp (Red-Inspection)
PIS	Motion sensor
SW2	Remote control communication address
SW5	Plural units Master / Slave setting
SW6	Model capacity setting
SW7-1	Operation check, Drain motor test run
TB1	Terminal block (Power source) (□mark)
TB2	Terminal block (Signal line) (□mark)
Thc	Thermistor (Remote control)
Thi-A	Thermistor (Return air)
Thi-R1,2,3	Thermistor (Heat exchanger)
■mark	Closed-end connector


Color Marks	Color
BK	Black
BL	Blue
RD	Red
WH	White
YE	Yellow
YE / GN	Yellow / Green

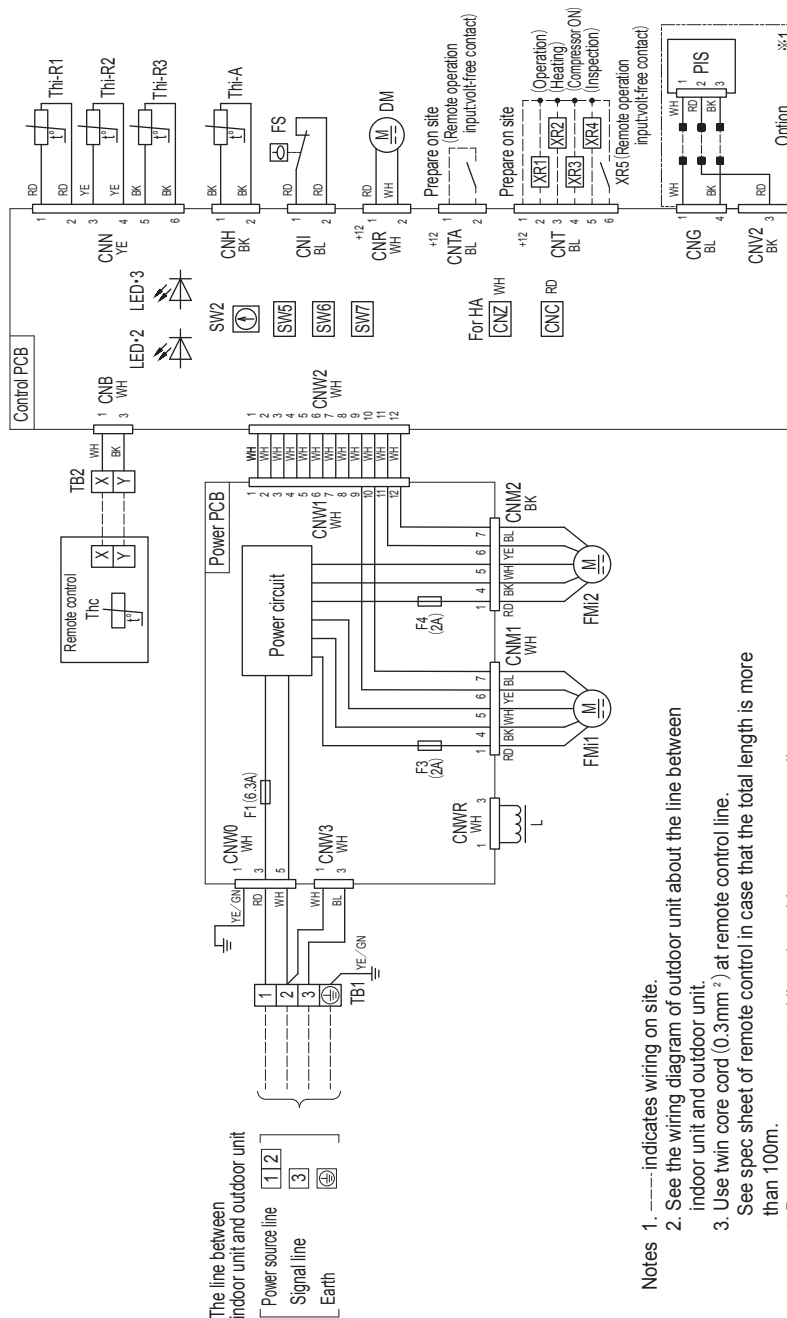

The line between indoor unit and outdoor unit

- 1, 2: Power source line
- 3: Signal line
- ⊕: Earth

- Notes
1. ----- indicates wiring on site.
 2. See the wiring diagram of outdoor unit about the line between indoor unit and outdoor unit.
 3. Use twin core cord (0.3mm²) at remote control line. See spec sheet of remote control in case that the total length is more than 100m.
 4. Do not put remote control line alongside power source line.
 5. Section 1 (※1) shows electric circuit of motion sensor (option).




(c) Duct connected-Low/Middle static pressure type (FDUM)
Model FDUM71VF1

Meaning of marks

Item	Description
CNB-Z	Connector
DM	Drain motor
F1-4	Fuse
FMI1,2	Fan motor
FS	Float switch
L	Reactor
LED-2	Indication lamp (Green-Normal operation)
LED-3	Indication lamp (Red-Inspection)
PIS	Motion sensor
SW2	Remote control communication address
SW5	Plural units Master / Slave setting
SW6	Model capacity setting
SW7-1	Operation check/Drain motor test run
TB1	Terminal block (Power source) (□mark)
TB2	Terminal block (Signal line) (□mark)
Thc	Thermistor (Remote control)
Thi-A	Thermistor (Return air)
Thi-R1,2,3	Thermistor (Heat exchanger)
■mark	Closed-end connector

Color Marks

Mark	Color
BK	Black
BL	Blue
BR	Brown
OR	Orange
RD	Red
WH	White
YE	Yellow
YE/GN	Yellow/Green

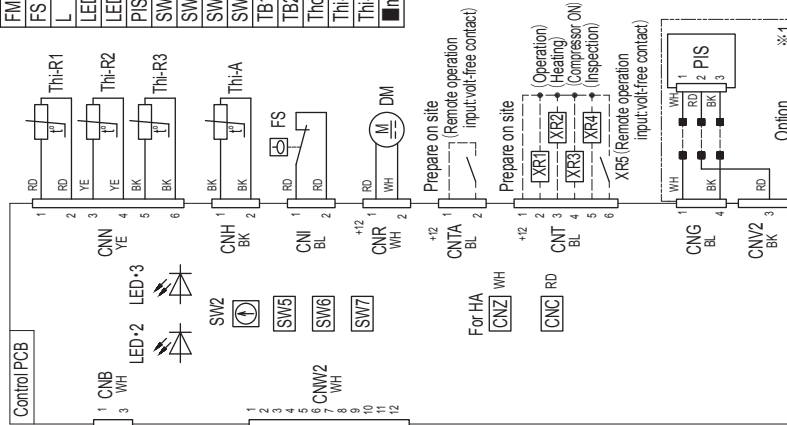

The line between indoor unit and outdoor unit

- 1 Power source line
- 2 Signal line
- 3 Earth

- Notes
1. --- indicates wiring on site.
 2. See the wiring diagram of outdoor unit about the line between indoor unit and outdoor unit.
 3. Use twin core cord (0.3mm²) at remote control line. See spec sheet of remote control in case that the total length is more than 100m.
 4. Do not put remote control line alongside power source line.
 5. Section 1 (※1) shows electric circuit of motion sensor (option).


PJG000Z468

Model FDUM100VF2

Meaning of marks

Item	Description
CNB-Z	Connector
DM	Drain motor
FI-4	Fuse
FM1,2	Fan motor
FS	Float switch
L	Reactor
LED-2	Indication lamp (Green-Normal operation)
LED-3	Indication lamp (Red-Inspection)
PIS	Motion sensor
SW2	Remote control communication address
SW5	Plural units Master/ Slave setting
SW6	Model capacity setting
SW7-1	Operation check/Drain motor test run
TB1	Terminal block (Power source) (□mark)
TB2	Terminal block (Signal line) (□mark)
Thc	Thermistor (Remote control)
Th-A	Thermistor (Return air)
Th-R.1,2,3	Thermistor (Heat exchanger)
■mark	Closed-end connector


Mark	Color
BK	Black
BL	Blue
BR	Brown
OR	Orange
RD	Red
WH	White
YE	Yellow
YE/GN	Yellow/Green

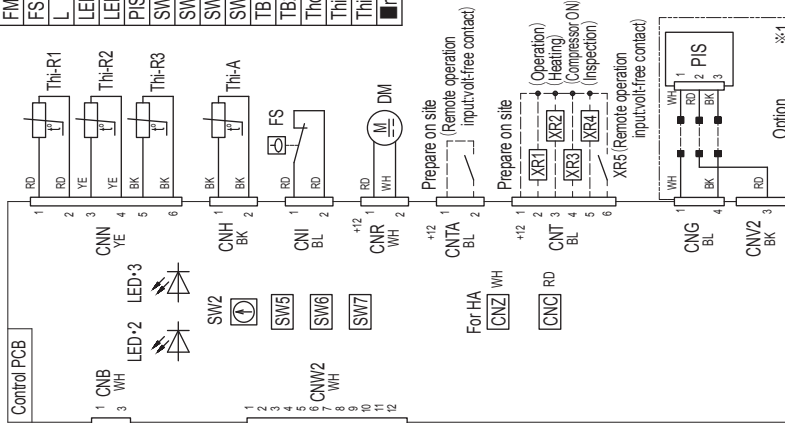


The line between indoor unit and outdoor unit

Power source line	1 1 2
Signal line	3
Earth	⊕

- Notes
1. ----- indicates wiring on site.
 2. See the wiring diagram of outdoor unit about the line between indoor unit and outdoor unit.
 3. Use twin core cord (0.3mm²) at remote control line.
See spec sheet of remote control in case that the total length is more than 100m.
 4. Do not put remote control line alongside power source line.
 5. Section 1 (※1) shows electric circuit of motion sensor (option).



(d) Ceiling suspended type (FDE)
Models FDE71VG, 100VG

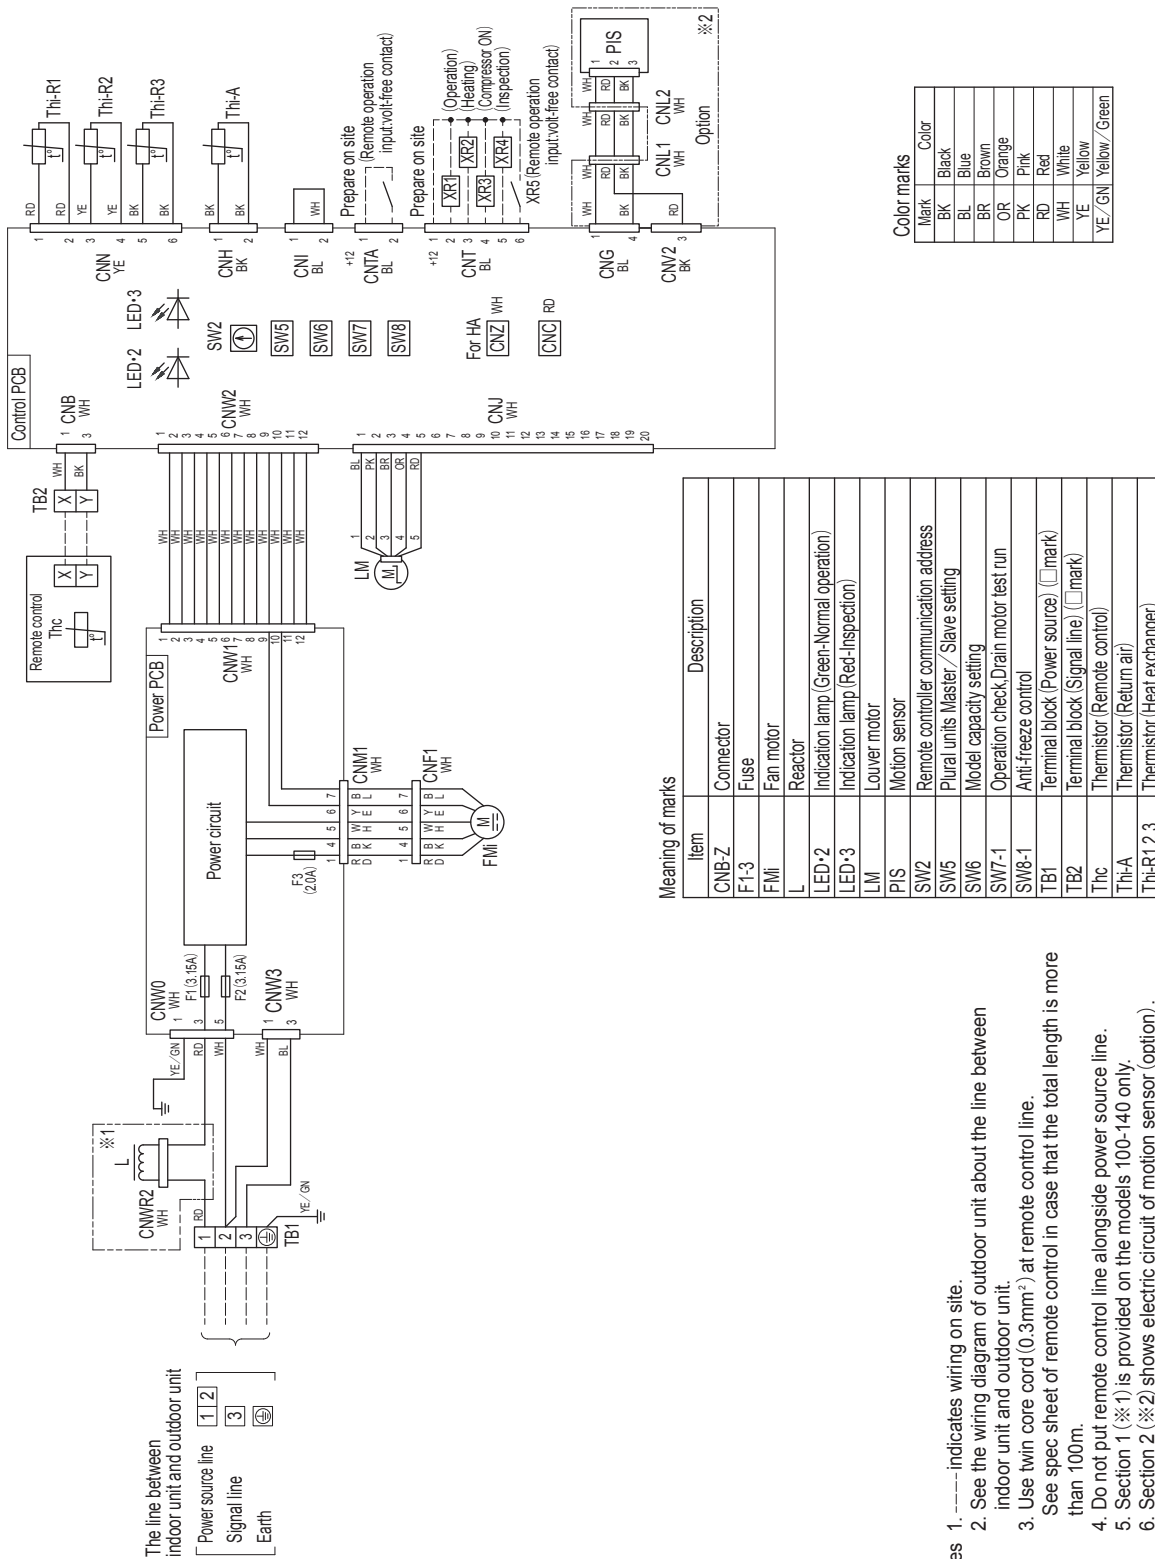

PFA004Z081



(e) Floor standing type (FDF)
Models FDF71VD1, 100VD2

Color marks


Mark	Color	Mark	Color	Mark	Color
BK	Black	GR	Gray	WH	White
BL	Blue	OR	Orange	YE	Yellow
BR	Brown	RD	Red	YE/GN	Yellow/Green

Meaning of marks

CNB-Z	Connector	SW5	Plural units Master/Slave setting
F200-203	Fuse	SW6	Model capacity setting
FMI	Fan motor	SW7-1	Operation check/Drain motor test run
L	Reactor	TB1	Terminal block (Power source) (□ mark)
LED • 2	Indication lamp (Green-Normal operation)	TB2	Terminal block (Signal line) (□ mark)
LED • 3	Indication lamp (Red-Inspection)	Thc	Thermistor (Remote control)
LM	Louver motor	Thi-A	Thermistor (Return air)
SW2	Remote control communication address	Thi-R1, 2, 3	Thermistor (Heat exchanger)
		X4	Relay for DM

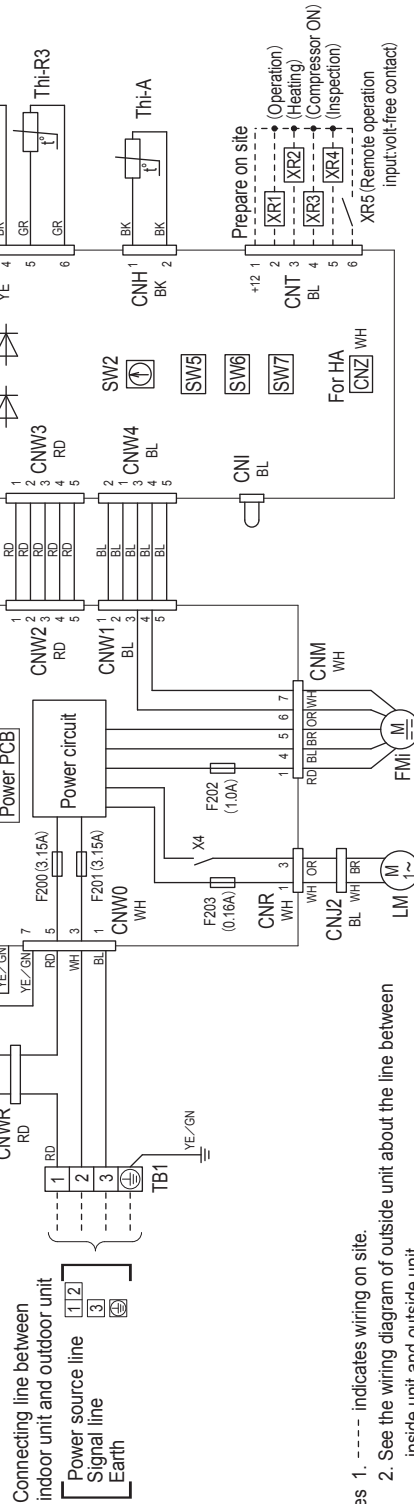

(2) Outdoor units
Model FDC71VNP

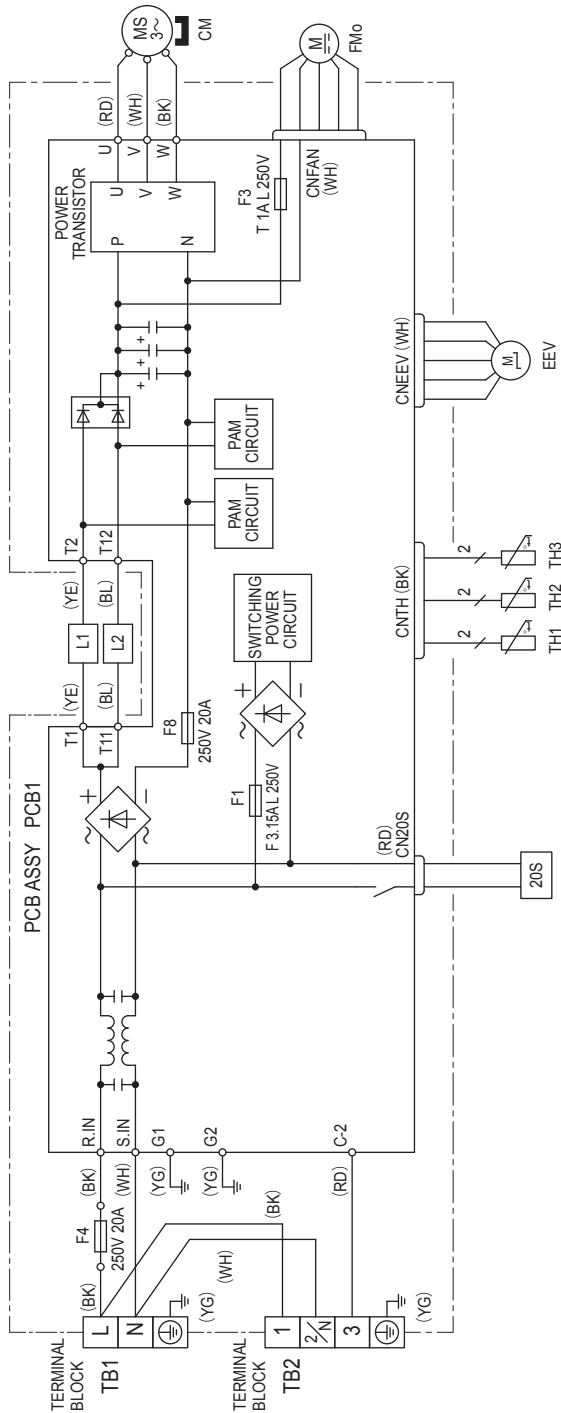

Power cable, indoor-outdoor connecting wires

Model	MAX running current (A)	Power cable size (mm ²)	Power cable length (m)	indoor-outdoor wire size x number	Earth wire size (mm ²)
71	14.5	2.0	15	1.5mm ² x4	1.5

- The specifications shown in the above table are for units without heaters. For units with heaters, refer to the installation instructions or the construction instructions of the indoor unit.
- Switchgear of Circuit breaker capacity which is calculated from MAX. over current should be chosen along the regulations in each country.
- The cable specifications are based on the assumption that a metal or plastic conduit is used with no more than three cables contained in a conduit and a voltage drop is 2%. For an installation falling outside of these conditions, please follow the internal cabling regulations. Adapt it to the regulation in effect in each country.

Meaning of marks


20S	4-WAY VALVE (COIL)
CM	COMPRESSOR MOTOR
EEV	ELECTRIC EXPANSION VALVE (COIL)
FMo	FAN MOTOR
L1,2	REACTOR
TH1	HEAT EXCHANGER SENSOR
TH2	OUTDOOR AIR TEMP. SENSOR
TH3	DISCHARGE PIPE TEMP. SENSOR

Color marks

Mark	Color	MARK	COLOR
BK	BLACK	YE	YELLOW
BL	BLUE	YG	YELLOW/ GREEN
RD	RED		
WH	WHITE		

PCA001Z837

Model FDC90VNP1

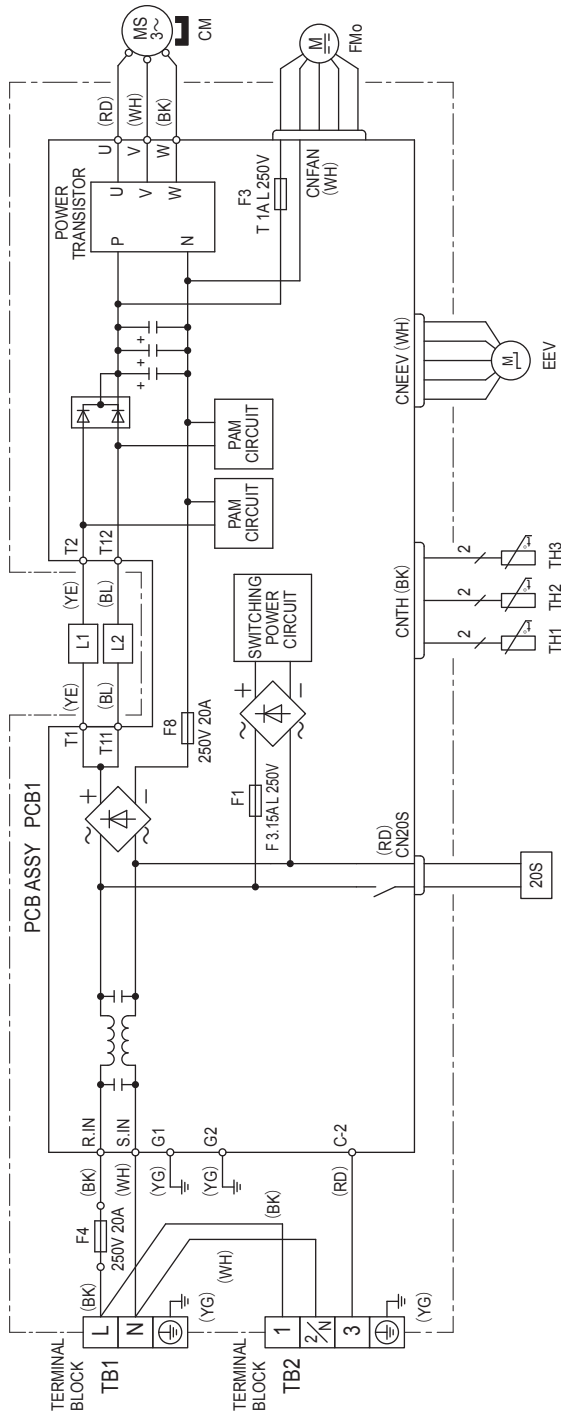

Power cable, indoor-outdoor connecting wires

Model	MAX running current (A)	Power cable size (mm ²)	Power cable length (m)	indoor-outdoor wire size x number	Earth wire size (mm ²)
71	14.5	2.0	15	1.5mm ² x4	1.5

- The specifications shown in the above table are for units without heaters. For units with heaters, refer to the installation instructions or the construction instructions of the indoor unit.
- Switchgear of Circuit breaker capacity which is calculated from MAX. over current should be chosen along the regulations in each country.
- The cable specifications are based on the assumption that a metal or plastic conduit is used with no more than three cables contained in a conduit and a voltage drop is 2%. For an installation falling outside of these conditions, please follow the internal cabling regulations. Adapt it to the regulation in effect in each country.

Meaning of marks


20S	4-WAY VALVE (COIL)
CM	COMPRESSOR MOTOR
EEV	ELECTRIC EXPANSION VALVE (COIL)
FMO	FAN MOTOR
L1,2	REACTOR
TH1	HEAT EXCHANGER SENSOR
TH2	OUTDOOR AIR TEMP. SENSOR
TH3	DISCHARGE PIPE TEMP. SENSOR

Color marks

Mark	Color	MARK	COLOR
BK	BLACK	YE	YELLOW
BL	BLUE	YG	YELLOW/ GREEN
RD	RED		
WH	WHITE		

4. NOISE LEVEL

- Notes(1) The data are based on the following conditions.
 Ambient air temperature: Indoor unit 27°CWB. Outdoor unit 35°CDB.
 (2) The data in the chart are measured in an anechoic room.
 (3) The noise levels measured in the field are usually higher than the data because of reflection.

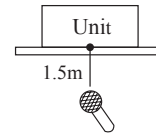

Measured based on JIS B 8616
 Mike position as right


Mike (in front & below unit)

(1) Indoor units

(a) Ceiling cassette-4 way type (FDT)


Model FDT71VG

Noise level 46 dB (A) at P-HIGH
 35 dB (A) at HIGH
 34 dB (A) at MEDIUM
 29 dB (A) at LOW

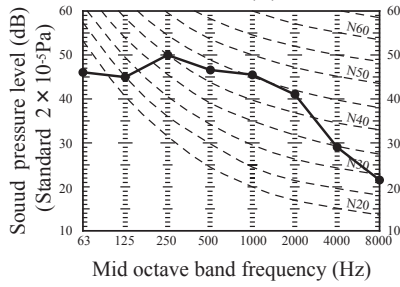


Model FDT100VG

Noise level 48 dB (A) at P-HIGH
 39 dB (A) at HIGH
 37 dB (A) at MEDIUM
 31 dB (A) at LOW

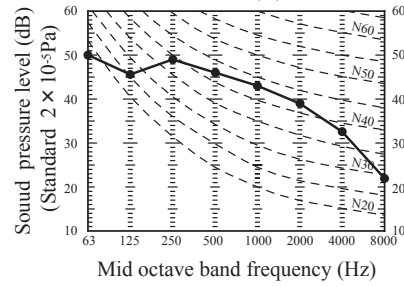

(b) Duct connected-High static pressure type (FDU)

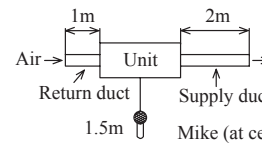


Measured based on JIS B 8616
 Mike position as right

Mike (at center & below unit)


Model FDU71VF1

Noise level 38 dB (A) at P-HIGH
 33 dB (A) at HIGH
 29 dB (A) at MEDIUM
 25 dB (A) at LOW

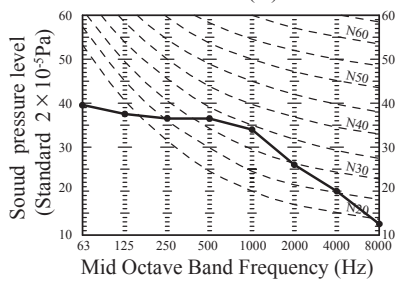


Model FDU100VF2

Noise level 44 dB (A) at P-Hi
 38 dB (A) at Hi
 36 dB (A) at Me
 30 dB (A) at Lo

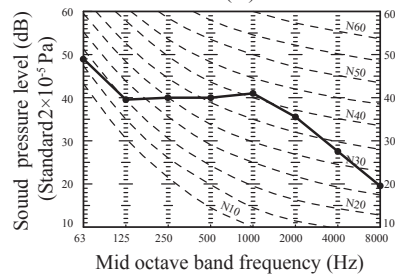


(c) Duct connected-Low/Middle static pressure type (FDUM)

Measured based on JIS B 8616
Mike position as right

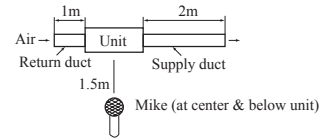



Model FDUM71VF1

Noise level 38 dB (A) at P-HIGH
33 dB (A) at HIGH
29 dB (A) at MEDIUM
25 dB (A) at LOW

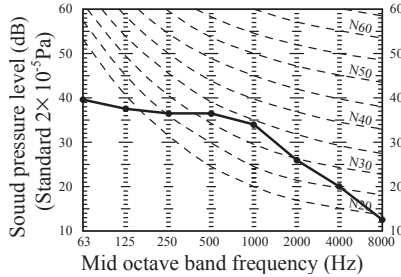

Model FDUM100VF2

Noise level 44 dB (A) at P-Hi
38 dB (A) at Hi
36 dB (A) at Me
30 dB (A) at Lo

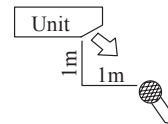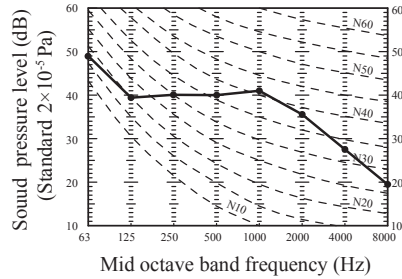


Measured based on JIS B 8616
Mike position as right

Mike (in front & below unit)

(d) Ceiling suspended type (FDE)


Model FDE71VG

Noise level 47 dB (A) at P-HIGH
41 dB (A) at HIGH
37 dB (A) at MEDIUM
32 dB (A) at LOW

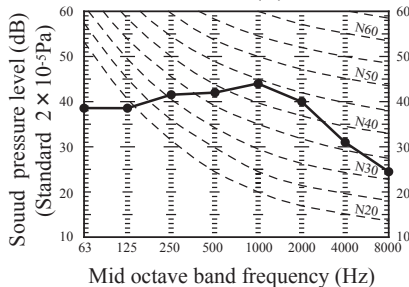


Model FDE100VG

Noise level 48 dB (A) at P-HIGH
43 dB (A) at HIGH
38 dB (A) at MEDIUM
34 dB (A) at LOW

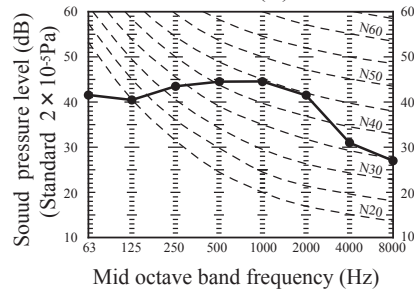


(e) Floor standing type (FDF)

Measured based on JIS B 8616
Mike position as right

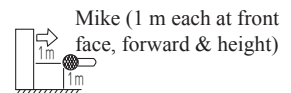


Model FDF71VD1

Noise level 42 dB (A) at P-HIGH
39 dB (A) at HIGH
35 dB (A) at MEDIUM
33 dB (A) at LOW

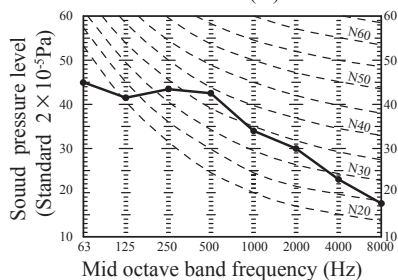

Model FDF100VD2



Noise level 54 dB (A) at P-HIGH
50 dB (A) at HIGH
48 dB (A) at MEDIUM
44 dB (A) at LOW

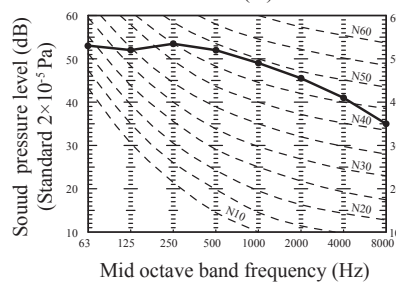



(2) Outdoor units

Measured based on ISO-T1, JIS B 8616
 Mike position: at highest noise level in position as mentined below
 Distance from front side 1m
 Height 1m

Model FDC71VNP

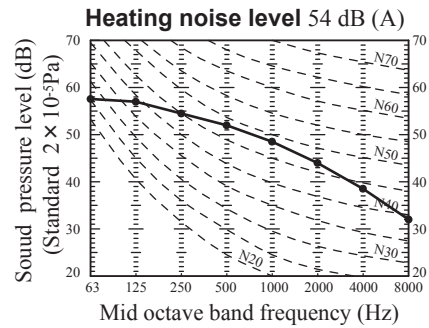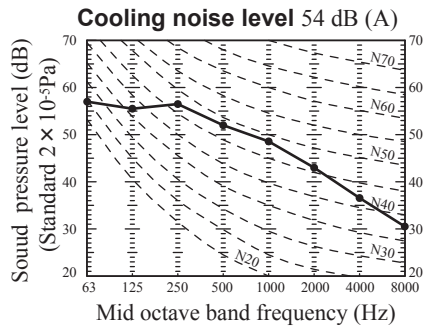

Model FDC90VNP1

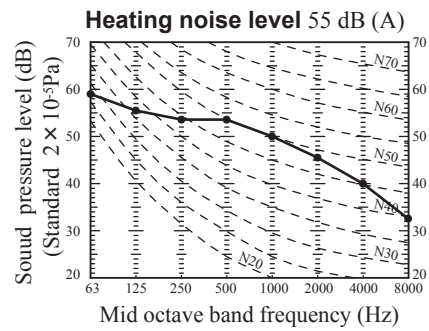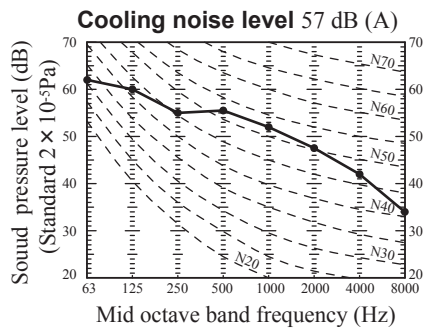

5. CHARACTERISTICS OF FAN


(1) Duct connected-High static pressure type (FDU)

- Characteristic FAN (1) shows air flow vs. External Static Pressure (E.S.P.) range where settings of E.S.P. are maximum E.S.P. (SW8-4 OFF : 150Pa, SW8-4 ON : 200Pa), rated E.S.P., and minimum E.S.P. (SW8-4 OFF : 80Pa, SW8-4 ON : 10Pa)
- Characteristic FAN (2) shows air flow vs. E.S.P. curve when set fan tap is set P-Hi with each setting of E.S.P. by remote control.
- External Static Pressure (E.S.P.) can be set by wired remote control.
- You can set required E.S.P. by wired remote control which calculate it with the set air flow rate and pressure loss of the duct connected.


Model FDU71VF1

■ SW8-4 : OFF (Range of use limitation : Setting 80Pa-150Pa)

Characteristic FAN (1)

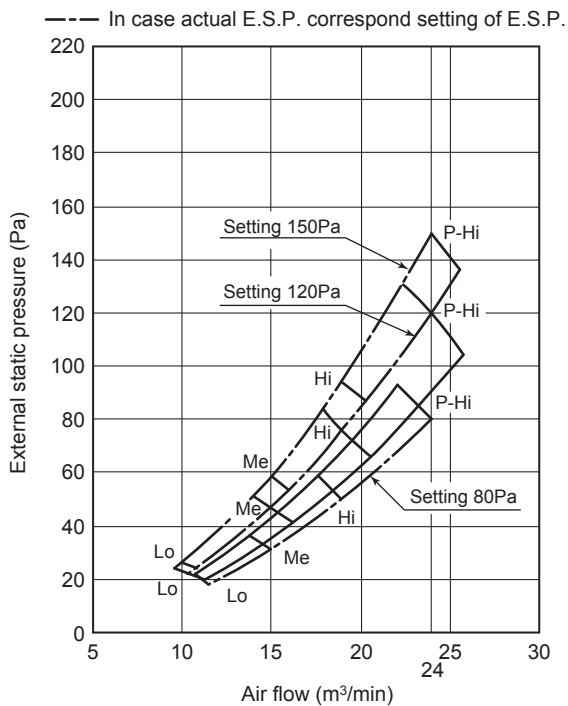


Characteristic FAN (2)

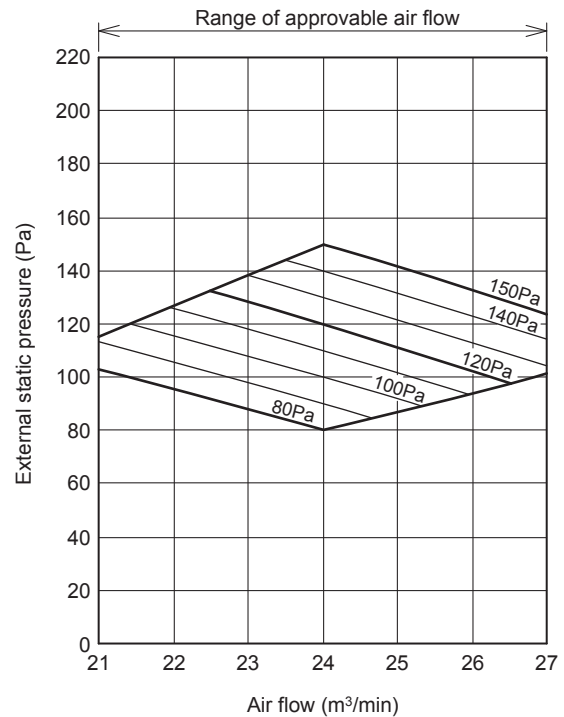


■ SW8-4 : ON (Range of use limitation : Setting 10Pa-200Pa)

Characteristic FAN (1)

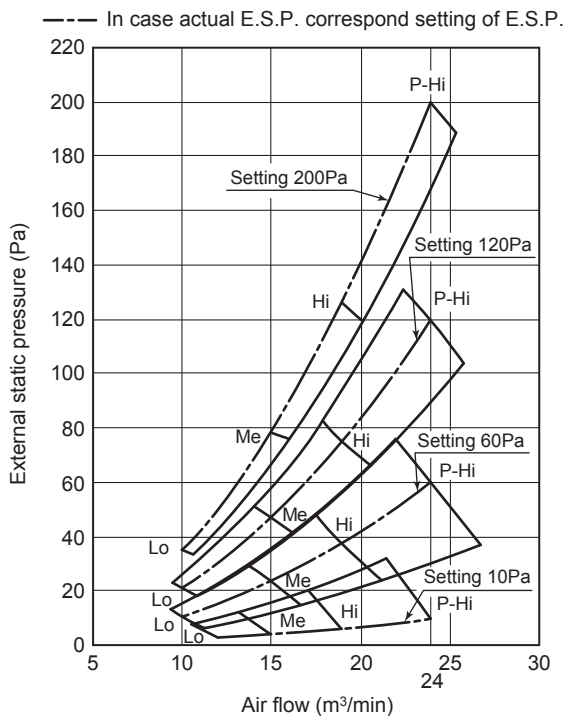


Characteristic FAN (2)

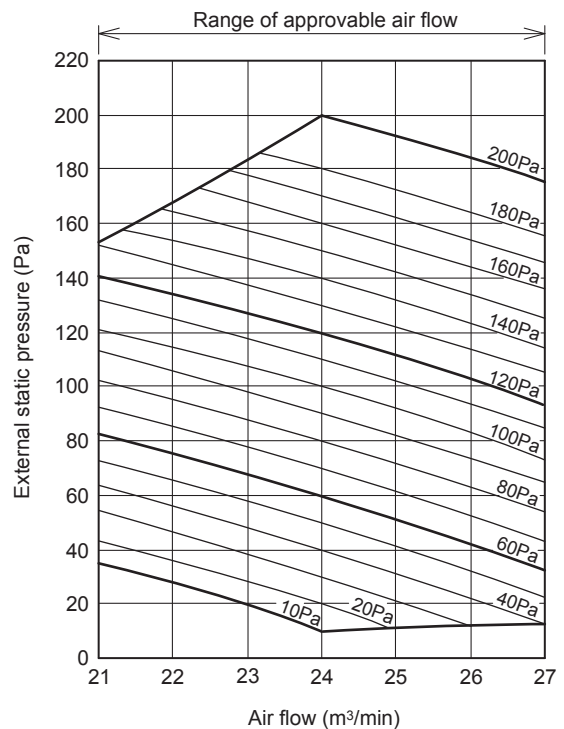


Model FDU100VF2

■ SW8-4 : OFF (Range of use limitation : Setting 80Pa-150Pa)

Characteristic FAN (1)

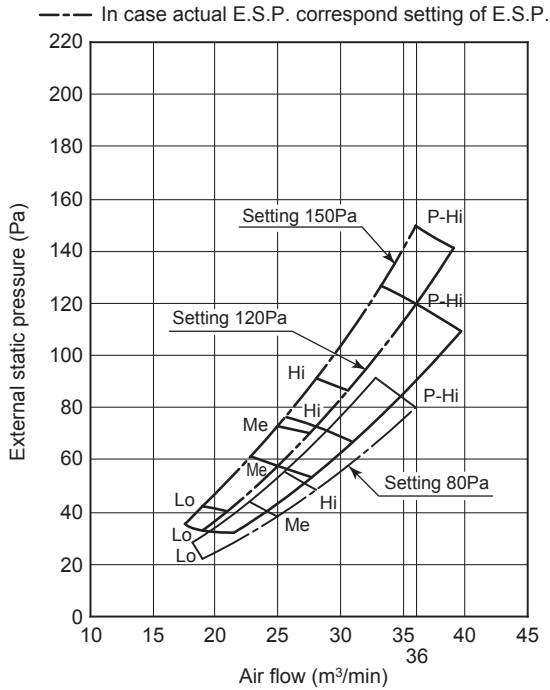


Characteristic FAN (2)

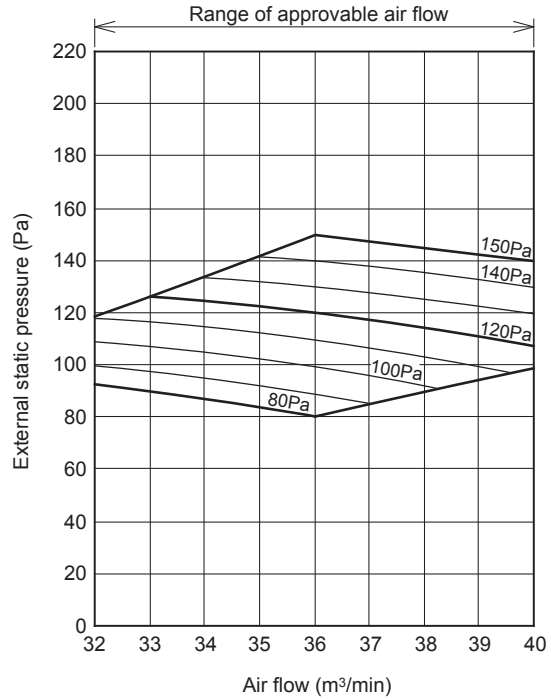


■ SW8-4 : ON (Range of use limitation : Setting 10Pa-200Pa)

Characteristic FAN (1)

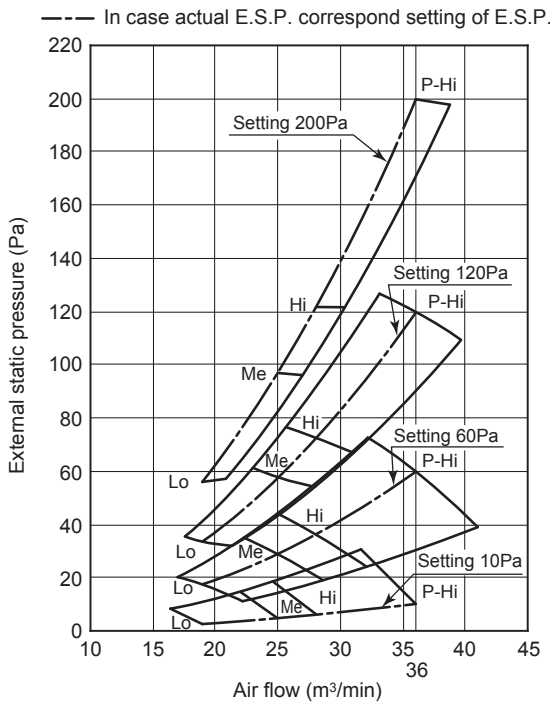

Characteristic FAN (2)

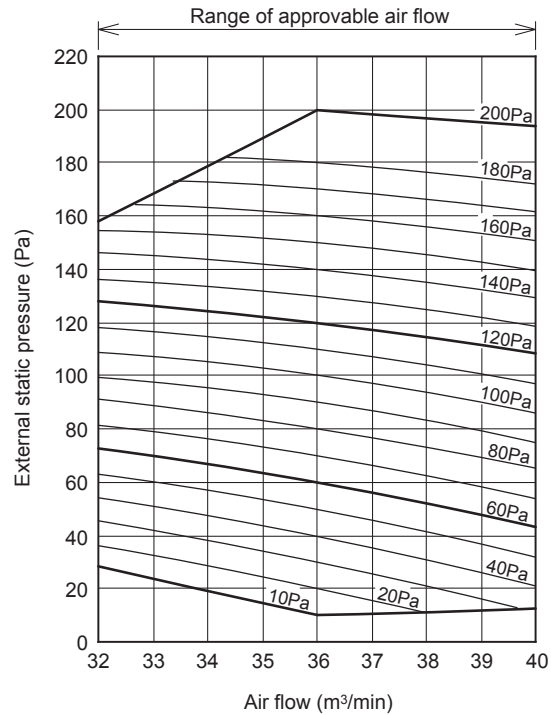


(2) Duct connected-Low / Middle static pressure type (FDUM)


- Characteristic FAN (1) shows air flow vs. External Static Pressure (E.S.P.) range where settings of E.S.P. are maximum E.S.P. (100Pa), rated E.S.P., and minimum E.S.P. (10Pa)
- Characteristic FAN (2) shows air flow vs E.S.P. curve when set fan tap is set P-Hi with each setting of E.S.P by remote control.
- External Static Pressure (E.S.P.) can be set by wired remote control.
- You can set required E.S.P. by wired remote control which calculate it with the set air flow rate and pressure loss of the duct connected.

Model FDUM71VF1

Characteristic FAN(1)

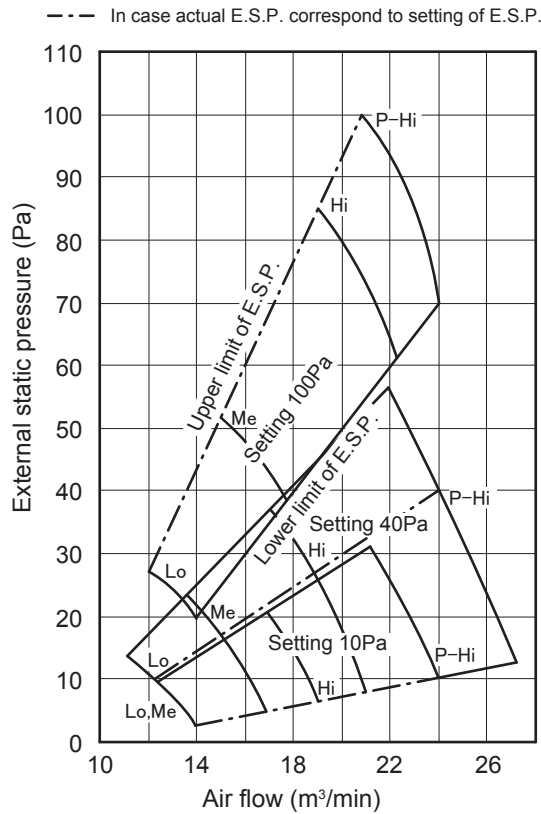


Characteristic FAN(2)

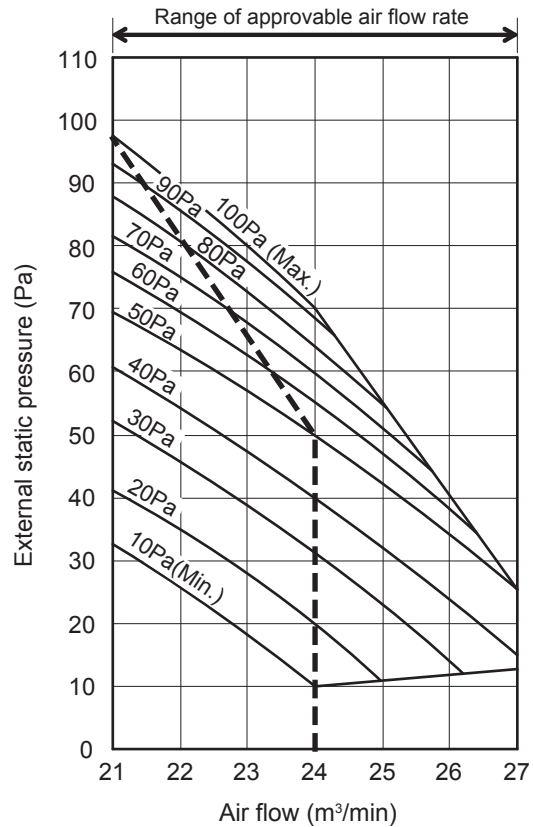


Model FDUM100VF2

Characteristic FAN(1)

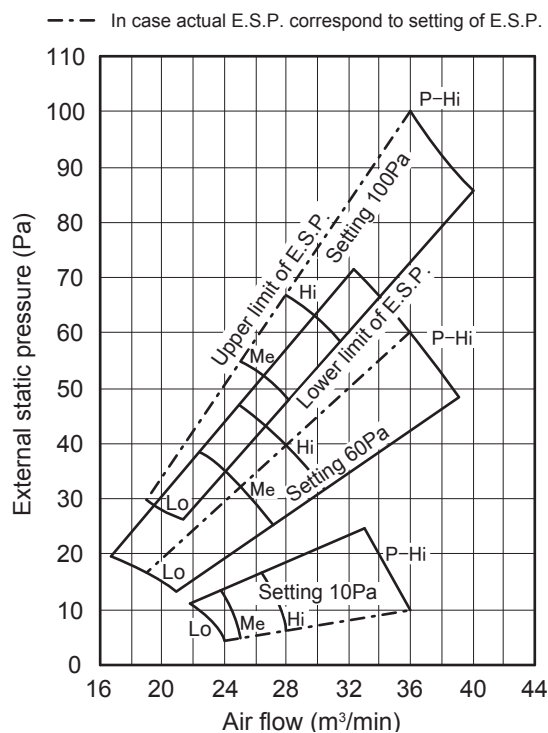

Characteristic FAN(2)

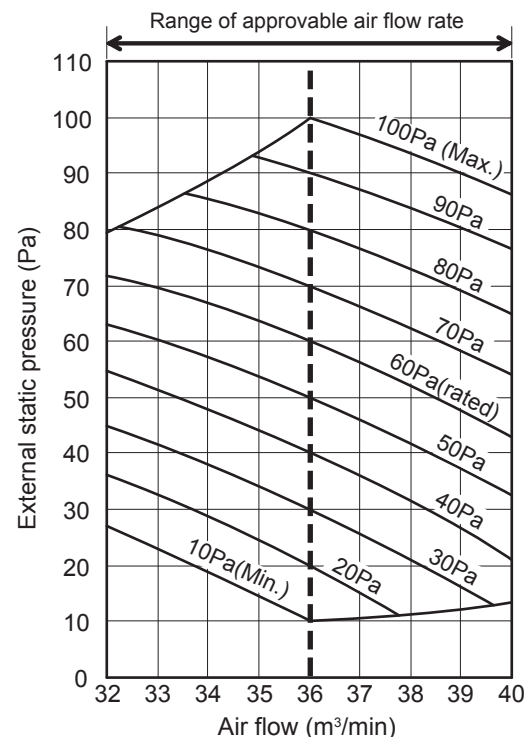

6. TEMPERATURE AND VELOCITY DISTRIBUTION

Indoor temperature

Cooling 27°CDB / 19°CWB

Heating 20°CDB

Note: These figures represent the typical main range of temperature and velocity distribution at the center of air outlet within the published conditions.


In the actual installation, they may differ from the typical figures under the influence of air temperature conditions, ceiling height, operation conditions and obstacles.

(1) Ceiling cassette-4 way type (FDT)


Model FDT71VG

Cooling Air flow: P-Hi


Louver position

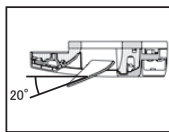

Temperature distribution

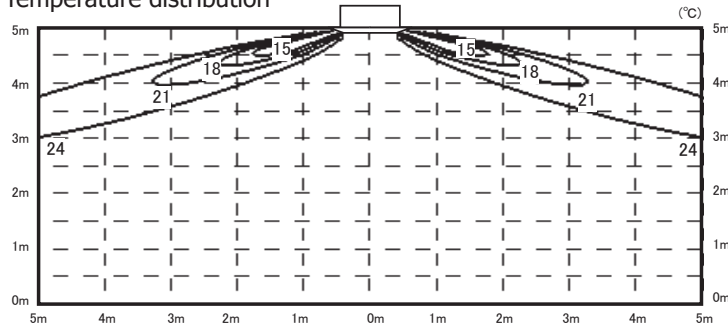


Velocity distribution

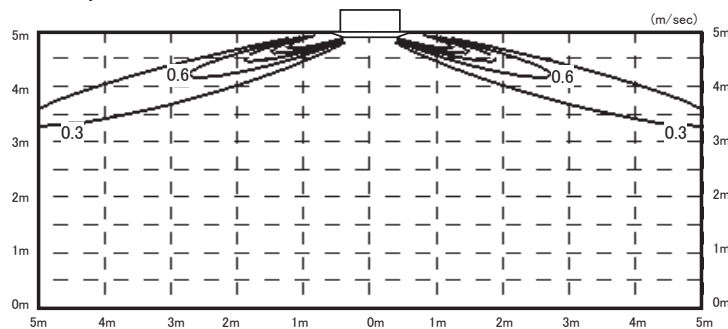


Heating Air flow: P-Hi


Louver position

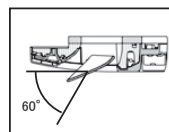

Temperature distribution

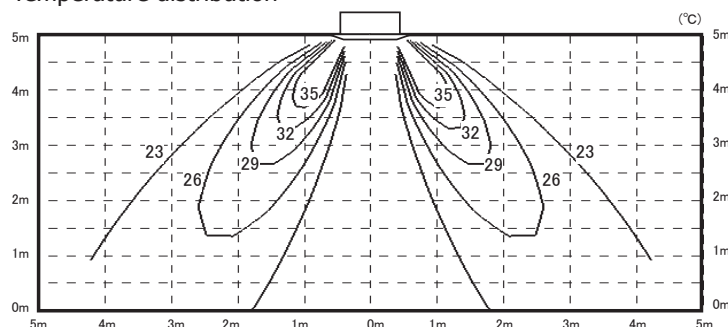


Velocity distribution

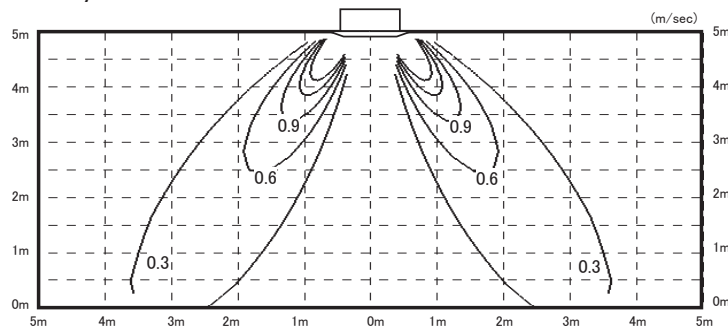


Model FDT100VG

Cooling Air flow: P-Hi


Louver position

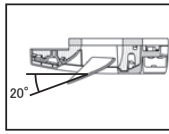

Temperature distribution

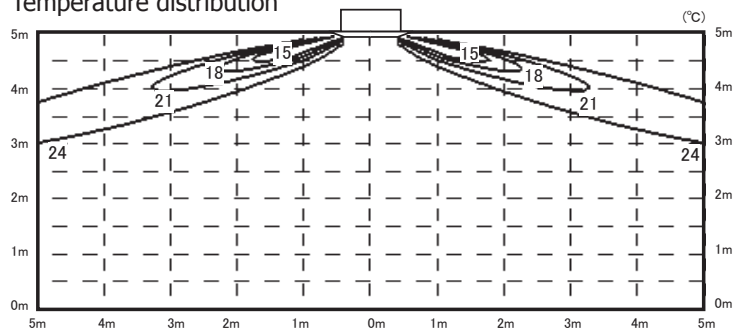


Velocity distribution

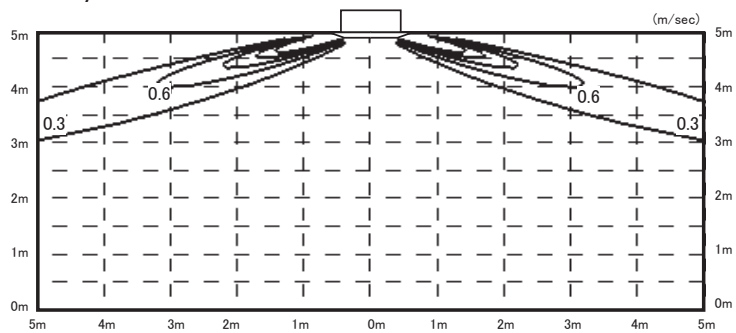


Heating Air flow: P-Hi


Louver position

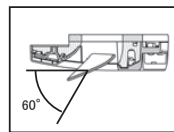

Temperature distribution

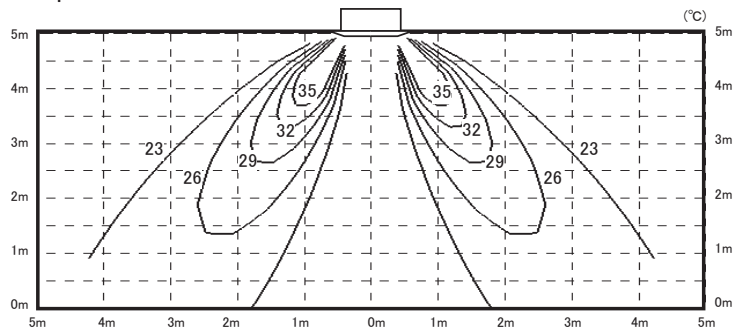


Velocity distribution

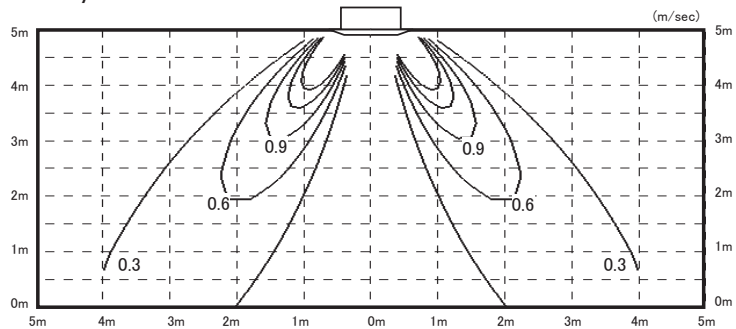


(2) Ceiling suspended type (FDE)
 Model FDE71VG

Cooling Air flow: P-Hi


Louver position

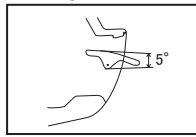

Temperature distribution

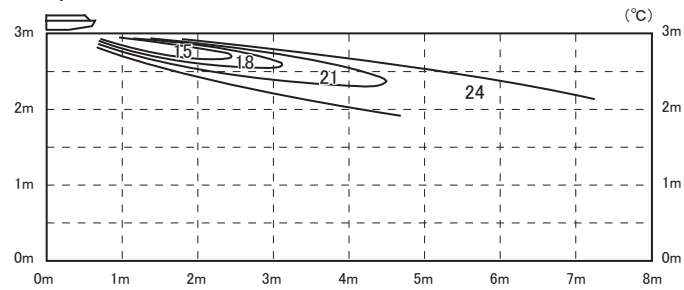


Velocity distribution

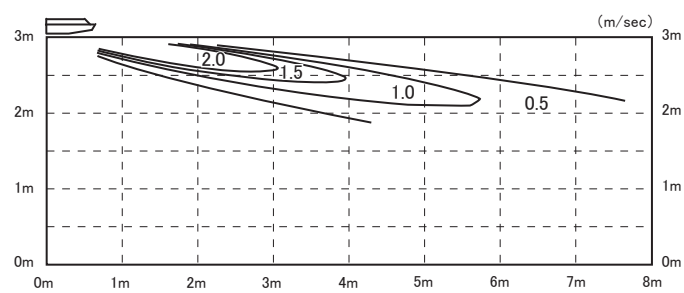


Heating Air flow: P-Hi


Louver position

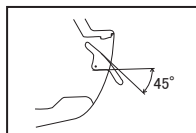

Temperature distribution

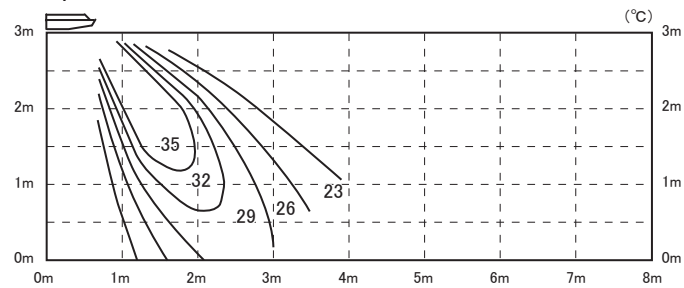


Velocity distribution

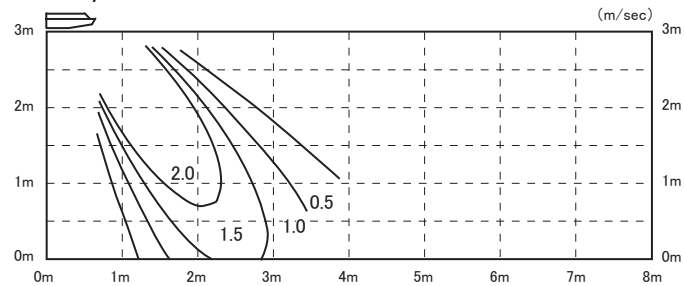


Model FDE100VG

Cooling Air flow: P-Hi


Louver position

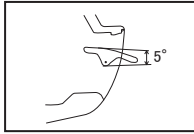

Temperature distribution

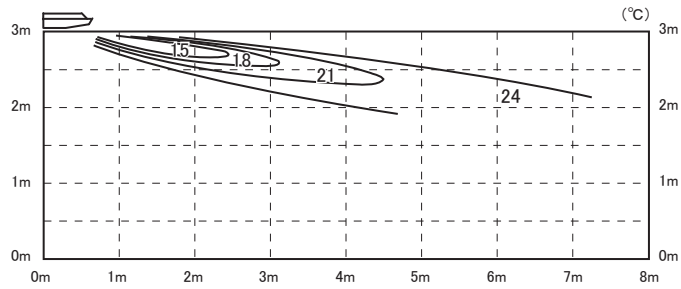


Velocity distribution

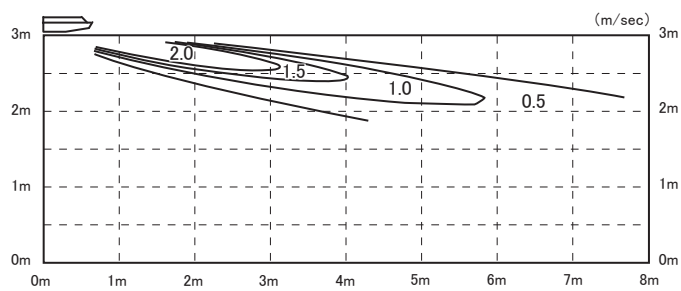


Heating Air flow: P-Hi


Louver position

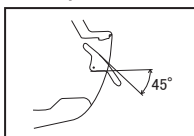

Temperature distribution

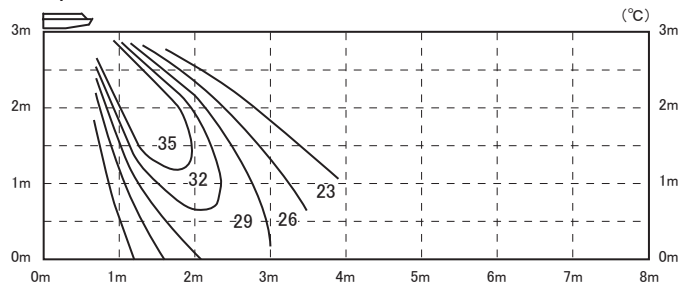

Velocity distribution

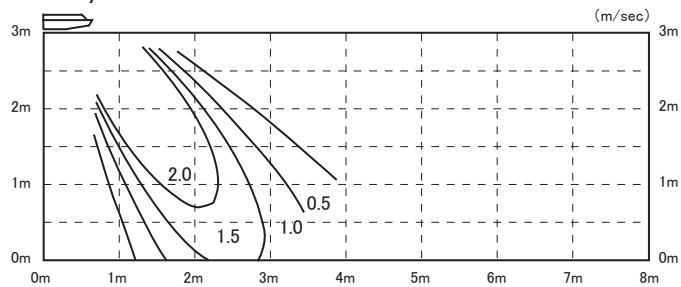


(3) Floor standing type (FDF)

Models FDF71VD1, 100VD2


Cooling Air flow:Hi (Louver position:Horizontal)

Temperature distribution

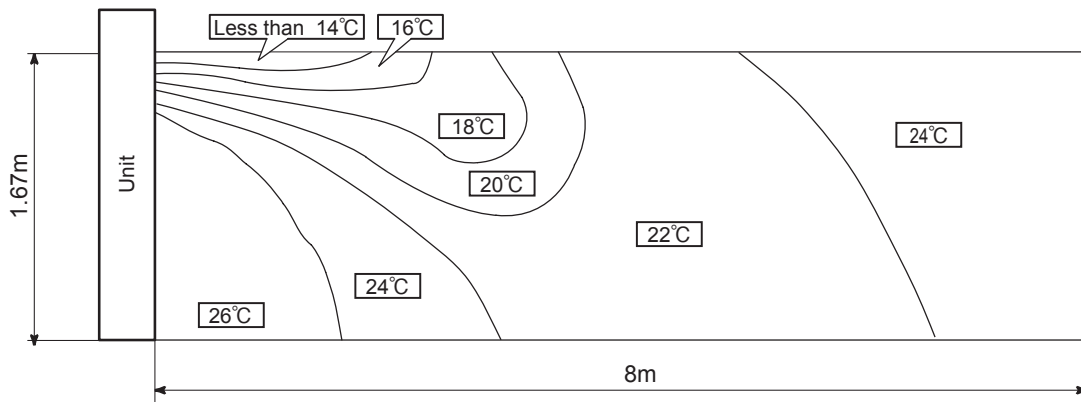


Heating Air flow:Hi (Louver position:Horizontal)

Temperature distribution

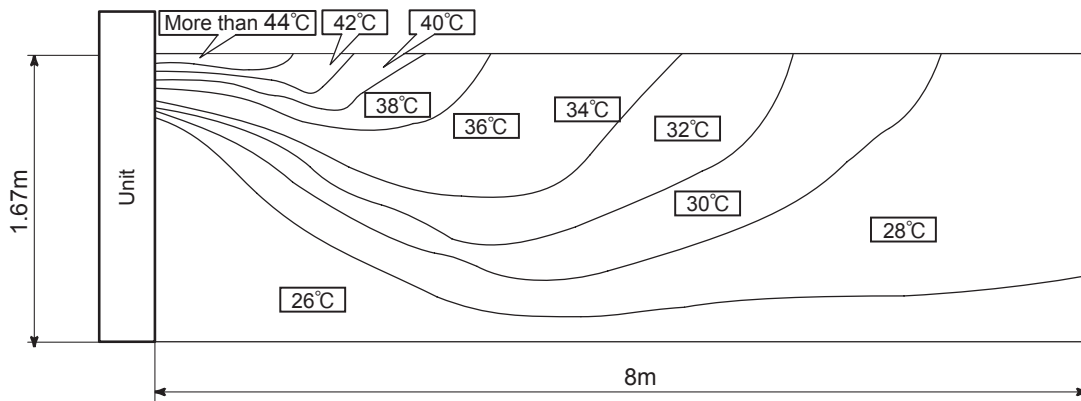


7. PIPING SYSTEM

Model 71

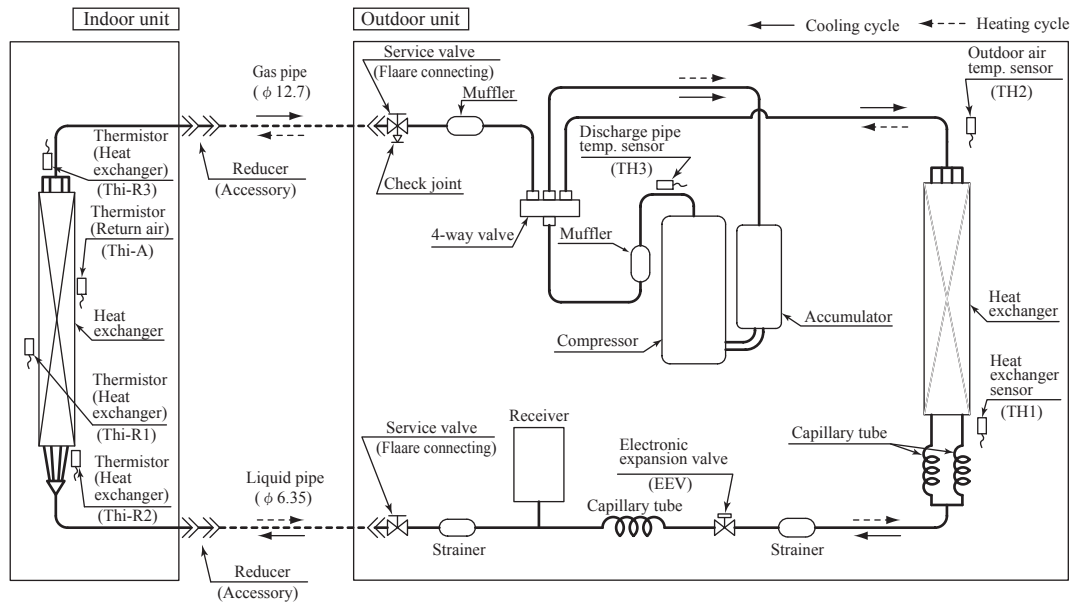

Model 90

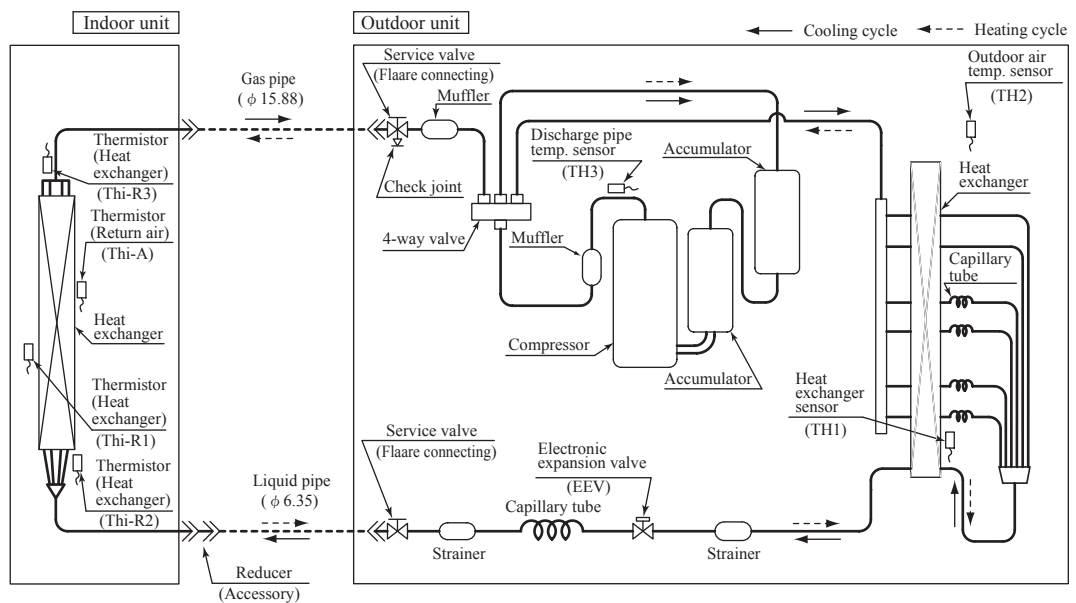

Preset point of the protective devices

Parts name	Mark	Equipped unit	All models
Thermistor (for protection overloading in heating)	Thi-R	Indoor unit	OFF 63°C , ON 56°C
Thermistor (for frost prevention)			OFF 1.0°C , ON 10°C
Thermistor (for protection high pressure in cooling)	TH1	Outdoor unit	OFF 63°C , ON 53°C
Thermistor (for detecting discharge pipe temperature)	TH3		OFF 115°C , ON 95°C

8. RANGE OF USAGE & LIMITATIONS

Operating temperature range		See next page.
		When used below -5°C, install a snow hood (prepared on site).
Recommendable area to install		Considering to get sufficient heating capacity, the area where the averaged lowest ambient air temperature in day time during winter is above 0°C, and it has no accumulation of snow.
Installation site		The limitations of installation space are shown in the page for exterior dimensions. Install the indoor unit at least 2.5m higher than the floor surface.
Temperature and humidity conditions surrounding the indoor unit (Note 2)		Model FDE, FDF : Dew point temperature : 23°C or less, relative humidity : 80% or less Other models : Dew point temperature : 28°C or less, relative humidity : 80% or less
Limitations on unit and piping installation		See page 51.
Compressor ON-OFF cycling	Cycle Time	10 minutes or more (from OFF to OFF) or (from ON to ON)
	Stop Time	3 minutes or more
Power source	Voltage range	Rating \pm 10%
	Voltage drop at start-up	Min.85% of rating
	Phase-to-phase imbalance	3% or less

Note 1. Do not install the unit in places which :

- 1) Flammable gas may leak.
- 2) Carbon fiber, metal particles, powder, etc. are floating.
- 3) Cosmetic or special sprays are used frequently.
- 4) Exposed to oil splashes or steam (e.g. kitchen and machine plant).
- 5) Exposed to sea breeze (e.g. coastal area) or calcium chloride (e.g. snow melting agent).
- 6) Exposed to ammonia substance (e.g. organic fertilizer).
- 7) Matters affecting devices, such as sulfuric gas, chlorine gas, acid, alkali, etc. may generate or accumulate.
- 8) Chimney smoke is hanging.
- 9) Sucking the exhaust gas from heat exchanger.
- 10) Adjacent to equipment generating electromagnetic waves or high frequency waves.
- 11) There is light beams that affect the receiving device of indoor unit in case of the wireless specification.
- 12) Snow falls heavily.
- 13) At an elevation of 1000 meters or higher.
- 14) On mobile machine (e.g. vehicle, ship, etc.)
- 15) Splashed with water to indoor unit (e.g. laundry room).


Note 2. If ambient temperature and humidity exceed the above conditions, add polyurethane foam insulation on the outer plate (10mm or thicker) of indoor unit.

Note 3. Both gas and liquid pipes need to be covered with 20mm or thicker heat insulation materials at the place where humidity exceeds 70%.


PJF000Z317

Operating temperature range

■ Cooling

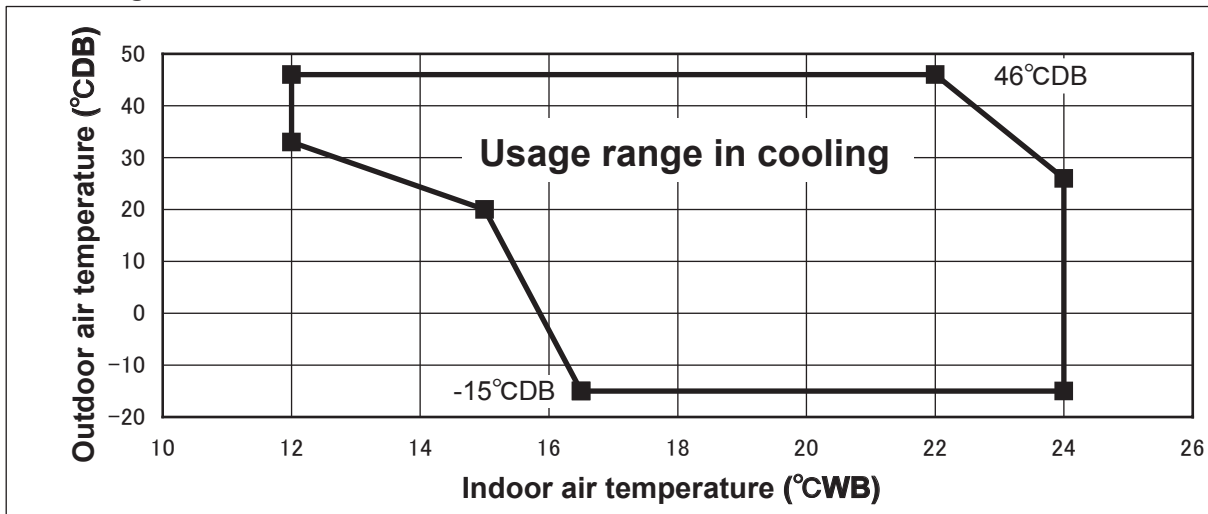

■ Heating

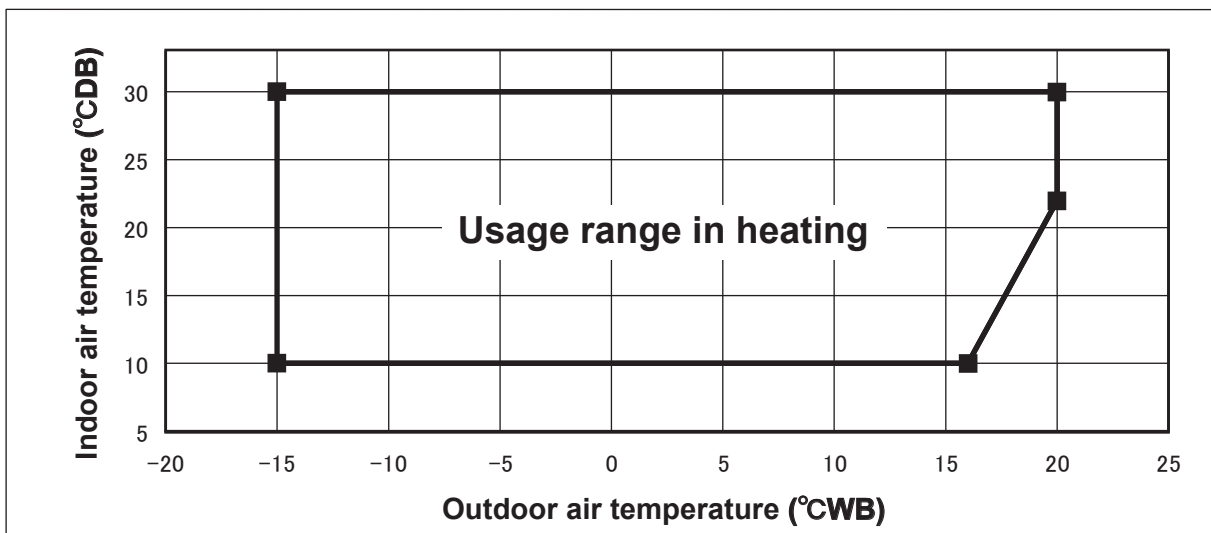

Decline in cooling and heating capacity or operation stop may occur when the outdoor unit is installed in places where natural wind can increase or decrease its design air flow rate.

PJF000Z317

“CAUTION” Cooling operation under low outdoor air temperature conditions

PAC models can be operated in cooling mode at low outdoor air temperature condition within above temperature range. However in case of severely low temperature conditions if the following precaution is not observed, it may not be operated in spite of operable temperature range mentioned above and cooling capacity may not be established under certain conditions.

[Precaution]

In case of severely low temperature condition


- 1) Install the outdoor unit at the place where strong wind cannot blow directly into the outdoor unit.
- 2) If there is no installation place where can prevent strong wind from directly blowing into the outdoor unit, mount the flex flow adapter (prepared as optional part) or like such devices onto the outdoor unit in order to divert the strong wind.

[Reason]

Under the low outdoor air temperature conditions of -5°C or lower, the outdoor fan is controlled at lower or lowest speed by outdoor fan control, but if strong wind directly blow into the outdoor unit, the outdoor heat exchanger temperature will drop more.

This makes high and low pressures to drop as well. This low pressure drop makes the indoor heat exchanger temperature to drop and will activate anti-frost control at indoor heat exchanger at frequent intervals, that cooling operation may not be established for any given time.

Limitation on unit and piping installation				
Descriptions		Model for outdoor unit	Dimensional limitations	Marks appearing in the drawing
One-way pipe length		FDC71VNP FDC90VNP1	$\leq 30\text{m}$ (2)	L
Elevation difference between indoor and outdoor unit	When the outdoor unit is positioned higher		$\leq 20\text{m}$	H
	When the outdoor unit is positioned lower		$\leq 20\text{m}$	
<p>Notes(1) FDC71VNP, 90VNP1 can be used for only single type. (2) In case of FDF series, one way pipe length is not greater than 23m.</p>				

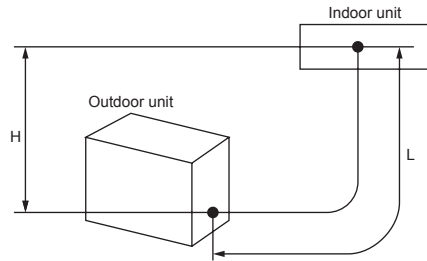

PJF000Z317

9. SELECTION CHART

Correct the cooling and heating capacity in accordance with the operating conditions. The net cooling and heating capacity can be obtained in the following way.

Net capacity = Capacity shown in the capacity tables (9.1) × Correction factors shown in the table (9.2) (9.3) (9.4).

Caution: In case that the cooling operation during low outdoor air temperature below -5°C is expected, install the outdoor unit where it is not influenced by natural wind. Otherwise protection control by low pressure will be activated much more frequently and it will cause insufficient capacity or breakdown of the compressor in worst case.

9.1 Capacity tables

(1) Ceiling cassette-4 way type (FDT)

Model FDT71VNPVG **Indoor unit** FDT71VG **Outdoor unit** FDC71VNP
 Cooling mode

Outdoor air temp. °CDB	Indoor air temperature															
	18°CDB		21°CDB		23°CDB		26°CDB		27°CDB		28°CDB		31°CDB		33°CDB	
	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC
11					4.71	4.62	5.34	5.23	5.65	5.54	5.78	5.66	6.04	5.92	6.30	6.17
13					5.00	4.90	5.58	5.47	5.87	5.75	5.99	5.87	6.23	6.11	6.48	6.25
15					5.30	5.19	5.83	5.71	6.09	5.97	6.20	6.06	6.43	6.30	6.66	6.29
17					5.59	5.48	6.07	5.95	6.31	6.18	6.41	6.12	6.62	6.49	6.83	6.33
19					5.73	5.61	6.13	6.01	6.34	6.21	6.48	6.14	6.76	6.53	7.04	6.38
21					5.80	5.68	6.20	6.07	6.36	6.21	6.54	6.15	6.89	6.57	7.25	6.43
23					6.23	5.86	6.63	6.41	6.81	6.35	6.96	6.28	7.26	6.66	7.56	6.50
25			6.26	6.13	6.67	6.01	7.07	6.56	7.26	6.49	7.38	6.40	7.63	6.76	7.88	6.57
27			6.72	6.39	7.11	6.17	7.51	6.70	7.71	6.63	7.91	6.56	8.31	6.94		
29			6.60	6.34	6.98	6.13	7.36	6.65	7.56	6.58	7.75	6.51	8.13	6.89		
31			6.47	6.29	6.85	6.08	7.22	6.61	7.40	6.53	7.59	6.46	7.95	6.84		
33	6.01	5.78	6.27	6.15	6.72	6.03	7.08	6.56	7.25	6.49	7.43	6.41	7.77	6.80		
35	5.89	5.73	6.15	6.02	6.59	5.98	6.94	6.51	7.10	6.44	7.26	6.36	7.59	6.75		
37	5.62	5.50	5.86	5.74	6.27	5.87	6.59	6.40	6.75	6.33	6.91	6.26	7.23	6.65		
39	5.35	5.24	5.57	5.46	5.95	5.75	6.25	6.12	6.40	6.23	6.55	6.16	6.86	6.56		
41	5.08	4.97	5.29	5.18	5.62	5.51	5.90	5.78	6.05	5.93	6.20	6.06	6.50	6.37		
43	4.99	4.89	5.18	5.07	5.47	5.36	5.73	5.62	5.88	5.77	6.04	5.92	6.35	6.22		

(kW) Heating mode : HC (kW)

Outdoor air temp. °CDB	°CWB	Indoor air temperature °CDB				
		16	18	20	22	24
		-19.8	-20			
-17.7	-18					
-15.7	-16					
-13.5	-14	4.23	4.21	4.19	4.17	4.14
-11.5	-12	4.35	4.33	4.31	4.29	4.26
-9.5	-10	4.47	4.45	4.43	4.40	4.38
-7.5	-8	4.59	4.57	4.55	4.52	4.50
-5.5	-6	4.94	4.92	4.89	4.87	4.84
-3.0	-4	5.29	5.26	5.24	5.21	5.18
-1.0	-2	5.64	5.61	5.58	5.55	5.52
1.0	0	5.99	5.96	5.93	5.89	5.86
2.0	1	6.16	6.13	6.10	6.06	6.03
3.0	2	6.37	6.33	6.30	6.26	6.22
5.0	4	6.77	6.74	6.70	6.66	6.62
7.0	6	7.18	7.14	7.10	7.05	7.01
9.0	8	7.28	7.24	7.19	7.14	7.09
11.5	10	7.38	7.33	7.29	7.23	7.17
13.5	12	7.34	7.29	7.24	7.18	7.12
15.5	14	7.30	7.25	7.19	7.13	7.07
16.5	16	7.28	7.23	7.17	7.10	7.04

PJF00Z451

Model FDT90VNP1VG **Indoor unit** FDT100VG **Outdoor unit** FDC90VNP1
 Cooling mode

Outdoor air temp. °CDB	Indoor air temperature															
	18°CDB		21°CDB		23°CDB		26°CDB		27°CDB		28°CDB		31°CDB		33°CDB	
	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC
11					8.35	7.81	8.93	8.57	9.21	8.50	9.59	8.45	10.34	9.05	11.09	8.90
13					8.42	7.84	8.94	8.57	9.20	8.50	9.55	8.44	10.25	9.03	10.96	8.87
15					8.48	7.86	8.96	8.58	9.19	8.49	9.52	8.43	10.17	9.00	10.83	8.84
17					8.54	7.88	8.97	8.58	9.18	8.49	9.49	8.42	10.09	8.98	10.70	8.80
19					8.51	7.87	8.96	8.58	9.19	8.49	9.48	8.42	10.06	8.97	10.63	8.79
21					8.32	7.80	8.96	8.58	9.20	8.49	9.47	8.42	10.02	8.96	10.57	8.77
23					8.52	7.87	9.04	8.61	9.21	8.50	9.47	8.42	10.00	8.96	10.52	8.76
25			8.10	7.93	8.72	7.95	9.13	8.64	9.23	8.50	9.48	8.42	9.97	8.95	10.47	8.75
27			8.38	8.22	8.92	8.02	9.22	8.66	9.24	8.51	9.27	8.36	9.31	8.78		
29			8.25	8.08	8.77	7.97	9.11	8.63	9.18	8.49	9.26	8.35	9.41	8.80		
31			8.11	7.95	8.62	7.91	9.00	8.59	9.12	8.47	9.25	8.35	9.50	8.82		
33	7.53	7.38	7.88	7.72	8.46	7.85	8.88	8.55	9.06	8.45	9.24	8.35	9.59	8.85		
35	7.41	7.26	7.74	7.59	8.31	7.80	8.77	8.52	9.00	8.43	9.23	8.35	9.68	8.87		
37	7.15	7.01	7.47	7.32	8.00	7.69	8.44	8.27	8.66	8.33	8.88	8.24	9.33	8.78		
39	6.89	6.75	7.20	7.05	7.70	7.54	8.11	7.94	8.32	8.16	8.54	8.14	8.97	8.69		
41	6.63	6.49	6.92	6.78	7.39	7.24	7.77	7.62	7.98	7.82	8.20	8.03	8.62	8.45		
43	6.36	6.24	6.65	6.52	7.08	6.94	7.44	7.29	7.65	7.49	7.85	7.69	8.26	8.10		

(kW) Heating mode : HC (kW)

Outdoor air temp. °CDB	°CWB	Indoor air temperature °CDB				
		16	18	20	22	24
		-19.8	-20			
-17.7	-18					
-15.7	-16					
-13.5	-14	5.38	5.35	5.32	5.29	5.26
-11.5	-12	5.61	5.58	5.55	5.52	5.49
-9.5	-10	5.84	5.81	5.78	5.74	5.71
-7.5	-8	6.07	6.04	6.00	5.97	5.93
-5.5	-6	6.25	6.21	6.17	6.13	6.09
-3.0	-4	6.42	6.37	6.33	6.29	6.25
-1.0	-2	6.59	6.54	6.50	6.45	6.41
1.0	0	6.76	6.71	6.66	6.61	6.56
2.0	1	6.84	6.79	6.74	6.69	6.64
3.0	2	7.30	7.25	7.19	7.14	7.08
5.0	4	8.22	8.16	8.10	8.04	7.97
7.0	6	9.13	9.07	9.00	8.93	8.86
9.0	8	9.61	9.54	9.47	9.39	9.32
11.5	10	10.09	10.01	9.93	9.85	9.77
13.5	12	10.26	10.18	10.10	10.01	9.93
15.5	14	10.42	10.34	10.26	10.17	10.08
16.5	16	10.51	10.42	10.34	10.25	10.16

PJF00Z451

Notes(1) These data show average statuses.
 Depending on the system control, there may be ranges where the operation is not conducted continuously.
 These data show the case where the operation frequency of a compressor is fixed.(Cooling only)
 (2) Capacities are based on the following conditions.
 Corresponding refrigerant piping length : 7.5m
 Level difference of Zero.
 (3) Symbols are as follows.
 TC : Total cooling capacity (kW)
 SHC : Sensible heat capacity (kW)
 HC : Heating capacity (kW)

(2) Duct connected-High static pressure type (FDU)

Model **FDU71VNPVF1** Indoor unit FDU71VF1 Outdoor unit FDC71VNP

Cooling mode

(kW)

Heating mode : HC

(kW)

Outdoor air temp.	Indoor air temperature															
	18°CDB		21°CDB		23°CDB		26°CDB		27°CDB		28°CDB		31°CDB		33°CDB	
	12°CWB	14°CWB	16°CWB	18°CWB	19°CWB	20°CWB	22°CWB	24°CWB	°CDB	°CWB	16	18	20	22	24	
°CDB	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC
11					4.71	4.62	5.34	5.23	5.65	5.38	5.78	5.32	6.04	5.66	6.30	5.52
13					5.00	4.89	5.58	5.46	5.87	5.45	5.99	5.38	6.23	5.71	6.48	5.56
15					5.30	5.00	5.83	5.54	6.09	5.52	6.20	5.44	6.43	5.76	6.66	5.60
17					5.59	5.10	6.07	5.62	6.31	5.58	6.41	5.50	6.62	5.81	6.83	5.64
19					5.73	5.15	6.13	5.64	6.34	5.59	6.48	5.52	6.76	5.84	7.04	5.69
21					5.80	5.18	6.20	5.66	6.36	5.60	6.54	5.54	6.89	5.88	7.25	5.74
23					6.23	5.34	6.63	5.80	6.81	5.74	6.96	5.67	7.26	5.98	7.56	5.82
25			6.26	5.68	6.67	5.50	7.07	5.95	7.26	5.89	7.38	5.80	7.63	6.08	7.88	5.89
27			6.72	5.87	7.11	5.67	7.51	6.10	7.71	6.03	7.91	5.96	8.31	6.27		
29			6.60	5.82	6.98	5.62	7.36	6.05	7.56	5.98	7.75	5.91	8.13	6.22		
31			6.47	5.76	6.85	5.57	7.22	6.00	7.40	5.93	7.59	5.86	7.95	6.17		
33	6.01	5.33	6.27	5.68	6.72	5.52	7.08	5.96	7.25	5.88	7.43	5.81	7.77	6.12		
35	5.89	5.27	6.15	5.63	6.59	5.47	6.94	5.91	7.10	5.83	7.26	5.76	7.59	6.07		
37	5.62	5.15	5.86	5.51	6.27	5.35	6.59	5.79	6.75	5.72	6.91	5.65	7.23	5.97		
39	5.35	5.04	5.57	5.40	5.95	5.23	6.25	5.68	6.40	5.61	6.55	5.55	6.86	5.87		
41	5.08	4.92	5.29	5.18	5.62	5.11	5.90	5.56	6.05	5.50	6.20	5.44	6.50	5.77		
43	4.99	4.88	5.18	5.07	5.47	5.06	5.73	5.51	5.88	5.45	6.04	5.39	6.35	5.74		

Outdoor air temp.	Indoor air temperature					
	°CDB		°CWB		°CDB	
	16	18	20	22	24	24
-14.5	-15	4.17	4.15	4.13	4.11	4.09
-13.5	-14	4.23	4.21	4.19	4.17	4.14
-11.5	-12	4.35	4.33	4.31	4.29	4.26
-9.5	-10	4.47	4.45	4.43	4.40	4.38
-7.5	-8	4.59	4.57	4.55	4.52	4.50
-5.5	-6	4.94	4.92	4.89	4.87	4.84
-3.0	-4	5.29	5.26	5.24	5.21	5.18
-1.0	-2	5.64	5.61	5.58	5.55	5.52
1.0	0	5.99	5.96	5.93	5.89	5.86
2.0	1	6.16	6.13	6.10	6.06	6.03
3.0	2	6.37	6.33	6.30	6.26	6.22
5.0	4	6.77	6.74	6.70	6.66	6.62
7.0	6	7.18	7.14	7.10	7.05	7.01
9.0	8	7.28	7.24	7.19	7.14	7.09
11.5	10	7.38	7.33	7.29	7.23	7.17
13.5	12	7.34	7.29	7.24	7.18	7.12
15.5	14	7.30	7.25	7.19	7.13	7.07
16.5	16	7.28	7.23	7.17	7.10	7.04



Model **FDU90VNP1VF2** Indoor unit FDU100VF2 Outdoor unit FDC90VNP1

Cooling mode

(kW)

Heating mode : HC

(kW)

Outdoor air temp.	Indoor air temperature															
	18°CDB		21°CDB		23°CDB		26°CDB		27°CDB		28°CDB		31°CDB		33°CDB	
	12°CWB	14°CWB	16°CWB	18°CWB	19°CWB	20°CWB	22°CWB	24°CWB	°CDB	°CWB	16	18	20	22	24	
°CDB	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC
11					8.35	7.08	8.93	7.59	9.21	7.47	9.59	7.37	10.34	7.83	11.09	7.56
13					8.42	7.10	8.94	7.59	9.20	7.47	9.55	7.36	10.25	7.82	10.96	7.54
15					8.48	7.12	8.96	7.59	9.19	7.47	9.52	7.35	10.17	7.80	10.83	7.53
17					8.54	7.14	8.97	7.60	9.18	7.46	9.49	7.35	10.09	7.79	10.70	7.51
19					8.51	7.13	8.96	7.60	9.19	7.47	9.48	7.35	10.06	7.78	10.63	7.50
21					8.32	7.07	8.96	7.59	9.20	7.47	9.47	7.34	10.02	7.78	10.57	7.49
23					8.52	7.13	9.04	7.62	9.21	7.47	9.47	7.34	10.00	7.77	10.52	7.48
25			8.10	7.36	8.72	7.19	9.13	7.64	9.23	7.48	9.48	7.35	9.97	7.77	10.47	7.47
27			8.38	7.45	8.92	7.25	9.22	7.66	9.24	7.48	9.27	7.30	9.31	7.65		
29			8.25	7.41	8.77	7.20	9.11	7.63	9.18	7.46	9.26	7.30	9.41	7.67		
31			8.11	7.36	8.62	7.16	9.00	7.60	9.12	7.45	9.25	7.30	9.50	7.68		
33	7.53	6.79	7.88	7.29	8.46	7.11	8.88	7.58	9.06	7.44	9.24	7.29	9.59	7.70		
35	7.41	6.74	7.74	7.24	8.31	7.07	8.77	7.55	9.00	7.42	9.23	7.29	9.68	7.72		
37	7.15	6.65	7.47	7.16	8.00	6.98	8.44	7.47	8.66	7.35	8.88	7.22	9.33	7.65		
39	6.89	6.55	7.20	7.05	7.70	6.90	8.11	7.39	8.32	7.27	8.54	7.15	8.97	7.59		
41	6.63	6.46	6.92	6.78	7.39	6.81	7.77	7.31	7.98	7.20	8.20	7.08	8.62	7.53		
43	6.36	6.24	6.65	6.52	7.08	6.73	7.44	7.23	7.65	7.12	7.85	7.01	8.26	7.48		

Outdoor air temp.	Indoor air temperature					
	°CDB		°CWB		°CDB	
	16	18	20	22	24	24
-14.5	-15	5.26	5.24	5.21	5.18	5.15
-13.5	-14	5.38	5.35	5.32	5.29	5.26
-11.5	-12	5.61	5.58	5.55	5.52	5.49
-9.5	-10	5.84	5.81	5.78	5.74	5.71
-7.5	-8	6.07	6.04	6.00	5.97	5.93
-5.5	-6	6.25	6.21	6.17	6.13	6.09
-3.0	-4	6.42	6.37	6.33	6.29	6.25
-1.0	-2	6.59	6.54	6.50	6.45	6.41
1.0	0	6.76	6.71	6.66	6.61	6.56
2.0	1	6.84	6.79	6.74	6.69	6.64
3.0	2	7.30	7.25	7.19	7.14	7.08
5.0	4	8.22	8.16	8.10	8.04	7.97
7.0	6	9.13	9.07	9.00	8.93	8.86
9.0	8	9.61	9.54	9.47	9.39	9.32
11.5	10	10.09	10.01	9.93	9.85	9.77
13.5	12	10.26	10.18	10.10	10.01	9.93
15.5	14	10.42	10.34	10.26	10.17	10.08
16.5	16	10.51	10.42	10.34	10.25	10.16



Notes(1) These data show average statuses.

Depending on the system control, there may be ranges where the operation is not conducted continuously.

These data show the case where the operation frequency of a compressor is same as nominal condition frequency or follows the protection controls.

(2) Capacities are based on the following conditions.

Corresponding refrigerant piping length : 7.5m

Level difference : 0m

Indoor fan speed : PHI

(3) Symbols are as follows.

TC : Total cooling capacity (kW), SHC : Sensible heat capacity (kW), HC : Heating capacity (kW)

(3) Duct connected-Low/Middle static pressure type (FDUM)

Model FDUM71VNPVF1 Indoor unit FDUM71VF1 Outdoor unit FDC71VNP

Cooling mode

(kW)

Heating mode : HC

(kW)

Outdoor air temp. °CDB	Indoor air temperature															
	18°CDB		21°CDB		23°CDB		26°CDB		27°CDB		28°CDB		31°CDB		33°CDB	
	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC
11					4.71	4.62	5.34	5.23	5.65	5.38	5.78	5.32	6.04	5.66	6.30	5.52
13					5.00	4.89	5.58	5.46	5.87	5.45	5.99	5.38	6.23	5.71	6.48	5.56
15					5.30	5.00	5.83	5.54	6.09	5.52	6.20	5.44	6.43	5.76	6.66	5.60
17					5.59	5.10	6.07	5.62	6.31	5.58	6.41	5.50	6.62	5.81	6.83	5.64
19					5.73	5.15	6.13	5.64	6.34	5.59	6.48	5.52	6.76	5.84	7.04	5.69
21					5.80	5.18	6.20	5.66	6.36	5.60	6.54	5.54	6.89	5.88	7.25	5.74
23					6.23	5.34	6.63	5.80	6.81	5.74	6.96	5.67	7.26	5.98	7.56	5.82
25			6.26	5.68	6.67	5.50	7.07	5.95	7.26	5.89	7.38	5.80	7.63	6.08	7.88	5.89
27			6.72	5.87	7.11	5.67	7.51	6.10	7.71	6.03	7.91	5.96	8.31	6.27		
29			6.60	5.82	6.98	5.62	7.36	6.05	7.56	5.98	7.75	5.91	8.13	6.22		
31			6.47	5.76	6.85	5.57	7.22	6.00	7.40	5.93	7.59	5.86	7.95	6.17		
33	6.01	5.33	6.27	5.68	6.72	5.52	7.08	5.96	7.25	5.88	7.43	5.81	7.77	6.12		
35	5.89	5.27	6.15	5.63	6.59	5.47	6.94	5.91	7.10	5.83	7.26	5.76	7.59	6.07		
37	5.62	5.15	5.86	5.51	6.27	5.35	6.59	5.79	6.75	5.72	6.91	5.65	7.23	5.97		
39	5.35	5.04	5.57	5.40	5.95	5.23	6.25	5.68	6.40	5.61	6.55	5.55	6.86	5.87		
41	5.08	4.92	5.29	5.18	5.62	5.11	5.90	5.56	6.05	5.50	6.20	5.44	6.50	5.77		
43	4.99	4.88	5.18	5.07	5.47	5.06	5.73	5.51	5.88	5.45	6.04	5.39	6.35	5.74		

Outdoor air temp. °CDB	°CWB	Indoor air temperature °CDB					
		16	18	20	22	24	
-14.5	-15	4.17	4.15	4.13	4.11	4.09	
-13.5	-14	4.23	4.21	4.19	4.17	4.14	
-11.5	-12	4.35	4.33	4.31	4.29	4.26	
-9.5	-10	4.47	4.45	4.43	4.40	4.38	
-7.5	-8	4.59	4.57	4.55	4.52	4.50	
-5.5	-6	4.94	4.92	4.89	4.87	4.84	
-3.0	-4	5.29	5.26	5.24	5.21	5.18	
-1.0	-2	5.64	5.61	5.58	5.55	5.52	
1.0	0	5.99	5.96	5.93	5.89	5.86	
2.0	1	6.16	6.13	6.10	6.06	6.03	
3.0	2	6.37	6.33	6.30	6.26	6.22	
5.0	4	6.77	6.74	6.70	6.66	6.62	
7.0	6	7.18	7.14	7.10	7.05	7.01	
9.0	8	7.28	7.24	7.19	7.14	7.09	
11.5	10	7.38	7.33	7.29	7.23	7.17	
13.5	12	7.34	7.29	7.24	7.18	7.12	
15.5	14	7.30	7.25	7.19	7.13	7.07	
16.5	16	7.28	7.23	7.17	7.10	7.04	

PJG000Z189

Model FDUM90VNP1VF2 Indoor unit FDUM100VF2 Outdoor unit FDC90VNP1

Cooling mode

(kW)

Heating mode : HC

(kW)

Outdoor air temp. °CDB	Indoor air temperature															
	18°CDB		21°CDB		23°CDB		26°CDB		27°CDB		28°CDB		31°CDB		33°CDB	
	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC
11					8.35	7.08	8.93	7.59	9.21	7.47	9.59	7.37	10.34	7.83	11.09	7.56
13					8.42	7.10	8.94	7.59	9.20	7.47	9.55	7.36	10.25	7.82	10.96	7.54
15					8.48	7.12	8.96	7.59	9.19	7.47	9.52	7.35	10.17	7.80	10.83	7.53
17					8.54	7.14	8.97	7.60	9.18	7.46	9.49	7.35	10.09	7.79	10.70	7.51
19					8.51	7.13	8.96	7.60	9.19	7.47	9.48	7.35	10.06	7.78	10.63	7.50
21					8.32	7.07	8.96	7.59	9.20	7.47	9.47	7.34	10.02	7.78	10.57	7.49
23					8.52	7.13	9.04	7.62	9.21	7.47	9.47	7.34	10.00	7.77	10.52	7.48
25			8.10	7.36	8.72	7.19	9.13	7.64	9.23	7.48	9.48	7.35	9.97	7.77	10.47	7.47
27			8.38	7.45	8.92	7.25	9.22	7.66	9.24	7.48	9.27	7.30	9.31	7.65		
29			8.25	7.41	8.77	7.20	9.11	7.63	9.18	7.46	9.26	7.30	9.41	7.67		
31			8.11	7.36	8.62	7.16	9.00	7.60	9.12	7.45	9.25	7.30	9.50	7.68		
33	7.53	6.79	7.88	7.29	8.46	7.11	8.88	7.58	9.06	7.44	9.24	7.29	9.59	7.70		
35	7.41	6.74	7.74	7.24	8.31	7.07	8.77	7.55	9.00	7.42	9.23	7.29	9.68	7.72		
37	7.15	6.65	7.47	7.16	8.00	6.98	8.44	7.47	8.66	7.35	8.88	7.22	9.33	7.65		
39	6.89	6.55	7.20	7.05	7.70	6.90	8.11	7.39	8.32	7.27	8.54	7.15	8.97	7.59		
41	6.63	6.46	6.92	6.78	7.39	6.81	7.77	7.31	7.98	7.20	8.20	7.08	8.62	7.53		
43	6.36	6.24	6.65	6.52	7.08	6.73	7.44	7.23	7.65	7.12	7.85	7.01	8.26	7.48		

Outdoor air temp. °CDB	°CWB	Indoor air temperature °CDB					
		16	18	20	22	24	
-14.5	-15	5.26	5.24	5.21	5.18	5.15	
-13.5	-14	5.38	5.35	5.32	5.29	5.26	
-11.5	-12	5.61	5.58	5.55	5.52	5.49	
-9.5	-10	5.84	5.81	5.78	5.74	5.71	
-7.5	-8	6.07	6.04	6.00	5.97	5.93	
-5.5	-6	6.25	6.21	6.17	6.13	6.09	
-3.0	-4	6.42	6.37	6.33	6.29	6.25	
-1.0	-2	6.59	6.54	6.50	6.45	6.41	
1.0	0	6.76	6.71	6.66	6.61	6.56	
2.0	1	6.84	6.79	6.74	6.69	6.64	
3.0	2	7.30	7.25	7.19	7.14	7.08	
5.0	4	8.22	8.16	8.10	8.04	7.97	
7.0	6	9.13	9.07	9.00	8.93	8.86	
9.0	8	9.61	9.54	9.47	9.39	9.32	
11.5	10	10.09	10.01	9.93	9.85	9.77	
13.5	12	10.26	10.18	10.10	10.01	9.93	
15.5	14	10.42	10.34	10.26	10.17	10.08	
16.5	16	10.51	10.42	10.34	10.25	10.16	

PJG000Z189

Notes(1) These data show average statuses.

Depending on the system control, there may be ranges where the operation is not conducted continuously. These data show the case where the operation frequency of a compressor is same as nominal condition frequency or follows the protection controls.

(2) Capacities are based on the following conditions.

Corresponding refrigerant piping length :7.5m

Level difference : 0m

Indoor fan speed : PHI

(3) Symbols are as follows.

TC : Total cooling capacity (kW), SHC : Sensible heat capacity (kW), HC : Heating capacity (kW)

(4) Ceiling suspended type (FDE)

Model FDE71VNPVG Indoor unit FDE71VG Outdoor unit FDC71VNP

Cooling mode (kW)

Heating mode : HC (kW)

Outdoor air temp.	Indoor air temperature															
	18°CDB		21°CDB		23°CDB		26°CDB		27°CDB		28°CDB		31°CDB		33°CDB	
	12°CWB		14°CWB		16°CWB		18°CWB		19°CWB		20°CWB		22°CWB		24°CWB	
°CDB	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC
11					4.71	4.37	5.34	4.89	5.65	4.90	5.78	4.85	6.04	5.12	6.30	5.00
13					5.00	4.48	5.58	4.98	5.87	4.98	5.99	4.92	6.23	5.18	6.48	5.05
15					5.30	4.59	5.83	5.06	6.09	5.05	6.20	4.99	6.43	5.24	6.66	5.10
17					5.59	4.71	6.07	5.15	6.31	5.13	6.41	5.06	6.62	5.29	6.83	5.14
19					5.73	4.76	6.13	5.17	6.34	5.14	6.48	5.08	6.76	5.33	7.04	5.20
21					5.80	4.79	6.20	5.20	6.36	5.15	6.54	5.10	6.89	5.37	7.25	5.25
23					6.23	4.96	6.63	5.36	6.81	5.30	6.96	5.24	7.26	5.49	7.56	5.34
25			6.26	5.28	6.67	5.14	7.07	5.52	7.26	5.47	7.38	5.38	7.63	5.60	7.88	5.43
27			6.72	5.49	7.11	5.33	7.51	5.69	7.71	5.63	7.91	5.57	8.31	5.82		
29			6.60	5.44	6.98	5.27	7.36	5.64	7.56	5.57	7.75	5.51	8.13	5.76		
31			6.47	5.38	6.85	5.22	7.22	5.58	7.40	5.52	7.59	5.45	7.95	5.70		
33	6.01	5.00	6.27	5.29	6.72	5.16	7.08	5.53	7.25	5.46	7.43	5.40	7.77	5.65		
35	5.89	4.94	6.15	5.23	6.59	5.11	6.94	5.47	7.10	5.41	7.26	5.34	7.59	5.59		
37	5.62	4.81	5.86	5.11	6.27	4.98	6.59	5.34	6.75	5.28	6.91	5.22	7.23	5.48		
39	5.35	4.69	5.57	4.98	5.95	4.85	6.25	5.22	6.40	5.16	6.55	5.10	6.86	5.37		
41	5.08	4.56	5.29	4.86	5.62	4.72	5.90	5.09	6.05	5.04	6.20	4.98	6.50	5.26		
43	4.99	4.52	5.18	4.81	5.47	4.66	5.73	5.03	5.88	4.98	6.04	4.93	6.35	5.21		

Outdoor air temp.	Indoor air temperature					
	°CDB					
	°CDB	°CWB	16	18	20	22
-14.5	-15	4.17	4.15	4.13	4.11	4.09
-13.5	-14	4.23	4.21	4.19	4.17	4.14
-11.5	-12	4.35	4.33	4.31	4.29	4.26
-9.5	-10	4.47	4.45	4.43	4.40	4.38
-7.5	-8	4.59	4.57	4.55	4.52	4.50
-5.5	-6	4.94	4.92	4.89	4.87	4.84
-3.0	-4	5.29	5.26	5.24	5.21	5.18
-1.0	-2	5.64	5.61	5.58	5.55	5.52
1.0	0	5.99	5.96	5.93	5.89	5.86
2.0	1	6.16	6.13	6.10	6.06	6.03
3.0	2	6.37	6.33	6.30	6.26	6.22
5.0	4	6.77	6.74	6.70	6.66	6.62
7.0	6	7.18	7.14	7.10	7.05	7.01
9.0	8	7.28	7.24	7.19	7.14	7.09
11.5	10	7.38	7.33	7.29	7.23	7.17
13.5	12	7.34	7.29	7.24	7.18	7.12
15.5	14	7.30	7.25	7.19	7.13	7.07
16.5	16	7.28	7.23	7.17	7.10	7.04

PFA004Z049 ▲

Model FDE90VNP1VG Indoor unit FDE100VG Outdoor unit FDC90VNP1

Cooling mode (kW)

Heating mode : HC (kW)

Outdoor air temp.	Indoor air temperature															
	18°CDB		21°CDB		23°CDB		26°CDB		27°CDB		28°CDB		31°CDB		33°CDB	
	12°CWB		14°CWB		16°CWB		18°CWB		19°CWB		20°CWB		22°CWB		24°CWB	
°CDB	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC
11					8.35	7.46	8.93	8.14	9.21	8.09	9.59	8.07	10.34	8.62	11.09	8.52
13					8.42	7.49	8.94	8.14	9.20	8.09	9.55	8.06	10.25	8.59	10.96	8.48
15					8.48	7.51	8.96	8.15	9.19	8.08	9.52	8.04	10.17	8.57	10.83	8.45
17					8.54	7.54	8.97	8.15	9.18	8.08	9.49	8.03	10.09	8.54	10.70	8.41
19					8.51	7.52	8.96	8.15	9.19	8.08	9.48	8.03	10.06	8.53	10.63	8.39
21					8.32	7.45	8.96	8.15	9.20	8.09	9.47	8.03	10.02	8.52	10.57	8.37
23					8.52	7.53	9.04	8.18	9.21	8.09	9.47	8.03	10.00	8.51	10.52	8.36
25			8.10	7.77	8.72	7.61	9.13	8.22	9.23	8.10	9.48	8.03	9.97	8.51	10.47	8.35
27			8.38	7.89	8.92	7.69	9.22	8.25	9.24	8.10	9.27	7.96	9.31	8.30		
29			8.25	7.83	8.77	7.63	9.11	8.21	9.18	8.08	9.26	7.96	9.41	8.33		
31			8.11	7.77	8.62	7.57	9.00	8.16	9.12	8.06	9.25	7.95	9.50	8.36		
33	7.53	7.16	7.88	7.67	8.46	7.51	8.88	8.12	9.06	8.04	9.24	7.95	9.59	8.39		
35	7.41	7.10	7.74	7.59	8.31	7.44	8.77	8.08	9.00	8.02	9.23	7.95	9.68	8.41		
37	7.15	6.98	7.47	7.32	8.00	7.32	8.44	7.96	8.66	7.90	8.88	7.83	9.33	8.30		
39	6.89	6.75	7.20	7.05	7.70	7.20	8.11	7.84	8.32	7.78	8.54	7.71	8.97	8.20		
41	6.63	6.49	6.92	6.78	7.39	7.08	7.77	7.62	7.98	7.66	8.20	7.60	8.62	8.09		
43	6.36	6.24	6.65	6.52	7.08	6.94	7.44	7.29	7.65	7.49	7.85	7.48	8.26	7.98		

Outdoor air temp.	Indoor air temperature					
	°CDB					
	°CDB	°CWB	16	18	20	22
-14.5	-15	5.26	5.24	5.21	5.18	5.15
-13.5	-14	5.38	5.35	5.32	5.29	5.26
-11.5	-12	5.61	5.58	5.55	5.52	5.49
-9.5	-10	5.84	5.81	5.78	5.74	5.71
-7.5	-8	6.07	6.04	6.00	5.97	5.93
-5.5	-6	6.25	6.21	6.17	6.13	6.09
-3.0	-4	6.42	6.37	6.33	6.29	6.25
-1.0	-2	6.59	6.54	6.50	6.45	6.41
1.0	0	6.76	6.71	6.66	6.61	6.56
2.0	1	6.84	6.79	6.74	6.69	6.64
3.0	2	7.30	7.25	7.19	7.14	7.08
5.0	4	8.22	8.16	8.10	8.04	7.97
7.0	6	9.13	9.07	9.00	8.93	8.86
9.0	8	9.61	9.54	9.47	9.39	9.32
11.5	10	10.09	10.01	9.93	9.85	9.77
13.5	12	10.26	10.18	10.10	10.01	9.93
15.5	14	10.42	10.34	10.26	10.17	10.08
16.5	16	10.51	10.42	10.34	10.25	10.16

Notes(1) These data show average statuses.
Depending on the system control, there may be ranges where the operation is not conducted continuously.
These data show the case where the operation frequency of a compressor is fixed.

(2) Capacities are based on the following conditions.
Corresponding refrigerant piping length :7.5m
Level difference of Zero.

(3) Symbols are as follows.
TC : Total cooling capacity (kW)
SHC : Sensible heat capacity (kW)
HC : Heating capacity (kW)

PFA004Z049 ▲

(5) Floor standing type (FDF)

Model **FDF71VNPVD1** Indoor unit **FDF71VD1** Outdoor unit **FDC71VNP**

Cooling mode

(kW)

Heating mode : HC

(kW)

Outdoor air temp.	Indoor air temperature															
	18°CDB		21°CDB		23°CDB		26°CDB		27°CDB		28°CDB		31°CDB		33°CDB	
	12°CWB		14°CWB		16°CWB		18°CWB		19°CWB		20°CWB		22°CWB		24°CWB	
°CDB	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC
11					4.71	4.18	5.34	4.67	5.65	4.66	5.78	4.60	6.04	4.85	6.30	4.71
13					5.00	4.28	5.58	4.75	5.87	4.73	5.99	4.66	6.23	4.90	6.48	4.75
15					5.30	4.39	5.83	4.83	6.09	4.80	6.20	4.72	6.43	4.95	6.66	4.79
17					5.59	4.49	6.07	4.91	6.31	4.87	6.41	4.78	6.62	5.00	6.83	4.83
19					5.73	4.54	6.13	4.93	6.34	4.88	6.48	4.80	6.76	5.03	7.04	4.87
21					5.80	4.57	6.20	4.95	6.36	4.88	6.54	4.82	6.89	5.07	7.25	4.92
23					6.23	4.73	6.63	5.09	6.81	5.03	6.96	4.95	7.26	5.17	7.56	4.99
25			6.26	5.07	6.67	4.90	7.07	5.25	7.26	5.17	7.38	5.08	7.63	5.27	7.88	5.07
27			6.72	5.26	7.11	5.07	7.51	5.40	7.71	5.32	7.91	5.25	8.31	5.46		
29			6.60	5.21	6.98	5.02	7.36	5.35	7.56	5.27	7.75	5.19	8.13	5.41		
31			6.47	5.16	6.85	4.97	7.22	5.30	7.40	5.22	7.59	5.14	7.95	5.36		
33	6.01	4.81	6.27	5.07	6.72	4.91	7.08	5.25	7.25	5.17	7.43	5.09	7.77	5.31		
35	5.89	4.75	6.15	5.02	6.59	4.86	6.94	5.20	7.10	5.12	7.26	5.04	7.59	5.26		
37	5.62	4.63	5.86	4.90	6.27	4.74	6.59	5.08	6.75	5.01	6.91	4.93	7.23	5.16		
39	5.35	4.51	5.57	4.78	5.95	4.62	6.25	4.96	6.40	4.90	6.55	4.82	6.86	5.06		
41	5.08	4.39	5.29	4.67	5.62	4.50	5.90	4.85	6.05	4.79	6.20	4.72	6.50	4.97		
43	4.99	4.35	5.18	4.62	5.47	4.45	5.73	4.80	5.88	4.74	6.04	4.67	6.35	4.93		

Outdoor air temp.	Indoor air temperature					
	°CDB					
	°CDB	°CWB	16	18	20	22
-14.5	-15	4.17	4.15	4.13	4.11	4.09
-13.5	-14	4.23	4.21	4.19	4.17	4.14
-11.5	-12	4.35	4.33	4.31	4.29	4.26
-9.5	-10	4.47	4.45	4.43	4.40	4.38
-7.5	-8	4.59	4.57	4.55	4.52	4.50
-5.5	-6	4.94	4.92	4.89	4.87	4.84
-3.0	-4	5.29	5.26	5.24	5.21	5.18
-1.0	-2	5.64	5.61	5.58	5.55	5.52
1.0	0	5.99	5.96	5.93	5.89	5.86
2.0	1	6.16	6.13	6.10	6.06	6.03
3.0	2	6.37	6.33	6.30	6.26	6.22
5.0	4	6.77	6.74	6.70	6.66	6.62
7.0	6	7.18	7.14	7.10	7.05	7.01
9.0	8	7.28	7.24	7.19	7.14	7.09
11.5	10	7.38	7.33	7.29	7.23	7.17
13.5	12	7.34	7.29	7.24	7.18	7.12
15.5	14	7.30	7.25	7.19	7.13	7.07
16.5	16	7.28	7.23	7.17	7.10	7.04

PGA000Z814

Model **FDF90VNP1VD2** Indoor unit **FDF100VD2** Outdoor unit **FDC90VNP1**

Cooling mode

(kW)

Heating mode : HC

(kW)

Outdoor air temp.	Indoor air temperature															
	18°CDB		21°CDB		23°CDB		26°CDB		27°CDB		28°CDB		31°CDB		33°CDB	
	12°CWB		14°CWB		16°CWB		18°CWB		19°CWB		20°CWB		22°CWB		24°CWB	
°CDB	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC
11					8.35	7.23	8.93	7.74	9.21	7.69	9.59	7.67	10.34	8.18	11.09	8.09
13					8.42	7.26	8.94	7.74	9.20	7.69	9.55	7.66	10.25	8.15	10.96	8.05
15					8.48	7.28	8.96	7.75	9.19	7.69	9.52	7.65	10.17	8.12	10.83	8.01
17					8.54	7.31	8.97	7.75	9.18	7.68	9.49	7.64	10.09	8.10	10.70	7.97
19					8.51	7.30	8.96	7.75	9.19	7.68	9.48	7.64	10.06	8.09	10.63	7.96
21					8.32	7.22	8.96	7.75	9.20	7.69	9.47	7.63	10.02	8.08	10.57	7.94
23					8.52	7.30	9.04	7.78	9.21	7.69	9.47	7.63	10.00	8.07	10.52	7.92
25			8.10	7.41	8.72	7.39	9.13	7.82	9.23	7.70	9.48	7.64	9.97	8.06	10.47	7.91
27			8.38	7.54	8.92	7.47	9.22	7.85	9.24	7.70	9.27	7.56	9.31	7.85		
29			8.25	7.48	8.77	7.41	9.11	7.81	9.18	7.68	9.26	7.56	9.41	7.88		
31			8.11	7.42	8.62	7.34	9.00	7.76	9.12	7.66	9.25	7.55	9.50	7.91		
33	7.53	6.85	7.88	7.31	8.46	7.28	8.88	7.72	9.06	7.64	9.24	7.55	9.59	7.94		
35	7.41	6.79	7.74	7.25	8.31	7.21	8.77	7.68	9.00	7.61	9.23	7.55	9.68	7.97		
37	7.15	6.67	7.47	7.13	8.00	7.09	8.44	7.55	8.66	7.49	8.88	7.43	9.33	7.85		
39	6.89	6.54	7.20	7.01	7.70	6.96	8.11	7.42	8.32	7.37	8.54	7.31	8.97	7.74		
41	6.63	6.42	6.92	6.78	7.39	6.84	7.77	7.30	7.98	7.24	8.20	7.19	8.62	7.63		
43	6.36	6.24	6.65	6.52	7.08	6.71	7.44	7.17	7.65	7.12	7.85	7.07	8.26	7.51		

Outdoor air temp.	Indoor air temperature					
	°CDB					
	°CDB	°CWB	16	18	20	22
-14.5	-15	5.26	5.24	5.21	5.18	5.15
-13.5	-14	5.38	5.35	5.32	5.29	5.26
-11.5	-12	5.61	5.58	5.55	5.52	5.49
-9.5	-10	5.84	5.81	5.78	5.74	5.71
-7.5	-8	6.07	6.04	6.00	5.97	5.93
-5.5	-6	6.25	6.21	6.17	6.13	6.09
-3.0	-4	6.42	6.37	6.33	6.29	6.25
-1.0	-2	6.59	6.54	6.50	6.45	6.41
1.0	0	6.76	6.71	6.66	6.61	6.56
2.0	1	6.84	6.79	6.74	6.69	6.64
3.0	2	7.30	7.25	7.19	7.14	7.08
5.0	4	8.22	8.16	8.10	8.04	7.97
7.0	6	9.13	9.07	9.00	8.93	8.86
9.0	8	9.61	9.54	9.47	9.39	9.32
11.5	10	10.09	10.01	9.93	9.85	9.77
13.5	12	10.26	10.18	10.10	10.01	9.93
15.5	14	10.42	10.34	10.26	10.17	10.08
16.5	16	10.51	10.42	10.34	10.25	10.16

PGA000Z814

Notes(1) These data show average statuses.

Depending on the system control, there may be ranges where the operation is not conducted continuously. These data show the case where the operation frequency of a compressor is same as nominal condition frequency or follows the protection controls.

(2) Capacities are based on the following conditions.

Corresponding refrigerant piping length : 7.5m

Level difference : 0m

Indoor fan speed : PHi

(3) Symbols are as follows.


TC : Total cooling capacity (kW), SHC : Sensible heat capacity (kW), HC : Heating capacity (kW)

[References data]


Capacity variation against outdoor and indoor temperature at the maximum compressor speed capacity compensation coefficient shows the ratio to nominal capacity.

(I) Model FDC71VNP

① Cooling

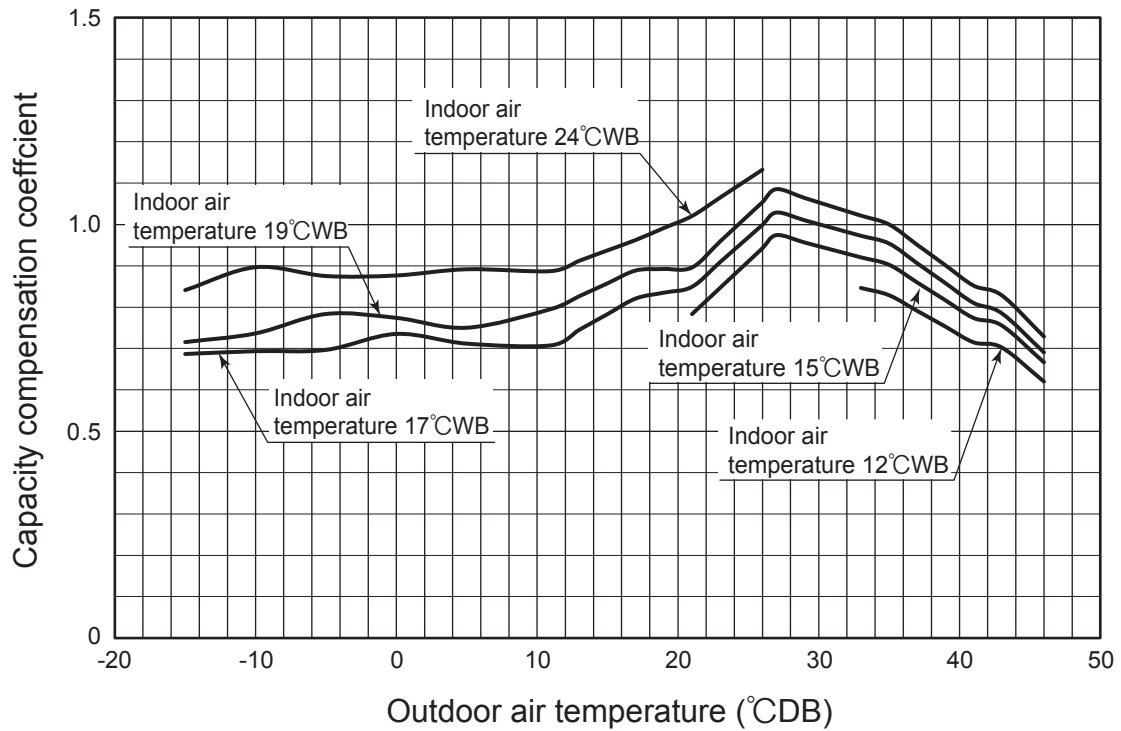


② Heating

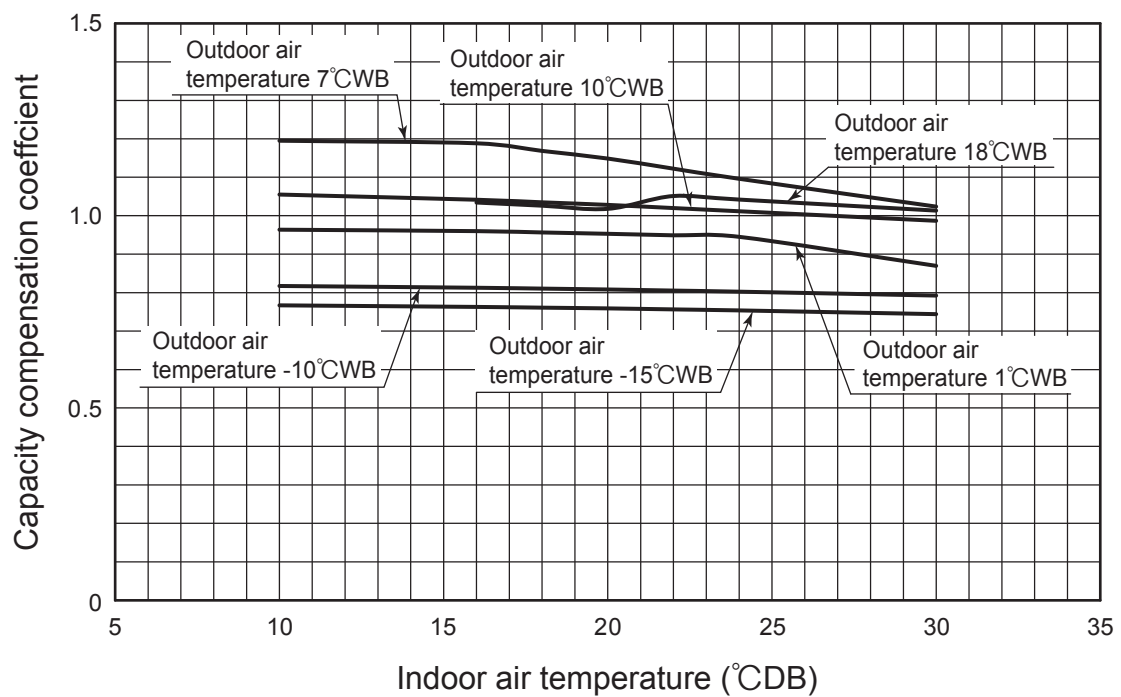


(II) Model FDC90VNP1

① Cooling

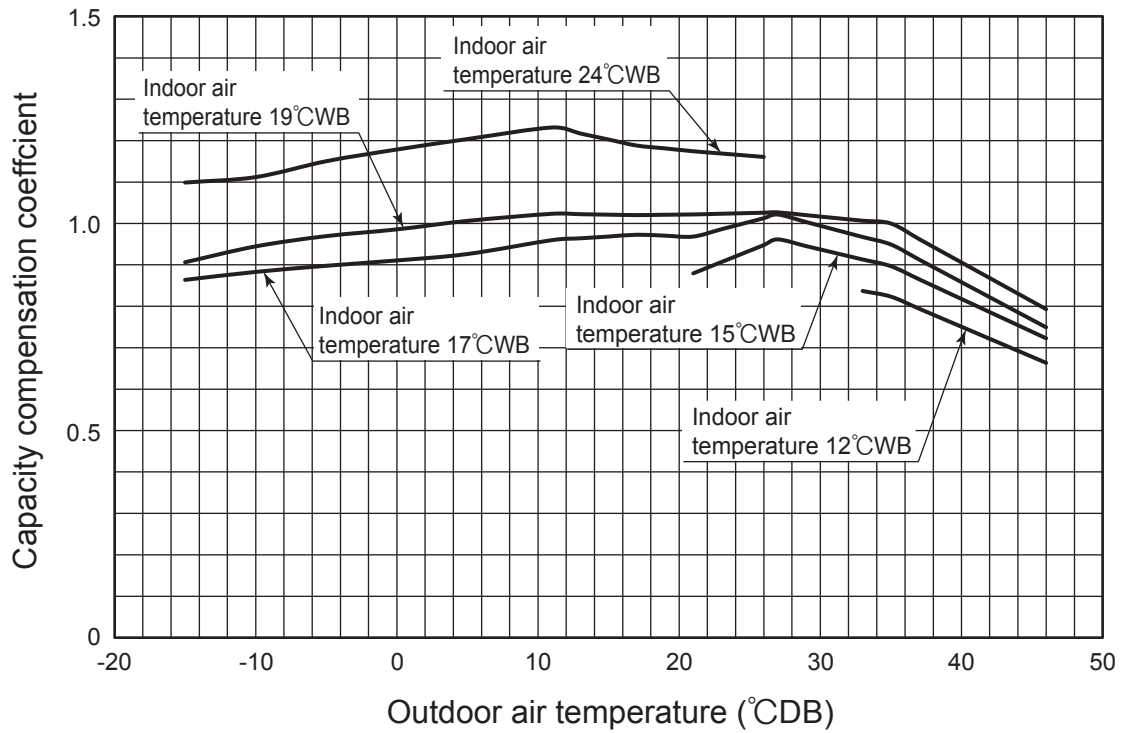

② Heating

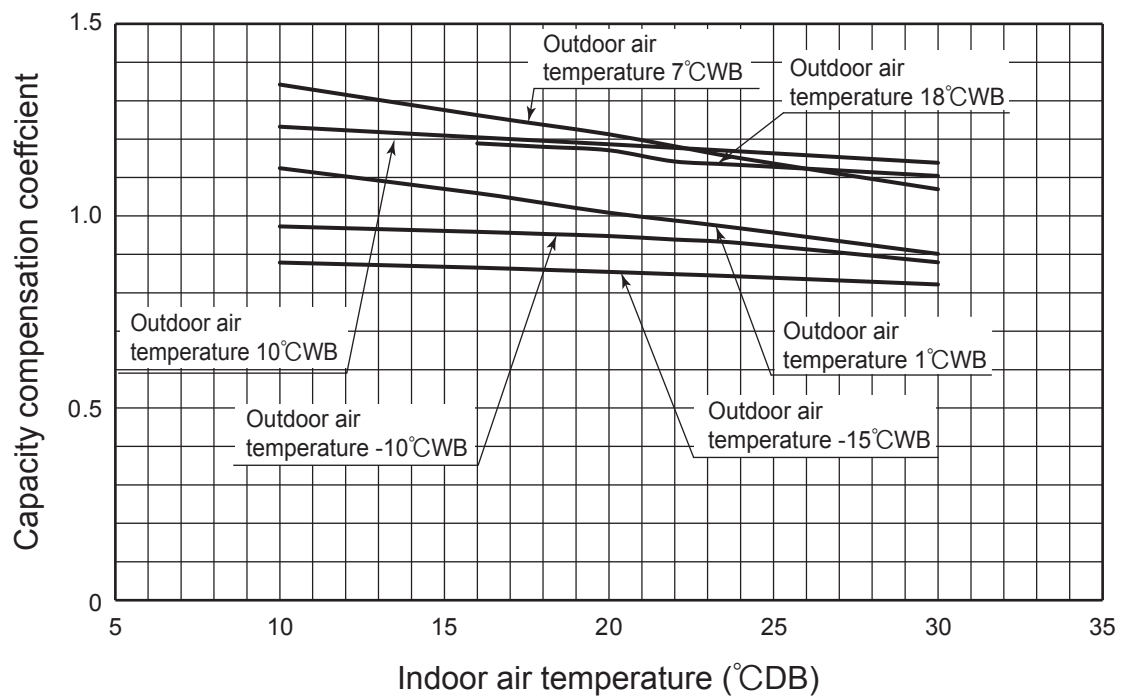

9.2 Correction of cooling and heating capacity in relation to air flow rate control (Fan speed)

Fan speed		P-Hi	Hi	Me	Lo
Coefficient	Cooling	1.00	0.95	0.93	0.90
	Heating	1.00	0.97	0.96	0.94

9.3 Correction of cooling and heating capacity in relation to one way length of refrigerant piping

It is necessary to correct the cooling and heating capacity in relation to the one way equivalent piping length between the indoor and outdoor units.

Equivalent piping length (m)	7.5	10	15	20	25	30
Cooling	1	0.99	0.97	0.96	0.94	0.92
Heating	1	1	1	1	1	1

9.4 Height difference between the indoor unit and outdoor unit

When the outdoor unit is located below indoor units in cooling mode, or when the outdoor unit is located above indoor units in heating mode, the correction coefficient mentioned in the below table should be subtracted from the value in the above table.

Height difference between the indoor unit and outdoor unit in the vertical height difference	5m	10m	15m	20m
Adjustment coefficient	0.99	0.98	0.97	0.96

Piping length limitations

Item	Model	All models
Max. one way piping length		30m
Max. vertical height difference		Outdoor unit is higher 20m Outdoor unit is lower 20m

Note (1) Values in the table indicate the one way piping length between the indoor and outdoor units.

How to obtain the cooling and heating capacity

Example : The net cooling capacity of the model FDT90VNP1VG with the air flow "P-Hi", the piping length of 15m, the outdoor unit located 5m lower than the indoor unit, indoor wet-bulb temperature at 19.0°C and outdoor dry-bulb temperature 35°C is

$$\text{Net cooling capacity} = \frac{9.0}{\text{Net cooling total capacity of FDT90VNP1VG (Outdoor temp. : 35°CDB Indoor temp. : 19°CWB) shown in table 9.1}} \times \frac{1.00}{\text{Air flow : P-Hi shown in table 9.2}} \times \frac{0.97}{\text{Piping length : 15m (Gas pipe size is } \phi 15.88 \text{) shown in table 9.3}} \times \frac{0.99}{\text{Height difference : 5m (Outdoor unit : below) shown in table 9.4}} \approx 8.6 \text{ kW}$$

10. APPLICATION DATA

10.1 Installation of indoor unit

(1) Ceiling cassette-4 way type (FDT)

PJF012D029

This manual is for the installation of the indoor unit.
For electrical wiring work (Indoor unit), refer to page 88. For remote control installation, refer to page 104. For wireless kit installation, refer to page 130. For electrical wiring work (Outdoor unit) and refrigerant pipe work installation for outdoor unit, refer to page 116. For motion sensor kit installation, refer to the installation manual attached to the motion sensor kit.
This unit must always be used with the panel.

SAFETY PRECAUTIONS

- Read the "SAFETY PRECAUTIONS" carefully first of all and then strictly follow it during the installation work in order to protect yourself.
- The precautionary items mentioned below are distinguished into two levels, [WARNING] and [CAUTION].
 [WARNING]: Wrong installation would cause serious consequences such as injuries or death.
 [CAUTION]: Wrong installation might cause serious consequences depending on circumstances.
 Both mentions the important items to protect your health and safety so strictly follow them by any means.
- The meanings of "Marks" used here are as shown on the right:
 Never do it under any circumstances. Always do it according to the instruction.
- After completing the installation, do commissioning to confirm there are no abnormalities, and explain to the customers about "SAFETY PRECAUTIONS", correct operation method and maintenance method (air filter cleaning, operation method and temperature setting method) with user's manual of this unit.
Ask your customers to keep this installation manual together with the user's manual. Also, ask them to hand over the user's manual to the new user when the owner is changed.

⚠ WARNING

- **Installation should be performed by the specialist.**
If you install the unit by yourself, it may lead to serious trouble such as water leakage, electric shock, fire, and injury due to overturn of the unit.
- **Install the system correctly according to these installation manuals.**
Improper installation may cause explosion, injury, water leakage, electric shock, and fire.
- **Check the density referred by the formula (accordance with ISO5149).**
If the density exceeds the limit density, please consult the dealer and installate the ventilation system.
- **Use the genuine accessories and the specified parts for installation.**
If parts unspecified by our company are used it could cause water leakage, electric shock, fire, and injury due to overturn of the unit.
- **Ventilate the working area well in case the refrigerant leaks during installation.**
If the refrigerant contacts the fire, toxic gas is produced.
- **Install the unit in a location that can hold heavy weight.**
Improper installation may cause the unit to fall leading to accidents.
- **Install the unit properly in order to be able to withstand strong winds such as typhoons, and earthquakes.**
Improper installation may cause the unit to fall leading to accidents.
- **Do not mix air in to the cooling cycle on installation or removal of the air-conditioner.**
If air is mixed in, the pressure in the cooling cycle will rise abnormally and may cause explosion and injuries.
- **Be sure to have the electrical wiring work done by qualified electrical installer, and use exclusive circuit.**
Power source with insufficient capacity and improper work can cause electric shock and fire.
- **Use specified wire for electrical wiring, fasten the wiring to the terminal securely, and hold the cable securely in order not to apply unexpected stress on the terminal.**
Loose connections or hold could result in abnormal heat generation or fire.
- **Arrange the electrical wires in the control box properly to prevent them from rising. Fit the lid of the services panel properly.**
Improper fitting may cause abnormal heat and fire.
- **Check for refrigerant gas leakage after installation is completed.**
If the refrigerant gas leaks into the house and comes in contact with a fan heater, a stove, or an oven, toxic gas is produced.
- **Use the specified pipe, flare nut, and tools for R410A.**
Using existing parts (R22) could cause the unit failure and serious accident due to explosion of the cooling cycle.
- **Tighten the flare nut according to the specified method by with torque wrench.**
If the flare nut were tightened with excess torque, it could cause burst and refrigerant leakage after a long period.
- **Do not put the drainage pipe directly into drainage channels where poisonous gases such as sulfide gas can occur.**
Poisonous gases will flow into the room through drainage pipe and seriously affect the user's health and safety. This can also cause the corrosion of the indoor unit and a resultant unit failure or refrigerant leak.
- **Connect the pipes for refrigeration circuit securely in installation work before compressor is operated.**
If the compressor is operated when the service valve is open without connecting the pipe, it could cause explosion and injuries due to abnormal high pressure in the system.
- **Stop the compressor before removing the pipe after shutting the service valve on pump down work.**
If the pipe is removed when the compressor is in operation with the service valve open, air would be mixed in the refrigeration circuit and it could cause explosion and injuries due to abnormal high pressure in the cooling cycle.
- **Only use prescribed option parts. The installation must be carried out by the qualified installer.**
If you install the system by yourself, it can cause serious trouble such as water leaks, electric shocks, fire.
- **Do not repair by yourself. And consult with the dealer about repair.**
Improper repair may cause water leakage, electric shock or fire.
- **Consult the dealer or a specialist about removal of the air-conditioner.**
Improper installation may cause water leakage, electric shock or fire.
- **Turn off the power source during servicing or inspection work.**
If the power is supplied during servicing or inspection work, it could cause electric shock and injury by the operating fan.
- **Do not run the unit when the panel or protection guard are taken off.**
Touching the rotating equipment, hot surface, or high voltage section could cause an injury to be caught in the machine, to get burned, or electric shock.
- **Shut off the power before electrical wiring work.**
It could cause electric shock, unit failure and improper running.

⚠ CAUTION

- **Perform earth wiring surely.**
Do not connect the earth wiring to the gas pipe, water pipe, lightning rod and telephone earth wiring. Improper earth could cause unit failure and electric shock due to a short circuit.
- **Earth leakage breaker must be installed.**
If the earth leakage breaker is not installed, it can cause electric shocks.
- **Use the circuit breaker of correct capacity. Circuit breaker should be the one that disconnect all poles under over current.**
Using the incorrect one could cause the system failure and fire.
- **Do not use any materials other than a fuse of correct capacity where a fuse should be used.**
Connecting the circuit by wire or copper wire could cause unit failure and fire.
- **Do not install the indoor unit near the location where there is possibility of flammable gas leakages.**
If the gas leaks and gathers around the unit, it could cause fire.
- **Do not install and use the unit where corrosive gas (such as sulfuric acid gas etc.) or flammable gas (such as thinner, petroleum etc.) may be generated or accumulated, or volatile flammable substances are handled.**
It could cause the corrosion of heat exchanger, breakage of plastic parts etc. And inflammable gas could cause fire.
- **Secure a space for installation, inspection and maintenance specified in the manual.**
Insufficient space can result in accident such as personal injury due to falling from the installation place.
- **Do not use the indoor unit at the place where water splashes such as laundry.**
Indoor unit is not waterproof. It could cause electric shock and fire.
- **Do not use the indoor unit for a special purpose such as food storage, cooling for precision instrument, preservation of animals, plants, and a work of art.**
It could cause the damage of the items.
- **Do not install nor use the system near equipments which generate electromagnetic wave or high harmonics.**
Equipments like inverter equipment, private power generator, high-frequency medical equipment, or telecommunication equipment might influence the air-conditioner and cause a malfunction and breakdown. Or the air-conditioner might influence medical equipments or telecommunication equipments, and obstruct their medical activity or cause jamming.
- **Do not install the remote control at the direct sunlight.**
It could cause breakdown or deformation of the remote control.
- **Do not install the indoor unit at the place listed below.**
 - Places where flammable gas could leak.
 - Places where carbon fiber, metal powder or any powder is floated.
 - Places where the substances which affect the air conditioner are generated such as sulfide gas, chloride gas, acid, alkali or ammoniac atmospheres.
 - Places exposed to oil mist or steam directly.
 - On vehicles and ships
 - Places where machinery which generates high harmonics is used.
 - Places where cosmetics or special sprays are frequently used.
 - Highly salted area such as beach.
 - Heavy snow area
 - Places where the system is affected by smoke from a chimney.
 - Altitude over 1000m
- **Do not install the indoor unit in the locations listed below (Be sure to install the indoor unit according to the installation manual for each model because each indoor unit has each limitation)**
 - Locations with any obstacles which can prevent inlet and outlet air of the unit
 - Locations where vibration can be amplified due to insufficient strength of structure.
 - Locations where the infrared receiver is exposed to the direct sunlight or the strong light beam. (In case of the infrared specification unit)
 - Locations where an equipment affected by high harmonics is placed. (TV set or radio receiver is placed within 5m)
 - Locations where drainage cannot run off safely.
 It can affect performance or function and etc..
- **Do not put any valuables which will break down by getting wet under the air-conditioner.**
Condensation could drop when the relative humidity is higher than 80% or drain pipe is clogged, and it damages user's belongings.
- **Do not use the base frame for the outdoor unit which is corroded or damaged after a long period of use.**
It could cause the unit falling down and injury.
- **Pay attention not to damage the drain pan by weld sputter when brazing work is done near the unit.**
If sputter entered into the unit during brazing work, it could cause damage (pinhole) of drain pan and leakage of water. To avoid damaging, keep the indoor unit packed or cover the indoor unit.
- **Install the drain pipe to drain the water surely according to the installation manual.**
Improper connection of the drain pipe may cause dropping water into room and damaging user's belongings.
- **Be sure to perform air tightness test by pressurizing with nitrogen gas after completed refrigerant piping work.**
If the density of refrigerant exceeds the limit in the event of refrigerant leakage in the small room, lack of oxygen can occur, which can cause serious accidents.
- **For drain pipe installation, be sure to make descending slope of greater than 1/100, not to make traps, and not to make air-bleeding.**
Check if the drainage is correctly done during commissioning and ensure the space for inspection and maintenance.
- **Ensure the insulation on the pipes for refrigeration circuit so as not to condense water.**
Incomplete insulation could cause condensation and it would wet ceiling, floor, and any other valuables.
- **Do not install the outdoor unit where is likely to be a nest for insects and small animals.**
Insects and small animals could come into the electronic components and cause breakdown and fire. Instruct the user to keep the surroundings clean.
- **Pay extra attention, carrying the unit by hand.**
Carry the unit with 2 people if it is heavier than 20kg. Do not use the plastic straps but the grabbing place, moving the unit by hand. Use protective gloves in order to avoid injury by the aluminum fin.
- **Make sure to dispose of the packaging material.**
Leaving the materials may cause injury as metals like nail and woods are used in the package.
- **Do not operate the system without the air filter.**
It may cause the breakdown of the system due to clogging of the heat exchanger.
- **Do not touch any button with wet hands.**
It could cause electric shock.
- **Do not touch the refrigerant piping with bare hands when in operation.**
The pipe during operation would become very hot or cold according to the operating condition, and it could cause a burn or frostbite.
- **Do not clean up the air-conditioner with water.**
It could cause electric shock.
- **Do not turn off the power source immediately after stopping the operation.**
Be sure to wait for more than 5 minutes. Otherwise it could cause water leakage or breakdown.
- **Do not control the operation with the circuit breaker.**
It could cause fire or water leakage. In addition, the fan may start operation unexpectedly and it may cause injury.

① Before installation

- Install correctly according to the installation manual.
- Confirm the following points:
 - Unit type/Power source specification
 - Pipes/Wires/Small parts
 - Accessory items

Accessory item

For unit hanging		For refrigerant pipe			For drain pipe		
Flat washer (M10)	Level gauge	Pipe cover(big)	Pipe cover (small)	Strap	Pipe cover(big)	Pipe cover(small)	Drain hose
8	1	1	1	4	1	1	1
For unit hanging	For level adjustment	For heat insulation of gas pipe	For heat insulation of liquid tube	For pipe cover fixing	For heat insulation of drain socket	For heat insulation of drain socket	For drain pipe connecting
							For drain hose mounting


② Selection of installation location for the indoor unit

- Select the suitable areas to install the unit under approval of the user.
 - Areas where the indoor unit can deliver hot and cold wind sufficiently. Suggest to the user to use a circulator if the ceiling height is over 3m to avoid warm air being accumulated on the ceiling.
 - Areas where there is enough space to install and service.
 - Areas where it can be drained properly. Areas where drain pipe descending slope can be taken.
 - Areas where there is no obstruction of airflow on both air return grille and air supply port.
 - Areas where fire alarm will not be accidentally activated by the air-conditioner.
 - Areas where the supply air does not short-circuit.
 - Areas where it is not influenced by draft air.
 - Areas not exposed to direct sunlight.
 - Areas where dew point is lower than around 28°C and relative humidity is lower than 80%.
 (This indoor unit is tested under the condition of JIS (Japan Industrial Standard) high humidity condition and confirmed there is no problem. However, there is some risk of condensation drop if the air-conditioner is operated under the severer condition than mentioned above.
 If there is a possibility to use it under such a condition, attach additional insulation of 10 to 20mm thick for entire surface of indoor unit, refrigeration pipe and drain pipe.)
 - Areas where TV and radio stays away more than 1m. (It could cause jamming and noise.)
 - Areas where any items which will be damaged by getting wet are not placed such as food, table wares, server, or medical equipment under the unit.
 - Areas where there is no influence by the heat which cookware generates.
 - Areas where not exposed to oil mist, powder and/or steam directly such as above fryer.
 - Areas where lighting device such as fluorescent light or incandescent light doesn't affect the operation.
 (A beam from lighting device sometimes affects the infrared receiver for the wireless remote control and the air-conditioner might not work properly.)

- Check if the place where the air-conditioner is installed can hold the weight of the unit. If it is not able to hold, reinforce the structure with boards and beams strong enough to hold it. If the strength is not enough, it could cause injury due to unit falling.
- If there are 2 units of wireless type, keep them away for more than 6m to avoid malfunction due to cross communication.
- When plural indoor units are installed nearby, keep them away for more than 4 to 5m.

Space for installation and service

- When it is not possible to keep enough space between indoor unit and wall or between indoor units, close the air supply port where it is not possible to keep space and confirm there is no short circuit of air flow.
- Install the indoor unit at a height of more than 2.5m above the floor.

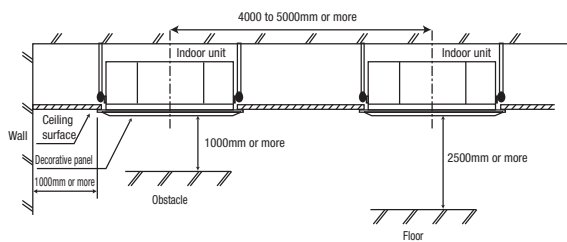

Set blow-out pattern

- Select the most proper number of blow-out air supply port direction from 4 way, 3 way or 2 way according to the shape of the room and installation position. (1 way is not available.)
- If it is necessary to change the number of air supply port, prepare the covering materials. (sold as accessory)
- Instruct the user not to use low fan speed when 2way or 3way air supply is used.
- Do not use 2way air supply port under high temperature and humidity environment. (Otherwise it could cause condensation and leakage of water.)
- It is possible to set the air flow direction port by port independently. Refer to the user's manual for details.

Where there are pipe joints on the way of embedded piping, provide adequate openings for inspection of the joints.

③ Preparation before installation

- If suspension bolt becomes longer, do reinforcement of earthquake resistant.
 - For grid ceiling
 When suspension bolt length is over 500mm, or the gap between the ceiling and roof is over 700mm, apply earthquake resistant brace to the bolt.
 - In case the unit is hanged directly from the slab and is installed on the ceiling plane which has enough strength.
 When suspension bolt length is over 1000mm, apply the earthquake resistant brace to the bolt.
- Prepare four (4) sets of suspension bolt, nut and spring washer (M10 or M8) on site.


Ceiling opening, Suspension bolts pitch, Pipe position

※It is possible the suspension bolts pitch to adjust according to the this table.

Type	Mark	P1	P2
1		770	725~770
2		770~800	725

Series	Type	a	d	f	g	h
Single Split (PAC) series	40 to 71 type	236	37	105	88	67
	100 to 140 type	298	99	167	140	129
VRF (KX) series	28 to 71 type	236	37	105	88	67
	90 to 160 type	298	99	167	140	129


Symbol	
A	Gas piping
B	Liquid piping
C	Drain piping
D	Hole for wiring
F	Suspension bolts
G	Outside air opening for ducting
H1	Air outlet opening for ducting
H2	Air outlet opening for ducting

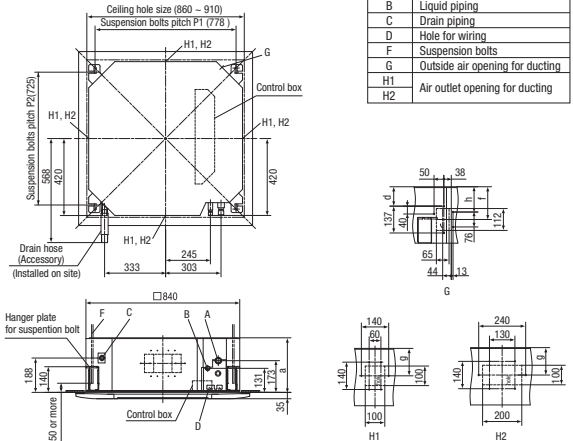

④ Installation of indoor unit

Work procedure


- Set the suspension bolt length to about 50 mm from the ceiling.
- Temporarily locate the lower nuts of the suspension bolts (4 places) at a position approximately 150 mm from the ceiling.
- Temporarily locate the upper nuts of the suspension bolts (4 places) at positions sufficiently distance from the lower nuts so that they do not interfere with the suspension of the indoor unit and with its height adjustment.
- Set the upper nuts of the suspension bolts and upper washers (4 places) at positions sufficiently distance from the lower nuts. Then, push and insert the temporary fixing carton of washers (*1) onto suspension bolts. Make sure that the upper washers do not slide down.
- Suspend the indoor unit.
- After suspending the indoor unit, mount the level gauge (*2) to the air outlet of the indoor unit, and adjust the suspension height of the indoor unit. Loosen the upper nuts (4 places), and adjust the suspension height using the lower nuts (4 places). Confirm there is no slack between the lower nuts and flat washers of the indoor unit hanger plate (4 places).
- Remove the temporary fixing carton of washers (from all 4 places).
- Make sure that the indoor unit is installed horizontally. Confirm the levelness of the indoor unit using a level gauge or transparent hose filled with water. (Keep the height difference at both ends of the indoor unit within 3 mm.)
- Tighten the upper nuts of the suspension bolts (4 places).

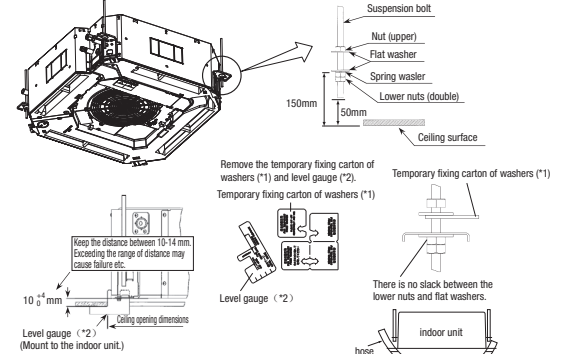

4 Installation of indoor unit (continued)

Protection of the indoor unit

- If it is not possible to install the panel for a while or if attaching the ceiling board after installing the indoor unit, protect the indoor unit by using upper carton.



Caution

- Do not adjust the unit height by adjusting the upper nuts. Doing so will cause unexpected stress on the indoor unit and cause the unit to become deformed, prevent the panel from being installed, and be generated fan interference noise.
- Make sure that the indoor unit is installed horizontally and set the appropriate gap between the underside of the unit and the ceiling plane. Improper installation may cause air leakage, dew condensation, water leakage and noise.
- Even after the panel has been installed, the unit height can still be finely adjusted. Refer to the panel installation manual for details.
- Make sure there is no gap between the panel and the ceiling surface, and between the panel and the indoor unit. Any gap may cause air and/or water to leak, or condensation to form.

5 Refrigerant pipe

Caution

- Be sure to use new pipes for the refrigerant pipes. Use the flare nut attached to the product or a nut compatible with JIS B 8607, Class 2.
Regarding whether existing pipes can be reused or not, and the washing method, refer to the instruction manual of the outdoor unit, catalogue or technical data.
- 1) In case of reuse: Do not use old flare nut, but use the nut attached to the unit or compatible with JIS B 8607, Class 2.
- 2) In case of reuse: Flare the end of pipe replaced partially for R410A.

Pipe dia. d mm	Min. pipe wall thickness mm	Protruding dimension for flares, mm		Flare O.D. D mm	Flare nut tightening torque N·m
		For R410A	Conventional tool		
6.35	0.8	0 - 0.5	0.7 - 1.3	8.9 - 9.1	14 - 18
9.52	0.8			12.8 - 13.2	34 - 42
12.7	0.8			16.2 - 16.6	49 - 61
15.88	1			19.3 - 19.7	68 - 82
19.05	1.2			23.6 - 24.0	100 - 120

- Use phosphorus deoxidized copper alloy seamless pipe (C1220T specified in JIS H3300) for refrigerant pipe installation.
In addition, make sure there is no damage both inside and outside of the pipe, and no harmful substances such as sulfur, oxide, dust or a contaminant stuck on the pipes.
- Do not use any refrigerant other than the designated refrigerant.
Using other refrigerant except the designated refrigerant, may degrade inside refrigeration oil. And air getting into refrigeration circuit may cause over-pressure and resultant it may result in bursting, etc.
- Store the copper pipes indoors and seal the both end of them until they are brazed in order to avoid any dust, dirt or water getting into pipe. Otherwise it will cause degradation of refrigeration oil and compressor breakdown, etc.
- Use special tools for R410A refrigerant.


Work procedure

- Remove the flare nut and blind flanges on the pipe of the indoor unit.
※ Make sure to loosen the flare nut with holding the nut on pipe side with a spanner and giving torque to the nut with another spanner in order to avoid unexpected stress to the copper pipe, and then remove them. (Gas may come out at this time, but it is not abnormal.)
● Pay attention whether the flare nut pops out. (as the indoor unit is sometimes pressured.)
- Make a flare on liquid pipe and gas pipe, and connect the refrigeration pipes on the indoor unit.
※ Bend radius of pipe must be 4D or larger. Once a pipe is bent, do not readjust the bending.
Do not twist a pipe or collapse to 2/3D or smaller.
※ Do a flare connection as follows:
● Make sure to loosen the flare nut with holding the nut on pipe side with a spanner and giving torque to the nut with another spanner in order to avoid unexpected stress to the copper pipe, and then remove them.
● When fastening the flare nut, align the refrigeration pipe with the center of flare nut, screw the nut for 3-4 times by hand and then tighten it by spanner with the specified torque mentioned in the table above. Make sure to hold the pipe on the indoor unit securely by a spanner when tightening the nut in order to avoid unexpected stress on the copper pipe.
- Cover the flare connection part of the indoor unit with attached insulation material after a gas leakage inspection, and tighten both ends with attached straps.
● Make sure to insulate both gas pipes and liquid pipes completely.
※ Incomplete insulation may cause dew condensation or water dropping.
● Use heat-resistant (120 °C or more) insulations on the gas side pipes.
● In case of using at high humidity condition, reinforce insulation of refrigerant pipes.
Surface of insulation may cause dew condition or water dropping, if insulations are not reinforced.
- Refrigerant is charged in the outdoor unit.
As for the additional refrigerant charge for the indoor unit and piping, refer to the installation manual attached to the outdoor unit.

5 Refrigerant pipe (continued)

Caution:

Refrigerating machine oil should not be applied to the threads of union or external surface of flare. It is because, even if the same tightening torque is applied, the oil is likely to decrease the side friction force on the threads and increase, in turn, the axial component force so that it could crack the flare by the stress corrosion.
Refrigerating machine oil may be applied to the internal surface of flare only.

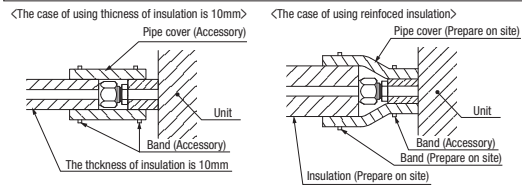


6 Drain pipe

Caution

- Install the drain pipe according to the installation manual in order to drain properly.
Imperfection in draining may cause flood indoors and wetting the household goods, etc.
- Do not put the drain pipe directly into the ditch where toxic gas such as sulfur, the other harmful and inflammable gas is generated. Toxic gas would flow into the room and it would cause serious damage to user's health and safety (some poisoning or deficiency of oxygen). In addition, it may cause corrosion of heat exchanger and bad smell.
- Connect the pipe securely to avoid water leakage from the joint.
- Insulate the pipe properly to avoid condensation drop.
- Check if the water can flow out properly from both the drain outlet on the indoor unit and the end of the drain pipe after installation.
- Make sure to make descending slope of greater than 1/100 and do not make up-down bend and/or trap in the midway. In addition, do not put air vent on the drain pipe. Check if water is drained out properly from the pipe during commissioning. Also, keep sufficient space for inspection and maintenance.


Work procedure

- Make sure that the drain hose (the soft PVC side) is inserted into the end of the step part of the drain socket.
Fix the hose clamp so that its bolt is located on the outside of the indoor unit, and the bolt are fastened in a vertical orientation.
● Do not apply adhesives on this end.
- Position the hose clamp so that it touches the insulation of the drain hose, and then tighten the bolt.
- Turn the bolt several times until it is securely tightened, but do not tighten it excessively.

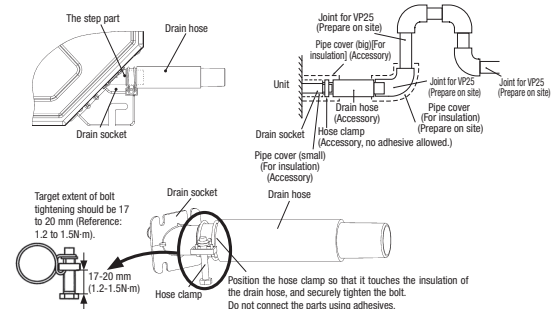


- Prepare a joint for connecting VP25 pipe, adhere and connect the joint to the drain hose (the rigid PVC side), and adhere and connect VP25 pipe (prepare on site).
※As for drain pipe, apply VP25 made of rigid PVC which is on the market.

- Make sure that the adhesive will not get into the supplied drain hose.
It may cause the flexible part broken after the adhesive is dried up and gets rigid.
- The flexible drain hose is intended to absorb a small difference at installation of the unit or drain pipes. Intentional bending, expanding may cause the flexible hose broken and water leakage.
- As for drain pipe, apply VP25 (OD32).
If apply PVC25 (OD25), connect the expanded connector to the drain hose, with adhesive. (Multi unit only)

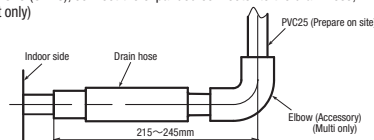


- Make sure to make descending slope of greater than 1/100 and do not make up-down bend and/or trap in the midway.
● Pay attention not to give stress on the pipe on the indoor unit side, and support and fix the pipe as close place to the unit as possible when connecting the drain pipe.
● Do not set up air vent.



⑥ Drain pipe (continued)

- When sharing a drain pipe for more than 1 unit, lay the main pipe 100mm below the drain outlet of the unit. In addition, select VP30 or bigger size for main drain pipe.




6. Insulate the drain pipe.

- Be sure to insulate the drain socket and rigid PVC pipe installed indoors otherwise it may cause dew condensation and water leakage.
- ※ After drainage test implementation, cover the drain socket part with pipe cover (small size), then use the pipe cover (big size) to cover the pipe cover (small size), clamps and part of the drain hose, and fix and wrap it with tapes to wrap and make joint part gapless.

Drain up


- The position for drain pipe outlet can be raised up to 850mm above the ceiling. Use elbows for installation to avoid obstacles inside ceiling. If the horizontal drain pipe is too long before vertical pipe, the backflow of water will increase when the unit is stopped, and it may cause overflow of water from the drain pan on the indoor unit. In order to avoid overflow, keep the horizontal pipe length and offset of the pipe within the limit shown in the figure below.

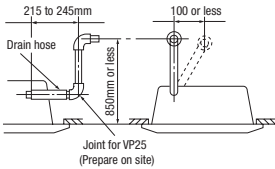

Drain test

- After installing the drain pipe, make sure that drain system works correctly and that no water leaks from the joint and drain pan. Check whether the motor sound of the drain pump is normal.
 - Conduct a drain test when installing, even during the heating season.
 - In the case of new buildings, be sure to complete the test before fixing the ceiling.
1. Pour about 1,000 cc of test water into the drain pan of the indoor unit. Exercise care not to allow electrical equipment such as the drain pump and other components to become wet while filling water. Pour test water through the pouring port of the pipe lid using a feed water pump or a similar device, or through the refrigerant pipe joint.

- In case of pouring water from the air outlet
- In case of pouring water from the pouring port of the pipe lid

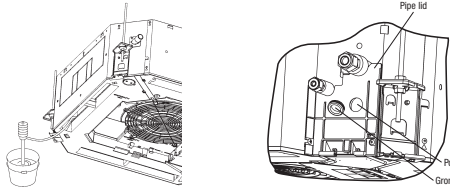

2. Make sure that water drains out completely and that no water leaks from any joints of the drain pipe during the test. Test to confirm that the water drains out correctly while listening to the drain pump motor operating sound. At the drain socket (transparent), it is possible to check whether the water drains out correctly.
3. Unplug the rubber plug on the indoor unit so that the remaining water drains from the drain pan after the draining test. After checking the water drainage, fix the drain plug correctly. Installation work for the drain pipe must be performed for the entire drain pipe up to the indoor unit. If the pipe lid has been removed in order to pour water, mount the pipe lid again.

Drain pump operation

- In case electrical wiring work completed
Drain pump can be operated by the wired remote control. For the operation method, refer to [Operation for drain pump] in the installation manual for wiring work.
- In case electrical wiring work not completed
Drain pump will run continuously when the dip switch "SW7-1" on the indoor unit PCB is turned ON, the connector CnB is disconnected, and then the power source (230VAC on the terminal block ① and ②) is turned ON. Make sure to turn OFF "SW7-1" and reconnect the connector CnB after the test.


⑦ Wiring-out position and wiring connection

- Electrical installation work must be performed according to the installation manual by an electrical installation service provider qualified by a power provider of the country, and be executed according to the technical standards and other regulations applicable to electrical installation in the country.
- Be sure to use an exclusive circuit.
- Use specified cord, fasten the wiring to the terminal securely, and hold the cord securely in order not to apply unexpected stress on the terminal.
- Do not put both power source line and signal line on the same route. It may cause miscommunication and malfunction.
- Be sure to do D type earth work.
- For the details of electrical wiring work, see attached instruction manual for electrical wiring work.


1. Loosen the 2 screws of the lid of the control box, and slide the lid in the direction of the arrow shown in the figure. It will then be possible to open the lid.
2. Unhook the lid from the control box, and remove the lid.
3. Remove the 2 screws from the wiring cover, and remove the wiring cover.
4. Hold each wire inside the unit, and securely fasten them to the terminal block.
5. Fix the wiring using clamps.
6. Install the wiring cover and the lid of the control box.

Main fuse specification

Specification	Part No.
T3.15A L250V	SSA564A149AF

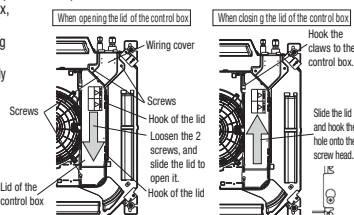

⑦ Wiring-out position and wiring connection (continued)

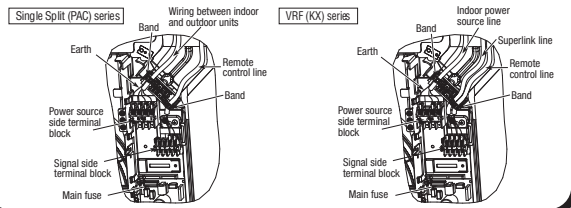

⑧ Panel installation

- Install the panel on the indoor unit after electrical wiring work.
- Refer to the attached manual for panel installation for details.

⑨ Check list after installation


- Check the following items after all installation work completed.

Check if:	Expected trouble	Check
The indoor and outdoor units are fixed securely?	Falling, vibration, noise	
Inspection for leakage is done?	Insufficient capacity	
Insulation work is properly done?	Water leakage	
Water is drained properly?	Water leakage	
Power source voltage is same as mentioned in the model name plate?	PCB burnt out, not working at all	
There is mis-wiring or mis-connection of piping?	PCB burnt out, not working at all	
Earth wiring is connected properly?	Electric shock	
Cable size comply with specified size?	PCB burnt out, not working at all	
Any obstacle blocks air flow on air inlet and outlet?	Insufficient capacity	

⑩ How to check the dirt of drain pan and cleaning the inlet of the drain pump. (Maintenance)


The method of checking the dirt of drain pan

- It is possible to check dirt on the drain pan and drain pump inlet without removing the panel.
1. Open the inlet grille and remove the corner lid on the drain pan side.
 2. Remove the drain cap cover (1 screw) from the panel corner.
 3. Check the dirt on the drain pan from the drain cap, and check the drain pump inlet. If the drain pan is very dirty, remove the drain pan and clean it.
 4. After checking, refix the drain cap cover securely. If the cover is not refixed correctly, it may cause condensation to form and/or water to leak.




Cleaning of drain pump inlet

- It is possible to clean the drain pump inlet and surrounding area by removing the drain cap only; it is not necessary to remove the panel and drain pan.
 - Before removing the drain cap, remove the rubber plug and drain water from the drain pan.
1. Remove the drain cap cover as described above.
 2. Insert the nose of the pliers into the concave portions (2 places) of the drain cap, and rotate the pliers about 1 turn in the CCW direction. The drain cap is removed.
 3. When cleaning the drain pump inlet, use a soft plastic tool. If a metallic tool is used, the drain cap mounting portion may be scratched and water may leak.
 4. Before mounting the drain cap, rinse it and **remove any foreign material from the inside of the cap**. If the drain cap is installed with foreign material inside it, it may cause water to leak.
 5. Insert the nose of the pliers into the concave portions of the drain cap and rotate the pliers to install the drain cap. Rotate the drain cap about 1 turn in the CW direction until it stops rotating. If the drain cap is not rotated for 1 or more turns, the cap will not have been installed correctly. Remove the drain cap, and then install it again correctly.
 6. After tightening the drain cap, make sure the triangle (△) mark of the drain cap comes close to the triangle mark on the panel. If these triangle marks are not close to each other, tighten the drain cap further.
 7. Refix the drain cap cover and rubber plug securely. If the cover is not refixed correctly, it may cause condensation to form and/or water to leak.

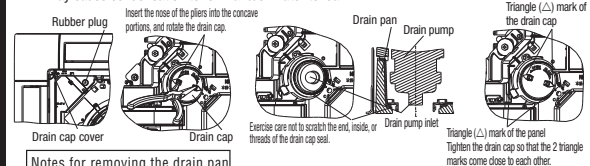

Notes for removing the drain pan

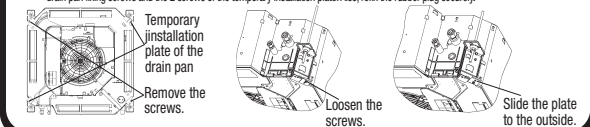

- Before removing the drain pan, drain water from the drain pan. Remove the rubber plug and drain water.
- The drain pan is installed by the temporary installation plate. Remove the 2 drain pan fixing screws, and loosen the 2 screws of the temporary installation plate.
- Slide the temporary installation plate to the outside of the drain pan. And then, it is possible to remove the drain pan.
- When reinstalling the drain pan, slide the temporary installation plate to the inside and temporarily fix the drain pan. Then, tighten the 2 drain pan fixing screws and the 2 screws of the temporary installation plate. Also, refix the rubber plug securely.



• Panel installation

Read this manual together with the indoor unit's installation manual.

⚠ WARNING

- **Fasten the wiring to the terminal securely and hold the cable securely so as not to apply unexpected stress on the terminal. Loose connection or hold will cause abnormal heat generation or fire.** 
- **Make sure the power source is turned off when electric wiring work. Otherwise, electric shock, malfunction and improper running may occur.** 



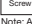
Function

The Anti draft panel has the anti draft mechanism. If the Anti draft panel is installed and the anti draft function is set, the anti draft function will be operated and reduce the draft feeling. (Refer to **⑥ Panel setting** for details.)


- Standard panel : without the anti draft mechanism
- Anti draft panel : with the anti draft mechanism

① Before installation

- Follow installation manual carefully, and install the panel properly.
- Check the following items.
- Accessories

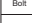Accessories		
	4 pieces	For panel installation
	4 pieces	For avoiding the corner panel from falling
	4 pieces	For fixing the corner panel

Note: Accessories are laid in the position removing the corner lid.

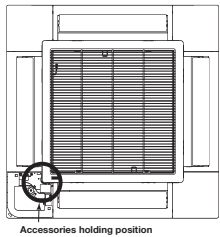


② Checking the indoor unit installation position

- Read this manual together with the air-conditioner installation manual carefully.
- Check if the opening size for the indoor unit is correct with the level gauge supplied in the indoor unit.
- Check if the gap between the plane and the indoor unit is correct by inserting the level gauge into the air outlet port of the indoor unit. (See below drawing)
- Adjust the installation elevation if necessary.
- Remove the level gauge before installing the panel.

Caution


If there is a height difference beyond the design limit between the installation level of the indoor unit and the panel, the panel may be subject to excessive stress during installation and it may cause distortion and damage.

The installation level of the indoor unit can be adjusted finely from the opening provided on the corner, even after panel is installed. (Refer to **④ Installing the panel** for details.)

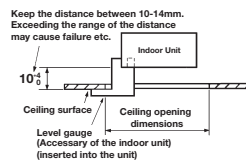


③ Removing the inlet grille

1. Hold the stoppers on the inlet grille (2 places) toward OPEN direction, open the inlet grille.
2. Remove the hooks of the inlet grille from the panel while it is in the open position.



④ Removing the corner lid

- Pull the corner lid toward the direction indicated by the arrow and remove it. (Same way for all 4 corner lids)




⑤ Orientation of the panel installation

- Take note that there is an orientation to install the panel.
- Install the panel with the orientation shown on the right.
 - Align the "PIPE SIDE" mark (on the panel) with the refrigerant pipes on the indoor unit.
 - Align the "DRAIN" mark (on the panel) with the drain pipe on the indoor unit.



CAUTION

In case the orientation of the panel is not correct, it will lead to air leakage and also it is not possible to connect the flap motor wiring.

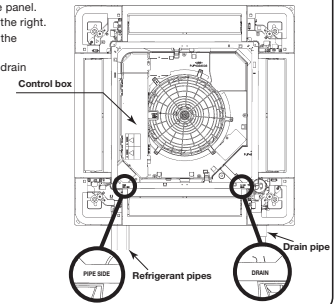

⑥ Installing the panel

1. Temporary hanging
 - Lift up the hanger (2 places) on the panel for temporary support.
 - Hang the panel on the hook on the indoor unit.

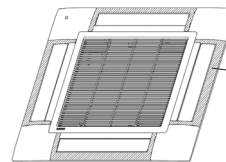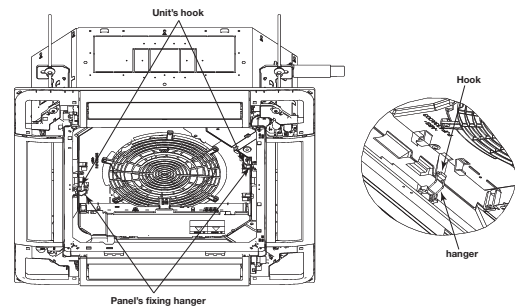


Caution

The parts (shaded area), of the anti draft mechanism around the air outlet, are separate parts. Handle the panel with care. Especially, the shaded area of the Anti draft panel move. Note that they may break if they are moved forcibly by hand.


2. Fix the panel on the indoor unit
 - Fasten the panel on the indoor unit with the 4 bolts supplied with the panel.

Caution

- Improperly tightened fixing bolts cause the problems listed below, so make sure that bolts are securely tightened.
- If there is a gap between the ceiling and the panel even after the fixing bolts are tightened, adjust the installation level of the indoor unit again.



- It is possible to adjust the installation height of the indoor unit with the panel installed as long as there is no influence on the drain pipe inclination and/or the indoor unit levelness.

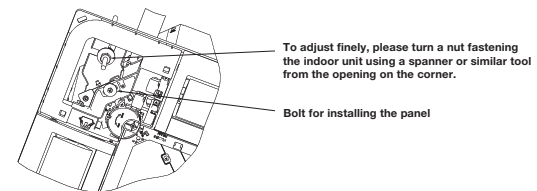


Caution

Do not give any stress on the panel when adjusting the height of the indoor unit to avoid unexpected distortion. It may cause the distortion of panel or failing to close the inlet grille, and the parts of the anti draft mechanism.

⑦ Electrical wiring


The wiring work varies depending on the panel type. Select the wiring work appropriate for the panel type. The connection positions of the indoor unit are as shown below irrespective of the panel type.

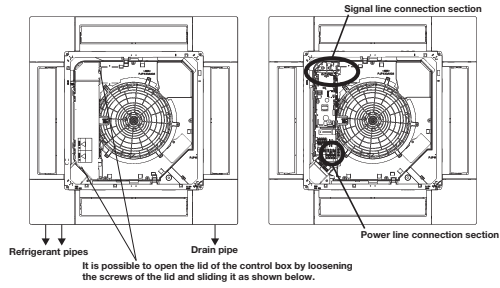

<For the Standard panel>

1. Loosen 2 screws on the control box lid of the indoor unit, and remove the lid by sliding it.
2. Pass the flap motor wiring (20-wire) through the hook of the control box, and connect to CnJ1 (20P, white).
3. Fix the control box lid of the indoor unit, and tighten 2 screws.


For the Standard panel
Signal line connection section

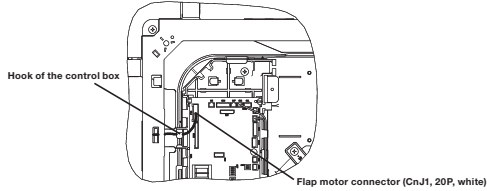

<For the Anti draft panel>


1. Loosen 2 screws on the control box lid of the indoor unit, and remove the lid by sliding it.
2. Pass the flap motor cable (20-wire) through the hook of the control box, and connect to CnJ1 (20P, white).
3. Pass the anti draft motor cable (20-wire) through the hook of the control box, and connect to CnJ2 (20P, white).
4. Fix the control box lid of the indoor unit, and tighten the 2 screws.

For the Anti draft panel
Signal line connection section

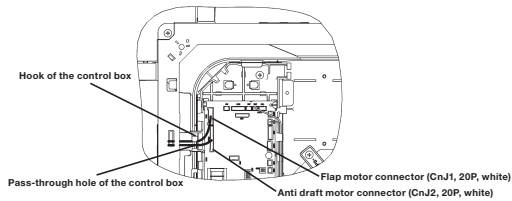

⑧ Installing a corner lid

1. To avoid unexpected falling of the corner lid, put the strap onto the corner lid's pin with turning the strap up.
2. Then hang the strap of a corner lid onto the panel's pin.
3. First insert the part "a" of a corner lid into the part "A" of the panel, and then engage 2 hooks.
4. Fix with screw.

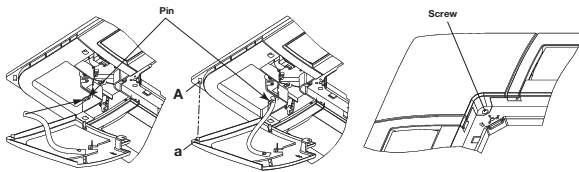


⑨ Installing the inlet grille

To attach the inlet grille, follow the procedure described in ⑧ **Removing the inlet grille** in the reverse order.

1. Hang the hooks of the inlet grille in the hole of the panel. (The hooks of the grille can be hanged in 4 side of the panel as following.)
2. After the grille is hanged, close the grille while the stoppers(2 places) on the grille are kept pressed to "OPEN" direction. When the grille comes to the original position, release the stoppers to hold the grille. Make sure to hear the sound of "CLICK" in both stoppers.

<Installation>

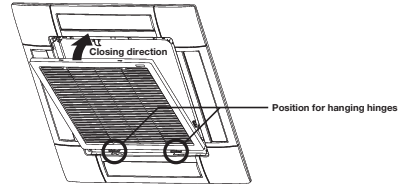

Caution

- Installing the inlet grille from the hinge side.
- Be careful in the inlet grille installing, unstable installing may cause grille falling.
- Repair or replace the distorted, broken stopper at once, or the grille falling may occur.

⑩ Panel setting

<Flap swing range setting (Individual flap control setting)>

It is possible to change the swing range of the flap by the wired remote control. Once the upper and lower limit positions are set, the flap will swing within the set range. It is also possible to set the different range to each flap.

<Anti draft setting>

The anti draft function will not be operated if the anti draft panel is installed and its wirings are only connected. To operate the anti draft function, enable the anti draft setting by using the wired or wireless remote control.

Note: It is not possible to set by the following remote control models or older.

- Wired: RC-EX1A, RC-E5, RCH-E3
- Wireless: RCN-E1R

Once you have enabled the settings in this mode, the anti draft function is operated when the air-conditioner is started, and the parts of the anti draft mechanism are always open when the air-conditioner is operating. When the air-conditioner is stopped, they are closed. It is possible to enable or disabled the anti draft function for each air outlet.

For the setting details, refer to the user's manual supplied with the remote control.

OUTDOOR AIR (OA) INTAKE FOR FDT



If it is required to intake OA through FDT unit, make sure to check following points carefully in order to conform to the requirement of customer.

If the OA intake volume through FDT unit is not satisfied with the required ventilation air volume, consider to install an independent ventilation system.

- 1) Be sure to calculate cooling/heating load considering the ventilation heat load and to decide the air-conditioning system.
- 2) Be sure the OA intake volume to FDT unit should not exceed 20% of the supply air (SA) volume of FDT unit and it should be less than $2\text{m}^3/\text{min}$.
- 3) Be sure to decide the OA intake volume considering the mixed air temperature will be within the usage temperature range of FDT unit.

Especially in following case, please consider to intake OA after processing OA or reducing the OA intake volume.

- 4) Be sure to equip a suitable filter for OA intaken in order to protect the dust.
(Because OA does not pass through the filter equipped on FDT unit)
- 5) Be sure to insulate OA duct.
(If not, it may have dew condensation.)
- 6) Be sure to interlock the booster fan for OA with the fan of FDT unit by using CnT connector.
(If not, the dust trapped on the filter of FDT unit may be blown out to the room by the OA being intaken during the fan of FDT unit stopping)
- 7) Be sure to select a suitable booster fan for OA considering the pressure loss in the OA duct and the pressure loss at the inlet port of FDT with following diagram.
(Please take into consideration the noise level as well)

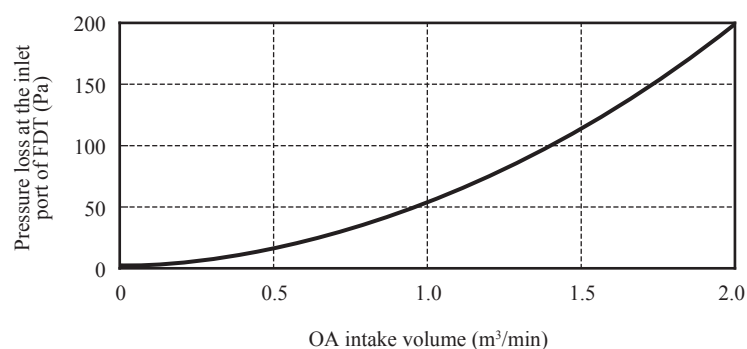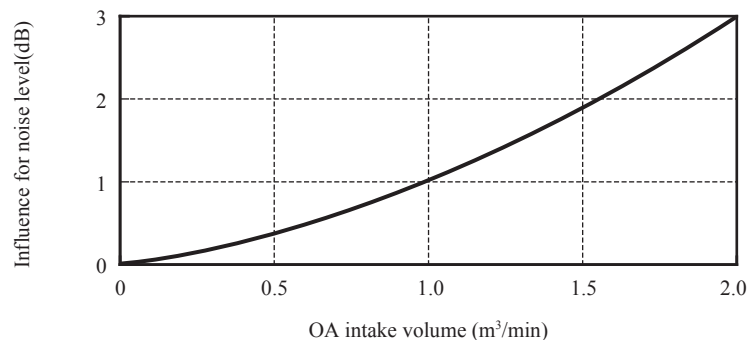

<Selection of booster fan>

Booster fan should have a static pressure calculated with following formula

Static pressure of booster fan

= the pressure loss at the inlet port of FDT (from above diagram)

+ Pressure loss in the OA duct (In case of ϕ 100 duct, 5Pa/m is required)

Select the booster fan from the fan characteristic diagram

(2) Duct connected-High static pressure type (FDU)






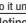
(a) Indoor unit

- This manual is for installation of an indoor unit and an outdoor air processing unit (FDU-F).
- This manual is for the installation of an indoor unit.
- For electrical wiring work (Indoor), refer to page 92. For remote control installation, refer to page 104. For wireless kit installation, refer to page 138. For electrical wiring work (Outdoor) and refrigerant pipe work installation for outdoor unit, refer to page 116.







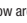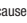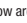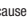
















The case of FDU-F

- The total connection capacity of the other air-conditioner units and the outdoor air processing units must be from 50% to 100% (the total includes the outdoor air processing unit). The connection capacity of the outdoor air processing unit must not exceed 30% of the capacity of the outdoor unit.
- Single outdoor air processing unit can be used alone. The connection capacity of the outdoor air processing unit must be from 50% to 100% of the total capacity of the outdoor unit. Maximum number of outdoor air processing units that can be connected to the outdoor unit is 2 units.
- Capacities of the suction air processing units can be calculated with the following formulas.
FDU850FKXEZ1 = 90, FDU1100FKXEZ1 = 140































SAFETY PRECAUTIONS

- Read the "SAFETY PRECAUTIONS" carefully first of all and then strictly follow it during the installation work in order to protect yourself.
- The precautionary items mentioned below are distinguished into two levels,  **WARNING** and  **CAUTION**.
 **WARNING**: Wrong installation would cause serious consequences such as injuries or death.
 **CAUTION**: Wrong installation might cause serious consequences depending on circumstances. Both mentions the important items to protect your health and safety so strictly follow them by any means.
- The meanings of "Marks" used here are as shown on the right:
 Never do it under any circumstances.  Always do it according to the instruction.
- After completing the installation, do commissioning to confirm there are no abnormalities, and explain to the customers about "SAFETY PRECAUTIONS", correct operation method and maintenance method (air filter cleaning, operation method and temperature setting method) with user's manual of this unit. Ask your customers to keep this installation manual together with the user's manual. Also, ask them to hand over the user's manual to the new user when the owner is changed.

WARNING

- **Installation should be performed by the specialist.**
If you install the unit by yourself, it may lead to serious trouble such as water leakage, electric shock, fire, and injury due to overturn of the unit. 
- **Install the system correctly according to these installation manuals.**
Improper installation may cause explosion, injury, water leakage, electric shock, fire, and injury due to overturn of the unit. 
- **Check the density referred by the formula (accordance with ISO5149).**
If the density exceeds the limit density, please consult the dealer and install the ventilation system. 
- **Use the genuine accessories and the specified parts for installation.**
If parts unspecified by our company are used it could cause water leakage, electric shock, fire, and injury due to overturn of the unit. 
- **Ventilate the working area well in case the refrigerant leaks during installation.**
If the refrigerant contacts the fire, toxic gas is produced. 
- **Install the unit in a location that can hold heavy weight.**
Improper installation may cause the unit to fall leading to accidents. 
- **Install the unit properly in order to be able to withstand strong winds such as typhoons, and earthquakes.**
Improper installation may cause the unit to fall leading to accidents. 
- **Do not mix air in to the cooling cycle on installation or removal of the air-conditioner.**
If air is mixed in, the pressure in the cooling cycle will rise abnormally and may cause explosion and injuries. 
- **Be sure to have the electrical wiring work done by qualified electrical installer, and use exclusive circuit.**
Power source with insufficient capacity and improper work can cause electric shock and fire. 
- **Use specified wire for electrical wiring, fasten the wiring to the terminal securely, and hold the cable securely in order not to apply unexpected stress on the terminal.**
Loose connections or hold could result in abnormal heat generation or fire. 
- **Arrange the electrical wires in the control box properly to prevent them from rising. Fit the lid of the services panel properly.**
Improper fitting may cause abnormal heat and fire. 
- **Check for refrigerant gas leakage after installation is completed.**
If the refrigerant gas leaks into the house and comes in contact with a fan heater, a stove, or an oven, toxic gas is produced. 
- **Use the specified pipe, flare nut, and tools for R410A.**
Using existing parts (R22) could cause the unit failure and serious accident due to explosion of the cooling cycle. 
- **Tighten the flare nut according to the specified method by with torque wrench.**
If the flare nut were tightened with excess torque, it could cause burst and refrigerant leakage after a long period. 
- **Do not put the drainage pipe directly into drainage channels where poisonous gases such as sulfide gas can occur.**
Poisonous gases will flow into the room through drainage pipe and seriously affect the user's health and safety. This can also cause the corrosion of the indoor unit and a resultant unit failure or refrigerant leak. 
- **Connect the pipes for refrigeration circuit securely in installation work before compressor is operated.**
If the compressor is operated when the service valve is open without connecting the pipe, it could cause explosion and injuries due to abnormal high pressure in the system. 
- **Stop the compressor before removing the pipe after shutting the service valve on pump down work.**
If the pipe is removed when the compressor is in operation with the service valve open, air would be mixed in the refrigeration circuit and it could cause explosion and injuries due to abnormal high pressure in the cooling cycle. 
- **Only use prescribed option parts. The installation must be carried out by the qualified installer.**
If you install the system by yourself, it can cause serious trouble such as water leaks, electric shocks, fire. 
- **Do not repair by yourself. And consult with the dealer about repair.**
Improper repair may cause water leakage, electric shock or fire. 
- **Consult the dealer or a specialist about removal of the air-conditioner.**
Improper installation may cause water leakage, electric shock or fire. 
- **Turn off the power source during servicing or inspection work.**
If the power is supplied during servicing or inspection work, it could cause electric shock and injury by the operating fan. 
- **Do not run the unit when the panel or protection guard are taken off.**
Touching the rotating equipment, hot surface, or high voltage section could cause an injury to be caught in the machine, to get burned, or electric shock. 
- **Shut off the power before electrical wiring work.**
It could cause electric shock, unit failure and improper running. 

CAUTION

- **Perform earth wiring surely.**
Do not connect the earth wiring to the gas pipe, water pipe, lightning rod and telephone earth wiring. Improper earth could cause unit failure and electric shock or fire due to a short circuit. 
- **Earth leakage breaker must be installed.**
If the earth leakage breaker is not installed, it could cause electric shocks or fire. 
- **Use the circuit breaker of correct capacity. Circuit breaker should be the one that disconnect all poles under over current.**
Using the incorrect one could cause the system failure and fire. 
- **Do not use any materials other than a fuse of correct capacity where a fuse should be used.**
Connecting the circuit by wire or copper wire could cause unit failure and fire. 
- **Do not install the indoor unit near the location where there is possibility of flammable gas leakages.**
If the gas leaks and gathers around the unit, it could cause fire. 
- **Do not install and use the unit where corrosive gas (such as sulfuric acid gas etc.) or flammable gas (such as thinner, petroleum etc.) may be generated or accumulated, or volatile flammable substances are handled.**
It could cause the corrosion of heat exchanger, breakage of plastic parts etc. And inflammable gas could cause fire. 
- **Secure a space for installation, inspection and maintenance specified in the manual.**
Insufficient space can result in accident such as personal injury due to falling from the installation place. 
- **Do not use the indoor unit at the place where water splashes such as laundry.**
Indoor unit is not waterproof. It could cause electric shock and fire. 
- **Do not use the indoor unit for a special purpose such as food storage, cooling for precision instrument, preservation of animals, plants, and a work of art.**
It could cause the damage of the items. 
- **Do not install nor use the system near equipments which generate electromagnetic wave or high harmonics.**
Equipments like inverter equipment, private power generator, high-frequency medical equipment, or telecommunication equipment might influence the air-conditioner and cause a malfunction and breakdown. Or the air-conditioner might influence medical equipments or telecommunication equipments, and obstruct their medical activity or cause jamming. 
- **Do not install the remote control at the direct sunlight.**
It could cause breakdown or deformation of the remote control. 
- **Do not install the indoor unit at the place listed below.**
 - Places where flammable gas could leak.
 - Places where carbon fiber, metal powder or any powder is floated.
 - Places where the substances which affect the air-conditioner are generated such as sulfide gas, chlorine gas, acid, alkali or ammoniac atmospheres.
 - Places exposed to oil mist or steam directly.
 - On vehicles and ships
 - Places where machinery which generates high harmonics is used.
 - Places where cosmetics or special sprays are frequently used.
 - Highly salted area such as beach.
 - Heavy snow area
 - Places where the system is affected by smoke from a chimney.
 - Altitude over 1000m
- **Do not install the indoor unit in the locations listed below (Be sure to install the indoor unit according to the installation manual for each model because each indoor unit has each limitation)**
 - Locations with any obstacles which can prevent inlet and outlet air of the unit
 - Locations where vibration can be amplified due to insufficient strength of structure.
 - Locations where the infrared receiver is exposed to the direct sunlight or the strong light beam. (in case of the infrared specification unit)
 - Locations where an equipment affected by high harmonics is placed. (TV set or radio receiver is placed within 5m)
 - Locations where drainage cannot run off safely. It can affect performance or function and etc..
- **Do not put any valuables which will break down by getting wet under the air-conditioner.**
Condensation could drop when the relative humidity is higher than 80% or drain pipe is clogged, and it damages user's belongings. 
- **Do not use the base frame for the outdoor unit which is corroded or damaged after a long period of use.**
It could cause the unit falling down and injury. 
- **Pay attention not to damage the drain pan by weld sputter when brazing work is done near the unit.**
If sputter entered into the unit during brazing work, it could cause damage (pinhole) of drain pan and leakage of water. To avoid damaging, keep the indoor unit packed or cover the indoor unit. 
- **Install the drain pipe to drain the water surely according to the installation manual.**
Improper connection of the drain pipe may cause dropping water into room and damaging user's belongings. 
- **Do not share the drain pipe for indoor unit and GHP (Gas Heat Pump system) outdoor unit.**
Toxic exhaust gas would flow into room and it might cause serious damage (some poisoning or deficiency of oxygen) to user's health and safety. 
- **Be sure to perform air tightness test by pressurizing with nitrogen gas after completed refrigerant piping work.**
If the density of refrigerant exceeds the limit in the event of refrigerant leakage in the small room, lack of oxygen can occur, which can cause serious accidents. 
- **For drain pipe installation, be sure to make descending slope of greater than 1/100, not to make traps, and not to make air-bleeding.**
Check if the drainage is correctly done during commissioning and ensure the space for inspection and maintenance. 
- **Ensure the insulation on the pipes for refrigeration circuit so as not to condense water.**
Incomplete insulation could cause condensation and it would wet ceiling, floor, and any other valuables. 
- **Do not install the outdoor unit where is likely to be a nest for insects and small animals.**
Insects and small animals could come into the electronic components and cause breakdown and fire. Instruct the user to keep the surroundings clean. 
- **Pay extra attention, carrying the unit by hand.**
Carry the unit with 2 people if it is heavier than 20kg. Do not use the plastic straps but the grabbing place, moving the unit by hand. Use protective gloves in order to avoid injury by the aluminum fin. 
- **Make sure to dispose of the packaging material.**
Leaving the materials may cause injury as metals like nail and woods are used in the package. 
- **Do not operate the system without the air filter.**
It may cause the breakdown of the system due to clogging of the heat exchanger. 
- **Do not touch any button with wet hands.**
It could cause electric shock. 
- **Do not touch the refrigerant piping with bare hands when in operation.**
The pipe during operation would become very hot or cold according to the operating condition, and it could cause a burn or frostbite. 
- **Do not clean up the air-conditioner with water.**
It could cause electric shock. 
- **Do not turn off the power source immediately after stopping the operation.**
Be sure to wait for more than 5 minutes. Otherwise it could cause water leakage or breakdown. 
- **Do not control the operation with the circuit breaker.**
It could cause fire or water leakage. In addition, the fan may start operation unexpectedly and it may cause injury. 

○ This model is high static ducted type air-conditioner unit. Therefore, do not use this model for direct blow type air-conditioning unit.

1 Before installation

● Install correctly according to the installation manual.

● Confirm the following points:

○ Unit type/Power source specification ○ Pipes/Wires/Small parts ○ Accessory items

Accessory item

For hanging		For refrigerant pipe				For drain pipe			
Flat washer (M10)	Pipe cover (big)	Pipe cover (small)	Strap	Pipe cover (big)	Pipe cover (small)	Drain hose	Hose clamp	Elbow (Multi only)	
8	1	1	4	1	1	1	1	1	
For unit hanging	For heat insulation of gas pipe	For heat insulation of liquid tube	For pipe cover fixing	For heat insulation of drain socket	For heat insulation of drain socket	For drain pipe connecting	For drain hose mounting	For drain pipe connecting	

Accessory parts are stored inside this suction side.


2 Selection of installation location for the indoor unit

- Select the suitable areas to install the unit under approval of the user.
 - Areas where the indoor unit can deliver hot and cold wind sufficiently. Suggest to the user to use a circulator if the ceiling height is over 3m to avoid warm air being accumulated on the ceiling.
 - Areas where there is enough space to install and service.
 - Areas where it can be drained properly. Areas where drain pipe descending slope can be taken.
 - Areas where there is no obstruction of air flow on both air return grille and air supply port.
 - Areas where fire alarm will not be accidentally activated by the air-conditioner.
 - Areas where the supply air does not short-circuit.
 - Areas where it is not influenced by draft air.
 - Areas not exposed to direct sunlight.
 - Areas where dew point is lower than around 28°C and relative humidity is lower than 80%.
 (This indoor unit is tested under the condition of JIS (Japan Industrial Standard) high humidity condition and confirmed there is no problem. However, there is some risk of condensation drop if the air-conditioner is operated under the severer condition than mentioned above. If there is a possibility to use it under such a condition, attach additional insulation of 10 to 20mm thick for entire surface of indoor unit, refrigeration pipe and drain pipe.)
 - Areas where TV and radio stays away more than 1m. (It could cause jamming and noise.)
 - Areas where any items which will be damaged by getting wet are not placed such as food, table wares, server, or medical equipment under the unit.
 - Areas where there is no influence by the heat which cookware generates.
 - Areas not exposed to oil mist, powder and/or steam directly such as above fryer.
 - Areas where lighting device such as fluorescent light or incandescent light doesn't affect the operation.
 (A beam from lighting device sometimes affects the infrared receiver for the wireless remote control and the air-conditioner might not work properly.)
- Check if the place where the air-conditioner is installed can hold the weight of the unit. If it is not able to hold, reinforce the structure with boards and beams strong enough to hold it. If the strength is not enough, it could cause injury due to unit falling.


Space for installation and service

● Make installation altitude over 2.5m.
(Indoor Unit)

Select either of two cases to keep space for installation and services.

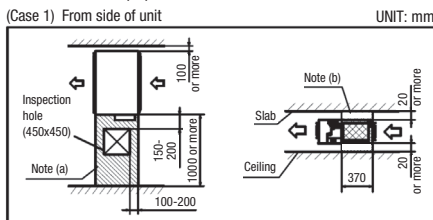


- Notes (a) There must not be obstacle to draw out fan motor. (▨ marked area)
 (b) Install refrigerant pipe, drain pipe, and wiring so as not to cross ▨ marked area.

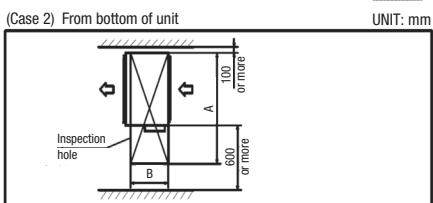

(Size of inspection hole)		UNIT: mm		
Single type	-	71	100-140	
Multi type	45, 56	71, 90	112-160	
FDU-F	-	650	1100	
A	1100	1300	1720	
B	620		725	

3 Cautions for the handling and installation place of outdoor air processing unit

① This unit monitors the outdoor air temperature at the position of sensor A in the figure, and controls the start and stop with the thermostat based on the value of sensor A and the setting temperature by the remote control.



Remote control's setting temperature indicates the outdoor air temperature that controls the start and stop of operation by the thermostat.

When the thermostat is turned off, the operation is changed to the fan mode so that the outdoor air is blown out directly into the room. For example if the remote control is set to 22°C in cooling operation, and if the outdoor air temperature is 22°C or lower at that time, the unit will go into fan operation.

- When there is a difference between the air-conditioner temperature in the room during cooling operation and the temperature of air blown out from the outdoor air processing unit, dewing water may drip from the unit. To prevent the dewing, provide a sufficient heat insulation means at the air blow outlet.
 - Since the air blow outlet on the outdoor air processing unit may blow out the outdoor air directly, orient the outlet in such a way that it will not blow air directly to persons in the room.
 - Since the unit controls the thermostat start and stop by monitoring the outdoor air temperature, it is prohibited to monitor the room temperature by means of the room temperature monitoring by changing the thermostat setting at the remote control side and the optional remote thermostat. Otherwise, dewing water may drip from the unit at lower outdoor air temperatures during cooling operation.
 - Install the remote control of the outdoor air processing unit at a place closer to the administrator to avoid the end user from using the remote control.
- When handing over the unit to the end user, make sure to explain sufficiently about the foregoing cautions, the installation place of the remote control for the outdoor air processing unit and the position of air blow outlet.

4 Preparation before installation

● If suspension bolt becomes longer, do reinforcement of earthquake resistant.

○ For grid ceiling


When the suspension bolt length is over 500mm, or the gap between the ceiling and roof is over 700mm, apply earthquake resistant brace to the bolt.

○ In case the unit is hanged directly from the slab and is installed on the ceiling plane which has enough strength.

When suspension bolt length is over 1000mm, apply the earthquake resistant brace to the bolt.

● Prepare four (4) sets of suspension bolt, nut and spring washer (M10) on site.


Suspension Bolt Location

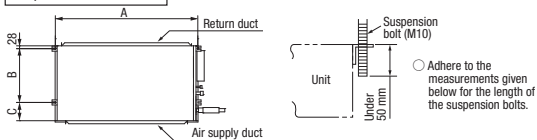


UNIT: mm			
Single type	-	71	100-140
Multi type	45, 56	71, 90	112-160
FDU-F	-	650	1100
A	786	986	1720
B	472	472	725
C	135	135	180

Pipe locations

UNIT: mm	
Single type	71
Multi type	45-90
FDU-F	650

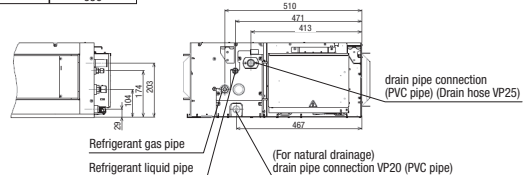

Single type	100-140
Multi type	112-160
FDU-F	1100

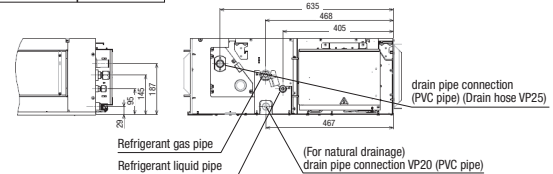


⑤ Installation of indoor unit

Installation

[Hanging]

Hang the unit up.




If the measurements between the unit and the ceiling hole do not match upon installation, it may be adjusted with the long holed installation tool.

Adjustment for horizontality

Either use a level vial, or adjust the level according to the method below.

- Adjust so the bottom side of the unit will be leveled with the water surface as illustrated below.

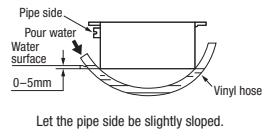

If the unit is not leveled, it may cause malfunctions or inoperation of the float switch.

⑥ Duct Work


① A corrugated board (for preventing sputtering) is attached to the main body of the air-conditioner (on the outlet port). Do not remove it until connecting the duct.

- An air filter can be provided on the main body of the air-conditioner (on the inlet port). Remove it when connecting the duct on the inlet port.

② Blowout duct

- Use rectangular duct to connect with unit.
- Duct size for each unit is as shown below.

		UNIT: mm		
Single type	—	71	100-140	
Multi type	45, 56	71, 90	112-160	
FDU-F	—	650	1100	
A	682	882	1202	
B	172	172	172	



- Duct should be at their minimum length.
- We recommend to use sound and heat insulated duct to prevent it from condensation.
- Connect duct to unit before ceiling attachment.


③ Inlet port

- When connecting the duct to the inlet port, remove the air filter if it is fitted to the inlet port.
- Inlet port size for each unit is as shown below.

		UNIT: mm		
Single type	—	71	100-140	
Multi Type	45, 56	71, 90	112-160	
FDU-F	—	650	1100	
A	582	742	1282	
B	202	202	237	




- Make sure to insulate the duct to prevent dewing on it.
- Install the specific blowout duct in a location where the air will circulate to the entire room.
- Conduct the installation of the specific blowout hole and the connection of the duct before attaching them to the ceiling.
- Insulate the area where the duct is secured by a band for dew condensation prevention.
- Make sure provide an inspection hole on the ceiling. It is indispensable to service electric equipment, motor, functional components and cleaning of heat exchanger.

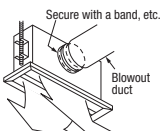


⑥ Duct Work (continued)

FDU

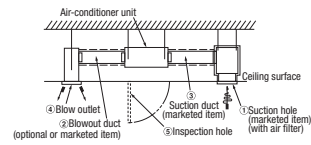


FDU-F

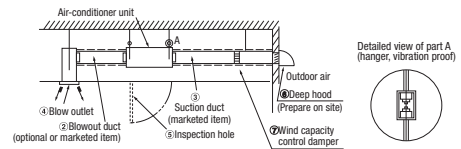

Bad example of duct work


- If a duct is not provided at the suction side but it is substituted with the space over the ceiling, humidity in the space will increase by the influence of capacity of ventilation fan, strength of wind blowing against the outdoor air louver, weather (rainy day) and others.
 - Moisture in air is likely to condense over the external plates of the unit and to drip on the ceiling. Unit should be operated under the conditions as listed in the above table and within the limitation of wind volume. When the building is a concrete structure, especially immediately after the construction, humidity tends to rise even if the space over the ceiling is not substituted in place of a duct. In such occasion, it is necessary to insulate the entire unit with glass wool (25mm). (Use a wire net or equivalent to hold the glass wool in place.)
 - It may run out the allowable limit of unit operation (Example, the case of FDU: When outdoor air temperature is 35°CDB, suction air temperature is 27°CWB) and it could result in such troubles as compressor overload, etc..
 - There is a possibility that the blow air volume may exceed the allowable range of operation due to the capacity of ventilation fan or strength of wind blowing against external air louver so that drainage from the heat exchanger may fall to reach the drain pan but leak outside (Example: drip on to the ceiling) with consequential water leakage in the room.
- If vibration damping is not conducted between the unit and the duct, and between the unit and the slab, vibration will be transmitted to the duct and vibration noise may occur. Also, vibration may be transmitted from the unit to the slab. Vibration damping must be performed.

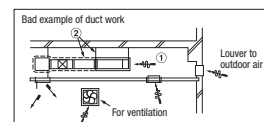

Connecting the air intake/vent ducts the case of FDU


① Fresh Air Intake [for air intake duct only]

- Use the side fresh air intake hole, or supply through a part of the suction duct.

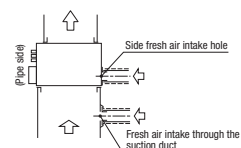


[for simultaneous air intake/vent]

- Intake air through the suction duct. (the side cannot be used)

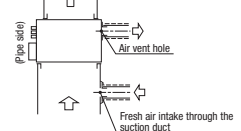

② Air Vent

- Use the side air vent hole. (always use together with the air intake)

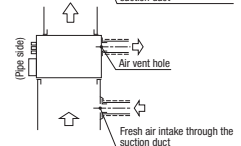


- Insulate the duct to protect it from dew condensation.

⑦ Refrigerant pipe

Caution


- Be sure to use new pipes for the refrigerant pipes. Use the flare nut attached to the product or a nut compatible with JIS B 8607, Class 2.
Regarding whether existing pipes can be reused or not, and the washing method, refer to the instruction manual of the outdoor unit, catalogue or technical data.
- 1) In case of reuse: Do not use old flare nut, but use the one attached to the unit or compatible with JIS B 8607, Class 2.
- 2) In case of reuse: Flare the end of pipe replaced partially for R410A.

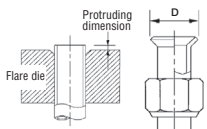

Pipe dia. d mm	Min. pipe wall thickness mm	Protruding dimension for flare, mm		Flare O.D. D mm	Flare nut tightening torque N·m
		Rigid (Clutch type) For R410A	Conventional tool		
6.35	0.8	0 - 0.5	0.7 - 1.3	8.9 - 9.1	14 - 18
9.52	0.8			12.8 - 13.2	34 - 42
12.7	0.8			16.2 - 16.6	49 - 61
15.88	1			19.3 - 19.7	68 - 82
19.05	1.2			23.6 - 24.0	100 - 120

- Use phosphorus deoxidized copper alloy seamless pipe (C1220T specified in JIS H 3300) for refrigeration pipe installation. In addition, make sure there is no damage both inside and outside of the pipe, and no harmful substances such as sulfur, oxide, dust or a contaminant stuck on the pipes.
- Do not use any refrigerant other than R410A.
Using other refrigerant except R410A (R22 etc.) may degrade inside refrigeration oil. And air getting into refrigeration circuit may cause over-pressure and resultant it may result in bursting, etc.
- Store the copper pipes indoors and seal the both end of them until they are brazed in order to avoid any dust, dirt or water getting into pipe. Otherwise it will cause degradation of refrigeration oil and compressor breakdown, etc.
- Use special tools for R410A refrigerant.

Piping work



When conducting piping work, make sure to allow the pipes to be aligned in a straight line for at least 250 mm, as shown in the left illustration. (This is necessary for the drain pump to function)


Work procedure

1. Remove the flare nut and blind flanges on the pipe of the indoor unit.
 - ※ Make sure to loosen the flare nut with holding the nut on pipe side with a spanner and giving torque to the nut with another spanner in order to avoid unexpected stress to the copper pipe, and then remove them. (Gas may come out at this time, but it is not abnormal.)
 - Pay attention whether the flare nut pops out. (as the indoor unit is sometimes pressured.)
2. Make a flare on liquid pipe and gas pipe, and connect the refrigeration pipes on the indoor unit.
 - ※ Bend radius of pipe must be 4D or larger. Once a pipe is bent, do not readjust the bending. Do not twist a pipe or collapse to 2/3D or smaller.
 - ※ Do a flare connection as follows:
 - Make sure to loosen the flare nut with holding the nut on pipe side with a spanner and giving torque to the nut with another spanner in order to avoid unexpected stress to the copper pipe, and then remove them.
 - When fastening the flare nut, align the refrigeration pipe with the center of flare nut, screw the nut for 3-4 times by hand and then tighten it by spanner with the specified torque mentioned in the table above. Make sure to hold the pipe on the indoor unit securely by a spanner when tightening the nut in order to avoid unexpected stress on the copper pipe.
3. Cover the flare connection part of the indoor unit with attached insulation material after a gas leakage inspection, and tighten both ends with attached straps.
 - Make sure to insulate both gas pipes and liquid pipes completely.
 - ※ Incomplete insulation may cause dew condensation or water dropping.
 - Use heat-resistant (120 °C or more) insulations on the gas side pipes.
 - In case of using at high humidity condition, reinforce insulation of refrigerant pipes. Surface of insulation may cause dew condition or water dropping, if insulations are not reinforced.
4. Refrigerant is charged in the outdoor unit.
As for the additional refrigerant charge for the indoor unit and piping, refer to the installation manual attached to the outdoor unit.


Caution:

Refrigerating machine oil should not be applied to the threads of union or external surface of flare. It is because, even if the same tightening torque is applied, the oil is likely to decrease the slide friction force on the threads and increase, in turn, the axial component force so that it could crack the flare by the stress corrosion.
Refrigerating machine oil may be applied to the internal surface of flare only.

<The case of using thickness of insulation is 10mm>

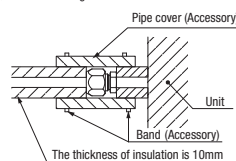

<The case of using reinforced insulation>

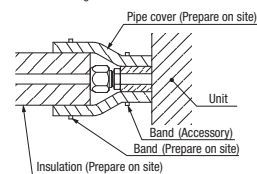


⑧ Drain pipe

Caution


- Install the drain pipe according to the installation manual in order to drain properly. Imperfection in draining may cause flood indoors and wetting the household goods, etc.
- Do not put the drain pipe directly into the ditch where toxic gas such as sulfur, the other harmful and inflammable gas is generated. Toxic gas would flow into the room and it would cause serious damage to user's health and safety (some poisoning or deficiency of oxygen). In addition, it may cause corrosion of heat exchanger and bad smell.
- Connect the pipe securely to avoid water leakage from the joint.
- Insulate the pipe properly to avoid condensation drop.
- Check if the water can flow out properly from both the drain outlet on the indoor unit and the end of the drain pipe after installation.
- Make sure to make descending slope of greater than 1/100 and do not make up-down bend and/or trap in the midway. In addition, do not put air vent on the drain pipe. Check if water is drained out properly from the pipe during commissioning. Also, keep sufficient space for inspection and maintenance.

Work procedure


1. Make sure to insert the drain hose (the end mode of soft PVC) to the end of the step part of drain socket.
Attach the hose clamp to the drain hose around 10mm from the end, and fasten the screw within 5mm left to the nut.
 - Do not apply adhesives on this end.
 - Do not use acetone-based adhesives to connect to the drain socket.

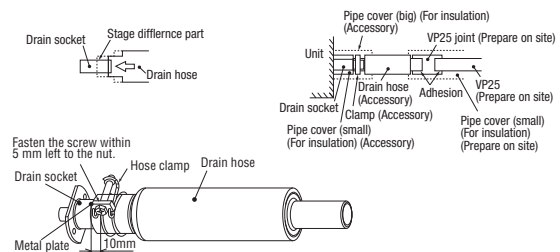


2. Prepare a joint for connecting VP25 pipe, adhere and connect the joint to the drain hose (the end mode of rigid PVC), and adhere and connect VP25 pipe (prepare on site).
 - ※ As for drain pipe, apply VP25 made of rigid PVC which is on the market.
 - Make sure that the adhesive will not get into the supplied drain hose. It may cause the flexible part broken after the adhesive is dried up and gets rigid.
 - The flexible drain hose is intended to absorb a small difference at installation of the unit or drain pipes. Intentional bending, expanding may cause the flexible hose broken and water leakage.




- As for drain pipe, apply VP25 (OD32).
If apply PVC25 (OD25), connect the expanded connector to the drain hose, with adhesive. (Multi unit only)

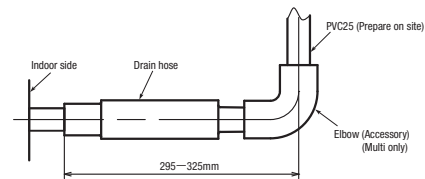

3. Make sure to make descending slope of greater than 1/100 and do not make up-down bend and/or trap in the midway.
 - Pay attention not to give stress on the pipe on the indoor unit side, and support and fix the pipe as close place to the unit as possible when connecting the drain pipe.
 - Do not set up air vent.



- When sharing a drain pipe for more than one unit, lay the main pipe 100mm below the drain outlet of the unit. In addition, select VP30 or bigger size for main drain pipe.

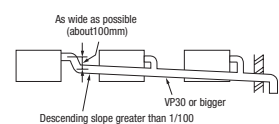


⑧ Drain pipe (continued)

4. Insulate the drain pipe.

- Be sure to insulate the drain socket and rigid PVC pipe installed indoors otherwise it may cause dew condensation and water leakage.
- ※ After drainage test implementation, cover the drain socket part with pipe cover (small size), then use the pipe cover (big size) to cover the pipe cover (small size), clamps and part of the drain hose, and fix and wrap it with tapes to wrap and make joint part gapless.

Drain up

- The position for drain pipe outlet can be raised up to 600mm above the ceiling. Use elbows for installation to avoid obstacles inside ceiling. If the horizontal drain pipe is too long before vertical pipe, the backflow of water will increase when the unit is stopped, and it may cause overflow of water from the drain pan on the indoor unit. In order to avoid overflow, keep the horizontal pipe length and offset of the pipe within the limit shown in the figure below.

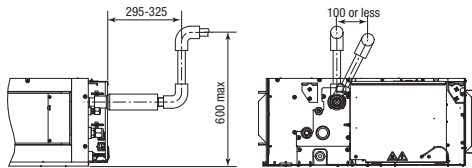


Otherwise, the construction point makes it same as drain pipe construction.

Drain test

1. Conduct a drain test after completion of the electrical work.
2. During the trial, make sure that drain flows properly through the piping and that no water leaks from connections.
3. In case of a new building, conduct the test before it is furnished with the ceiling.
4. Be sure to conduct this test even when the unit is installed in the heating season.


Procedures

1. Supply about 2000 cc of water to the unit through the air outlet by using a feed water pump.
2. Check the drain while cooling operation.

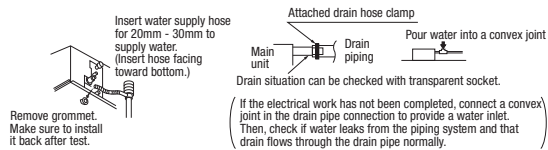

Outline of bottom drain piping work


- If the bottom drain piping can be done with a descending gradient (1/50-1/100), it is possible to connect the pipes as shown in the drawing below.

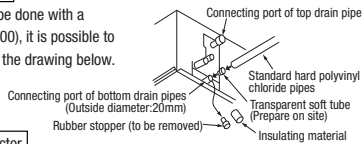

Uncoupling the drain motor connector

- Uncouple the connector CNR for the drain motor as illustrated in the drawing on the right.

(Note: If the unit is run with the connector coupled, drain water will be discharged from the upper drain pipe joint, causing a water leak.)




⑨ Wiring-out position and wiring connection

- Electrical installation work must be performed according to the installation manual by an electrical installation service provider qualified by a power provider of the country, and be executed according to the technical standards and other regulations applicable to electrical installation in the country.


- Be sure to use an exclusive circuit.
- Use specified cord, fasten the wiring to the terminal securely, and hold the cord securely in order not to apply unexpected stress on the terminal.
- Do not put both power source line and signal line on the same route. It may cause miscommunication and malfunction.
- For the details of electrical wiring work, see attached instruction manual for electrical wiring work.

1. Remove a lid of the control box (2 screws).
2. Hold each wiring inside the unit and fasten them to terminal block securely.
3. Fix the wiring with clamps.
4. Install the removed parts back to original place.

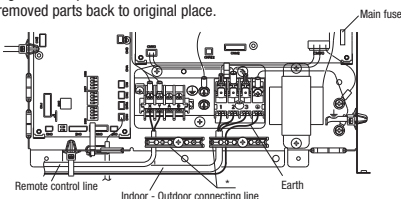

Single unit wiring connection

⑨ Wiring-out position and wiring connection (continued)

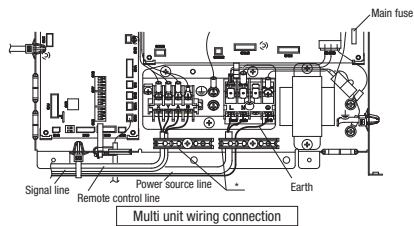

Main fuse specification

Model	Specification	Part No.
FDU	FDU-F	
45-90	650	T 5A L 250V
112-160	1100	T 6.3A L 250V
		SSA564A149AH
		SSA564A149AJ

* Please fix the wiring in the band not to move even if it pulls.

⑩ External static pressure setting

You can set External Static Pressure (E.S.P.) by method of MANUAL SETTING on remote control. Indoor unit will control fan-speed to keep rated air flow volume at each fan speed setting (Lo-Uhi) You can set required E.S.P. by wired remote control that calculated with the set air flow rate and pressure loss of the duct connected.

- How to set E.S.P. by wired remote control
 - ① Push "◆" marked button (E.S.P. button).
 - ② Select indoor unit No. by using ◀ button.
 - ③ Select setting No. by using ▶ button and set E.S.P. by ◀ button.



Notice

You can NOT set E.S.P. by wireless remote control.

E.S.P. button

With E.S.P. setting, confirm that actual E.S.P. agrees with E.S.P. setting. When E.S.P. setting is higher than actual E.S.P., the air flow rate becomes excessively higher. This will cause water leakage if water splashes. When E.S.P. setting is lower than actual E.S.P., the air flow rate becomes excessively lower and the cooling or heating may become ineffective. In order to reduce the risk above the factory E.S.P. setting is set within the range of 80 – 150 Pa (E.S.P. setting No. 8 – 15). Be sure to use within the range of 80 – 150 Pa in actual operations. If actual E.S.P. is lower than 80 Pa, it may cause water leakage.


Setting No.	8	9	10	11	12	13	14	15
E.S.P. (Pa)	80	90	100	110	120	130	140	150

- ※ If 1 – 7 is selected for the setting No. on the remote control, the setting No. shows No. 8.
- ※ If 16 – 20 is selected for the setting No. on the remote control, the setting No. shows No. 15.
- Factory default is No. 8.

The Case of FDU-F

Setting No.	1	2	3	4	5	6	7	8	9	10	11	12
E.S.P. (Pa)	10	20	30	40	50	60	70	80	90	100	110	120

- ※ If 13-20 is selected for the setting No. on the remote control, the setting No. shows No. 12.
- ※ Factory default is No. 8.

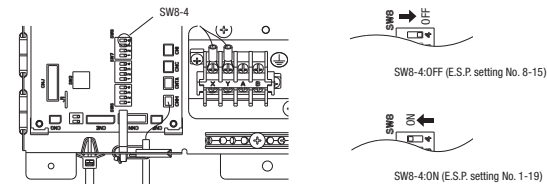

If SW8-4 is turned to "ON", E.S.P. setting range can be changed to 10 – 200 Pa (E.S.P. setting No. 1 – 19). This should not be used when actual E.S.P. cannot be confirmed, because the risk above becomes higher.

Setting No.	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19
E.S.P. (Pa)	10	20	30	40	50	60	70	80	90	100	110	120	130	140	150	160	170	180	200

- ※ If 20 is selected for the setting No. on the remote control, the setting No. shows No. 19.

⑪ Check list after installation

- Check the following items after all installation work completed.


Check if	Expected trouble	Check
The indoor and outdoor units are fixed securely?	Falling, vibration, noise	
Inspection for leakage is done?	Insufficient capacity	
Insulation work is properly done?	Water leakage	
Water is drained properly?	Water leakage	
Power source voltage is same as mentioned in the model name plate?	PCB burnt out, not working at all	
No mis-wiring or mis-connection of piping?	PCB burnt out, not working at all	
Earth wiring is connected properly?	Electric shock	
Cable size comply with specified size?	PCB burnt out, not working at all	
Any obstacle blocks air flow on air inlet and outlet?	Insufficient capacity	
Is setting of E.S.P. finished?	Excessive air flow, water drop blow out	

(b) Replacement procedure of the fan unit


- Notes(1) The unit is a heavy item. It must be supported securely and handled with care not to drop when it is necessary to replace.
 (2) For the maintenance space, refer to page 68.

(i) Model FDU71VF1


- 1) Remove the control box and the side panel, and remove the screws marked in the circles (2 places) in the figure.

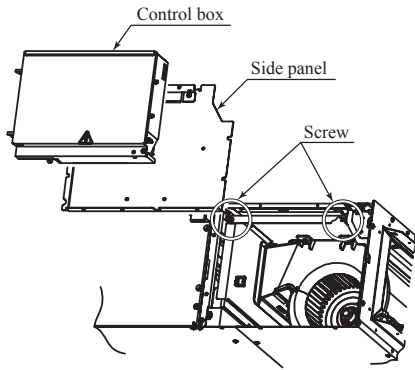


- 2) Take out the fan unit located at the near side in the arrow direction.

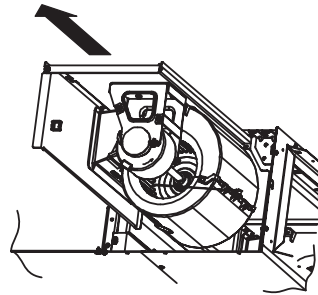

- 2) Take out the fan unit in the arrow direction.

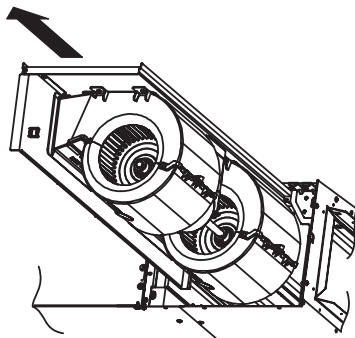


- 3) Remove the screws marked in the circles (2 places) from the fan unit located at the far side.

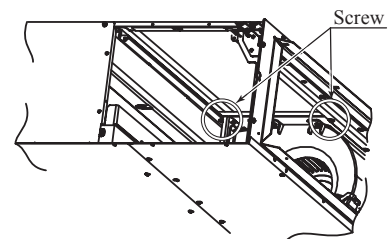


(ii) Model FDU100VF2

- 1) Remove the control box and the side panel, and remove the screws marked in the circles (2 places) from the unit located at the near side.

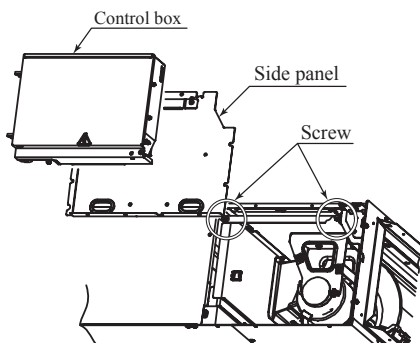

- 4) Take out the fan unit in the arrow direction.

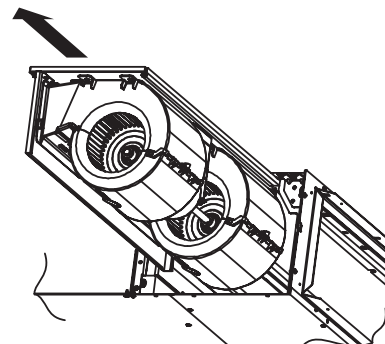

(3) Duct connected-Low / Middle static pressure type (FDUM)



(a) Indoor unit

This manual is for the installation of an indoor unit.
 For electrical wiring work (Indoor), refer to page 96. For remote control installation, refer to page 104.
 For wireless kit installation, refer to page 138. For electrical wiring work (Outdoor) and refrigerant pipe work installation for outdoor unit, refer to page 116.

SAFETY PRECAUTIONS

- Read the "SAFETY PRECAUTIONS" carefully first of all and then strictly follow it during the installation work in order to protect yourself.
- The precautionary items mentioned below are distinguished into two levels, **⚠️ WARNING** and **⚠️ CAUTION**.
⚠️ WARNING: Wrong installation would cause serious consequences such as injuries or death.
⚠️ CAUTION: Wrong installation might cause serious consequences depending on circumstances.
 Both mentions the important items to protect your health and safety so strictly follow them by any means.
 The meanings of "Marks" used here are as shown on the right:
Ⓜ Never do it under any circumstances. **Ⓜ** Always do it according to the instruction.
- After completing the installation, do commissioning to confirm there are no abnormalities, and explain to the customers about "SAFETY PRECAUTIONS", correct operation method and maintenance method (air filter cleaning, operation method and temperature setting method) with user's manual of this unit.
 Ask your customers to keep this installation manual together with the user's manual. Also, ask them to hand over the user's manual to the new user when the owner is changed.

⚠️ WARNING

- **Installation should be performed by the specialist.**
 If you install the unit by yourself, it may lead to serious trouble such as water leakage, electric shock, fire, and injury due to overturn of the unit. **⚠️**
- **Install the system correctly according to these installation manuals.**
 Improper installation may cause explosion, injury, water leakage, electric shock, and fire. **⚠️**
- **Check the density referred by the formula (accordance with ISO5149).**
 If the density exceeds the limit density, please consult the dealer and installate the ventilation system. **⚠️**
- **Use the genuine accessories and the specified parts for installation.**
 If parts unspecified by our company are used it could cause water leakage, electric shock, fire, and injury due to overturn of the unit. **⚠️**
- **Ventilate the working area well in case the refrigerant leaks during installation.**
 If the refrigerant contacts the fire, toxic gas is produced. **⚠️**
- **Install the unit in a location that can hold heavy weight.**
 Improper installation may cause the unit to fall leading to accidents. **⚠️**
- **Install the unit properly in order to be able to withstand strong winds such as typhoons, and earthquakes.**
 Improper installation may cause the unit to fall leading to accidents. **⚠️**
- **Do not mix air in to the cooling cycle on installation or removal of the air-conditioner.**
 If air is mixed in, the pressure in the cooling cycle will rise abnormally and may cause explosion and injuries. **⊘**
- **Be sure to have the electrical wiring work done by qualified electrical installer, and use exclusive circuit.**
 Power source with insufficient capacity and improper work can cause electric shock and fire. **⚠️**
- **Use specified wire for electrical wiring, fasten the wiring to the terminal securely, and hold the cable securely in order not to apply unexpected stress on the terminal.**
 Loose connections or hold could result in abnormal heat generation or fire. **⚠️**
- **Arrange the electrical wires in the control box properly to prevent them from rising. Fit the lid of the services panel properly.**
 Improper fitting may cause abnormal heat and fire. **⚠️**
- **Check for refrigerant gas leakage after installation is completed.**
 If the refrigerant gas leaks into the house and comes in contact with a fan heater, a stove, or an oven, toxic gas is produced. **⚠️**
- **Use the specified pipe, flare nut, and tools for R410A.**
 Using existing parts (R22) could cause the unit failure and serious accident due to explosion of the cooling cycle. **⚠️**
- **Tighten the flare nut according to the specified method by with torque wrench.**
 If the flare nut were tightened with excess torque, it could cause burst and refrigerant leakage after a long period. **⚠️**
- **Do not put the drainage pipe directly into drainage channels where poisonous gases such as sulfide gas can occur.**
 Poisonous gases will flow into the room through drainage pipe and seriously affect the user's health and safety. This can also cause the corrosion of the indoor unit and a resultant unit failure or refrigerant leak. **⊘**
- **Connect the pipes for refrigeration circuit securely in installation work before compressor is operated.**
 If the compressor is operated when the service valve is open without connecting the pipe, it could cause explosion and injuries due to abnormal high pressure in the system. **⚠️**
- **Stop the compressor before removing the pipe after shutting the service valve on pump down work.**
 If the pipe is removed when the compressor is in operation with the service valve open, air would be mixed in the refrigeration circuit and it could cause explosion and injuries due to abnormal high pressure in the cooling cycle. **⚠️**
- **Only use prescribed option parts. The installation must be carried out by the qualified installer.**
 If you install the system by yourself, it can cause serious trouble such as water leaks, electric shocks, fire. **⚠️**
- **Do not repair by yourself. And consult with the dealer about repair.**
 Improper repair may cause water leakage, electric shock or fire. **⊘**
- **Consult the dealer or a specialist about removal of the air conditioner.**
 Improper installation may cause water leakage, electric shock or fire. **⚠️**
- **Turn off the power source during servicing or inspection work.**
 If the power is supplied during servicing or inspection work, it could cause electric shock and injury by the operating fan. **⚠️**
- **Do not run the unit when the panel or protection guard are taken off.**
 Touching the rotating equipment, hot surface, or high voltage section could cause an injury to be caught in the machine, to get burned, or electric shock. **⊘**
- **Shut off the power before electrical wiring work.**
 It could cause electric shock, unit failure and improper running. **⚠️**

⚠️ CAUTION

- **Perform earth wiring surely.**
 Do not connect the earth wiring to the gas pipe, water pipe, lightning rod and telephone earth wiring. Improper earth could cause unit failure and electric shock or fire due to a short circuit. **⚠️**
- **Earth leakage breaker must be installed.**
 If the earth leakage breaker is not installed, it could cause electric shocks or fire. **⚠️**
- **Use the circuit breaker of correct capacity. Circuit breaker should be the one that disconnect all poles under over current.**
 Using the incorrect one could cause the system failure and fire. **⚠️**
- **Do not use any materials other than a fuse of correct capacity where a fuse should be used.**
 Connecting the circuit by wire or copper wire could cause unit failure and fire. **⊘**
- **Do not install the indoor unit near the location where there is possibility of flammable gas leakages.**
 If the gas leaks and gathers around the unit, it could cause fire. **⊘**
- **Do not install and use the unit where corrosive gas (such as sulfurous acid gas etc.) or flammable gas (such as thinner, petroleum etc.) may be generated or accumulated, or volatile flammable substances are handled.**
 It could cause the corrosion of heat exchanger, breakage of plastic parts etc. And inflammable gas could cause fire. **⊘**
- **Secure a space for installation, inspection and maintenance specified in the manual.**
 Insufficient space can result in accident such as personal injury due to falling from the installation place. **⚠️**
- **Do not use the indoor unit at the place where water splashes such as laundry.**
 Indoor unit is not waterproof. It could cause electric shock and fire. **⊘**
- **Do not use the indoor unit for a special purpose such as food storage, cooling for precision instrument, preservation of animals, plants, and a work of art.**
 It could cause the damage of the items. **⊘**
- **Do not install nor use the system near equipments which generate electromagnetic wave or high harmonics.**
 Equipments like inverter equipment, private power generator, high-frequency medical equipment, or telecommunication equipment might influence the air conditioner and cause a malfunction and breakdown. Or the air conditioner might influence medical equipments or telecommunication equipments, and obstruct their medical activity or cause jamming. **⊘**
- **Do not install the remote control at the direct sunlight.**
 It could cause breakdown or deformation of the remote control. **⊘**
- **Do not install the indoor unit at the place listed below.**
 - Places where flammable gas could leak.
 - Places where carbon fiber, metal powder or any powder is floated.
 - Places where the substances which affect the air conditioner are generated such as sulfide gas, chloride gas, acid, alkali or ammoniac atmospheres.
 - Places exposed to oil mist or steam directly.
 - On vehicles and ships
 - Places where machinery which generates high harmonics is used.
 - Places where cosmetics or special sprays are frequently used.
 - Highly salted area such as beach.
 - Heavy snow area
 - Places where the system is affected by smoke from a chimney.
 - Altitude over 1000m**⊘**
- **Do not install the indoor unit in the locations listed below (Be sure to install the indoor unit according to the installation manual for each model because each indoor unit has each limitation)**
 - Locations with any obstacles which can prevent inlet and outlet air of the unit
 - Locations where vibration can be amplified due to insufficient strength of structure.
 - Locations where the infrared receiver is exposed to the direct sunlight or the strong light beam. (in case of the infrared specification unit)
 - Locations where an equipment affected by high harmonics is placed. (TV set or radio receiver is placed within 5m)
 - Locations where drainage cannot run off safely.
 It can affect performance or function and etc.. **⊘**
- **Do not put any valuables which will break down by getting wet under the air conditioner.**
 Condensation could drop when the relative humidity is higher than 80% or drain pipe is clogged, and it damages user's belongings. **⊘**
- **Do not use the base frame for the outdoor unit which is corroded or damaged after a long period of use.**
 It could cause the unit falling down and injury. **⊘**
- **Pay attention not to damage the drain pan by weld sputter when brazing work is done near the unit.**
 If sputter entered into the unit during brazing work, it could cause damage (pinhole) of drain pan and leakage of water. To avoid damaging, keep the indoor unit packed or cover the indoor unit. **⚠️**
- **Install the drain pipe to drain the water surely according to the installation manual.**
 Improper connection of the drain pipe may cause dropping water into room and damaging user's belongings. **⚠️**
- **Do not share the drain pipe for indoor unit and GHP (Gas Heat Pump system) outdoor unit.**
 Toxic exhaust gas would flow into room and it might cause serious damage (some poisoning or deficiency of oxygen) to user's health and safety. **⊘**
- **Be sure to perform air tightness test by pressurizing with nitrogen gas after completed refrigerant piping work.**
 If the density of refrigerant exceeds the limit in the event of refrigerant leakage in the small room, lack of oxygen can occur, which can cause serious accidents. **⚠️**
- **For drain pipe installation, be sure to make descending slope of greater than 1/100, not to make traps, and not to make air-bleeding.**
 Check if the drainage is correctly done during commissioning and ensure the space for inspection and maintenance. **⚠️**
- **Ensure the insulation on the pipes for refrigeration circuit so as not to condense water.**
 Incomplete insulation could cause condensation and it would wet ceiling, floor, and any other valuables. **⚠️**
- **Do not install the outdoor unit where is likely to be a nest for insects and small animals.**
 Insects and small animals could come into the electronic components and cause breakdown and fire. Instruct the user to keep the surroundings clean. **⊘**
- **Pay extra attention, carrying the unit by hand.**
 Carry the unit with 2 people if it is heavier than 20kg. Do not use the plastic straps but the grabbing place, moving the unit by hand. Use protective gloves in order to avoid injury by the aluminum fin. **⚠️**
- **Make sure to dispose of the packaging material.**
 Leaving the materials may cause injury as metals like nail and woods are used in the package. **⚠️**
- **Do not operate the system without the air filter.**
 It may cause the breakdown of the system due to clogging of the heat exchanger. **⊘**
- **Do not touch any button with wet hands.**
 It could cause electric shock. **⊘**
- **Do not touch the refrigerant piping with bare hands when in operation.**
 The pipe during operation would become very hot or cold according to the operating condition, and it could cause a burn or frostbite. **⊘**
- **Do not clean up the air conditioner with water.**
 It could cause electric shock. **⊘**
- **Do not turn off the power source immediately after stopping the operation.**
 Be sure to wait for more than 5 minutes. Otherwise it could cause water leakage or breakdown. **⊘**
- **Do not control the operation with the circuit breaker.**
 It could cause fire or water leakage. In addition, the fan may start operation unexpectedly and it may cause injury. **⊘**

○ This model is middle static ducted type air-conditioner unit. Therefore, do not use this model for direct blow type air-conditioner unit.

① Before installation

- Install correctly according to the installation manual.
- Confirm the following points:
 - Unit type/Power source specification
 - Pipes/Wires/Small parts
 - Accessory items

Accessory item							
For hanging	For refrigerant pipe			For drain pipe			
Flat washer (M10)	Pipe cover (big)	Pipe cover (small)	Strap	Pipe cover (big)	Pipe cover (small)	Drain hose	Hose clamp
8	1	1	4	1	1	1	1
For unit hanging	For heat insulation of gas pipe	For heat insulation of liquid tube	For pipe cover fixing	For heat insulation of drain socket	For heat insulation of drain socket	For drain pipe connecting	For drain hose mounting


Accessory parts are stored inside this suction side.

② Selection of installation location for the indoor unit


- Select the suitable areas to install the unit under approval of the user.
 - Areas where the indoor unit can deliver hot and cold wind sufficiently. Suggest to the user to use a circulator if the ceiling height is over 3m to avoid warm air being accumulated on the ceiling.
 - Areas where there is enough space to install and service.
 - Areas where it can be drained properly. Areas where drain pipe descending slope can be taken.
 - Areas where there is no obstruction of air flow on both air return grille and air supply port.
 - Areas where fire alarm will not be accidentally activated by the air-conditioner.
 - Areas where the supply air does not short-circuit.
 - Areas where it is not influenced by draft air.
 - Areas not exposed to direct sunlight.
 - Areas where dew point is lower than around 28°C and relative humidity is lower than 80%.
 (This indoor unit is tested under the condition of JIS (Japan Industrial Standard) high humidity condition and confirmed there is no problem. However, there is some risk of condensation drop if the air-conditioner is operated under the severer condition than mentioned above. If there is a possibility to use it under such a condition, attach additional insulation of 10 to 20mm thick for entire surface of indoor unit, refrigeration pipe and drain pipe.)
 - Areas where TV and radio stays away more than 1m. (It could cause jamming and noise.)
 - Areas where any items which will be damaged by getting wet are not placed such as food, table wares, server, or medical equipment under the unit.
 - Areas where there is no influence by the heat which cookware generates.
 - Areas where not exposed to oil mist, powder and/or steam directly such as above fryer.
 - Areas where lighting device such as fluorescent light or incandescent light doesn't affect the operation.
 (A beam from lighting device sometimes affects the infrared receiver for the wireless remote control and the air-conditioner might not work properly.)
- Check if the place where the air-conditioner is installed can hold the weight of the unit. If it is not able to hold, reinforce the structure with boards and beams strong enough to hold it. If the strength is not enough, it could cause injury due to unit falling.

Space for installation and service

- Make installation altitude over 2.5m. (Indoor Unit)
- Select either of two cases to keep space for installation and services.

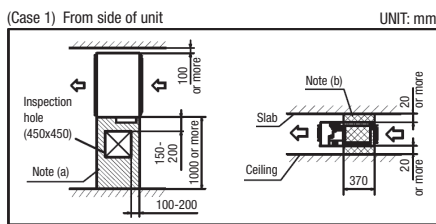

Notes (a) There must not be obstacle to draw out fan motor. (b) Install refrigerant pipe, drain pipe, and wiring so as not to cross marked area.

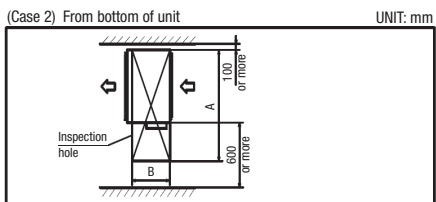


(Size of inspection hole)	UNIT: mm		
Single type	40-50	60-71	100-140
Multi type	22-56	71-90	112-160
A	1100	1300	1720
B	620	725	

③ Preparation before installation

- If suspension bolt becomes longer, do reinforcement of earthquake resistant.
 - For grid ceiling
 When the suspension bolt length is over 500mm, or the gap between the ceiling and roof is over 700mm, apply earthquake resistant brace to the bolt.
 - In case the unit is hanged directly from the slab and is installed on the ceiling plane which has enough strength.
 When suspension bolt length is over 1000mm, apply the earthquake resistant brace to the bolt.
- Prepare four (4) sets of suspension bolt, nut and spring washer (M10) on site.


Suspension Bolt Location

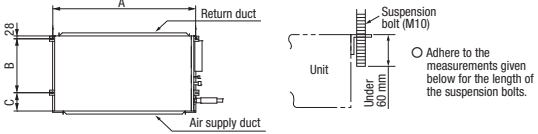


	UNIT: mm		
Multi type	22-56	71-90	112-160
Single type	40-50	60-71	100-140
A	786	986	1404
B	472	472	530
C	135	135	180

Pipe locations UNIT: mm

Multi type	22-90
Single type	40-71

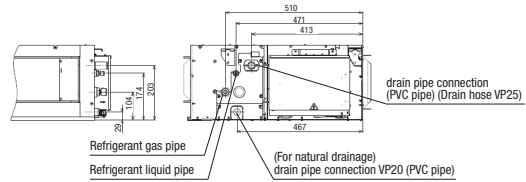

Multi type	112-160
Single type	100-140

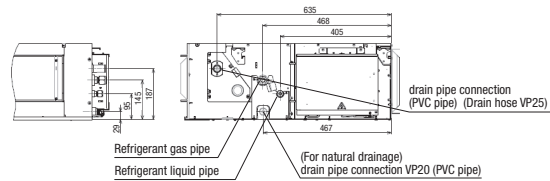


④ Installation of indoor unit

Installation

[Hanging]

Hang the unit up.




If the measurements between the unit and the ceiling hole do not match upon installation, it may be adjusted with the long holed installation tool.

Adjustment for horizontality

○ Either use a level vial, or adjust the level according to the method below.

- Adjust so the bottom side of the unit will be leveled with the water surface as illustrated below.

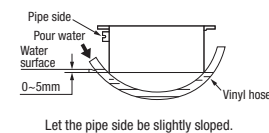

○ If the unit is not leveled, it may cause malfunctions or inoperation of the float switch.

⑤ Duct work


① A corrugated board (for preventing sputtering) is attached to the main body of the air-conditioner (on the outlet port). Do not remove it until connecting the duct.

- An air filter can be provided on the main body of the air-conditioner (on the inlet port). Remove it when connecting the duct on the inlet port.

② Blowout duct

- Use rectangular duct to connect with unit.
- Duct size for each unit is as shown below.


	UNIT: mm		
Single type	40-50	60-71	100-140
Multi type	22-56	71-90	112-140
A	682	882	1202
B	172	172	172




- Duct should be at their minimum length.
- We recommend to use sound and heat insulated duct to prevent it from condensation.
- Connect duct to unit before ceiling attachment.

③ Inlet port


- When shipped the inlet port lies on the back.
- When connecting the duct to the inlet port, remove the air filter if it is fitted to the inlet port.
- When placing the inlet port to carry out suction from the bottom side, use the following procedure to replace the suction duct joint and the bottom plate.



- Remove the screws which fasten the bottom plate and the duct joint on the inlet port side of the unit.



- Replace the removed bottom plate and duct joint.




- Fit the duct joint with a screw; fit the bottom plate.


- Make sure to insulate the duct to prevent dewing on it.

④ Install the specific blowout duct in a location where the air will circulate to the entire room.

- Conduct the installation of the specific blowout hole and the connection of the duct before attaching them to the ceiling.
- Insulate the area where the duct is secured by a band for dew condensation prevention.

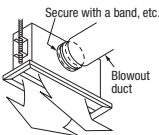

⑤ Make sure provide an inspection hole on the ceiling. It is indispensable to service electric equipment, motor, functional components and cleaning of heat exchanger.

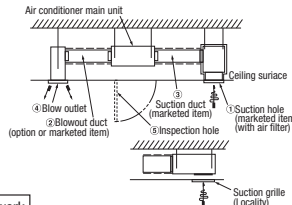

Bad example of duct work


① If a duct is not provided at the suction side but it is substituted with the space over the ceiling, humidity in the space will increase by the influence of capacity of ventilation fan, strength of wind blowing against the out door air louver, weather (rainy day) and others.

a) Moisture in air is likely to condense over the external plates of the unit and to drip on the ceiling. Unit should be operated under the conditions as listed in the above table and within the limitation of wind volume. When the building is a concrete structure, especially immediately after the construction, humidity tends to rise even if the space over the ceiling is not substituted in place of a duct. In such occasion, it is necessary to insulate the entire unit with glass wool (25mm). (Use a wire net or equivalent to hold the glass wool in place.)

b) It may run out the allowable limit of unit operation (Example: When outdoor air temperature is 35°C DB, suction air temperature is 27°C WB) and it could result in such troubles as compressor overload, etc..

c) There is a possibility that the blow air volume may exceed the allowable range of operation due to the capacity of ventilation fan or strength of wind blowing against external air louver so that drainage from heat exchanger may fall to reach the drain pan but leak outside (Example: drip on to the ceiling) with consequential water leakage in the room.

② If vibration damping is not conducted between the unit and the duct, and between the unit and the slab, vibration will be transmitted to the duct and vibration noise may occur. Also, vibration may be transmitted from the unit to the slab. Vibration damping must be performed.

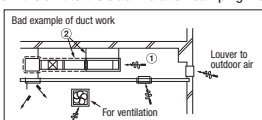


⑤ Duct work (continued)

Connecting the air intake/vent ducts

① Fresh Air Intake


[for air intake duct only]

- Use the side fresh air intake hole, or supply through a part of the suction duct.

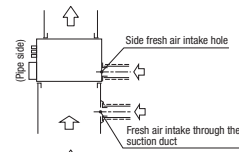

[for simultaneous air intake/vent]


- Intake air through the suction duct. (the side cannot be used)

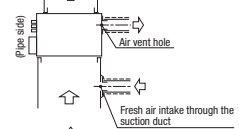

② Air Vent

- Use the side air vent hole.

(always use together with the air intake)

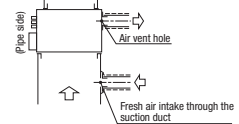

- Insulate the duct to protect it from dew condensation.


⑥ Refrigerant pipe

Caution

- Be sure to use new pipes for the refrigerant pipes. Use the flare nut attached to the product or a nut compatible with JIS B 8607, Class 2.

Regarding whether existing pipes can be reused or not, and the washing method, refer to the instruction manual of the outdoor unit, catalogue or technical data.

- 1) In case of reuse: Do not use old flare nut, but use the one attached to the unit or compatible with JIS B 8607, Class 2.
- 2) In case of reuse: Flare the end of pipe replaced partially for R410A.

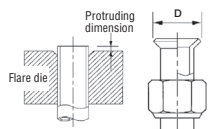

Pipe dia. d mm	Min. pipe wall thickness mm	Protruding dimension for flare, mm		Flare O.D. D mm	Flare nut tightening torque N·m
		For R410A	Conventional tool		
6.35	0.8	0-0.5	0.7-1.3	8.9 - 9.1	14 - 18
9.52	0.8			12.8 - 13.2	24 - 42
12.7	0.8			16.2 - 16.6	49 - 61
15.88	1			19.3 - 19.7	68 - 82
19.05	1.2			23.6 - 24.0	100 - 120

- Use phosphorus deoxidized copper alloy seamless pipe (C1220T specified in JIS H 3300) for refrigerant pipe installation.

In addition, make sure there is no damage both inside and outside of the pipe, and no harmful substances such as sulfur, oxide, dust or a contaminant stuck on the pipes.


- Do not use any refrigerant other than R410A.

Using other refrigerant except R410A (R22 etc.) may degrade inside refrigeration oil. And air getting into refrigeration circuit may cause over-pressure and resultant it may result in bursting, etc.

- Store the copper pipes indoors and seal the both end of them until they are brazed in order to avoid any dust, dirt or water getting into pipe. Otherwise it will cause degradation of refrigeration oil and compressor breakdown, etc.

- Use special tools for R410A refrigerant.

Piping work



When conducting piping work, make sure to allow the pipes to be aligned in a straight line for at least 250 mm, as shown in the left illustration. (This is necessary for the drain pump to function)


Work procedure

1. Remove the flare nut and blind flanges on the pipe of the indoor unit.
 - ※ Make sure to loosen the flare nut with holding the nut on pipe side with a spanner and giving torque to the nut with another spanner in order to avoid unexpected stress to the copper pipe, and then remove them. (Gas may come out at this time, but it is not abnormal.)
 - Pay attention whether the flare nut pops out. (as the indoor unit is sometimes pressured.)
2. Make a flare on liquid pipe and gas pipe, and connect the refrigeration pipes on the indoor unit.
 - ※ Bend radius of pipe must be 4D or larger. Once a pipe is bent, do not readjust the bending. Do not twist a pipe or collapse to 2/3D or smaller.
 - ※ Do a flare connection as follows:
 - Make sure to loosen the flare nut with holding the nut on pipe side with a spanner and giving torque to the nut with another spanner in order to avoid unexpected stress to the copper pipe, and then remove them.
 - When fastening the flare nut, align the refrigeration pipe with the center of flare nut, screw the nut for 3-4 times by hand and then tighten it by spanner with the specified torque mentioned in the table above. Make sure to hold the pipe on the indoor unit securely by a spanner when tightening the nut in order to avoid unexpected stress on the copper pipe.
3. Cover the flare connection part of the indoor unit with attached insulation material after a gas leakage inspection, and tighten both ends with attached straps.
 - Make sure to insulate both gas pipes and liquid pipes completely.
 - ※ Incomplete insulation may cause dew condensation or water dropping.
 - Use heat-resistant (120 °C or more) insulations on the gas side pipes.
 - In case of using at high humidity condition, reinforce insulation of refrigerant pipes. Surface of insulation may cause dew condition or water dropping, if insulations are not reinforced.

⑥ Refrigerant pipe (continued)

4. Refrigerant is charged in the outdoor unit.
As for the additional refrigerant charge for the indoor unit and piping, refer to the installation manual attached to the outdoor unit.

Caution:
Refrigerating machine oil should not be applied to the threads of union or external surface of flare. It is because, even if the same tightening torque is applied, the oil is likely to decrease the slide friction force on the threads and increase, in turn, the axial component force so that it could crack the flare by the stress corrosion.
Refrigerating machine oil may be applied to the internal surface of flare only.

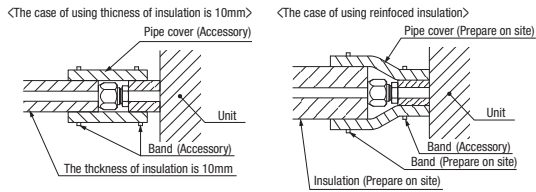


⑦ Drain pipe

Caution


- Install the drain pipe according to the installation manual in order to drain properly. Imperfection in draining may cause flood indoors and wetting the household goods, etc.
- Do not put the drain pipe directly into the ditch where toxic gas such as sulfur, the other harmful and inflammable gas is generated. Toxic gas would flow into the room and it would cause serious damage to user's health and safety (some poisoning or deficiency of oxygen). In addition, it may cause corrosion of heat exchanger and bad smell.
- Connect the pipe securely to avoid water leakage from the joint.
- Insulate the pipe properly to avoid condensation drop.
- Check if the water can flow out properly from both the drain outlet on the indoor unit and the end of the drain pipe after installation.
- Make sure to make descending slope of greater than 1/100 and do not make up-down bend and/or trap in the midway. In addition, do not put air vent on the drain pipe. Check if water is drained out properly from the pipe during commissioning. Also, keep sufficient space for inspection and maintenance.

Work procedure


1. Make sure to insert the drain hose (the end made of soft PVC) to the end of the step part of drain socket.
Attach the hose clamp to the drain hose around 10mm from the end, and fasten the screw within 5mm left to the nut.
 - Do not apply adhesives on this end.
 - Do not use acetone-based adhesives to connect to the drain socket.

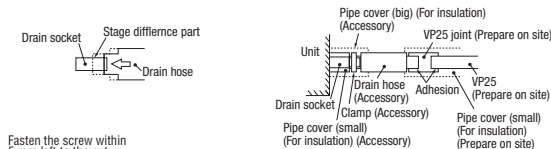

2. Prepare a joint for connecting VP25 pipe, adhere and connect the joint to the drain hose (the end made of rigid PVC), and adhere and connect VP25 pipe (prepare on site).
 ※As for drain pipe, apply VP25 made of rigid PVC which is on the market.
 - Make sure that the adhesive will not get into the supplied drain hose. It may cause the flexible part broken after the adhesive is dried up and gets rigid.
 - The flexible drain hose is intended to absorb a small difference at installation of the unit or drain pipes. Intentional bending, expanding may cause the flexible hose broken and water leakage.




- As for drain pipe, apply VP25 (OD32).
If apply PVC25 (OD25), connect the expanded connector to the drain hose, with adhesive. (Multi unit only)

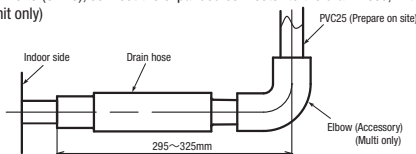


⑦ Drain pipe (continued)

3. Make sure to make descending slope of greater than 1/100 and do not make up-down bend and/or trap in the midway.
 - Pay attention not to give stress on the pipe on the indoor unit side, and support and fix the pipe as close place to the unit as possible when connecting the drain pipe.
 - Do not set up air vent.




- When sharing a drain pipe for more than one unit, lay the main pipe 100mm below the drain outlet of the unit. In addition, select VP30 or bigger size for main drain pipe.

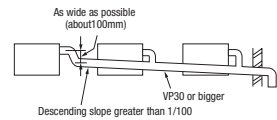

4. Insulate the drain pipe.
 - Be sure to insulate the drain socket and rigid PVC pipe installed indoors otherwise it may cause dew condensation and water leakage.
 ※After drainage test implementation, cover the drain socket part with pipe cover (small size), then use the pipe cover (big size) to cover the pipe cover (small size), clamps and part of the drain hose, and fix and wrap it with tapes to wrap and make joint part gapless.

Drain up

- The position for drain pipe outlet can be raised up to 600mm above the ceiling. Use elbows for installation to avoid obstacles inside ceiling. If the horizontal drain pipe is too long before vertical pipe, the backflow of water will increase when the unit is stopped, and it may cause overflow of water from the drain pan on the indoor unit. In order to avoid overflow, keep the horizontal pipe length and offset of the pipe within the limit shown in the figure below.

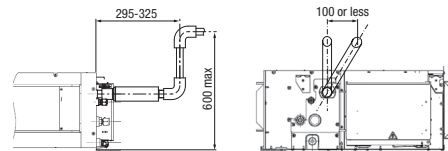


Otherwise, the construction point makes it same as drain pipe construction.

Drain test

1. Conduct a drain test after completion of the electrical work.
2. During the trial, make sure that drain flows properly through the piping and that no water leaks from connections.
3. In case of a new building, conduct the test before it is furnished with the ceiling.
4. Be sure to conduct this test even when the unit is installed in the heating season.


Procedures

1. Supply about 1000 cc of water to the unit through the air outlet by using a feed water pump.
2. Check the drain while cooling operation.

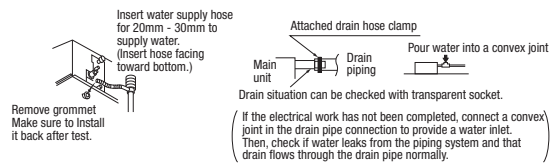

Outline of bottom drain piping work


- If the bottom drain piping can be done with a descending gradient (1/50-1/100), it is possible to connect the pipes as shown in the drawing below.

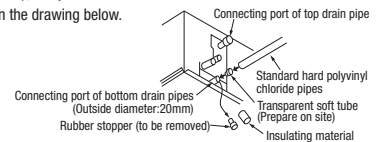

Uncoupling the drain motor connector

- Uncouple the connector CnR for the drain motor as illustrated in the drawing on the right.


(Note: If the unit is run with the connector coupled, drain water will be discharged from the upper drain pipe joint, causing a water leak.)




⑧ Wiring-out position and wiring connection

- Electrical installation work must be performed according to the installation manual by an electrical installation service provider qualified by a power provider of the country, and be executed according to the technical standards and other regulations applicable to electrical installation in the country.
Be sure to use an exclusive circuit.
- Use specified cord, fasten the wiring to the terminal securely, and hold the cord securely in order not to apply unexpected stress on the terminal.
- Do not put both power source line and signal line on the same route. It may cause miscommunication and malfunction.
- For the details of electrical wiring work, see attached instruction manual for electrical wiring work.
 1. Remove a lid of the control box (2 screws).
 2. Hold each wiring inside the unit and fasten them to terminal block securely.
 3. Fix the wiring with clamps.
 4. Install the removed parts back to original place.

Single unit wiring connection

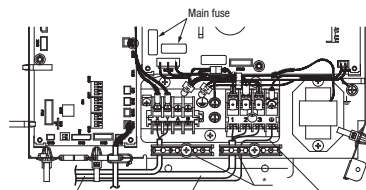

Multi unit wiring connection

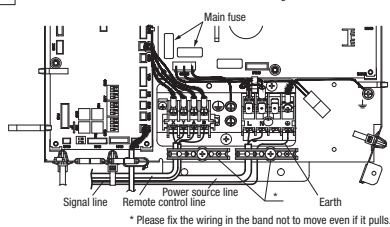

Main fuse specification

Model	Specification	Port No.
22-56	T3.15A L250V	SSA564A149AF
71-160	T5A L250V	SSA564A149AM

* Please fix the wiring in the band not to move even if it pulls.

⑨ External static pressure setting (continued)

- How to start automatic setting
 - ①, ② Same setting as MANUAL SETTING.
 - ③ Select [AUT] by using button and press button.
 - ② After setting E.S.P. at "AUT", operate unit in FAN mode with certain fan speed (Lo-Uh).

Indoor unit fan will run automatically and recognize E.S.P. by itself.
The operation for automatic E.S.P. recognition will last about 6 minutes, and it will be stopped after recognition is completed.

Caution

- Be sure to execute AUTOMATIC SETTING by remote control AFTER ducting work is completed.
When duct specification is changed after AUTOMATIC SETTING, be sure to execute AUTOMATIC SETTING again after power resetting and turning on again.
- Be sure to execute AUTOMATIC SETTING before trial cooling operation.
(See ELECTRICAL WIRING WORK INSTRUCTION about trial cooling operation)
- Before AUTOMATIC SETTING, be sure to check that return air filter in duct is installed and damper is opened.
Wrong procedure causes excessive air flow or water drop blown out.

Notice

- During operation for automatic recognition (the Auto Operation), fan rotates with certain speeds regardless of set fan speed by remote control.
- When duct is set with low static pressure (around 10-50Pa), even if indoor unit operate with higher air flow volume than rated one, but it is not abnormal.
- When you changed operation mode or stop operation with ON/OFF button during Auto Operation, the Auto operation will be canceled.
- In such case, be sure to execute AUTOMATIC SETTING again according to above procedure.

⑩ Check list after installation

- Check the following items after all installation work completed.

Check if	Expected trouble	Check
The indoor and outdoor units are fixed securely?	Falling, vibration, noise	
Inspection for leakage is done?	Insufficient capacity	
Insulation work is properly done?	Water leakage	
Water is drained properly?	Water leakage	
Power source voltage is same as mentioned in the model name plate?	PCB burnt out, not working at all	
No mis-wiring or mis-connection of piping?	PCB burnt out, not working at all	
Earth wiring is connected properly?	Electric shock	
Cable size comply with specified size?	PCB burnt out, not working at all	
Any obstacle blocks air flow on air inlet and outlet?	Insufficient capacity	
Is setting of E.S.P. finished?	Excessive air flow, water drop blow out	

⑨ External static pressure setting

You can set External Static Pressure (E.S.P.) by either method of MANUAL SETTING or AUTOMATIC SETTING by remote control.
Indoor unit will control fan-speed to keep rated air flow volume at each fan speed setting (Lo-Uh)

1. MANUAL SETTING

You can set required E.S.P. by wired remote control that calculated with the set air flow rate and pressure loss of the duct connected.

Select No.1-10 (10Pa-100Pa) from following table according to calculation result.

Refer to technical manual for details of air flow characteristic.

Setting No.	1	2	3	4	5	6	7	8	9	10
External Static Pressure (Pa)	10	20	30	40	50	60	70	80	90	100

※ When you set No.11-19 by remote control, unit will control fan-speed with setting of No.10 Factory default is at No.5.

- How to set E.S.P. by wired remote control

- ① Push "" marked button(E.S.P button).
- ② Select indoor unit No. by using button.
- ③ Select setting No. by using button and set E.S.P. by button.
See detailed procedure in technical manual.

Notice

You can NOT set E.S.P. by wireless remote control.

E.S.P. button



Caution

Be sure to set E.S.P. according to actual duct connected.
Wrong settings causes excessive air flow volume or water drop blown out.

2. AUTOMATIC SETTING


Indoor unit will recognize E.S.P. by itself automatically and select appropriate fan speed No.1-10.

(b) Replacement procedure of the fan unit


Notes(1) The unit is a heavy item. It must be supported securely and handled with care not to drop when it is necessary to replace.
 (2) For the maintenance space, refer to page 74.

(i) Model FDUM71VF1

- 1) Remove the control box and the side panel, and remove the screws marked in the circles (2 places) in the figure.

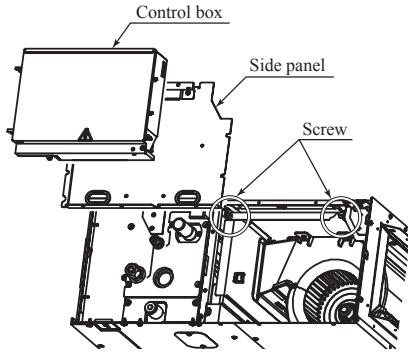


- 2) Take out the fan unit in the arrow direction.

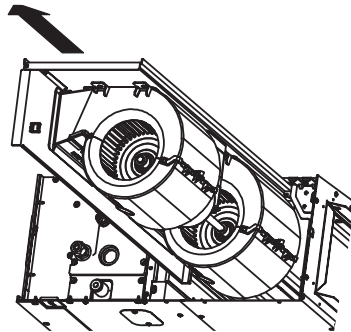


(ii) Model FDUM100VF2


- 1) Remove the control box and the side panel, and remove the screws marked in the circles (2 places) from the unit located at the near side.

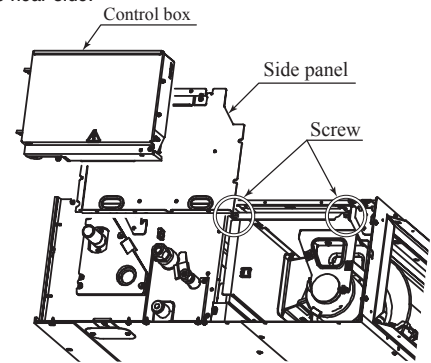


- 2) Take out the fan unit located at the near side in the arrow direction.

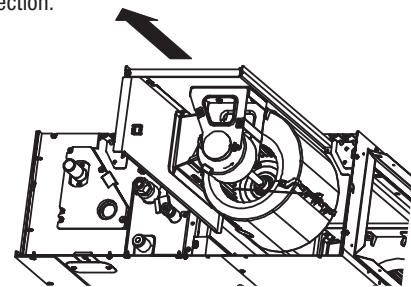

- 3) Remove the screws marked in the circles (2 places) from the fan unit located at the far side.

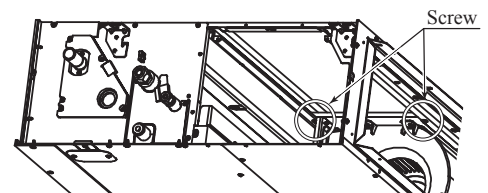



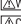


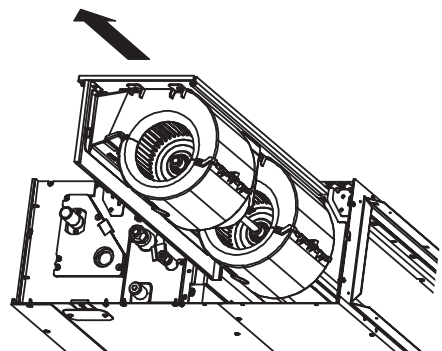
- 4) Take out the fan unit in the arrow direction.







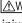




(4) Ceiling suspended type (FDE)

This manual is for the installation of an indoor unit.
For electrical wiring work (Indoor), refer to page 96. For remote control installation, refer to page 104. For wireless kit installation, refer to page 146. For electrical wiring work (Outdoor) and refrigerant pipe work installation for outdoor unit, refer to page 116.































SAFETY PRECAUTIONS

- Read the "SAFETY PRECAUTIONS" carefully first of all and then strictly follow it during the installation work in order to protect yourself.
- The precautionary items mentioned below are distinguished into two levels,  **WARNING** and  **CAUTION**.
 **WARNING**: Wrong installation would cause serious consequences such as injuries or death.
 **CAUTION**: Wrong installation might cause serious consequences depending on circumstances. Both mentions the important items to protect your health and safety so strictly follow them by any means.
- The meanings of "Marks" used here are as shown as follows:
 Never do it under any circumstances.  Always do it according to the instruction.
- After completing the installation, do commissioning to confirm there are no abnormalities, and explain to the customers about "SAFETY PRECAUTIONS", correct operation method and maintenance method (air filter cleaning, operation method and temperature setting method) with user's manual of this unit. Ask your customers to keep this installation manual together with the user's manual. Also, ask them to hand over the user's manual to the new user when the owner is changed.

WARNING

- **Installation should be performed by the specialist.** 
If you install the unit by yourself, it may lead to serious trouble such as water leakage, electric shock, fire, and injury due to overturn of the unit.
- **Install the system correctly according to these installation manuals.** 
Improper installation may cause explosion, injury, water leakage, electric shock, and fire.
- **When installing in small rooms, take prevention measures not to exceed the density limit of refrigerant in the event of leakage, referred by the formula (accordance with ISO5149).** 
If the density of refrigerant exceeds the limit, please consult the dealer and install the ventilation system, otherwise lack of oxygen can occur, which can cause serious accidents.
- **Use the genuine accessories and the specified parts for installation.** 
If parts unspecified by our company are used it could cause water leakage, electric shock, fire, and injury due to overturn of the unit.
- **Ventilate the working area well in case the refrigerant leaks during installation.** 
If the refrigerant contacts the fire, toxic gas is produced.
- **Install the unit in a location that can hold heavy weight.** 
Improper installation may cause the unit to fall leading to accidents.
- **Install the unit properly in order to be able to withstand strong winds such as typhoons, and earthquakes.** 
Improper installation may cause the unit to fall leading to accidents.
- **Do not mix air in to the cooling cycle on installation or removal of the air-conditioner.** 
If air is mixed in, the pressure in the cooling cycle will rise abnormally and may cause explosion and injuries.
- **Be sure to have the electrical wiring work done by qualified electrical installer, and use exclusive circuit.** 
Power source with insufficient capacity and improper work can cause electric shock and fire.
- **Use specified wire for electrical wiring, fasten the wiring to the terminal securely, and hold the cable securely in order not to apply unexpected stress on the terminal.** 
Loose connections or hold could result in abnormal heat generation or fire.
- **Arrange the electrical wires in the control box properly to prevent them from rising. Fit the lid of the services panel properly.** 
Improper fitting may cause abnormal heat and fire.
- **Check for refrigerant gas leakage after installation is completed.** 
If the refrigerant gas leaks into the house and comes in contact with a fan heater, a stove, or an oven, toxic gas is produced.
- **Use the specified pipe, flare nut, and tools for R410A.** 
Using existing parts (R22) could cause the unit failure and serious accident due to explosion of the cooling cycle.
- **Tighten the flare nut according to the specified method by with torque wrench.** 
If the flare nut were tightened with excess torque, it could cause burst and refrigerant leakage after a long period.
- **Do not put the drainage pipe directly into drainage channels where poisonous gases such as sulfide gas can occur.** 
Poisonous gases will flow into the room through drainage pipe and seriously affect the user's health and safety. This can also cause the corrosion of the indoor unit and a resultant unit failure or refrigerant leak.
- **Connect the pipes for refrigeration circuit securely in installation work before compressor is operated.** 
If the compressor is operated when the service valve is open without connecting the pipe, it could cause explosion and injuries due to abnormal high pressure in the system.
- **Stop the compressor before removing the pipe after shutting the service valve on pump down work.** 
If the pipe is removed when the compressor is in operation with the service valve open, air would be mixed in the refrigeration circuit and it could cause explosion and injuries due to abnormal high pressure in the cooling cycle.
- **Only use prescribed option parts. The installation must be carried out by the qualified installer.** 
If you install the system by yourself, it can cause serious trouble such as water leaks, electric shocks, fire.
- **Do not repair by yourself. And consult with the dealer about repair.** 
Improper repair may cause water leakage, electric shock or fire.
- **Consult the dealer or a specialist about removal of the air-conditioner.** 
Improper installation may cause water leakage, electric shock or fire.
- **Turn off the power source during servicing or inspection work.** 
If the power is supplied during servicing or inspection work, it could cause electric shock and injury by the operating fan.
- **Do not run the unit when the panel or protection guard are taken off.** 
Touching the rotating equipment, hot surface, or high voltage section could cause an injury to be caught in the machine, to get burned, or electric shock.
- **Shut off the power before electrical wiring work.** 
It could cause electric shock, unit failure and improper running.


CAUTION

- **Perform earth wiring surely.** 
Do not connect the earth wiring to the gas pipe, water pipe, lightning rod and telephone earth wiring. Improper earth could cause unit failure, electric shock and fire due to a short circuit.
- **Earth leakage breaker must be installed.** 
If the earth leakage breaker is not installed, it can cause fire and electric shocks.
- **Use the circuit breaker of correct capacity. Circuit breaker should be the one that disconnect all poles under over current.** 
Using the incorrect one could cause the system failure and fire.
- **Do not use any materials other than a fuse of correct capacity where a fuse should be used.** 
Connecting the circuit by wire or copper wire could cause unit failure and fire.
- **Do not install the indoor unit near the location where there is possibility of flammable gas leakages.** 
If the gas leaks and gathers around the unit, it could cause fire.
- **Do not install and use the unit where corrosive gas (such as sulfurous acid gas etc.) or flammable gas (such as thinner, petroleum etc.) may be generated or accumulated, or volatile flammable substances are handled.** 
It could cause the corrosion of heat exchanger, breakage of plastic parts etc. And inflammable gas could cause fire.
- **Secure a space for installation, inspection and maintenance specified in the manual.** 
Insufficient space can result in accident such as personal injury due to falling from the installation place.
- **Do not use the indoor unit at the place where water splashes such as laundry.** 
Indoor unit is not waterproof. It could cause electric shock and fire.
- **Do not use the indoor unit for a special purpose such as food storage, cooling for precision instrument, preservation of animals, plants, and a work of art.** 
It could cause the damage of the items.
- **Do not install nor use the system near equipments which generate electromagnetic wave or high harmonics.** 
Equipments like inverter equipment, private power generator, high-frequency medical equipment, or telecommunication equipment might influence the air-conditioner and cause a malfunction and breakdown. Or the air-conditioner might influence medical equipments or telecommunication equipments, and obstruct their medical activity or cause jamming.
- **Do not install the remote control at the direct sunlight.** 
It could cause breakdown or deformation of the remote control.
- **Do not install the indoor unit at the place listed below.** 
 - Places where flammable gas could leak.
 - Places where carbon fiber, metal powder or any powder is floated.
 - Place where the substances which affect the air-conditioner are generated such as sulfide gas, chloride gas, acid, alkali or ammoniac atmospheres.
 - Places exposed to oil mist or steam directly.
 - On vehicles and ships
 - Places where machinery which generates high harmonics is used.
 - Places where cosmetics or special sprays are frequently used.
 - Highly salted area such as beach.
 - Heavy snow area
 - Places where the system is affected by smoke from a chimney.
 - Altitude over 1000m
- **Do not install the indoor unit in the locations listed below (Be sure to install the indoor unit according to the installation manual for each model because each indoor unit has each limitation)** 
 - Locations with any obstacles which can prevent inlet and outlet air of the unit
 - Locations where vibration can be amplified due to insufficient strength of structure.
 - Locations where the infrared receiver is exposed to the direct sunlight or the strong light beam. (in case of the infrared specification unit)
 - Locations where an equipment affected by high harmonics is placed. (TV set or radio receiver is placed within 5m)
 - Locations where drainage cannot run off safely.
 - It can affect performance or function and etc..
- **Do not put any valuables which will break down by getting wet under the air-conditioner.** 
Condensation could drop when the relative humidity is higher than 80% or drain pipe is clogged, and it damages user's belongings.
- **Do not use the base frame for the outdoor unit which is corroded or damaged after a long period of use.** 
It could cause the unit falling down and injury.
- **Pay attention not to damage the drain pan by weld sputter when brazing work is done near the unit.** 
If sputter entered into the unit during brazing work, it could cause damage (pinhole) of drain pan and leakage of water. To avoid damaging, keep the indoor unit packed or cover the indoor unit.
- **Install the drain pipe to drain the water surely according to the installation manual.** 
Improper connection of the drain pipe may cause dropping water into room and damaging user's belongings.
- **Do not share the drain pipe for indoor unit and GHP (Gas Heat Pump system) outdoor unit.** 
Toxic exhaust gas would flow into room and it might cause serious damage (some poisoning or deficiency of oxygen) to user's health and safety.
- **Be sure to perform air tightness test by pressurizing with nitrogen gas after completed refrigerant piping work.** 
If the density of refrigerant exceeds the limit in the event of refrigerant leakage in the small room, lack of oxygen can occur, which can cause serious accidents.
- **For drain pipe installation, be sure to make descending slope of greater than 1/100, not to make traps, and not to make air-bleeding.** 
Check if the drainage is correctly done during commissioning and ensure the space for inspection and maintenance.
- **Ensure the insulation on the pipes for refrigeration circuit so as not to condense water.** 
Incomplete insulation could cause condensation and it would wet ceiling, floor, and any other valuables.
- **Do not install the outdoor unit where is likely to be a nest for insects and small animals.** 
Insects and small animals could come into the electronic components and cause breakdown and fire. Instruct the user to keep the surroundings clean.
- **Pay extra attention, carrying the unit by hand.** 
Carry the unit with 2 people if it is heavier than 20kg. Do not use the plastic straps but the grabbing place, moving the unit by hand. Use protective gloves in order to avoid injury by the aluminum fin.
- **Make sure to dispose of the packaging material.** 
Leaving the materials may cause injury as metals like nail and woods are used in the package.
- **Do not operate the system without the air filter.** 
It may cause the breakdown of the system due to clogging of the heat exchanger.
- **Do not touch any button with wet hands.** 
It could cause electric shock.
- **Do not touch the refrigerant piping with bare hands when in operation.** 
The pipe during operation would become very hot or cold according to the operating condition, and it could cause a burn or frostbite.
- **Do not clean up the air-conditioner with water.** 
It could cause electric shock.
- **Do not turn off the power source immediately after stopping the operation.** 
Be sure to wait for more than 5 minutes. Otherwise it could cause water leakage or breakdown.
- **Do not control the operation with the circuit breaker.** 
It could cause fire or water leakage. In addition, the fan may start operation unexpectedly and it may cause injury.

① Before installation

- Install correctly according to the installation manual.
- Confirm the following points:
 - Unit type/Power source specification
 - Pipes/Wires/Small parts
 - Accessory items


Accessory item		For unit hanging		For refrigerant pipe				For drain pipe				For return pipe	
Part	Material	Paper pattern	Pipe cover (large)	Pipe cover (small)	Strap	Drain hose (with clamp)	Hose clamp	Fixing bracket	Screw	Heat insulation	Screw	Part	Material
8	1	1	1	4	1	1	1	2	1	4			
For unit hanging and adjustment	For heat insulation of gas pipe	For heat insulation of liquid pipe	For fixing of pipe cover	For drain pipe connection	For drain hose mounting	For fixing of drain hose	For fixing of fixing bracket	For drain hose	For fixing air return grille				



② Selection of installation location for the indoor unit

- Select the suitable areas to install the unit under approval of the user.
 - Areas where the indoor unit can deliver hot and cold wind sufficiently. Suggest to the user to use a circulator if the ceiling height is over 3m to avoid warm air being accumulated on the ceiling.
 - Areas where there is enough space to install and service.
 - Areas where it can be drained properly. Areas where drain pipe descending slope can be taken.
 - Areas where there is no obstruction of airflow on both air return grille and air supply port.
 - Areas where fire alarm will not be accidentally activated by the air-conditioner.
 - Areas where the supply air does not short-circuit.
 - Areas where it is not influenced by draft air.
 - Areas not exposed to direct sunlight.
 - Areas where dew point is lower than around 23°C and relative humidity is lower than 80%. This indoor unit is tested under the condition of JIS (Japan Industrial Standard) high humidity condition and confirmed there is no problem. However, there is some risk of condensation drop if the air-conditioner is operated under the severer condition than mentioned above.
 - Areas where TV and radio stays away more than 1m. (It could cause jamming and noise.)
 - Areas where any items which will be damaged by getting wet are not placed such as food, table wares, server, or medical equipment under the unit.
 - Areas where there is no influence by the heat which cookware generates.
 - Areas where not exposed to oil mist, powder and/or steam directly such as above fryer.
- Check if the place where the air-conditioner is installed can hold the weight of the unit. If it is not able to hold, reinforce the structure with boards and beams strong enough to hold it. If the strength is not enough, it could cause injury due to unit falling.
- When plural indoor units are installed nearby, keep them away for more than 4 to 5m.


Space for installation and service

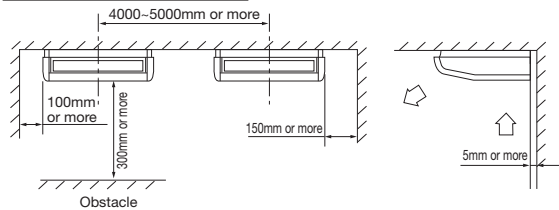


③ Preparation before installation

- If suspension bolt becomes longer, do reinforcement of earthquake resistant.
 - For grid ceiling
 - When suspension bolt length is over 500mm, or the gap between the ceiling and roof is over 700mm, apply earthquake resistant brace to the bolt.
 - In case the unit is hanged directly from the slab and is installed on the ceiling plane which has enough strength.
 - When suspension bolt length is over 1000mm, apply the earthquake resistant brace to the bolt.
- Prepare four (4) sets of suspension bolt, nut and spring washer (M10) on site.

Pitch of suspension bolts and pipe position

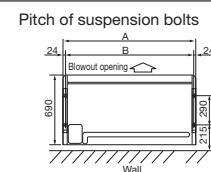


Location of pipe outlets

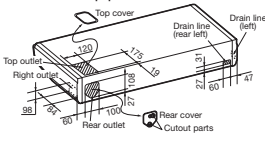

③ Preparation before installation (continued)

Series	type	(mm)	
		A	B
Single Split (PAC) series	40 to 50type	1070	1022
	60 to 71type	1320	1272
	100 to 140type	1620	1572
VRF (IX) series	36 to 56type	1070	1022
	71type	1320	1272
	112 to 140type	1620	1572

Pipe position



Haulage

- Move the box as close to the installation area as possible packed.
- If it must be unpacked, wrap the unit with a nylon sling, and be careful not to damage the unit.
 - ※ Do not hold fragile plastic parts, such as the side panel, blow louver, etc.
- If you need to lay the unit on a floor after unpacking, always put it with the intake grille facing upward.




Preparation before installation

- Remove the air return grille.**
Slide stoppers (4 places) of the catches, then pull out the pins (4 or 6 places).
- Remove the side panel.**
Remove the screw and detach the side panel by sliding it toward the direction indicated by the arrow mark.
Side panel screw (1 each on the left and right) (M4)
- Remove the hanging plate.**
Remove the screw, and then loosen the fixing bolts.
Unscrew 8-12mm
Hanging plate
Indoor unit
Hanging plate screw (M4)
Hanging plate fixing bolts (M8)
Hanging plate


④ Installation of indoor unit

Work procedure

- Select the suspension bolt locations and the pipe hole location.
 - Use enclosed paper pattern as a reference, and drill the holes for the suspension bolts and pipe.
 - ※ Decide the locations based on direct measurements.
 - Once the locations are properly placed, the paper pattern can be removed.
- Install the suspension bolts in place.
- Fix with 4 suspension bolts, which can endure load of 500N.
- Check the measurements given at the right figure for the length of the suspension bolts.
- Fasten the hanging plate onto the suspension bolts.

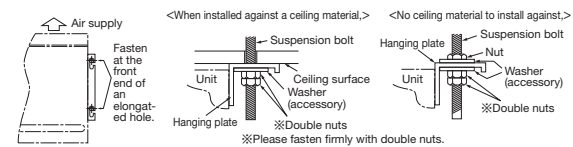

- Install the unit to the hanging plate. (See the figure at right.)
 - Slide the unit in from front side to get it hanged on the hanging plate with the bolts.
 - Fasten the four fixing bolts (M8: 2 each on the left and right sides) firmly.
 - Fasten the two screws (M4: 1 each on the left and right sides).

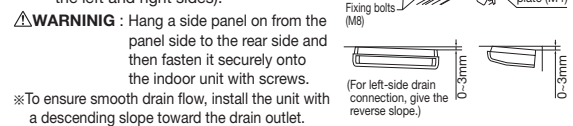

▲ **WARNING** : Hang a side panel on from the panel side to the rear side and then fasten it securely onto the indoor unit with screws.

※ To ensure smooth drain flow, install the unit with a descending slope toward the drain outlet.

▲ **CAUTION** : Do not give the reversed slope, which may cause water leaks.

5 Refrigerant pipe

Caution

- Be sure to use new pipes for the refrigerant pipes. Use the flare nut attached to the product or a nut compatible with JIS B 8607, Class 2.
Regarding whether existing pipes can be reused or not, and the washing method, refer to the instruction manual of the outdoor unit, catalogue or technical data.
- 1) In case of reuse: Do not use old flare nut, but use the one attached to the unit or compatible with JIS B 8607, Class 2.

Protruding dimension D	Pipe dia. d mm	Min. pipe wall thickness mm	Protruding dimension for flare, mm		Flare O.D. D mm	Flare nut tightening torque N·m
			Rigid (Clutch type) For R410A	Conventional tool		
Flare die	6.35	0.8	0 - 0.5	0.7 - 1.3	8.9 - 9.1	14 - 18
	9.52	0.8			12.8 - 13.2	34 - 42
	12.7	0.8			16.2 - 16.6	49 - 61
	15.88	1			19.3 - 19.7	68 - 82
	19.05	1.2			23.6 - 24.0	100 - 120

- Use phosphorus deoxidized copper alloy seamless pipe (C1220T specified in JIS H 3300) for refrigeration pipe installation. In addition, make sure there is no damage both inside and outside of the pipe, and no harmful substances such as sulfur, oxide, dust or a contaminant stuck on the pipes.
- Do not use any refrigerant other than R410A.
Using other refrigerant except R410A (R22 etc.) may degrade inside refrigeration oil. And air getting into refrigeration circuit may cause over-pressure and resultant it may result in bursting, etc.
- Store the copper pipes indoors and seal the both end of them until they are brazed in order to avoid any dust, dirt or water getting into pipe. Otherwise it will cause degradation of refrigeration oil and compressor breakdown, etc.
- Use special tools for R410A refrigerant.


Work procedure

- Remove the flare nut and blind flanges on the pipe of the indoor unit.
 - ※ Make sure to loosen the flare nut with holding the nut on pipe side with a spanner and giving torque to the nut with another spanner in order to avoid unexpected stress to the copper pipe, and then remove them. (Gas may come out at this time, but it is not abnormal.)
 - Pay attention whether the flare nut pops out. (as the indoor unit is sometimes pressured.)
- Make a flare on liquid pipe and gas pipe, and connect the refrigeration pipes on the indoor unit.
 - When pulling out pipes backward or upward, install them passing through the attached cover together with the electrical cabling.
 - Seal the gap with putty, or other, to protect from dust, etc.
 - ※ Bend radius of pipe must be 4D or larger. Once a pipe is bent, do not readjust the bending. Do not twist a pipe or collapse to 2/3D or smaller.
 - ※ Do a flare connection as follows:
 - Make sure to loosen the flare nut with holding the nut on pipe side with a spanner and giving torque to the nut with another spanner in order to avoid unexpected stress to the copper pipe, and then remove them.
 - When fastening the flare nut, align the refrigeration pipe with the center of flare nut, screw the nut for 3-4 times by hand and then tighten it by spanner with the specified torque mentioned in the table above. Make sure to hold the pipe on the indoor unit securely by a spanner when tightening the nut in order to avoid unexpected stress on the copper pipe.
- Cover the flare connection part of the indoor unit with attached insulation material after a gas leakage inspection, and tighten both ends with attached straps.
 - Make sure to insulate both gas pipes and liquid pipes completely.
 - ※ Incomplete insulation may cause dew condensation or water drooping.
 - Use heat-resistant (120 °C or more) insulations on the gas side pipes.
 - In case of using at high humidity condition, reinforce insulation of refrigerant pipes. Surface of insulation may cause dew condition or water drooping, if insulations are not reinforced.
- Refrigerant is charged in the outdoor unit.
As for the additional refrigerant charge for the indoor unit and piping, refer to the installation manual attached to the outdoor unit.


Caution:

Refrigerating machine oil should not be applied to the threads of union or external surface of flare. It is because, even if the same tightening torque is applied, the oil is likely to decrease the slide friction force on the threads and increase, in turn, the axial component force so that it could crack the flare by the stress corrosion.
Refrigerating machine oil may be applied to the internal surface of flare only.

<The case of using thickness of insulation is 10mm>

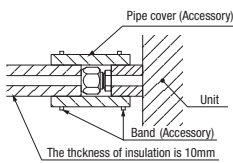


<The case of using reinforced insulation>

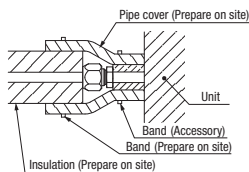


The pipe can be connected from three different directions. (back, reight, top)

- When the pipe is routed through the back.
If the bracket is removed, piping work will become easy.
※ After piping, reinstall the removed bracket.

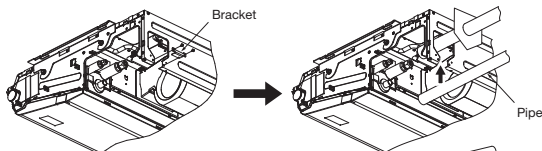

- When the pipe is routed through the top.
Cut the removed top cover, and install to the rear panel instead of rear cover.

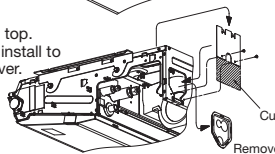

6 Drain pipe




- The drain pipes may pull out either from back, right or left side.

Caution

- Install the drain pipe according to the installation manual in order to drain properly. Imperfection in draining may cause flood indoors and wetting the household goods, etc.
- Do not put the drain pipe directly into the ditch where toxic gas such as sulfur, the other harmful and inflammable gas is generated. Toxic gas would flow into the room and it would cause serious damage to user's health and safety (some poisoning or deficiency of oxygen). In addition, it may cause corrosion of heat exchanger and bad smell.
- Connect the pipe securely to avoid water leakage from the joint.
- Insulate the pipe properly to avoid condensation drop.
- Check if the water can flow out properly from both the drain outlet on the indoor unit and the end of the drain pipe after installation.
- Make sure to make descending slope of greater than 1/100 and do not make up-down bend and/or trap in the midway. In addition, do not put air vent on the drain pipe. Check if water is drained out properly from the pipe during commissioning. Also, keep sufficient space for inspection and maintenance.

Work procedure

- Insert drain hose completely to the base, and tighten the drain hose clamp securely. (adhesive must not be used.)
 - ※ When plumbing on the left side, move the rubber plug and the cylindrical insulating materials by the pipe connecting hole on the left side of the unit to the right side.
- Beware of a possible outflow of water that may occur upon removal of a drain plug.
- Fix the drain hose at the lowest point with a hose clamp supplied as an accessory.
 - ※ Give a drain hose a gradient of 10mm as illustrated in the right drawing by laying it without leaving a slack.
 - Take head of electrical cables so that they may not run beneath the drain hose.
- A drain hose must be clamped down with a hose clamp.
There is a possibility that drain water overflows.
- Connect VP20 (prepare on site) to drain hose. (adhesive must not be used.)
 - ※ Use commercially available rigid PVC general pipe VP20 for drain pipe.
- Do not to make the up-down bending and trap in the mid-way while assuming that the drain pipes is downhill. (more than 1/100)
 - Never set up air vent.
- Insulate the drain pipe.
 - Insulate the drain hose clamp with the heat insulation supplied as accessories.
 - When the unit is installed in a humid place, consider precautions against dew condensation such as heat insulation for the drain pipe.



Drain test

- After installation of drain pipe, make sure that drain system work in good condition and no water leakage from joint and drain pan.
- Do drain test even if installation of heating season.

7 Wiring-out position and wiring connection

- Electrical installation work must be performed according to the installation manual by an electrical installation service provider qualified by a power provider of the country, and be executed according to the technical standards and other regulations applicable to electrical installation in the country.
Be sure to use an exclusive circuit.
- Use specified cord, fasten the wiring to the terminal securely, and hold the cord securely in order not to apply unexpected stress on the terminal.
- Be sure to do D type earth work.
- For the details of electrical wiring work, see attached instruction manual for electrical wiring work.

- Remove wiring from clips.
- Remove the control box (Screw ①, ② pcs).
- Pull out the control box by sliding along the groove on the bracket (Direction A → B).
- Remove the lid of control box (Screw ②, ② pcs).
- Hold each wiring inside the unit and connect to the terminal block surely.
- Fix the wiring by clamp.
- Install the lid of control box (Screw ②, ② pcs).
- Return the control box to the original place by sliding along the groove on the bracket (Direction B → A).
- Install the removed parts at their original places.

- ※ 1 Wiring for the signal receiving section of wireless kit (Optional) are connected to the X and Y terminals on the terminal block (the site connection side), when the indoor unit is shipped from the factory.
It is not necessary to disconnect these wiring when wired remote control is connected. When the wired/wireless kits are used together, it becomes necessary to set the slaves and remote control.

⑦ Wiring-out position and wiring connection (continued)

-
-
- Control box Sliding Method

Bracket

*Disconnect each wiring from clips before pulling out the control box.
-
- Single split (PAC) Series

Power source side terminal block, Earth, Signal side terminal block, Wireless receiver line (#1), Remote control line, Wiring between indoor and outdoor unit, Wiring clamp
- VRF (KX) Series

Power source side terminal block, Earth, Signal side terminal block, Wireless receiver line (#1), Signal line (Shielded cord), Remote control line, Indoor power source line, Wiring clamp
- Control box hook

*Install it as to fit the form of control box.

⑧ Control mode switching

• The control content of indoor units can be switched in following way. (is the default setting)

Switch No.	Control Content
SW8-4	ON Indoor unit silent mode
	OFF Normal operation

⑨ Attaching the air return grille

• The air return grille must be attached when electrical cabling work is completed.

- Fix the chains tied to the air return grille onto the indoor unit with screws supplied as accessories (4 pieces).
- Close the air return grille. This completes the unit installation work.

Fix with screws, Chain, Fixed section of chain

⑩ Check list after installation

• Check the following items after all installation work completed.

Check if	Expected trouble	Check
The indoor and outdoor units are fixed securely?	Falling, vibration, noise	
Inspection for leakage is done?	Insufficient capacity	
Insulation work is properly done?	Water leakage	
Water is drained properly?	Water leakage	
Power source voltage is same as mentioned in the model name plate?	PCB burnt out, not working at all	
There is mis-wiring or mis-connection of piping?	PCB burnt out, not working at all	
Earth wiring is connected properly?	Electric shock	
Cable size comply with specified size?	PCB burnt out, not working at all	
Any obstacle blocks air flow on air inlet and outlet?	Insufficient capacity	

⑪ How to set the air flow direction

It is possible to change the movable range of the louver on the air outlet from the wired remote control. Once the top and bottom position is set, the louver will swing within the range between the top and the bottom when swing operation is chosen. It is also possible to apply different setting to each louver.

- Stop the air-conditioner and press **SET** button and **LOUVER** button simultaneously for three seconds or more.

 - The following is displayed if the number of the indoor units connected to the remote control is one. Go to step 4.
 - The following is displayed if the number of the indoor units connected to the remote control are more than one.

2•4•6•8 1
3•5•7•9
- Press **▲** or **▼** button. (selection of indoor unit) • Select the indoor unit of which the louver is set.

[EXAMPLE] 1/0001 ▲ 1/0001 ▼ 1/0002 ▲ 1/0003 ▼
- Press **SET** button. (determination of indoor unit) • Selected indoor unit is fixed.

[EXAMPLE] 1/0001 (displayed for two seconds) DATA LOADING No.1 ▲
- Press **▲** or **▼** button. (selection of louver No.) • Select the louver No. to be set according to the right figure.

[EXAMPLE] No.1 ▲ No.2 ▼ No.3 ▲ No.4 ▼
- Press **SET** button. (Determination of louver No.)

 - The louver No. to be set is confirmed and the display shows the upper limit of the movable range.

[EXAMPLE] If No.1 louver is selected, No.1 UPPER ▲ (current upper limit position)
- Press **▲** or **▼** button. (selection of upper limit position)

 - Select the upper limit of louver movable range. "position 1" is the most horizontal, and "position 6" is the most downward. "position --" is to return to the factory setting. If you need to change the setting to the default setting, use "position --".

(horizontal) ① ② ③ ④ ⑤ ⑥ (downwards)
the position of the louver
- Press **SET** button. (Fixing of the upper limit position)

 - The upper limit position is fixed and the setting position is displayed for two seconds. Then proceed to lower limit position selection display.

[EXAMPLE] No.1 UPPER (displayed for two seconds) No.1 LOUVER (shows current setting)
- Press **▲** or **▼** button. (Selection of lower limit position)

 - Select the lower limit position of louver. "position 1" is the most horizontal, and "position 6" is the most downwards. "position --" is to return to the factory setting. If you need to change the setting to the default setting, use "position --".

No.1 LOWER ▼ (the most horizontal)
No.1 LOWER2 ▲
No.1 LOWER3 ▲
No.1 LOWER4 ▲
No.1 LOWER5 ▲
No.1 LOWER6 ▲ (the most downwards)
No.1 LOWER-- ▲ (return to the default setting)
- Press **SET** button. (Fixing of the lower limit position)

 - Upper limit position and lower limit position are fixed, and the set positions are displayed for two seconds, then setting is completed.
 - After the setting is completed, the louver which was set moves from the original position to the lower limit position, and goes back to the original position again. (This operation is not performed if the indoor unit and/or indoor unit fan is in operation.)

[Example] No.1 LOUVER (displayed for two seconds) SET COMPLETE No.1 ▲

Upper position ① ② ③ ④ ⑤ ⑥
Movable range
Lower position
- Press **ON/OFF** button.

 - Louver adjusting mode ends and returns to the original display.

Caution
If the upper limit position number and the lower limit position number are set to the same position, the louver is fixed at that position auto swing does not function.

ATTENTION
If you press **RESET** button during settings, the display will return to previous display. If you press **ON/OFF** button during settings, the mode will be ended and return to original display, and the settings that have not been completed will become invalid.







When plural remote controls are connected, louver setting operation cannot be set by slave remote control.

(5) Floor standing type (FDF)





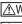

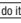
















PAG012D404A 

This manual is for the installation of an indoor unit.
For electrical wiring work (Indoor), refer to the page 100. For remote control installation, refer to the page 104. For wireless kit installation, refer to the page 154. For electrical wiring work (Outdoor) and refrigerant pipe work installation for outdoor unit, refer to the page 116.































SAFETY PRECAUTIONS

- Read the "SAFETY PRECAUTIONS" carefully first of all and then strictly follow it during the installation work in order to protect yourself.
- The precautionary items mentioned below are distinguished into two levels,  **WARNING** and  **CAUTION**.
 **WARNING**: Wrong installation would cause serious consequences such as injuries or death.
 **CAUTION**: Wrong installation might cause serious consequences depending on circumstances.
Both mentions the important items to protect your health and safety so strictly follow them by any means.
- The meanings of "Marks" used here are as shown on the right:
 Never do it under any circumstances.  Always do it according to the instruction.
- After completing the installation, do commissioning to confirm there are no abnormalities, and explain to the customers about "SAFETY PRECAUTIONS", correct operation method and maintenance method (air filter cleaning, operation method and temperature setting method) with user's manual of this unit.
Ask your customers to keep this installation manual together with the user's manual. Also, ask them to hand over the user's manual to the new user when the owner is changed.

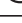 **WARNING**

- **Installation should be performed by the specialist.** 
If you install the unit by yourself, it may lead to serious trouble such as water leakage, electric shock, fire, and injury due to overturn of the unit.
- **Install the system correctly according to these installation manuals.** 
Improper installation may cause explosion, injury, water leakage, electric shock, and fire.
- **Check the density referred by the formula (accordance with ISO5149).** 
If the density exceeds the limit density, please consult the dealer and installate the ventilation system.
- **Use the genuine accessories and the specified parts for installation.** 
If parts unspecified by our company are used it could cause water leakage, electric shock, fire, and injury due to overturn of the unit.
- **Ventilate the working area well in case the refrigerant leaks during installation.** 
If the refrigerant contacts the fire, toxic gas is produced.
- **Install the unit in a location that can hold heavy weight.** 
Improper installation may cause the unit to fall leading to accidents.
- **Install the unit properly in order to be able to withstand strong winds such as typhoons, and earthquakes.** 
Improper installation may cause the unit to fall leading to accidents.
- **Do not mix air in to the cooling cycle on installation or removal of the air-conditioner.** 
If air is mixed in, the pressure in the cooling cycle will rise abnormally and may cause explosion and injuries.
- **Be sure to have the electrical wiring work done by qualified electrical installer, and use exclusive circuit.** 
Power source with insufficient capacity and improper work can cause electric shock and fire.
- **Use specified wire for electrical wiring, fasten the wiring to the terminal securely, and hold the cable securely in order not to apply unexpected stress on the terminal.** 
Loose connections or hold could result in abnormal heat generation or fire.
- **Arrange the electrical wires in the control box properly to prevent them from rising. Fit the lid of the services panel properly.** 
Improper fitting may cause abnormal heat and fire.
- **Check for refrigerant gas leakage after installation is completed.** 
If the refrigerant gas leaks into the house and comes in contact with a fan heater, a stove, or an oven, toxic gas is produced.
- **Use the specified pipe, flare nut, and tools for R410A.** 
Using existing parts (R22) could cause the unit failure and serious accident due to explosion of the cooling cycle.
- **Tighten the flare nut according to the specified method by with torque wrench.** 
If the flare nut were tightened with excess torque, it could cause burst and refrigerant leakage after a long period.
- **Do not put the drainage pipe directly into drainage channels where poisonous gases such as sulfide gas can occur.** 
Poisonous gases will flow into the room through drainage pipe and seriously affect the user's health and safety. This can also cause the corrosion of the indoor unit and a resultant unit failure or refrigerant leak.
- **Connect the pipes for refrigeration circuit securely in installation work before compressor is operated.** 
If the compressor is operated when the service valve is open without connecting the pipe, it could cause explosion and injuries due to abnormal high pressure in the system.
- **Stop the compressor before removing the pipe after shutting the service valve on pump down work.** 
If the pipe is removed when the compressor is in operation with the service valve open, air would be mixed in the refrigeration circuit and it could cause explosion and injuries due to abnormal high pressure in the cooling cycle.
- **Only use prescribed option parts. The installation must be carried out by the qualified installer.** 
If you install the system by yourself, it can cause serious trouble such as water leaks, electric shocks, fire.
- **Do not repair by yourself. And consult with the dealer about repair.** 
Improper repair may cause water leakage, electric shock or fire.
- **Consult the dealer or a specialist about removal of the air-conditioner.** 
Improper installation may cause water leakage, electric shock or fire.
- **Turn off the power source during servicing or inspection work.** 
If the power is supplied during servicing or inspection work, it could cause electric shock and injury by the operating fan.
- **Do not run the unit when the panel or protection guard are taken off.** 
Touching the rotating equipment, hot surface, or high voltage section could cause an injury to be caught in the machine, to get burned, or electric shock.
- **Shut off the power before electrical wiring work.** 
It could cause electric shock, unit failure and improper running.

 **CAUTION**

- **Perform earth wiring surely.** 
Do not connect the earth wiring to the gas pipe, water pipe, lightning rod and telephone earth wiring. Imperfect earth work (grounding) could cause an electric shock or fire if some trouble or earth leakage occurs.
- **Earth leakage breaker must be installed.** 
Unless the earth leakage circuit breaker is provided, it could cause a fire or electric shock.
- **Use the circuit breaker of correct capacity. Circuit breaker should be the one that disconnect all poles under over current.** 
Using the incorrect one could cause the system failure and fire.
- **Do not use any materials other than a fuse of correct capacity where a fuse should be used.** 
Connecting the circuit by wire or copper wire could cause unit failure and fire.
- **Do not install the indoor unit near the location where there is possibility of flammable gas leakages.** 
If the gas leaks and gathers around the unit, it could cause fire.
- **Do not install and use the unit where corrosive gas (such as sulfuric acid gas etc.) or flammable gas (such as thinner, petroleum etc.) may be generated or accumulated, or volatile flammable substances are handled.** 
It could cause the corrosion of heat exchanger, breakage of plastic parts etc. And inflammable gas could cause fire.
- **Secure a space for installation, inspection and maintenance specified in the manual.** 
Insufficient space can result in accident such as personal injury due to falling from the installation place.
- **Do not use the indoor unit at the place where water splashes such as laundry.** 
Indoor unit is not waterproof. It could cause electric shock and fire.
- **Do not use the indoor unit for a special purpose such as food storage, cooling for precision instrument, preservation of animals, plants, and a work of art.** 
It could cause the damage of the items.
- **Do not install nor use the system near equipments which generate electromagnetic wave or high harmonics.** 
Equipments like inverter equipment, private power generator, high-frequency medical equipment, or telecommunication equipment might influence the air-conditioner and cause a malfunction and breakdown. Or the air-conditioner might influence medical equipments or telecommunication equipments, and obstruct their medical activity or cause jamming.
- **Do not install the remote control at the direct sunlight.** 
It could cause breakdown or deformation of the remote control.
- **Do not install the indoor unit at the place listed below.** 
 - Places where flammable gas could leak.
 - Places where carbon fiber, metal powder or any powder is floated.
 - Place where the substances which affect the air-conditioner are generated such as sulfide gas, chloride gas, acid, alkali or ammoniac atmospheres.
 - Places exposed to oil mist or steam directly.
 - On vehicles and ships
 - Places where machinery which generates high harmonics is used.
 - Places where cosmetics or special sprays are frequently used.
 - Highly salted area such as beach.
 - Heavy snow area
 - Places where the system is affected by smoke from a chimney.
 - Altitude over 1000m
- **Do not install the indoor unit in the locations listed below (Be sure to install the indoor unit according to the installation manual for each model because each indoor unit has each limitation)** 
 - Locations with any obstacles which can prevent inlet and outlet air of the unit
 - Locations where vibration can be amplified due to insufficient strength of structure.
 - Locations where the infrared receiver is exposed to the direct sunlight or the strong light beam. (in case of the infrared specification unit)
 - Locations where an equipment affected by high harmonics is placed. (TV set or radio receiver is placed within 5m)
 - Locations where drainage cannot run off safely.
 It can affect performance or function and etc.
- **Do not put any valuables which will break down by getting wet under the air-conditioner.** 
Condensation could drop when the relative humidity is higher than 80% or drain pipe is clogged, and it damages user's belongings.
- **Do not use the base frame for the outdoor unit which is corroded or damaged after a long period of use.** 
It could cause the unit falling down and injury.
- **Pay attention not to damage the drain pan by weld sputter when brazing work is done near the unit.** 
If sputter entered into the unit during brazing work, it could cause damage (pinhole) of drain pan and leakage of water. To avoid damaging, keep the indoor unit packed or cover the indoor unit.
- **Install the drain pipe to drain the water surely according to the installation manual.** 
Improper connection of the drain pipe may cause dropping water into room and damaging user's belongings.
- **Do not share the drain pipe for indoor unit and GHP (Gas Heat Pump system) outdoor unit.** 
Toxic exhaust gas would flow into room and it might cause serious damage (some poisoning or deficiency of oxygen) to user's health and safety.
- **Be sure to perform air tightness test by pressurizing with nitrogen gas after completed refrigerant piping work.** 
If the density of refrigerant exceeds the limit in the event of refrigerant leakage in the small room, lack of oxygen can occur, which can cause serious accidents.
- **For drain pipe installation, be sure to make descending slope of greater than 1/100, not to make traps, and not to make air-bleeding.** 
Check if the drainage is correctly done during commissioning and ensure the space for inspection and maintenance.
- **Ensure the insulation on the pipes for refrigeration circuit so as not to condense water.** 
Incomplete insulation could cause condensation and it would wet ceiling, floor, and any other valuables.
- **Do not install the outdoor unit where is likely to be a nest for insects and small animals.** 
Insects and small animals could come into the electronic components and cause breakdown and fire. Instruct the user to keep the surroundings clean.
- **Pay extra attention, carrying the unit by hand.** 
Carry the unit with 2 people if it is heavier than 20kg. Do not use the plastic straps but the grabbing place, moving the unit by hand. Use protective gloves in order to avoid injury by the aluminum fin.
- **Make sure to dispose of the packaging material.** 
Leaving the materials may cause injury as metals like nail and woods are used in the package.
- **Do not operate the system without the air filter.** 
It may cause the breakdown of the system due to clogging of the heat exchanger.
- **Do not touch any button with wet hands.** 
It could cause electric shock.
- **Do not touch the refrigerant piping with bare hands when in operation.** 
The pipe during operation would become very hot or cold according to the operating condition, and it could cause a burn or frostbite.
- **Do not clean up the air-conditioner with water.** 
It could cause electric shock.
- **Do not turn off the power source immediately after stopping the operation.** 
Be sure to wait for more than 5 minutes. Otherwise it could cause water leakage or breakdown.
- **Do not control the operation with the circuit breaker.** 
It could cause fire or water leakage. In addition, the fan may start operation unexpectedly and it may cause injury.

① Before installation

- Install the unit properly according to this instruction manual.
- Is it in accordance with the construction plan?

Model and power source specification


Check.

Pipes, wires and small parts

Accessory

(1) For heat insulation of flare nut *1			
1	Pipe cover		1 pc For gas side
2	Pipe cover		1 pc For liquid side
3	Strap		4 pcs

(2) For installation <small>Note) Nos. 1 and 5 are used also as hardware for packing.</small>			
1	Fall-prevention fitting		1 pc *3
2	Wood screw		2 pcs For No. 1
3	Washer		2 pcs For No. 2 wood screw
4	Rubber bushing		1 pc For refrigerant and drain pipes
5	L fitting		2 pcs *4




Where the accessories are put in

- *1. Open the air inlet grill and Nos. (1) will be found in the unit.
- *2. Nos. (2)-2-4 will be found at the same place as 1.
- *3. Fall-prevention fitting is mounting on the top panel of the unit.
- *4. L-fittings are mounted on the bottom part of the unit.

② Selection of installation place for the indoor unit

- Select the suitable areas to install the unit under approval of the user.
 - Areas where the indoor unit can deliver hot and cold wind sufficiently. Suggest to the user to use a circulator if the ceiling height is over 3m to avoid warm air being accumulated on the ceiling.
 - Areas where there is enough space to install and service.
 - Areas where it can be drained properly. Areas where drain pipe descending slope can be taken.
 - Areas where there is no obstruction of air flow on both air return grille and air supply port.
 - Areas where fire alarm will not be accidentally activated by the air-conditioner.
 - Areas where the supply air does not short-circuit.
 - Areas where it is not influenced by draft air.
 - Areas not exposed to direct sunlight.
 - Areas where dew point is lower than around 23°C and relative humidity is lower than 80%.
 (This indoor unit is tested under the condition of JIS (Japan Industrial Standard) high humidity condition and confirmed there is no problem. However, there is some risk of condensation drop if the air-conditioner is operated under the severer condition than mentioned above. If there is a possibility to use it under such a condition, attach additional insulation of 10 to 20mm thick for entire surface of indoor unit, refrigeration pipe and drain pipe.)
 - Areas where TV and radio stays away more than 1m. (It could cause jamming and noise.)
 - Areas where any items which will be damaged by getting wet are not placed such as food, table wares, server, or medical equipment under the unit.
 - Areas where there is no influence by the heat which cookware generates.
 - Areas where not exposed to oil mist, powder and/or steam directly such as above fryer.
 - Areas where lighting device such as fluorescent light or incandescent light doesn't affect the operation. (A beam from lighting device sometimes affects the infrared receiver for the wireless remote control and the air-conditioner might not work properly.)
 - When operating the suction air processing unit independently, it operates in the outdoor air processing mode. Blowout temperatures are not same at the standard unit operation and the outdoor air processing mode operations. Since the temperatures become higher during cooling or lower during heating, take care of the direction of blowout outlet.
- Check if the place where the air-conditioner is installed can hold the weight of the unit. If it is not able to hold, reinforce the structure with boards and beams strong enough to hold it. If the strength is not enough, it could cause injury due to unit falling.

Space for installation and service

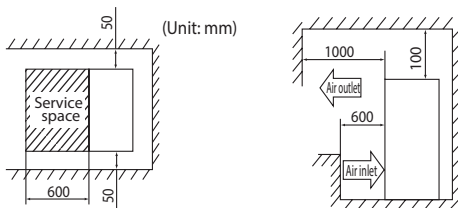

- Secure sufficient spaces for inspection and maintenance.

WARNING

- Install the unit securely on a floor that can endure its weight sufficiently. Insufficient strength or incorrect installation could result in injuries if the unit falls.


ATTENTION: Select a place for installation where the following conditions are fulfilled with customer's consent.

- Where cool or hot air can be blown sufficiently and widely.
 - Where the piping and wiring work to outdoor unit can be done easily.
 - Where drainage water can run off completely.
 - Where the installation floor is strong enough.
 - Where the unit is protected from direct exposure to sunlight.
 - Where there is no obstacle at the air inlet and air outlet.
 - Where the fire alarm apparatus will not be activated by malfunction.
- Where There is no risk for short-circuit of air.

③ Carrying-in and installation of the unit

Carrying-in

Carry with the front face at top.

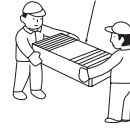



ATTENTION:

- Carry in the unit kept in a package as near as possible to the installation place.
- When it is necessary to unpack the unit before carrying in, sufficient care must be taken not to damage it by using nylon slings or the like. Note) Do not hold on the air inlet grill, air outlet louver or other sections made of plastics.
- When placing the unit on the floor after unpacking, be sure to have its front face at the top.


ATTENTION:

- Be sure to fix the unit with L-fittings and the fall-prevention fitting.
- Since the unit is tall, secure the unit no sooner than setting it in place.


Procedure for preventing the unit from falling

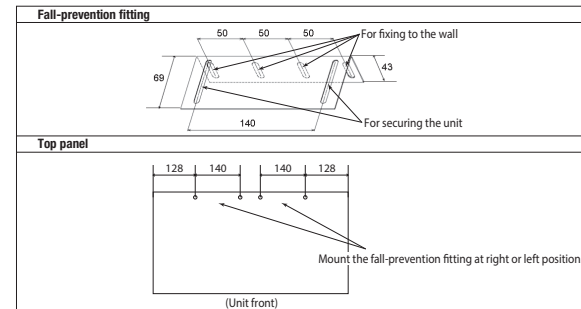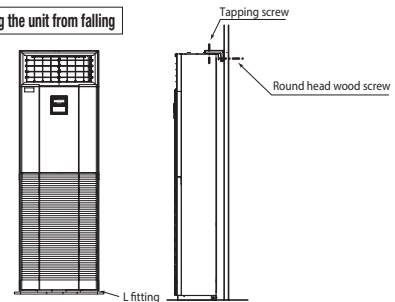

(1) Fixing the unit with the fall-prevention fitting

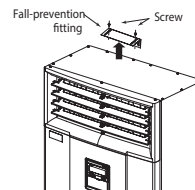


- Loosen screws (2 pcs) and remove the fall-prevention fitting.
- Select a position to fix the fall-prevention fitting as illustrated and fix it to the top of unit and the wall.
 - The fixing position of the fall-prevention fitting is as illustrated below.

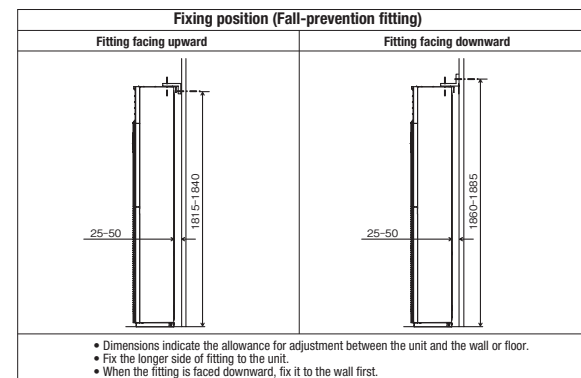


③ Carrying-in and installation of the unit (Continued)

(2) Fixing the unit with the L-fittings



- ① Remove the L-fittings mounted on the unit with screws.
 - ② Turn over the L-fitting and fix it to the unit and either the floor or the wall as illustrated.
- Fixing position of the L-fittings are as illustrated below.

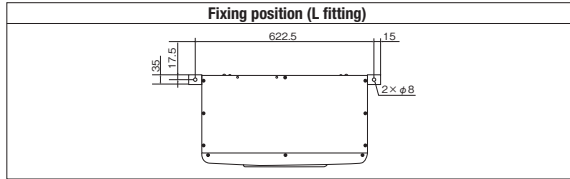

ATTENTION:

- Install the unit on the level.
- Inclination must be less than 1° in fore-aft and right-left directions.


④ Refrigerant piping

Caution

- Be sure to use new pipes for the refrigerant pipes. Use the flare nut attached to the product or a nut compatible with JIS B 8607, Class 2.

Regarding whether existing pipes can be reused or not, and the washing method, refer to the instruction manual of the outdoor unit, catalogue or technical data.

- 1) In case of reuse: Do not use old flare nut, but use the one attached to the unit or compatible with JIS B 8607, Class 2.
- 2) In case of reuse: Flare the end of pipe replaced partially for R410A.

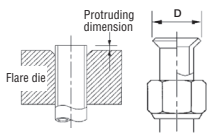

Pipe dia. d mm	Min. pipe wall thickness mm	Protruding dimension for flare, mm		Flare O.D. D mm	Flare nut tightening torque N·m
		For R410A	Conventional tool		
6.35	0.8	0 - 0.5	0.7 - 1.3	8.9 - 9.1	14 - 18
9.52	0.8			12.8 - 13.2	34 - 42
12.7	0.8			16.2 - 16.6	49 - 61
15.88	1			19.3 - 19.7	68 - 82
19.05	1.2			23.6 - 24.0	100 - 120

- Use phosphorus deoxidized copper alloy seamless pipe (C1220T specified in JIS H 3300) for refrigeration pipe installation. In addition, make sure there is no damage both inside and outside of the pipe, and no harmful substances such as sulfur, oxide, dust or a contaminant stuck on the pipes.
- Do not use any refrigerant other than R410A. Using other refrigerant except R410A (R22 etc.) may degrade inside refrigeration oil. And air getting into refrigeration circuit may cause over-pressure and resultant it may result in bursting, etc.
- Store the copper pipes indoors and seal the both end of them until they are brazed in order to avoid any dust, dirt or water getting into pipe. Otherwise it will cause degradation of refrigeration oil and compressor breakdown, etc.
- Use special tools for R410A refrigerant.

Work procedure


1. Remove the flare nut and blind flanges on the pipe of the indoor unit.
 - ※ Make sure to loosen the flare nut with holding the nut on pipe side with a spanner and giving torque to the nut with another spanner in order to avoid unexpected stress to the copper pipe, and then remove them. (Gas may come out at this time, but it is not abnormal.)
 - Pay attention whether the flare nut pops out. (as the indoor unit is sometimes pressured.)
2. Make a flare on liquid pipe and gas pipe, and connect the refrigeration pipes on the indoor unit.
 - ※ Bend radius of pipe must be 4D or larger. Once a pipe is bent, do not readjust the bending. Do not twist a pipe or collapse to 2/3D or smaller.
 - ※ Do a flare connection as follows:
 - Make sure to loosen the flare nut with holding the nut on pipe side with a spanner and giving torque to the nut with another spanner in order to avoid unexpected stress to the copper pipe, and then remove them.
 - When fastening the flare nut, align the refrigeration pipe with the center of flare nut, screw the nut for 3-4 times by hand and then tighten it by spanner with the specified torque mentioned in the table above. Make sure to hold the pipe on the indoor unit securely by a spanner when tightening the nut in order to avoid unexpected stress on the copper pipe.
3. Cover the flare connection part of the indoor unit with attached insulation material after a gas leakage inspection, and tighten both ends with attached straps.
 - Make sure to insulate both gas pipes and liquid pipes completely.
 - ※ Incomplete insulation may cause dew condensation or water dropping.
 - Use heat-resistant (120 °C or more) insulations on the gas side pipes.
 - In case of using at high humidity condition, reinforce insulation of refrigerant pipes. Surface of insulation may cause dew condensation or water dropping, if insulations are not reinforced.
4. Refrigerant is charged in the outdoor unit. As for the additional refrigerant charge for the indoor unit and piping, refer to the installation manual attached to the outdoor unit.

Caution:


Refrigerating machine oil should not be applied to the threads of union or external surface of flare. It is because, even if the same tightening torque is applied, the oil is likely to decrease the slide friction force on the threads and increase, in turn, the axial component force so that it could crack the flare by the stress corrosion.

Refrigerating machine oil may be applied to the internal surface of flare only.

<The case of using thickness of insulation is 10mm>

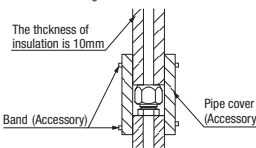


<The case of using reinforced insulation>

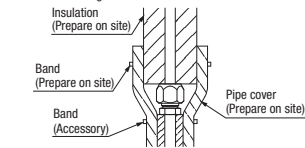

④ Refrigerant piping (Continued)

◆ Pipe and wire extracting position


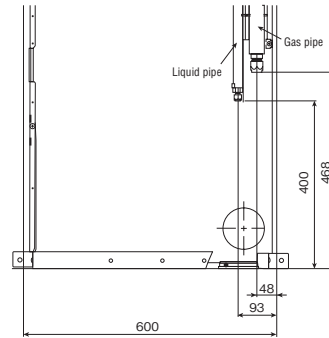


ATTENTION:


- Do not cut off the flange at the hole on the base plate for the downward extraction.




Downward extraction

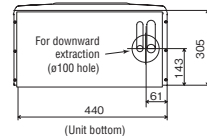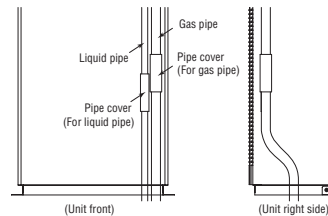

Backward extraction

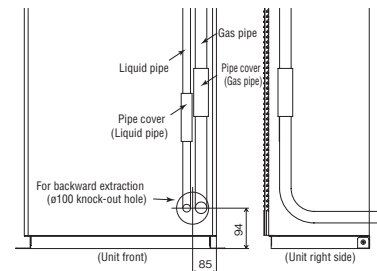

Sideward extraction

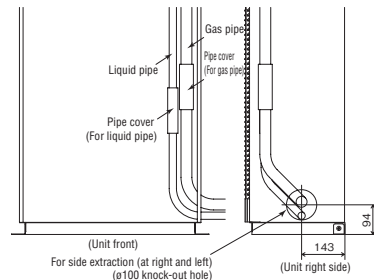

⑤ Drain pipe

⚠ WARNING




- Do not insert the drain pipe directly in the drain ditch where toxic gases such as sulfuric gas are produced. Toxic gas may flow into the room.

⚠ CAUTION

- Install the drain pipe properly according to the installation manual and insulate it to prevent from dew condensation. Improper installation of drain pipe may cause damage of furniture drainage water leaked or dew condensation.

Procedure

- Connect the drain socket to the drain pipe (VP20) provided at site and fix the joint with adhesive tape, or the like.
- When the pipe provided at site runs through a room, insulate the pipe with a commercial insulator (Polyethylene foam: Specific gravity 0.03, thickness 15 mm or more) to prevent dewing.

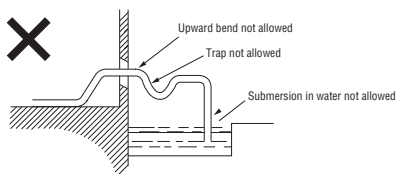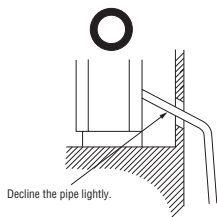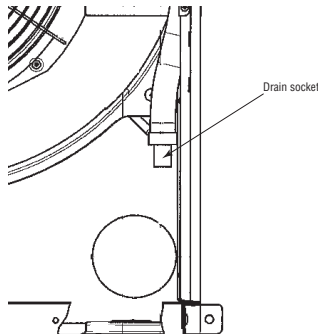

ATTENTION:


- Insulate the drain pipe to prevent dewing. (Especially in room and unit)
- Incline the drain pipe downward to the outlet (1/50 – 1/100). Upward bend or trap is not allowed on the way.
- Use a commercial hard polyvinyl chloride pipe, VP20, for the drain pipe. <Use of adhesive agent is prohibited.>

⑥ Wire extracting position and wire connect

Control box position and power cable connection


- Electric work must be made by qualified electricians according to the "Engineering standards concerning electric equipment", "Extension wiring regulations" and the electric wiring work manual. Be sure to use dedicated electric circuits.
- Make sure to use specified wires for wiring, and connect them securely. Clamp the wires to protect the terminal connection from external force.
- Make sure to protect the unit with the D-type grounding work.
- For details of wiring work, refer to the attached electric wiring work manual.

⑥ Wire extracting position and wire connect (Continued)

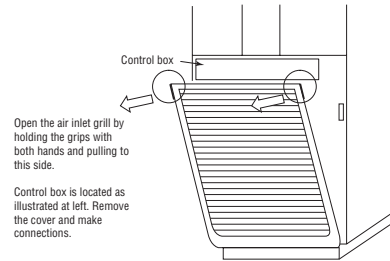


Procedure

- Remove the control box cover (fixed with a screw).
- Introduce wires in the unit and connect securely on the terminals.
- Fix each wire with a clamp (for fixing).
- Install removed parts as they were.

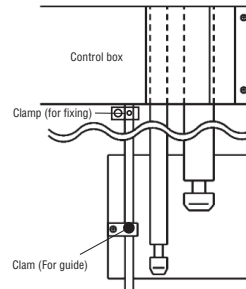

- Make sure to pass the power cable through the clamp (for guide).

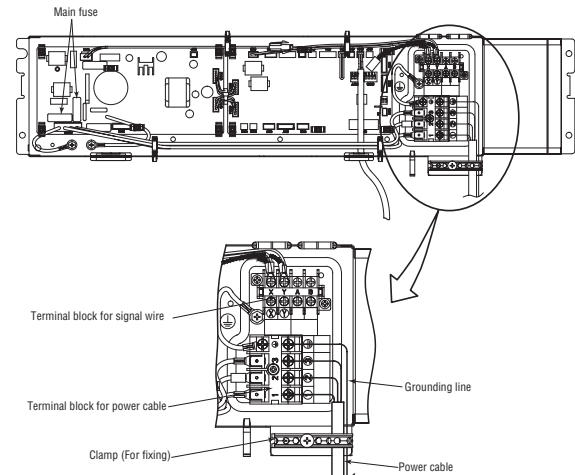

Main fuse specification

Specification	Part No.
T3.15A L250V	SSA564A149AF

⑦ Check list after installation

- Check the following items after all installation work completed.

Check if:	Expected trouble	Check
The indoor and outdoor units are fixed securely?	Falling, vibration, noise	
Inspection for gas leakage is done?	Insufficient capacity	
Insulation work is properly done?	Water leakage	
Water is drained properly?	Water leakage	
Power source voltage is same as mentioned in the model name plate?	PCB burnt out, not working at all	
There is mis-wiring or mis-connection of piping?	PCB burnt out, not working at all	
Earth wiring is connected properly?	Electric shock	
Cable size comply with specified size?	PCB burnt out, not working at all	
Any obstacle blocks air flow on air inlet and outlet?	Insufficient capacity	

(6) Effective range of cool/hot wind (Reference)

(a) FDT series

Guideline for ceiling height

Fan Speed Setting	Model	
	FDT71VG	FDT100VG
Hi	3.0m	3.2m
PHi	3.8m	4.3m

Notes (1) If the ceiling height is over 3m, please consider to add circulators.

This table shows reference values in case of four outlet.

If you shut some outlets, they are different.

Fan speed setting can be changed by using a wired remote control.

(b) FDE series

Model	Effective range
FDE71VG	8.0m
FDE100VG	9.0m

- [Conditions]
1. Height of unit: 2.4 – 3.0 (m) above floor level
 2. Fan speed : Hi
 3. Location: Free space without obstacles
 4. The effective range means the horizontal distance for wind to reach the floor.
 5. Wind speed at the effective range: 0.5 m/s

(c) FDF series

Model	Effective range
FDF71VD1	5m
FDF100VD2	8m

- [Conditions]
1. Fan speed : Hi
 2. Location: Free space without obstacles
 3. The effective range means the horizontal distance for the wind to reach the floor.
 4. Wind speed at the effective range: 0.5 m/s

PSC012D049

10.2 Electric wiring work installation

(1) FDT series

Electrical wiring work must be performed by an electrician qualified by a local power provider according to the electrical installation technical standards and interior wiring regulations applicable to the installation site.

Security instructions

- Read the "SAFETY PRECAUTIONS" carefully first of all and then strictly follow it during the installation work in order to protect yourself.
- The precautionary items mentioned below are distinguished into two levels, **WARNING** and **CAUTION**.
 - WARNING**: Wrong installation would cause serious consequences such as injuries or death.
 - CAUTION**: Wrong installation might cause serious consequences depending on circumstances. Both mentions the important items to protect your health and safety so strictly follow them by any means.
- The meanings of "Marks" used here are as shown on the right:
 - ⊘ Never do it under any circumstances.
 - ⊕ Always do it according to the instruction.
- Accord with following items. Otherwise, there will be the risks of electric shock and fire caused by overheating or short circuit.

WARNING

- Be sure to have the electrical wiring work done by qualified electrical installer, and use exclusive circuit. ⊕
Power source with insufficient capacity and improper work can cause electric shock and fire.
- Use specified wire for electrical wiring, fasten the wiring to the terminal securely, and hold the cable securely in order not to apply unexpected stress on the terminal. ⊕
Loose connections or hold could result in abnormal heat generation or fire.
- Arrange the electrical wires in the control box properly to prevent them from rising. Fit the lid of the services panel properly. ⊕
Improper fitting may cause abnormal heat and fire.
- Use the genuine option parts. And installation should be performed by a specialist. ⊕
If you install the unit by yourself, it could cause water leakage, electric shock and fire.
- Do not repair by yourself. And consult with the dealer about repair. ⊘
Improper repair may cause water leakage, electric shock or fire.
- Consult the dealer or a specialist about removal of the air-conditioner. ⊕
Improper installation may cause water leakage, electric shock or fire.
- Turn off the power source during servicing or inspection work. ⊕
If the power is supplied during servicing or inspection work, it could cause electric shock and injury by the operating fan.
- Shut off the power before electrical wiring work. ⊕
It could cause electric shock, unit failure and improper running.

CAUTION


- Perform earth wiring surely. ⊕
Do not connect the earth wiring to the gas pipe, water pipe, lightning rod and telephone earth wiring. Improper earth could cause unit failure and electric shock due to a short circuit.
- Earth leakage breaker must be installed. ⊕
If the earth leakage breaker is not installed, it can cause electric shocks.
- Make sure to install earth leakage breaker on power source line. (countermeasure thing to high harmonics.) ⊕
Absence of breaker could cause electric shock.
- Use the circuit breaker of correct capacity. Circuit breaker should be the one that disconnect all poles under over current. ⊕
Using the incorrect one could cause the system failure and fire.
- Do not use any materials other than a fuse of correct capacity where a fuse should be used. ⊘
Connecting the circuit by wire or copper wire could cause unit failure and fire.
- Use power source line of correct capacity. ⊕
Using incorrect capacity one could cause electric leak, abnormal heat generation and fire.
- Do not mingle solid cord and stranded cord on power source and signal side terminal block. ⊘
In addition, do not mingle difference capacity solid or stranded cord. Inappropriate cord setting could cause losing screw on terminal block, bad electrical contact, smoke and fire.
- Do not turn off the power source immediately after stopping the operation. ⊘
Be sure to wait for more than 5 minutes. Otherwise it could cause water leakage or breakdown.
- Do not control the operation with the circuit breaker. ⊘
It could cause fire or water leakage. In addition, the fan may start operation unexpectedly and it may cause injury.

Control mode switching

- The control content of indoor units can be switched in following way. (□ is the default setting)


Switch No.	Control Content	
SW2	Indoor unit address (0-Fh)	
SW5-1	Master/Slave Switching (plural /Slave unit Setting)	
SW5-2		
SW6-1-4	Model capacity setting	
SW7-1	ON	Operation check, Drain motor test run
	OFF	Normal operation

① Electrical Wiring Connection

- Electrical wiring work must be performed by an electrician qualified by a local power provider. These wiring specifications are determined on the assumption that the following instructions are observed:
 - Do not use cords other than copper ones.
 - Do not use any power source line lighter than one specified in parentheses for each type below.
 - braided cord (code designation 60245 IEC 51), if allowed in the relevant part 2;
 - ordinary tough rubber sheathed cord (code designation 60245 IEC 53);
 - flat twin tinsel cord (code designation 60227 IEC 41);
 - ordinary polyvinyl chloride sheathed cord (code designation 60227 IEC 53);
 - Connect the power source to the outdoor unit.
 - Pay extra attention so as not to confuse signal line and power source line connection, because an error in their connection can be burn all the boards at once.
- Connect ground wires before connecting wires between the indoor and outdoor units and between indoor units. The ground wires need to be longer than the wires between the indoor and outdoor units, and protected from undue stress.
- Do not turn on the power source before completing the work. 
- The ground wires must be connected by the Class D grounding connection.
- Use the round crimp terminals for connections to the terminal block.
- Use dedicated branch circuits, avoiding combination with other devices. Otherwise, it could trip the power source breaker, resulting in secondary accidents.
- Install the overcurrent and earth leakage breakers (sensitivity current: 30 mA) specified to respective models.
- Do not connect indoor and outdoor signal cables to extension cables on the way. If the joint is wetted with intruding water, it could cause a ground insulation failure or poor connection, resulting in communication errors. (If it is inevitable to connect cables on the way, make sure to prevent the water intrusion completely.)
- When running wires (wires for power source, remote control, connecting between indoor and outdoor units, or other) behind the ceiling, protect them using copper or other pipes against assault by rat, or other.
- It is up to 3.5 mm² the size of power source cables connected to indoor units. When using cables of 5.5 mm² or larger, provide a dedicated pull box for branching connection to indoor units.
- If signal and power source cables are connected mistakenly, it could burn down all PCBs.
 - Even if the power source of AC 220/240/380/415 V is connected mistakenly to A-B signal cable, it is protected at initial occasion only.
 - If the remote control fails to detect the unit No. (address) at 15 minutes after turning the power on, check and repair all signal cables for misconnection.
 - Cut the jumper wire J10SL1 of burnt PCB, and reconnect connectors Ck1 (yellow) and Ck1 (white) to Ck2 (black).
 - If any anomaly is found on wires between the A-B terminal block and the PCB, replace them.
- At the outside of indoor and outdoor units, take care to avoid direct contacts between remote control and power source cables.
- In no event connect the power source of AC 220/240/380/415 V to the remote control terminal block. It could cause failures.
- Connections of wiring between units, ground wire and remote control cable
 - When connecting wires between units, ground wire or remote control wire, connect them according to the number of terminals on the power source terminal block or signal terminal block in the control box. Connect the ground wire to the ground terminal on the power source terminal block.
 - Make sure to install an earth leakage breaker for the power source. Select a breaker for inverter circuit.
 - When the earth leakage protection, it is necessary to connect also an isolating switch (Switch + Class B fuse) or wiring circuit breaker in series to the earth leakage breaker.
 - Install the isolating switch close to the unit.
- Connect wires securing by tightening screws firmly. Confirm also no connector or wire (from terminal) is disconnected in the control box.
- When installing an auxiliary electric heater, consult the electric heater manual or technical data.

Cable connection for single unit installation

- As for connecting method of power source, select from following connecting patterns. In principle, do not directly connect power source line to inside unit.
 - As for exceptional connecting method of power source, discuss with the power provider of the country with referring to technical documents, and follow its instruction.
- For cable size and circuit breaker selection, refer to the outdoor unit installation manual.

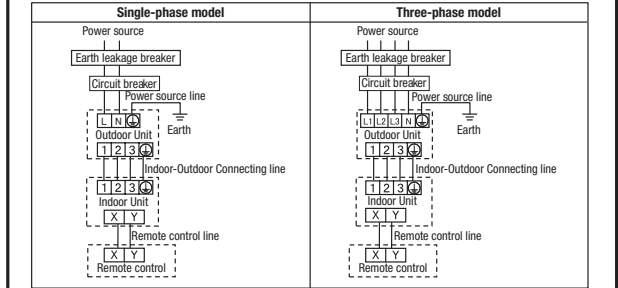


Cable connection for a V multi configuration installation

- Connect the same pairs number of terminal block "①", "②", and "③" and "X" and "Y" between master and slave indoor units.
- Do the same address setting of all inside units belong to same refrigerant system by rotary switch SW2 on indoor unit's PCB (Printed circuit board).
- Set slave indoor unit as "slave 1" through "slave 3" by address switch SW5-1, 5-2 on PCB.
- When the [AIR CON No.] button on the remote control unit is pressed after turning on the power, an indoor unit's address number will be displayed. Do not fail to confirm that the connected indoor unit's numbers are displayed on the remote control unit by pressing the or button.

Method of setting Master/Slave of indoor unit

(Factory setting: "Master")

Indoor Unit	Master	Slave 1	Slave 2	Slave 3
PCB SW	SW5-1	OFF	OFF	ON
	SW5-2	OFF	ON	ON

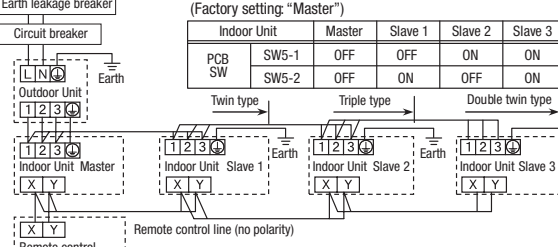

② Remote control, wiring and functions

● Do not install it on the following places


- ① Places exposed to direct sunlight
- ② Places near heat devices
- ③ High humidity places
- ④ Hot surface or cold surface enough to generate condensation
- ⑤ Places exposed to oil mist or steam directly.
- ⑥ Uneven surface

Installation and wiring of remote control

- ① Install remote control referring to the attached installation manual.
- ② Wiring of remote control should use 0.3mm² × 2 core wires or cables.
The insulation thickness is 1mm or more. (on-site configuration)
- ③ Maximum prolongation of remote control wiring is 600 m.
If the prolongation is over 100m, change to the size below.
But, wiring in the remote control case should be under 0.5mm². Change the wire size outside of the case according to wire connecting. Waterproof treatment is necessary at the wire connecting section. Be careful about contact failure.
100 - 200m 0.5mm² × 2 cores
Under 300m 0.75mm² × 2 cores
Under 400m 1.25mm² × 2 cores
Under 600m 2.0mm² × 2 cores
- ④ Avoid using multi-core cables to prevent malfunction.
- ⑤ Keep remote control line away from earth (frame or any metal of building).
- ⑥ Make sure to connect remote control line to the remote control and terminal block of indoor unit. (No polarity)

Control plural indoor units by a single remote control

- ① A remote control can control plural indoor units (Up to 16).
- In above setting, all plural indoor units will operate under same mode and temperature setting.
- ② Connect all indoor units with 2 core remote control line.
- ③ Set unique remote control communication address from "0" to "F" to each inside unit by the rotary switch SW2 on the indoor unit's PCB.

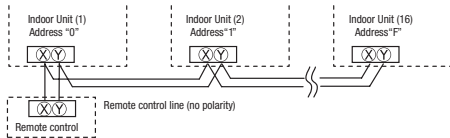

Master/ slave setting when more than one remote control unit are used


A maximum of two remote control units can be connected to one indoor unit (or one group of indoor units.)

The air-conditioner operation follows the last operation of the remote control regardless of the master/slave setting of it.

Acceptable combination is "two (2) wired remote controls", "one (1) wired remote control and one (1) wireless kit" or "two (2) wireless kits".

Set one to "Master" and the other to "Slave".

Note: The setting "Remote control unit sensor enabled" is only selectable with the master remote control unit in the position where you want to check room temperature.

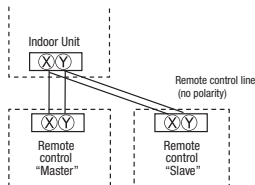


③ Operation and confirmation from remote control

No.	Item	Operation from the eco touch remote control (RC-EX3)	Operation from the standard remote control (RC-E4, RC-E5)
1	Check the number of units connected in the multi remote control system.	[Menu] ⇒ [Service setting] ⇒ [Service & Maintenance] ⇒ [Service password] ⇒ [IU address]	① Press the [AIR CON No.] button to display the IU address. ② Press the [▲] or [▼] button and check addresses of connected indoor units one by one.
2	Check if each unit is connected properly in the remote control system.	[Menu] ⇒ [Service setting] ⇒ [Service & Maintenance] ⇒ [Service password] ⇒ [IU address] ⇒ [Check run mode]	① Press the [AIR CON No.] button to display the IU address. ② Press the [▲] or [▼] button and select one of IU addresses. ③ Press the [MODE] button. The unit starts to blow air.
3	Setting main/sub remote controls	[Menu] ⇒ [Service setting] ⇒ [R/C function settings] ⇒ [Service password] ⇒ [Main/Sub of R/C]	Set SW1 to "Sub" for the sub remote control unit.
4	Checking operation data	[Menu] ⇒ [Service setting] ⇒ [Service & Maintenance] ⇒ [Service password] ⇒ [Operation data]	Press the [CHECK] button. ⇒ "OPER DATA" is displayed. ⇒ Press the [SET] button. ⇒ "DATA LINKING" is displayed. ⇒ Select one of addresses for connected indoor units by pressing the [▲] or [▼] button. ⇒ Press the [SET] button. ⇒ "DATA LINKING" is displayed. ⇒ Select data by pressing the [▲] or [▼] button.
5	Checking inspection display	[Menu] ⇒ [Service setting] ⇒ [Service & Maintenance] ⇒ [Service password] ⇒ [Error display]	Press the [CHECK] button. ⇒ "OPER DATA" is displayed. ⇒ Press the [▼] button. ⇒ "ERR DATA" is displayed. ⇒ Press the [SET] button. ⇒ "DATA LINKING" is displayed. ⇒ Data is displayed.
6	Cooling test run from remote control	[Menu] ⇒ [Service setting] ⇒ [Installation settings] ⇒ [Service password] ⇒ [Test run] ⇒ [Cooling test run] ⇒ [Start]	① Start the system by pressing the [ON/OFF] button. ② Select "C (Cool)" with the [MODE] button. ③ Press the [TEST] button for 3 seconds or longer. The screen display will switch to "TEST RUN". ④ Pressing the [SET] button, while the "TEST RUN" is displayed, starts the cooling test run. The screen display will switch to "TEST RUN".
7	Trial operation of drain pump from remote control	[Menu] ⇒ [Service setting] ⇒ [Installation settings] ⇒ [Service password] ⇒ [Test run] ⇒ [Drain pump test run] ⇒ [Run]	① Start the system by pressing the [ON/OFF] button. The display will change to "TEST RUN". ② Press the [▼] button once to display "DRAIN PUMP". ③ Pressing the [SET] button starts the drain pump operation. The display will show "DRAIN TO STOP".

The menu configuration may vary depending on models of the remote control. If the model of your remote control is different, refer to the installation manual attached to the remote control.

④ Function of CnT connector of indoor printed circuit board

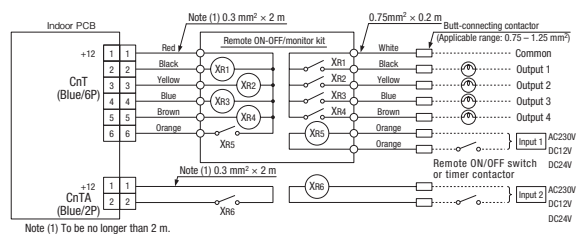

Note (1) To be no longer than 2 m.

● Xr1-4 are DC 12 V relays. (Equivalent to Omron's LY2F)

● Xr5 is a DC 12 V, 24 V or AC230 V relay. (Equivalent to Omron's MY2F)

● Maker and model of CnT connector (Site side)

Connector : Molex 5264-06

Terminal : Molex 5263T

● CnTA connector is used on FDT, or other. <Check with the specifications.> (Site side) Maker and model

Connector : J.S.T. Mfg. XAP02V-1-E

Terminal : J.S.T. Mfg. SXA-01T-P0.6

● Output 1 - 4 and input1/2 can be selected/set as required from following items.

Factory default is set as shown below.

Output

① RUN output	⑧ Fan ON output 3
② Heating output	⑨ Defrost/oil return output
③ Compressor ON output	⑩ Ventilation output
④ Inspection (error) output	⑪ Heater output
⑤ Cooling output	⑫ Free cleaning output
⑥ Fan ON output 1	⑬ Indoor overload error output
⑦ Fan ON output 2	

Input

① RUN/STOP	⑤ Setting temp. shift
② RUN permit prohibition	⑥ Compulsory thermostat OFF
③ Emergency stop	⑦ Temporary stop
④ Cooling/Heating	⑧ Silent mode

Factory default setting

CnT-2	Output 1	RUN output	CnT-5	Output 4	Inspection (error) output
CnT-3	Output 2	Heating output	CnT-6	Input 1	RUN/STOP
CnT-4	Output 3	Compressor ON output	CnTA	Input 2	RUN/STOP

● For the setting method, refer to the technical data.

⑤ Operation and setting from remote control

A : Refer to the instruction manual for RC-EX series
 B : Refer to the installation manual for RC-EX series
 C : Loading a utility software via Internet

○ : Nearly same function setting and operations are possible.
 △ : Similar function setting and operations are possible.

Setting & display item	Description	RC-EX3	RC-E5	
1.Remote control network				
1 Control plural indoor units by a single remote control	A remote control can control plural indoor units up to 16 (in one group of remote control network). An address is set to each indoor unit.		○	
2 Main/sub setting of remote controls	A pair of remote controls (including optional wireless remote control) can be connected within the remote control network. Set one to "Main" and the other to "Sub".	B	○	
2.TOP screen, Switch manipulation				
1 Menu	"Control", "State", or "Details" can be selected. (3-8)	A		
2 Operation mode	"Cooling", "Heating", "Fan", "Dry" or "Auto" can be set.	A	○	
3 Set temp.	"Set temperature" can be set by 0.5°C interval.	A	○	
4 Air flow direction	"Air flow direction" [Individual flap control] can be set. Select Enable or Disable for the "3D AUTO" (in case of FDK).	A	△	
5 Fan speed	"Fan speed" can be set.	A	○	
6 Timer setting	"Timer operation" can be set.	A	○	
7 ON/OFF	"On/Off operation of the system" can be done.	A	○	
8 F1 SW	The system operates and is controlled according to the function specified to the F1 switch.	A		
9 F2 SW	The system operates and is controlled according to the function specified to the F2 switch.	A		
3.Useful functions				
1 Individual flap control	The moving range (the positions of upper limit and lower limit) of the flap for individual flap can be set. Set also the left and right limit positions for FDK.	A	△	
2 Anti draft setting When the panel with the anti-draft function is assembled.	When the panel with the anti draft function is assembled, select to Enable or Disable the anti draft setting for each operation mode and for each blow outlet.	A		
3 Timer settings	Set On timer by hour	The period of time to start operation after stopping can be set. • The period of set time can be set within range of 1hour-12hours (1hr interval). • The operation mode, set temp and fan speed at starting operation can be set.	A	△
	Set Off timer by hour	The period of time to stop operation after starting can be set. • The period of set time can be set within range of 1hour-12hours (1hr interval).	A	△
	Set On timer by clock	The clock time to start operation can be set. • The set clock time can be set by 5 minutes interval. • [Once (one time only)] or [Everyday] operation can be switched. • The operation mode, set temp and fan speed at starting operation can be set.	A	△
	Set Off timer by clock	The clock time to stop operation can be set. • The set clock time can be set by 5 minutes interval. • [Once (one time only)] or [Everyday] operation can be switched.	A	△
Confirmation of timer settings		Status of timer settings can be seen.	A	
4 Favorite setting [Administrator password]	Set the operation mode, setting temperature, air flow capacity and air flow direction for the choice setting operations. Set them for the Favorite set 1 and the Favorite set 2 respectively.	A		
5 Weekly timer	On timer and Off timer on weekly basis can be set. • 8-operation patterns per day can be set at a maximum. • The setting clock time can be set by 5 minutes interval. • Holiday setting is available. • The operation mode, set temp and fan speed at starting operation can be set.	A	△	
6 Home leave mode [Administrator password]	When leaving home for a long period like a vacation leave, the unit can be operated to maintain the room temperature not to be hotter in summer or not to be colder in winter. • The judgment to switch the operation mode (Cooling ↔ Heating) is done by the both factors of the set temp. and outdoor air temp. • The set temp. and fan speed can be set.	A		
7 External Ventilation When the ventilator is combined.	On/Off operation of the external ventilator can be done. It is necessary to set from [Menu] ⇒ [Service setting] ⇒ [R/C function settings] ⇒ [Ventilation setting]. • If the "Independent" is selected for the ventilation setting, the ventilator can be operated or stopped.	A	○	
8 Select the language	Select the language to display on the remote control. • Select from English, German, French, Spanish, Italian, Dutch, Turkish, Portuguese, Russian, Polish, Japanese and Chinese.	A		
4.Energy-saving setting				
1 Sleep timer	To prevent the timer from keeping ON, set hours to stop operation automatically with this timer. • The selectable range of setting time is from 30 to 240 minutes. (10 minutes interval) • When setting is "Enable", this timer will activate whenever the ON timer is set.	A	△	
2 Peak-cut timer	Power consumption can be reduced by restructuring the maximum capacity. Set the [Start time], the [End time] and the capacity limit % (Peak-cut %). • 4-operation patterns per day can be set at maximum. • The setting time can be changed by 5-minutes interval. • The selectable range of capacity limit % (Peak-cut %) is from 0% to 40-80% (20% interval) • Holiday setting is available.	A		
3 Automatic temp set back	After the elapse of the set time period, the current set temp. will be set back to the [Set back time.] • The setting can be done in cooling and heating mode respectively. • Selectable range of the set time is from 20 min. to 120 min. (10 min. interval). • Set the [Set back temp.] by 1°C interval.	A	△	
4 Infrared sensor control (Motion sensor control) When the panel with the infrared sensor (motion sensor) is assembled.	When the infrared sensor (motion sensor) is used, it is necessary to set Enable or Disable for the "Power control" and the "Auto-off".	A		
5.Filter				
1 Filter sign reset	Filter sign reset	The filter sign can be reset.	A	
	Setting next cleaning date	The next cleaning date can be set.	A	
6.User setting				
1 Internal settings	Clock setting	The current date and time can be set or revised. • If a power failure continues no longer than 80 hours, the clock continues to tick by the built-in power source.	A	△
	Date and time display	[Display] or [Hide] the date and/or time can be set, and [12H] or [24H] display can be set.	A	
	Summer time	When select [Enable], the +1 hour adjustment of current time can be set. When select [Disable], the [Summer time] adjustment can be reset.	A	
	Contrast	The contrast of LCD can be adjusted higher or lower.	A	
	Backlight	Switching on/off a light can be set and period of the lighting time can be set within the range of 5sec-90 sec (5sec interval).	A	
	Control sound	It can set with or without [Control sound (beep sound)] at touch panel.	A	
	Operation lamp luminance	This is used to adjust the luminance of operation lamp.	A	
2 Administrator settings [Administrator password]	Permission/Prohibition setting	• Permission/Prohibition setting of operation can be set. [On/Off] [Change set temp] [Change operation mode] [Change flap direction] [Change fan speed] [High power operation] [Energy-saving operation] [Timer] Request for administrator can be set. [Individual flap control] [Weekly timer] [Select the language] [Anti draft setting]	A	△
	Outdoor unit silent mode timer	The period of time to operate the outdoor unit by prioritizing the quietness can be set. • The [Start time] and the [End time] for operating outdoor unit in silent mode can be set. • The period of the operation time can be set once a day by 5 minutes interval.	A	△
	Setting temp. range	The upper/lower limit of temp. setting range can be set.	A	△
	Temp increment setting	The temp. increment setting can be changed by 0.5°C or 1.0°C.	A	
Set temp. display	Ways of displaying setting temperatures can be selected.	A		

5 Operation and setting from remote control (continued)

Setting & display item	Description	RC-EX3	RC-E5	
2 Administrator settings [Administrator password]	R/C display setting	Register [Room name] [Name of I/U] Display [Indoor temp. display] or not. Display [Error code display] or not. Display [Heating stand-by display] [Defrost operation display] [Auto cooling/heating display] [Display temp of R/C, Room, Outdoor] or not	A	△
	Change administrator password	The administrator password can be changed. (Default setting is "0000") The administrator password can be reset.	A B	
	F1/F2 function setting	Functions can be set for F1 and F2. Selectable functions: [High power operation], [Energy-saving operation], [Silent mode cont.], [Home leave mode], [Favorite set 1], [Favorite set 2] and [Filter sign reset].	A	
7. Service setting				
1 Installer settings [Service password]	Installation date	The [Installation date] can be registered. • When registering the [Installation date], the [Next service date] is displayed automatically. (For changing the [Next service date], please refer the item of [Service & Maintenance])	B	
	Company information	The [Company information] can be registered and can be displayed on the R/C. • The [Company] can be registered within 26 characters. • The [Phone No.] can be registered within 13 digits.	B	
	Test run	On/Off operation of the test run can be done.		
	Cooling test run	The [Cooling test run] can be done at 5°C of set temp. for 30 minutes.	B	○
	Drain pump test run	Only drain pump can be operated.		
	Static pressure adjustment	In case of combination with only the ducted indoor unit which has a function of static pressure adjustment, the static pressure is adjustable. • It can be set for each indoor unit individually.	B	
	Change auto-address	The set address of each indoor unit decided by auto-address setting method can be changed to any other address. (For multiple KX units only)	B	△
	Address setting of main IU	Main indoor unit address can be set. • Only the Main indoor unit can change operation mode and the Sub indoor units dominated by the Main indoor shall follow. • The Main indoor unit can domain 10 indoor units at a maximum.	B	△
	IU back-up function	When a pair of indoor units (2 groups) is connected to one unit of remote control, it can be set Enable or Disable for the [IU rotation], [IU capacity back-up] and [IU fault back-up]	B	
	Infrared sensor setting (Motion sensor setting) When the panel with the infrared sensor (motion sensor) is assembled.	Set Enable or Disable for the infrared sensor detectors of indoor units connected to the remote control. If Disable is selected, it cannot be control the infrared sensor control for the energy-saving setting.	B	
2 R/C function setting [Service password]	Main/Sub R/C	The R/C setting of [Main/Sub] can be changed.	B	○
	Return air temp.	When two or more indoor units are connected to one unit of remote control, suction sensors, which are used for the judgement by thermostat, can be selected. • It can be selected from [Individual], [Master IU] and [Average temp].	B	
	R/C sensor	It can be set the mode to switch to the remote control sensor. It can be selected from cooling and heating.	B	△
	R/C sensor adjustment	The offset value of [R/C sensor] sensing temp. can be set respectively in heating and cooling.	B	△
	Operation mode	Enable or Disable can be set for each operation mode.	B	△
	°C / °F	Set the unit for setting temperatures. • °C or °F can be selected.	B	
	Fan speed	Fan speeds can be selected.	B	○
	External input	When two or more indoor units are connected to one unit of remote control, the range to apply CnT inputs can be set.	B	○
	Upper/lower flap control	[Stop at fixed position] or [Stop at any position] can be selected for the upper and lower louvers.	B	○
	Left/right flap control	[Fixed position stop] or [Stop at any position] can be selected for the right and left louvers.	B	○
	Ventilation setting	Combination control for ventilator can be set.	B	○
	Auto-restart	The operation control method after recovery of power failure happened during operation can be set.	B	○
	Auto temp setting	[Enable] or [Disable] of [Auto temp setting] can be selected.	B	
	Auto fan speed	[Enable] or [Disable] of [Auto fan speed] can be selected.	B	
3 IU settings [Service password]	Fan speed setting	The fan speed for indoor units can be set.	B	○
	Filter sign	The setting of filter sign display timer can be done from following patterns.	B	○
	External input 1	The connect of control by external input 1 can be changed.	B	○
	External input 1 signal	The type of external input 1 signal can be changed.	B	○
	External input 2	The connect of control by external input 2 can be changed.	B	○
	External input 2 signal	The type of external input 2 signal can be changed.	B	○
	Heating thermo-OFF temp adjustment	The judgement temp. of heating thermo-off can be adjusted within the range from 0 to +3°C (1°C interval)	B	△
	Return temperature adjustment	The sensing temp. of return air temp. sensor built in the indoor unit can be adjusted within the range of ±2°C.	B	△
	Fan control in cooling thermo-OFF	Fan control, when the cooling thermostat is turned OFF, can be changed.	B	○
	Fan control in heating thermo-OFF	Fan control, when the heating thermostat is turned OFF, can be changed.	B	○
	Anti-frost temp.	Judgment temperature for the anti-frost control during cooling can be changed.	B	○
	Anti-frost control	When the anti-frost control of indoor unit in cooling is activated, the fan speed can be changed.	B	○
	Drain pump operation	In any operation mode in addition to cooling and dry mode, the setting of drain pump operation can be done.	B	○
	Keep fan operating after cooling is stopped	The time period residual fan operation after stopping or thermo-off in cooling mode can be set.	B	○
	Keep fan operating after heating is stopped	The time period residual fan operation after stopping or thermo-off in heating mode can be set.	B	○
	Intermittent fan operation in heating	The fan operation rule following the residual fan operation after stopping or thermo-off in heating mode can be set.	B	○
	Fan circulator operation	In case that the fan is operated as the circulator, the fan control rule can be set.	B	
	Control pressure adjust	When only the OA processing units are operated, control pressure value can be changed.	B	
	Auto operation mode	The [Auto rule selection] for switching the operation mode automatically can be selected from 3 patterns.	B	
	Thermo. rule setting	When selecting [Outdoor air temp. control], the judgment temp. can be offset by outdoor temp..	B	
Auto fan speed control	Auto switching range for the auto fan speed control can be set.	B		
IU overload alarm	If the difference between the setting temperature and the suction temperature becomes larger than the temperature difference set for the overload alarm, at 30 minutes after the start of operation, the overload alarm signal is transmitted from the external output (CnT-5).	B		
External output setting	Functions assigned to the external outputs 1 to 4 can be changed.	B		
4 Service & Maintenance [Service password]	IU address	Max 16 indoor units can be connected to one remote control, and all address No. of the connected indoor units can be displayed. • The indoor unit conforming to the address No. can be identified by selecting the address No. and tapping [Check] to operate the indoor fan.	B	○
	Next service date	The [Next service date] can be registered. • The [Next service date] and [Company information] is displayed on the message screen.	A B	○
	Operation data	The [Operation data] for indoor unit and outdoor unit can be displayed.	B	○
	Error display			
	Error history	The error history can be displayed.		
	Display anomaly data	The operation data just before the latest error stop can be displayed.	B	△
	Erase anomaly data	Anomaly operation data can be erased.		
Reset periodical check	The timer for the periodical check can be reset.			
Saving IU settings	The IU settings memorized in the indoor PCB connected to the remote control can be saved in the memory of the remote control.	B		
Special settings	[Erase IU address] [CPU reset] [Restore of default setting] [Touch panel calibration]	B	△	
Indoor unit capacity display	Address No. and capacities of indoor units connected to the remote control are displayed.	B		
8. Contact company				
9. Inspection				
Confirmation of Inspection	This is displayed when any error occurs.	A	△	
10. PC connection				
USB connection	Weekly timer setting and etc., can be set from PC.	C		

◆ Listed items may not function depending on the specifications of indoor and outdoor units which are combined.

(2) FDU series

Electrical wiring work must be performed by an electrician qualified by a local power provider according to the electrical installation technical standards and interior wiring regulations applicable to the installation site.

Security instructions

- Read the "SAFETY PRECAUTIONS" carefully first of all and then strictly follow it during the installation work in order to protect yourself.
- The precautionary items mentioned below are distinguished into two levels, [WARNING] and [CAUTION].
 - [WARNING] : Wrong installation would cause serious consequences such as injuries or death.
 - [CAUTION] : Wrong installation might cause serious consequences depending on circumstances.
 Both mentions the important items to protect your health and safety so strictly follow them by any means.
- The meanings of "Marks" used here are as shown on the right:
 - ⊘ Never do it under any circumstances.
 - ⊕ Always do it according to the instruction.
- Accord with following items. Otherwise, there will be the risks of electric shock and fire caused by overheating or short circuit.

⚠WARNING

- Be sure to have the electrical wiring work done by qualified electrical installer, and use exclusive circuit.
 - ⊕ Power source with insufficient capacity and improper work can cause electric shock and fire.
- Use specified wire for electrical wiring, fasten the wiring to the terminal securely, and hold the cable securely in order not to apply unexpected stress on the terminal.
 - ⊕ Loose connections or hold could result in abnormal heat generation or fire.
- Arrange the electrical wires in the control box properly to prevent them from rising. Fit the lid of the services panel properly.
 - ⊕ Improper fitting may cause abnormal heat and fire.
- Use the genuine option parts. And installation should be performed by a specialist.
 - ⊕ If you install the unit by yourself, it could cause water leakage, electric shock and fire.
- Do not repair by yourself. And consult with the dealer about repair.
 - ⊘ Improper repair may cause water leakage, electric shock or fire.
- Consult the dealer or a specialist about removal of the air-conditioner.
 - ⊕ Improper installation may cause water leakage, electric shock or fire.
- Turn off the power source during servicing or inspection work.
 - ⊕ If the power is supplied during servicing or inspection work, it could cause electric shock and injury by the operating fan.
- Shut off the power before electrical wiring work.
 - ⊕ It could cause electric shock, unit failure and improper running.

⚠CAUTION


- Perform earth wiring surely.
 - ⊕ Do not connect the earth wiring to the gas pipe, water pipe, lightning rod and telephone earth wiring. Improper earth could cause unit failure and electric shock or fire due to a short circuit.
- Earth leakage breaker must be installed.
 - ⊕ If the earth leakage breaker is not installed, it could cause electric shocks or fire.
- Make sure to install earth leakage breaker on power source line. (countermeasure thing to high harmonics.)
 - ⊕ Absence of breaker could cause electric shock.
- Use the circuit breaker of correct capacity. Circuit breaker should be the one that disconnect all poles under over current.
 - ⊕ Using the incorrect one could cause the system failure and fire.
- Do not use any materials other than a fuse of correct capacity where a fuse should be used.
 - ⊘ Connecting the circuit by wire or copper wire could cause unit failure and fire.
- Use power source line of correct capacity.
 - ⊕ Using incorrect capacity one could cause electric leak, abnormal heat generation and fire.
- Do not mingle solid cord and stranded cord on power source and signal side terminal block.
 - ⊘ In addition, do not mingle difference capacity solid or stranded cord. Inappropriate cord setting could cause losing screw on terminal block, bad electrical contact, smoke and fire.
- Do not turn off the power source immediately after stopping the operation.
 - ⊘ Be sure to wait for more than 5 minutes. Otherwise it could cause water leakage or breakdown.
- Do not control the operation with the circuit breaker.
 - ⊘ It could cause fire or water leakage. In addition, the fan may start operation unexpectedly and it may cause injury.

① Electrical Wiring Connection

- Use three-core cable as wiring between indoor and outdoor unit. As for detail, refer to "INSTALLATION MANUAL" of outdoor unit.
- Set earth of D-type.
- Keep "remote control line" and "power source line" away from each other on constructing of unit outside.
- Run the lines (power source, remote control and "between indoor and outdoor unit") upper ceiling through iron pipe or other tube protection to avoid the damage by mouse and so on.
- Do not add cord in the middle of line route (of power source, remote control and "between indoor and outdoor unit") on outside of unit. If connecting point is flooded, it could cause problem as for electric or communication. (In the case that it is necessary to set connecting point on the way, perform thorough waterproof measurement.)
- Do not connect the power source line [220V/240V/380V/415V] to signal side terminal block. Otherwise, it could cause failure.
- Screw the line to terminal block without any looseness, certainly.
- Do not turn on the switch of power source, before all of line work is done.
- Connection of the line ("Between indoor and outdoor unit", earth and remote control)
- ① Remove lid of control box before connect the above lines, and connect the lines to terminal block according to number pointed on label of terminal block.
 - In addition, pay enough attention to confirm the number to lines, because there is electrical polarity except earth line. Furthermore, connect earth line to earth position of terminal block of power source.
- ② Install earth leakage breaker on power source line. In addition, select the type of breaker for inverter circuit as earth leakage breaker.
- ③ If the function of selected earth leakage breaker is only for earth-fault protection, hand switch (switch itself and type "B" fuse) or circuit breaker is required in series with the earth leakage breaker.
- ④ Install isolator or disconnect switch on the power source wiring in accordance with the local codes and regulations.
 - The isolator should be set in the box with key to prevent touching by another person when servicing.


Cable connection for single unit installation

- ① As for connecting method of power source, select from following connecting patterns. In principle, do not directly connect power source line to inside unit.
- ※ As for exceptional connecting method of power source, discuss with the power provider of the country with referring to technical documents, and follow its instruction.
- ② For cable size and circuit breaker selection, refer to the outdoor unit installation manual.

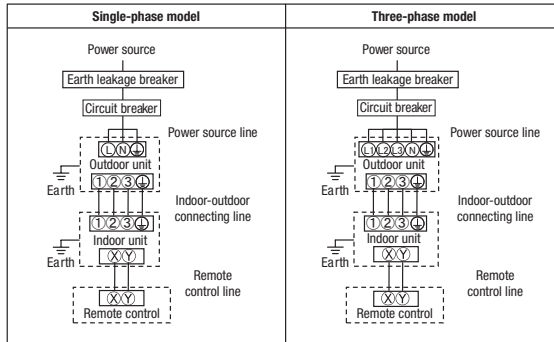

Cable connection for a V multi configuration installation

- ① Connect the same pairs number of terminal block "①, ②, and ③" and "ⓧ and Ⓨ" between master and slave indoor units.
- ② Do the same address setting of all inside units belong to same refrigerant system by rotary switch SW2 on indoor unit's PCB (Printed circuit board).
- ③ Set slave indoor unit as "slave 1" through "slave 3" by address switch SW5-1, 5-2 on PCB.
- ④ When the [AIR CON NO.] button on the remote control unit is pressed after turning on the power, an indoor unit's address number will be displayed. Do not fail to confirm that the connected indoor unit's numbers are displayed on the remote control unit by pressing the ▲ or ▼ button.

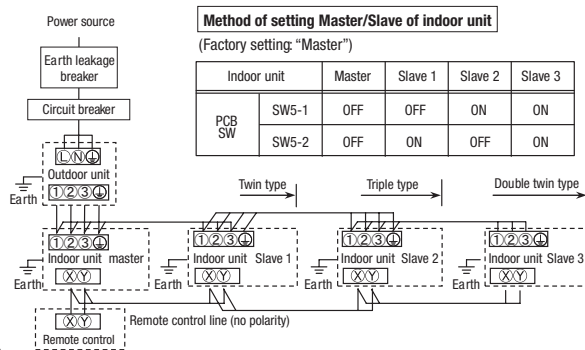

② Remote Control, Wiring and functions

● Do not install it on the following places

- ① Places exposed to direct sunlight
- ② Places near heat devices
- ③ High humidity places
- ④ Hot surface or cold surface enough to generate condensation
- ⑤ Places exposed to oil mist or steam directly.
- ⑥ Uneven surface


Installation and wiring of remote control

- ① Install remote control referring to the attached installation manual.
- ② Wiring of remote control should use 0.3mm² × 2 core wires or cables.
The insulation thickness is 1mm or more. (on-site configuration)
- ③ Maximum prolongation of remote control wiring is 600 m.
If the prolongation is over 100m, change to the size below.
But, wiring in the remote control case should be under 0.5mm². Change the wire size outside of the case according to wire connecting. Waterproof treatment is necessary at the wire connecting section. Be careful about contact failure.
100 - 200m 0.5mm² × 2 cores
Under 300m 0.75mm² × 2 cores
Under 400m 1.25mm² × 2 cores
Under 600m 2.0mm² × 2 cores
- ④ Avoid using multi-core cables to prevent malfunction.
- ⑤ Keep remote control line away from earth (frame or any metal of building).
- ⑥ Make sure to connect remote control line to the remote control and terminal block of indoor unit. (No polarity)

Control plural indoor units by a single remote control.

- ① A remote control can control plural indoor units (Up to 16).
In above setting, all plural indoor units will operate under same mode and temperature setting.
- ② Connect all indoor units with 2 core remote control line.
- ③ Set unique remote control communication address from "0" to "F" to each inside unit by the rotary switch SW2 on the indoor unit's PCB.

After a unit is energized, it is possible to display an indoor unit address by pressing **AIR CON NO.** button on the remote control unit. Press the **▲** or **▼** button to make sure that all indoor units connected are displayed in order.

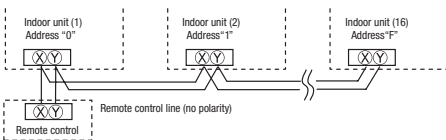


Confirming method of indoor units

When indoor unit address number is displayed on remote control, pushing the **(MODE)** button to make the indoor unit with that number blow air (Display example: "I/U001" **↔** "). Push the **(MODE)** button again to stop the operation. However, this operation is invalid on the air-conditioner running.

Master/ slave setting when more than one remote control unit are used

A maximum of two remote control units can be connected to one indoor unit (or one group of indoor units.)
The air-conditioner operation follows the last operation of the remote control regardless of the master/slave setting of it.
Acceptable combination is "two (2) wired remote controls", "one (1) wired remote control and one (1) wireless kit" or "two (2) wireless kits".
Set SW1 (wired remote control) or SW1-2 (wireless kit) to "Slave" for the slave remote control unit. It was factory set to "Master" for shipment.

Note: The setting "Remote control unit sensor enabled" is only selectable with the master remote control unit in the position where you want to check room temperature.

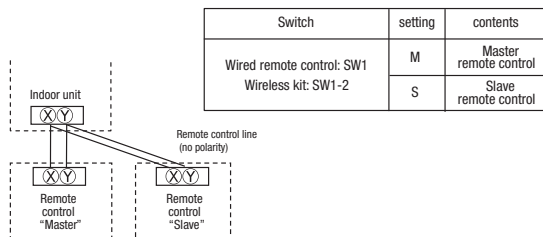

③ Trial operation

The method of trial cooling operation

Operate the remote control unit as follows.

1. Starting a cooling test run.
 - ① Start the system by pressing the **(ON/OFF)** button.
 - ② Select "❄️ (Cool)" with the **(MODE)** button.
 - ③ Press the **TEST** button for 3 seconds or longer.
The screen display will switch to: "❄️ TEST RUN ▼"
 - ④ When the **(SET)** button is pressed while "❄️ TEST RUN ▼" is indicated, a cooling test run will start.
The screen display will switch to "❄️ TEST RUN".
2. Ending a cooling test run.
Pressing the **(ON/OFF)** button, the **(TEMP)** button or **(MODE)** button will end a cooling test run. (Cooling test run will end after 30 minutes pass.)
"❄️ TEST RUN" shown on the screen will go off.

Checking operation data

Operation data can be checked with remote control unit operation.

1. Press the **CHECK** button.
The display change "OPER DATA ▼"
2. Press the **(SET)** button while "OPER DATA ▼" is displayed.
3. When only one indoor unit is connected to remote control, "DATA LOADING" is displayed (blinking indication during data loading).
Next, operation data of the indoor unit will be displayed. Skip to step 7.
4. When plural indoor units is connected, the smallest address number of indoor unit among all connected indoor unit is displayed.

- [Example]:
"SELECT I/U" (blinking 1 seconds) → "I/U000 ▲" blinking.
5. Select the indoor unit number you would like to have data displayed with the **▲** **▼** button.
 6. Determine the indoor unit number with the **(SET)** button.
(The indoor unit number changes from blinking indication to continuous indication) "I/U000" (The address of selected indoor unit is blinking for 2 seconds.)

- "DATA LOADING" (A blinking indication appears while data loaded.)
Next, the operation data of the indoor unit is indicated.
7. Upon operation of the **▲** **▼** button, the current operation data is displayed in order from data number 01.
The items displayed are in the above table.
※ Depending on models, the items that do not have corresponding data are not displayed.
 8. To display the data of a different indoor unit, press the **AIR CON NO.** button, which allows you to go back to the indoor unit selection screen.
 9. Pressing the **(ON/OFF)** button will stop displaying data.
Pressing the **(RESET)** button during remote control unit operation will undo your last operation and allow you to go back to the previous screen.
- Ⓞ If two (2) remote controls are connected to one (1) inside unit, only the master control is available for trial operation and confirmation of operation data. (The slave remote control is not available.)

Trail operation of drain pump

Drain pump operation from remote control unit is possible. Operate a remote control unit by following the steps described below.

1. To start a forced drain pump operation.
 - ① Press the **TEST** button for three seconds or longer.
The display will change "❄️ TEST RUN ▼"
 - ② Press the **▼** button once and cause "DRAIN PUMP ⚡" to be displayed.
 - ③ When the **(SET)** button is pressed, a drain pump operation will start.
Display: "🔌 TO STOP"
 2. To cancel a drain pump operation.
 - ① If either **(SET)** or **(ON/OFF)** button is pressed, a forced drain pump operation will stop. The air-conditioning system will become OFF.
- Ⓞ If two (2) remote controls are connected to one (1) inside unit, only the master control is available for trial operation and confirmation of operation data. (The slave remote control is not available.)

Number	Data Item
01	❄️ (Operation Mode)
02	SET TEMP (Set Temperature)
03	RETURN AIR (Return Air Temperature)
04	SENSOR (Remote Control Thermistor Temperature)
05	TH-R1 (Indoor Unit Heat Exchanger Thermistor / U Bend)
06	TH-R2 (Indoor Unit Heat Exchanger Thermistor / Capillary)
07	TH-R3 (Indoor Unit Heat Exchanger Thermistor / Gas Header)
08	I/U FAN SPEED (Indoor Unit Fan Speed)
09	DEMAND Hz (Frequency Requirements)
10	ANSWER Hz (Response Frequency)
11	I/U EEV P (Pulse of Indoor Unit Expansion Valve)
12	TOTAL I/U RUN H (Total Running Hours of The Indoor Unit)
21	OUTDOOR (Outdoor Air Temperature)
22	TH-O-R1 (Outdoor Unit Heat Exchanger Thermistor)
23	TH-O-R2 (Outdoor Unit Heat Exchanger Thermistor)
24	COMP Hz (Compressor Frequency)
25	HP MPa (High Pressure)
26	LP MPa (Low Pressure)
27	Td (Discharge Pipe Temperature)
28	COMP BOTTOM (Comp Bottom Temperature)
29	CT AMP (Current)
30	TARGET SH (Target Super Heat)
31	SH (Super Heat)
32	TOSH (Discharge Pipe Super Heat)
33	PROTECTION No. (Protection State No. of The Compressor)
34	O/U FAN SPEED (Outdoor Unit Fan Speed)
35	CSH (CSH On/Off)
36	DEFROST (Defrost Control On/Off)
37	TOTAL COMP RUN H (Total Running Hours of The Compressor)
38	O/U EEV1 P (Pulse of The Outdoor Unit Expansion Valve EEV1)
39	O/U EEV2 P (Pulse of The Outdoor Unit Expansion Valve EEV2)

※ Depending on outdoor unit model, there are data not shown.

④ Function setting by remote control

The functional setting

● The initial function setting for typical usage is performed automatically for a remote control unit and an indoor unit by the door unit connected, when remote control and indoor unit are connected.

As long as they are used in a typical manner, there will be no need to change the initial settings.

If you would like to change the initial setting marked "○", set your desired setting as for the selected item.

The procedure of functional setting is shown as the following diagram.

As for detail of setting, refer to the installation manual of remote control.

[Flow of function setting]

Start : While indoor unit do not operate, press "○" (SET) and "○" (MODE) button for 3 seconds at the same time.

Finalize : Press "○" (SET) button.

Reset : Press "○" (RESET) button.

Select : Press "▲" (UP) button.

End : Press "○" (ON/OFF) button.

It is possible to finish above setting on the way, and unfinished change of setting is unavailable.

○ : Initial settings

* : Automatic criterion

As for detail, refer to the installation manual of remote control.

During air-conditioner stopping push
○ (SET) + ○ (MODE) button
simultaneously for 3 seconds

Consult the technical data etc for each control details

Record and save the
setting

Note 1: The initial setting marked "※" is decided by connected indoor and outdoor unit, and is automatically defined as following table.

Function No.	Item	Default	Model
Function 02 of remote control	AUTO RUN SET	AUTO RUN ON	"Auto-RUN" mode selectable indoor unit.
Function 06 of remote control	FAN SPEED SW	○ INVALID	Indoor unit without "Auto-RUN" mode
Function 07 of remote control	LOOWER SW	○ INVALID	Indoor unit with two or three step of air flow setting
Function 13 of remote control	L/U FAN	HI-LO	Indoor unit with only one of air flow setting
Function 15 of remote control	HEAT PUMP	HEAT PUMP	Indoor unit without automatically swing lower
	Cooling Only	COOLING ONLY	Indoor unit with three step of air flow setting
	Heat pump unit	HEAT PUMP	Indoor unit with two step of air flow setting
	Exclusive cooling unite	COOLING ONLY	Indoor unit with only one of air flow setting

Note 2: Fan setting of "HIGH SPEED"

Fan tap	Indoor unit air flow setting					
	20val	21val	22val	23val	24val	25val
FAN SPEED SET	STANDARD	UH - HI - Me - Lo	UH - HI - Me	HI - Lo	HI - Me	UH - HI
	HIGH SPEED 1, 2	UH - UH - HI - Me - Lo	UH - UH - HI - Me	UH - Lo	UH - Me	UH - HI

Initial function setting of some indoor unit is "HIGH SPEED"

Note 3: As for plural indoor unit, set indoor functions to each master and slave indoor unit. But only master indoor unit is received the setting change of indoor unit function "05 EXTERNAL INPUT" and "06 PERMISSION / PROHIBITION".

FUNCTION SET (Remote control function)

Function	setting	description
01 ESP SET	ESP VALID / ESP INVALID	Validate setting of ESP-External Static Pressure / Invalidate setting of ESP
02 AUTO RUN SET	AUTO RUN ON / AUTO RUN OFF	Automatic operation is impossible
03 FAN SPEED SW	○ INVALID / ○ INVALID	Temperature setting button is not working
04 MODE SW	○ INVALID / ○ INVALID	Mode button is not working
05 ON/OFF SW	○ INVALID / ○ INVALID	On/Off button is not working
06 FAN SPEED SW	○ INVALID / ○ INVALID	Fan speed button is not working
07 LOOWER SW	○ INVALID / ○ INVALID	Lower button is not working
08 TIMER SW	○ INVALID / ○ INVALID	Timer button is not working
09 THERMIST SET	○ THERMIST OFF / THERMIST ON / THERMIST +3.0°C / THERMIST +2.0°C / THERMIST +1.0°C / THERMIST -1.0°C / THERMIST -2.0°C / THERMIST -3.0°C	Remote thermostat is not working. / Remote thermostat is working. / Remote thermostat is working, and to be set for producing +3.0°C increase in temperature. / Remote thermostat is working, and to be set for producing +2.0°C increase in temperature. / Remote thermostat is working, and to be set for producing +1.0°C increase in temperature. / Remote thermostat is working, and to be set for producing -1.0°C increase in temperature. / Remote thermostat is working, and to be set for producing -2.0°C increase in temperature. / Remote thermostat is working, and to be set for producing -3.0°C increase in temperature.
10 AUTO RESET	INVALID / VALID	
11 VENT LINK SET	NO VENT / VENT LINK / NO VENT LINK	Connect the single split series and the VRF series to the indoor board CNT and the indoor board CND respectively. If a ventilation device is connected, been geared with the motion of indoor device, the ventilation device is operated/stopped. By connecting the ventilation device with the single split series device to indoor board CNT, the VRF series device to CND, you can operate/stop the ventilation device independently by the handling of ventilation board.
12 TEMP RANGE SET	TEMP CHANGE / NO TEMP CHANGE	If you change the range of set temperature, the indication of set temperature will vary following the control. / If you change the range of set temperature, the indication of set temperature will not vary following the control, and keep the set temperature.
13 L/U FAN	HI-LO / HI-LO / HI-LO / FAN SPEED	Air flow of fan becomes the three speed of HI-LO. / Air flow of fan becomes the two speed of HI-LO. / Air flow of fan becomes the two speed of HI-LO. / Air flow of fan is fixed at one speed.
14 STOP POSITION	POSITION STOP / FREE STOP	If you want to change the remote control function "14 STOP POSITION", you must change the indoor function "04 STOP POSITION" accordingly. / You can select the lower stop position in the four. / The lower can stop at any position.
15 INTEL TYPE	HEAT PUMP / COOLING ONLY	
16 EXTERNAL CONTROL SET	INDIVIDUAL / PARALLEL UNITS	If you input into the indoor printed circuit board CNT from outside, the indoor device will be operated independently following the input from outside. / If you input into indoor printed circuit board CNT from outside, All units which share the same one remote control network work following the input from outside.
17 FAN STOP INDICATION SET	INDICATION OFF / INDICATION ON	In normal working indication, indoor unit temperature is indicated instead of air flow. (Only the master remote control can be indicated.)
18 HEATING INDICATION	INDICATION ON / INDICATION OFF	Heating preparation indication should not be indicated.
19 °C/°F SET	°C / °F	Temperature indication is by degree C / Temperature indication is by degree F

FUNCTION SET (Indoor unit function)

Only when plural indoor units are connected indoor No. selection (Note 3)

Function	setting	description
02 FAN SPEED SET	○ HIGH SPEED 1 / HIGH SPEED 2	
03 FILTER SIGN SET	INDICATION OFF / TYPE 1 / TYPE 2 / TYPE 3 / TYPE 4	The filter sign is indicated after running for 180 hours. / The filter sign is indicated after running for 600 hours. / The filter sign is indicated after running for 1000 hours. / The filter sign is indicated after running for 1000 hours, then it will be stopped by compulsion after 24 hours.
04 STOP POSITION	POSITION STOP / FREE STOP	If to change the indoor function "04 STOP POSITION", the remote control function "14 STOP POSITION" should be changed accordingly. / Select the lower stop position in four. / The lower can stop at any position.
05 EXTERNAL INPUT	LEVEL INPUT / PULSE INPUT	
06 PERMISSION/PROHIBITION	INVALID / VALID	Make permission/prohibition control of function be in effect.
07 EMERGENCY STOP	INVALID / VALID	With the VRF series, it is used to stop all indoor units connected with the same outdoor unit immediately. / When stop signal is inputted from remote on-off terminal "CNT-6", all indoor units are stopped immediately.
08 R/SP OFFSET	OFFSET -2.0°C / OFFSET -1.5°C / OFFSET -1.0°C / NO OFFSET	To be reset for producing +3.0°C increase in temperature during heating. / To be reset for producing +2.0°C increase in temperature during heating. / To be reset for producing +1.0°C increase in temperature during heating.
09 RETURN AIR TEMP	OFFSET -2.0°C / OFFSET -1.5°C / OFFSET -1.0°C / NO OFFSET	To be reset producing +2.0°C increase in return air temperature of indoor unit. / To be reset producing +1.5°C increase in return air temperature of indoor unit. / To be reset producing +1.0°C increase in return air temperature of indoor unit.
10 IS FAN CONTROL	LOW FAN SPEED / SET FAN SPEED / INTERMITTENCE / FAN OFF	When heating thermostat is off, to be operated with low air flow. / When heating thermostat is off, to be operated with set air flow. / When heating thermostat is off, to be operated intermittently. / When heating thermostat is off, the fan stops. / When the remote thermostat is working, "FAN OFF" is set automatically. / Do not set when the indoor unit's thermostat is working. / Change of indoor heat exchanger temperature to start frost prevention control.
11 FROST PREVENTION TEMP	TEMP HIGH / TEMP LOW	Working only with the single split series. / To control frost prevention, the indoor fan tap is raised.
12 FROST PREVENTION CONTROL	FAN CONTROL ON / FAN CONTROL OFF	
13 DRAIN PUMP LINK	○ NO DRAINING / 15MIN / 30MIN / 45MIN / 60MIN	Drain pump is on during cooling and dry. / Drain pump is on during cooling, dry and heating. / Drain pump is on during cooling, dry, heating and fan. / Drain pump is on during cooling, dry and fan.
14 IS FAN STOPPING	NO DRAINING / 15MIN / 30MIN / 45MIN / 60MIN	After cooling is stopped or cooling thermostat is off, the fan does not perform extra operation. / After cooling is stopped or cooling thermostat is off, the fan perform extra operation for half an hour. / After cooling is stopped or cooling thermostat is off, the fan perform extra operation for one hour. / After cooling is stopped or cooling thermostat is off, the fan perform extra operation for six hours.
15 IS FAN STOPPING	NO DRAINING / 15MIN / 30MIN / 45MIN / 60MIN	After heating is stopped or heating thermostat is off, the fan does not perform extra operation. / After heating is stopped or heating thermostat is off, the fan perform extra operation for half an hour. / After heating is stopped or heating thermostat is off, the fan perform extra operation for two hours. / After heating is stopped or heating thermostat is off, the fan perform extra operation for six hours.
16 IS FAN STOPPING	NO DRAINING / 20min OFF 5min ON / 5min OFF 5min ON	During heating is stopped or heating thermostat is off, the fan perform intermittent operation for five minutes after twenty minutes' off with low air flow. / During heating is stopped or heating thermostat is off, the fan perform intermittent operation for five minutes after five minutes' off with low air flow.


ON/OFF button (finished)

⑤ Control mode switching

● The control content of indoor units can be switched in following way. (is the default setting)

Switch No.	Control content	
SW2	Indoor unit address (0-Fh)	
SW5-1	Master/Slave switching (plural /Slave unit setting)	
SW5-2		
SW6-1~4	Model capacity setting	
SW7-1	ON	Operation check, drain motor test run
	OFF	Normal operation

⑥ Function of CNT connector of indoor printed circuit board

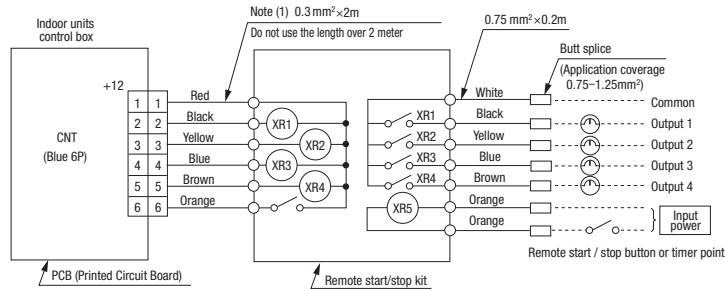

● CnT connector (local) vendor model
 Connector : Made by molex 5264 - 06
 Terminals : Made by molex 5263T

● Function

Output 1	Operation output (there is output when unit is in operation.)
Output 2	Heating output (there is output when operation MODE is HEATING.)
Output 3	Compressor ON output (there is output when compressor is in operation.)
Output 4	Inspection output (there is output when unit is stopped by error.)
Input 5	Remote operation input (Volt-free contact) (inputted to operate unit)

⑦ Troubleshooting

The operation data is saved when the situation of abnormal operation happen, and the data can be confirmed by remote control.

[Operating procedure]

1. Press the [CHECK] button.

The display change "OPER DATA" ↓

2. Once, press the [DOWN] button, and the display change

"ERROR DATA" ▲.

3. Press the [SET] button and abnormal operation data mode is started.

4. When only one indoor unit is connected to remote control, following is displayed.

① The case that there is history of abnormal operation.

→ Error code and "DATA LOADING" is displayed.

[Example]: [E8] (ERROR CODE)

"DATA LOADING" is displayed (blinking indication during data loading).

Next, the abnormal operation data of the indoor unit will be displayed.

Skip to step 8.

② The case that there is not history of abnormal operation.

→ "NO ERROR" is displayed for 3 seconds and this mode is closed.

5. When plural indoor units is connected, following is displayed.

① The case that there is history of abnormal operation.

→ Error code and the smallest address number of indoor unit

among all connected indoor unit is displayed.

[Example]: [E8] (ERROR CODE)

"1/1000" ▲ "blinking"

② The case that there is not history of abnormal operation.

→ Only address number is displayed.

6. Select the indoor unit number you would like to have data displayed with the [UP] [DOWN] button.

7. Determine the indoor unit number with the [SET] button.

[Example]: [E8] (ERROR CODE)

"1/1000" ▲ (The address of selected indoor unit is blinking for 2 seconds.)

[E8] "DATA LOADING" (A blinking indication appears while data loaded.)

Next, the abnormal operation data is indicated.

If the indoor unit doing normal operation is selected, "NO ERROR" is displayed for 3 seconds and address of indoor unit is displayed.

8. By the [UP] [DOWN] button, the abnormal operation data is displayed.

Displayed data item is based on ③ Trial operation.

※ Depending on models, the items that do not have corresponding data are not displayed.

9. To display the data of a different indoor unit, press the [AIR CON No.] button, which allows you to go back to the indoor unit selection screen.

10. Pressing the [ON/OFF] button will stop displaying data.

Pressing the [RESET] button during remote control unit operation will undo your last operation and allow you to go back to the previous screen.

◎ If two (2) remote controls are connected to one (1) indoor unit, only the master control is available for trial operation and confirmation of operation data. (The slave remote control is not available.)

Error Code of indoor unit

Display on remote control	LED on indoor circuit board		Content
	red (checking)	green (normal)	
Off	Off	Continuous blinking	Normal
	Off	Off	Fault on power, indoor power off or lack phase
E1	Off	Continuous blinking	Fault on the transmission between indoor circuit board and remote control
	Not sure	Not sure	Indoor computer abnormal
E5	Blinking twice	Continuous blinking	Fault on outdoor-indoor transmission
E6	Blinking once	Continuous blinking	Indoor heat exchange sensor interrupted or short-circuit
E7	Blinking once	Continuous blinking	Indoor air inhaling sensor broken or short-circuit
E8	Blinking once	Continuous blinking	The temperature of heat exchange abnormal
E9	Blinking once	Continuous blinking	Float switch actions (only with FS)
	Blinking twice	Continuous blinking	Drain pump over current
E10	Off	Continuous blinking	Excess number of remote control connections
E14	Blinking for three times	Continuous blinking	The communication fault for master/slave indoor units
E16	Blinking once	Continuous blinking	Fan motor (1) abnormal
	Blinking twice	Continuous blinking	Fan motor (2) abnormal
E19	Blinking once	Continuous blinking	Configuration fault on running checking model
E20	Blinking once	Continuous blinking	Fan motor (1) abnormal rotation
	Blinking twice	Continuous blinking	Fan motor (2) abnormal rotation
E28	Off	Continuous blinking	Remote control sensor interrupted
Over E30	Off	Continuous blinking	Outdoor unit checking (outdoor circuit board LED checking)









(3) FDUM, FDE series

Electrical wiring work must be performed by an electrician qualified by a local power provider according to the electrical installation technical standards and interior wiring regulations applicable to the installation site.

Security instructions

- Read the "SAFETY PRECAUTIONS" carefully first of all and then strictly follow it during the installation work in order to protect yourself.
- The precautionary items mentioned below are distinguished into two levels, [WARNING] and [CAUTION].
- [WARNING] : Wrong installation would cause serious consequences such as injuries or death.
- [CAUTION] : Wrong installation might cause serious consequences depending on circumstances. Both mentions the important items to protect your health and safety so strictly follow them by any means.
- The meanings of "Marks" used here are as shown on the right:
 - ⊘ Never do it under any circumstances.
 - ⊙ Always do it according to the instruction.
- Accord with following items. Otherwise, there will be the risks of electric shock and fire caused by overheating or short circuit.

⚠ WARNING

- Be sure to have the electrical wiring work done by qualified electrical installer, and use exclusive circuit.  Power source with insufficient capacity and improper work can cause electric shock and fire.
- Use specified wire for electrical wiring, fasten the wiring to the terminal securely, and hold the cable securely in order not to apply unexpected stress on the terminal.  Loose connections or hold could result in abnormal heat generation or fire.
- Arrange the electrical wires in the control box properly to prevent them from rising. Fit the lid of the services panel properly.  Improper fitting may cause abnormal heat and fire.
- Use the genuine option parts. And installation should be performed by a specialist.  If you install the unit by yourself, it could cause water leakage, electric shock and fire.
- Do not repair by yourself. And consult with the dealer about repair.  Improper repair may cause water leakage, electric shock or fire.
- Consult the dealer or a specialist about removal of the air-conditioner.  Improper installation may cause water leakage, electric shock or fire.
- Turn off the power source during servicing or inspection work.  If the power is supplied during servicing or inspection work, it could cause electric shock and injury by the operating fan.
- Shut off the power before electrical wiring work.  It could cause electric shock, unit failure and improper running.

⚠ CAUTION

- Perform earth wiring surely.  Do not connect the earth wiring to the gas pipe, water pipe, lightning rod and telephone earth wiring. Improper earth could cause unit failure and electric shock due to a short circuit.
- Earth leakage breaker must be installed.  If the earth leakage breaker is not installed, it can cause electric shocks.
- Make sure to install earth leakage breaker on power source line. (countermeasure thing to high harmonics.)  Absence of breaker could cause electric shock.
- Use the circuit breaker of correct capacity. Circuit breaker should be the one that disconnect all poles under over current.  Using the incorrect one could cause the system failure and fire.
- Do not use any materials other than a fuse of correct capacity where a fuse should be used.  Connecting the circuit by wire or copper wire could cause unit failure and fire.
- Use power source line of correct capacity.  Using incorrect capacity one could cause electric leak, abnormal heat generation and fire.
- Do not mingle solid cord and stranded cord on power source and signal side terminal block.  In addition, do not mingle difference capacity solid or stranded cord. Inappropriate cord setting could cause losing screw on terminal block, bad electrical contact, smoke and fire.
- Do not turn off the power source immediately after stopping the operation.  Be sure to wait for more than 5 minutes. Otherwise it could cause water leakage or breakdown.
- Do not control the operation with the circuit breaker.  It could cause fire or water leakage. In addition, the fan may start operation unexpectedly and it may cause injury.

Control mode switching

● The control content of indoor units can be switched in following way. (is the default setting)

Switch No.	Control Content	
SW2	Indoor unit address (0-Fh)	
SW5-1	Master/Slave Switching (plural /Slave unit Setting)	
SW5-2		
SW6-1~4	Model capacity setting	
SW7 -1	ON	Operation check, Drain motor test run
	OFF	Normal operation

① Electrical Wiring Connection

● Electrical wiring work must be performed by an electrician an qualified by a local power provider. These wiring specifications are determined on the assumption that the following instructions are observed:


- Do not use cords other than copper ones.
 - Do not use any supply line lighter than one specified in parentheses for each type below.
 - braided cord (code designation 60245 IEC 51), if allowed in the relevant part 2;
 - ordinary tough rubber sheathed cord (code designation 60245 IEC 53);
 - flat twin tinsel cord (code designation 60227 IEC 41);
 - ordinary polyvinyl chloride sheathed cord (code designation 60227 IEC 53);
- Connect the power supply to the outdoor unit.
- Pay extra attention so as not to confuse signal line and power source line connection, because an error in their connection can be burn all the boards at once.

- Screw the line to terminal block without any looseness, certainly.
- Do not turn on the switch of power source, before all of line work is done.
- Provide a dedicated branching circuit and never share a branching circuit with other equipment. If shared, disconnection at the circuit breaker may occur, which can cause secondary damage.
- Use three-core cable as wiring between indoor and outdoor unit. As for detail, refer to "INSTALLATION MANUAL" of outdoor Unit.
- Set earth of D-type.
- Do not add cord in the middle of line (of indoor power source, remote control and signal) route on outside of unit. If connecting point is flooded, it could cause problem as for electric or communication.

- (In the case that it is necessary to set connecting point on the signal line way, perform thorough waterproof measurement.)
- Run the lines (power source, remote control and "between indoor and outdoor unit") upper ceiling through iron pipe or other tube protection to avoid the damage by mouse and so on.
- Keep "remote control line" and "power source line" away from each other on constructing of unit outside.
- Do not connect the power source line [220V/240V/380V/415V] to signal side terminal block. Otherwise, it could cause failure.
- Connection of the line ("Between indoor and outdoor unit", Earth and Remote control)
 - Remove lid of control box before connect the above lines, and connect the lines to terminal block according to number pointed on label of terminal block.
 - In addition, pay enough attention to confirm the number to lines, because there is electrical polarity except earth line.
 - Furthermore, connect earth line to earth position of terminal block of power source.
 - Install earth leakage breaker on power source line. In addition, select the type of breaker for inverter circuit as earth leakage breaker.
 - If the function of selected earth leakage breaker is only for earth-fault protection, hand switch (itself switch and type "B" fuse) or circuit breaker is required in series with the earth leakage breaker.
 - Install isolator or disconnect switch on the power source wiring in accordance with the local codes and regulations. The isolator should be set in the box with key to prevent touching by another person when servicing.


Cable connection for single unit installation

- As for connecting method of power source, select from following connecting patterns. In principle, do not directly connect power source line to inside unit.
 - As for exceptional connecting method of power source, discuss with the power provider of the country with referring to technical documents, and follow its instruction.
- For cable size and circuit breaker selection, refer to the outdoor unit installation manual.

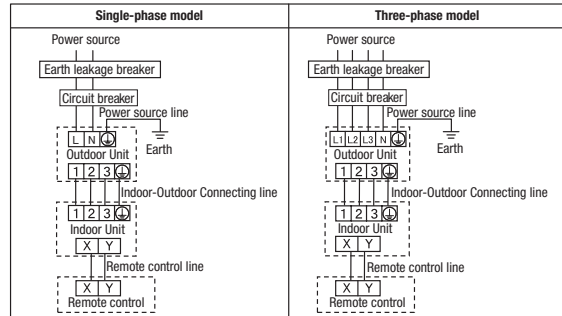

Cable connection for a V multi configuration installation

- Connect the same pairs number of terminal block "①, ②, and ③" and "ⓧ and Ⓨ" between master and slave indoor units.
- Do the same address setting of all inside units belong to same refrigerant system by rotary switch SW2 on indoor unit's PCB (Printed circuit board).
- Set slave indoor unit as "slave 1" through "slave 3" by address switch SW5-1, 5-2 on PCB.
- When the [AIR CON No.] button on the remote control unit is pressed after turning on the power, an indoor unit's address number will be displayed. Do not fail to confirm that the connected indoor unit's numbers are displayed on the remote control unit by pressing the [▲] or [▼] button.

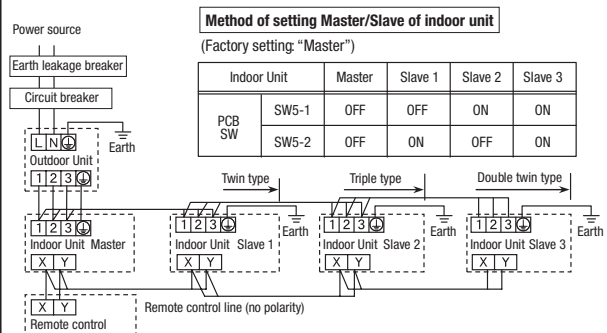

② Remote control, wiring and functions

● Do not install it on the following places

- ① Places exposed to direct sunlight
- ② Places near heat devices
- ③ High humidity places
- ④ Hot surface or cold surface enough to generate condensation
- ⑤ Places exposed to oil mist or steam directly.
- ⑥ Uneven surface

Installation and wiring of remote control

- ① Install remote control referring to the attached installation manual.
- ② Wiring of remote control should use 0.3mm² × 2 core wires or cables.
The insulation thickness is 1mm or more. (on-site configuration)
- ③ Maximum prolongation of remote control wiring is 600 m.

If the prolongation is over 100m, change to the size below.


But, wiring in the remote control case should be under 0.5mm². Change the wire size outside of the case according to wire connecting. Waterproof treatment is necessary at the wire connecting section. Be careful about contact failure.

- 100 - 200m 0.5mm² × 2 cores
- Under 300m 0.75mm² × 2 cores
- Under 400m 1.25mm² × 2 cores
- Under 600m 2.0mm² × 2 cores

- ④ Avoid using multi-core cables to prevent malfunction.
- ⑤ Keep remote control line away from earth (frame or any metal of building).
- ⑥ Make sure to connect remote control line to the remote control and terminal block of indoor unit. (No polarity)

Control plural indoor units by a single remote control

- ① A remote control can control plural indoor units (Up to 16).
In above setting, all plural indoor units will operate under same mode and temperature setting.
- ② Connect all indoor units with 2 cores remote control line.
- ③ Set unique remote control communication address from "0" to "F" to each inside unit by the rotary switch SW2 on the indoor unit's PCB.

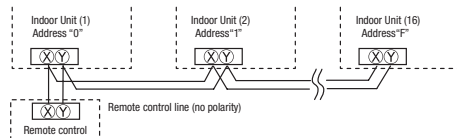

Master/ slave setting when more than one remote control unit are used


A maximum of two remote control units can be connected to one indoor unit (or one group of indoor units.)

The air-conditioner operation follows the last operation of the remote control regardless of the master/slave setting of it.

Acceptable combination is "two (2) wired remote controls", "one (1) wired remote control and one (1) wireless kit" or "two (2) wireless kits".

Set one to "Master" and the other to "Slave".

Note: The setting "Remote control unit sensor enabled" is only selectable with the master remote control unit in the position where you want to check room temperature.

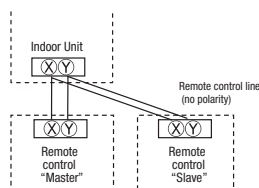

③ Operation and confirmation from remote control

Operation from RC-EX1A Operation from RC-E5

1. Check the number of units connected in the remote control system.
It checks sub units of twin, triple or W-twin connection.

"Menu" ⇒ "Next" ⇒ "Service & Maintenance" ⇒
"Input password" ⇒ "IU address"

Press **AIR CON No.** button to display the IU address. Press the **▼** or **▲** button and check addresses of connected indoor units one by one.

2. Check if each unit is connected properly in the remote control system.
It cannot check main and sub units of twin, triple or W-twin connection.

When the operation is stopped, "Menu" ⇒
"Next" ⇒ "Service & Maintenance" ⇒
"Input password" ⇒ "IU address" ⇒ "check run mode"

If AIR CON No. button is pressed when the operation is stopped, the indoor unit address is displayed. If you select one of addresses for connected indoor units by pressing the **▼** or **▲** button and press the **MODE** button, the unit starts to blow air.

3. Setting main/slave remote controls

"Menu" ⇒ "Next" ⇒ "R/C function settings" ⇒
"Input password" ⇒ "Main/Sub of R/C"

Set SW1 to "Slave" for the slave remote control unit.

4. Checking operation data

"Menu" ⇒ "Next" ⇒ "Service & Maintenance" ⇒
"Input password" ⇒ "Operation data"

Press the **CHECK** button. ⇒ "ERR (H/A)" is displayed. ⇒ Press the **(SET)** button. ⇒ "H/A (H/0/0/0/6)" is displayed. ⇒ Press the **↔** button. ⇒ Select one of addresses for connected indoor units by pressing the **▲** or **▼** button. ⇒ Press the **(SET)** button. ⇒ "H/A (H/0/0/0/6)" is displayed. ⇒ Select data by pressing the **▲** or **▼** button.

5. Checking inspection display

"Menu" ⇒ "Next" ⇒ "Service & Maintenance" ⇒
"Input password" ⇒ "Inspection display"

Press the **CHECK** button. ⇒ **▼** button. ⇒ ERR DATA ⇒ Press the **(SET)** button. ⇒ "DATA LOADING" is displayed. ⇒ Data.

6. Cooling test run from remote control

"Menu" ⇒ "Next" ⇒ "Installation settings" ⇒
"Input password" ⇒ "Test run" ⇒
"Cooling test run" ⇒ "Start"


① Start the system by pressing the **ON/OFF** button.
② Select "Cool" with the **MODE** button.
③ Press the **TEST** button for 3 seconds or longer.
The screen display will switch to TEST RUN.
④ When the **(SET)** button is pressed while "TEST RUN" is indicated, a cooling test run will start.
The screen display will switch to TEST RUN.

7. Trial operation of drain pump from remote control

"Menu" ⇒ "Next" ⇒ "Installation settings" ⇒
"Input password" ⇒ "Test run" ⇒
"Drain pump test run" ⇒ "Run"

① Press the **TEST** button for three seconds or longer.
The display will change to "TEST RUN".
② Press the **▼** button once and cause "DRAIN PMP" to be displayed.
③ When the **(SET)** button is pressed, a drain pump operation will start. Display: "DRAIN STOP".

④ Function of CnT connector of indoor printed circuit board

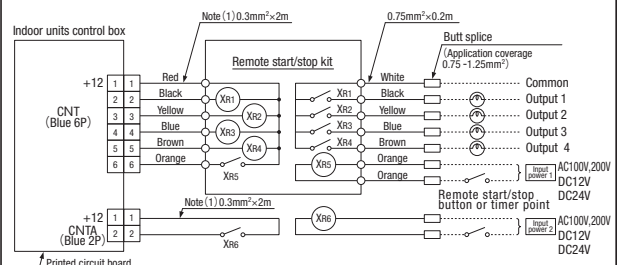

Note (1): Do not use the length over 2 meter

● CnT connector (local) vendor model
Connector : Made by molex 5264-06
Terminals : Made by molex 5263 T

● Function

Output 1	Air-conditioner operation output (When the air-conditioner ON: XR1 = ON)
Output 2	Heating output
Output 3	Thermostat ON output (When the thermostat ON: XR3 = ON)
Output 4	Air-conditioner check ON (When checking air-conditioner: XR4 = ON)
Input	At shipping XR5 OFF ⇒ ON: Air-conditioner oper ates. XR5 ON ⇒ OFF: Air-conditioner stops.
	*Functions and controls may vary depending on the switching at site.
Input 2 (FDT etc.)	At shipping XN6 OFF ⇒ ON: Air-conditioner oper ates. XN6 ON ⇒ OFF: Air-conditioner stops.
	*Functions and controls may vary depending on the switching at site.

* Refer to I/U settings.

● CnTA connector is installed on FDT, etc. Refer to the spec. drawings.
CnTA connector (local) vendor model
Connector : Made by JST XAP02V-1-E
Terminals : Made by JST SXA-01T-P0.6

⑥ Operation and setting from remote control

A: Refer to the instruction manual for RC-EX series.
 B: Refer to the installation manual for RC-EX series.
 C: Loading a utility software via Internet
 ○: Nearly same function setting and operations are possible.
 △: Similar function setting and operations are possible.

Setting & display item	Description	RC-EX3	RC-E5
1. Remote Control network			
1 Control plural indoor units by a single remote control	A remote control can control plural indoor units up to 16 (in one group of remote control network). An address is set to each indoor unit.	○	○
2 Master/slave setting of remote controls	A maximum of two remote controls (include option wireless) can be connected to one indoor unit. Set one to "Master" and the other to "Slave".	B	○
2. TOP screen, Switch manipulation			
1 Menu	"Control", "Settings", or "Details" can be selected. (3.-19.)	A	
2 Operation mode	"Cooling", "Heating", "Fan", "Dry" or "Auto" can be set.	A	○
3 Set temp.	"Set temperature" can be set by 0.5°C interval.	A	○
4 Air flow direction	"Air flow direction", [Individual flap control setting] can be set.	A	○
5 Fan speed	"Fan speed" can be set.	A	○
6 Timer setting	"Timer operation" can be set.	A	○
7 ON/OFF	"On/Off operation of the system" can be done.	A	○
8 High power SW	"High power operation" or "Normal operation" can be selected.	A	
9 Energy-saving SW	"Energy-saving operation" or "Normal operation" can be selected.	A	
3. Energy-saving settin			
1 Auto OFF timer [Administrator password]	For preventing the timer from keeping ON, set hours to stop operation automatically with this timer. •The selectable range of setting time is from 30 to 240 minutes (10minutes interval) •When setting is "Valid", this timer will activate whenever the ON timer is set.	A	△
2 Peak-cut timer [Administrator password]	Power consumption can be reduced by restricting the maximum capacity. Set the [Start time], the [End time] and the capacity limit % (Peak-cut %). •4-operation patterns per day can be set at maximum. •The setting time can be changed by 5-minutes interval. •The selectable range of capacity limit % (Peak-cut %) is from 0% to 40-80% (20% interval). •Holiday setting is available.	A	
3 Automatic temp. set back [Administrator password]	After the elapse of the set time period, the current set temp. will be set back to the [Set back temp.] •The setting can be done in cooling and heating mode respectively. •The selectable range of the set time is from 20 min. to 120 min. (10 min. interval). •Set the [Set back temp.] by 1°C interval.	A	△
4. Individual flap control setting			
Individual flap control setting	The moving range (the positions of upper limit and lower limit) of the flap for individual air outlet port can be set.	A	○
5. Ventilation			
1 External ventilation (In combination with ventilator)	On/Off operation of the external ventilator can be done. •The settings of [Interlock] with AC (air-conditioner), [Single operation] of ventilator or operation [invalid] of ventilation can be done through [Ventilation settings] in the [Remote control] menu.	A	○
6. Filter sign reset			
1 Filter sign reset	The filter sign can be reset.	B	
2 Setting next cleaning date	The next cleaning date can be set.	A	
7. Initial settings			
1 Clock setting	The current date and time can be set or revised.	A	△
2 Date and time display	[Display] or [Hide] the date and/or time can be set, and the [12H] or [24H] display can be set.	A	
3 Summer time	When select [Valid], the +1hour adjustment of current time can be set. When select [Invalid], the [Summer time] adjustment can be reset.	A	
4 Contrast	The contrast of LCD can be adjusted higher or lower.	A	
5 Backlight	Switching on/off a light can be set and the period of the lighting time can be set within the range of 5sec-90sec (5sec interval).	A	
6 Control sound	It can set with or without [Control sound (beep sound)] at touching panel.	A	
8. Timer settings			
1 Set On timer by hour	The period of time to start operation after stopping can be set. •The period of set time can be set within the range of 1hour-12hours (1hr interval). •The operation mode, set temp and fan speed at starting operation can be set.	A	△
2 Set Off timer by hour	The period of time to stop operation after starting can be set. •The period of set time can be set within the range of 1hour-12hours (1hr interval).	A	△
3 Set On timer by clock	The clock time to start operation can be set. •The set clock time can be set by 5 minutes interval. •[Once (one time only)] or [Everyday] operation can be switched. •The operation mode, set temp. and fan speed at starting operation can be set.	A	△
4 Set Off timer by clock	The clock time to stop operation can be set. •The set clock time can be set by 5 minutes interval. •[Once (one time only)] or [Everyday] operation can be switched.	A	△
5 Confirmation of timer settings	Status of timer settings can be seen.	A	
9. Weekly timer			
1 Weekly timer [Administrator password]	On timer and Off timer on weekly basis can be set. •8-operation patterns per day can be set at a maximum. •The setting clock time can be set by 5 minutes interval. •Holiday setting is available. •The operation mode, set temp and fan speed at starting operation can be set.	A	△
10. Home leave mode			
1 Home leave mode [Administrator password]	When leaving home for a long period like a vacation leave, the unit can be operated to maintain the room temperature not to be hotter in summer or not to be colder in winter. •The judgment to switch the operation mode (Cooling⇔Heating) is done by the both factors of the set temp. and outdoor air temp.. •The set temp. and fan speed can be set.	A	

⑥ Operation and setting from remote control (continued)

Setting & display item	Description	RC-EX3	RC-E5
11. Administrator settings	[Administrator password]	A	
1 Enable/Disable setting	•Enable/Disable setting of operation can be set. [On/Off] [Change set temp.] [Change operation mode] [Change air flow direction] [Individual flap control setting][Fan speed] [High power operation] [Energy-saving operation] [Timer settings] [Weekly timer setting] •Request for administrator password can be set. [Individual flap control setting][Weekly timer][Energy-saving setting][Home leave mode][Administrator settings]	A	△
2 Silent mode timer	The period of time to operate the outdoor unit by prioritizing the quietness can be set. •The [Start time] and the [End time] for operating outdoor unit in silent mode can be set. •The period of the operation time can be set once a day by 5 minutes interval.	A	△
3 Setting temp. range	The upper/lower limit of indoor temp. setting range can be set. •The limitation of indoor temp. setting range can be set for each operation mode in cooling and heating.	A	△
4 Temp. increment setting	The temp. increment setting can be changed by 0.5°C or 1.0°C.	A	
5 RC display setting	Register [Room name] [Name of I/U] Display [indoor temp.] or not. Display [inspection code] or not. Display [Heating stand-by] [Defrost operation] [Auto cooling/heating] or not	A	○ △ ○
6 Change administrator password	The administrator password can be changed. (Default setting is "0000") The administrator password can be reset.	A B	
12. Installer settings	[Service password]	B	
1 Installation date	The [Installation date] can be registered. •When registering the [Installation date], the [Next service date] is displayed automatically. (For changing the [Next service date], please refer the item of [Service & Maintenance].)	B	
2 Service contact	The [Service contact] can be registered and can be displayed on the RC. •The [Contact company] can be registered within 10 characters. •The [Contact phone] can be registered within 13 digits.	B	
3 Test run	On/Off operation of the test run can be done.		
Cooling test run	The [Cooling test run] can be done at 5°C of set temp. for 30 minutes.	B	○
Drain pump test run	Only the drain pump can be operated.	B	○
Compressor Hz fixed operation	The [Test run] operation can be done with fixed compressor Hz set by installer.	B	○
4 Static pressure adjustment	In case of combination with only the ducted indoor unit which has a function of static pressure adjustment, the static pressure is adjustable.	B	
5 Change auto-address	The set address of each indoor unit decided by auto-address setting method can be changed to any other address. (For multiple KX units only)	B	△
6 Address setting of Main IU	Main indoor unit address can be set. •Only the Main indoor unit can change operation mode and the Sub indoor units dominated by the Main indoor unit shall follow. •The Main indoor unit can domain 10 indoor units at a maximum.	B	△
13. RC function settings	[Service password]	B	
1 Main/Sub RC setting	The setting of [Main/Sub RC] can be changed.	B	○
2 RC sensor	The offset value of [RC sensor] sensing temp. can be set respectively in heating and cooling.	B	○
9 RC sensor adjustment	The offset value of [RC sensor] sensing temp. can be set respectively in heating and cooling. •The setting range of offset value is ±3°C both in cooling and heating.	B	△
3		B	○
4 12 Operation mode	The [Valid/invalid] setting of [Auto][Cooling][Heating] and [Dry] can be done respectively.	B	○
5 13 Fan speed	The setting of [Fan speed] can be done from following patterns. •1-speed, 2-speeds (Hi-Me), 2-speeds (Hi-Lo), 3-speeds, 4-speeds.	B	○
14 External input	The applicable range ([Individual] or [All units]) of CnT input to the multiple indoor units connected in one control system. •[Individual] : Only the unit received CnT input signal. •[All units] : All the units connected to one control system received CnT input signal.	B	○
6		B	○
7 15 Ventilation setting	The setting of [Invalid] operation of ventilator, [Interlock] with AC or [Independent] of ventilator can be selected. •When setting [Interlock], the operation of external ventilator is interlocked with the operation of AC •When setting [Independent], only the operation of external ventilator is available.	B	○
8 16 Flap control	The [Flap control] method can be switched to [Stop at fixed position] or [Stop at any position] •[Stop at fixed position] : Stop the flap at a certain position among the designated 4 positions. •[Stop at any position] : Stop the flap at any arbitrary position just after the stopping command from RC was sent.	B	○
9 17 Auto-restart	The operation control method after recovery of power blackout happened during operation can be set.	B	○
10 18 Auto temp. setting	[Valid] or [Invalid] of [Auto temp. setting] can be selected.	B	
11 19 Auto fan speed setting	[Valid] or [Invalid] of [Auto fan speed setting] can be selected.	B	
14. I/U settings	[Service password]	B	
1 High ceiling	The fan tap of indoor fan can be changed. •[Standard] [High ceiling 1] [High ceiling 2] can be selected.	B	○
2 Filter sign	The setting of filter sign display timer can be done from following patterns.	B	○
3 External input 1	The content of control by external input can be changed. •The selectable contents of control are [On/Off] [Permission/Prohibition] [Cooling/heating] [Emergency stop]	B	○
4 External input 1 signal	The type of external input signal ((Level input)/[Pulse input]) can be changed.	B	○
5 External input 2	•The selectable contents of control are [On/Off] [Permission/Prohibition] [Cooling/heating] [Emergency stop]	B	
6 External input 2 signal	The type of external input signal ((Level input)/[Pulse input]) can be changed.	B	
7 Heating thermo-off temp. adjust.	The judgment temp. of heating thermo-off can be adjusted within the range from 0 to +3°C (1°C interval)	B	△
8 Return air sensor adjust.	The sensing temp. of return air temp. sensor built in the indoor unit can be adjusted within the range of ±2°C.	B	△
9 Fan control in heating thermo OFF	The fan control method at heating thermo-off can be changed. •The selectable fan control methods are [Low] [Set fan speed] [Intermittent] [Stop].	B	○
10 Anti-frost temp.	The judgment temp. of anti-frost control for the indoor unit in cooling can be changed to [Temp. High] or [Temp. Low].	B	○
11 Anti-frost control	When the anti-frost control of indoor unit in cooling is activated, the fan speed can be changed.	B	○
12 Drain pump operation	In any operation mode in addition to cooling and dry mode, the setting of drain pump operation can be done.	B	○
13 Residual fan operation in cooling	The time period of residual fan operation after stopping or thermo-off in cooling mode can be set.	B	○
14 Residual fan operation in heating	The time period of residual fan operation after stopping or thermo-off in heating mode can be set.	B	○
15 Intermittent fan operation in heating	The fan operation rule following the residual fan operation after stopping or thermo-off in heating mode can be set.	B	○
16 Fan circulator operation	In case that the fan is operated as the circulator, the fan control rule can be set.	B	
17 Control pressure adjust. (For OA processing unit only)	When only the OA processing units are operated, control pressure value can be changed.	B	○
18 Auto operation mode	The [Auto rule selection] for switching the operation mode automatically can be selected from 3 patterns.	B	
19 Thermo. rule setting	When selecting [Outdoor air temp. control], the judgment temp. can be offset by outdoor temp..	B	
20 Auto fan speed control	Under the [Auto fan speed control] mode, the switching range of fan speed can be selected from following 2 patterns [Auto 1] [Auto 2]. •[Auto 1] : Hi ⇄Me⇄Lo •[Auto 2] : P-hi⇄Hi⇄Me⇄Lo	B	
15. Service & Maintenance	[Service password]	B	
1 I/U address No.	Max. 16 indoor units can be connected to one remote control, and all address No. of the connected indoor units can be displayed. •The indoor unit conforming to the address No. can be identified by selecting the address No. and tapping [Check] to operate the indoor fan.	B	○
2 Next service date	The [Next service date] can be registered. •The [Next service date] and [Service contact] is displayed on the [Periodical check] message screen.	AB	
3 Operation data	Total 39 items of [Operation data] for indoor unit and outdoor unit can be displayed.	B	○
4 Error history	[Date and time of error occurred] [I/U address] [Error code] for Max. 16 latest cases of error history can be displayed.	B	△
Display anomaly data	The operation data just before the latest error stop can be displayed.	B	
Reset periodical check	The timer for the periodical check can be reset.	B	○
5 Saving I/U settings	The I/U settings memorized in the indoor PCB connected to the remote control can be saved in the memory of the remote control.	B	
6 Special settings	[Erase I/U address] [CPU reset] [Initializing] [Touch panel calibration]	B	△
16. Inspection		A	△
Confirmation of inspection	The address No. of anomalous indoor/outdoor unit and error code are displayed.		
17. PC connection		C	
USB connection	Weekly timer setting and etc., can be set from PC.		

(4) FDF series

PGA012D405

Electrical wiring work must be performed by an electrician qualified by a local power provider according to the electrical installation technical standards and interior wiring regulations applicable to the installation site.

Security instructions

- Read the "SAFETY PRECAUTIONS" carefully first of all and then strictly follow it during the installation work in order to protect yourself.
- The precautionary items mentioned below are distinguished into two levels, [WARNING] and [CAUTION].
 - [WARNING] : Wrong installation would cause serious consequences such as injuries or death.
 - [CAUTION] : Wrong installation might cause serious consequences depending on circumstances.
 Both mentions the important items to protect your health and safety so strictly follow them by any means.
- The meanings of "Marks" used here are as shown on the right:
 - ⊘ Never do it under any circumstances.
 - ⊙ Always do it according to the instruction.
- Accord with following items. Otherwise, there will be the risks of electric shock and fire caused by overheating or short circuit.

⚠WARNING

- Be sure to have the electrical wiring work done by qualified electrical installer, and use exclusive circuit. ⊘
Power source with insufficient capacity and improper work can cause electric shock and fire.
- Use specified wire for electrical wiring, fasten the wiring to the terminal securely, and hold the cable securely in order not to apply unexpected stress on the terminal. Loose connections or hold could result in abnormal heat generation or fire. ⊘
- Arrange the electrical wires in the control box properly to prevent them from rising. Fit the lid of the services panel property. Improper fitting may cause abnormal heat and fire. ⊘
- Use the genuine option parts. And installation should be performed by a specialist. ⊘
If you install the unit by yourself, it could cause water leakage, electric shock and fire.
- Do not repair by yourself. And consult with the dealer about repair. ⊘
Improper repair may cause water leakage, electric shock or fire.
- Consult the dealer or a specialist about removal of the air-conditioner. ⊘
Improper installation may cause water leakage, electric shock or fire.
- Turn off the power source during servicing or inspection work. ⊘
If the power is supplied during servicing or inspection work, it could cause electric shock and injury by the operating fan.
- Shut off the power before electrical wiring work. ⊘
It could cause electric shock, unit failure and improper running.

⚠CAUTION


- Perform earth wiring surely. ⊘
Do not connect the earth wiring to the gas pipe, water pipe, lightning rod and telephone earth wiring. Improper earth could cause unit failure and electric shock due to a short circuit.
- Earth leakage breaker must be installed. ⊘
If the earth leakage breaker is not installed, it can cause electric shocks.
- Make sure to install earth leakage breaker on power source line. (countermeasure thing to high harmonics.) ⊘
Absence of breaker could cause electric shock.
- Use the circuit breaker of correct capacity. Circuit breaker should be the one that disconnect all poles under over current. ⊘
Using the incorrect one could cause the system failure and fire.
- Do not use any materials other than a fuse of correct capacity where a fuse should be used. ⊘
Connecting the circuit by wire or copper wire could cause unit failure and fire.
- Use power source line of correct capacity. ⊘
Using incorrect capacity one could cause electric leak, abnormal heat generation and fire.
- Do not mingle solid cord and stranded cord on power source and signal side terminal block. ⊘
In addition, do not mingle difference capacity solid or stranded cord. Inappropriate cord setting could cause losing screw on terminal block, bad electrical contact, smoke and fire.
- Do not turn off the power source immediately after stopping the operation. ⊘
Be sure to wait for more than 5 minutes. Otherwise it could cause water leakage or breakdown.
- Do not control the operation with the circuit breaker. ⊘
It could cause fire or water leakage. In addition, the fan may start operation unexpectedly and it may cause injury.

① Electrical wiring connection

- Use three-core cable as wiring between indoor and outdoor unit. As for detail, refer to "INSTALLATION MANUAL" of outdoor unit.
- Set earth of D-type.
- Keep "remote control line" and "power source line" away from each other on constructing of unit outside.
- Run the lines (power source, remote control and "between indoor and outdoor unit") upper ceiling through iron pipe or other tube protection to avoid the damage by mouse and so on.
- Do not add cord in the middle of line route (of power source, remote control and "between indoor and outdoor unit") on outside of unit. If connecting point is flooded, it could cause problem as for electric or communication. (In the case that it is necessary to set connecting point on the way, perform thorough waterproof measurement.)
- Do not connect the power source line [220V/240V/380V/415V] to signal side terminal block. Otherwise, it could cause failure.
- Screw the line to terminal block without any looseness, certainly.
- Do not turn on the switch of power source, before all of line work is done.
- Connection of the line ("Between indoor and outdoor unit", earth and remote control)
 - ① Remove lid of control box before connect the above lines, and connect the lines to terminal block according to number pointed on label of terminal block.
 - ② In addition, pay enough attention to confirm the number to lines, because there is electrical polarity except earth line. Furthermore, connect earth line to earth position of terminal block of power source.
 - ③ Install earth leakage breaker on power source line. In addition, select the type of breaker for inverter circuit as earth leakage breaker.
 - ④ If the function of selected earth leakage breaker is only for earth-fault protection, hand switch (switch itself and type "B" fuse) or circuit breaker is required in series with the earth leakage breaker.
 - ⑤ Install the local switch near the unit.

Cable connection for single unit installation

- ① As for connecting method of power source, select from following connecting patterns. In principle, do not directly connect power source line to inside unit.
 - ※ As for exceptional connecting method of power source, discuss with the power provider of the country with referring to technical documents, and follow its instruction.
- ② For cable size and circuit breaker selection, refer to the outdoor unit installation manual.

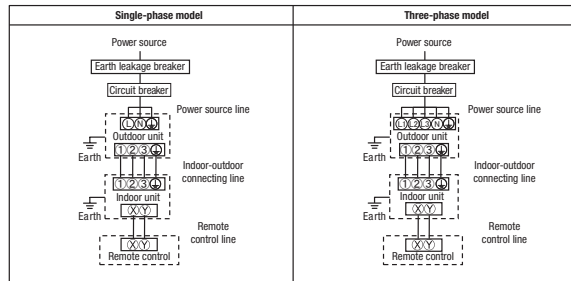


Cable connection for a V multi configuration installation

- ① Connect the same pairs number of terminal block "①, ②, and ③" and "④ and ⑤" between master and slave indoor units.
- ② Do the same address setting of all inside units belong to same refrigerant system by rotary switch SW2 on indoor unit's PCB (Printed circuit board).
- ③ Set slave indoor unit as "slave 1" through "slave 3" by address switch SW5-1, 5-2 on PCB.
- ④ When the [AIR CON NO.] button on the remote control unit is pressed after turning on the power, an indoor unit's address number will be displayed. Do not fail to confirm that the connected indoor unit's numbers are displayed on the remote control unit by pressing the [▲] or [▼] button.

Method of setting Master/Slave of indoor unit

(Factory setting: "Master")

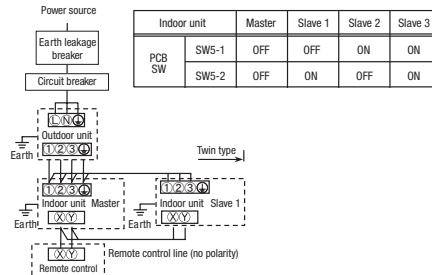


Switch and wiring specification

Refer to the installation manual attached to the outdoor unit.

② Wiring for the remote control

- For each indoor unit, one more remote control can be connected in addition to the one which is built in the main unit.

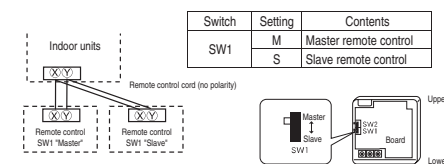


Set SW1 to "Slave" for the slave remote control. It was factory set to "Master" for shipment.
Note: The setting "Remote control thermostat enabled" is only selectable with the master remote control in the position where you want to check room temperature.
The air-conditioner operation follows the last operation of the remote control regardless of the master/ slave setting of it.


* When setting the remote control built in the main unit to the "Slave":
Remove the cover and change the setting of switch as follows.

② Wiring for the remote control (Continued)

- Open the remote control cover and remove the screw without fail.



- Remove the upper case of remote control. Attach a flat head screwdriver at the upper part of remote control and pry lightly. It will come off easily. Use some cushion to protect the center panel.



③ Function setting by remote control

Installation and wiring of remote control

- Wiring of remote control should use 0.3mm² × 2 core wires or cables. (on-site configuration)
- Maximum prolongation of remote control wiring is 600 m. If the prolongation is over 100m, change to the size below. But, wiring in the remote control case should be under 0.5mm². Change the wire size outside of the case according to wire connecting. Waterproof treatment is necessary at the wire connecting section. Be careful about contact failure.

100 ~ 200m	0.5mm ² × 2 cores
Under 300m	0.75mm ² × 2 cores
Under 400m	1.25mm ² × 2 cores
Under 600m	2.0mm ² × 2 cores

The indication when power source is supplied

When power source is turned on, the following is displayed on the remote control until the communication between the remote control and indoor unit settled.

Master remote control : * @WAIT@
Slave remote control : * @WAIT@

At the same time, a mark or a number will be displayed for two seconds first. This is the software's administration number of the remote control, not an error cord.



When remote control cannot communicate with the indoor unit for half an hour, the below indication will appear. Check wiring of the indoor unit and the outdoor unit etc.



How to set function

- Stop air-conditioner and press () (SET) () (MODE) buttons at the same time for over three seconds, and the "FUNCTION SET" will be displayed.
- Press () (SET) button.
- Make sure which do you want to set, "FUNCTION" (remote control function) or "I/U FUNCTION" (indoor unit function).
- Press () or () button. Select "FUNCTION" (remote control function) or "I/U FUNCTION" (indoor unit function).
- Press () (SET) button.
- On the occasion of remote control function selection
 - "DATA LOADING" (Indication with blinking) → Display is changed to "01 GRILLE ↑ ↓ SET".
 - Press () or () button. "No. and function" are indicated by turns on the remote control function table, then you can select from them. (For example)
 - Press () (SET) button. The current setting of selected function is indicated. (for example) "AUTO RUN ON" ← If "02 AUTO RUN SET" is selected
 - Press () or () button. Select the setting.
 - Press () (SET) button. "SET COMPLETE" will be indicated, and the setting will be completed. Then after "No. and function" indication returns, set as the same procedure if you want to set continuously, and if to finish, go to 7.

On the occasion of indoor unit function selection

- "DATA LOADING" (Blinking for 2 to 23 seconds to read the data) → Indication is changed to "02 FAN SPEED SET". Go to ②.

[Note]

(1) If plural indoor units are connected to a remote control, the indication is "IU 000" (blinking) ← The lowest number of the indoor unit connected is indicated.

(2) Press () or () button. Select the number of the indoor unit you are to set. If you select "ALL UNIT", you can set the same setting with all units.

(3) Press () (SET) button.

(4) Press () or () button. "No. and function" are indicated by turns on the indoor unit function table, then you can select from them. (For example)

③ Function setting by remote control (Continued)

- Press () (SET) button. The current setting of selected function is indicated. (For example) "STANDARD" ← If "02 FAN SPEED SET" is selected.
- Press () or () button. Select the setting.
- Press () (SET) button. "SET COMPLETE" will be indicated, and the setting will be completed. Then after "No. and function" indication returns, set as the same procedure if you want to set continuously, and if to finish, go to 7.

※ When plural indoor units are connected to a remote control, press the (AIR CON No.) button, which allows you to go back to the indoor unit selection screen. (example "IU 000") ▲
- Press (ON/OFF) button. Setting is finished.
 - It is possible to finish by pressing (ON/OFF) button on the way, but unfinished change of setting is unavailable.
 - During setting, if you press () (RESET) button, you return to the previous screen.
 - Setting is memorized in the control and it is saved independently of power failure.

How to check the current setting

When you select from "No. and function" and press set button by the previous operation, the "Setting" displayed first is the current setting. (But, if you select "ALL UNIT", the setting of the lowest number indoor unit is displayed.)

The functional setting

- The initial function setting for typical use is performed automatically by the indoor unit connected, when remote control and indoor unit are connected. As long as they are used in a typical manner, there will be no need to change the initial settings. If you would like to change the initial setting marked * (), set your desired setting as for the selected item. The procedure of functional setting is shown as the following diagram. Sequence of the function setting is as follows.

The range of temperature setting

When shipped, the range of set temperature differs depending on the operation mode as below.
Heating : 16-300C (55-860F)
Except heating (cooling, fan, dry, automatic) : 18-300C (62-860F)

Upper limit and lower limit of set temperature can be changed with remote control.


Upper limit setting: valid during heating operation. Possible to set in the range of 20 to 300C (68 to 860F).
Lower limit setting: valid except heating (automatic, cooling, fan, dry) Possible to set in the range of 18 to 260C (62 to 790F).
When you set upper and lower limit by this function, control as below.

- When () TEMP RANGE SET, remote control function of function setting mode is "INDN CHANGE" (factory setting). [If upper limit value is set] During heating, you cannot set the value exceeding the upper limit. [If lower limit value is set] During operation mode except heating, you cannot set the value below the lower limit.
- When () TEMP RANGE SET, remote control function of function setting mode is "NO INDN CHANGE" [If upper limit value is set] During heating, even if the value exceeding the upper limit is set, upper limit value will be sent to the indoor unit. But, the indication is the same as the temperature set. [If lower limit value is set] During except heating, even if the value lower than the lower limit is set, lower limit value will be sent to the indoor unit. But, the indication is the same as the temperature set.

How to set upper and lower limit value

- Stop the air-conditioner, and press () (SET) and () (MODE) button at the same time for over three seconds. The indication changes to "FUNCTION SET".
- Press () button once, and change to the "TEMP RANGE" indication.
- Press () (SET) button, and enter the temperature range setting mode.
- Select "UPPER LIMIT" or "LOWER LIMIT" by using () or () button.
- Press () (SET) button to fix.
- When "UPPER LIMIT" is selected (valid during heating)
 - Indication: " √ ∨ SET UP" → "UPPER 300C" *
 - Select the upper limit value with temperature setting button () () . Indication example: "UPPER 260C √ ∨" (blinking)
 - Press () (SET) button to fix. Indication example: "UPPER 260C" (Displayed for two seconds) After the fixed upper limit value displayed for two seconds, the indication will return to "UPPER LIMIT".
- When "LOWER LIMIT" is selected (valid during cooling, dry, fan, automatic)
 - Indication: " √ ∨ SET UP" → "LOWER 180C" *
 - Select the lower limit value with temperature setting button () () . Indication example: "LOWER 240C √ ∨" (blinking)
 - Press () (SET) button to fix. Indication for example: "LOWER 240C" (Displayed for two seconds) After the fixed lower limit value displayed for two seconds, the indication will return to "LOWER LIMIT".
- Press (ON/OFF) button to finish.

It is possible to finish by pressing (ON/OFF) button on the way, but unfinished change of setting is unavailable. During setting, if you press () (RESET) button, you return to the previous screen.

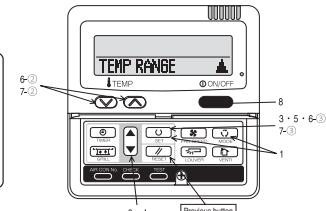

Note 1: Fan setting of "HIGH SPEED"

FAN SPEED SET	Fan tap	Indoor unit air flow setting					
		①	②	③	④	⑤	⑥
STANDARD		UH - HI - Me - Lo	Hi - Me - Lo	Hi - Lo	Hi - Lo	Hi - Me	
HIGH SPEED, 2		UH - UH - HI - Me	UH - HI - Me	UH - Me	UH - HI		

Initial function setting of some indoor unit is "HIGH SPEED"

Note 2: As for plural indoor unit, set indoor functions to each master and slave indoor unit. But only master indoor unit is received the setting change of indoor unit function "05 EXTERNAL INPUT" and "06 PERMISSION / PROHIBISHION".

③ Function setting by remote control (Continued)

[Flow of function setting]

- Start : While indoor unit do not operate, press " (SET) and " (MODE) button for 3 seconds at the same time.
- Finalize : Press " (SET) button.
- Reset : Press " (RESET) button.
- Select : Press " (UP) button.
- End : Press " (ON/OFF) button.

It is possible to finish above setting on the way, and unfinished change of setting is unavailable.
 " ○ " : Initial settings
 " ※ " : Automatic criterion
 As for detail, refer to the installation manual of remote control.

During air-conditioner stopping push (SET) + (MODE) button simultaneously for 3 seconds

Consult the technical data etc for each control details

Record and save the setting

FUNCTION SET		Indoor No. selection	
Function	Setting	Function	Setting
01 FAN SPEED SET	14 INVALID ○ ECON ZONE ONLY ○ ECON ZONE ONLY ○ AUTO RUN IN ○ AUTO RUN OFF ○	02 FAN SPEED SET	STANDARD ※ HIGH SPEED 1 ※ (Note2) HIGH SPEED 2 ※
02 AUTO RUN SET	AUTO RUN IN ★ AUTO RUN OFF ○	03 FILTER SIGN SET	INDICATION OFF ○ TYPE 1 ○ TYPE 2 ○ TYPE 3 ○ TYPE 4 ○
03 ECON TEMP SW	ECON VALID ○ ECON INVALID ○	04 S/P POSITION	POSITION STOP ★ FREE STOP ○
04 ECON MODE SW	ECON VALID ○ ECON INVALID ○	05 EXTERNAL INPUT	LEVEL INPUT ○ PULSE INPUT ○
05 ON/OFF SW	ON/OFF VALID ○ ON/OFF INVALID ○	06 PROHIBIT CONTROL	INVALID ○ VALID ○
06 FAN SPEED SW	FAN VALID ○ FAN INVALID ○	07 EMERGENCY STOP	INVALID ○ VALID ○
07 ECON LOUVER SW	ECON VALID ○ ECON INVALID ○	08 SP OFFSET	OFFSET +3.0℃ ○ OFFSET +2.0℃ ○ OFFSET +1.0℃ ○ NO OFFSET ○
08 ECON TIMER SW	ECON VALID ○ ECON INVALID ○	09 RETURN AIR TEMP	OFFSET +2.0℃ ○ OFFSET +1.5℃ ○ OFFSET +1.0℃ ○ NO OFFSET ○ OFFSET -1.0℃ ○ OFFSET -1.5℃ ○ OFFSET -2.0℃ ○
09 ECON AIR SET	ECON OFF ○ ECON ON ○ ECON +3.0℃ ○ ECON +2.0℃ ○ ECON +1.0℃ ○ ECON -1.0℃ ○ ECON -2.0℃ ○ ECON -3.0℃ ○	10 SP FAN CONTROL	LOW FAN SPEED ○ SET FAN SPEED ○ INTERMITTENT ○ FAN OFF ○
10 AUTO RESTART	INVALID ○ VALID ○	11 FROST PREVENTION TEMP	TEMP HIGH ○ TEMP LOW ○
11 VENT LINK SET	NO VENT ○ VENT LINK ○ NO VENT LINK ○	12 FROST PREVENTION CONTROL	FAN CONTROL ON ○ FAN CONTROL OFF ○
12 TEMP RANGE SET	RANGE CHANGE ○ MOTION CHANGE ○	13 DRAIN PUMP LINK	ON ○ OFF ○ ON AND OFF ○ OFF AND ON ○
13 FAN	HI-NO-L ○ HI-L ○ HI-M ○ T FAN SPEED ○	14 IS FAN REMAINING	NO REMAINING ○ 0.5 HOUR ○ 1 HOUR ○ 2 HOUR ○ 6 HOUR ○
14 S/P POSITION	POSITION STOP ★ FREE STOP ○	15 IS HEAT REMAINING	NO REMAINING ○ 0.5 HOUR ○ 1 HOUR ○ 2 HOUR ○ 6 HOUR ○
15 MODEL TYPE	HEAT PUMP ※ COOLING ONLY ※	16 FAN INTERMITTENT	NO REMAINING ○ 20min OFF 5min ON ○ 5min OFF 5min ON ○
16 EXTERNAL CONTROL SET	INDIVIDUAL ○ PARALLEL ○		
17 MAIN TEMP INDICATION SET	INDICATION OFF ○ INDICATION ON ○		
18 TEMP INDICATION	INDICATION ON ○ INDICATION OFF ○		
19 C/F SET	C ○ F ○		

[ON/OFF] button (finished) Items marked with * are not available on the floor standing FDF. Do not change the initial setting

④ Trial operation

The method of trial cooling operation

Operate the remote control unit as follows.

1. Starting a cooling test run.
 - ① Start the system by pressing the [ON/OFF] button.
 - ② Select " (Cool)" with the [MODE] button.
 - ③ Press the [TEST] button for 3 seconds or longer.

The screen display will switch to TEST RUN

- ④ When the [SET] button is pressed while " TEST RUN" is indicated, a cooling test run will start.

The screen display will switch to TEST RUN
2. Ending a cooling test run.

Pressing the [ON/OFF] button, the [TEMP] button or [MODE] button will end a cooling test run. (Cooling test run will end after 30 minutes pass.)

" TEST RUN" shown on the screen will go off.

④ Trial operation (Continued)

Checking operation data

Operation data can be checked with remote control unit operation.

1. Press the [CHECK] button.

The display change "OPER DATA ▼"

2. Press the (SET) button while "OPER DATA ▼" is displayed.

3. When only one indoor unit is connected to remote control, "DATA LOADING" is displayed (blinking indication during data loading).

Next, operation data of the indoor unit will be displayed. Skip to step 7.

4. When plural indoor units is connected, the smallest address number of indoor unit among all connected indoor unit is displayed.

[Example]:

↔SELECT I/U " (blinking 1 seconds)
I/U000 ▲ " blinking.

5. Select the indoor unit number you would like to have data displayed with the ▲ ▼ button.

6. Determine the indoor unit number with the (SET) button.

(The indoor unit number changes from blinking indication to continuous indication)

I/U000 " (The address of selected indoor unit is blinking for 2 seconds.)



"DATA LOADING" (A blinking indication appears while data loaded.)

Next, the operation data of the indoor unit is indicated.

7. Upon operation of the ▲ ▼ button, the current operation data is displayed in order from data number 01.

The items displayed are in the above table.

※Depending on models, the items that do not have corresponding data are not displayed.

8. To display the data of a different indoor unit, press the [AIR CON No.] button, which allows you to go back to the indoor unit selection screen.

9. Pressing the [ON/OFF] button will stop displaying data.

Pressing the [RESET] button during remote control unit operation will undo your last operation and allow you to go back to the previous screen.

◎If two (2) remote control are connected to one (1) inside unit, only the master control is available for trial operation and confirmation of operation data. (The slave remote control is not available.)

Number	Data Item
01	☎ (Operation Mode)
02	SET TEMP. ℃ (Set Temperature)
03	RETURN AIR ℃ (Return Air Temperature)
04	SENSOR ℃ (Remote Control Thermistor Temperature)
05	THI-R1 ℃ (Indoor Unit Heat Exchanger Thermistor / U Bend)
06	THI-R2 ℃ (Indoor Unit Heat Exchanger Thermistor / Capillary)
07	THI-R3 ℃ (Indoor Unit Heat Exchanger Thermistor / Gas Header)
08	I/U FANSPEED (Indoor Unit Fan Speed)
09	DEMAND Hz (Frequency Requirements)
10	ANSWER Hz (Response Frequency)
11	I/U EEV P (Pulse of Indoor Unit Expansion Valve)
12	TOTAL I/U RUN H (Total Running Hours of The Indoor Unit)
21	OUTDOOR ℃ (Outdoor Air Temperature)
22	THO-R1 ℃ (Outdoor Unit Heat Exchanger Thermistor)
23	THO-R2 ℃ (Outdoor Unit Heat Exchanger Thermistor)
24	COMP Hz (Compressor Frequency)
25	HP MPa (High Pressure)
26	LP MPa (Low Pressure)
27	Td ℃ (Discharge Pipe Temperature)
28	COMP BOTTOM ℃ (Comp Bottom Temperature)
29	CT AMP (Current)
30	TARGET SH ℃ (Target Super Heat)
31	SH ℃ (Super Heat)
32	TOSH ℃ (Discharge Pipe Super Heat)
33	PROTECTION No. (Protection State No. of The Compressor)
34	O/U FANSPEED (Outdoor Unit Fan Speed)
35	CSH1 (63H1 On/Off)
36	DERROST (Defrost Control On/Off)
37	TOTAL COMP RUN H (Total Running Hours of The Compressor)
38	O/U EEV1 P (Pulse of The Outdoor Unit Expansion Valve EEV1)
39	O/U EEV2 P (Pulse of The Outdoor Unit Expansion Valve EEV2)


※Depending on outdoor unit model, there are data not shown.

⑤ Control mode switching

●The control content of indoor units can be switched in following way.
() is the default setting

Switch No.	Control content
SW2	Indoor unit address (0-Fh)
SW5-1	Master/Slave switching (plural /Slave unit setting)
SW5-2	
SW6-1~4	Model capacity setting
SW7-1	ON Operation check, drain motor test run
	OFF Normal operation

⑥ Function of CnT connector of indoor printed circuit board

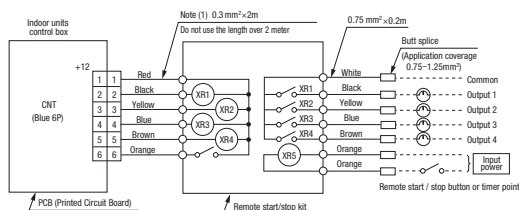

●CnT connector (local) vendor model
Connector : Made by molex 5264 - 06
Terminals : Made by molex 5263T

●Function

Output 1	Operation output (there is output when unit is in operation.)
Output 2	Heating output (there is output when operation MODE is HEATING.)
Output 3	Compressor ON output (there is output when compressor is in operation.)
Output 4	Inspection output (there is output when unit is stopped by error.)
Input 5	Remote operation input (Volt-free contact) (Inputted to operate unit)

⑦ Troubleshooting

The operation data is saved when the situation of abnormal operation happen, and the data can be confirmed by remote control.

Error Code of indoor unit

Display on remote control	LED on indoor circuit board		Content
	red (checking)	green (normal)	
Off	Off	Continuous blinking	Normal
E1	Off	Continuous blinking	Fault on the transmission between indoor circuit board and remote control
	Not sure	Not sure	Indoor computer abnormal
E5	Blinking twice	Continuous blinking	Fault on outdoor-indoor transmission
E6	Blinking once	Continuous blinking	Indoor heat exchange sensor interrupted or short-circuit
E7	Blinking once	Continuous blinking	Indoor air inhaling sensor broken or short-circuit
E8	Blinking once	Continuous blinking	The temperature of heat exchange abnormal
E9	Blinking once	Continuous blinking	Float switch actions (only with FS)
E10	Off	Continuous blinking	Excess number of remote control connections
E14	Blinking for three times	Continuous blinking	The communication fault for master/slave indoor units
E16	Blinking once	Continuous blinking	Fan motor abnormal
E19	Blinking once	Continuous blinking	Configuration fault on running checking model
E28	Off	Continuous blinking	Remote control sensor interrupted
Over E30	Off	Continuous blinking	Outdoor unit checking (outdoor circuit board LED checking)

(Operating procedure)

1. Press the [CHECK] button.

The display change "OPER DATA ▼"

2. Once, press the ▼ button, and the display change "ERROR DATA ▲"

3. Press the (SET) button and abnormal operation data mode is started.

4. When only one indoor unit is connected to remote control, following is displayed.

①The case that there is history of abnormal operation.

→ Error code and "DATA LOADING" is displayed.

[Example]: [E8] (ERROR CODE)

"DATA LOADING" is displayed (blinking indication during data loading).

Next, the abnormal operation data of the indoor unit will be displayed. Skip to step 8.

②The case that there is not history of abnormal operation.

→ "NO ERROR" is displayed for 3 seconds and this mode is closed.

5. When plural indoor units is connected, following is displayed.

①The case that there is history of abnormal operation.

→ Error code and the smallest address number of indoor unit among all connected indoor unit is displayed.

[Example]: [E8] (ERROR CODE)

"I/U000 ▲" blinking

②The case that there is not history of abnormal operation.

→ Only address number is displayed.

6. Select the indoor unit number you would like to have data displayed with the ▲ ▼ button.

7. Determine the indoor unit number with the (SET) button.

[Example]: [E8] (ERROR CODE)

"I/U000 ▲" (The address of selected indoor unit is blinking for 2 seconds.)



[E8] "DATA LOADING" (A blinking indication appears while data loaded.)

Next, the abnormal operation data is indicated.

If the indoor unit doing normal operation is selected, "NO ERROR" is displayed for 3 seconds and address of indoor unit is displayed.

8. By the ▲ ▼ button, the abnormal operation data is displayed.

Displayed data item is based on ③ Trial operation

※Depending on models, the items that do not have corresponding data are not displayed.

9. To display the data of a different indoor unit, press the [AIR CON No.] button, which allows you to go back to the indoor unit selection screen.

10. Pressing the [ON/OFF] button will stop displaying data.

Pressing the [RESET] button during remote control unit operation will undo your last operation and allow you to go back to the previous screen.

◎If two (2) remote control are connected to one (1) indoor unit, only the master control is available for trial operation and confirmation of operation data. (The slave remote control is not available.)



10.3 Installation of wired remote control (Option parts)

(1) Model RC-EX3

PJZ012A131 

1. Safety precautions

- Please read this manual carefully before starting installation work to install the unit properly. Every one of the followings is important information to be observed strictly.

 WARNING	Failure to follow these instructions properly may result in serious consequences such as death, severe injury, etc.
 CAUTION	Failure to follow these instructions properly may cause injury or property damage.

It could have serious consequences depending on the circumstances.

- The following pictograms are used in the text.

	Never do.		Always follow the instructions given.
---	-----------	---	---------------------------------------

- Keep this manual at a safe place where you can consult with whenever necessary. Show this manual to installers when moving or repairing the unit. When the ownership of the unit is transferred, this manual should be given to a new owner.

WARNING



Consult your dealer or a professional contractor to install the unit.

Improper installation made on your own may cause electric shocks, fire or dropping of the unit.



Installation work should be performed properly according to this installation manual.

Improper installation work may result in electric shocks, fire or break-down.



Be sure to use accessories and specified parts for installation work.

Use of unspecified parts may result in drop, fire or electric shocks.



Install the unit properly to a place with sufficient strength to hold the weight.

If the place is not strong enough, the unit may drop and cause injury.



Be sure to have the electrical wiring work done by qualified electrical installer, and use exclusive circuit.

Power source with insufficient and improper work can cause electric shock and fire.



Shut OFF the main power source before starting electrical work.

Otherwise, it could result in electric shocks, break-down or malfunction.



Do not modify the unit.

It could cause electric shocks, fire, or break-down.



Be sure to turn OFF the power circuit breaker before repairing/ inspecting the unit.

Repairing/inspecting the unit with the power circuit breaker turned ON could cause electric shocks or injury.


WARNING
Do not install the unit in appropriate environment or where inflammable gas could generate, flow in, accumulate or leak.


If the unit is used at places where air contains dense oil mist, steam, organic solvent vapor, corrosive gas (ammonium, sulfuric compound, acid, etc) or where acidic or alkaline solution, special spray, etc. are used, it could cause electric shocks, break-down, smoke or fire as a result of significant deterioration of its performance or corrosion.

Do not install the unit where water vapor is generated excessively or condensation occurs.


It could cause electric shocks, fire, or break-down.

Do not use the unit in a place where it gets wet, such as laundry room.


It could cause electric shocks, fire, or break-down.

Do not operate the unit with wet hands.


It could cause electric shocks.

Do not wash the unit with water.


It could cause electric shocks, fire, or break-down.

Use the specified cables for wiring, and connect them securely with care to protect electronic parts from external forces.


Improper connections or fixing could cause heat generation, fire, etc.

Seal the inlet hole for remote control cable with putty.


If dew, water, insect, etc. enters through the hole, it could cause electric shocks, fire or break-down.

If dew or water enters the unit, it may cause screen display anomalies.

When installing the unit at a hospital, telecommunication facility, etc., take measures to suppress electric noises.


It could cause malfunction or break-down due to hazardous effects on the inverter, private power generator, high frequency medical equipment, radio communication equipment, etc.

The influences transmitted from the remote control to medical or communication equipment could disrupt medical activities, video broadcasting or cause noise interference.

Do not leave the remote control with its upper case removed.


If dew, water, insect, etc. enters through the hole, it could cause electric shocks, fire or break-down.

 CAUTION

Do not install the remote control at following places.

- (1) It could cause break-down or deformation of remote control.
- Where it is exposed to direct sunlight
 - Where the ambient temperature becomes 0 °C or below, or 40 °C or above
 - Where the surface is not flat
 - Where the strength of installation area is insufficient
- (2) Moisture may be attached to internal parts of the remote control, resulting in a display failure.
- Place with high humidity where condensation occurs on the remote control
 - Where the remote control gets wet
- (3) Accurate room temperature may not be detected using the temperature sensor of the remote control.
- Where the average room temperature cannot be detected
 - Place near the equipment to generate heat
 - Place affected by outside air in opening/closing the door
 - Place exposed to direct sunlight or wind from air-conditioner
 - Where the difference between wall and room temperature is large



To connect to a personal computer via USB, use the dedicated software.



Do not connect other USB devices and the remote control at the same time.

It could cause malfunction or break-down of the remote control/personal computer.

2 . Accessories & Prepare on site

Following parts are provided.

Accessories	R/C main unit, wood screw (ø3.5 x 16) 2 pcs, Quick reference
-------------	--

Following parts are arranged at site. Prepare them according to the respective installation procedures.

Item name	Q'ty	Remark
Switch box For 1 piece or 2 pieces (JIS C 8340 or equivalent)	1	These are not required when installing directly on a wall.
Thin wall steel pipe for electric appliance directly on a wall. (JIS C 8305 or equivalent)	As required	
Lock nut, bushing (JIS C 8330 or equivalent)	As required	
Lacing (JIS C 8425 or equivalent)	As required	Necessary to run R/C cable on the wall.
Putty	Suitably	For sealing gaps
Molly anchor	As required	
R/C cable (0.3 mm ² x 2 pcs)	As required	See right table when longer than 100 m

When the cable length is longer than 100 m, the max size for wires used in the R/C case is 0.5 mm². Connect them to wires of larger size near the outside of R/C. When wires are connected, take measures to prevent water, etc. from entering inside.

≤ 200 m	0.5 mm ² x 2 cores
≤ 300m	0.75 mm ² x 2 cores
≤ 400m	1.25 mm ² x 2 cores
≤ 600m	2.0 mm ² x 2 cores

3 . Installation place


Secure the installation space shown in the figure.

For the installation method, "embedding wiring" or "exposing wiring" can be selected.

For the wiring direction, "Backward", "Upper center" or "Upper left" can be selected.

Determine the installation place in consideration of the installation method and wiring direction.

Installation space

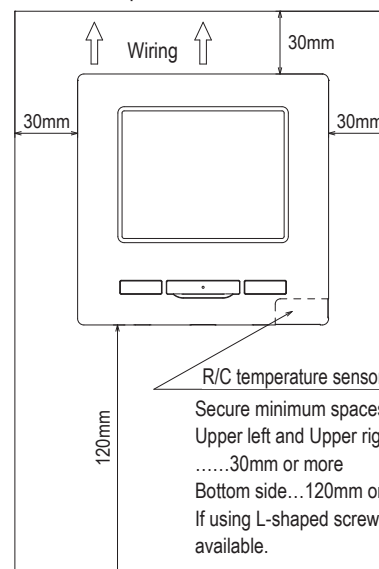


Secure minimum spaces for disassembling the case.
Upper left and Upper right sides
.....30mm or more
Bottom side...120mm or more
If using L-shaped screw driver, 50mm or more is available.



4 . Installation procedure

Perform installation and wiring work for the remote control according to the following procedure.

Dimensions (Viewed from front)

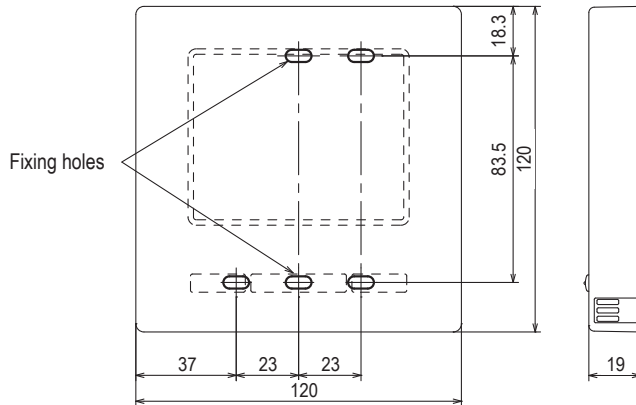

PCB side (Viewed from rear)

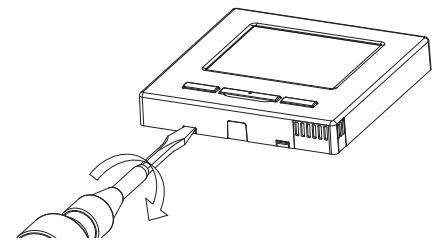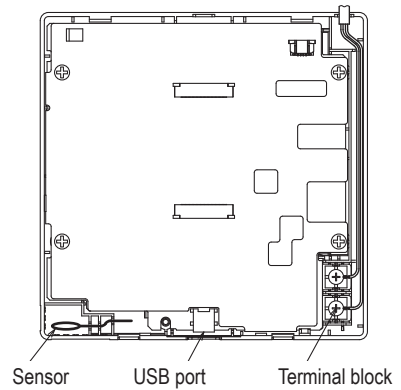

To remove the upper case from the bottom cases of R/C


- Insert the tip of flat head screw driver or the like in the recess at the lower part of R/C and twist it lightly to remove. It is recommended that the tip of the screw driver be wrapped with tape to avoid damaging the case.

Take care to protect the removed upper case from moisture or dust.



In case of embedding wiring

(When the wiring is retrieved "Backward")

- ① Embed the switch box and the R/C wires beforehand.
Seal the inlet hole for the R/C wiring with putty.

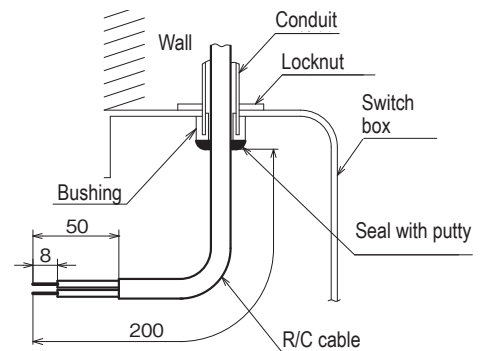

- ② When wires are passed through the bottom case, fix the bottom case at 2 places on the switch box.

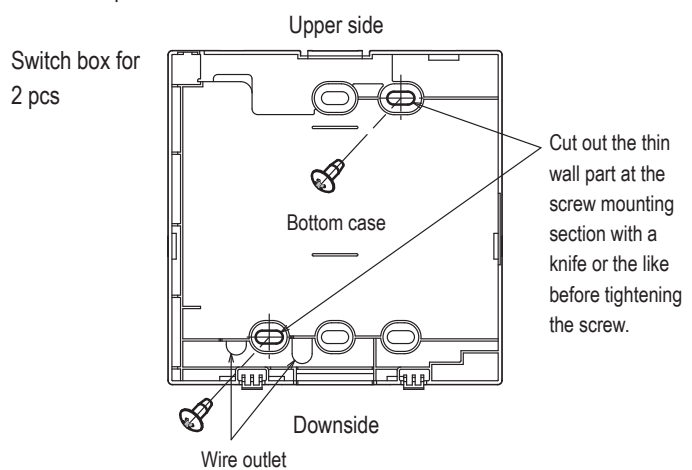
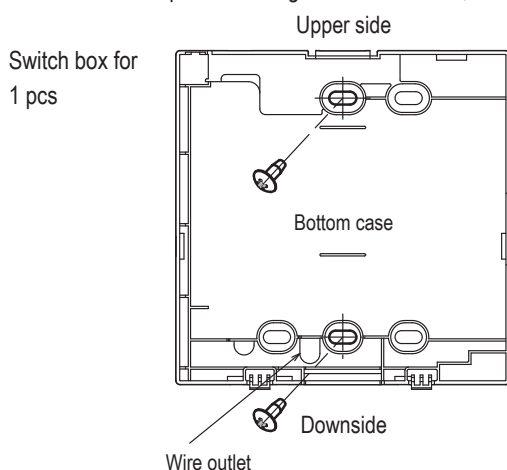


- ③ Connect wires from X and Y terminals of R/C to X and Y terminals of indoor unit. R/C wires (X, Y) have no polarity. Fix wires such that the wires will run around the terminal screws on the top case of R/C.
- ④ Install the upper case with care not to pinch wires of R/C.

Cautions for wire connection

Use wires of no larger than 0.5 mm² for wiring running through the remote control case. Take care not to pinch the sheath.

Tighten by hand (0.7 N·m or less) the wire connection. If the wire is connected using an electric driver, it may cause failure or deformation.

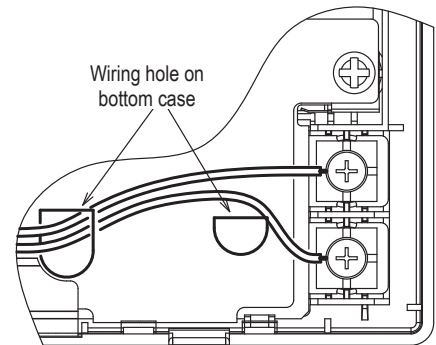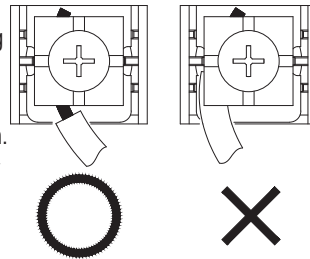


In case of exposing wiring


(When the wiring is taken out from the "upper center" or "upper left" of R/C)

- ① Cut out the thin wall sections on the cases for the size of wire.

When taking the wiring out from the upper center, open a hole before separating the upper and bottom cases. This will reduce risk of damaging the PCB and facilitate subsequent work.
When taking the wiring out from the upper left, take care not to damage the PCB and not to leave any chips of cut thin wall inside.

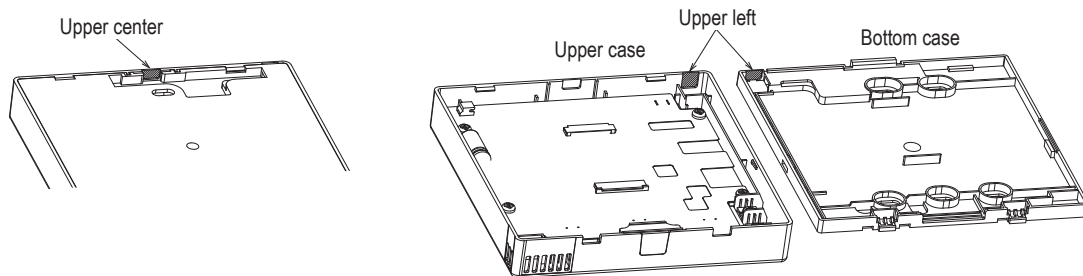

- ② Fix the bottom R/C case on a flat surface with two wood screws.
- ③ In case of the upper center, pass the wiring behind the bottom case. (Hatched section)
- ④ Connect wires from X and Y terminals of R/C to X and Y terminals of indoor unit. R/C wires (X, Y) have no polarity. Fix wires such that the wires will run around the terminal screws on the top case of R/C.
- ⑤ Install the top case with care not to pinch wires of R/C.
- ⑥ Seal the area cut in ① with putty.

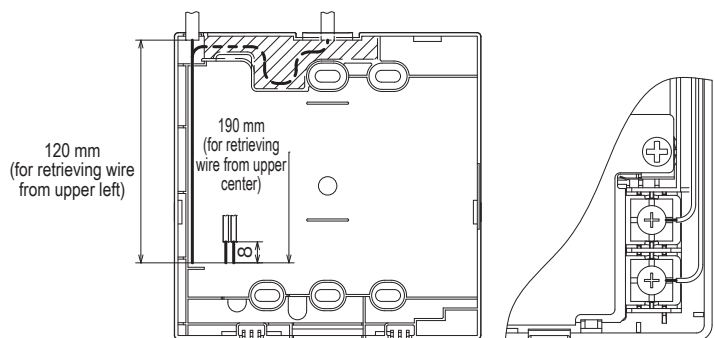


5 . Main/Sub setting when more than one remote control are used

Up to two units of R/C can be used at the maximum for 1 indoor unit or 1 group.

One is main R/C and the other is sub R/C.

Operating range is different depending on the main or sub R/C.

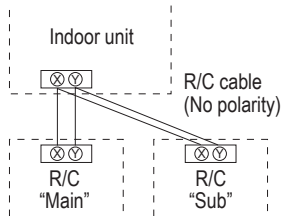

Set the "Main" and "Sub" as described at Section 8.


R/C operations		Main	Sub	
Run/Stop, Change set temp, Change flap direction, Auto swing, Change fan speed operations		○	○	
High power operation, Energy-saving operation		○	○	
Silent mode control		○	×	
Useful functions	Individual flap control	○	×	
	Anti draft setting	○	×	
	Timer	○	○	
	Favorite setting	○	○	
	Weekly timer	○	×	
	Home leave mode	○	×	
	External ventilation	○	○	
Select the language		○	○	
Energy-saving setting		○	×	
Filter	Filter sign reset	○	○	
User setting	Initial settings		○	○
	Administrator settings	Permission/Prohibition setting	○	×
		Outdoor unit silent mode timer	○	×
	Setting temp. range		○	×
	Temp. increment setting		○	×
	Set temp. display		○	○
	R/C display setting		○	○
	Change administrator password		○	○
	F1/F2 function setting		○	○

○: operable ×: not operable

R/C operations		Main	Sub		
Service setting	Installation settings	Installation date	○	×	
		Company information	○	○	
		Test run	○	×	
		Static pressure adjustment	○	×	
		Change auto-address	○	×	
		Address setting of main IU	○	×	
	R/C function settings	Main/Sub of R/C	○	○	
		Return air temp.	○	×	
		R/C sensor	○	×	
		R/C sensor adjustment	○	×	
		Operation mode	○	×	
		°C / °F	○	×	
		Fan speed	○	×	
		External input	○	×	
		Upper/lower flap control	○	×	
Left/right flap control	○	×			
IU settings	Ventilation setting		○	×	
	Auto-restart		○	×	
	Auto temp. setting		○	×	
	Auto fan speed		○	×	
	IU address		○	○	
	Next service date		○	×	
	Operation data		○	×	
	Error display	Error history		○	○
		Display/erase anomaly data		○	×
		Reset periodical check		○	○
Saving IU settings		○	×		
Special settings	Erase IU address		○	×	
	CPU reset		○	○	
	Restore of default setting		○	×	
	Touch panel calibration		○	○	
Indoor unit capacity display		○	×		

Advice: Connection to personal computer


It can be set from a personal computer via the USB port (mini-B).
 Connect after removing the cover for USB port of upper case.
 Replace the cover after use.
 Special software is necessary for the connection.
 For details, view the web site or refer to the engineering data.

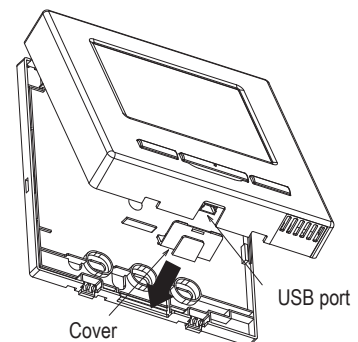


Advice: Initializing of password

Administrator password (for daily setting items) and service password (for installation, test run and maintenance) are used.

- The administrator password at factory default is "0000". This setting can be changed (Refer to User's Manual).
- If the administrator password is forgotten, it can be initialized by holding down the [F1] and [F2] switches together for five seconds on the administrator password input screen.
- Service password is "9999", which cannot be changed.
- When the administrator password is input, the service password is also accepted.

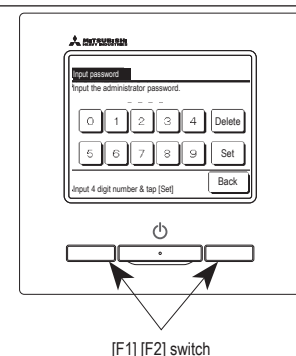



PJA012D730 

(2) Model RC-E5

Read together with indoor unit's installation manual.



⚠ WARNING

- Fasten the wiring to the terminal securely and hold the cable securely so as not to apply unexpected stress on the terminal.
Loose connection or hold will cause abnormal heat generation or fire. 
- Make sure the power source is turned off when electric wiring work.
Otherwise, electric shock, malfunction and improper running may occur. 

⚠ CAUTION

- Do not install the remote control at the following places in order to avoid malfunction.


(1) Places exposed to direct sunlight	(4) Hot surface or cold surface enough to generate condensation
(2) Places near heat devices	(5) Places exposed to oil mist or steam directly
(3) High humidity places	(6) Uneven surface


- Do not leave the remote control without the upper case.
In case the upper case needs to be detached, protect the remote control with a packaging box or bag in order to keep it away from water and dust. 

Accessories	Remote control, wood screw (ø3.5×16) 2 pieces
Prepare on site	Remote control cord (2 cores) the insulated thickness in 1mm or more. [In case of embedding cord] Electrical box, M4 screw (2 pieces) [In case of exposing cord] Cord clamp (if needed)


Installation procedure

- ① Open the cover of remote control, and remove the screw under the buttons without fail.
- ② Remove the upper case of remote control.
Insert a flat-blade screwdriver into the dented part of the upper part of the remote control, and wrench slightly.



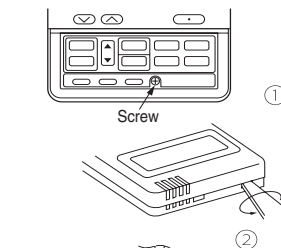


[In case of embedding cord]

- ③ Embed the electrical box and remote control cord beforehand.

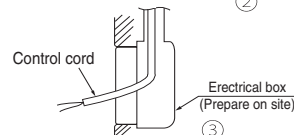


- ④ Prepare two M4 screws (recommended length is 12-16mm) on site, and install the lower case to electrical box. Choose either of the following two positions in fixing it with screws.

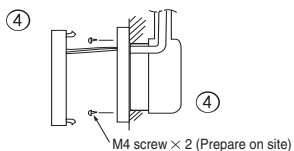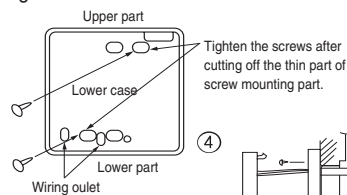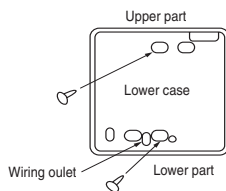

- ⑤ Connect the remote control cord to the terminal block.
Connect the terminal of remote control (X,Y) with the terminal of indoor unit (X,Y). (X and Y are no polarity)


- ⑥ Install the upper case as before so as not to catch up the remote control cord, and tighten with the screws.

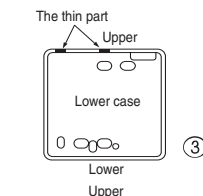


[In case of exposing cord]

- ③ You can pull out the remote control cord from left upper part or center upper part.
Cut off the upper thin part of remote control lower case with a nipper or knife, and grind burrs with a file etc.

- ④ Install the lower case to the flat wall with attached two wooden screws.

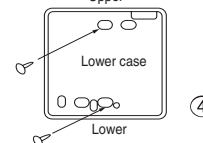


- ⑤ Connect the remote control cord to the terminal block.
 Connect the terminal of remote control (X,Y) with the terminal of indoor unit (X,Y).
 (X and Y are no polarity)
 Wiring route is as shown in the right diagram depending on the pulling out direction.

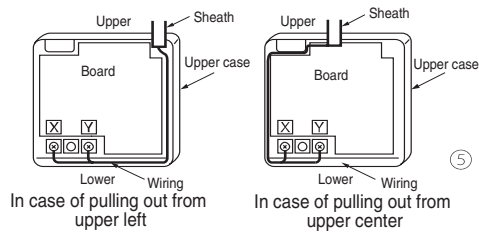

The wiring inside the remote control case should be within 0.3mm² (recommended) to 0.5mm².
 The sheath should be peeled off inside the remote control case.
 The peeling-off length of each wire is as below.

Pulling out from upper left	Pulling out from upper center
X wiring : 215mm	X wiring : 170mm
Y wiring : 195mm	Y wiring : 190mm




- ⑥ Install the upper case as before so as not to catch up the remote control cord, and tighten with the screws.
 ⑦ In case of exposing cord, fix the cord on the wall with cord clamp so as not to slack.

Installation and wiring of remote control

- ① Wiring of remote control should use 0.3mm² × 2 cores wires or cables. (on-site configuration)
 ② Maximum prolongation of remote control wiring is 600 m.
 If the prolongation is over 100m, change to the size below.
 But, wiring in the remote control case should be under 0.5mm². Change the wire size outside of the case according to wire connecting. Waterproof treatment is necessary at the wire connecting section. Be careful about contact failure.
- | | |
|------------|-------------------------------|
| 100 - 200m | 0.5mm ² × 2 cores |
| Under 300m | 0.75mm ² × 2 cores |
| Under 400m | 1.25mm ² × 2 cores |
| Under 600m | 2.0mm ² × 2 cores |

Master/ slave setting when more than one remote controls are used

A maximum of two remote controls can be connected to one indoor unit (or one group of indoor units.)

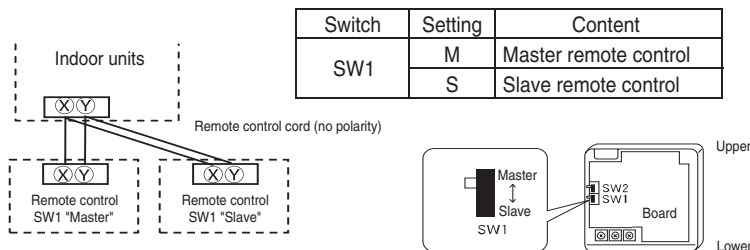

Set SW1 to "Slave" for the slave remote control. It was factory set to "Master" for shipment.

Note: The setting "Remote control sensor enabled" is only selectable with the master remote control in the position where you want to check room temperature.

The air-conditioner operation follows the last operation of the remote control regardless of the master/ slave setting of it.


The indication when power source is supplied

When power source is turned on, the following is displayed on the remote control until the communication between the remote control and indoor unit settled.

Master remote control : " WAIT M"
 Slave remote control : " WAIT S"

At the same time, a mark or a number will be displayed for two seconds first.

This is the software's administration number of the remote control, not an error cord.



※ The left mark is only an example. Other marks may appear.

When remote control cannot communicate with the indoor unit for half an hour, the below indication will appear.

Check wiring of the indoor unit and the outdoor unit etc.



The range of temperature setting

When shipped, the range of set temperature differs depending on the operation mode as below.

Heating : 16-30°C (55-86°F)

Except heating (cooling, fan, dry, automatic) : 18-30°C (62-86°F)

● **Upper limit and lower limit of set temperature can be changed with remote control.**

Upper limit setting: valid during heating operation. Possible to set in the range of 20 to 30°C (68 to 86°F).

Lower limit setting: valid except heating (automatic, cooling, fan, dry) Possible to set in the range of 18 to 26°C (62 to 79°F).

When you set upper and lower limit by this function, control as below.

1. When ⑫ TEMP RANGE SET, remote control function of function setting mode is "INDN CHANGE" (factory setting),
 【 If upper limit value is set 】

During heating, you cannot set the value exceeding the upper limit.

【 If lower limit value is set 】

During operation mode except heating, you cannot set the value below the lower limit.

2. When ⑫ TEMP RANGE SET, remote control function of function setting mode is "NO INDN CHANGE"
 【 If upper limit value is set 】

During heating, even if the value exceeding the upper limit is set, upper limit value will be sent to the indoor unit.
 But, the indication is the same as the temperature set.

【 If lower limit value is set 】

During except heating, even if the value lower than the lower limit is set, lower limit value will be sent to the indoor unit.
 But, the indication is the same as the temperature set.

● **How to set upper and lower limit value**

1. Stop the air-conditioner, and press (SET) and (MODE) button at the same time for over three seconds .

The indication changes to "FUNCTION SET ▼".

2. Press button once, and change to the "TEMP RANGE ▲" indication.
3. Press (SET) button, and enter the temperature range setting mode.
4. Select "UPPER LIMIT ▼" or "LOWER LIMIT ▲" by using button.
5. Press (SET) button to fix.

6. When "UPPER LIMIT ▼" is selected (valid during heating)

① Indication: " ▼ ^ SET UP " → "UPPER 30°C ▼"

② Select the upper limit value with temperature setting button . Indication example: "UPPER 26°C ▼ ^" (blinking)

③ Press (SET) button to fix. Indication example: "UPPER 26°C" (Displayed for two seconds)

After the fixed upper limit value displayed for two seconds, the indication will return to "UPPER LIMIT ▼".

7. When "LOWER LIMIT ▲" is selected (valid during cooling, dry, fan, automatic)

① Indication: " ▼ ^ SET UP " → "LOWER 18°C ^"

② Select the lower limit value with temperature setting button . Indication example: "LOWER 24°C ▼ ^" (blinking)


③ Press (SET) button to fix. Indication for example: "LOWER 24°C" (Displayed for two seconds)

After the fixed lower limit value displayed for two seconds, the indication will return to "LOWER LIMIT ▼".

8. Press button to finish.

• It is possible to finish by pressing button on the way, but unfinished change of setting is unavailable.

• During setting, if you press (RESET) button, you return to the previous screen.

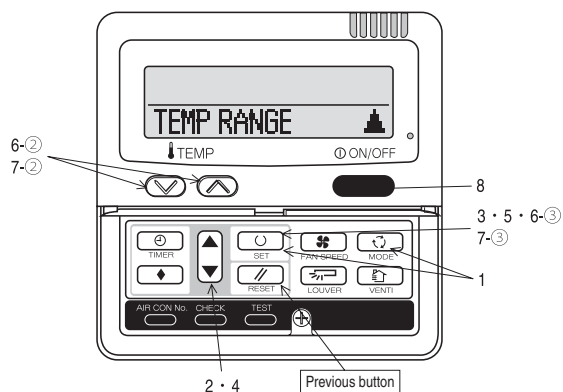

The functional setting

- The initial functional setting for typical using is performed automatically by the indoor unit connected, when remote control and indoor unit are connected.
- As long as they are used in a typical manner, there will be no need to change the initial settings.
- If you would like to change the initial setting marked "○", set your desired setting as for the selected item.
- The procedure of functional setting is shown as the following diagram.

[Flow of function setting]

Start : Stop air-conditioner and press "○" (SET) and "MODE" buttons at the same time for over three seconds.

Finalize : Press "○" (SET) button.

Reset : Press "RESET" button.

Select : Press "▲" button.

End : Press "ON/OFF" button.


It is possible to finish above setting on the way, and unfinished change of setting is unavailable.

* ○ : Initial settings
* ※ : Automatic criterion

Record and keep the setting

Consult the technical data etc. for each control details

Stop air-conditioner and press "○" (SET) + "MODE" buttons at the same time for over three seconds.

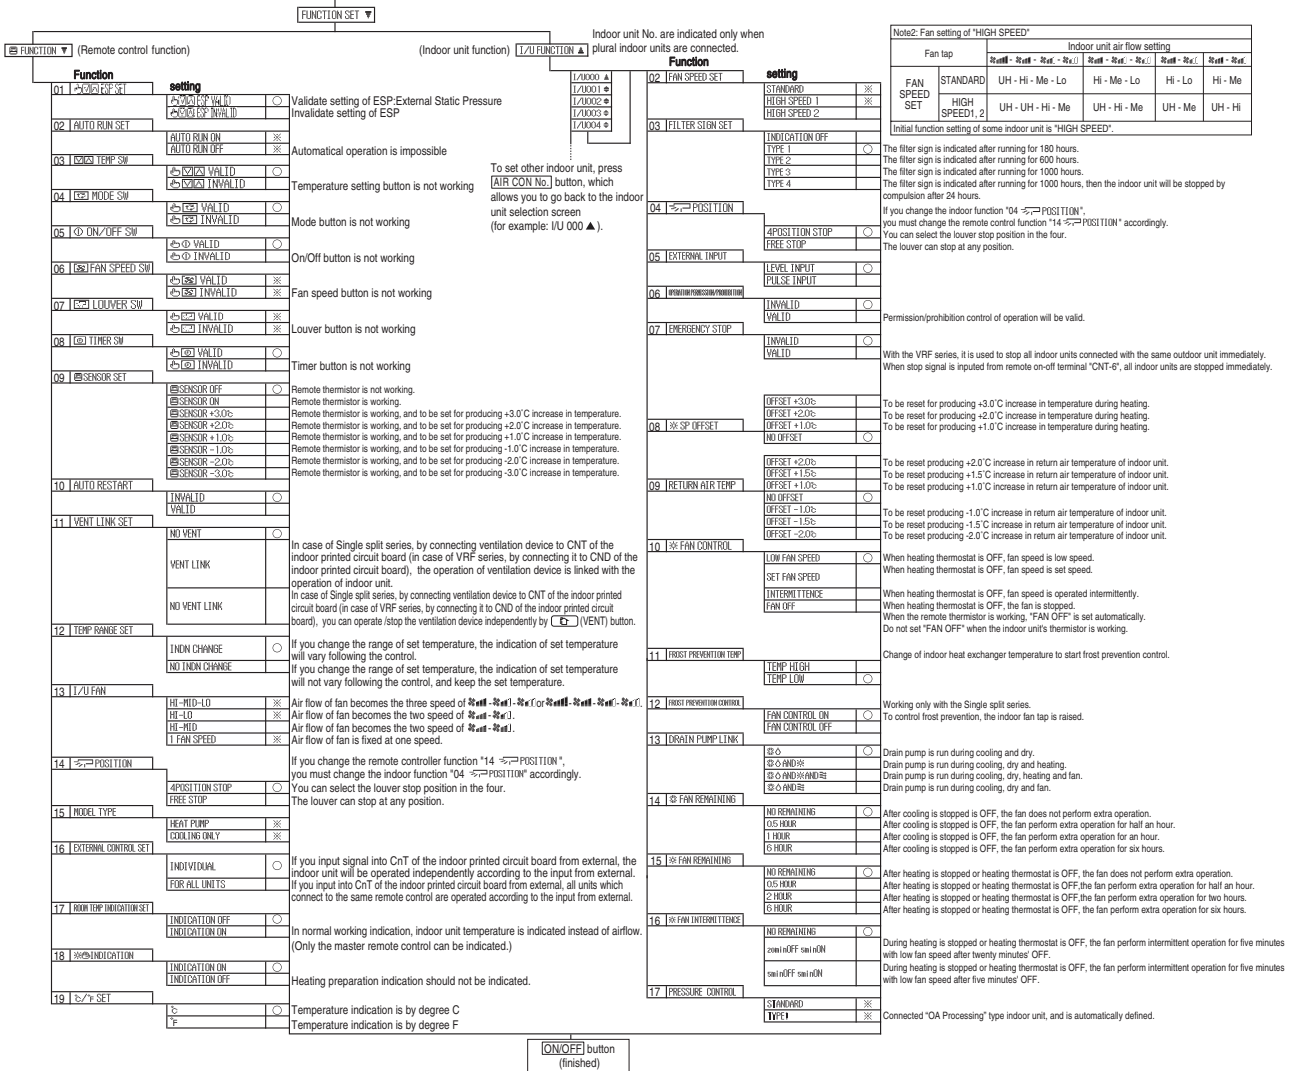


How to set function

1. Stop air-conditioner and press (SET) (MODE) buttons at the same time for over three seconds, and the "FUNCTION SET ▼" will be displayed.



2. Press (SET) button.
3. Make sure which do you want to set, "FUNCTION ▼" (remote control function) or "I/U FUNCTION ▲" (indoor unit function).
4. Press or button.
Select "FUNCTION ▼" (remote control function) or "I/U FUNCTION ▲" (indoor unit function).




5. Press (SET) button.

6. 【On the occasion of remote control function selection】


- ① "DATA LOADING" (Indication with blinking)

↓
Display is changed to "01 ESP SET".


- ② Press or button.
"No. and function" are indicated by turns on the remote control function table, then you can select from them.
(For example)



- ③ Press (SET) button.
The current setting of selected function is indicated.
(for example) "AUTO RUN ON" ← If "02 AUTO RUN SET" is selected




- ④ Press or button.
Select the setting.

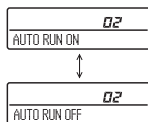

- ⑤ Press (SET)
"SET COMPLETE" will be indicated, and the setting will be completed.
Then after "No. and function" indication returns, Set as the same procedure if you want to set continuously, and if to finish, go to 7.



7. Press (ON/OFF) button.
Setting is finished.

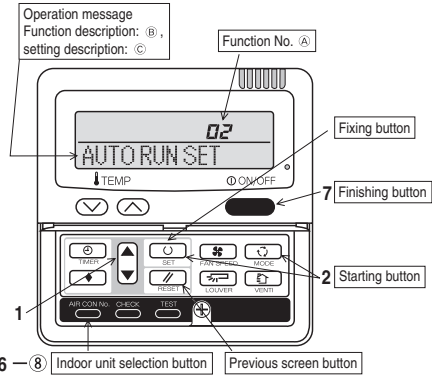


【On the occasion of indoor unit function selection】

- ① "DATA LOADING" (Blinking for 2 to 23 seconds to read the data)

↓
Indication is changed to "02 FAN SPEED SET".
Go to ②.


[Note]

- (1) If plural indoor units are connected to a remote control, the indication is "I/U 000" (blinking) ← The lowest number of the indoor unit connected is indicated.




- (2) Press or button.
Select the number of the indoor unit you are to set
If you select "ALL UNIT ▼", you can set the same setting with all unites.
- (3) Press (SET) button.

- ② Press or button.
"No. and function" are indicated by turns on the indoor unit function table, then you can select from them.
(For example)



- ③ Press (SET) button.
The current setting of selected function is indicated.
(For example) "STANDARD" ← If "02 FAN SPEED SET" is selected.



- ④ Press or button.
Select the setting.

- ⑤ Press (SET) button.
"SET COMPLETE" will be indicated, and the setting will be completed.
Then after "No. and function" indication returns, set as the same procedure if you want to set continuously, and if to finish, go to 7.



※ When plural indoor units are connected to a remote control, press the (AIR CON No.) button, which allows you to go back to the indoor unit selection screen. (example "I/U 000 ▲")

- It is possible to finish by pressing (ON/OFF) button on the way, but unfinished change of setting is unavailable.
- During setting, if you press (RESET) button, you return to the previous screen.
- Setting is memorized in the control and it is saved independently of power failure.

【How to check the current setting】

When you select from "No. and function" and press set button by the previous operation, the "Setting" displayed first is the current setting.
(But, if you select "ALL UNIT ▼", the setting of the lowest number indoor unit is displayed.)

10.4 Installation of outdoor unit



(1) Model FDC71VP

PSC012D053 

R410A REFRIGERANT USED

- This installation manual deals with outdoor units and general installation specifications only. For indoor units, refer to page 60.
- When install the unit, be sure to check whether the selection of installation place, power source specifications, usage limitation (piping length, height differences between indoor and outdoor units, power source voltage and etc.) and installation spaces.

SAFETY PRECAUTIONS

- Read the "SAFETY PRECAUTIONS" carefully first of all and strictly follow it during the installation work in order to protect yourself.
 - The precautionary items mentioned below are distinguished into two levels. **WARNING** and **CAUTION**.
 - WARNING**: Wrong installation would cause serious consequences such as injuries or death.
 - CAUTION**: Wrong installation might cause serious consequences depending on circumstances.
- Both mentions the important items to protect your health and safety so strictly follow them by any means.
- Be sure to confirm no anomaly on the equipment by commissioning after completed installation and explain the operating methods as well as the maintenance methods of this equipment to the user according to the owner's manual.
 - Keep the installation manual together with owner's manual at a place where any user can read at any time. Moreover if necessary, ask to hand them to a new user.
 - For installing qualified personnel, take precautions in respect to themselves by using suitable protective clothing, gloves, etc., and then perform the installation works.
 - Please pay attention not to fall down the tools, etc. when installing the unit at the high position.
 - If unusual noise can be heard during operation, consult the dealer.
 - The meanings of "Marks", used here are shown as follows:
 -  Never do it under any circumstances.
 -  Always do it according to the instruction.

<p>⚠ WARNING</p> <p>If the refrigerant comes into contact with naked flames, poisonous gas is produced.</p> <ul style="list-style-type: none"> • Use the prescribed pipes, flare nuts and tools for R410A. Using existing parts (for R22 or R407C) can cause the unit failure and serious accidents due to burst of the refrigerant circuit. • Tighten the flare nut by torque wrench with specified method. If the flare nut were tightened with excess torque, this may cause burst and refrigerant leakage after a long period. • Do not open the service valves for liquid line and gas line until completed refrigerant piping work, air tightness test and evacuation. If the compressor is operated in state of opening service valves before completed connection of refrigerant piping work, air can be sucked into refrigerant circuit, which can cause burst or personal injury due to anomalously high pressure in the refrigerant. • The electrical installation must be carried out by the qualified electrician in accordance with "the norm for electrical work" and "national wiring regulation", and the system must be connected to the dedicated circuit. Power source with insufficient capacity and incorrect function done by improper work can cause electric shocks and fire. • Be sure to shut off the power before starting electrical work. Failure to shut off the power can cause electric shocks, unit failure or incorrect function of equipment. • Be sure to use the cables conformed to safety standard and cable ampacity for power distribution work. Unconformable cables can cause electric leak, anomalous heat production or fire. • This appliance must be connected to main power source by means of a circuit breaker or switch (fuse:20A) with a contact separation of at least 3mm. • Arrange the wiring in the control box so that it cannot be pushed up further into the box. Install the service panel correctly. 	<p>⚠ WARNING</p> <p>If the refrigerant comes into contact with naked flames, poisonous gas is produced.</p> <ul style="list-style-type: none"> • Use the prescribed pipes, flare nuts and tools for R410A. Using existing parts (for R22 or R407C) can cause the unit failure and serious accidents due to burst of the refrigerant circuit. • Tighten the flare nut by torque wrench with specified method. If the flare nut were tightened with excess torque, this may cause burst and refrigerant leakage after a long period. • Do not open the service valves for liquid line and gas line until completed refrigerant piping work, air tightness test and evacuation. If the compressor is operated in state of opening service valves before completed connection of refrigerant piping work, air can be sucked into refrigerant circuit, which can cause burst or personal injury due to anomalously high pressure in the refrigerant. • The electrical installation must be carried out by the qualified electrician in accordance with "the norm for electrical work" and "national wiring regulation", and the system must be connected to the dedicated circuit. Power source with insufficient capacity and incorrect function done by improper work can cause electric shocks and fire. • Be sure to shut off the power before starting electrical work. Failure to shut off the power can cause electric shocks, unit failure or incorrect function of equipment. • Be sure to use the cables conformed to safety standard and cable ampacity for power distribution work. Unconformable cables can cause electric leak, anomalous heat production or fire. • This appliance must be connected to main power source by means of a circuit breaker or switch (fuse:20A) with a contact separation of at least 3mm. • Arrange the wiring in the control box so that it cannot be pushed up further into the box. Install the service panel correctly. 	<p>⚠ WARNING</p> <p>Incorrect installation may result in overheating and fire.</p> <ul style="list-style-type: none"> • Use the prescribed cables for electrical connection, tighten the cables securely in terminal block and relieve the cables correctly to prevent overloading the terminal blocks. Loose connections or cable mountings can cause anomalous heat production or fire. • Be sure to fix up the service panels. Incorrect fixing can cause electric shocks or fire due to intrusion of dust or water. • Be sure to switch off the power source in the event of installation, inspection or servicing. If the power source is not shut off, there is a risk of electric shocks, unit failure or personal injury due to the unexpected start of fan. • Stop the compressor before removing the pipe after shutting the service valve on pump down work. If the pipe is removed when the compressor is in operation with the service valve open, air would be mixed in the refrigeration circuit and it could cause explosion and injuries due to abnormal high pressure in the cooling cycle. • Only use prescribed option parts. The installation must be carried out by the qualified installer. If you install the system by yourself, it can cause serious trouble such as water leaks, electric shocks, fire. • Be sure to wear protective goggles and gloves while at work. Earth leakage breaker must be installed. • Earth leakage breaker is not installed, it can cause electric shocks. • Appliance is not to be used by children or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction. Children being supervised not to play with appliance.
<p>⚠ WARNING</p> <ul style="list-style-type: none"> • Installation must be carried out by the qualified installer. If you install the system by yourself, it may cause serious trouble such as water leaks, electric shocks, fire and personal injury, as a result of a system malfunction. Do not carry out the installation and maintenance work except by the qualified installer. • Install the system in full accordance with the installation manual. Incorrect installation may cause bursts, personal injury, water leaks, electric shocks and fire. • Be sure to use only for household and residence. If this appliance is installed in inferior environment such as machine shop and etc., it can cause malfunction. • When installing in small rooms, take prevention measures not to exceed the density limit of refrigerant in the event of leakage, referred by the formula (accordance with ISO5149). If the density of refrigerant exceeds the limit, please consult the dealer and install the ventilation system, otherwise lack of oxygen can occur, which can cause serious accident. • Use the original accessories and the specified components for installation. If parts other than those prescribed by us are used, it may cause water leaks, electric shocks, fire and personal injury. • Install the unit in a location with good support. Unsuitable installation locations can cause the unit to fall and cause material damage and personal injury. • Ensure the unit is stable when installed, so that it can withstand earthquakes and strong winds. Unsuitable installation locations can cause the unit to fall and cause material damage and personal injury. • Ventilate the working area well in the event of refrigerant leakage during installation. 	<p>⚠ WARNING</p> <ul style="list-style-type: none"> • Do not bundling, winding or processing for the power cord. Or, do not deforming the power plug due to treat it. This may cause fire or heating. • Do not run the unit with removed panels or protections. Touching rotating equipments, hot surfaces or high voltage parts can cause personal injury due to entrapment, burn or electric shocks. 	<p>⚠ WARNING</p> <ul style="list-style-type: none"> • Do not perform any change of protective device itself or its setup condition. The forced operation by short-circuiting protective device of pressure switch and temperature controller or the use of non specified component can cause fire or burst.

CAUTION																			
	<p>• Carry out the electrical work for ground lead with care. Do not connect the ground lead to the gas line, water line, lightning conductor or telephone line's ground lead. Incorrect grounding can cause unit faults such as electric shocks due to short-circuiting.</p>																		
	<p>• Take care when carrying the unit by hand. If the unit weighs more than 20kg, it must be carried by two or more persons. Do not carry by the plastic straps, always use the carry handle when carrying the unit by hand. Use gloves to minimize the risk of cuts by the aluminum fins.</p> <p>• Dispose of any packing materials correctly. Any remaining packing materials can cause personal injury as it contains nails and wood. And to avoid danger of suffocation, be sure to keep the plastic wrapper away from children and to dispose after tear it up.</p> <p>• Be sure to insulate the refrigerant pipes so as not to condense the ambient air moisture on them. Insufficient insulation can cause condensation, which can lead to moisture damage on the ceiling, floor, furniture and any other valuables.</p>																		
	<p>• Do not install the outdoor unit in the locations listed below.</p> <ul style="list-style-type: none"> Locations where carbon fiber, metal powder or any powder is floating. Locations where any substances that can affect the unit such as sulphide gas, chloride gas, acid and alkaline can occur. Vehicles and ships. Locations where cosmetic or special sprays are often used. Locations with direct exposure of oil mist and steam such as kitchen and machine plant. Locations where any machines which generate high frequency harmonics are used. Locations with salty atmospheres such as coastlines. Locations with heavy snow (if installed, be sure to provide base flame and snow hood mentioned in the manual). Locations where the unit is exposed to chimney smoke. Locations at high altitude (more than 1 000m high). Locations with ammoniac atmospheres. (e.g. organic fertilizer) Locations with calcium chloride (e.g. snow melting agent). Locations where heat radiation from other heat source can affect the unit. Locations without good air circulation. Locations with any obstacles which can prevent inlet and outlet air of the unit. Locations where short circuit of air can occur (in case of multiple units installation). Locations where strong air blows against the air outlet of outdoor unit. Locations where something located above the unit could fall. <p>It can cause remarkable decrease in performance, corrosion and damage of components, malfunction and fire.</p>																		
	<p>• When perform the air-conditioner operation (cooling or drying operation) in which ventilator is installed in the room. In this case, using the air-conditioner in parallel with the ventilator, there is the possibility that drain water may backflow in accordance with the room lapse into the negative pressure status. Therefore, set up the opening port such as incorporate the air into the room that may appropriate to ventilation (For example; Open the door a little). In addition, just as above, so set up the opening port if the room lapse into negative pressure status due to register of the wind for the high rise apartment etc.</p>																		
	<p>• Do not install the outdoor unit in a location where insects and small animals can inhabit. Insects and small animals can enter the electric parts and cause damage or fire. Instruct the user to keep the surroundings clean.</p> <p>• Do not use the base flame for outdoor unit which is corroded or damaged due to long periods of operation. Using an old and damage base flame can cause the unit falling down and cause personal injury.</p> <p>• Do not use any materials other than a fuse with the correct rating in the location where fuses are to be used. Connecting the circuit with copper wire or other metal thread can cause unit failure and fire.</p> <p>• Do not touch any buttons with wet hands. It can cause electric shocks.</p> <p>• Do not touch any refrigerant pipes with your hands when the system is in operation. During operation the refrigerant pipes become extremely hot or extremely cold depending the operating condition, and it can cause burn injury or frost injury.</p> <p>• Do not touch the suction or aluminum fin on the outdoor unit. This may cause injury.</p> <p>• Do not put anything on the outdoor unit and operating unit. This may cause damage the objects or injury due to falling to the object.</p> <p>• Do not use the unit for special purposes such as storing foods, cooling precision instruments and preservation of animals, plants or art.</p> <p>• Do not clean up the unit with water.</p>																		
	<p>• Take care when carrying the unit by hand. If the unit weighs more than 20kg, it must be carried by two or more persons. Do not carry by the plastic straps, always use the carry handle when carrying the unit by hand. Use gloves to minimize the risk of cuts by the aluminum fins.</p> <p>• Dispose of any packing materials correctly. Any remaining packing materials can cause personal injury as it contains nails and wood. And to avoid danger of suffocation, be sure to keep the plastic wrapper away from children and to dispose after tear it up.</p> <p>• Be sure to insulate the refrigerant pipes so as not to condense the ambient air moisture on them. Insufficient insulation can cause condensation, which can lead to moisture damage on the ceiling, floor, furniture and any other valuables.</p>																		
	<p>• Do not install the outdoor unit in the locations listed below.</p> <ul style="list-style-type: none"> Locations where discharged hot air or operating sound of the outdoor unit can bother neighborhood. Locations where outlet air of the outdoor unit blows directly to an animal or plants. The outlet air can affect adversely to the plant etc. Locations where vibration can be amplified and transmitted due to insufficient strength of structure. Locations where vibration and operation sound generated by the outdoor unit can affect seriously (on the wall or at the place near bed room). Locations where an equipment affected by high harmonics is placed (TV set or radio receiver is placed within 5m). Locations where drainage cannot run off safely. It can affect surrounding environment and cause a claim. <p>• Do not install the unit near the location where leakage of combustible gases can occur. If leaked gases accumulate around the unit, it can cause fire.</p> <p>• Do not install the unit where corrosive gas (such as sulfuric acid gas etc.) or combustible gas (such as thinner and petroleum gases) can accumulate or collect, or where volatile combustible substances are handled. Corrosive gas can cause corrosion of heat exchanger, leakage of plastic parts and etc. And combustible gas can cause fire.</p> <p>• Do not install nor use the system close to the equipment that generates electromagnetic fields or high frequency harmonics. Equipment such as inverters, standby generators, medical high frequency equipments and telecommunication equipments can affect the system, and cause malfunctions and breakdowns. The system can also affect medical equipment and telecommunication equipment, and obstruct its function or cause jamming.</p>																		
Notabilia as a unit designed for R410A																			
<p>• Do not use any refrigerant other than R410A. R410A will rise to pressure about 1.6 times higher than that of a conventional refrigerant.</p> <p>• A cylinder containing R410A has a pink indication mark on the top.</p> <p>• A unit designed for R410A has adopted a different size indoor unit service valve charge port and a different size check joint provided in the unit to prevent the charging of a wrong refrigerant by mistake.</p> <p>• The processed dimension of the flange part of a refrigerant pipe and a flare nut's parallel side measurement have also been altered to raise strength against pressure.</p> <p>Accordingly, you are required to arrange dedicated R410A tools listed in the table on the left before installing or servicing this unit.</p> <p>• Do not use a charge cylinder. The use of a charge cylinder will cause the refrigerant composition to change, which results in performance degradation.</p> <p>• In charging refrigerant, always take it out from a cylinder in the liquid phase.</p> <p>• All indoor units must be models designed exclusively for R410A. Check connectable indoor unit models in a catalog, etc. (A wrong indoor unit, if connected to the system, will impair proper system operation.)</p>																			
	<p>• Check before installation work</p> <ul style="list-style-type: none"> Model name and power source Refrigerant piping length Piping, wiring and miscellaneous small parts Indoor unit installation manual 																		
	<p>• Accessories for outdoor unit</p> <table border="1"> <thead> <tr> <th></th> <th>Q'ty</th> </tr> </thead> <tbody> <tr> <td>① Grommet (Heat pump type only)</td> <td>4</td> </tr> <tr> <td>② Drain elbow (Heat pump type only)</td> <td>1</td> </tr> <tr> <td>③ Reducer set φ9.52 φ6.35</td> <td>1</td> </tr> <tr> <td>④ Reducer set φ15.8φ φ12.7</td> <td>1</td> </tr> </tbody> </table>		Q'ty	① Grommet (Heat pump type only)	4	② Drain elbow (Heat pump type only)	1	③ Reducer set φ9.52 φ6.35	1	④ Reducer set φ15.8φ φ12.7	1								
	Q'ty																		
① Grommet (Heat pump type only)	4																		
② Drain elbow (Heat pump type only)	1																		
③ Reducer set φ9.52 φ6.35	1																		
④ Reducer set φ15.8φ φ12.7	1																		
	<p>• Option parts</p> <table border="1"> <thead> <tr> <th></th> <th>Q'ty</th> </tr> </thead> <tbody> <tr> <td>③ Sealing plate</td> <td>1</td> </tr> <tr> <td>④ Sleeve</td> <td>1</td> </tr> <tr> <td>⑤ Inclination plate</td> <td>1</td> </tr> <tr> <td>⑥ Putty</td> <td>1</td> </tr> <tr> <td>⑦ Drain hose (extension hose)</td> <td>1</td> </tr> <tr> <td>⑧ Piping cover (for insulation of connection piping)</td> <td>1</td> </tr> </tbody> </table>		Q'ty	③ Sealing plate	1	④ Sleeve	1	⑤ Inclination plate	1	⑥ Putty	1	⑦ Drain hose (extension hose)	1	⑧ Piping cover (for insulation of connection piping)	1				
	Q'ty																		
③ Sealing plate	1																		
④ Sleeve	1																		
⑤ Inclination plate	1																		
⑥ Putty	1																		
⑦ Drain hose (extension hose)	1																		
⑧ Piping cover (for insulation of connection piping)	1																		
	<p>• Necessary tools for the installation work</p> <table border="1"> <thead> <tr> <th></th> <th>Q'ty</th> </tr> </thead> <tbody> <tr> <td>1 Plus headed driver</td> <td>1</td> </tr> <tr> <td>2 Knife</td> <td>1</td> </tr> <tr> <td>3 Saw</td> <td>1</td> </tr> <tr> <td>4 Tape measure</td> <td>1</td> </tr> <tr> <td>5 Hammer</td> <td>1</td> </tr> <tr> <td>6 Spanner wrench</td> <td>1</td> </tr> <tr> <td>7 Torque wrench [1.4—82.0N·m (1.4—8.2kgf·m)]</td> <td>1</td> </tr> <tr> <td>8 Hole core drill (φ5mm in diameter)</td> <td>1</td> </tr> </tbody> </table>		Q'ty	1 Plus headed driver	1	2 Knife	1	3 Saw	1	4 Tape measure	1	5 Hammer	1	6 Spanner wrench	1	7 Torque wrench [1.4—82.0N·m (1.4—8.2kgf·m)]	1	8 Hole core drill (φ5mm in diameter)	1
	Q'ty																		
1 Plus headed driver	1																		
2 Knife	1																		
3 Saw	1																		
4 Tape measure	1																		
5 Hammer	1																		
6 Spanner wrench	1																		
7 Torque wrench [1.4—82.0N·m (1.4—8.2kgf·m)]	1																		
8 Hole core drill (φ5mm in diameter)	1																		
	<p>• Option parts</p> <table border="1"> <thead> <tr> <th></th> <th>Q'ty</th> </tr> </thead> <tbody> <tr> <td>9 Wrench key (Hexagon) [4mm]</td> <td>1</td> </tr> <tr> <td>10 Vacuum pump</td> <td>1</td> </tr> <tr> <td>11 Vacuum pump adapter (Anti-reverse flow type) (Designed specifically for R410A)</td> <td>1</td> </tr> <tr> <td>12 Gauge manifold (Designed specifically for R410A)</td> <td>1</td> </tr> <tr> <td>13 Charge hose (Designed specifically for R410A)</td> <td>1</td> </tr> <tr> <td>14 Flaring tool set (Designed specifically for R410A)</td> <td>1</td> </tr> <tr> <td>15 Gas leak detector (Designed specifically for R410A) Gauge for projection adjustment</td> <td>1</td> </tr> <tr> <td>16 Gauge for projection adjustment (Used when flare is made by using conventional flare tool)</td> <td>1</td> </tr> </tbody> </table>		Q'ty	9 Wrench key (Hexagon) [4mm]	1	10 Vacuum pump	1	11 Vacuum pump adapter (Anti-reverse flow type) (Designed specifically for R410A)	1	12 Gauge manifold (Designed specifically for R410A)	1	13 Charge hose (Designed specifically for R410A)	1	14 Flaring tool set (Designed specifically for R410A)	1	15 Gas leak detector (Designed specifically for R410A) Gauge for projection adjustment	1	16 Gauge for projection adjustment (Used when flare is made by using conventional flare tool)	1
	Q'ty																		
9 Wrench key (Hexagon) [4mm]	1																		
10 Vacuum pump	1																		
11 Vacuum pump adapter (Anti-reverse flow type) (Designed specifically for R410A)	1																		
12 Gauge manifold (Designed specifically for R410A)	1																		
13 Charge hose (Designed specifically for R410A)	1																		
14 Flaring tool set (Designed specifically for R410A)	1																		
15 Gas leak detector (Designed specifically for R410A) Gauge for projection adjustment	1																		
16 Gauge for projection adjustment (Used when flare is made by using conventional flare tool)	1																		


1. HAULAGE AND INSTALLATION (Take particular care in carrying in or moving the unit, and always perform such an operation with two or more persons.)

CAUTION

When a unit is hoisted with slings for haulage, take into consideration the offset of its gravity center position. If not properly balanced the unit can be thrown off-balance and fall.

1) Delivery

- Deliver the unit as close as possible to the installation site before removing it from the packaging.
- When you have to unpack the unit for a compelling reason before you haul it to the installation point, hoist the unit with nylon slings or ropes and protection pads so that you may not damage the unit.

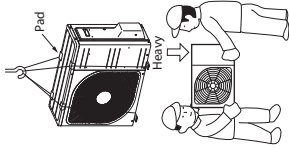

2) Portage

- The right hand side of the unit as viewed from the front (diffuser side) is heavier. A person carrying the right hand side must take heed of this fact. A person carrying the left hand side must hold with his right hand the handle provided on the front panel of the unit and with his left hand the corner column section.



3) Selection of installation location for the outdoor unit

Be sure to select a suitable installation place in consideration of following conditions.

- A place where it is horizontal, stable and can endure the unit weight and will not allow vibration transmittance of the unit.
- A place where it can be free from possibility of bothering neighbors due to noise or exhaust air from the unit.
- A place where the unit is not exposed to oil splashes.
- A place where it can be free from danger of flammable gas leakage.
- A place where drain water can be disposed without any trouble.
- A place where the unit will not be affected by heat radiation from other heat source.
- A place where snow will not accumulate.
- A place where the unit can be kept away 5m or more from TV set and/or radio receiver in order to avoid any radio or TV interference.
- A place where good air circulation can be secured, and enough service space can be secured for maintenance and service of the unit safely.
- A place where the unit will not be affected by electromagnetic waves and/or high-harmonic waves generated by other equipment.
- A place where chemical substances like sulfuric gas, chloric gas, acid and alkali (including ammonia), which can harm the unit, will not be generated and not remain.
- If a operation is conducted when the outdoor air temperature is -5°C lower, the outdoor unit should be installed at a place where it is not influenced by natural wind.
- A place where strong wind will not blow against the outlet air blow of the unit.
- Do not install the unit in places which exposed to sea breeze (e.g. coastal area) or calcium chloride (e.g. snow melting agent), exposed to ammonia substance (e.g. organic fertilizer).

4) Caution about selection of installation location

- (1) If the unit is installed in the area where the snow will accumulate, following measures are required.
 - The bottom plate of unit and intake, outlet may be blocked by snow.
 - 1 Install the unit on the base so that the bottom is higher than snow cover surface, and draining water is secured.
 - 2 Provide a snow hood to the outdoor unit on site.
 - 3 Install the unit under eaves or provide the roof on site.

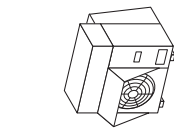
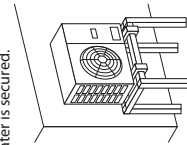


Since drain water generated by defrost control may freeze, following measures are required.

- Don't execute drain piping work by using a drain elbow and drain grommets (accessories). [Refer to DRAIN PIPING WORK.]
- Attached heater on a base plate on site, if there is possibility to freeze drain water. In case that the product has a corrective drainage system, the drainage paths should have suitable threatment against freezing but be sure not to melt the material of drainage paths with heat.

- (2) If the unit can be affected by strong wind, following measures are required.
 - Strong wind can cause damage of fan (fan motor), or can cause performance degradation, or can trigger anomalous stop of the unit due to rising of high pressure.


1. Install the outlet air blow side of the unit to face a wall of building, or provide a fence or a windbreak



5) Installation space

- Walls surrounding the unit in the four sides are not acceptable.
- There must be a 1-meter or larger space in the above.
- When more than one unit are installed side by side, provide a 250mm or wider interval between them as a service space. In order to facilitate servicing of controls, please provide a sufficient space between units so that their top plates can be removed easily.
- Where a danger of short-circuiting exists, install guide louvers.
- When more than one unit are installed, provide sufficient intake space consciously so that short-circuiting may not occur.
- Where piling snow can bury the outdoor unit, provide proper snow guards.


The height of a wall is 1200mm or less.

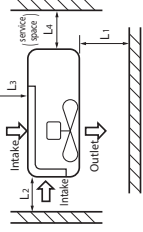


Size	I	II	III	IV
L1	Open	280	280	180
L2	100	75	Open	Open
L3	100	80	80	80
L4	250	Open	250	Open

6) Installation

- ① Anchorbolt fixed position

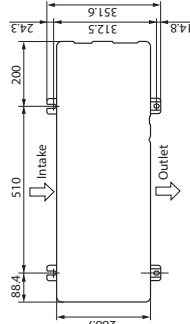

- ② Notabliar installation

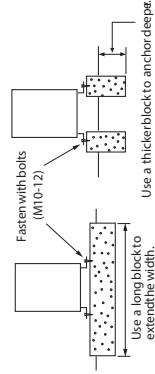

- In installing the unit, fix the unit's legs with bolts specified on the above.
- The protrusion of an anchor bolt on the front side must be kept within 15 mm.
- Securely install the unit so that it does not fall over during earthquakes or strong winds, etc.
- Refer to the above illustrations for information regarding concrete foundations.
- Install the unit in a level area. (With a gradient of 5 mm or less.)

Improper installation can result in a compressor failure, broken piping within the unit and abnormal noise generation.

7) To run the unit for a cooling operation,

when the outdoor temperature is -5°C or lower.

- When the outdoor air temperature is -5°C or lower, provide a snow hood to the outdoor unit on site. So that strong wind will not blow against the outdoor heat-exchanger directly.

2. REFRIGERANT PIPING WORK

1) Restrictions on unit installation and use

- Check the following points in light of the indoor unit specifications and the installation site.
- Observe the following restrictions on unit installation and use. Improper installation can result in a compressor failure or performance degradation.

Restrictions	Dimensional restrictions	Marks appearing in the drawing on the right
Indoor unit	30m or less	L
Elevation difference between indoor and outdoor units	23m or less	L
	20m or less	H
	20m or less	H

CAUTION ● The use restrictions appearing in the table above are applicable to the standard pipe size combinations shown in the table below. Where an existing pipe system is utilized, different one-way pipe length restrictions should apply depending on its pipe size. For more information, please see "5. UTILIZATION OF EXISTING PIPING."

2) Determination of pipe size

- Determine refrigerant pipe size pursuant to the following guidelines based on the indoor unit specifications.

	Gas pipe	Liquid pipe
Outdoor unit connected	ø12.7 Flare	ø6.35 Flare
Refrigerant piping (branch pipe)	ø12.7	ø6.35
Indoor unit connected	ø15.88 FDT, FDU, FDU, FDF, SRK	ø9.52 ø6.35


When pipe is brazing.

About brazing

Brazing must be performed under a nitrogen gas flow.

Without nitrogen gas, a large quantity of foreign matters (oxidized film) are created, causing a critical failure from capillary tube or expansion valve clogging.

If the refrigerant is existing in the pipe at brazing, poisonous gas is

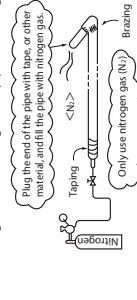

3) Refrigerant pipe wall thickness and material

- Select refrigerant pipes of the table shown on the right wall thickness and material as specified for each pipe size.

NOTE ● Select pipes having a wall thickness larger than the specified minimum pipe thickness.

Pipe diameter (mm)	ø6.35	ø12.7
Minimum pipe wall thickness (mm)	0.8	0.8
Pipe material*	O-type pipe	O-type pipe

*Phosphorus deoxidized seamless copper pipe (CS 23,040.15, JCS 77.150.30)

[Usage of reducer set]

(Except SRK) Liquid side joint (ø9.52) (SRK) Liquid side joint (ø6.35)

(Except SRK) Reducer (L=115mm) (ø9.52-ø6.35) (SRK) Reducer is not used

① Flare nut

② Reducer (L=124mm) (ø15.88-ø12.7)

③ Flare nut

④ Reducer (L=115mm) (ø15.88-ø12.7)

⑤ Flare nut

⑥ Reducer (L=124mm) (ø15.88-ø12.7)

⑦ Flare nut

⑧ Reducer (L=115mm) (ø15.88-ø12.7)

⑨ Flare nut

⑩ Reducer (L=124mm) (ø15.88-ø12.7)

⑪ Flare nut

⑫ Reducer (L=115mm) (ø15.88-ø12.7)

⑬ Flare nut

⑭ Reducer (L=124mm) (ø15.88-ø12.7)

⑮ Flare nut

⑯ Reducer (L=115mm) (ø15.88-ø12.7)

⑰ Flare nut

⑱ Reducer (L=124mm) (ø15.88-ø12.7)

⑲ Flare nut

⑳ Reducer (L=115mm) (ø15.88-ø12.7)

㉑ Flare nut

㉒ Reducer (L=124mm) (ø15.88-ø12.7)

㉓ Flare nut

㉔ Reducer (L=115mm) (ø15.88-ø12.7)

㉕ Flare nut

㉖ Reducer (L=124mm) (ø15.88-ø12.7)

㉗ Flare nut

㉘ Reducer (L=115mm) (ø15.88-ø12.7)

㉙ Flare nut

㉚ Reducer (L=124mm) (ø15.88-ø12.7)

㉛ Flare nut

4) On-site piping work

Take care so that installed pipes may not touch components within a unit. If touching with an internal component will generate abnormal sounds and/or vibrations.

IMPORTANT

- (Except SRK) Regarding the change in the size of liquid/gas pipe: Use the reducer at indoor unit side. Reducer set is available in the outdoor unit as an accessory.
- (SRK) Regarding the change in the size of gas pipe: Use the reducer at indoor unit side. Reducer set is available in the outdoor unit as an accessory.

How to remove the side cover

- Please remove the screw of a side cover and remove to the front.
- Carry out the on-site piping work with the service valve fully closed.
- Give sufficient protection to a pipe end (compressed and brazed, or with an adhesive tape) so that water or foreign matters may not enter the piping.
- Bend a pipe to a radius as large as practical (R100-R150). Do not bend a pipe repeatedly to correct its form.
- Flare connection is used between the unit and refrigerant pipe. Flare a pipe after engaging a flare nut onto it. Flare dimensions for R410A are different from those for conventional R407C. Although we recommend the use of flaring tools designed specifically for R410A, conventional flaring tools can also be used by adjusting the measurement of protrusion B with a protrusion control gauge.
- The pipe should be anchored every 1.5m or less to isolate the vibration.
- Tighten a flare joint securely with a double spanner.

Do not apply force beyond proper fastening torque in tightening the flare nut.




Fix both liquid and gas service valves at the valve main bodies as illustrated on the right, and then fasten them, applying appropriate fastening torque.

Service valve size (mm)	Tightening torque (N·m)	Tightening angle (°)	Recommended length of a tool handle (mm)
ø6.35	14 - 18	45 - 60	150
ø9.52	34 - 42	30 - 45	200
ø12.7	49 - 61	30 - 45	250
ø15.88	68 - 82	15 - 20	300

CAUTION

Do not apply force beyond proper fastening torque in tightening the flare nut.


Fix both liquid and gas service valves at the valve main bodies as illustrated on the right, and then fasten them, applying appropriate fastening torque.

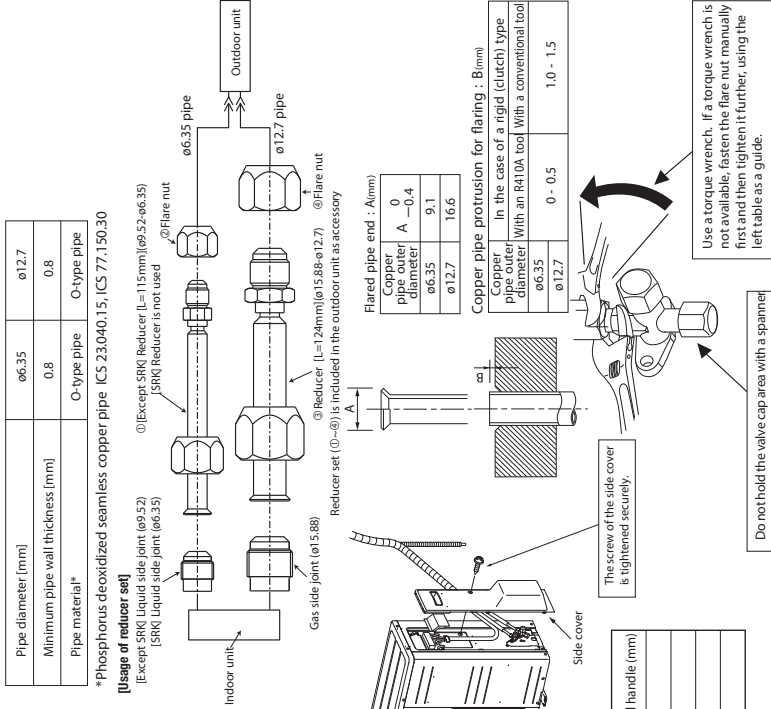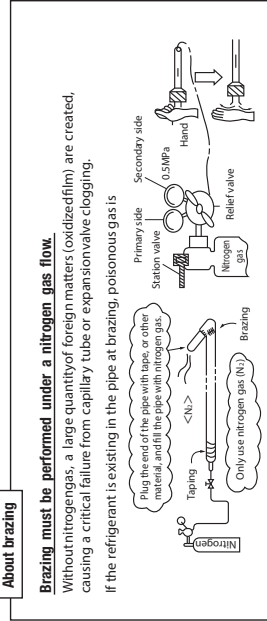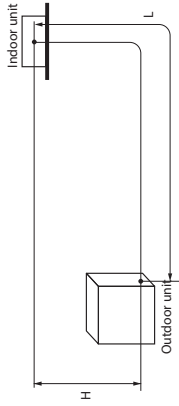

5) Air tightness test

- ① Although outdoor and indoor units themselves have been tested for air tightness at the factory, check the connecting pipes after the installation work for air tightness from the service valve's check joint equipped on the outdoor unit side. While conducting a test, keep the service valve shut all the time.
 - a) Raise the pressure to 0.5 MPa, and then stop. Leave it for five minutes to see if the pressure drops.
 - b) Then raise the pressure to 1.5 MPa, and stop. Leave it for five more minutes to see if the pressure drops.
 - c) Then raise the pressure to the specified level (4.15 MPa), and record the ambient temperature and the pressure.
 - d) If no pressure drop is observed with an installation pressurized to the specified level and left for about one day, it is acceptable. When the ambient temperature fall 1°C, the pressure also fall approximately 0.01 MPa. The pressure, if changed, should be compensated for.
 - e) If a pressure drop is observed in checking e) and a) - d), a leak exists somewhere. Find a leak by applying bubble test liquid to welded parts and flare joints and repair it. After repair, conduct an air-tightness test again.
- ② In conducting an air-tightness test, use nitrogen gas and pressurize the system with nitrogen gas from the gas side. Do not use a medium other than nitrogen gas under any circumstances.

6) Evacuation

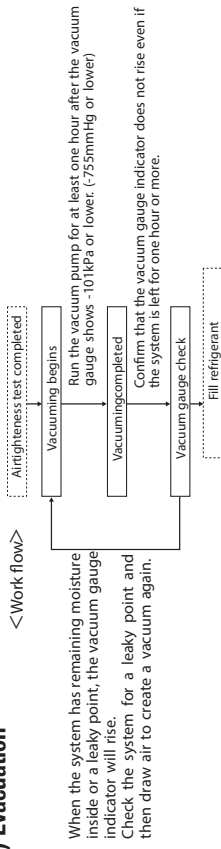

Pay attention to the following points in addition to the above for the R410A and compatible machines.

- To prevent a different oil from entering, assign dedicated tools, etc. to each refrigerant type. Under no circumstances must a gauge manifold and a charge hose in particular be shared with other refrigerant types (R22, R407C, etc.).
- Use a counterflow prevention adapter to prevent vacuum pump oil from entering the refrigerant system.

7) Additional refrigerant charge

(1) Calculate a required refrigerant charge volume from the following table.

Indoor unit	Additional charge volume (kg) per meter of refrigerant piping (liquid pipe ø6.35)	Refrigerant volume charged for shipment at the factory (kg)	Installation's pipe length (m) covered without additional refrigerant charge
FDT, FDE	0.02	1.6	15
FDU, FDUM, SRK	0.02	1.6	8

- This unit contains factory charged refrigerant covering 15m/8m of refrigerant piping and additional refrigerant charge on the installation site is not required for an installation with up to 15m/8m refrigerant piping. When refrigerant piping exceeds 15m/8m, additionally charge an amount calculated from the pipe length and the above table for the portion in excess of 15m/8m.
- If an existing pipe system is used, a required refrigerant charge volume will vary depending on the liquid pipe size. For further information, please see "5. UTILIZATION OF EXISTING PIPING."

Formula to calculate the volume of additional refrigerant required


$$\text{Additional charge volume (kg)} = \{ \text{Main length (m)} - \text{Factory charged volume} \} \times 0.02 \text{ (kg/m)}$$

*When an additional charge volume calculation result is negative, it is not necessary to charge refrigerant additionally.

- For an installation measuring 1.5m/8m or shorter in pipe length, please charge the refrigerant volume charged for shipment at the factory, when you recharge refrigerant after servicing etc.

8) Heating and condensation prevention

- (1) Dress refrigerant pipes (both gas and liquid pipes) for heat insulation and prevention of dew condensation.
 - Improper heat insulation/anti-dew dressing can result in a water leak or dripping causing damage to household effects, etc.
- (2) Use a heat insulating material that can withstand 120°C or a higher temperature. Poor heat insulating capacity can cause heat insulation problems or cable deterioration.
 - All gas pipes must be securely heat insulated in order to prevent damage from dripping water that comes from the condensation formed on them during a cooling operation or personal injury from burns because their surface can reach quite a high temperature due to discharged gas flowing inside during a heating operation.
 - Wrap indoor units' flare joints with heat insulating parts (pipe cover) for heat insulation (both gas and liquid pipes).
 - Give heat insulation to both gas and liquid side pipes. Bundle a heat insulating material and a pipe tightly together so that no gaps may be left between them and wrap them together with a connecting cable by a dressing tape.
 - Both gas and liquid pipes need to be dressed with 20 mm or thicker heat insulation materials above the ceiling where relative humidity exceeds 70%.

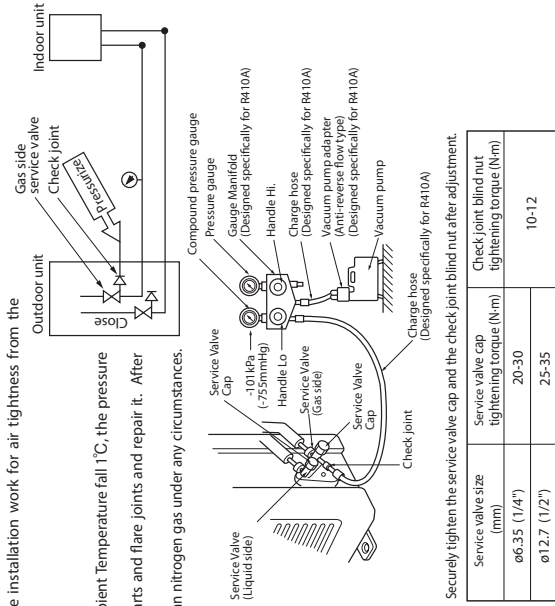


Securely tighten the service valve cap and the check joint blind nut after adjustment.

(2) Charging refrigerant

- Since R410A refrigerant must be charged in the liquid phase, you should charge it, keeping the container cylinder upside down or using a refrigerant cylinder equipped with a siphon tube.
- Charge refrigerant always from the liquid side service port with the service valve shut. When you find it difficult to charge a required amount, fully open the outdoor unit valves on both liquid and gas sides and charge refrigerant from the gas (suction) side service port, while running the unit in the cooling mode. In doing so, care must be taken so that refrigerant may be discharged from the cylinder in the liquid phase all the time. When the cylinder valve is throttled down or a dedicated conversion tool to change liquid-phase refrigerant into mist is used to protect the compressor, however, adjust charge conditions so that refrigerant will gasify upon entering the unit.
- In charging refrigerant, always charge a calculated volume by using a scale to measure the charge volume.
- When refrigerant is charged with the unit being run, complete a charge operation within 30 minutes. Running the unit with an insufficient quantity of refrigerant for a long time can cause a compressor failure.

NOTE Put down the refrigerant volume calculated from the pipe length onto the caution label attached on the back side of the service panel.

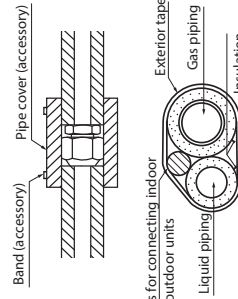

Wires for connecting indoor and outdoor units

Liquid piping

Exterior tape

Gas piping

Insulation

Wires for connecting indoor and outdoor units

Liquid piping


Exterior tape

Gas piping

Insulation

3. DRAIN PIPING WORK


- Execute drain piping by using a drain elbow and drain grommets supplied separately as accessories, where water drained from the outdoor unit is a problem.
- Water may drip where there is a larger amount of drain water. Seal around the drain elbow and drain grommets with putty or adequate caulking material.
- Condensed water may flow out from vicinity of service valve or connected pipes.
- Where you are likely to have several days of sub-zero temperatures in a row, do not use a drain elbow and drain grommets. (There is a risk of drain water freezing inside and blocking the drain.)

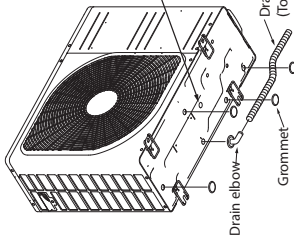

CAUTION

Do not put a grommet on this hole. This is a supplementary drain hole to discharge drain water, when a large quantity of it is

- When condensed water needs to be led to a drain, etc., install the unit on a flat base or concrete blocks.
- Then, please secure space for the drain elbow and the drain hose.



4. ELECTRICAL WIRING WORK

For details of electrical cabling, refer to the indoor unit installation manual.

Electrical installation work must be performed by an electrical installation service provider qualified by a power provider of the country. Electrical installation work must be executed according to the technical standards and other regulations applicable to electrical installations in the country.

- Do not use any supply cord lighter than one specified in parentheses for each type below.
 - braided cord (code designation 60245 IEC 51).
 - ordinary tough rubber sheathed cord (code designation 60245 IEC 53)
 - flat twin tinsel cord (code designation 60227 IEC 41).
- Use polychloroprene sheathed flexible cord (code designation 60245 IEC 57) for supply cords of parts of appliances for outdoor use.
- Ground the unit. Do not connect the grounding wire to a gas pipe, water pipe, lightning rod or telephone grounding wire.
- If improperly grounded, an electric shock or malfunction may result.
- A grounding wire must be connected before connecting the power cable. Provide a grounding wire longer than the power cable.
- The installation of an impulse withstanding type earth leakage breaker is necessary. A failure to install an earth leakage breaker can result in an accident such as an electric shock or a fire.
- Do not turn on the power until the electrical work is completed.
- Do not use a condensive capacitor for power factor improvement under any circumstances. (It does not improve power factor, while it can cause an abnormal overheat accident)
- For power source cables, use conduits.
- Do not lay electronic control cables (remote control and signaling wires) and other cables together outside the unit. Laying them together can result in the malfunctioning or a failure of the unit due to electric noises.
- Fasten cables so that they may not touch the piping, etc.
- When cables are connected, make sure that all electrical components within the electrical component box are free of loose connector coupling or terminal connection and then attach the cover securely. (Improper cover attachment can result in malfunctioning or a failure of the unit, if water penetrates into the box.)
- Always use a three-core cable for an indoor-outdoor connecting cable. Never use a shield cable.

CAUTION

In case of faulty wiring connection, the indoor unit stops, and then the run lamp turns on and the timer lamp blinks.



Use cables for interconnection wiring to avoid loosening of the wires. CENELEC code for cables Required field cables.

- H05RN4G1.5 (Example) or 245IEC57
- H Harmonized cable type
- 05 300/500 volts
- R Natural-and/or synth. rubber wire insulation
- N Polychloroprene rubber conductors insulation
- R Stranded core
- 4or5 Number of conductors
- G One conductor of the cable is the earth conductor (yellow/green)
- 1.5 Section of copper wire (mm²)

Main fuse specification

Specification	Part No.
250V/20A	SSA654A136A

Power cable, indoor-outdoor connecting wires

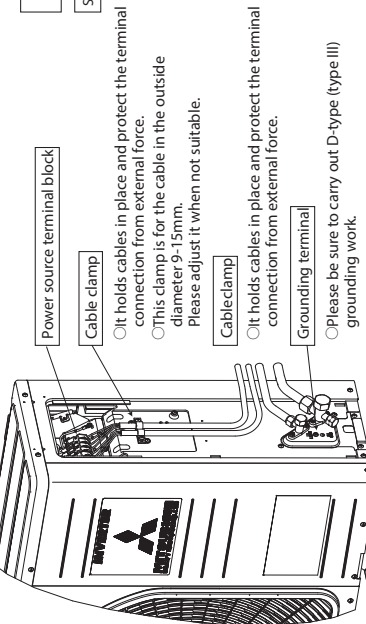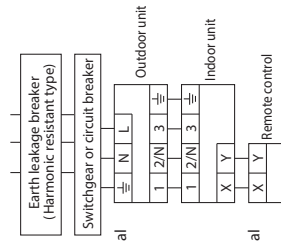

- Always perform grounding system installation work with the power cord unplugged.
- Connect a pair bearing a common terminal number with an indoor-outdoor connecting wire.
- In cabling, fasten cables securely with cable clamps so that no external force may work on terminal connections.
- Grounding terminals are provided in the control box.

Always use an earth leakage circuit breaker designed for inverter circuits to prevent a faulty operation.


CAUTION

Phase	Earth leakage breaker	Switchgear or circuit breaker		Power source (minimum)	Interconnecting and grounding wires (minimum)
		Switch breaker	Over current protector rated capacity		
Single-phase	20A, 30mA, 0.1 sec or less	30A	20A	2.0mm ²	1.5mm ² ×4

- The specifications shown in the above table are for units without heaters. For units with heaters, refer to the installation instructions or the construction instructions of the indoor unit.
- Switchgear or circuit-breaker capacity which is calculated from MAX. over current should be chosen along the regulations in each country.
- The cable specifications are based on the assumption that a metal or plastic conduit is used with no more than three cables contained in a conduit and a voltage drop is 2%. For an installation falling outside of these conditions, please follow the internal cabling regulations. Adapt it to the regulation in effect in each country.

5. UTILIZATION OF EXISTING PIPING

Check whether an existing pipe system is reusable or not by using the following flow chart.

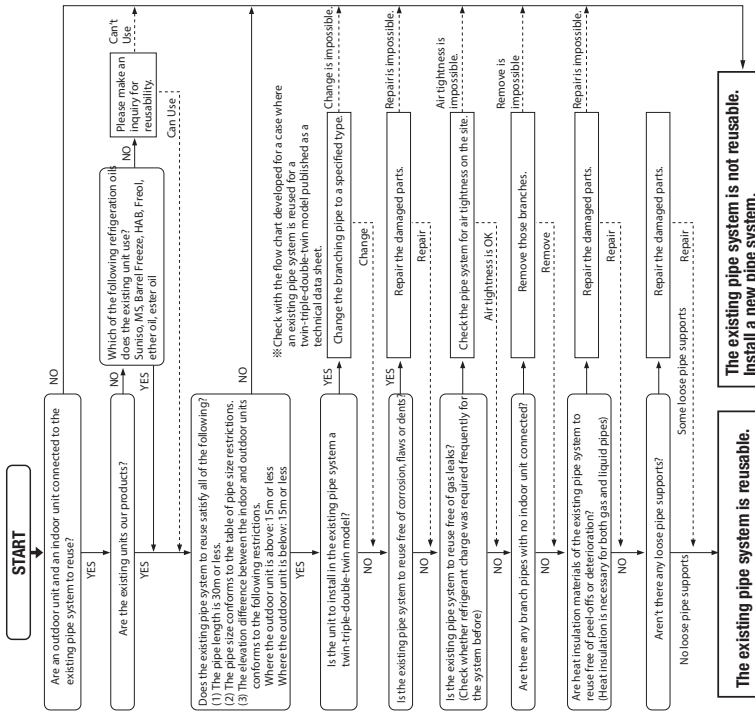

<Table of pipe size restrictions>

◎Standard pipe size ○Usable △Restricted to shorter pipe length limits

Indoor unit	Additional charge volume per meter of pipe		0.02kg/m		0.06kg/m	
	Pipe size	Liquid pipe	Gas pipe	Usability	0.025kg/m	0.06kg/m
FDT, FDE FDU, FDUM, SRK	Maximum one-way pipe length	30	24	10	10	10
	Length covered without additional charge	15	12	5	5	5
PDF	Maximum one-way pipe length	23	18	8	8	8
	Length covered without additional charge	8	6	3	3	3

- Please consult with our distributor in the area, if you need to recover refrigerant and change it again.
- Any combinations of pipe sizes not listed in the table are not usable.

Formula to calculate additional charge volume

Additional charge volume (kg) = (Main pipe length (m) - Length covered without additional charge shown in the table (m)) × Additional charge volume per meter of pipe shown in the table (kg/m)

※ If you obtain a negative figure as a result of calculation, no additional refrigerant needs to be charged.

Example When FDT is installed in a 10m long existing pipe system (liquid ø9.52, gas ø12.7), the quantity of refrigerant to charge additionally should be (10m-5m) x 0.06kg/m = 0.3 kg.

WARNING

<Where the existing unit can be run for a cooling operation.>

Carry out the following steps with the existing unit. (in the order of (1), (2), (3) and (4))

- Run the unit for 30 minutes for a cooling operation.
- Stop the indoor fan and run the unit for 3 minutes for a cooling operation (returning liquid)
- Close the liquid side service valve of the outdoor unit and pump down (refrigerant recovery)
- Blow with nitrogen gas. ※ If discolored refrigeration oil or any foreign matters is discharged by the blow, wash the pipe system or install a new pipe system.

- For the flare nut, do not use the old one, but use the one supplied with the outdoor unit. Process a flare to the dimensions specified for R410A.

<Where the existing unit cannot be run for a cooling operation.>

- Wash the pipe system or install a new pipe system.
- If you choose to wash the pipe system, please contact our distributor in the area.

INSTALLATION TEST CHECK POINTS

Check the following points again after completion of the installation, and before turning on the power. Conduct a test run again and ensure that the unit operates properly. Explain to the customer how to use the unit and how to take care of the unit following the instruction manual.

After installation

- Power cables and connecting wires are securely fixed to the terminal block.
- The power source voltage is correct as the rating.
- The drain hose is fixed securely.
- Service valve is fully open.
- No gas leaks from the joints of the service valve and joint.
- The pipe joints for indoor and outdoor pipes have been insulated.
- The reverse flow check cap is attached.
- The cover of the pipe cover (A) faces downward to prevent rain from entering.
- Gaps are properly sealed between the pipe covers (A) (B) and the wall surface / pipes.
- The screw of the side cover is tightened securely.

(2) Model FDC90VNP1

PSC012D054 

R410A REFRIGERANT USED




- This installation manual deals with outdoor units and general installation specifications only. For indoor units, refer to page 60.
- When install the unit, be sure to check whether the selection of installation place, power source specifications, usage limitation (piping length, height differences between indoor and outdoor units, power source voltage and etc.) and installation spaces.

SAFETY PRECAUTIONS

- Read the "SAFETY PRECAUTIONS" carefully first of all and strictly follow it during the installation work in order to protect yourself.
- The precautionary items mentioned below are distinguished into two levels, **WARNING** and **CAUTION**.
- **WARNING:** Wrong installation would cause serious consequences such as injuries or death.
- **CAUTION:** Wrong installation might cause serious consequences depending on circumstances.
- Both mentions the important items to protect your health and safety so strictly follow them by any means.
- Be sure to confirm no anomaly on the equipment by commissioning after completed installation and explain the operating methods as well as the maintenance methods of this equipment to the user according to the owner's manual.

 Never do it under any circumstances.  Always do it according to the instruction.

WARNING
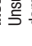
<p> Installation must be carried out by the qualified installer. If you install the system by yourself, it may cause serious trouble such as water leaks, electric shocks, fire and personal injury, as a result of a system malfunction. Do not carry out the installation and maintenance work except by the qualified installer.</p>	<p>Installation. If the refrigerant comes into contact with naked flames, poisonous gas is produced.</p> <ul style="list-style-type: none"> • Use the prescribed pipes, flare nuts and tools for R410A. Using existing parts (for R22 or R407C) can cause the unit failure and serious accidents due to burst of the refrigerant circuit. • Tighten the flare nut by torque wrench with specified method. If the flare nut were tightened with excess torque, this may cause burst and refrigerant leakage after a long period. • Do not open the service valves for liquid line and gas line until completed refrigerant piping work, air tightness test and evacuation. If the compressor is operated in state of opening service valves before completed connection of refrigerant piping work, air can be sucked into refrigerant circuit, which can cause burst or personal injury due to anomalously high pressure in the refrigerant. • The electrical installation must be carried out by the qualified electrician in accordance with "the norm for electrical work" and "national wiring regulation", and the system must be connected to the dedicated circuit. Power source with insufficient capacity and incorrect function done by improper work can cause electric shocks and fire. • Be sure to shut off the power before starting electrical work. Failure to shut off the power can cause electric shocks, unit failure or incorrect function of equipment. • Be sure to use the cables conformed to safety standard and cable ampacity for power distribution work. Unconformable cables can cause electric leak, anomalous heat production or fire. • This appliance must be connected to main power source by means of a circuit breaker or switch (fuse:20A) with a contact separation of at least 3mm.
<ul style="list-style-type: none"> • Arrange the wiring in the control box so that it cannot be pushed up further into the box. Install the service panel correctly. Incorrect installation may result in overheating and fire. • Use the prescribed cables for electrical connection, tighten the cables securely in terminal block and relieve the cables correctly to prevent overloading the terminal blocks. • Be sure to fix up the service panels. Incorrect fixing can cause electric shocks or fire due to intrusion of dust or water. • Be sure to switch off the power source in the event of installation, inspection or servicing. If the power source is not shut off, there is a risk of electric shocks, unit failure or personal injury due to the unexpected start of fan. • Stop the compressor before removing the pipe after shutting the service valve on pump down work. If the pipe is removed when the compressor is in operation with the service valve open, air would be mixed in the refrigeration circuit and it could cause explosion and injuries due to abnormal high pressure in the cooling cycle. • Only use prescribed option parts. The installation must be carried out by the qualified installer. If you install the system by yourself, it can cause serious trouble such as water leaks, electric shocks, fire. • Be sure to wear protective goggles and gloves while at work. If the earth leakage breaker is not installed, it can cause electric shocks. • Appliance is not to be used by children or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction. Children being supervised not to play with appliance. 	<ul style="list-style-type: none"> • Do not perform any change of protective device itself or its setup condition. The forced operation by short-circuiting protective device of pressure switch and temperature control or the use of non specified component can cause fire or burst.
<ul style="list-style-type: none"> • Keep the installation manual together with owner's manual at a place where any user can read at any time. Moreover, if necessary, ask to hand them to a new user. • For installing qualified personnel, take precautions in respect to themselves by using suitable protective clothing, groves, etc., and then perform the installation works. • Please pay attention not to fall down the tools, etc. when installing the unit at the high position. • If unusual noise can be heard during operation, consult the dealer. • The meanings of "Marks" used here are shown as follows: 	<ul style="list-style-type: none"> • Do not bundling, winding or processing for the power cord. Or, do not deforming the power plug due to treat it. This may cause fire or heating. • Do not run the unit with removed panels or protections. Touching rotating equipments, hot surfaces or high voltage parts can cause personal injury due to entrapment, burn or electric shocks.
<ul style="list-style-type: none"> • Installation must be carried out by the qualified installer. If parts other than those prescribed by us are used, it may cause water leaks, electric shocks, fire and personal injury. • Install the unit in a location with good support. Unsuitable installation locations can cause the unit to fall and cause material damage and personal injury. • Ensure the unit is stable when installed, so that it can withstand earthquakes and strong winds. Unsuitable installation locations can cause the unit to fall and cause material damage and personal injury. • Ventilate the working area well in the event of refrigerant leakage during installation. If parts other than those prescribed by us are used, it may cause water leaks, electric shocks, fire and personal injury. • Use the original accessories and the specified components for installation. If parts other than those prescribed by us are used, it may cause water leaks, electric shocks, fire and personal injury. • Ensure that no air enters in the refrigerant circuit when the unit is installed and removed. If air enters in the refrigerant circuit, the pressure in the refrigerant circuit becomes too high, which can cause burst and personal injury. • Do not processing, splice the power cord, or share a socket with other power plugs. This may cause fire or electric shock due to defecting contact, defecting insulation and over-current etc. 	<p> Ensure that no air enters in the refrigerant circuit when the unit is installed and removed. If air enters in the refrigerant circuit, the pressure in the refrigerant circuit becomes too high, which can cause burst and personal injury.</p> <p> Do not processing, splice the power cord, or share a socket with other power plugs. This may cause fire or electric shock due to defecting contact, defecting insulation and over-current etc.</p>

CAUTION

	<ul style="list-style-type: none"> • Carry out the electrical work for ground lead with care. Do not connect the ground lead to the gas line, water line, lightning conductor or telephone line's ground lead. Incorrect grounding can cause unit faults such as electric shocks due to short-circuiting.
	<ul style="list-style-type: none"> • Use the circuit breaker for all pole correct capacity. Circuit breaker should be the one that disconnect all poles under over current. Using the incorrect circuit breaker, it can cause the unit malfunction and fire. • Install isolator or disconnect switch on the power source wiring in accordance with the local codes and regulations. The isolator should be locked in OFF state in accordance with EN60204-1. • After maintenance, all wiring, wiring ties and the like, should be returned to their original state and wiring route, and the necessary clearance from all metal parts should be secured. • Secure a space for installation, inspection and maintenance specified in the manual. Insufficient space can result in accident such as personal injury due to falling from the installation place.
	<ul style="list-style-type: none"> • Do not install the unit in the locations listed below. <ul style="list-style-type: none"> • Locations where carbon fiber, metal powder or any powder is floating. • Locations where any substances that can affect the unit such as sulphide gas, chloride gas, acid and alkaline can occur. • Vehicles and ships. • Locations where cosmetic or special sprays are often used. • Locations with direct exposure of oil mist and steam such as kitchen and machine plant. • Locations where any machines which generate high frequency harmonics are used. • Locations with salty atmospheres such as coastlines. • Locations with heavy snow (If installed, be sure to provide base flame and snow hood mentioned in the manual). • Locations where the unit is exposed to chimney smoke. • Locations at high altitude (more than 1000m high). • Locations with ammoniac atmospheres. (e.g. organic fertilizer) • Locations with calcium chloride (e.g. snow melting agent). • Locations where heat radiation from other heat source can affect the unit. • Locations without good air circulation. • Locations with any obstacles which can prevent inlet and outlet air of the unit. • Locations where short circuit of air can occur (in case of multiple units installation). • Locations where strong air blows against the air outlet of outdoor unit. • Locations where something located above the unit could fall. It can cause remarkable decrease in performance, corrosion and damage of components, malfunction and fire.

Notabilia as a unit designed for R410A

- Do not use any refrigerant other than R410A. R410A will rise to pressure about 1.6 times higher than that of a conventional refrigerant.
- A cylinder containing R410A has a pink indication mark on the top.
- A unit designed for R410A has adopted a different size indoor unit service valve charge port and a different size check joint provided in the unit to prevent the charging of a wrong refrigerant by mistake. The processed dimension of the flared part of a refrigerant pipe and a flare nuts parallel side measurement have also been altered to raise strength against pressure. Accordingly, you are required to arrange dedicated R410A tools listed in the table on the left before installing or servicing this unit.
- Do not use a charge cylinder. The use of a charge cylinder will cause the refrigerant composition to change, which results in performance degradation.
- In charging refrigerant, always take it out from a cylinder in the liquid phase.
- All indoor units must be models designed exclusively for R410A. Check connectable indoor unit models in a catalog, etc. (A wrong indoor unit, if connected into the system, will impair proper system operation.)

Check before installation work

- Model name and power source
- Refrigerant piping length
- Piping, wiring and miscellaneous small parts
- Indoor unit installation manual

Accessories for outdoor unit	Q'ty
① Grommet (Heat pump type only)	4
② Drain elbow (Heat pump type only)	1
③ Reducer set ø9.52 ø6.35	1
④ Reducer set ø15.88 ø12.7	1

Option parts	Q'ty
Ⓐ Sealing plate	1
Ⓑ Sleeve	1
Ⓒ Inclination plate	1
Ⓓ Putty	1
Ⓔ Drain hose (extension hose)	1
Ⓕ Piping cover (for insulation of connection piping)	1

Necessary tools for the installation work	
1 Plus headed driver	
2 Knife	
3 Saw	
4 Tape measure	
5 Hammer	
6 Spanner wrench	
7 Torque wrench [1.0~82.0N.m (1.4~8.2kgf-m)]	
8 Hole core drill (65mm in diameter)	

9 Wrench key (Hexagon) [4mm]	
10 Vacuum pump	
11 Vacuum pump adapter (Anti-reverse flow type) (Designed specifically for R410A)	
12 Gauge manifold (Designed specifically for R410A)	
13 Charge hose (Designed specifically for R410A)	
14 Flaring tool set (Designed specifically for R410A)	
15 Gas leak detector (Designed specifically for R410A)	
16 Gauge for projection adjustment (Used when flare is made by using conventional flare tool)	

- **When perform the air-conditioner operation (cooling or drying operation) in which ventilator is installed in the room. In this case, using the air-conditioner in parallel with the ventilator, there is the possibility that drain water may backflow in accordance with the room lapse into the negative pressure status. Therefore, set up the opening port such as incorporate the air into the room that may appropriate to ventilation (For example: Open the door a little). In addition, just as above, so set up the opening port if the room lapse into negative pressure status due to register of the wind for the high rise apartment etc.**
- **Take care when carrying the unit by hand.**
If the unit weights more than 20kg, it must be carried by two or more persons. Do not carry by the plastic straps, always use the carry handle when carrying the unit by hand. Use gloves to minimize the risk of cuts by the aluminum fins.
- **Dispose of any packing materials correctly.**
Any remaining packing materials can cause personal injury as it contains nails and wood. And to avoid danger of suffocation, be sure to keep the plastic wrapper away from children and to dispose after tear it up.
- **Be sure to insulate the refrigerant pipes so as not to condense the ambient air moisture on them.**
Insufficient insulation can cause condensation, which can lead to moisture damage on the ceiling, floor, furniture and any other valuables.
- **Do not install the outdoor unit in a location where insects and small animals can inhabit.**
Insects and small animals can enter the electric parts and cause damage or fire. Instruct the user to keep the surroundings clean.
- **Do not use the base flame for outdoor unit which is corroded or damaged due to long periods of operation.**
Using an old and damaged base flame can cause the unit falling down and cause personal injury.
- **Do not use any materials other than a fuse with the correct rating in the location where fuses are to be used.**
Connecting the circuit with copper wire or other metal thread can cause unit failure and fire.
- **Do not touch any buttons with wet hands.**
It can cause electric shocks.
- **Do not touch any refrigerant pipes with your hands when the system is in operation.**
During operation the refrigerant pipes become extremely hot or extremely cold depending on the operating condition, and it can cause burn injury or frost injury.
- **Do not touch the suction or aluminum fin on the outdoor unit.**
This may cause injury.
- **Do not put anything on the outdoor unit and operating unit.**
This may cause damage the objects or injury due to falling to the object.
- **Do not use the unit for special purposes such as storing foods, cooling precision instruments and preservation of animals, plants or art.**
- **Do not clean up the unit with water.**


1. HAULAGE AND INSTALLATION (Take particular care in carrying in or moving the unit, and always perform such an operation with two or more persons.)

CAUTION

When a unit is hoisted with slings for haulage, take into consideration the offset of its gravity center position. If not properly balanced, the unit can be thrown off-balance and fall.

1) Delivery

- Deliver the unit as close as possible to the installation site before removing it from the packaging.
- When you have to unpack the unit for a compelling reason before you haul it to the installation point, hoist the unit with nylon slings or ropes and protect corners so that you may not damage the unit.

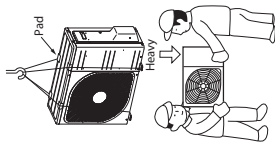

2) Portage

- The right hand side of the unit as viewed from the front (diffuser side) is heavy. A person carrying the right hand side must take heed of this fact. A person carrying the left hand side must hold with his right hand the handle provided on the front panel of the unit and with his left hand the corner column section.



3) Selection of installation location for the outdoor unit

Be sure to select a suitable installation place in consideration of following conditions.

- A place where it is horizontal, stable and can endure the unit weight and will not allow vibration transmittance of the unit.
- A place where it can be free from possibility of bothering neighbors due to noise or exhaust air from the unit.
- A place where the unit is not exposed to oil splashes.
- A place where it can be free from danger of flammable gas leakage.
- A place where drain water can be disposed without any trouble.
- A place where the unit will not be affected by heat radiation from other heat source.
- A place where snow will not accumulate.
- A place where the unit can be kept away 5m or more from TV set and/or radio receiver in order to avoid any radio or TV interference.
- A place where good air circulation can be secured, and enough service space can be secured for maintenance and service of the unit safely.
- A place where the unit will not be affected by electromagnetic waves and/or high-harmonic waves generated by other equipment.
- A place where chemical substances like sulfuric gas, chloric gas, acid and alkali (including ammonia), which can harm the unit, will not be generated and not remain.
- If a operation is conducted when the outdoor air temperature is -5°C lower, the outdoor unit should be installed at a place where it is not influenced by natural wind.
- A place where strong wind will not blow against the outlet air blow of the unit.
- Do not install the unit in places which exposed to sea breeze (e.g. coastal area) or calcium chloride (e.g. snow melting agent), exposed to ammonia substance (e.g. organic fertilizer).

4) Caution about selection of installation location

- (1) If the unit is installed in the area where the snow will accumulate, following measures are required.
 - The bottom plate of unit and intake, outlet may be blocked by snow.
 - 1 Install the unit on the base so that the bottom is higher than snow cover surface, and draining water is secured.
 - 2 Provide a snow hood to the outdoor unit on site.
 - 3 Install the unit under eaves or provide the roof on site.

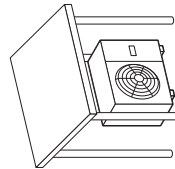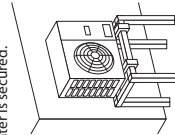


Since drain water generated by defrost control may freeze, following measures are required.

- Don't execute drain piping work by using a drain elbow and drain grommets (accessories). (Refer to DRAIN PIPING WORK)
- Attached heater on a base plate on site, if there is possibility to freeze drain water.


In case that the product has a corrective drainage system, the drainage paths should have suitable treatment against freezing but be sure not to melt the material or drainage paths with heat.

- (2) If the unit can be affected by strong wind, following measures are required.
 - Strong wind can cause damage of fan (fan motor) or can cause performance degradation, or can trigger anomalous stop of the unit due to rising of high pressure.

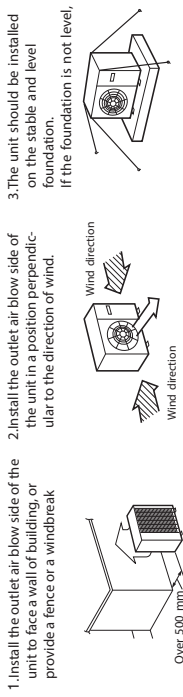


5) Installation space

- Walls surrounding the unit in the four sides, are not acceptable.
- There must be a 1-meter or larger space in the above.
- When more than one unit are installed side by side, provide a 250mm or wider interval between them as a service space. In order to facilitate servicing of controls, please provide a sufficient space between units so that their top plates can be removed easily.
- Where a danger of short-circuiting exists, install sufficient louvers.
- When more than one unit are installed, provide sufficient intake space consciously so that short-circuiting may not occur.
- Where piling snow can bury the outdoor unit, provide proper snow guards.

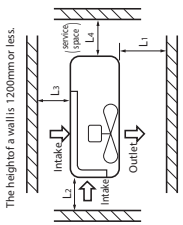

Size	I	II	III	IV
Example installation	Open	280	280	180
L1	100	75	Open	Open
L2	100	80	80	80
L3	250	Open	250	Open
L4				

6) Installation

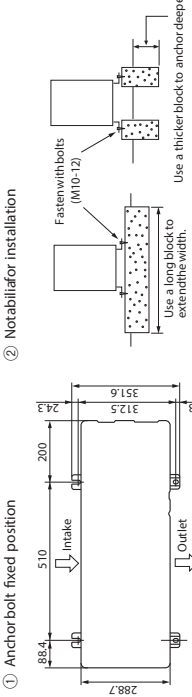

- In installing the unit, fix the unit's legs with bolts specified on the above.
- The protrusion of an anchor bolt on the front side must be kept within 15 mm.
- Securely install the unit so that it does not fall over during earthquakes or strong winds, etc.
- Refer to the above illustrations for information regarding concrete foundations.
- Install the unit in a level area. (With a gradient of 5 mm or less.)

7) To run the unit for a cooling operation, when the outdoor temperature is -5°C or lower.

- When the outdoor air temperature is -5°C or lower, provide a snow hood to the outdoor unit on site. So that strong wind will not blow against the outdoor heat exchanger directly.

2. REFRIGERANT PIPING WORK

1) Restrictions on unit installation and use

- Check the followings in light of the indoor unit specifications and the installation site.
- Observe the following restrictions on unit installation and use. Improper installation can result in a compressor failure or performance degradation.

Restrictions	Dimensional restrictions		Marks appearing in the drawing on the right
	FDT, FDE, FDU, FDUM, SRK	Main pipe length	
Indoor unit		30m or less	L
Elevation difference between indoor and outdoor units		23m or less	L
		20m or less	H
		20m or less	H

- The use restrictions appearing in the table above are applicable to the standard pipe size combinations shown in the table below. When an existing pipe system is utilized, different one-way pipe length restrictions should apply depending on its pipe size.

⚠ CAUTION

For more information, please see "5. UTILIZATION OF EXISTING PIPING."

2) Determination of pipe size

- Determine refrigerant pipe size pursuant to the following guidelines based on the indoor unit specifications.

	Gas pipe	Liquid pipe
Outdoor unit connected	ø12.7 Flare	ø6.35 Flare
	ø12.7	ø6.35
Indoor unit connected	FDT, FDE, FDU, FDUM, FDF	ø9.52
	SRK	ø6.35

3) Refrigerant pipe wall thickness and material

- Select refrigerant pipes of the table shown on the right wall thickness and material as specified for each pipe size.

NOTE


- Select pipes having a wall thickness larger than the specified minimum pipe thickness.

Pipe diameter (mm)	ø6.35	ø12.7
Minimum pipe wall thickness (mm)	0.8	0.8
Pipe material*	O-type pipe	O-type pipe

*Phosphorus deoxidized seamless copper pipe (CS 23.040.15, JCS 77.150.30)

Usage of reducer set

- Except SRK Liquid side joint (ø9.52)
- SRK Liquid side joint (ø6.35)

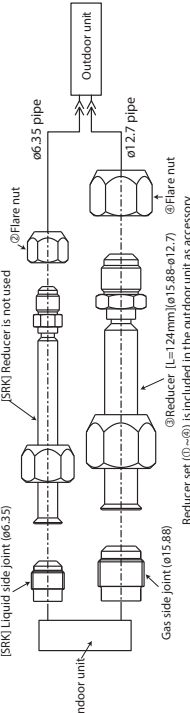


How to remove the side cover

- Please remove the screw of a side cover and remove to the front.
- Carry out the on site piping work with the service valve fully closed.
- Give sufficient protection to a pipe end (compressed and blazed, or with an adhesive tape) so that water or foreign matters may not enter the piping.
- Bend a pipe to a radius as large as practical (R100-R150). Do not bend a pipe repeatedly to correct its form.
- Flare connection is used between the unit and refrigerant pipe. Flare a pipe after engaging a flare nut onto it. Flare dimensions for R410A are different from those for conventional R407C. Although we recommend the use of flaring tools designed specifically for R410A, conventional flaring tools can also be used by adjusting the measurement of protrusion B with a protrusion control gauge.
- The pipe should be anchored every 1.5m or less to isolate the vibration.
- Tighten a flare joint securely with a double spanner.

⚠ CAUTION

- Do not apply force beyond proper fastening torque in tightening the flare nut. Fix both liquid and gas service valves at the valve main bodies as illustrated on the right, and then fasten them, applying appropriate fastening torque.

Service valve size (mm)	Tightening torque (N·m)	Tightening angle (°)	Recommended length of a tool handle (mm)
ø6.35	14 - 18	45 - 60	150
ø9.52	34 - 42	30 - 45	200
ø12.7	49 - 61	30 - 45	250
ø15.88	68 - 82	15 - 20	300

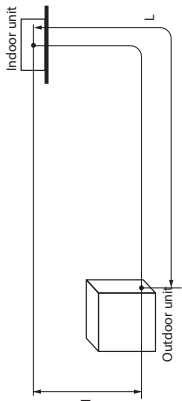




When pipe is brazing.

About brazing

Brazing must be performed under a nitrogen gas flow.

Without nitrogen gas, a large quantity of foreign matters (oxidized film) are created, causing a critical failure from capillary tube or expansion valve clogging.

If the refrigerant is existing in the pipe at brazing, poisonous gas is

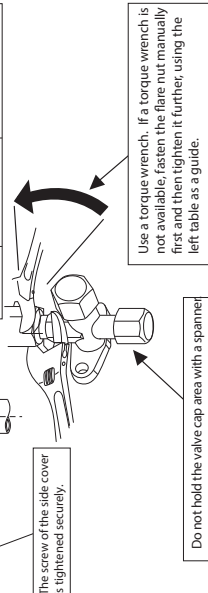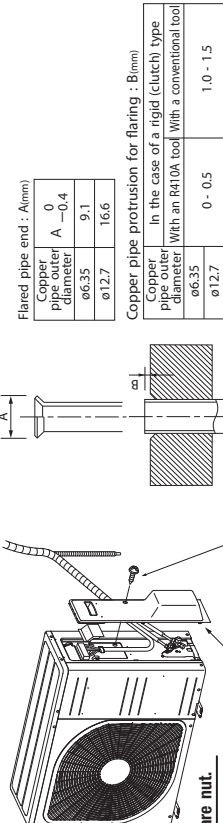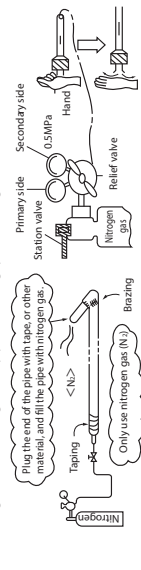


Do not hold the valve cap area with a spanner!

5) Air tightness test

- ① Although outdoor and indoor units themselves have been tested for air tightness at the factory, check the connecting pipes after the installation work for air tightness from the service valve's check joint equipped on the outdoor unit side. While conducting a test, keep the service valve shut all the time.
 - a) Raise the pressure to 0.5 MPa, and then stop. Leave it for five minutes to see if the pressure drops.
 - b) Then raise the pressure to 1.5 MPa, and stop. Leave it for five minutes to see if the pressure drops.
 - c) Then raise the pressure to the specified level (4.15 MPa), and record the ambient temperature and the pressure.
 - d) If no pressure drop is observed with an installation pressurized to the specified level and left for about one day, it is acceptable. When the ambient temperature fall 1°C, the pressure also fall approximately 0.01 MPa. The pressure, if changed, should be compensated for.
 - e) If a pressure drop is observed in checking e) and a) - d), a leak exists somewhere. Find a leak by applying bubble test liquid to welded parts and flare joints and repair it. After repair, conduct an air-tightness test again.
- ② In conducting an air-tightness test, use nitrogen gas and pressurize the system with nitrogen gas from the gas side. Do not use a medium other than nitrogen gas under any circumstances.

6) Evacuation

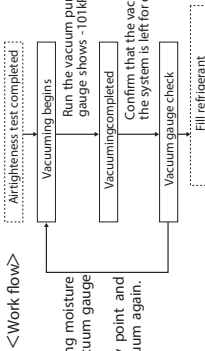

When the system has remaining moisture inside or a leaky point, the vacuum gauge indicator will rise. Check the system for a leaky point and then draw air to create a vacuum again.

Pay attention to the following points in addition to the above for the R410A and compatible machines.

- To prevent a different oil from entering, assign dedicated tools, etc. to each refrigerant type. Under no circumstances must a gauge manifold and a charge hose in particular be shared with other refrigerant types (R22, R407C, etc.).
- Use a counterflow prevention adapter to prevent vacuum pump oil from entering the refrigerant system.

7) Additional refrigerant charge

(1) Calculate a required refrigerant charge volume from the following table.

Indoor unit	Additional charge volume (kg) per meter of refrigerant piping (liquid pipe ø6.35)	Refrigerant volume charged for shipment at the factory (kg)	Installation's pipe length (m) covered without additional refrigerant charge
FDT, FDE FDU, FDUM, SRK	0.02	1.6	15
FD	0.02	1.6	8


- This unit contains factory charged refrigerant covering 15m/8m of refrigerant piping and additional refrigerant charge on the installation site is not required for an installation with up to 15m/8m refrigerant piping. When refrigerant piping exceeds 15m/8m, additionally charge an amount calculated from the pipe length and the above table for the portion in excess of 15m/8m.
 - If an existing pipe system is used, a required refrigerant charge volume will vary depending on the liquid pipe size. For further information, please see "5. UTILIZATION OF EXISTING PIPING."
- Formula to calculate the volume of additional refrigerant required

$$\text{Additional charge volume (kg)} = (\text{Main length (m)} - \text{Factory charged volume}) \times 0.02 \text{ (kg/m)}$$

- *When an additional charge volume calculation result is negative, it is not necessary to charge refrigerant additionally.
- For an installation measuring 15m/8m or shorter in pipe length, please charge the refrigerant volume charged for shipment at the factory, when you recharge refrigerant after servicing etc.

8) Heating and condensation prevention

- (1) Dress refrigerant pipes (both gas and liquid pipes) for heat insulation and prevention of dew condensation.
 - Improper heat insulation/anti-dew dressing can result in a water leak or dripping causing damage to household effects, etc.
- (2) Use a heat insulating material that can withstand 120C or a higher temperature. Poor heat insulating capacity can cause heat insulation problems or cable deterioration.
 - All gas pipes must be securely heat insulated in order to prevent damage from dripping water that comes from the condensation formed on them during a cooling operation or personal injury from burns because their surface can reach quite a high temperature due to discharged gas flowing inside during a heating operation.
 - Wrap indoor units' flare joints with heat insulating parts (pipe cover) for heat insulation (both gas and liquid pipes).
 - Give heat insulation to both gas and liquid side pipes. Bundle a heat insulating material and a pipe tightly together so that no gaps may be left between them and wrap them together with a connecting cable by a dressing tape.
 - **Both gas and liquid pipes need to be dressed with 20 mm or thicker heat insulation materials above the ceiling where relative humidity exceeds 70%.**

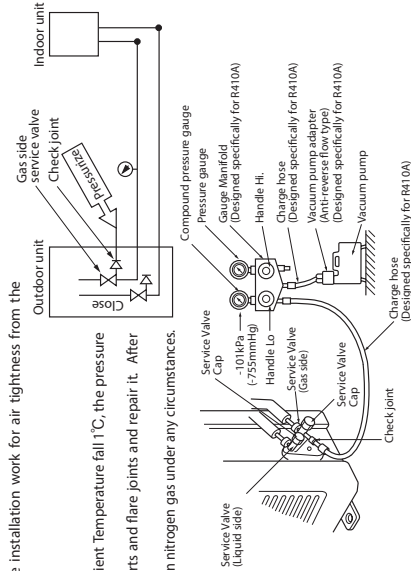


Securely tighten the service valve cap and the check joint blind nut after adjustment.

Service valve size (mm)	Service valve cap tightening torque (N·m)	Check joint blind nut tightening torque (N·m)
ø6.35 (1/4")	2.0-3.0	2.5-3.5
ø12.7 (1/2")	10-12	

(2) Charging refrigerant


- Since R410A refrigerant must be charged in the liquid phase, you should charge it, keeping the container cylinder upside down or using a refrigerant cylinder equipped with a siphon tube.
- Charge refrigerant always from the liquid side service port with the service valve shut. When you find it difficult to charge a required amount, fully open the outdoor unit valves on both liquid and gas sides and charge refrigerant from the gas (suction) side service port, while running the unit in the cooling mode. In doing so, care must be taken so that refrigerant may be discharged from the cylinder in the liquid phase all the time. When the cylinder valve is throttled down or a dedicated conversion tool to change liquid-phase refrigerant into mist is used to protect the compressor, however, adjust charge conditions so that refrigerant will gassy upon entering the unit.
- In charging refrigerant, always charge a calculated volume by using a scale to measure the charge volume.
- When refrigerant is charged with the unit being run, complete a charge operation within 30 minutes. Running the unit with an insufficient quantity of refrigerant for a long time can cause a compressor failure.

NOTE Put down the refrigerant volume calculated from the pipe length onto the caution label attached on the back side of the service panel.

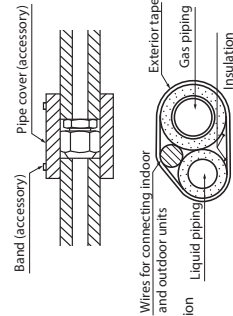


3. DRAIN PIPING WORK

- Execute drain piping by using a drain elbow and drain grommets supplied separately as accessories, where water drained from the outdoor unit is a problem.
- Water may drip where there is a larger amount of drain water. Seal around the drain elbow and drain grommets with putty or adequate caulking material.
- Condensed water may flow out from vicinity of service valve or connected pipes.
- Where you are likely to have several days of sub-zero temperatures in a row, do not use a drain elbow and drain grommets. (There is a risk of drain water freezing inside and blocking the drain.)

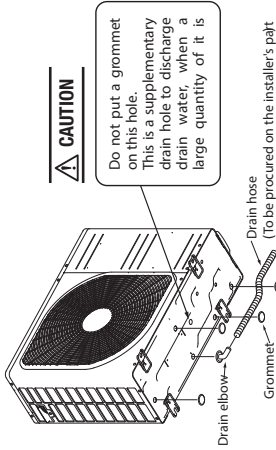

- When condensed water needs to be led to a drain, etc., install the unit on a flat base or concrete blocks. Then, please secure space for the drain elbow and the drain hose.



4. ELECTRICAL WIRING WORK

For details of electrical cabling, refer to the indoor unit installation manual.

Electrical installation work must be performed by an electrical installation service provider qualified by a power provider of the country. Electrical installation work must be executed according to the technical standards and other regulations applicable to electrical installations in the country.

- Do not use any supply cord lighter than one specified in parentheses for each type below.
 - ordinary tough rubber sheathed cord (code designation 60245 IEC 53)
 - flat twin tinsel cord (code designation 60227 IEC 41);
- Use polychloroprene sheathed flexible cord (code designation 60245 IEC 57) for supply cords of parts of appliances for outdoor use.
- Ground the unit. Do not connect the grounding wire to a gas pipe, water pipe, lightning rod or telephone grounding wire.
- If improperly grounded, an electric shock or malfunction may result.
- A grounding wire must be connected before connecting the power cable. Provide a grounding wire longer than the power cable.
- The installation of an impulse withstanding type earth leakage breaker is necessary. A failure to install an earth leakage breaker can result in an accident such as an electric shock or a fire.
- Do not turn on the power until the electrical work is completed.
- Do not use a condensative capacitor for power factor improvement under any circumstances. (It does not improve power factor, while it can cause an abnormal overheat accident)
- For power source cables, use conduits.
- Do not lay electronic control cables (remote control and signaling wires) and other cables together outside the unit. Laying them together can result in the malfunctioning or a failure of the unit due to electric noises.
- Fasten cables so that they may not touch the piping, etc.
- When cables are connected, make sure that all electrical components within the electrical component box are free of loose connector coupling or terminal connection and then attach the cover securely. (Improper cover attachment can result in malfunctioning or a failure of the unit, if water penetrates into the box.)
- Always use a three-core cable for an indoor-outdoor connecting cable. Never use a shield cable.

CAUTION

In case of faulty wiring connection, the indoor unit stops, and then the run lamp turns on and the timer lamp blinks.

Use cables for interconnection wiring to avoid loosening of the wires.
CENELEC code for cables Required field cables.

H05RN4G1.5 (Example) or 245IEC57
H Harmonized cable type
05 300/500 volts
R Natural-and/or synth. rubber wire insulation
N Polychloroprene rubber conductors insulation
R Stranded core
4or5 Number of conductors
G One conductor of the cable is the earth conductor (yellow/green)
1.5 Section of copper wire (mm ²)

Main fuse specification	Part No.
Specification	SSA564A138A
250V 20A	

Power cable, indoor-outdoor connecting wires


- Always perform grounding system installation work with the power cord unplugged.
- Connect a pair bearing a common terminal number with an indoor-outdoor connecting wire.
- In cabling, fasten cables securely with cable clamps so that no external force may work on terminal connections.
- Grounding terminals are provided in the control box.

CAUTION

Always use an earth leakage circuit breaker designed for inverter circuits to prevent a faulty operation.


Phase	Earth leakage breaker	Switchgear or circuit breaker	Interconnecting and grounding wires (minimum)
	Switch breaker	Over current protector rated capacity	Power source (minimum)
Single-phase	20A, 30mA, 0.1sec or less	30A	2.0mm ²
		20A	1.5mm ² ×4

- The specifications shown in the above table are for units without heaters. For units with heaters, refer to the installation instructions or the construction instructions of the indoor unit.
- Switchgear or circuit breaker capacity which is calculated from MAX. over current should be chosen along the regulations in each country.
- The cable specifications are based on the assumption that a metal or plastic conduit is used with no more than three cables contained in a conduit and a voltage drop is 2%. For an installation falling outside of these conditions, please follow the internal cabling regulations. Adapt it to the regulation in effect in each country.

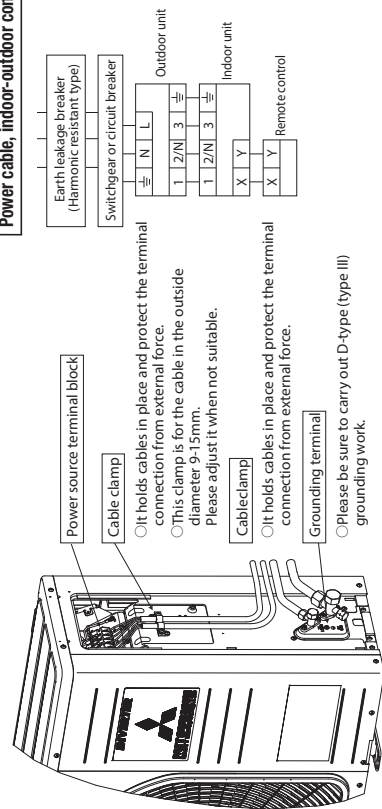

5. UTILIZATION OF EXISTING PIPING

Check whether an existing pipe system is reusable or not by using the following flow chart.

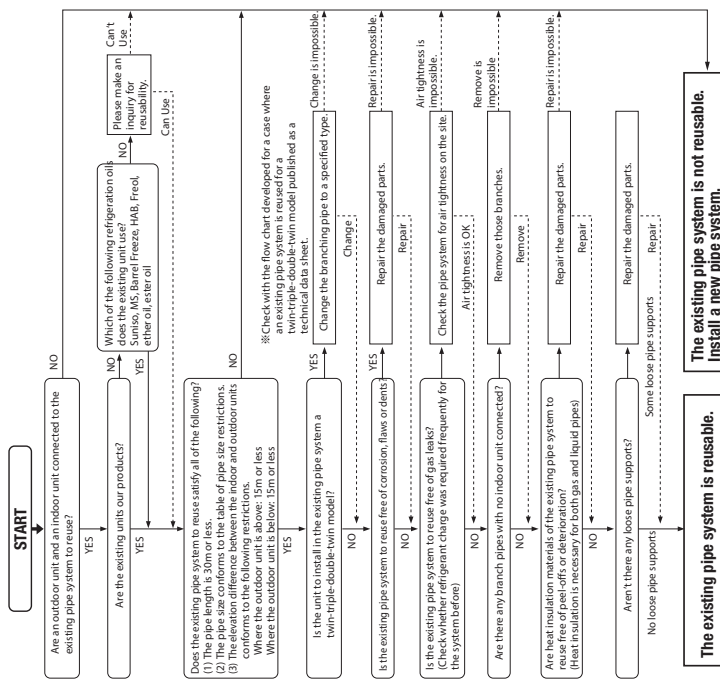

<Table of pipe size restrictions>

◎ Standard pipe size ○ Usable △ Restricted to shorter pipe length limits

Indoor unit	Additional charge volume per meter of pipe		0.02kg/m		0.06kg/m	
	Pipe size	Liquid pipe	Gas pipe	○φ6.35	○φ9.52	○φ15.88
FDT, FDE	Usability	◎	○	○	△	△
FDU, FDU(M), SFR	Maximum one-way pipe length Length covered without additional charge	30	24	10	10	10
FDF	Usability	◎	○	△	△	△
	Maximum one-way pipe length Length covered without additional charge	23	18	8	8	8
		8	6	3	3	3

- Please consult with our distributor in the area, if you need to recover refrigerant and charge it again.
- Any combinations of pipe sizes not listed in the table are not usable.

Formula to calculate additional charge volume

Additional charge volume (kg) = (Main pipe length (m) - Length covered without additional charge shown in the table (m)) × Additional charge volume per meter of pipe shown in the table (kg/m)

※ If you obtain a negative figure as a result of calculation, no additional refrigerant needs to be charged.

Example When FDT is installed in a 10m long existing pipe system (liquid φ9.52, gas φ12.7), the quantity of refrigerant to charge additionally should be (10m-5m) × 0.06kg/m = 0.3 kg.

⚠ WARNING

<Where the existing unit can be run for a cooling operation.>

Carry out the following steps with the existing unit (in the order of (1), (2), (3) and (4))

- (1) Run the unit for 30 minutes for a cooling operation.
- (2) Stop the indoor fan and run the unit for 3 minutes for a cooling operation (returning liquid)
- (3) Close the liquid side service valve of the outdoor unit and pump down (refrigerant recovery)
- (4) Blow with nitrogen gas. ※ If discolored refrigeration oil or any foreign matters is discharged by the blow, wash the pipe system or install a new pipe system.
 - For the flare nut, do not use the old one, but use the one supplied with the outdoor unit.
 - Process a flare to the dimensions specified for R410A.

<Where the existing unit cannot be run for a cooling operation.>

- Wash the pipe system or install a new pipe system.
- If you choose to wash the pipe system, please contact our distributor in the area.

INSTALLATION TEST CHECK POINTS

Check the following points again after completion of the installation, and before turning on the power. Conduct a test run again and ensure that the unit operates properly. Explain to the customer how to use the unit and how to take care of the unit following the instruction manual.

After installation

- Power cables and connecting wires are securely fixed to the terminal block.
- The power source voltage is correct as the rating.
- The drain hose is fixed securely.
- Service valve is fully open.
- No gas leaks from the joints of the service valve and joint.

- The pipe joints for indoor and outdoor pipes have been insulated.
- The reverse flow check cap is attached.
- The cover of the pipe cover (A) faces downward to prevent rain from entering.
- Gaps are properly sealed between the pipe covers (A) (B) and the wall surface / pipes.
- The screw of the side cover is tightened securely.

11. OPTION PARTS

11.1 Wireless kit

(1) FDT series (RCN-T-5AW-E2)

Notes:

Following function of FDT indoor unit series are not able to be set with this wireless remote control (RCN-T-5AW-E2).

1. Individual flap control system

PJF012D035 













Safety precautions

- Please read this manual carefully before starting installation work to install the unit properly. Every one of the followings is important information to be observed strictly.
- ⚠ **WARNING** Failure to follow these instructions properly may result in serious consequences such as death, severe injury, etc.
- ⚠ **CAUTION** Failure to follow these instructions properly may cause injury or property damage. It could have serious consequences depending on the circumstances.
- The following pictograms are used in the text.

	Never do.		Always follow the instructions given.
---	-----------	---	---------------------------------------

- Keep this manual at a safe place where you can consult with whenever necessary. Show this manual to installers when moving or repairing the unit. When the ownership of the unit is transferred, this manual should be given to a new owner.

WARNING

	<ul style="list-style-type: none"> • Consult your dealer or a professional contractor to install the unit. Improper installation made on your own may cause electric shocks, fire or dropping of the unit.
	<ul style="list-style-type: none"> • Installation work should be performed properly according to this installation manual. Improper installation work may result in electric shocks, fire or break-down.
	<ul style="list-style-type: none"> • Be sure to use accessories and specified parts for installation work. Use of unspecified parts may result in drop, fire or electric shocks.
	<ul style="list-style-type: none"> • Install the unit properly to a place with sufficient strength to hold the weight. If the place is not strong enough, the unit may drop and cause injury.
	<ul style="list-style-type: none"> • Be sure to have the electrical wiring work done by qualified electrical installer, and use exclusive circuit. Power source with insufficient and improper work can cause electric shock and fire.
	<ul style="list-style-type: none"> • Shut OFF the main power source before starting electrical work. Otherwise, it could result in electric shocks, break-down or malfunction.
	<ul style="list-style-type: none"> • Do not modify the unit. It could cause electric shocks, fire, or break-down.
	<ul style="list-style-type: none"> • Be sure to turn OFF the power circuit breaker before repairing/inspecting the unit. Repairing/inspecting the unit with the power circuit breaker turned ON could cause electric shocks or injury.
	<ul style="list-style-type: none"> • Do not install the unit in appropriate environment or where inflammable gas could generate, flow in, accumulate or leak. If the unit is used at places where air contains dense oil mist, steam, organic solvent vapor, corrosive gas (ammonium, sulfuric compound, acid, etc) or where acidic or alkaline solution, special spray, etc. are used, it could cause electric shocks, break-down, smoke or fire as a result of significant deterioration of its performance or corrosion.
	<ul style="list-style-type: none"> • Do not install the unit where water vapor is generated excessively or condensation occurs. It could cause electric shocks, fire, or break-down.
	<ul style="list-style-type: none"> • Do not use the unit in a place where it gets wet, such as laundry room. It could cause electric shocks, fire, or break-down.
	<ul style="list-style-type: none"> • Do not operate the unit with wet hands. It could cause electric shocks.

⚠ WARNING



• **Do not wash the unit with water.**
It could cause electric shocks, fire, or break-down.



• **Use the specified cables for wiring, and connect them securely with care to protect electronic parts from external forces.**
Improper connections or fixing could cause heat generation, fire, etc.



• **When installing the unit at a hospital, telecommunication facility, etc., take measures to suppress electric noises.**
It could cause malfunction or break-down due to hazardous effects on the inverter, private power generator, high frequency medical equipment, radio communication equipment, etc.
The influences transmitted from the remote control to medical or communication equipment could disrupt medical activities, video broadcasting or cause noise interference.



• **Do not leave the remote control with its PCB case removed.**
If dew, water, insect, etc. enters through the hole, it could cause electric shocks, fire or break-down.

⚠ CAUTION



• Do not install the wireless kit at the following places in order to avoid malfunction. It could cause break-down or deformation of remote control.

(1) Places exposed to direct sunlight	(8) Places where the receiver is influenced by the fluorescent lamp (especially inverter type) or sunlight
(2) Places near heat devices	(9) Places where the receiver is affected by infrared rays of any other communication devices
(3) High humidity places	(10) Places where some object may obstruct the communication with the remote control
(4) Hot surface or cold surface enough to generate condensation	
(5) Places exposed to oil mist or steam directly	
(6) Uneven surface	
(7) Places affected by the direct air flow of the AC unit	

① Accessories

Please make sure that you have all of the following accessories.

① Receiver		1	① Wireless remote control		1
② Parts set (A)		1	② Remote control holder		1
③ Installation manual		1	③ Screw for holder		2
			④ AAA dry cell battery (LR03)		2
			⑤ User's manual		1

② Preparation before installation

Setting on site



PCB on the receiver has the following switches to set the function.
Default setting is shown with mark.

SW1	Prevents interference during plural setting	<input checked="" type="checkbox"/> ON : Normal	OFF : Customized
SW2	Receiver master/slave setting	<input checked="" type="checkbox"/> ON : Master	OFF : Slave
SW3	Buzzer	<input type="checkbox"/> ON : Valid	OFF : Invalid
SW4	Auto restart	ON : Valid	<input type="checkbox"/> OFF : Invalid


② Preparation before installation (continued)

To change setting

1. Remove the cover by unscrewing two screws from the back of receiver.
2. Change the setting by the switch on PCB.

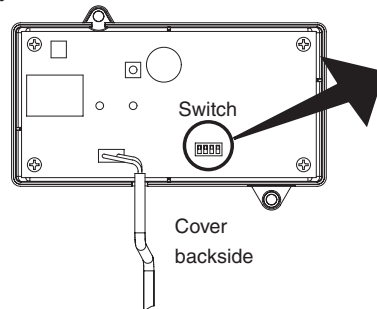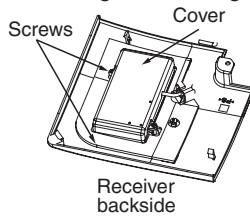

Master/Slave setting when using plural remote controls

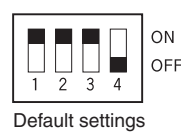

Up to two receiver or wired remote control can be installed in one indoor unit group.
When two receiver or wired remote control are used, it is necessary to change SW on the PCB to set it as slave.

3. When SW1 is turned to OFF position, change the wireless remote control setting.
For the method of changing the setting, refer to [Setting to avoid mixed communication](#) of

④ Wireless remote control


*The receivable area of the signal refer to [⑤ Receiver](#).

③ How to install the receiver

The receiver can be installed by replacing with a corner panel on the applicable decorative panel.

Preparation before installation


- ① Attach the decorative panel onto the air-conditioner according to the installation manual for the panel.
- ② Remove the air return grille.
- ③ Remove a corner panel located on the refrigerant pipes side.
- ④ Remove three screws and detach the cover (indicated as shadowed area) from the control box of the air-conditioner.

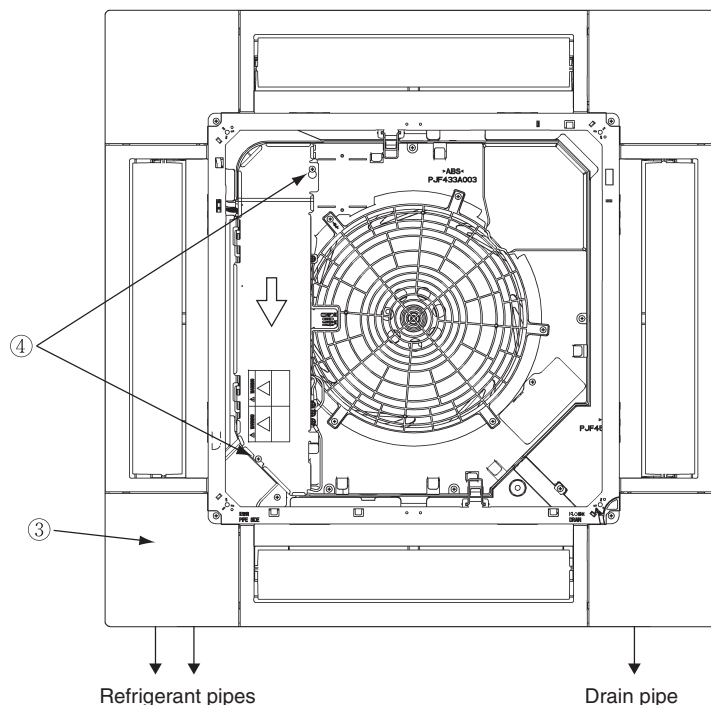

③ How to install the receiver(continued)

Installation of the receiver

- ① Loosen the bolts which fix the panel and make a gap between the panel and the indoor unit.
- ② Put the wiring of the receiver through the opening.
- ③ Put the wiring on the notch on the control box so as not to be pinched by the control box and lid as shown below.
- ④ Connect the wiring to the terminal block provided in the control box. (No polarity)
- ⑤ Attach the receiver to the panel according to the panel installation manual.
- ⑥ Fix the wiring with the clamp so that the wiring do not contact the edge of control box's metal sheet.
- ⑦ Reattach the control box lid with 3 screws removed.

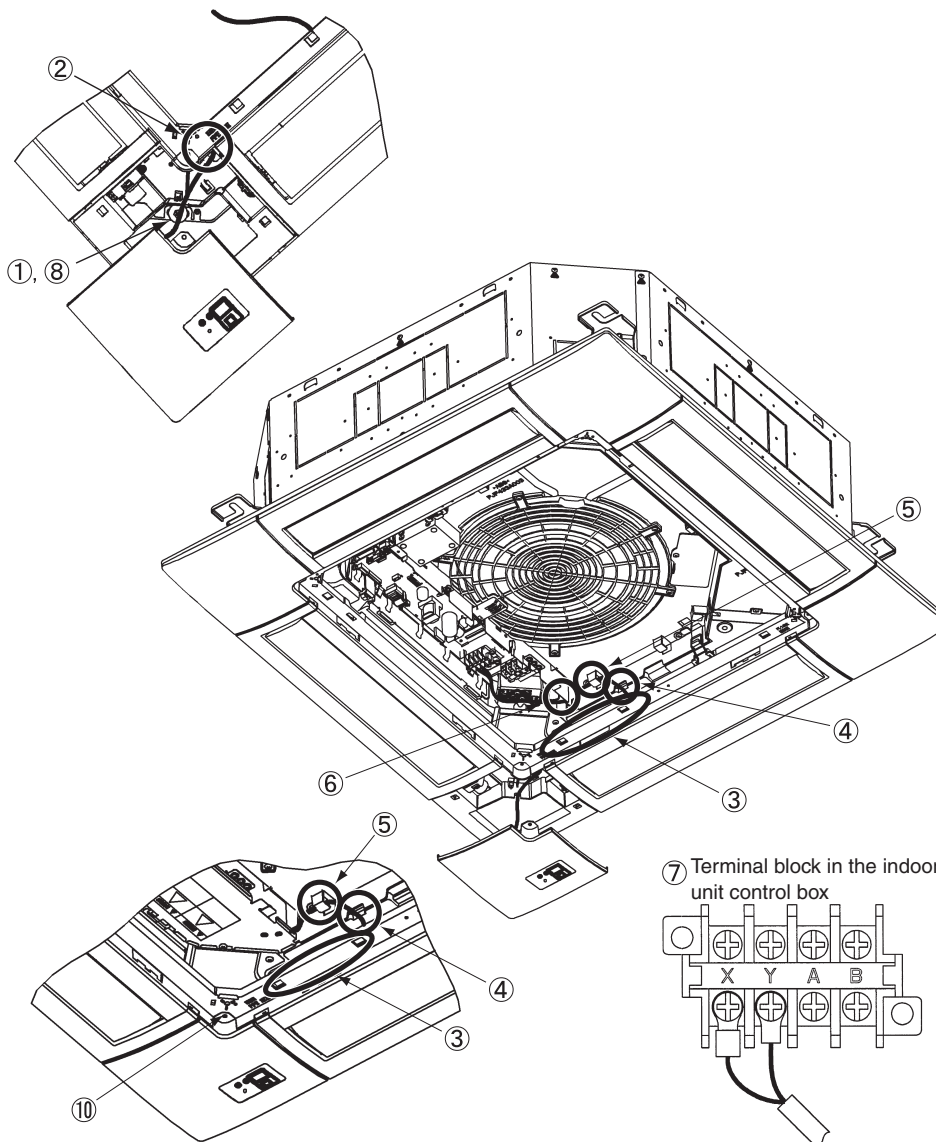


4 Wireless remote control

Installation tips for the remote control holder

Fix the remote control holder using the screws supplied with this product.


* Precautions for installing the holder

- Adjust the position so that it is upright.
- Ensure that the screw heads are not protruding.
- Do not attach the holder on plaster wall

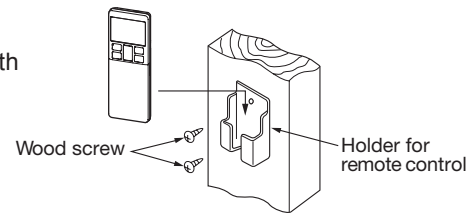


How to insert batteries

1. Detach the back lid.
2. Insert the batteries. (two AAA batteries)
3. Reattach the back lid.

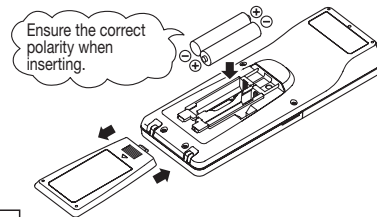

Setting to avoid mixed communication

1. Detach the back lid, and remove the batteries.
2. Cut off the switching wire in the battery compartment using nippers.
3. Insert the batteries, and attach the back lid.



Changing the remote control setting


How to change the Auto Run setting

The Auto Run mode is not available on the building air-conditioning and gas heat pump series (excluding the cooling/heating free multi system).

When using the remote control to operate those models, set the remote control to disable the Auto Run mode.

To disable the Auto Run mode, press the **[ACL]** switch while holding down the **[MODE]** button, or insert batteries while holding down the **[MODE]** button.

* Note: Once the batteries are removed, the setting is reset to the factory default. When the batteries are removed, repeat the steps described above.

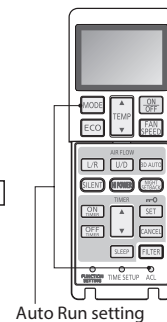


Auto Run setting

Indoor function settings

1. How to set indoor functions

- ① Press the ON/OFF button to stop the unit.
- ② Press the desired one of the buttons shown item 2. while holding down the FUNCTION SETTING switch.
- ③ Use the selection buttons, ▲ and ▼, to change the setting.
- ④ Press the SET button.

The buzzer on the remote control signal receiver beeps twice, and the LED lamp flashes four times at two-second intervals.

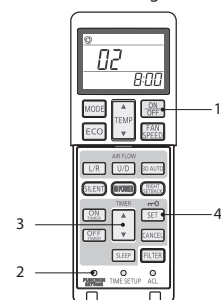

④ Wireless remote control (continued)

2. Setting details

The following functions can be set.

Button	Number indicator	Function setting
FAN SPEED	00	Fan speed setting : Standard
	01	Fan speed setting : Setting 1 *
	02	Fan speed setting : Setting 2 *
MODE	00	Room heating temperature adjustment : Disable
	01	Room heating temperature adjustment : +1°C
	02	Room heating temperature adjustment : +2°C
	03	Room heating temperature adjustment : +3°C
FILTER	00	Filter sign display : OFF
	01	Filter sign display : 180 hours
	02	Filter sign display : 600 hours
	03	Filter sign display : 1000 hours
	04	Filter sign display : Operation stop after 1000 hours have elapsed
U/P	00	Anti draft setting : Disable
	01	Anti draft setting : Enable
SILENT	00	Infrared sensor setting (Motion sensor setting) : Disable
	01	Infrared sensor setting (Motion sensor setting) : Enable
HI POWER	00	Infrared sensor control (Motion sensor control) : Disable
	01	Infrared sensor control (Motion sensor control) : Power control only
	02	Infrared sensor control (Motion sensor control) : Auto OFF only
	03	Infrared sensor control (Motion sensor control) : Power control and Auto OFF
ON TIMER	00	Cooling fan residual-period running : Disable
	01	Cooling fan residual-period running : 0.5 hours
	02	Cooling fan residual-period running : 2 hours
	03	Cooling fan residual-period running : 6 hours
OFF TIMER	00	Heating fan residual-period running : Disable
	01	Heating fan residual-period running : 0.5 hours
	02	Heating fan residual-period running : 2 hours
	03	Heating fan residual-period running : 6 hours
NIGHT SETBACK	00	Remote control signal receiver LED : Brightness High
	01	Remote control signal receiver LED : Brightness Low
	02	Remote control signal receiver LED : OFF

* Refer to technical data.

5 Receiver

1 Control plural indoor units with one remote control

Up to 16 indoor units can be connected.


1. Connect the XY terminal with 2 cores wire. As for the size, refer to the following note.
2. For Packaged air-conditioner series, set the indoor unit address with SW2 on the indoor unit PCB from [0] to [F] so as not to duplicate.

Restrictions on the thickness and length of wire (Maximum total extension 600m.)

Standard	Within	0.3 mm ² × 100m
	Within	0.5 mm ² × 200m
	Within	0.75mm ² × 300m
	Within	1.25mm ² × 400m
	Within	2.0 mm ² × 600m

For the shop series

For VRF series, set the indoor unit address with SW1, SW2 and SW5-2 on the indoor unit PCB from [000] to [127] so as not to duplicate.

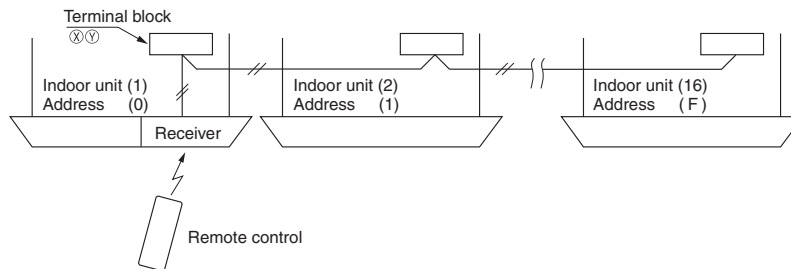


For the building air-conditioning and gas heat pump series

Set the indoor unit and outdoor unit numbers by manually specifying the addresses. Use the rotary switches SW1 and SW2 provided on the indoor unit PCB (printed circuit board) to set the indoor unit numbers so that they are not duplicated.

Master/Slave setting when using plural remote control


Up to two receivers can be installed in one indoor unit group.

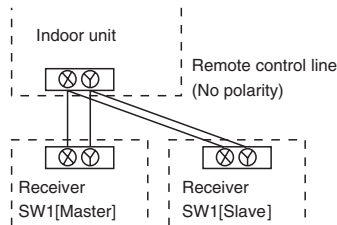

Switch	Setting	Function
SW2	ON	Master
	OFF	Slave


Wireless remote control's operable area

1. Standard reachable area of the signal
[condition] Illuminance at the receiver: 300lux
(when no lighting is installed within 1m of the receiver in an ordinary office.)

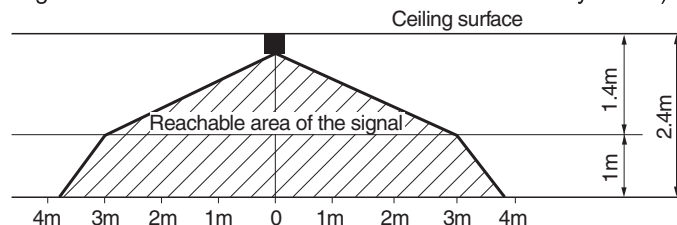

5 Receiver (continued)

2. Correlation between illuminance at the receiver and reachable area of the signal in a plain view. The drawing in the right shows the correlation between the reachable area of the signal and illuminance at the receiver when the remote control is operated at 1.0m high under the condition of ceiling height of 2.4m. When the illuminance becomes double, the area is narrowed down to two thirds.

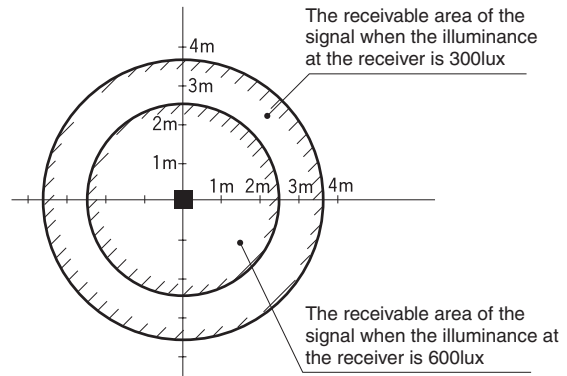


3. Installation tips when several receivers are installed close
 Minimum distance between the indoor units which can avoid cross communication is 5m under the condition of 300lux of illuminance at the receiver.
 (When no lighting is installed within 1m of the receiver in an ordinary office)

Backup switch

A Backup switch is provided on the receiver. Even when the operation from the wireless remote control is not possible (due to flat batteries, control lost, or control failure), still it possible to operate as temporary means. Press the switch directly when operating it.

1. The air-conditioner starts the operation with the condition of Auto mode, 23°C of set point, High fan speed and horizontal louver position.
2. The air-conditioner stops the operation when the switch is pressed when in operation.

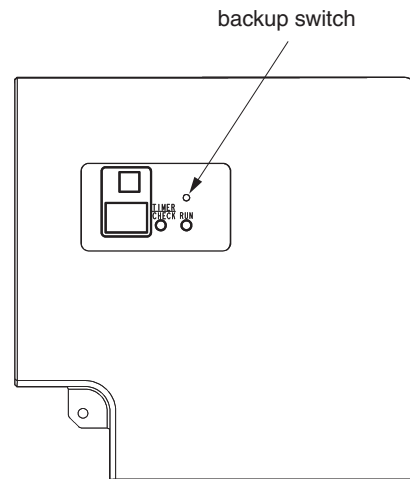

Cooling test run operation


- After safety confirmation, turn on the power.
- Transmit a cooling operation command with the wireless remote control unit, while the backup switch on the receiver is depressed.
- If the backup switch on the receiver is pressed during a test run, it will end the test run.
- If you cannot operate the unit properly during a test run, please check wiring by consulting with inspection guides.

How to read the 2-digit display

On the receiver of a wireless kit, a two-digit (7-segment) display is provided.

1. An indication will be displayed for one hour after power on.
2. An indication will be displayed for 3.5 seconds after transmitting a "STOP" command from the wireless remote control or the operation of the backup switch to stop the unit.
3. An indication appearing in (1) or (2) above will go off as soon as the unit starts operation.
4. When there are no error records to indicate, addresses of all the connected units are displayed.
5. When there are some error records remaining, the error records are displayed.
6. Error records can be cleared by transmitting a "STOP" command from the wireless remote control, while the backup button is pressed.

(2) FDU, FDUM series (RCN-KIT4-E2)

PJZ012D112 













Safety precautions

- Please read this manual carefully before starting installation work to install the unit properly. Every one of the followings is important information to be observed strictly.
 - ⚠ **WARNING** Failure to follow these instructions properly may result in serious consequences such as death, severe injury, etc.
 - ⚠ **CAUTION** Failure to follow these instructions properly may cause injury or property damage. It could have serious consequences depending on the circumstances.
- The following pictograms are used in the text.

	Never do.		Always follow the instructions given.
---	-----------	---	---------------------------------------

- Keep this manual at a safe place where you can consult with whenever necessary. Show this manual to installers when moving or repairing the unit. When the ownership of the unit is transferred, this manual should be given to a new owner.

WARNING

-  • **Consult your dealer or a professional contractor to install the unit.**
Improper installation made on your own may cause electric shocks, fire or dropping of the unit.
-  • **Installation work should be performed properly according to this installation manual.**
Improper installation work may result in electric shocks, fire or break-down.
-  • **Be sure to use accessories and specified parts for installation work.**
Use of unspecified parts may result in drop, fire or electric shocks.
-  • **Install the unit properly to a place with sufficient strength to hold the weight.**
If the place is not strong enough, the unit may drop and cause injury.
-  • **Be sure to have the electrical wiring work done by qualified electrical installer, and use exclusive circuit.**
Power source with insufficient and improper work can cause electric shock and fire.
-  • **Shut OFF the main power source before starting electrical work.**
Otherwise, it could result in electric shocks, break-down or malfunction.
-  • **Do not modify the unit.**
It could cause electric shocks, fire, or break-down.
-  • **Be sure to turn OFF the power circuit breaker before repairing/inspecting the unit.**
Repairing/inspecting the unit with the power circuit breaker turned ON could cause electric shocks or injury.
-  • **Do not install the unit in appropriate environment or where inflammable gas could generate, flow in, accumulate or leak.**
If the unit is used at places where air contains dense oil mist, steam, organic solvent vapor, corrosive gas (ammonium, sulfuric compound, acid, etc) or where acidic or alkaline solution, special spray, etc. are used, it could cause electric shocks, break-down, smoke or fire as a result of significant deterioration of its performance or corrosion.
-  • **Do not install the unit where water vapor is generated excessively or condensation occurs.**
It could cause electric shocks, fire, or break-down.
-  • **Do not use the unit in a place where it gets wet, such as laundry room.**
It could cause electric shocks, fire, or break-down.
-  • **Do not operate the unit with wet hands.**
It could cause electric shocks.

⚠ WARNING

- **Do not wash the unit with water.**
It could cause electric shocks, fire, or break-down.
- **Use the specified cables for wiring, and connect them securely with care to protect electronic parts from external forces.**
Improper connections or fixing could cause heat generation, fire, etc.
- **When installing the unit at a hospital, telecommunication facility, etc., take measures to suppress electric noises.**
It could cause malfunction or break-down due to hazardous effects on the inverter, private power generator, high frequency medical equipment, radio communication equipment, etc.
The influences transmitted from the remote control to medical or communication equipment could disrupt medical activities, video broadcasting or cause noise interference.
- **Do not leave the remote control with its PCB case removed.**
If dew, water, insect, etc. enters through the hole, it could cause electric shocks, fire or break-down.

⚠ CAUTION

- Do not install the wireless kit at the following places in order to avoid malfunction.
It could cause break-down or deformation of remote control.
- | | |
|---|---|
| <ul style="list-style-type: none"> (1) Places exposed to direct sunlight (2) Places near heat devices (3) High humidity places (4) Hot surface or cold surface enough to generate condensation (5) Places exposed to oil mist or steam directly (6) Uneven surface (7) Places affected by the direct air flow of the AC unit | <ul style="list-style-type: none"> (8) Places where the receiver is influenced by the fluorescent lamp (especially inverter type) or sunlight (9) Places where the receiver is affected by infrared rays of any other communication devices (10) Places where some object may obstruct the communication with the remote control |
|---|---|

① Accessories

Please make sure that you have all of the following accessories.

① Receiver		1		① Wireless remote control		1
② Wiring (3m)		1		② Remote control holder		1
③ Parts set (A)		1		③ Screw for holder		2
④ Parts set (B)		1		④ AAA dry cell battery (LR03)		2
⑤ Parts set (C)		1		⑤ User's manual		1
⑥ Installation manual		1		① Screw for receiver		2
				② Fixing band		1
				③ Clamp		5
				④ Screw for clamp		5
				① Receiver installation bracket		1
				② Screw for the bracket		2
				③ Installation fitting		2

② Preparation before installation

Setting on site



PCB on the receiver has the following switches to set the function. Default setting is shown with mark.

SW1	Prevents interference during plural setting	ON : <input type="checkbox"/> Normal	OFF : <input type="checkbox"/> Customized
SW2	Receiver master/slave setting	ON : <input type="checkbox"/> Master	OFF : <input type="checkbox"/> Slave
SW3			
SW4	Auto restart	ON : <input type="checkbox"/> Valid	OFF : <input type="checkbox"/> Invalid

② Preparation before installation (continued)

To change setting

1. Remove one screws located on the under of the receiver and detach the board.
2. Change the setting by the switch on PCB.

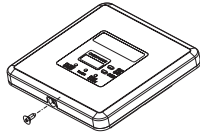

Switch



Default settings

3. When SW1 is turned to OFF position, change the wireless remote control setting.
For the method of changing the setting, refer to **Setting to avoid mixed communication** of ④ **Wireless remote control**.

*The receivable area of the signal refer to ⑤ **Receiver**.

Master/Slave setting when using plural remote controls

Up to two receiver or wired remote control can be installed in one indoor unit group.

When two receiver or wired remote control are used, it is necessary to change SW on the PCB to set it as slave.


③ How to install the receiver

The following two methods can be used to install the receiver onto a ceiling or a wall. Select a method according to the installation position.

- <Installation position>** (A) Direct installation onto the ceiling with wood screws.
(B) Installation with accessory's bracket


(1) Drilling of the ceiling (ceiling opening)

Drill the receiver installation holes with the dimensions shown right at the ceiling position where wires can be connected.

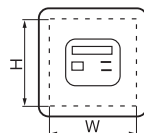

(A) Direct installation onto the ceiling with wood screws.	88mm(H)×101mm(W)
(B) Installation with enclosed bracket	108mm(H)×108mm(W)

(2) Wiring connection of receiver

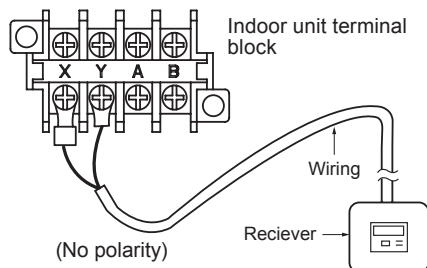

⚠ Caution

Do not connect the wiring to the power source of the terminal block. If it is connected, printed board will be damaged.


(3) Installation of the receiver

Remove the screw on the side of the receiver and split it into the upper case and lower case. Install the receiver with one of the two installation methods (A) to (C) shown below.

(A) Direct installation onto the ceiling with screws

▷ Use this installation method when the ceiling is wooden, and there is no problem for strength in installing directly with wood screws.

- ① Put through the wiring from the back side to the hole of the lower case.
- ② Fit the lower case into the ceiling opening. Make sure that the clearance between the convex part of the back of the lower case and the ceiling opening must be as equal as possible on both sides.
- ③ Using the two installation holes shown right, fix the lower case onto the ceiling with the enclosed wood screws. (The other four holes are not used.)
- ④ Connect the wiring with the wiring from the upper case by the connector.

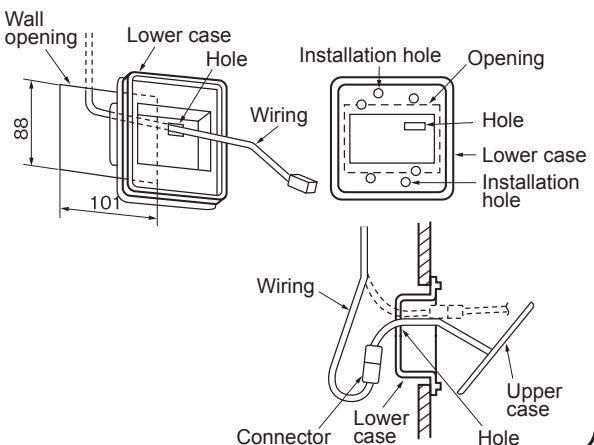


③ How to install the receiver(continued)

- ⑤ Take out the connector to the backside from the hole of the lower case putting through the wiring at ①.
- ⑥ Fit the upper case and the lower case, and tighten the screws.

(B) Installation with enclosed bracket

Use this method when installaing onto a gypsum board (7 to 18mm), etc.

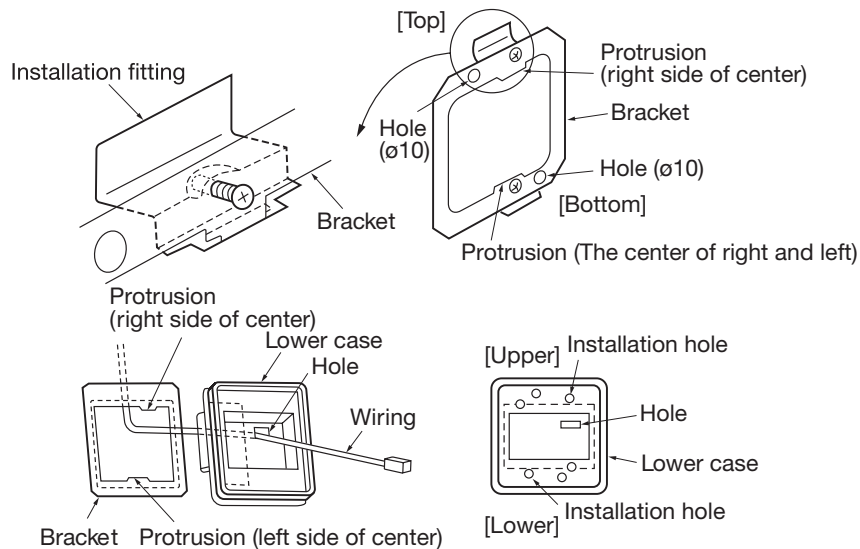


- ① Catch the two protrusion of the enclosed bracket onto the fitting as shown above, and temporarily fix with the screws. (The bracket has an Upper/Lower and front/back orientation. Confirm the Upper/Lower protrusion positions and the positional relation of the ø10 holes on the bracket and the installation hole on the lower case with the above drawing.)
- ② Insert the end of the installation fitting into the back of the ceiling from the opening, and tighten the screws to fix the bracket onto the ceiling.
- ③ Pass the wiring from the rear side through the hole on the lower case.
- ④ Fit the lower case onto the bracket, and fix the lower case to the bracket using the two installation holes shown above. (The other four holes are not used.)
- ⑤ Follow step ① to ⑥ for (A) to complete the installation.

③ How to install the receiver (continued)

(C) Exposed installation

Use the following procedure when installing the case with the wiring exposed.

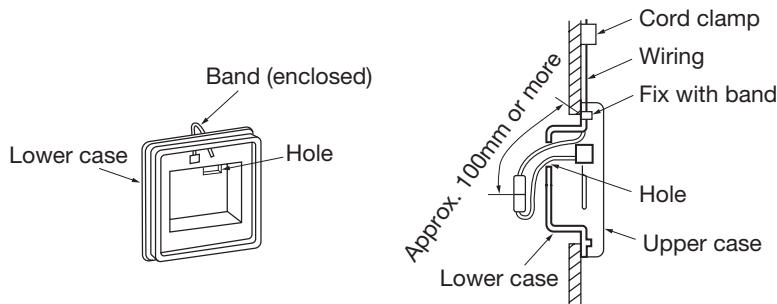

- ① Cut off the thin section on the side of the upper case with a pair of nippers or a knife, and remove the burrs with a file, etc. (The wiring is passed through this section.)
- ② Pass the enclosed band through the wiring outlet hole on the lower case.
- ③ Use one of the light detection adaptor installation methods (A) or (B) explained in section 3, and fix the lower case onto the wall. Do not pass the wiring through the hole on the lower case.
- ④ Fix the wiring using the band while leaving the wiring length from the band fixing section to the end of the wiring connector at 100mm or more.
- ⑤ Connect the wiring with the wiring protruding from the upper case using a connector.
- ⑥ Pass the connected connector and the excess wiring through the hole on the lower case.
- ⑦ Fit the upper case onto the lower case, and tighten the screws.
- ⑧ Adequately fix the wiring with the enclosed cord clamp.


④ Wireless remote control

Installation tips for the remote control holder

Fix the remote control holder using the screws supplied with this product.


* Precautions for installing the holder

- Adjust the position so that it is upright.
- Ensure that the screw heads are not protruding.
- Do not attach the holder on plaster wall.

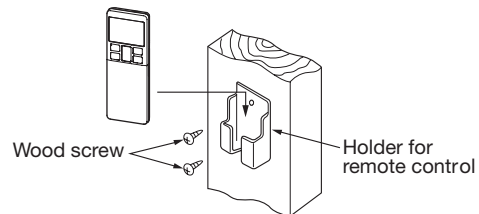


How to insert batteries

1. Detach the back lid.
2. Insert the batteries. (two AAA batteries)
3. Reattach the back lid.

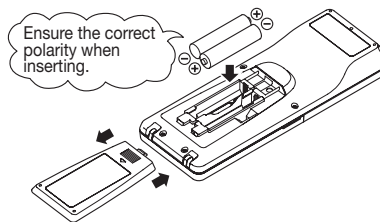

Setting to avoid mixed communication

1. Detach the back lid, and remove the batteries.
2. Cut off the switching wire in the battery compartment using nippers.
3. Insert the batteries, and attach the back lid.

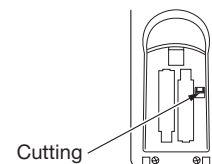

④ Wireless remote control (continued)

Changing the wireless remote control setting


How to change the Auto Run setting

The Auto Run mode is not available on the building air-conditioner and gas heat pump series (excluding the cooling/heating free multi system).

When using the wireless remote control to operate those models, set the wireless remote control to disable the Auto Run mode.

To disable the Auto Run mode, press the **ACL** switch while holding down the **MODE** button, or insert batteries while holding down the **MODE** button.

* Note: Once the batteries are removed, the setting is reset to the factory default. When the batteries are removed, repeat the steps described above.

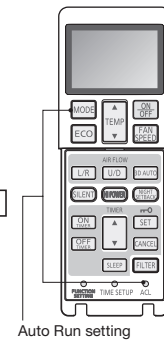

Auto Run setting


Indoor function settings

1. How to set indoor functions

- ① Press the ON/OFF to stop the unit.
 - ② Press the desired one of the buttons shown below while holding down the FUNCTION SETTING switch.
 - ③ Use the selection buttons, ▲ and ▼, to change the setting.
 - ④ Press the SET button.
- The buzzer on the wireless remote control signal receiver beeps twice, and the LED lamp flashes four times at two-second intervals.

2. Setting details

The following functions can be set.

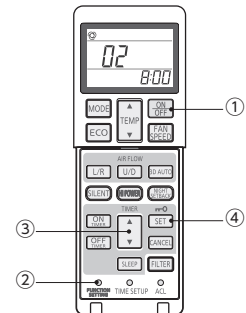

Button	Number indicator	Function setting	Button	Number indicator	Function setting
FAN SPEED	00	Fun speed setting : Standard	ON TIMER	00	Cooling fan residual-period running : Disable
	01	Fun speed setting : Setting 1 *		01	Cooling fan residual-period running : 0.5 hours
	02	Fun speed setting : Setting 2 *		02	Cooling fan residual-period running : 2 hours
MODE	00	Room heating temperature adjustment : Disable	OFF TIMER	03	Cooling fan residual-period running : 6 hours
	01	Room heating temperature adjustment : +1°C		00	Heating fan residual-period running : Disable
	02	Room heating temperature adjustment : +2°C		01	Heating fan residual-period running : 0.5 hours
	03	Room heating temperature adjustment : +3°C		02	Heating fan residual-period running : 2 hours
FILTER	00	Filter sign display : OFF	NIGHT SETBACK	03	Heating fan residual-period running : 6 hours
	01	Filter sign display : 180 hours		00	Remote control signal receiver LED : Brightness High
	02	Filter sign display : 600 hours		01	Remote control signal receiver LED : Brightness Low
	03	Filter sign display : 1000 hours		02	Remote control signal receiver LED : OFF
U/P	04	Filter sign display : Operation stop after 1000 hours have elapsed	* Refer to technical data.		
	00	Anti draft setting : Disable			
SILENT	01	Anti draft setting : Enable			
	00	Infrared sensor setting (Motion sensor setting) : Disable			
HI POWER	01	Infrared sensor setting (Motion sensor setting) : Enable			
	00	Infrared sensor control (Motion sensor control) : Disable			
	01	Infrared sensor control (Motion sensor control) : Power control only			
	02	Infrared sensor control (Motion sensor control) : Auto OFF only			
	03	Infrared sensor control (Motion sensor control) : Power control and Auto OFF			

⑤ Receiver

1 Control plural indoor units with one remote control

Up to 16 indoor units can be connected.

1. Connect the XY terminal with 2 cores wire. As for the size, refer to the following note.
2. For Packaged air-conditioner series, set the indoor unit address with SW2 on the indoor unit PCB from [0] to [F] so as not to duplicate.


Restrictions on the thickness and length of wire (Maximun total extension 600m.)

Standard	Within	0.3 mm ² × 100m
	Within	0.5 mm ² × 200m
	Within	0.75mm ² × 300m
	Within	1.25mm ² × 400m
	Within	2.0 mm ² × 600m

⑤ Receiver (continued)

For the shop series

For VRF series, set the indoor unit address with SW1, SW2 and SW5-2 on the indoor unit PCB from [000] to [127] so as not to duplicate.

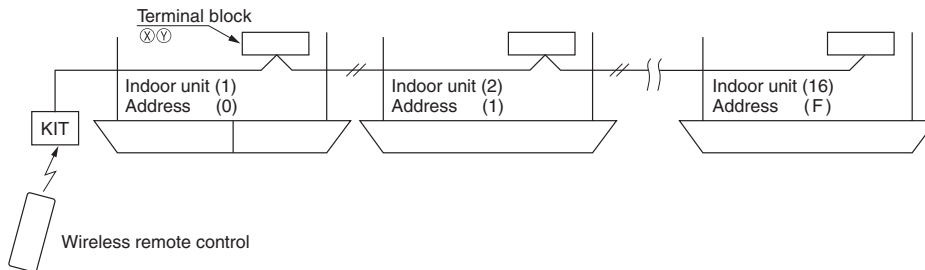


For the building air-conditioner and gas heat pump series

Set the indoor unit and outdoor unit numbers by manually specifying the addresses. Use the rotary switches SW1 and SW2 provided on the indoor unit PCB (printed circuit board) to set the indoor unit numbers so that they are not duplicated.

Master/Slave setting when using plural remote control

Up to two receivers can be installed in one indoor unit group.

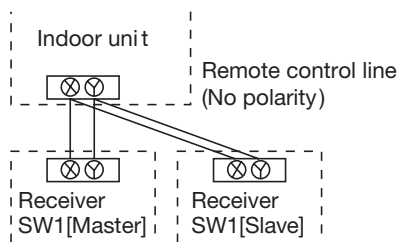


Switch	Setting	Function
SW2	ON	Master
	OFF	Slave

When installed on ceiling

1. Standard reachable area of the signal


[Condition] Illuminance at the receiver : **300lux** (when no lighting is installed within 1m of the receiver in an ordinary office.)

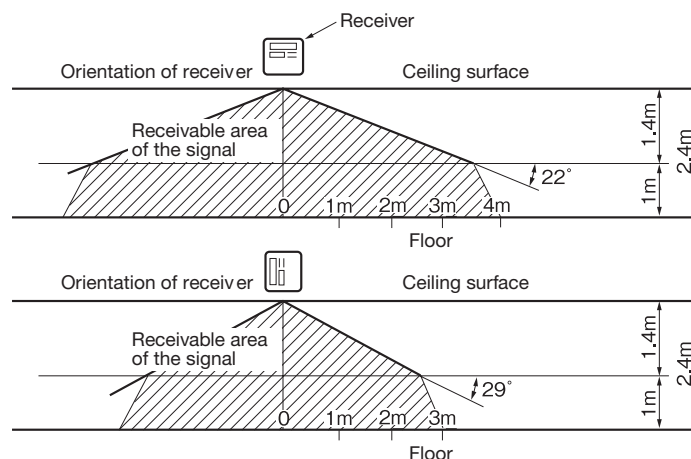

2. Correlation between illuminance at the receiver and reachable area of the signal in a plain view.


[Condition] Correlation between the reachable area of the signal and illuminance at the receiver when the wireless remote control is operated at 1m high under the condition of ceiling height of 2.4m. When the illuminance becomes double, the area is narrowed down to two third.

⑤ Receiver (continued)

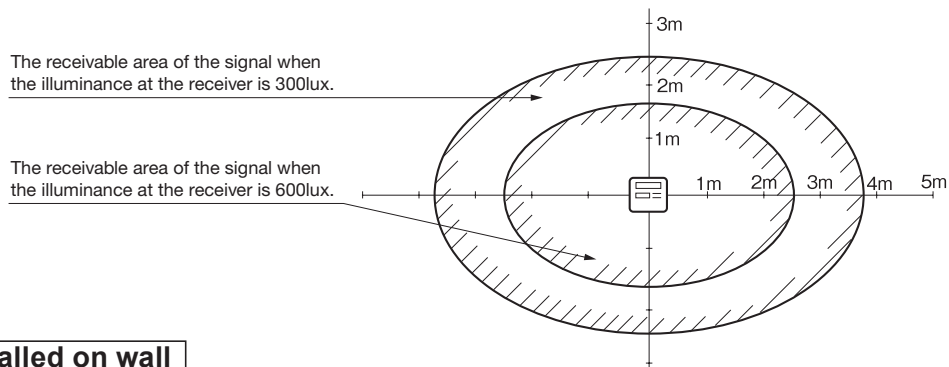

When installed on wall


[Condition] Illuminance at the receiver : 800lux.

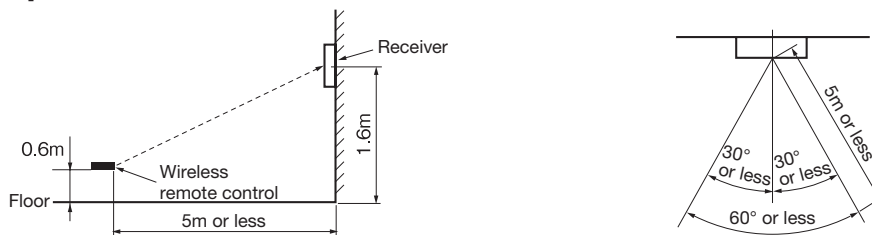

Backup switch

A backup switch is provided on the receiver section of the panel surface. When operation from the wireless remote control unit is not possible (due to flat batteries, a mislaid unit, a unit failure), you can use it as an emergency means. You should operate this switch manually.

1. If pressed while the air-conditioner is in a halt, it will cause the air-conditioner to start operation in the automatic mode (in the case of cooling only, in the cooling mode). Wind speed: Hi fan, Temperature setting: 23°C, Louver: horizontal
2. If pressed while the air-conditioner is in operation, it will stop the air-conditioner.

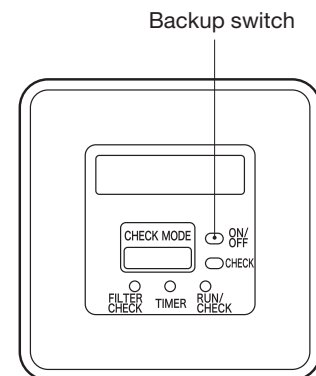

Cooling test run operation

- After safety confirmation, turn on the power.
- Transmit a cooling operation command with the wireless remote control unit, while the backup switch on the receiver is depressed.
- If the backup switch on the receiver is pressed during a test run, it will end the test run.
- If you cannot operate the unit properly during a test run, please check wiring by consulting with inspection guides.

How to read the 6-digit display

A 6-digit indicator (7-segment indicator) is provided on the receiver section.

1. An indication will be displayed for one hour after power on.
2. An indication appears for 3.5 seconds when a "Stop" command is sent from the wireless remote control unit while the air-conditioner is not running.
3. An indication appearing in (1) or (2) above will go off as soon as the unit starts operation.
4. When there are no error records to indicate, addresses are displayed for all of the connected units.
5. When there are some error records remaining, the error records are displayed.
6. Error records can be cleared by transmitting a "Stop" command from the wireless remote control unit, while the backup switch is depressed.













Safety precautions

- Please read this manual carefully before starting installation work to install the unit properly. Every one of the followings is important information to be observed strictly.
- ⚠ **WARNING** Failure to follow these instructions properly may result in serious consequences such as death, severe injury, etc.
- ⚠ **CAUTION** Failure to follow these instructions properly may cause injury or property damage. It could have serious consequences depending on the circumstances.
- The following pictograms are used in the text.

	Never do.		Always follow the instructions given.
---	-----------	---	---------------------------------------

- Keep this manual at a safe place where you can consult with whenever necessary. Show this manual to installers when moving or repairing the unit. When the ownership of the unit is transferred, this manual should be given to a new owner.

WARNING

- | | |
|---|---|
|  | <ul style="list-style-type: none"> • Consult your dealer or a professional contractor to install the unit.
Improper installation made on your own may cause electric shocks, fire or dropping of the unit. |
|  | <ul style="list-style-type: none"> • Installation work should be performed properly according to this installation manual.
Improper installation work may result in electric shocks, fire or break-down. |
|  | <ul style="list-style-type: none"> • Be sure to use accessories and specified parts for installation work.
Use of unspecified parts may result in drop, fire or electric shocks. |
|  | <ul style="list-style-type: none"> • Install the unit properly to a place with sufficient strength to hold the weight.
If the place is not strong enough, the unit may drop and cause injury. |
|  | <ul style="list-style-type: none"> • Be sure to have the electrical wiring work done by qualified electrical installer, and use exclusive circuit.
Power source with insufficient and improper work can cause electric shock and fire. |
|  | <ul style="list-style-type: none"> • Shut OFF the main power source before starting electrical work.
Otherwise, it could result in electric shocks, break-down or malfunction. |
|  | <ul style="list-style-type: none"> • Do not modify the unit.
It could cause electric shocks, fire, or break-down. |
|  | <ul style="list-style-type: none"> • Be sure to turn OFF the power circuit breaker before repairing/inspecting the unit.
Repairing/inspecting the unit with the power circuit breaker turned ON could cause electric shocks or injury. |
|  | <ul style="list-style-type: none"> • Do not install the unit in appropriate environment or where inflammable gas could generate, flow in, accumulate or leak.
If the unit is used at places where air contains dense oil mist, steam, organic solvent vapor, corrosive gas (ammonium, sulfuric compound, acid, etc) or where acidic or alkaline solution, special spray, etc. are used, it could cause electric shocks, break-down, smoke or fire as a result of significant deterioration of its performance or corrosion. |
|  | <ul style="list-style-type: none"> • Do not install the unit where water vapor is generated excessively or condensation occurs.
It could cause electric shocks, fire, or break-down. |
|  | <ul style="list-style-type: none"> • Do not use the unit in a place where it gets wet, such as laundry room.
It could cause electric shocks, fire, or break-down. |
|  | <ul style="list-style-type: none"> • Do not operate the unit with wet hands.
It could cause electric shocks. |

⚠ WARNING



- **Do not wash the unit with water.**
It could cause electric shocks, fire, or break-down.



- **Use the specified cables for wiring, and connect them securely with care to protect electronic parts from external forces.**
Improper connections or fixing could cause heat generation, fire, etc.



- **When installing the unit at a hospital, telecommunication facility, etc., take measures to suppress electric noises.**
It could cause malfunction or break-down due to hazardous effects on the inverter, private power generator, high frequency medical equipment, radio communication equipment, etc. The influences transmitted from the remote control to medical or communication equipment could disrupt medical activities, video broadcasting or cause noise interference.



- **Do not leave the remote control with its PCB case removed.**
If dew, water, insect, etc. enters through the hole, it could cause electric shocks, fire or break-down.

⚠ CAUTION



- Do not install the wireless kit at the following places in order to avoid malfunction. It could cause break-down or deformation of remote control.

(1) Places exposed to direct sunlight (2) Places near heat devices (3) High humidity places (4) Hot surface or cold surface enough to generate condensation (5) Places exposed to oil mist or steam directly (6) Uneven surface (7) Places affected by the direct air flow of the AC unit	(8) Places where the receiver is influenced by the fluorescent lamp (especially inverter type) or sunlight (9) Places where the receiver is affected by rays of any other communication devices (10) Places where some object may obstruct the communication with the remote control
---	--

① Accessories

Please make sure that you have all of the following accessories.

① Receiver		1		① Wireless remote control		1
② Parts set		1	→	② Remote control holder		1
③ Installation manual		1		③ Screw for holder		2
④ Wiring		1		④ AAA dry cell battery (LR03)		2
				⑤ User's manual		1

② Preparation before installation

Setting on site


PCB on the receiver has the following switches to set the function. Default setting is shown with mark.

SW1	Prevents interference during plural setting	ON : <input type="checkbox"/> Normal OFF : <input type="checkbox"/> Customized
SW2	Receiver master/slave setting	ON : <input type="checkbox"/> Master OFF : <input type="checkbox"/> Slave
SW3	Buzzer	ON : <input type="checkbox"/> Valid OFF : <input type="checkbox"/> Invalid
SW4	Auto restart	ON : <input type="checkbox"/> Valid OFF : <input type="checkbox"/> Invalid



② Preparation before installation (continued)

To change setting

1. Remove four screws located on the back of the receiver and detach the board.
2. Change the setting by the switch on PCB.

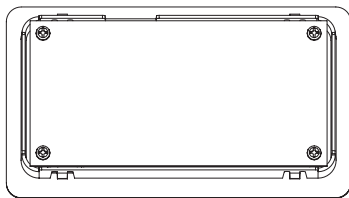

Receiver backside

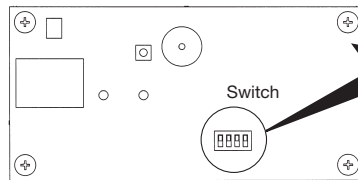

Default settings

Master/Slave setting when using plural remote controls

Up to two receiver or wired remote control can be installed in one indoor unit group. When two receiver or wired remote control are used, it is necessary to change SW on the PCB to set it as slave.

3. When SW1 is turned to OFF position, change the wireless remote control setting. For the method of changing the setting, refer to [Setting to avoid mixed communication](#) of

⑤ Wireless remote control

*The receivable area of the signal refer to [⑥ Receiver](#) .



③ How to install the receiver

The receiver can be installed by replacing with a cover of the panel.


CAUTION: When installing the receiver after unit has been fixed, injury due to falling may result because of working at high place.

- ① **Remove the cover**
Insert a flat-blade screwdriver into the dented part (2 places), and wrench slightly so as not to damage panel surface.
- ② **Connect the wiring**
Connect wiring of the receiver to the wiring in the back.

ATTENTION: Do not remove the clamp fixed the wiring.

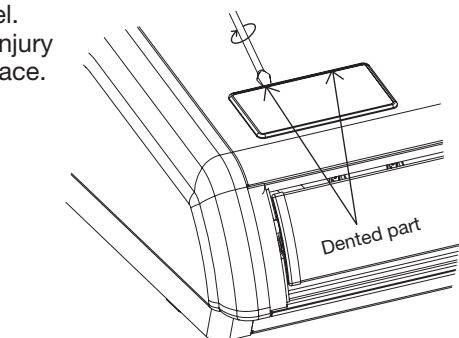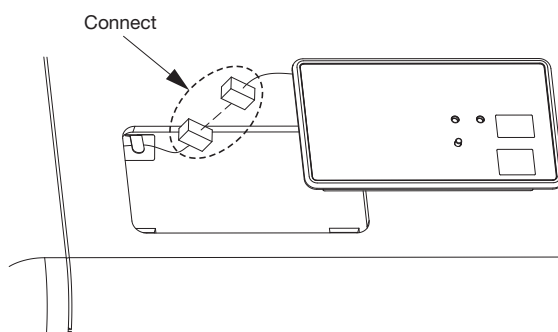

Place the connectors under the panel

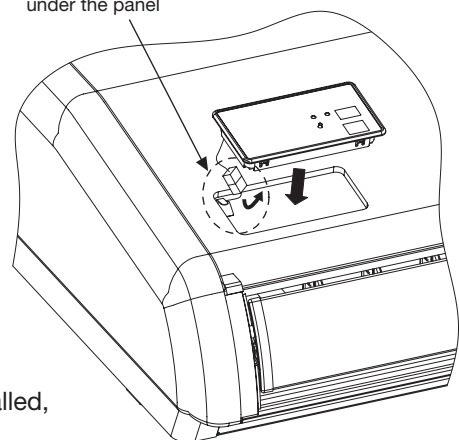

③ Installation of the receiver


Check direction of the receiver, and fix to the panel.

CAUTION: Connect the connectors before installing the receiver. In case of connecting after the receiver had been installed, it will be necessary to remove the panel.

④ How to connect the wiring for control box

Connect the attached wiring to the signal terminal block primary side XY (for grill side) in the control box, and connect to the CNL connector (3P white) from the receiver .

* This installation is unnecessary for indoor unit that have wiring is already connected from the signal terminal block to the receiver.

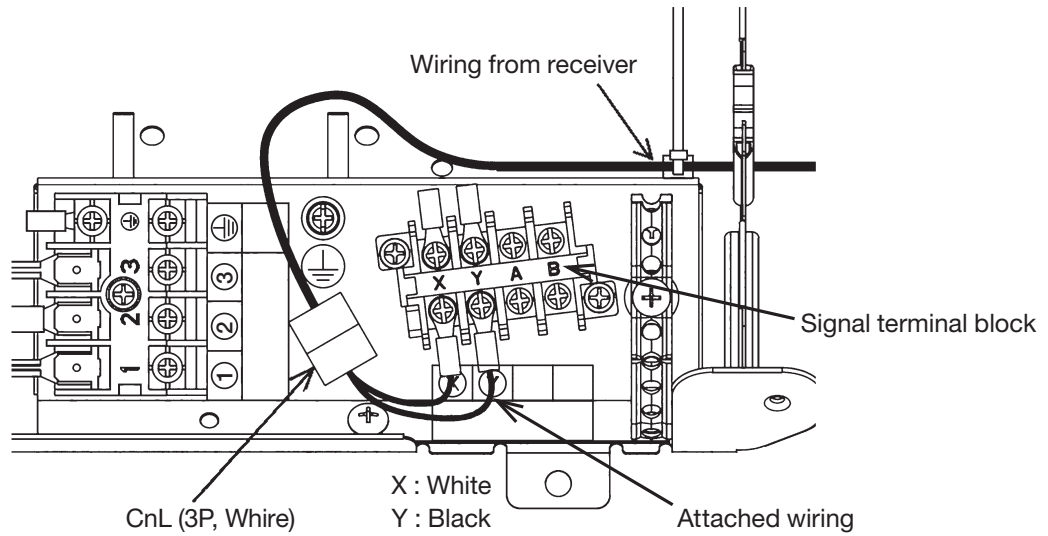


⑤ Wireless remote control

Installation tips for the remote control holder

Fix the remote control holder using the screws supplied with this product.


* Precautions for installing the holder

- Adjust the position so that it is upright.
- Ensure that the screw heads are not protruding.
- Do not attach the holder on plaster wall.

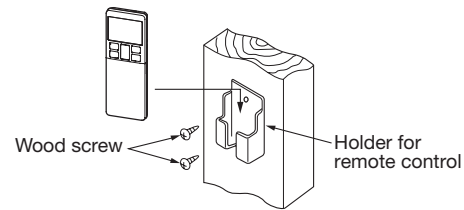


How to insert batteries

1. Detach the back lid.
2. Insert the batteries. (two AAA batteries)
3. Reattach the back lid.

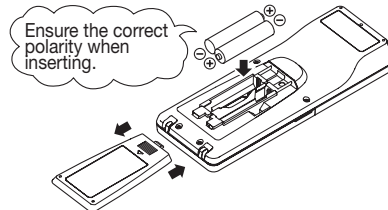

Setting to avoid mixed communication

1. Detach the back lid, and remove the batteries.
2. Cut off the switching wire in the battery compartment using nippers.
3. Insert the batteries, and attach the back lid.

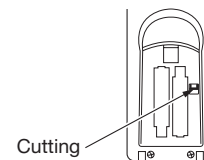

Changing the remote control setting


How to change the Auto Run setting

The Auto Run mode is not available on the building air conditioning and gas heat pump series (excluding the cooling/heating free multi system).

When using the remote control to operate those models, set the remote control to disable the Auto Run mode.

To disable the Auto Run mode, press the **ACL** switch while holding down the **MODE** button, or insert batteries while holding down the **MODE** button.

* Note: Once the batteries are removed, the setting is reset to the factory default. When the batteries are removed, repeat the steps described above.

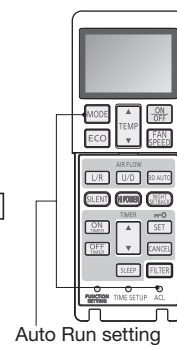


Auto Run setting

Indoor function settings

1. How to set indoor functions

- ① Press the ON/OFF button to stop the unit.
- ② Press the desired one of the buttons shown item 2. while holding down the FUNCTION SETTING switch.
- ③ Use the selection buttons, ▲ and ▼, to change the setting.
- ④ Press the SET button.

The buzzer on the remote control signal receiver beeps twice, and the LED lamp flashes four times at two-second intervals.

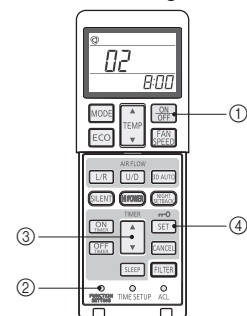

⑤ Wireless remote control (continued)

2. Setting details

The following functions can be set.

Button	Number indicator	Function setting
FAN SPEED	00	Fan speed setting : Standard
	01	Fan speed setting : Setting 1 *
	02	Fan speed setting : Setting 2 *
MODE	00	Room heating temperature adjustment : Disable
	01	Room heating temperature adjustment : +1°C
	02	Room heating temperature adjustment : +2°C
	03	Room heating temperature adjustment : +3°C
FILTER	00	Filter sign display : OFF
	01	Filter sign display : 180 hours
	02	Filter sign display : 600 hours
	03	Filter sign display : 1000 hours
	04	Filter sign display : Operation stop after 1000 hours have elapsed
U/P (Up/Down)	00	Anti draft setting : Disable
	01	Anti draft setting : Enable
SILENT	00	Infrared sensor setting (Motion sensor setting) : Disable
	01	Infrared sensor setting (Motion sensor setting) : Enable
HI POWER	00	Infrared sensor control (Motion sensor control) : Disable
	01	Infrared sensor control (Motion sensor control) : Power control only
	02	Infrared sensor control (Motion sensor control) : Auto OFF only
	03	Infrared sensor control (Motion sensor control) : Power control + Auto OFF
ON TIMER	00	Cooling fan residual-period running : Disable
	01	Cooling fan residual-period running : 0.5 hours
	02	Cooling fan residual-period running : 2 hours
	03	Cooling fan residual-period running : 6 hours
OFF TIMER	00	Heating fan residual-period running : Disable
	01	Heating fan residual-period running : 0.5 hours
	02	Heating fan residual-period running : 2 hours
	03	Heating fan residual-period running : 6 hours
NIGHT SETBACK	00	Remote control signal receiver LED : Brightness High
	01	Remote control signal receiver LED : Brightness Low
	02	Remote control signal receiver LED : OFF

* Refer to technical data.

⑥ Receiver

1 Control plural indoor units with one remote control

Up to 16 indoor units can be connected.


1. Connect the XY terminal with 2 cores wire. As for the size, refer to the following note.
2. For Packaged air-conditioner series, set the indoor unit address with SW2 on the indoor unit PCB from [1] to [F] so as not to duplicate.

Restrictions on the thickness and length of wire (Maximum total extension 600m.)

Standard	Within	0.3 mm ² × 100m
	Within	0.5 mm ² × 200m
	Within	0.75mm ² × 300m
	Within	1.25mm ² × 400m
	Within	2.0 mm ² × 600m

For the shop series

For VRF series, set the indoor unit address with SW1, SW2 and SW5-2 on the indoor unit PCB from [000] to [127] so as not to duplicate.

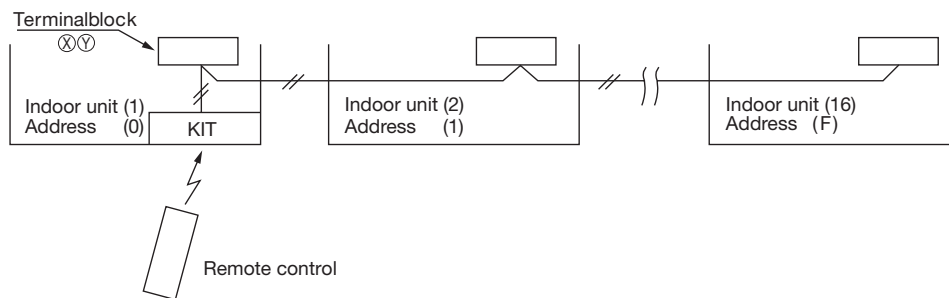


For the building air-conditioning and gas heat pump series

Set the indoor unit and outdoor unit numbers by manually specifying the addresses.

Use the rotary switches SW1 and SW2 provided on the indoor unit PCB (printed circuit board) to set the indoor unit numbers so that they are not duplicated.

Master/Slave setting when using plural remote control

Up to two receivers can be installed in one indoor unit group.


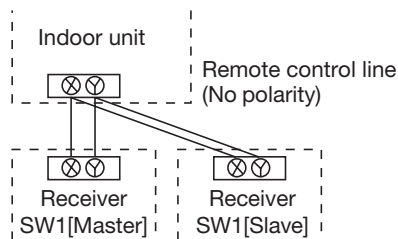


Switch	Setting	Function
SW2	ON	Master
	OFF	Slave

⑥ Receiver (continued)

Wireless remote control's operable area


- Standard signal receiving range
[Condition]
Illuminance at the receiver area: 300 lux.
(When no lighting fixture is located within 1m of indoor unit in an ordinary office)
- Points for attention in connecting a plural number of indoor units
[Condition]
Illuminance at the receiver area: 300 lux.

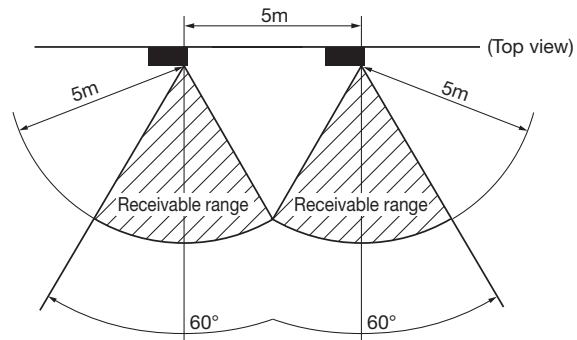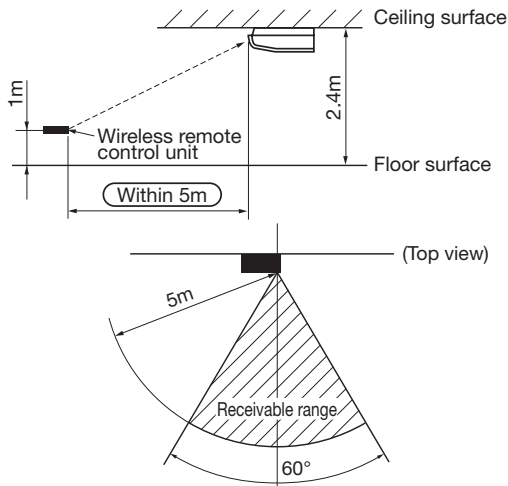

Backup switch

A backup switch is provided on the receiver section of the panel surface. When operation from the wireless remote control unit is not possible (due to flat batteries, a mislaid unit, a unit failure), you can use it as an emergency means. You should operate this switch manually.

- If pressed while the air-conditioner is in a halt, it will cause the air-conditioner to start operation in the automatic mode (in the case of cooling only, in the cooling mode).
Wind speed: Hi fan, Temperature setting: 23°C, Louver: horizontal.
- If pressed while the air-conditioner is in operation, it will stop the air-conditioner.

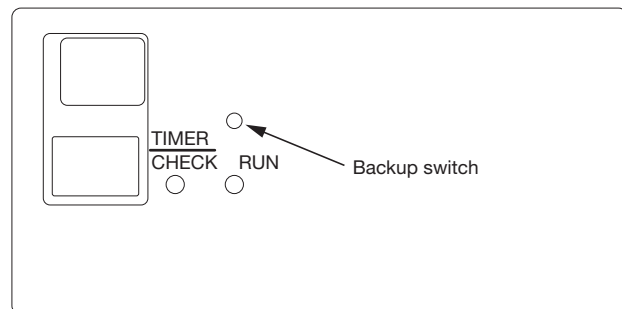

Cooling test run operation

- After safety confirmation, turn on the power.
- Transmit a cooling operation command with the wireless remote control unit, while the backup switch on the receiver is depressed.
- If the backup switch on the receiver is pressed during a test run, it will end the test run.
- If you cannot operate the unit properly during a test run, please check wiring by consulting with inspection guides.

How to read the two-digit display

A two-digit indicator (7-segment indicator) is provided on the receiver section.

- An indication will be displayed for one hour after power on.
- An indication appears for 3.5 seconds when a "Stop" command is sent from the wireless remote control unit while the air-conditioner is not running.
- An indication appearing in (1) or (2) above will go off as soon as the unit starts operation.
- When there are no error records to indicate, addresses are displayed for all of the connected units.
- When there are some error records remaining, the error records are displayed.
- Error records can be cleared by transmitting a "Stop" command from the wireless remote control unit, while the backup switch is depressed.

(4) FDF series (RCN-KIT3-E)

Notes:
 Following functions of indoor unit series are not able to be set with this wireless remote control (RCN-KIT3-E).
 1. 4-fan speed setting (PHi/Hi/Me/Lo) → 3-fan speed setting (Hi/Me/Lo)

Read this manual together with the installation manual attached to the air-conditioner. **PJZ012D060**

⚠ WARNING

Fasten the wiring to the terminal securely and hold the cable securely so as not to apply unexpected stress on the terminal.
 Loose connection or hold will cause abnormal heat generation or fire.
 Make sure the power source is turned off when electric wiring work.
 Otherwise, electric shock, malfunction and improper running may occur.

⚠ CAUTION

DO NOT install the wireless kit at the following places in order to avoid malfunction.

(1) Places exposed to direct sunlight	(8) Places where the receiver is influenced by the fluorescent lamp (especially in venter type) or sunlight.
(2) Places near heat devices	(9) Places where the receiver is affected by infrared rays of any other communication devices.
(3) High humidity places	(10) Places where some object may obstruct the communication with the remote control AC unit.
(4) Hot surface or cold surface enough to generate condensation	
(5) Places exposed to oil mist or steam directly	
(6) Uneven surface	
(7) Places affected by the direct airflow of the AC unit.	

DO NOT leave the wireless kit without the cover.
 In case the cover needs to be detached, protect the receiver with a packaging box or bag in order to keep it away from water and dust.

Attention

- Instruct the customer how to operate it correctly referring to the instruction manual.
- User's manual of a wireless remote control is attached to a indoor unit or a outside unit.
- Read this together with a manual attached to this kit.


① Accessories Please make sure that you have all of the following accessories.

① Receiver	1	① Remote control holder	1
② Wiring (3m)	1	② Screw for holder	2
③ Parts set (A)	1	③ AAA dry cell battery (R03)	2
④ Parts set (B)	1	① Screw for receiver	2
⑤ Parts set (C)	1	② Fixing band	1
⑥ Wireless remote control	1	③ Clamp	5
⑦ User's manual	1	④ Screw for clamp	5
		① Receiver installation bracket	1
		② Screw for the bracket	2
		③ Installation fitting	2

② Wireless remote control's operable area


(1) When installed on ceiling

① Standard reachable area of the signal
condition Illuminance at the receiver : 300lux (when no lighting is installed within 1m of the receiver in an ordinary of ce.)

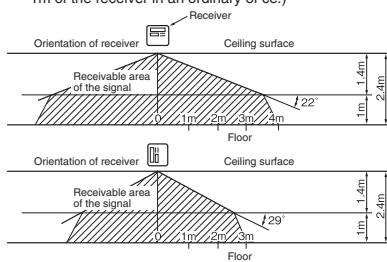

② Correlation between illuminance at the receiver and reachable area of the signal in a plain view.
condition Correlation between the reachable area of the signal and illuminance at the receiver when the remote control is operated at 1.1m high under the condition of ceiling height of 2.5m.
 When the illuminance becomes double, the area is narrowed down to two third.

(2) When installed on wall

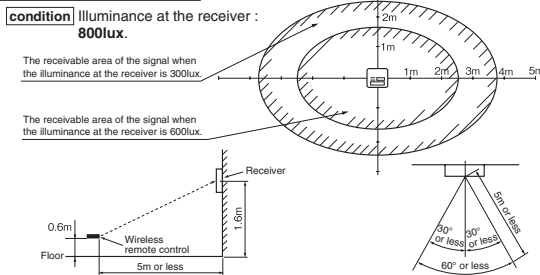

③ How to install the receiver

The following two methods can be used to install the receiver onto a ceiling or a wall. Select a method according to the installation position.

<Installation position>

- (A) Direct installation onto the ceiling with wood screws.
- (B) Installation with accessory's bracket

(1) Drilling of the ceiling (ceiling opening)


Drill the receiver installation holes with the following dimensions at the ceiling position where wires can be connected.

(A) Direct installation onto the ceiling with wood screws.	88mm(H)×101mm(W)
(B) Installation with enclosed bracket.	108mm(H)×108mm(W)

(2) Wiring connection of receiver

Caution

Do not connect the wiring to the power source of the terminal block. If it is connected, printed board will be damaged.

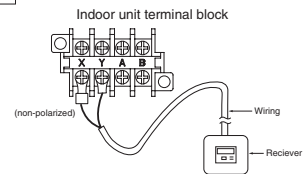


(3) Installation of the receiver

Remove the screw on the side of the receiver and sprit it into the upper case and lower case. Install the receiver with one of the two installation methods (A) or (B) shown below.

(A) Direct installation onto the ceiling with screws


Use this installation method when the ceiling is wooden, and there is no problem for strength in installing directly with wood screws.

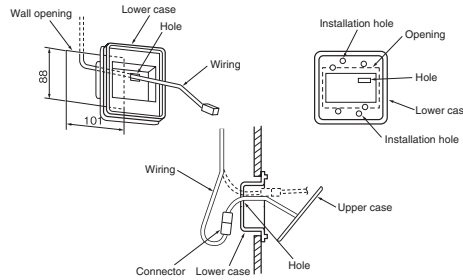

- ① Put through the wiring from the back side to the hole of the lower case.
- ② Fit the lower case into the ceiling opening. Make sure that the clearance between the convex part of the back of the lower case and the ceiling opening must be as equal as possible on both sides.
- ③ Using the two installation holes shown above, fix the lower case onto the ceiling with the enclosed wood screws. (The other four holes are not used.)
- ④ Connect the wiring with the wiring from the upper case by the connector.
- ⑤ Take out the connector to the backside from the hole of the lower case putting through the wiring at ①.
- ⑥ Fit the upper case and the lower case, and tighten the screws.

(B) Installation with enclosed bracket

Use this method when installaing onto a gypsum board (7 to 18mm), etc.

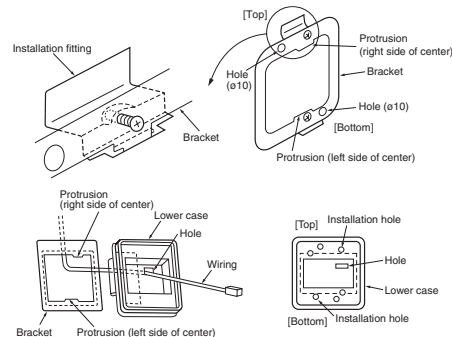

- ① Catch the two protrusion of the enclosed bracket onto the ceiling as shown above, and temporarily fix with the screws. (The bracket has an up/down and front/back orientation. Confirm the top/bottom protrusion positions and the positional relation of the ø 10 holes on the bracket and the installation hole on the lower case with the above drawing.)
- ② Insert the end of the installation fitting into the back of the ceiling from the opening, and tighten the screws to fix the bracket onto the ceiling.
- ③ Pass the wiring from the rear side through the hole on the lower case.
- ④ Fit the lower case onto the bracket, and fix the lower case to the bracket using the two installation holes shown above. (The other four holes are not used.)
- ⑤ Follow step ① to ⑥ for (A) to complete the installation.

④ Remote control

Installation of the control holder

Caution

DO NOT install it on the following places


- 1) Places exposed to direct sunlight
- 2) Places near heat devices
- 3) High humidity places
- 4) Hot surface or cold surface enough to generate condensation
- 5) Places exposed to oil mist or steam directly
- 6) Uneven surface

Installation tips for the remote control holder

- Adjust and keep the holder upright.
- Tighten the screw to the end to avoid scratching the remote control.
- DO NOT attach the holder to plaster wall.


How to insert batteries

- ① Detach the back lid.
- ② Insert the batteries. (two AAA batteries)
- ③ Reattach the back lid.

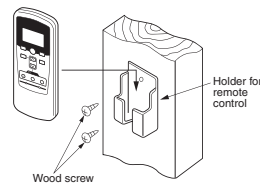

⑤ Cooling test run operation

- After safety confirmation, turn on the power.
- Transmit a cooling operation command with wireless remote control, while the backup button on the receiver is pressed.
- If the backup button on the receiver is pressed during a test run, it will end the test run.
- If you cannot operate the unit properly during a test run, please check by consulting with inspection guides on the wiring diagram of outdoor units.

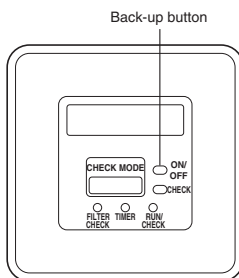

⑥ Setting of wireless remote control and receiver

(A) Methods of avoiding the malfunction due to the mixed communication

Do both procedures ① and ②.

This setting is to avoid the mixed communication with other household electric appliances or the mixed communication when two receivers are located closely.

① Setting change of the wireless remote control


Pressing **ACL** and **AIR FLOW** button at the same time or inserting the batteries with pressing **AIR FLOW** button will customize the signal.

Note *When the batteries are removed, the setting will return to the default setting. Make sure to reset it when the batteries are replaced.


② Setting the PCB of the receiver

Turn SW1-1 off.

• Wireless remote control

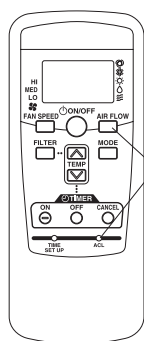

• PCB of the receiver

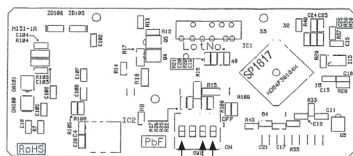

SW1-1	Customized signal setting to avoid mixed communication	ON : Normal OFF : Remote
SW1-2	Receiver master/slave setting	ON : Master OFF : Slave
SW1-4	Auto restart	ON : Valid OFF : Invalid

□ : Default setting

(B) Control plural indoor units with one remote control


Up to 16 indoor units can be connected.

① Connect the XY terminal with 2-core wire.

As for the size, refer to the following note.

② For Packaged air conditioner series, set the indoor unit address with SW2 on the indoor unit PCB from [0] to [F] so as not to duplicate.


Restrictions on the thickness and length of wire (Maximum total extension 600m.)	
Standard	Within 100m x 0.3 mm ²
	Within 200m x 0.5 mm ²
	Within 300m x 0.75mm ²
	Within 400m x 1.25mm ²
	Within 600m x 2.0 mm ²

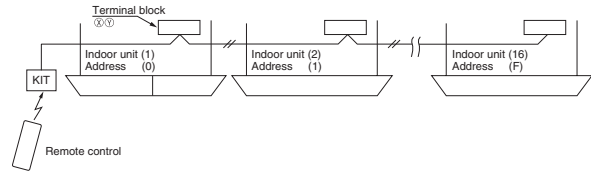

③ For VRF series, set the indoor unit address with SW1, SW2 and SW5-2 on the indoor unit PCB from [000] to [127] so as not to duplicate.

(C) Master/Slave setting when using plural remote control

Up to two receivers can be installed in one indoor unit group.

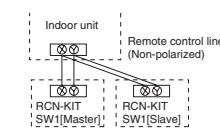

Switch	Setting	Function
SW1-2	ON	Master
	OFF	Slave

(D) Change setting of auto mode operation

Auto mode operation is prohibited to be selected for KX models (except for KXR models).

Therefore be sure to change setting of remote control to disable the auto mode operation for these models according to the following procedure.

While pressing the **MODE** button, press the **ACL** switch, or while pressing the **MODE** button, insert the batteries to the remote control. Then the auto mode can be invalid.

Attention

When the batteries are removed, it is returned to initial setting (Auto mode becomes valid).

Accordingly when replacing the batteries, be sure to perform the above operation once again.

(E) Change setting of fan speed

While pressing the **FAN SPEED** button, press the **ACL** switch, or while pressing the **FAN SPEED** button, insert the batteries to the remote control. Then the fan speed can be changed from 2-speed setting to 3-speed setting.

When changing fan speed setting of remote control, be sure to perform the same fan speed setting as that of the indoor unit model to be used.

Attention



When the batteries are removed, it is returned to initial setting (Fan speed setting is 2-speed).

Accordingly when replacing the batteries, be sure to perform the above operation once again.

11.2 Motion sensor kit
(1) FDU, FDUM series (LB-KIT)


PJZ012D122 

 **WARNING**

- Connect the wiring to the PCB in the control box on the indoor unit and hold the wiring securely so as not to apply unexpected stress on the PCB.
Loose connection or hold will cause abnormal heat generation or fire. 
- Make sure the power source is turned off when electric wiring work.
Otherwise, electric shock, malfunction and improper running may occur. 

 **CAUTION**

- Do not install the motion sensor kit at the following places in order to avoid malfunction.






<ul style="list-style-type: none"> (1) Places exposed to direct sunlight (2) Places near heat devices (3) High humidity places (4) Hot surface or cold surface enough to generate condensation (5) Places exposed to oil mist or steam directly (6) Places affected by the direct air flow of the Indoor unit (7) Places where the motion sensor is influenced by the fluorescent lamp or sunlight 	<ul style="list-style-type: none"> (8) Places where the motion sensor is affected by infrared rays of any other communication devices (9) Places where some object may obstruct the motion sensor (10) Place that the motion sensor have a shock (11) Place with the strong radio wave or Static electricity (12) Place that motion sensor lens become tainted or have damaged. Dusty place (13) Place where it runs in parallel with strong voltage lines such as power source wiring
---	--
- Do not leave the motion sensor without the cover.
In case the cover needs to be detached, protect the motion sensor with a packaging or bag.
In order to keep it away from water and dust. 

Attention

- This manual describes how to install the motion sensor kit.
- Instruct the customer how to operate it correctly referring to the instruction manual.
- For the installation method of the air-conditioner itself, refer to the installation manual enclosed in the package.

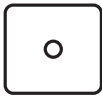① Accessories


Please make sure that all components are in the package.

Motion sensor	Wiring <1>	Wiring <2>	2 screws	Manual
	In case of CnL connector on the indoor unit PCB (FDT/FDK/FDTC) 	In case of CnL connector is not on the indoor unit PCB 		

※ Please prepare a relay wiring for connecting the motion sensor and indoor unit on site. (0.2 mm² or thicker, triplex (red, white and black) cable for communication, with the maximum length of 8 m.)


② Installing the motion sensor

- The recommended height is lower than 4000 mm for motion sensor. When the installation height is higher, motion detection accuracy might be reduced.
- Sensor will detect the object with a different temperature from the surrounding.
- Motion sensor is more sensitive to motions in the direction of \leftrightarrow mark.
- Sensor may not detect small children or infants with little motion.
- Although motion sensor can be installed on a wall, it is recommended to install it on the ceiling plane.
- If the sensor is installed on the wall, the sensing distance in the front direction is about 5 m, covering the angle of about 100 degrees.

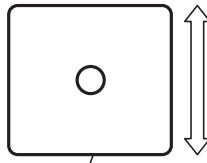

Side of screws for fixing the case

The detectable area

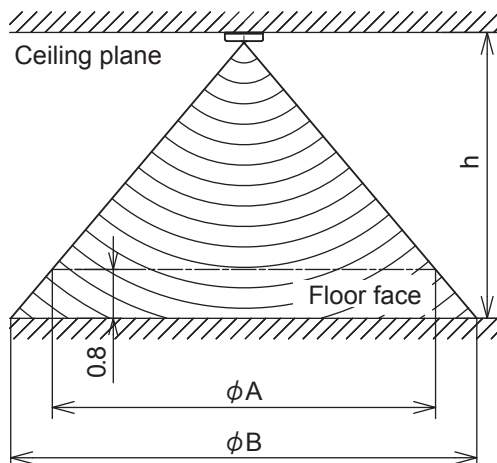


Height of the ceiling	h (m)	2.7	3.5	4.0
Detectable area	φ A (m)	4.5	6.4	7.6
Detectable area	φ B (m)	6.4	8.3	9.5

Installing the motion sensor

There are the following 3 methods to install the motion sensor on the ceiling plane or wall surface (hereinafter called "ceiling plane"). Select the method according to the installation position.

<How to install>

- Direct installation by screws to the ceiling plane with the wiring in the ceiling space.**
- Direct installation by screws to the ceiling plane with the wiring in the room.**
- Installation with switch box (prepare at the site)**


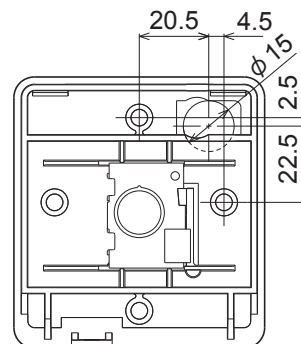


Positional relation for pulling out relay wiring hole and installing holes.



Option (A)

► Select this method if the ceiling plane has sufficient strength to install the motion sensor directly with screws.


- ① Prepare a relay wiring on site and lay out the wiring in advance.
- ② Remove the screw at the side of the motion sensor and slide the upper case in the direction of the arrow.
- ③ Pull the wiring of the motion sensor as below.

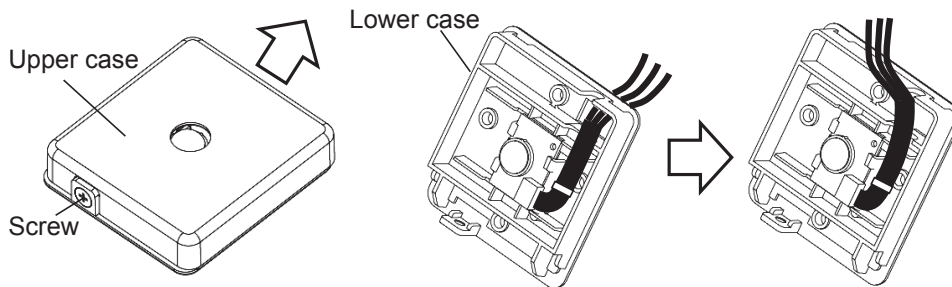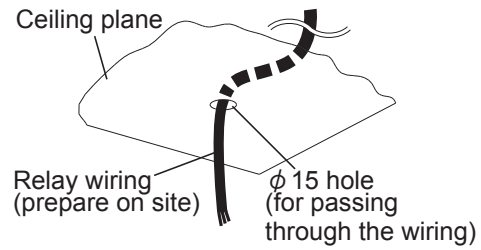


- ④ Pass the relay wiring through the hole on the lower case.
- ⑤ When fixing the lower case to the ceiling plane, tighten it in 2 locations of the installing holes (4 locations) with the attached screws.

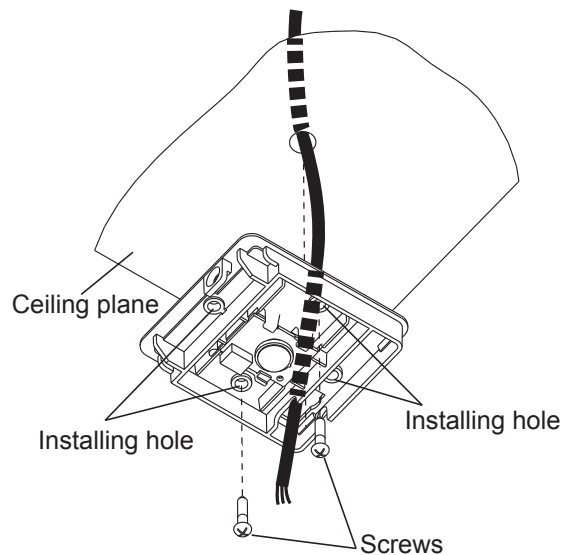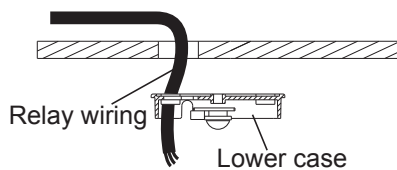

- ⑥ Using a crimping terminal, etc., connect the same color to the relay wiring (prepare on site) and the wiring of motion sensor.

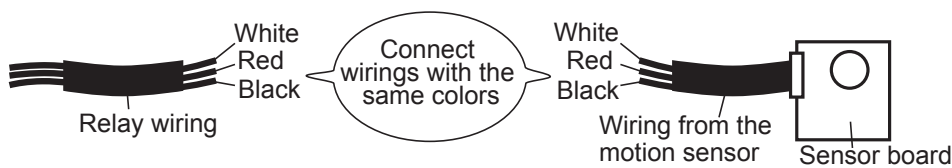

- ⑦ Place the connecting part inside of the ceiling space.
- ⑧ Seal the wiring hole on the lower case with putty.
- ⑨ Taking care not to pinch the wirings, slip the upper case into the lower case, and tighten the screws.

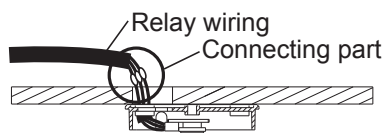


Caution:
In order to prevent tracking, be sure to perform construction so as not to clog up the connecting part with dust, etc.


Option (B)

► Select this method if the ceiling plane has sufficient strength to install the motion sensor directly with screws.

- ① Remove the screw at the side of the motion sensor and slide the upper case in the direction of the arrow.
(The same as ② of Option (A))
- ② Pull the wiring of the motion sensor toward the side. Cut off the thinner part of the upper case.

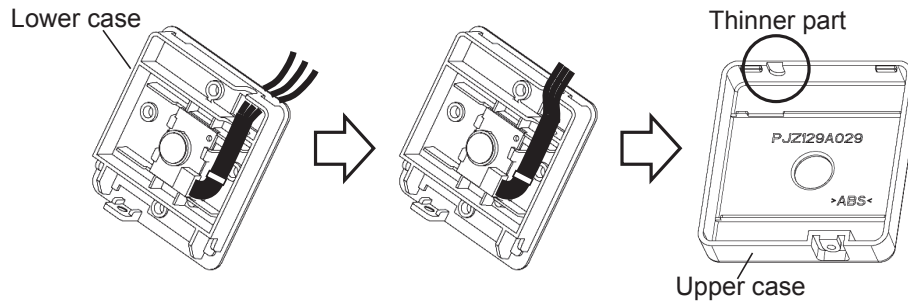


- ③ When fixing the lower case to the ceiling plane, tighten it in 2 locations of the installing holes (4 locations) with the attached screws. (The same as ⑤ of Option (A))
- ④ Using a crimping terminal, etc., connect the same color to the relay wiring (prepare on site) and the wiring of motion sensor.
(The same as ⑥ of Option (A))
- ⑤ Taking care not to pinch the wirings, slip the upper case into the lower case, and tighten the screws.
(The same as ⑨ of Option (A))
- ⑥ Seal the cut part at Step ② with putty.

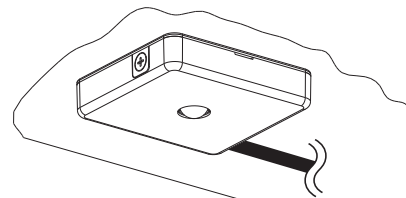


Option (C)


- ① Set up the switch box and relay wiring (prepare on site) in advance.
Seal the relay wiring inlet with putty.

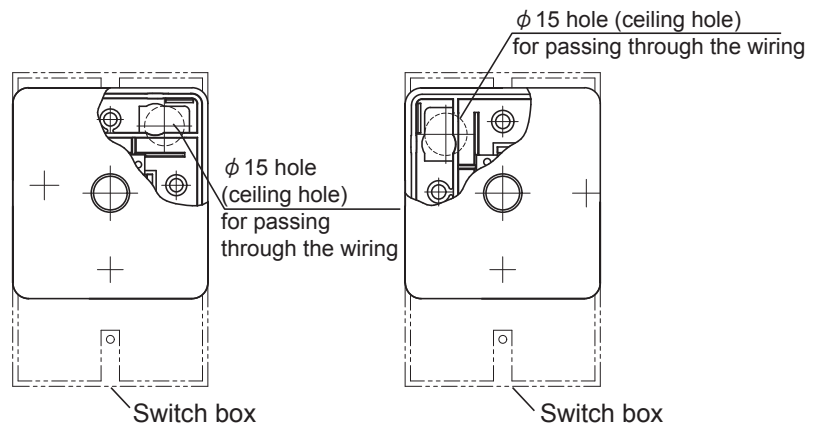




Positional relation for the switch box and installing holes

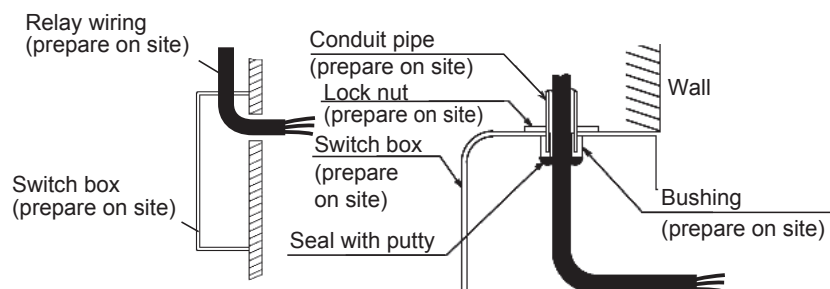

- ② Remove the screw at the side of the motion sensor and slide the upper case in the direction of the arrow.
(The same as ② of Option (A))
- ③ Pull the wiring of the motion sensor.
(The same as ③ of Option (A))
- ④ Pass the relay wiring through the hole on the lower case from switch box.
- ⑤ Fix the lower case to switch box using the installing hole (1 place).

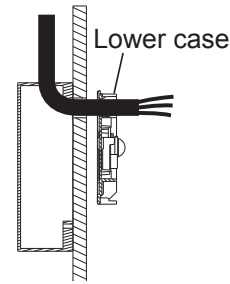

- ⑥ Connect the same color to the relay wiring (prepare on site) and the wiring of motion sensor.
(The same as ⑥ of Option (A))
- ⑦ Place the connecting part between switch box and the hole of the lower case through passed the wiring at step ④ .
- ⑧ Taking care not to pinch the wirings, slip the upper case into the lower case, and tighten the screws.
(The same as ⑨ of Option (A))

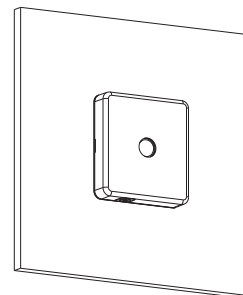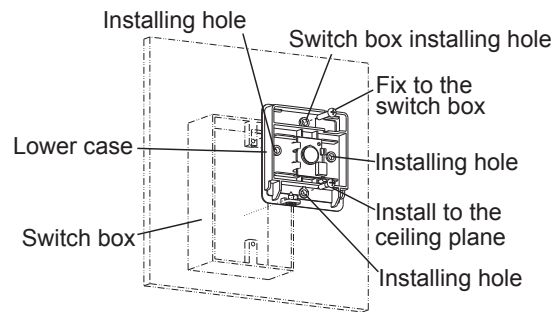


Wiring connection in the control box of indoor unit

CAUTION: Attached wirings to the motion sensor vary depending on the model of the indoor unit.
Make sure your model before installing.


<In case of the CnL connector is on the indoor unit PCB (FDT/FDK/FDTC)>

- ① Connect the same color to the relay wiring (prepare on site) and the attached wiring <1>.
- ② Remove the control box cover from the indoor unit.
- ③ Connect CnL connector (3P, black) to the PCB.

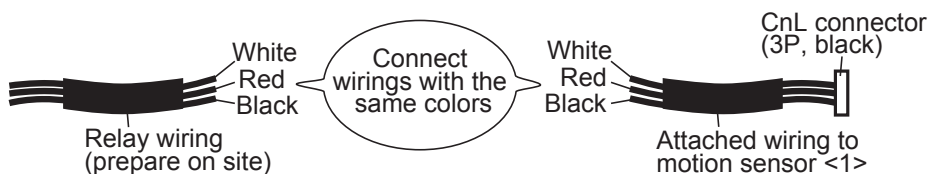


<Incase of the CnL connector is not on the indoor unit PCB>


- ① Connect the same color to the relay wiring (prepare on site) and the attached wiring <2>.
- ② Remove the control box cover from the indoor unit.
- ③ Connect CnG connector (4P, blue) to the PCB.
- ④ Connect CnV2 connector (4P, black) to the PCB.

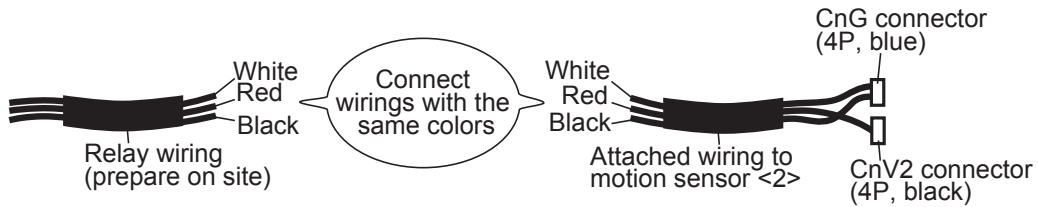


<For FDT>

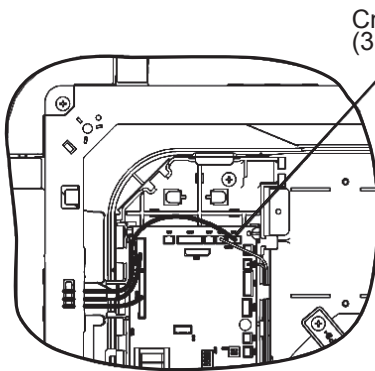


<For FDTC>

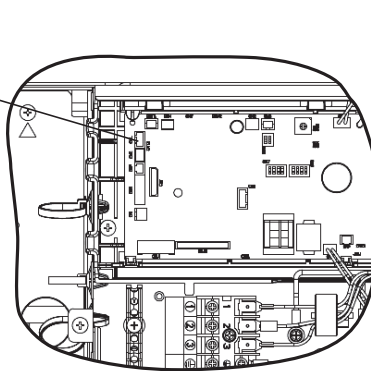

<For FDK>

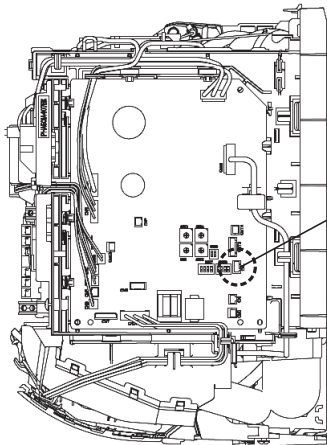

<For the other indoor units>

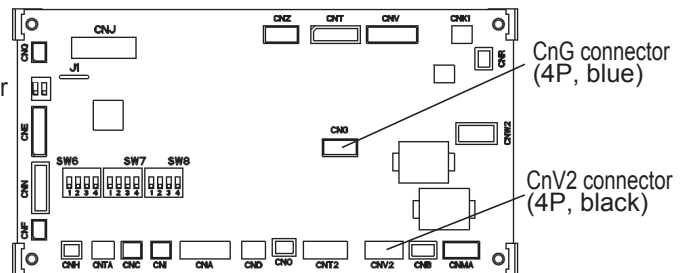

③ Setting the motion sensor

The motion sensor will not function if it is only installed.
 Set the function of the motion sensor by the wired or wireless remote control.
 Refer to the manual instruction of each remote control for the setting procedure.

Note: It is not possible to set by the following remote control models or older.



Wired: RC-EX1A, RC-E5, RCH-E3

Wireless: RCN-E1R

(2) FDE series (LB-E)

PFA012D633 



WARNING

- Connect the wiring to the PCB in the control box on the indoor unit and hold the wiring securely so as not to apply unexpected stress on the PCB.
Loose connection or hold will cause abnormal heat generation or fire. 
- Make sure the power source is turned off when electric wiring work.
Otherwise, electric shock, malfunction and improper running may occur. 

CAUTION

- Do not install the motion sensor kit at the following places in order to avoid malfunction.

<ul style="list-style-type: none"> (1) Places exposed to direct sunlight (2) Places near heat devices (3) High humidity places (4) Hot surface or cold surface enough to generate condensation (5) Places exposed to oil mist or steam directly (6) Places affected by the direct air flow of the Indoor unit (7) Places where the motion sensor is influenced by the fluorescent lamp or sunlight 	<ul style="list-style-type: none"> (8) Places where the motion sensor is affected by infrared rays of any other communication devices (9) Places where some object may obstruct the motion sensor (10) Place that the motion sensor have a shock (11) Place with the strong radio wave or static electricity (12) Place that motion sensor lens become tainted or have damaged. Dusty place
---	--




- Do not leave the motion sensor without the cover.
In case the cover needs to be detached, protect the motion sensor with a packaging or bag.
In order to keep it away from water and dust. 

Attention

- This manual describes how to install the motion sensor kit.
- Instruct the customer how to operate it correctly referring to the instruction manual.
- For the installation method of the air-conditioner itself, refer to the installation manual enclosed in the package.


① Accessories

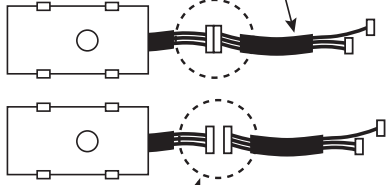Please make sure that all components are in the package.


Motion sensor (※)	Manual
<div style="text-align: center;">Attached wiring to the motion sensor kit</div>  <div style="border: 1px solid black; padding: 5px; margin-top: 10px;"> ※ Wiring from the motion sensor and the attached wiring to the motion sensor kit have been connected when shipped from the factory. Remove the connector at the position of ○ mark and connect it to the attached wiring to the indoor unit before use. </div>	

② Installing the motion sensor

- It is possible to install the motion sensor by replacing the indoor unit.
- The recommended height is lower than 4000 mm for motion sensor. When the installation height is higher, motion detection accuracy might be reduced.
- Sensor will detect the object with a different temperature from the surrounding.
- Sensor may not detect small children or infants with little motion.
- Use the separate motion sensor so that person's activity can be detected when the detectable area differs from the person's activity area.
- Use the separate motion sensor when using both wireless remote control and motion sensor together.

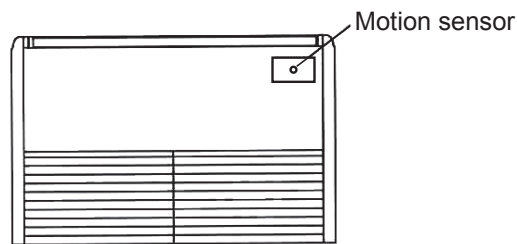

The detectable area

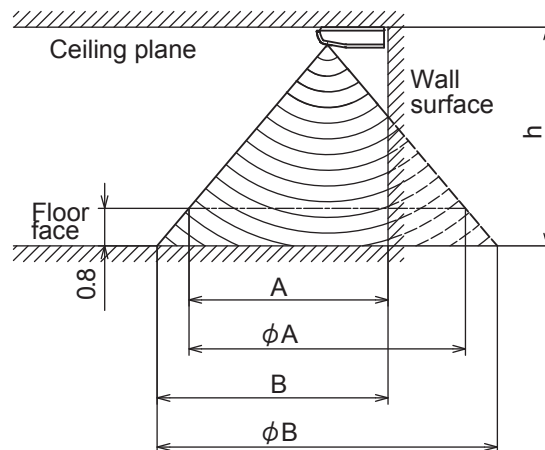

Height of the ceiling	h (m)	2.7	3.5	4.0
Detectable area	A (m)	2.9	3.9	4.5
Detectable area	ϕA (m)	4.5	6.4	7.6
Detectable area	B (m)	3.9	4.8	5.4
Detectable area	ϕB (m)	6.4	8.3	9.5


Installing the motion sensor (before installing the unit)

Motion sensor can be installed by replacing with a cover of the panel.

CAUTION: Install the motion sensor before installing the unit.


When installing the motion sensor after unit has been fixed, injury due to falling may result because of working at high place.

- ① Remove the connector that connects the motion sensor and the wiring.



- ② Insert a tool into the dented part (2 places) of the panel cover, and wrench slightly not to damage the paintwork of the panel to remove the cover.
- ③ Connect the wiring from the panel's hole (attached to the indoor unit, color of the wiring: white, red and black, connector: 3P, white) to the wiring from the motion sensor. Make sure to install the motion sensor in the correct direction.

CAUTION: Do not remove the clamp fixed the wiring.

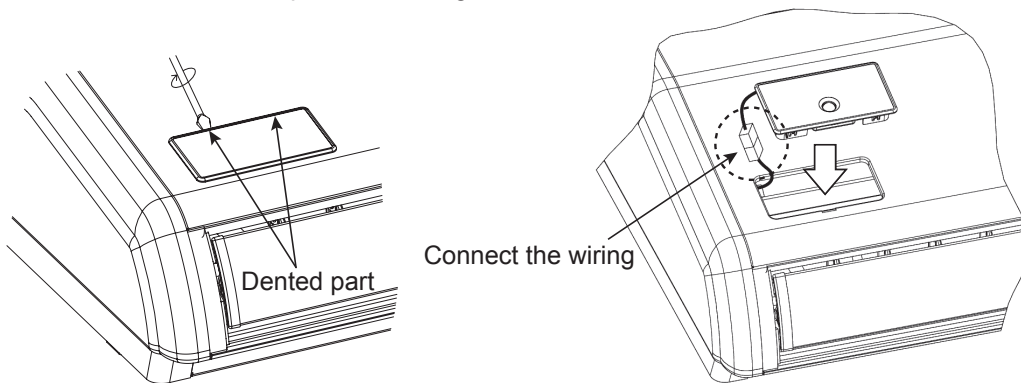


- ④ Install the motion sensor
Place the connector under the panel and install it to the panel with careful attention to the direction of the motion sensor.

CAUTION: Connect the connectors before installing the motion sensor.

In case of connecting after the motion sensor has been installed, it will be necessary to remove the panel.

Wiring connection in the control box

- ① Connect the wiring from the motion sensor (attached to the indoor unit, color of the wiring: white, red and black, connector: 3P, white) to the attached wiring to the motion sensor kit.
- ② Fix the wiring with clips (6 places).
- ③ Connect CnG connector (4P, blue) to the PCB.
- ④ Connect CnV2 connector (4P, black) to the PCB.

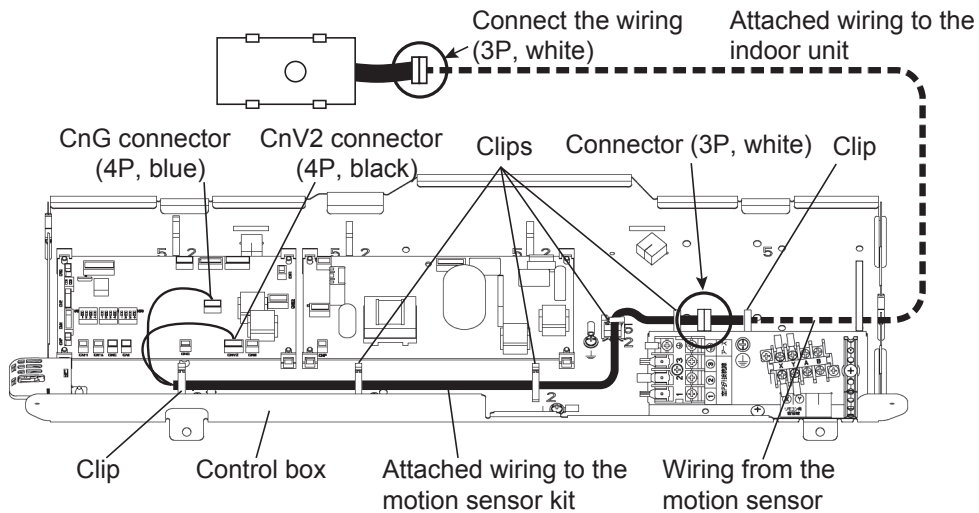

③ Setting the motion sensor

The motion sensor will not function if it is only installed.

Set the function of the motion sensor by the wired or wireless remote control.

Refer to the manual instruction of each remote control for the setting procedure.

Note: It is not possible to set by the following remote control models or older.

Wired: RC-EX1A, RC-E5, RCH-E3

Wireless: RCN-E1R

SAFETY PRECAUTIONS

⚠ WARNING

- **If a child, person with disease or other persons needed for assist uses this product, people around the person should take sufficient care.**



A halt of the air-conditioner due to abnormal situation or motion sensor's control may cause a feeling of sickness or accident.

ATTENTION


- The sensor may not detect a person near the border of detection range.
- Installation near an object with a different temperature from the surrounding may cause a false detection of human.
- Due to correction of temperature setting, some people may feel chilly.

This product uses infrared sensor to detect person's activity level to support control of air-conditioner. Please set the control you like from the remote control.


Indoor unit control	Detective situation	Description of control	Display of eco touch remote control
① Power control	Activity level is large	Lower the indoor temperature setting for comfort.	Power control ON
	Activity level is small	Raise the indoor temperature setting for energy-saving.	Power control ON
② Auto-off	No one is detected for 1 hour	Stop operation and stand by	In auto-off mode
	No one is detected for 12 hours	Stop operation	-
① + ②	Any combination of the above	Any of the above	Any of the above
All disabled (default setting)	-	Standard control	-

If the sensor is disconnected or defective, the control will be set as if it no detects (or less) activity level.

Refer to the next section for setting method.

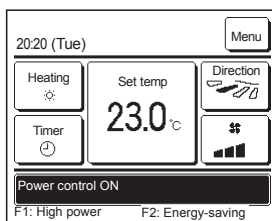

- When power control is enabled
The amount of human motion is detected by a motion sensor to adjust the Set temp.
During power control, "Power control ON" will be displayed on the message display.



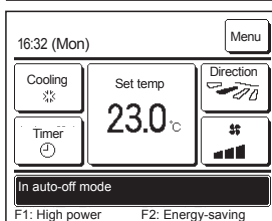


- When auto-off is enabled
The unit will enter the "Operation wait" state when an hour has elapsed since the last time a human presence was detected and will be in "Complete stop" state after another 12 hours.
"Operation wait"...The unit stops but will resume operation when human presence is detected. When the unit is in "Complete stop", "In auto-off mode" will be displayed on the message display.
"Complete stop"...When auto-off is enabled, the unit stops. The unit will not resume operation even when human presence is detected. The message "In auto-off mode" will disappear from the message display, and the operation lamp will turn off.


Control setting (from eco touch remote control)

- Refer to the installation manual for eco touch remote control to activate the infrared sensor (motion sensor).

TOP screen **Menu** ⇒ **Service setting** ⇒ **Installation settings** ⇒ **Service password**

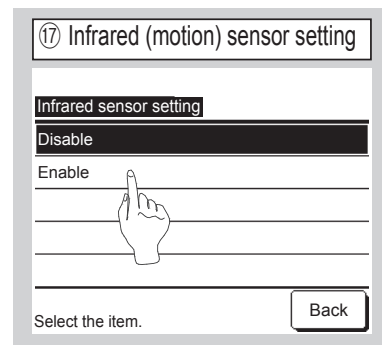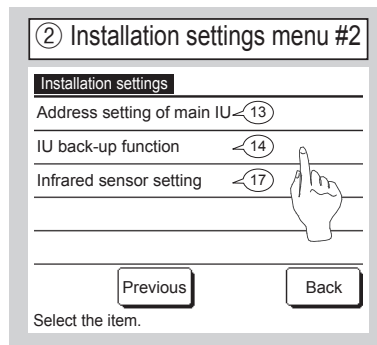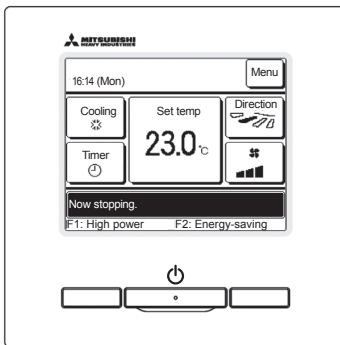

- Refer to the installation manual for eco touch remote control to set control mode.
- Infrared sensor (motion sensor) control (for IUs with motion sensors)
Presence of humans and the amount of motion are detected by a motion sensor to perform various controls.
- When the R/C is set as the sub R/C, the infrared sensor (motion sensor) control cannot be set.

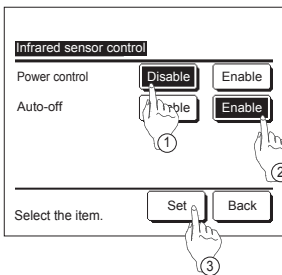

Tap the **Menu** button on the TOP screen and select

Energy-saving setting ⇒ **Infrared sensor control** or **Motion sensor control**.

The Infrared sensor control screen and contents of the current settings are displayed.

- ① Enable/disable power control.
- ② Enable/disable auto-off.
- ③ After you set each item, tap the **Set** button.

The display returns to the Energy-saving setting menu screen.

Control setting (from wireless remote control)


- Refer to the installation manual for wireless remote control to enable motion sensor in **Indoor function settings**.

Indoor function settings

1. How to set indoor functions

- ① Press the ON/OFF button to stop the unit.
- ② Press the desired one of the buttons shown item 2. while holding down the FUNCTION SETTING switch.
- ③ Use the selection buttons, ▲ and ▼, to change the setting.
- ④ Press the SET button.

The buzzer on the remote control signal receiver beeps twice, and the LED lamp flashes four times at two-second intervals.

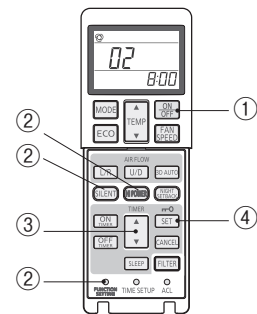

2. Setting details

Button	Number indicator	Function setting
SILENT	00	Infrared sensor setting (Motion sensor setting) : Disable
	01	Infrared sensor setting (Motion sensor setting) : Enable
HI POWER	00	Infrared sensor control (Motion sensor control) : Disable
	01	Infrared sensor control (Motion sensor control) : Power control only
	02	Infrared sensor control (Motion sensor control) : Auto OFF only
	03	Infrared sensor control (Motion sensor control) : Power control and Auto OFF

11.3 Current and new models compatibility

(Indoor unit, FDE wireless kit, motion sensor kit)

(1) New model code / service code

(a) Indoor unit

PAC indoor unit with motion sensor function control will have the service code "/F"

PAC

Current model	New model	Compatibility	Remark
FDU71VF1/1	FDU71VF1/F	Fig. 1	Change service code to "/F" ① Change PCB(CTR)
FDU100VF2/1	FDU100VF2/F		
FDU125VF/1	FDU125VF/F		
FDU140VF/1	FDU140VF/F		
FDU200VG/1	FDU200VG/F		
FDU250VG/1	FDU250VG/F		
FDUM40VF/C	FDUM40VF/F		
FDUM50VF/C	FDUM50VF/F		
FDUM60VF/C	FDUM60VF/F		
FDUM71VF1/1	FDUM71VF1/F		
FDUM100VF2/1	FDUM100VF2/F		
FDUM125VF/C	FDUM125VF/F		
FDUM140VF/C	FDUM140VF/F		
FDE40VG/E	FDE40VG/F		
FDE50VG/E	FDE50VG/F		
FDE60VG/E	FDE60VG/F		
FDE71VG/E	FDE71VG/F		
FDE100VG/E	FDE100VG/F		
FDE125VG/E	FDE125VG/F		
FDE140VG/E	FDE140VG/F		

(b) FDE wireless kit

FDE wireless kit model code will change.

Current model	New model	Compatibility	Remark
RCN-E-E2/1	RCN-E-E3/1	Fig. 2	New model code

(2) Compatibility

There is no compatibility between new Indoor unit and current wireless kit, since the details of the reason was shown in attached appendix.

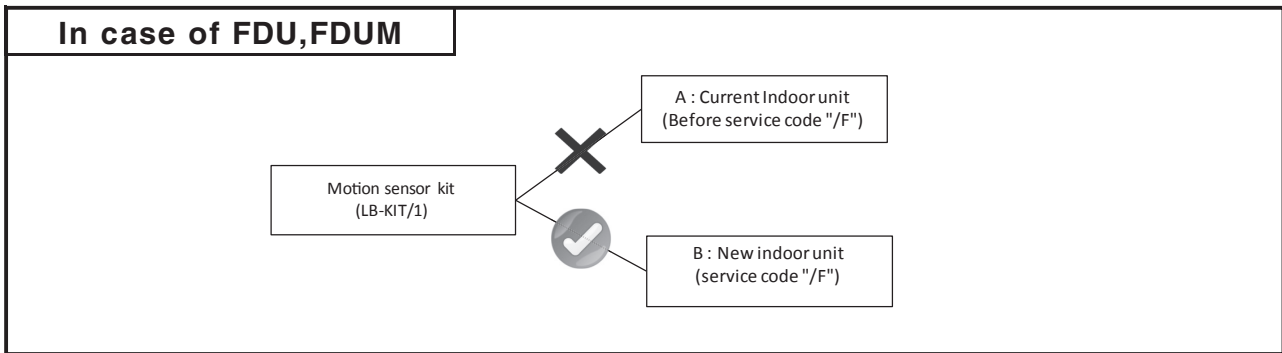


Fig. 1

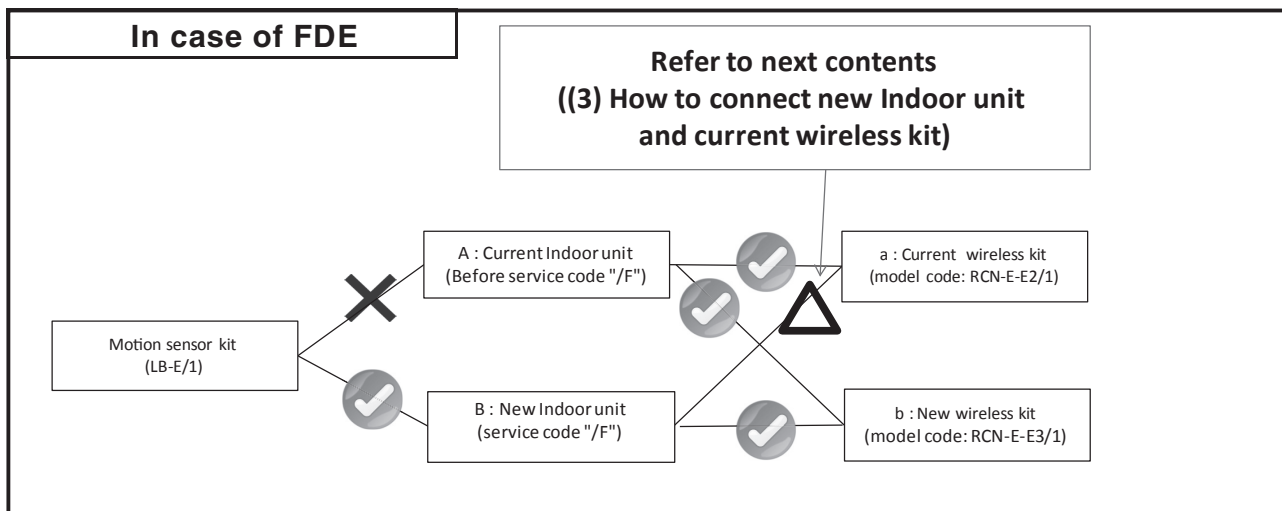





Fig. 2

(3) How to connect new Indoor unit (FDE-VG/F) and current wireless kit (RCN-E-E2/1)

When connecting new Indoor unit (FDE-VG/F) and current wireless kit (RCN-E-E2/1), Please use wiring kit ((WR-RCN-E/1). (Refer to appendix)


In case of connection with a new Indoor unit (FDE-VG/F) and current wireless kit (RCN-E-E2/1) without wiring kit (WR-RCN-E/1), please use the following method.

- ① Cut off the CnL connector of the wiring from the receiver.(3P, white)
- ② Connect round terminals to the WHITE and BLACK wiring.
 ※ Don't connect the RED wiring, make it safe by taping it up.
- ③ Connect the white and black wiring to the XY terminals.
 White wiring is to X terminal.
 Black wiring is to Y terminal.

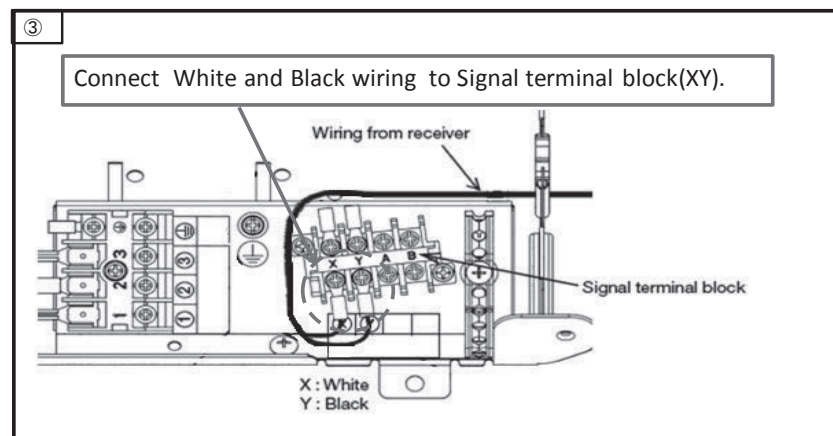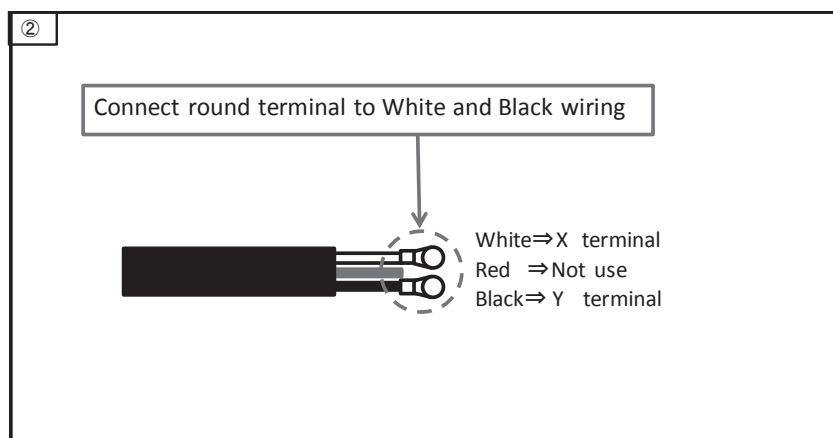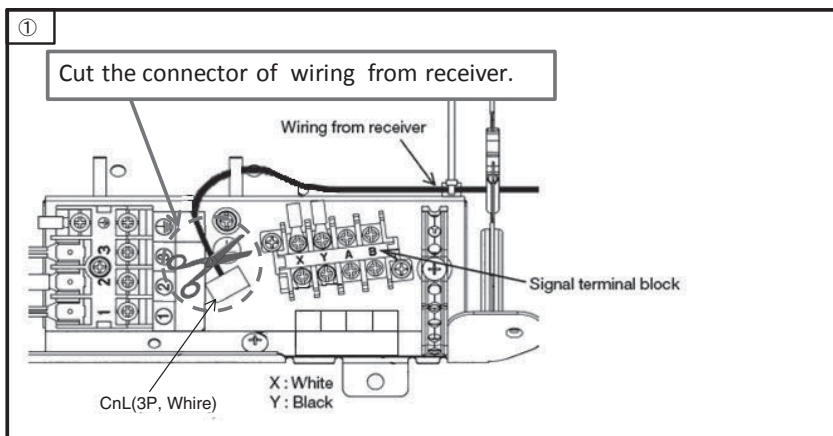


Appendix

The cable in the FDE wireless kit will be changed to make it common for both wireless kit and motion sensor kit. (A⇒B, Please refer to the following figure)
 (The cable in the FDE will be changed with service code . Please refer to Section 2 below.)

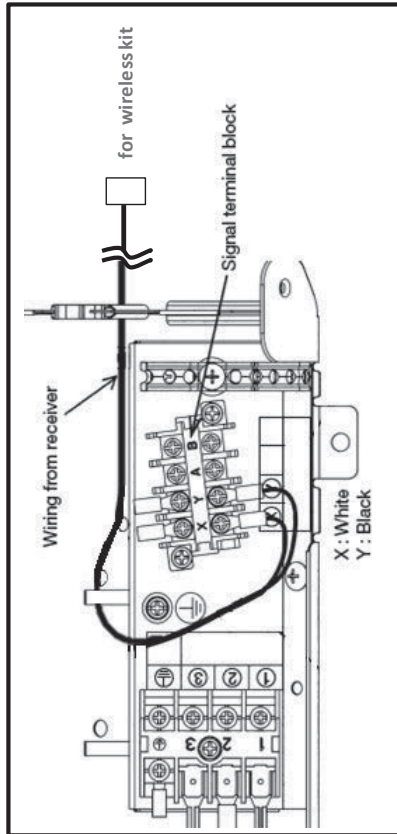


A : Current Indoor unit (FDE--VG/E)
Wiring connected to Signal terminal block

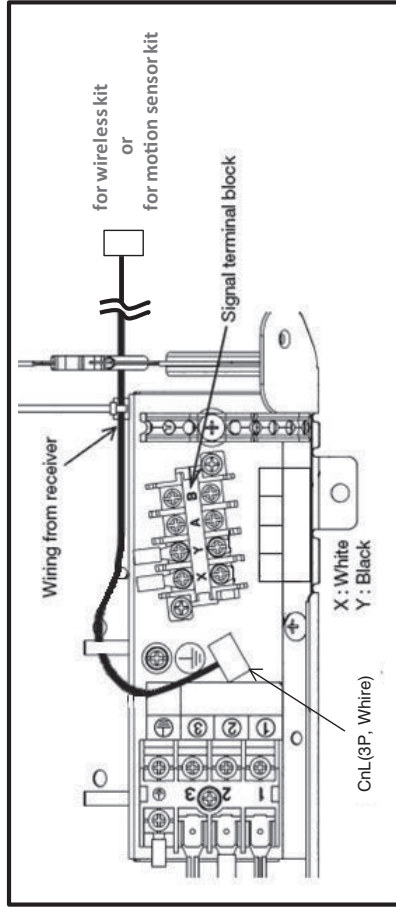


B : New Indoor unit (FDE--VG/F)
Wiring not connected to Signal terminal block

In the new wireless kit (RCN-E-E3/1) , wiring for the connection to the terminal block will be supplied together.. (a⇒b Refer to the following figure)

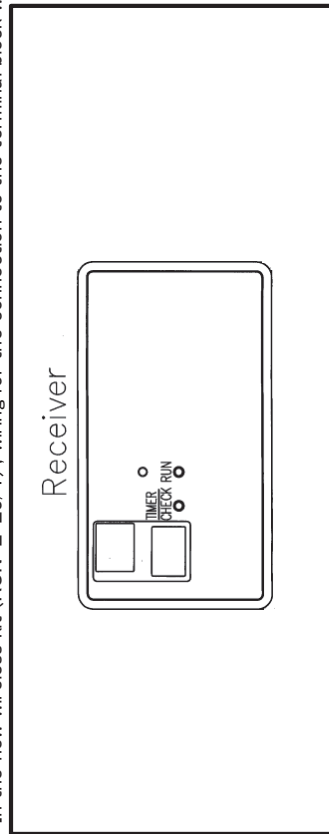


a : Current wireless kit (RCN-E-E2/1)
Receiver only

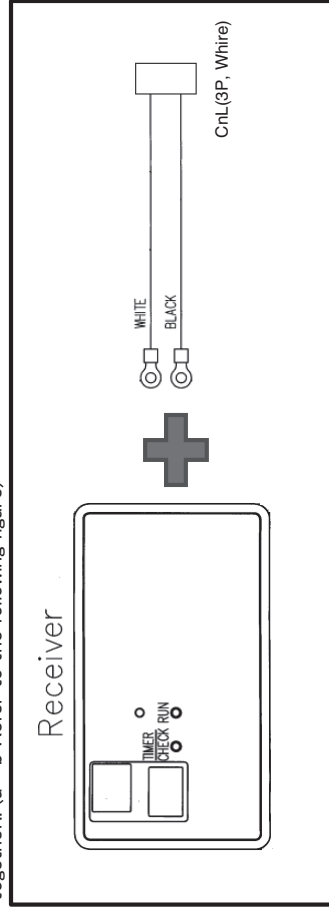

b : New wireless kit (RCN-E-E3/1)
Receiver and wiring

Appendix

Because of this change, additional wiring kit (WR-RCN-E/1, c in below figure) is needed. In case of connecting NEW Indoor unit (FDE--VG/F) and current wireless kit (RCN-E-EZ/1).


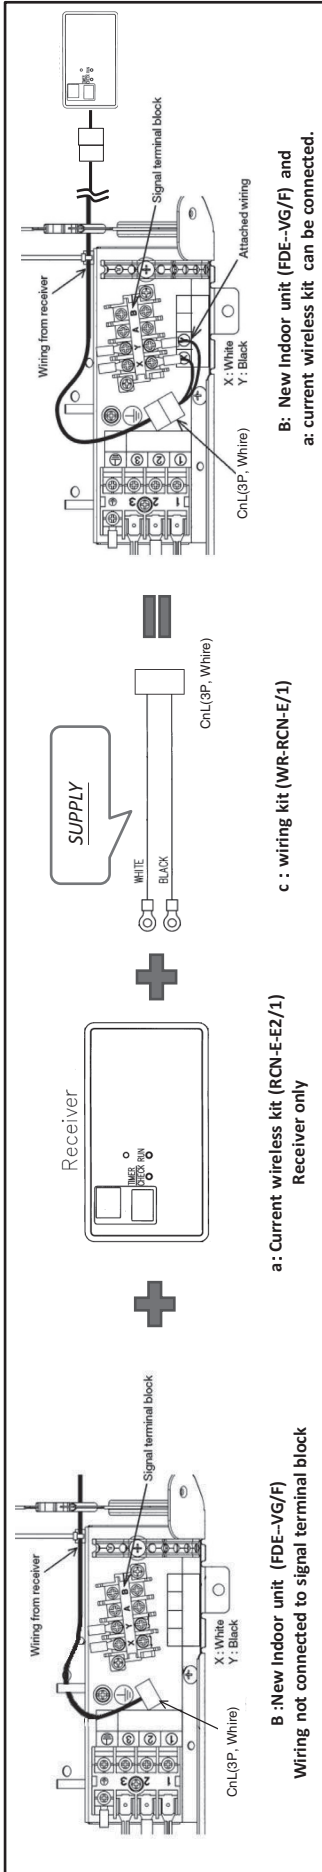


11.4 Simple wired remote control (RCH-E3)

Notes:

Following functions of FDU indoor unit series are not able to be set with this simple wired remote control (RCH-E3).
 1. 4-fan speed setting (P-Hi/Hi/Me/Lo)→ 3-fan speed setting (Hi/Me/Lo)

Names and functions of sections

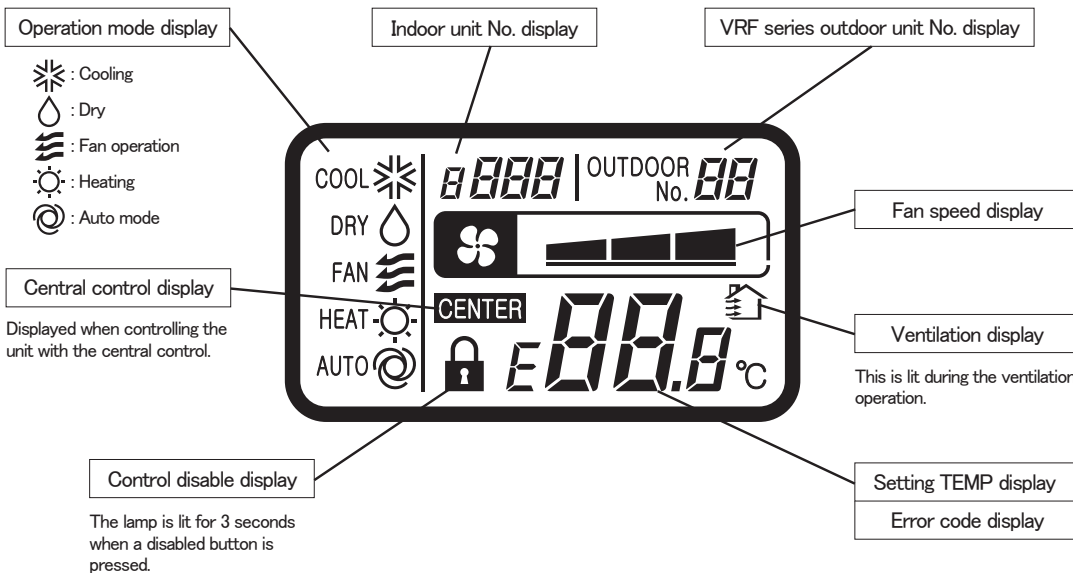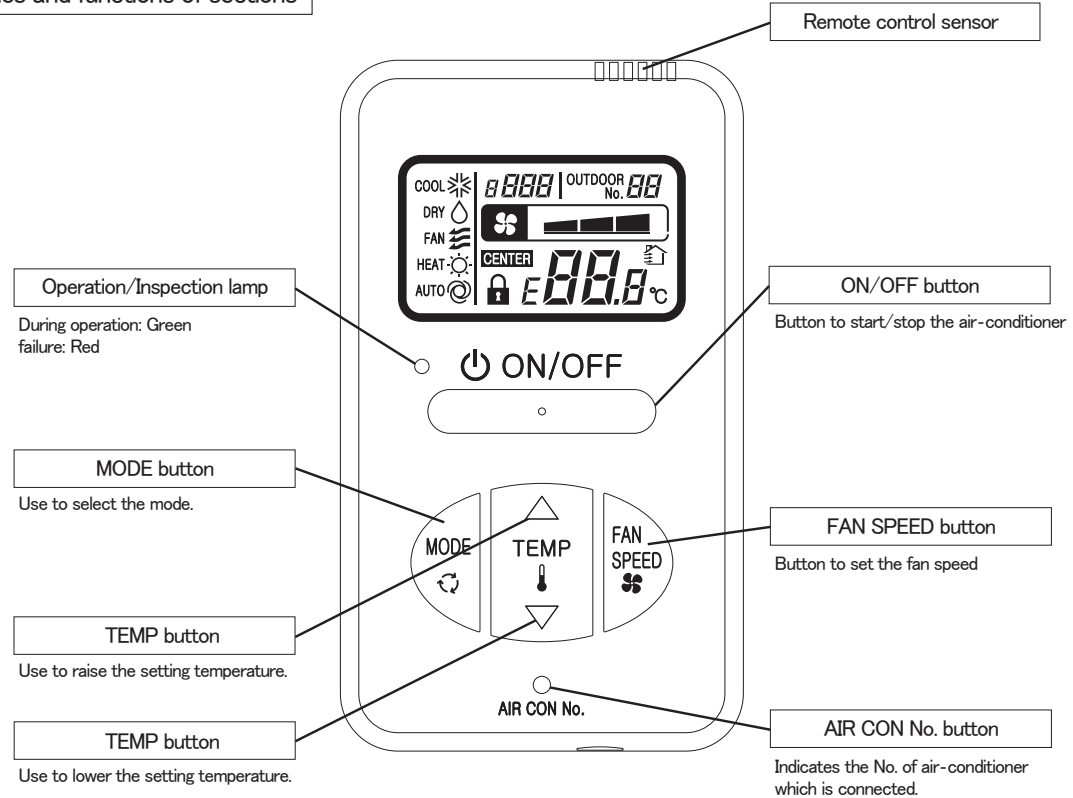


Installation of remote control

Do not install the remote control at the following places in order to avoid malfunction.

- (1) Places exposed to direct sunlight
- (2) Places near heat devices
- (3) High humidity places
- (4) Hot surface or cold surface enough to generate condensation
- (5) Places exposed to oil mist or steam directly
- (6) Uneven surface


PJZ000Z272

Remote control installation dimensions

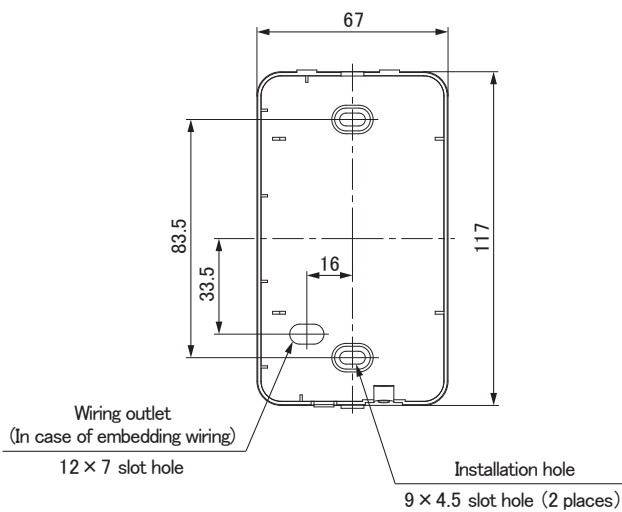


Note: Installation screw for remote control
M4 screw (2 pieces)


In case of embedding wiring

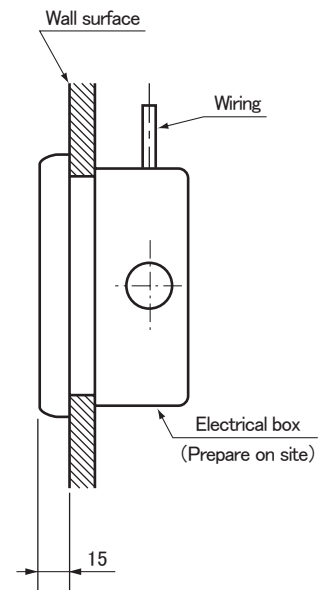

In case of exposing wiring

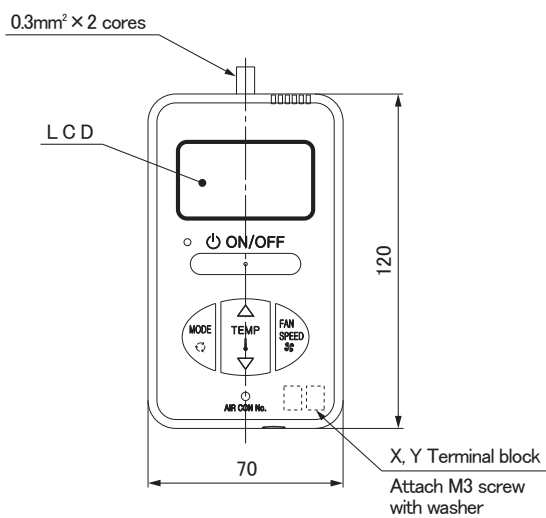


The remote control wiring can be extracted from the upper center. After the thin part in the upper side of the remote control upper case is scraped with a nipper or knife, remove burr with a file.

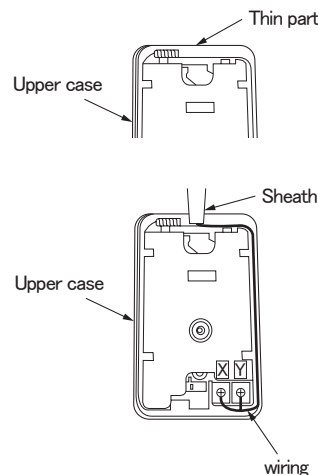

The peeling length of each wiring is as follows:

- X wiring : 160mm
- Y wiring : 150mm



Wiring specifications


- (1) Wiring of remote control should use 0.3mm² × 2 cores wires or cables. (on-site configuration)
- (2) Maximum prolongation of remote control wiring is 600m.
If the prolongation is over 100m, change to the size below.
But, the wiring in the remote control case should be 0.3mm² (recommended) to 0.5mm².
Change the wire size outside of the case according to wire connecting. Waterproof treatment is necessary at the wire connecting section. Be careful about contact failure.

Unit:mm

Length	Wiring thickness
100 to 200m	0.5mm ² × 2 cores
Under 300m	0.75mm ² × 2 cores
Under 400m	1.25mm ² × 2 cores
Under 600m	2.0mm ² × 2 cores



Adapted to **RoHS** directive

Simple Remote Control Installation Manual


PJZ012D069 


Read together with indoor unit's installation manual.

WARNING

- **Fasten the wiring to the terminal securely and hold the cable securely so as not to apply unexpected stress on the terminal.** 
Loose connection or hold will cause abnormal heat generation or fire.
- **Make sure the power source is turned off when electric wiring work.** 
Otherwise, electric shock, malfunction and improper running may occur.

CAUTION





- **Do not install the remote control at the following places in order to avoid malfunction.** 

(1) Places exposed to direct sunlight	(4) Hot surface or cold surface enough to generate condensation
(2) Places near heat devices	(5) Places exposed to oil mist or steam directly
(3) High humidity places	(6) Uneven surface
- **Do not leave the remote control without the upper case.** 
In case the upper case needs to be detached, protect the remote control with a packaging box or bag in order to keep it away from water and dust.

Accessories	Remote control, wood screw (φ 3.5 × 16) 2 pieces
Prepare on site	Remote control cord (2 cores) (Refer to [2. Installation and wiring of remote control]) [In case of embedding cord] Electrical box, M4 screw (2 pieces) [In case of exposing cord] Cord clamp (if needed)





1. Installation procedure


In case of embedding cord

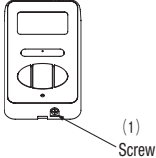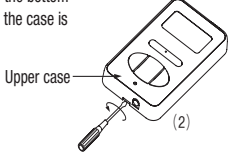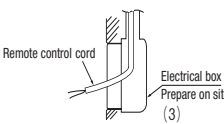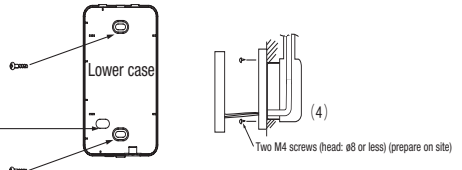- (1) **Make certain to remove** the screw on the bottom surface of the remote control. 
- (2) Remove the upper case of the remote control. Insert a flat-blade screwdriver to a concave portion of the bottom surface of the remote control and slightly twist it, and the case is removed. 
- (3) Pre-bury the electrical box and remote control cord. 
- (4) Prepare two M4 screws (recommended length: 12 – 16mm), and install the lower case to the electrical box. Do not use a screw whose screw head is larger than the height of the wall around the screw hole. 

- (5) Connect the remote control cord to the terminal block. Connect the terminals (X and Y) of the remote control and the terminals (X and Y) of the indoor unit. (No polarity of X and Y)
- (6) Mount the upper case for restoring to its former state so as not to crimp the remote control cord, and secure with the removed screw.

In case of exposing cord

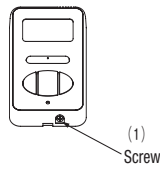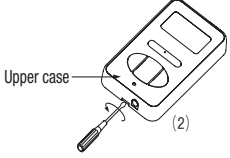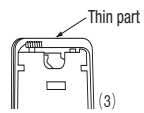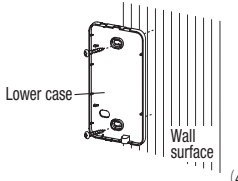- (1) **Make certain to remove** a screw on the bottom surface of the remote control. 
- (2) Remove the upper case of the remote control. Insert a flat-blade screwdriver to a concave portion of the bottom surface of the remote control and slightly twist it, and the case is removed. 
- (3) The remote control cord can be extracted from the upper center. After the thin part in the upper side of the remote control upper case is scraped with a nipper or knife, remove burr with a file. 
- (4) The lower case of the remote control is mounted to a flat wall with two accessory wood screws. 

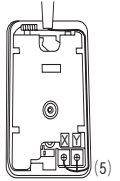- (5) Connect the remote control cord to the terminal block. Connect the terminals (X and Y) of the remote control and the terminals (X and Y) of the indoor unit. (No polarity of X and Y)
The wiring route is as shown in the right. 

The wiring in the remote control case should be 0.3 mm² (recommended) to 0.5 mm² at maximum.

Further, peel off the sheath.

The peeling length of each wiring is as follows:

X wiring : 160mm
Y wiring : 150mm



- (6) Mount the upper case for restoring to its former state so as not to crimp the remote control cord, and secure with the removed screw.
- (7) In the case of exposing installation, secure the remote control cord to the wall surface with a cord clamp so as not to loosen the remote control cord.


2. Installation and wiring of remote control

- (1) Wiring of remote control should use 0.3mm² × 2 cores wires or cables. (on-site configuration)
- (2) Maximum prolongation of remote control wiring is 600 m.
If the prolongation is over 100m, change to the size below.
But, the wiring in the remote control case should be 0.3mm² (recommended) to 0.5mm².
Change the wire size outside of the case according to wire connecting. Waterproof treatment is necessary at the wire connecting section. Be careful about contact failure.

100 - 200m	····· 0.5mm ² × 2 cores
Under 300m	····· 0.75mm ² × 2 cores
Under 400m	····· 1.25mm ² × 2 cores
Under 600m	····· 2.0mm ² × 2 cores


3. Master/ slave setting when more than one remote control are used

- (1) Up to two remote controls can be connected to one unit (or one group) of indoor unit.

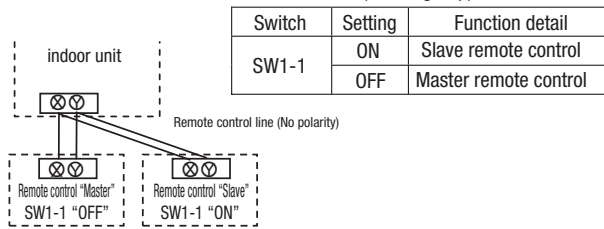

- (2) Set the switch SW1-1 of the slave remote control is "Slave" (ON). The factory default is set as "Master" (OFF).


(Note) • The remote control thermistor enabled setting can be set only to the master remote control.
 • Install the master remote control at the position to detect room temperature.
 • The air-conditioner operation follows the last operation of the remote control in case of the master / slave setting.

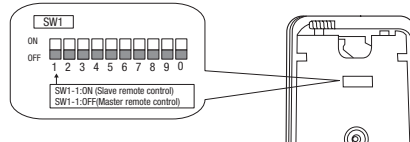

4. The indication when power source is supplied

- (1) At the time of turning the power source on, after the light is on for the first 2 seconds, the display becomes as shown below.

The number displayed on the upper side of LCD in the remote control is the software number, and this is not an error code.

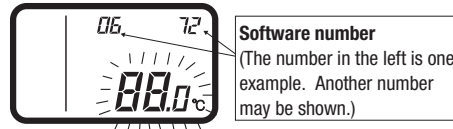

- (2) Then, "88.0 °C" blinks on the remote control until the communication between the remote control and the indoor unit is established.
 (3) In the case of connecting one remote control with one unit (or one group) of indoor unit, make certain to set the master remote control (factory default). If the slave remote control is set, a communication cannot be established.
 (4) If a state where the communication between the remote control and the indoor unit cannot be established continues about for 30 minutes, "E" is displayed. Confirm the wiring of the indoor unit and the outdoor unit and master/slave setting of the remote control.



5. Confirmation method for return air temperature

Return air temperature can be confirmed by the remote control operation.

- (1) Press **AIR CON No.** button for over 5 seconds.
 "88" blinks on the temperature setting indicator.
 ("88" blinks for approximately 2 seconds while data is read.)



Then, the return air temperature is displayed.
 (Example) return air temperature: "27 °C" (blinking)

(Note) For the return air temperature, in the normal case, the return air temperature of the indoor unit is displayed; however, in the case that the remote control thermistor is effective, detected temperature by the remote control thermistor is displayed.

- (2) Press **ON/OFF** button.
 End.

[In the case that the remote thermistor is ineffective and plural indoor units are connected to one remote control]

- (1) Press **AIR CON No.** button for over 5 seconds.
 indoor unit No. indicator: "U 000" (blinking)
 (Among the connected indoor units, the lowest number is displayed.)



- (2) Press **TEMP Δ** or **TEMP ▽** button.
 Select the indoor unit No.

- (3) Press **MODE** button.
 Decider the indoor unit No.
 (Example) indoor unit No. indicator: "U 000"

"88" blinks on the temperature setting indicator. (blinking for approximately 2 to 10 seconds while data is read) Then, the return air temperature is displayed. When **AIR CON No.** is pressed, return to the indoor unit selection display (example, "U 000").

- (4) Press **ON/OFF** button.
 End.


6. Function setting

Each function of the remote control and the indoor unit is automatically set to the initial setting, which is the standard use, on the occasion of connecting the remote control with the indoor unit. In the case of the standard use, the setting change is unnecessary. However, if you would like to change the initial setting "○", change the setting for only the item of the function number. **Record the setting contents and stored them.**

(1) Function setting item by switch on PCB

Switch No.	Setting	Setting detail	Initial setting
SW1-1	ON	Slave remote control	
	OFF	Master remote control	○
SW1-2	ON	Remote control thermistor enabled	
	OFF	Remote control thermistor disabled	○
SW1-3	ON	"MODE" button prohibited	
	OFF	"MODE" button enabled	○
SW1-4	ON	"ON/OFF" button prohibited	
	OFF	"ON/OFF" button enabled	○

Switch No.	Setting	Setting detail	Initial setting
SW1-5	ON	"TEMP" button prohibited	
	OFF	"TEMP" button enabled	○
SW1-6	ON	"FAN SPEED" button prohibited	※ Note 1
	OFF	"FAN SPEED" button enabled	※ Note 1
SW1-7	ON	Auto restart function enabled	
	OFF	Auto restart function disabled	○
SW1-8, 9, 0	ON		
	OFF	Not used	

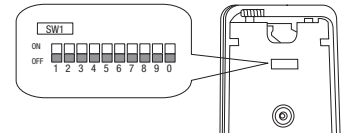

- As for the slave remote control, function setting is impossible other than SW1-1.
- In the indoor unit with only one fan speed, "FAN SPEED" button cannot be enabled.

(2) Function setting item by button operation

Classification	Function No.	Function	Setting No.	Setting	Initial setting	Remarks
Remote control function	01	Indoor unit fan speed	01	Fan speed: three steps	※ Note 1	The fan speed is three steps, ■■■ - ■■ - ■.
			02	Fan speed: two steps (Hi-Lo)	※ Note 1	The fan speed is two steps, ■■■ - ■.
			03	Fan speed: two steps (Hi-Me)		The fan speed is two steps, ■■■ - ■■.
			04	Fan: one step	※ Note 1	The fan speed is fixed to one step.
	03	Remote control thermistor at the time of cooling	01	Remote control thermistor: no offset	○	
			02	Remote control thermistor: +3.0 °C		At the time of cooling, in the case of remote control thermistor enabled, offset temperature at +3.0°C.
			03	Remote control thermistor: +2.0 °C		At the time of cooling, in the case of remote control thermistor enabled, offset temperature at +2.0°C.
			04	Remote control thermistor: +1.0 °C		At the time of cooling, in the case of remote control thermistor enabled, offset temperature at +1.0°C.
			05	Remote control thermistor: -1.0 °C		At the time of cooling, in the case of remote control thermistor enabled, offset temperature at -1.0°C.
			06	Remote control thermistor: -2.0 °C		At the time of cooling, in the case of remote control thermistor enabled, offset temperature at -2.0°C.
			07	Remote control thermistor: -3.0 °C		At the time of cooling, in the case of remote control thermistor enabled, offset temperature at -3.0°C.
	04	Remote control thermistor at the time of heating	01	Remote control thermistor: no offset	○	
			02	Remote control thermistor: +3.0 °C		At the time of heating, in the case of remote control thermistor enabled, offset temperature at +3.0°C.
			03	Remote control thermistor: +2.0 °C		At the time of heating, in the case of remote control thermistor enabled, offset temperature at +2.0°C.
			04	Remote control thermistor: +1.0 °C		At the time of heating, in the case of remote control thermistor enabled, offset temperature at +1.0°C.
			05	Remote control thermistor: -1.0 °C		At the time of heating, in the case of remote control thermistor enabled, offset temperature at -1.0°C.
			06	Remote control thermistor: -2.0 °C		At the time of heating, in the case of remote control thermistor enabled, offset temperature at -2.0°C.
			07	Remote control thermistor: -3.0 °C		At the time of heating, in the case of remote control thermistor enabled, offset temperature at -3.0°C.
	05	Ventilator setting	01	No ventilator connection	○	
			02	Ventilator links air-conditioner		In case of Single split series, by connecting ventilation device to CNT of the indoor printed circuit board (in case of VRF series, by connecting it to CND of the indoor printed circuit board), the operation of ventilation device is linked with the operation of indoor unit.
	06	"Auto" operation setting	01	"Auto" operation enabled	※ Note 1	
02			"Auto" operation disabled	※ Note 1	"Auto" operation disabled	
07	Operation permission/prohibition	01	Disabled	○		
		02	Enabled		Operation permission/prohibition control is enabled.	
08	External input	01	Level input	○		
		02	Pulse input			
09	Fan speed setting	01	Standard	Note2		
		02	High speed 1	Note2		
		03	High speed 2	Note2		
10	Fan remaining operation at the time of cooling	01	No remaining operation	○	After cooling stopped, no fan remaining operation	
		02	0.5 hours		After cooling stopped, fan remaining operation for 0.5 hours	
		03	1 hour		After cooling stopped, fan remaining operation for 1 hour	
		04	6 hours		After cooling stopped, fan remaining operation for 6 hours	
11	Fan remaining operation at the time of heating	01	No remaining operation	○	After heating stopped or after heating thermostat OFF, no fan remaining operation	
		02	0.5 hours		After heating stopped or after heating thermostat OFF, fan remaining operation for 0.5 hours	
		03	2 hours		After heating stopped or after heating thermostat OFF, fan remaining operation for 2 hours	
		04	6 hours		After heating stopped or after heating thermostat OFF, fan remaining operation for 6 hours	
12	Setting temperature offset at the time of heating	01	No offset	○		
		02	Setting temperature offset + 3.0 °C		The setting temperature at the time of heating is offset by +3.0 °C.	
		03	Setting temperature offset + 2.0 °C		The setting temperature at the time of heating is offset by +2.0 °C.	
		04	Setting temperature offset + 1.0 °C		The setting temperature at the time of heating is offset by +1.0 °C.	
13	Heating fan controller	01	Low fan speed	※ Note 1	At the time of heating thermostat OFF, operate with low fan speed.	
		02	Setting fan speed		At the time of heating thermostat OFF, operate with the setting fan speed.	
		03	Intermittent operation	※ Note 1	At the time of heating thermostat OFF, intermittently operate.	
		04	Fan off		At the time of heating thermostat OFF, a fan will be stopped. When the remote control thermistor is enabled, automatically set to "Fan off". Do not set at the time of the indoor unit thermistor.	
14	Return air temperature offset	01	No offset	○		
		02	Return air temperature offset +2.0 °C		Offset the return air temperature of the indoor unit by +2.0 °C.	
		03	Return air temperature offset +1.5 °C		Offset the return air temperature of the indoor unit by +1.5 °C.	
		04	Return air temperature offset +1.0 °C		Offset the return air temperature of the indoor unit by +1.0 °C.	
		05	Return air temperature offset -1.0 °C		Offset the return air temperature of the indoor unit by -1.0 °C.	
		06	Return air temperature offset -1.5 °C		Offset the return air temperature of the indoor unit by -1.5 °C.	
		07	Return air temperature offset -2.0 °C		Offset the return air temperature of the indoor unit by -2.0 °C.	

Note 1: The symbol "※" in the initial setting varies depending upon the indoor unit and the outdoor unit to be connected, and this is automatically determined as follows:

Swth No. Function No.	Function	Setting	Product model
SW1-6	"FAN SPEED" button	"FAN SPEED" button prohibited	Product model whose indoor fan speed is only one step
		"FAN SPEED" button enabled	Product model whose indoor fan speed is two steps or three steps
Remote control function 01	Indoor unit fan speed	Fan speed: three steps	Product model whose indoor unit fan speed is three steps
		Fan speed: two steps (Hi-Lo) Fan speed: two steps (Hi-Me) Fan: one step	Product model whose indoor unit fan speed is two steps
Remote control function 06	"Auto" operation setting	"Auto" operation enabled	Product model where "Auto" mode is selectable
		"Auto" operation disabled	Product model without "Auto" mode
Indoor unit function 13	Heating fan control	Low fan speed	Product model except FDUS
		Intermittent operation	FDUS

Note 2: Fan speed of "High speed" setting

Fan speed setting	Indoor unit fan speed setting		
	■■■■■ - ■■■ - ■■	■■■■■ - ■■	■■■■■ - ■■
Standard	Hi - Mid - Lo	Hi - Lo	Hi - Mid
High speed 1・2	UHi - Hi - Mid	UHi - Mid	UHi - Hi


Initial setting of some indoor unit is "High speed".

Note 3: As for plural indoor unit, set indoor functions to each master and slave indoor unit. But only master indoor unit is received the setting change of indoor unit function "07 Operation permission/prohibition" and "08 External input".

7. How to set functions by button operation

- (1) Stop air-conditioner, and simultaneously press **AIR CON No.** and **MODE** buttons at the same time for over three seconds.


The function number "01" blinks in the upper right.

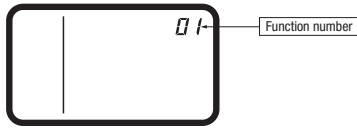

- (2) Press **TEMP**▲ or **TEMP**▼ button. Select the function number.

- (3) Press **MODE** button. Decide the function number.

- (4) [In the case of selecting the remote control function (01-06)]
 - ① The current setting number of the selected function number blinks (Example)
Function number: "01" (lighting)
Setting number: "01" (blinking)

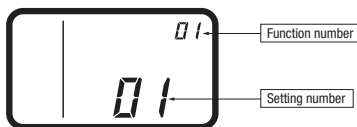


- (2) Press **TEMP**▲ or **TEMP**▼ button. Select the setting number.

- (3) Press **MODE** button. The setting is completed.

Light is on for approximately 3 to 20 seconds while data of the decided function No. and setting No. is transmitted.

(Example)

Function number: "01" (lighting for 3 to 20 seconds)
Setting number: "01" (lighting for 3 to 20 seconds)

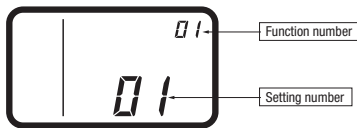


Then, the screen goes back to the function number blinking indication (1), if the setting is sequentially conducted, continue with the same procedures. If the setting is finished, proceed to (5).

- (5) Press **ON/OFF** button. The setting is completed.

- Even if **ON/OFF** button is pressed during setting, the setting is ended. However, any details where the setting has not been completed will be ineffective.
- The setting contents are stored in the control, and even if the power failure occur, this will not be lost.

[Confirmation method for current setting]

According to the operation, the "setting number" displayed first after selecting "function number" and pressing **MODE** button is the currently set content. (However, in the case of selecting "U ALL" (all units), the setting number of the lowest number among the indoor units is displayed.)

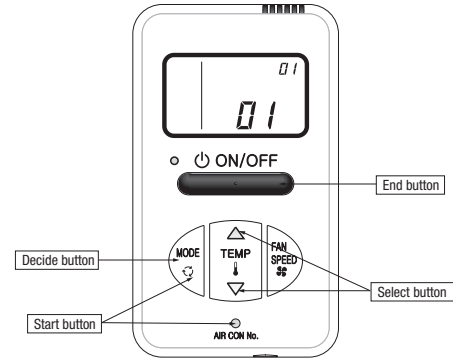

[In the case of selecting the indoor unit function (07-14)]

- ① "88" blinks on the temperature setting indicators.


(blinking for approximately 2 to 10 seconds while data are read)



After that, the current setting number of the selected function number blinks.

(Example)

Function number: "07" (lighting)
Setting number: "01" (blinking)

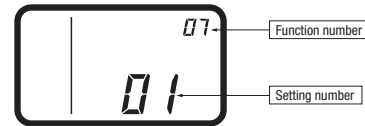


Proceed to ②.

[Note]

- a. In the case of connecting one remote control to plural indoor units, the display will be as follows:

Indoor unit No. display: "U 000" (blinking)

(Display the lowest number among the connected indoor units.)

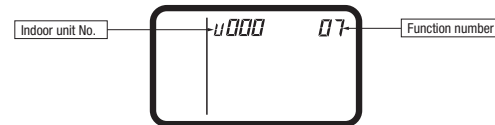

- b. Press **TEMP**▲ or **TEMP**▼ button.

Select the indoor unit No. to be set.

If "U ALL" is selected, the same setting can be set to all units.

- c. Press **MODE** button.

Decide the indoor unit No.

"88" blinks on the temperature setting indicators. (blinking for 2 to 10 seconds while data is read)

When **AIR CON No.** button is pressed, go back to the indoor unit selection display (for example, "U 000" blinking).

- (2) Press **TEMP**▲ or **TEMP**▼ button.

Select the setting number

- (3) Press **MODE** button.

The setting is completed.


Light is on for approximately 3 to 20 seconds while data of the decided function No. and setting No. is transmitted.

(Example)

Indoor unit No.: "U 000" (lighting for 3 to 20 seconds)

Function number: "07" (lighting for 3 to 20 seconds)

Setting number: "01" (lighting for 3 to 20 seconds)

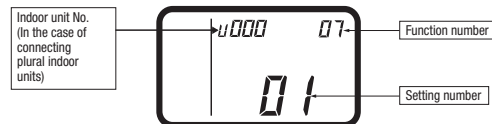

Then, the screen goes back to the function number blinking indication (1), if the setting is sequentially conducted, continue with the same procedures. If the setting is finished, proceed to (5).

11.5 Filter kit (FDUM series)

PJZ012D076A 

This manual contains installation points and operating instructions for the filter kit manufactured by MHI. Carry out the work following the instructions below.

This manual also contains information on the usage after installation, so keep this manual properly with USER'S MANUAL provided with the indoor unit.







 **CAUTION**

- After unpacking, carry out this work on the ground.
- Do not carry out the work during operation, or there is a danger of being entangled in the rotating parts and getting injured.
- Clean the air filter regularly.
- Be sure to entrust qualified serviceman to performance on the air filter.
- Be sure to cut off the power and stop the unit before performing maintenance.

1. Table of filter kit parts No. and corresponding object models


	Small model	Medium model	Large model
Single type	40, 50	60, 71	100 - 140
Multi type	22 - 56	71, 90	112 - 160
Filter Kit	UM-FL1EF	UM-FL2EF	UM-FL3EF

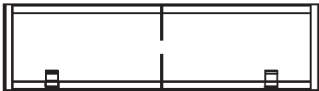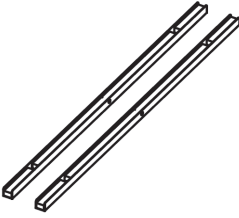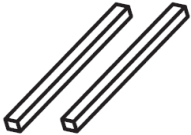2. Parts list of filter kit

Filter	Rail	Insulation
		
1pc	2pc	2pc
Bracket	Parts set (screw)	
		
1pc	(small and medium model : 5pcs.)	(large model : 7pcs.)
	1pc	


3. Installation Points

(1) Stick the insulation on both inner sides of the duct, leaving no space up and down.


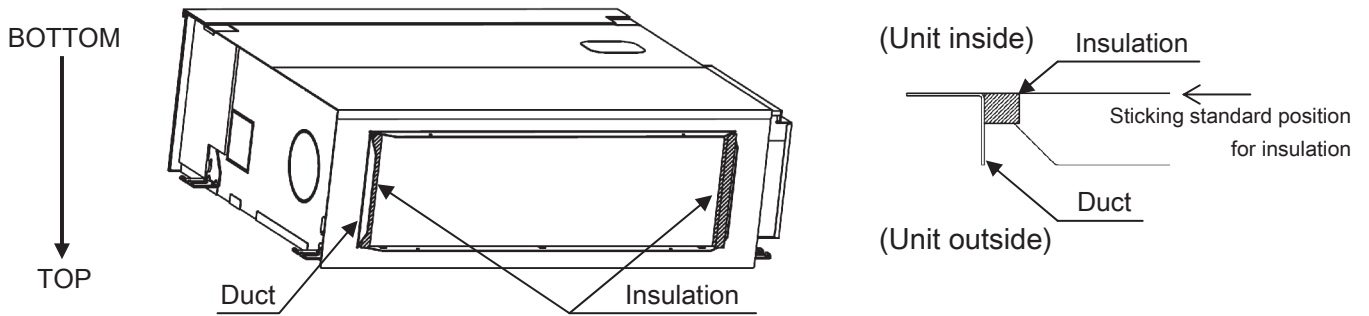


(*) After unpacking, bottom side of the unit is located at the upper side.

(2) Install the rail on both inner sides of the duct with the screw.

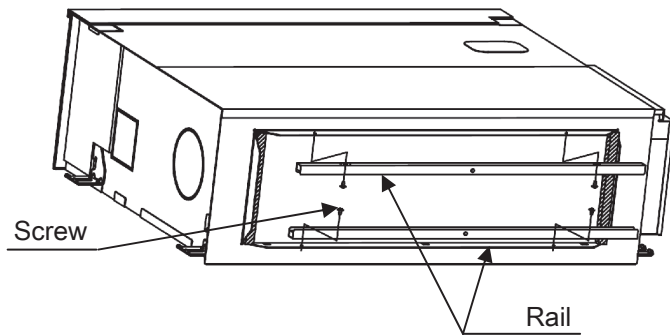


(3) Install the air filter on the rails.

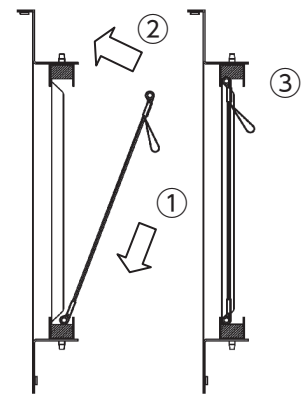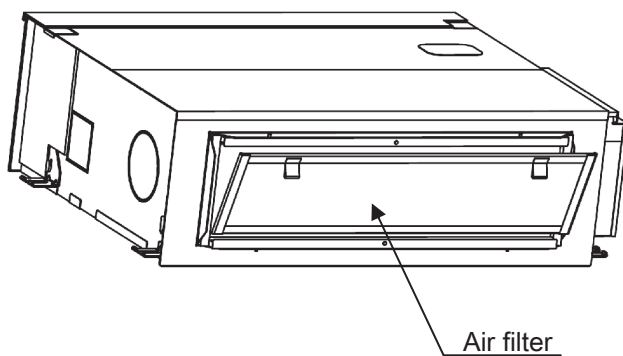

Installation procedure

(4) Install the bracket on the rail with the screw.

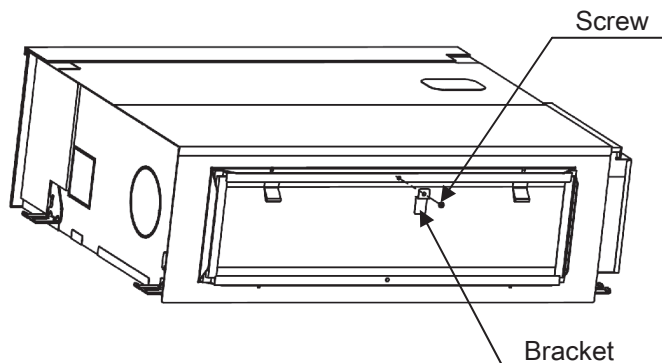

(**) When the unit is installed, bottom side of the unit is located at the lower side.

11.6 Interface kit (SC-BIKN2-E)

※ When RC-EX3 is connected, please use SC-BIKN2-E by all means.

RKZ012A099

Accessories included in package

Be sure to check all the accessories included in package.

No.	Part name	Quantity
①	Indoor unit's connection cable (cable length: 1.8m)	1
②	Wood screws (for mounting the interface: ø4x 25)	2
③	Tapping screws (for the cable clamp and the interface mounting bracket)	3
④	Interface mounting bracket	1
⑤	Cable clamp (for the indoor unit's connection cable)	1
⑥	CnT terminal connection cable (total cable length: 0.5m)	1

Safety precautions

Before use, please read these Safety precautions thoroughly before installation.

- All the cautionary items mentioned below are important safety related items to be taken into consideration, so be sure to observe them at all times.

Warning Incorrect installation could lead to serious consequences such as death, major injury or environmental destruction.

- Symbols used in these precautions



Always go along these instruction.

- After completed installation, carry out trial operation to confirm no anomaly, and ask the user to keep this installation manual in a good place for future reference.


Warnings




- **Installation must be carried out by a qualified installer.**
If you install it by yourself, it may cause an electric shock, fire and personal injury, as a result of a system malfunction.
- **Install it in full accordance with the installation manual.**
Incorrect installation may cause an electric shock, fire and personal injury.
- **Electrical work must be carried out by a qualified electrician in accordance with the technical standard for electrical equipment, the indoor wiring standard and this installation manual.**
Incorrect installation may cause an electric shock, fire and personal injury.
- **Use the specific cables for wiring. And connect all the cables to terminals or connectors securely and clamp them with cable clamps in order for external forces not to be transmitted to the terminals directly.**
Incomplete connection may cause malfunction, and lead to heat generation and fire.
- **Use the original accessories and specified components for installation.**
If the parts other than those prescribed by us are used, it may cause an electric shock, fire and personal injury.

Connecting the indoor unit's connection cable to the interface

- ① Remove the upper case of the interface.
 - Remove 2 screws from the interface casing before removal of upper casing.
- ② Connect the indoor unit's connection cable to the interface.
 - Connect the connector of the indoor unit connection cable to the connector on the interface's circuit board.
- ③ Fix the indoor unit's connection cable with the cable clamp.
 - Cable can be brought in from the top or from the back.
 - Cut out the punch-outs for the connection cables running into the casing with cutter.
- ④ Connect the indoor unit's connection cable to the indoor control PCB.
 - Connect the indoor unit's connection cable to the indoor control PCB securely.
 - Clamp the connection cable to the indoor control box securely with the cable clamp provided as an accessory.
 - Regarding the cable connection to the indoor unit, refer to the installation manual for indoor unit.

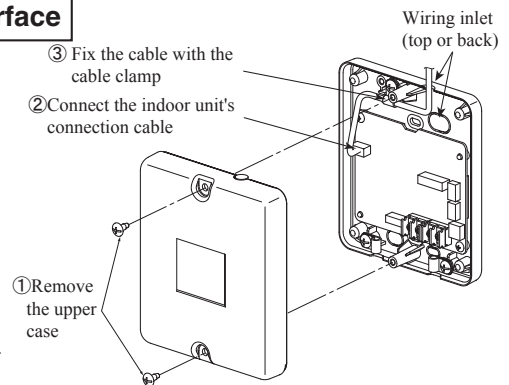

Name of each part of the interface

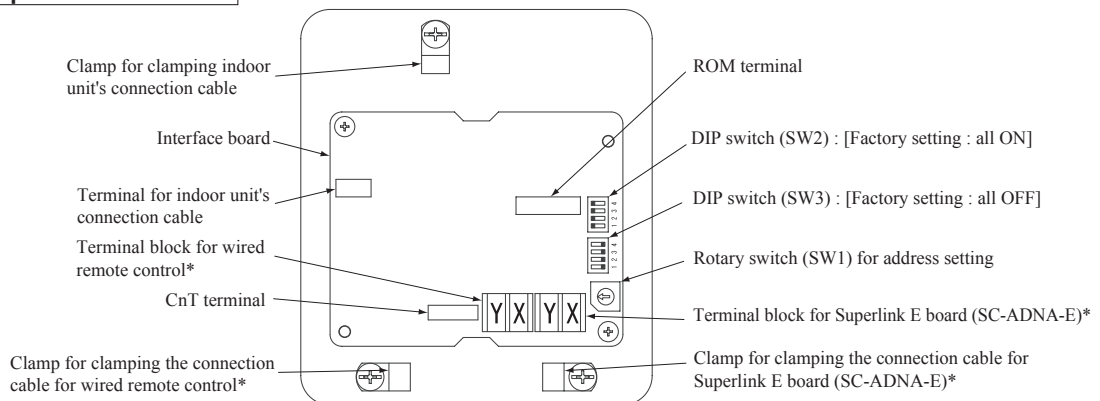

*Either the connection cables of Superlink E board (SC-ADNA-E) or of wired remote control is connectable.

Switch	Setting	Function	Switch	Setting	Function
SW2-1	ON**	CnT level input	SW2-3	ON**	External input (CnT input)
	OFF	CnT pulse input		OFF	Operation permission/prohibition (CnT input)
SW2-2	ON**	Wired remote control : Enable	SW2-4	ON**	Annual cooling : Enable***
	OFF	Wired remote control : Disable		OFF	Annual cooling : Disable***

** Factory setting



*** Indoor fan control at low outdoor air temperature in cooling

Installation of the interface

- Install the interface within the range of the connection cable length (approximately 1.3m) from the indoor unit.
 - Be sure not to extend the connection cable on site. If the connection cable is extended, malfunction may occur.
 - Fix the interface on the wall, pillar or the like.
- Don't install the interface and wired remote control at the following places.
- Places exposed to direct sunlight
 - Places near heating devices
 - High humidity places
 - Surfaces where are enough hot or cold to generate condensation
 - Places exposed to oil mist or steam directly
 - Uneven surface


Mounting the interface directly on a wall

- ① Mount the lower casing of the interface on a flat surface with wood screws provided as standard accessory.
- ② Mount the upper casing.

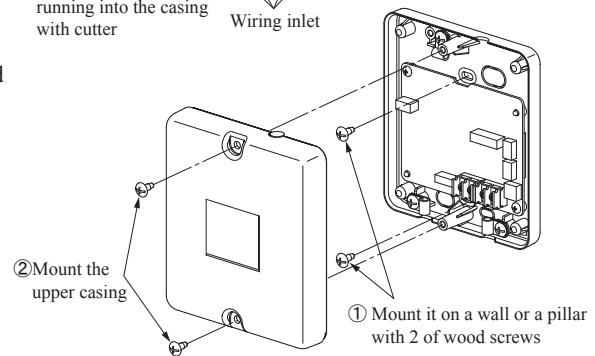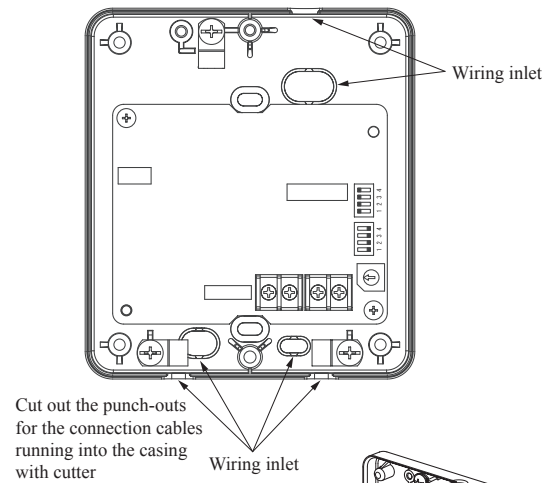


Recessing the interface in the wall

- ① Recess the electrical box (procured locally) and connection cables in the wall.
- ② Mount the lower casing of the interface to the electrical box with M4 screws (procured locally).
- ③ Mount the upper casing.

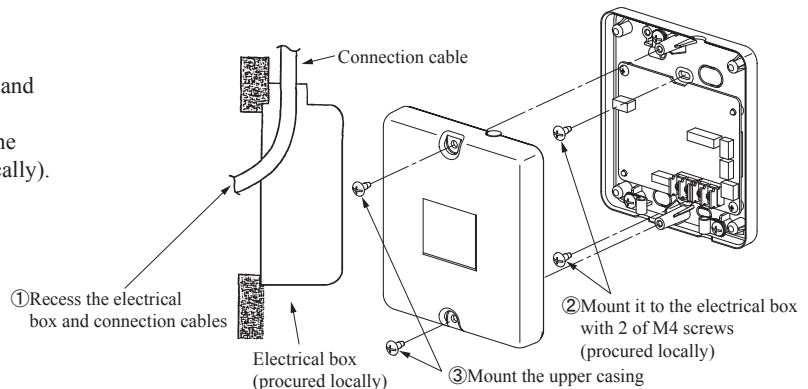

Mounting the interface with the mounting bracket

- ① Mount the upper casing.
- ② Mount the mounting bracket to the interface with tapping screws provided as standard accessory.
- ③ Mount the mounting bracket on wall or the like with wood screws provided as standard accessory.

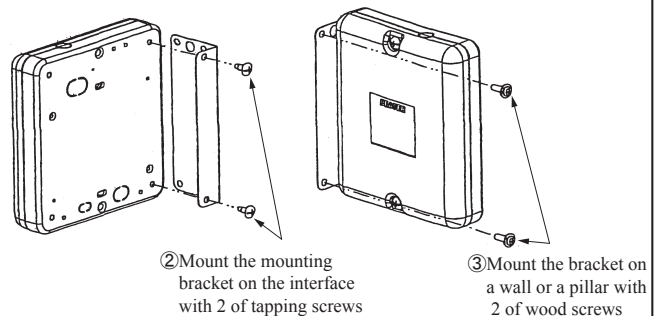


Installation check items

- Are the connection cables connected securely to the terminal blocks and connectors?
- Are the thickness and length of the connection cables conformed with the standard?

Functions of CnT connector

It is available to operate the air-conditioner and to monitor the operation status with the external control unit (remote display) by sending the input/output signal through CnT connector on the indoor control PCB.

- ① Connect a external remote control unit (procured locally) to CnT terminal.
- ② In case of the pulse input, switch OFF the DIP switch SW2-1 on the interface PCB.
- ③ When setting operation permission/prohibition mode, switch OFF the DIP switch SW2-3 on the interface PCB.

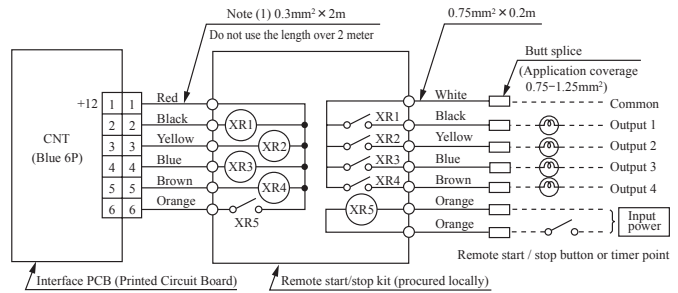


Input/Output	Function	Output signal		Content
		Relay	ON/OFF	
Output 1	Operation output	XR ₁	ON	During air-conditioner operation
Output 2	Heating output	XR ₂	ON	During heating operation
Output 3	Compressor operation output	XR ₃	ON	During compressor running
Output 4	Malfunction output	XR ₄	ON	During anomalous stop

- XR₁₋₄ are for the DC 12V relay
- XR₅ is a DC 12/24V or AC 220-240V relay
- CnT connector (local) maker, model

Connector	Molex	5264-06
Terminals	Molex	5263T

Input/Output	Function	SW2-1		SW2-3		Air-conditioner	Operation by remote control			
		Setting		Input signal						
				Level/Pulse	XR ₅					
Input	External control input	ON*	Level input	ON*	Level	OFF→ON ON→OFF	External input	ON OFF	Allowed	
				OFF	Level	OFF→ON ON→OFF	Operation permission Operation prohibition	OFF		Not allowed
		OFF	Pulse input	ON*	Pulse	OFF→ON	External input	OFF→ON ON→OFF	ON OFF	Allowed
				OFF	Level	OFF→ON ON→OFF	Operation permission Operation prohibition	ON OFF	Not allowed	

* Factory setting

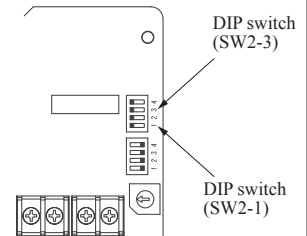


In case of the remote control (RC-EX3 or later model), the external outputs (1 – 4) and the external input can be changed using the function setting of remote control. For the setting method, refer to the installation manual. Also refer to the technical manual to know how it is adapted to the function setting for the external outputs and input, at the indoor unit side.

Connection of Superlink E board


Regarding the connection of Superlink E board, refer to the installation manual of Superlink E board.

For electrical work, power source for all of units in the Superlink system must be turned OFF.

- ① Switch ON the DIP switch SW2-2 (Factory setting: ON) on the interface PCB.
Caution: Wireless remote control attached to the indoor unit can be used in parallel, after connecting the wired remote control. However, some of functions other than the basic functions such as RUN/STOP, temperature setting, etc. may not work properly and may have a mismatch between the display and the actual behavior.

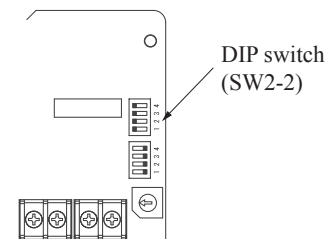

- ② Wiring connection between the interface and the Superlink E board.

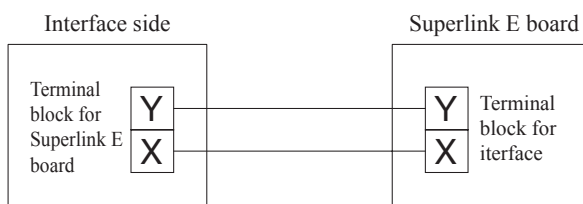

No.	Names of recommended signal wires
1	Shielded wire
2	Vinyl cabtyre round cord
3	Vinyl cabtyre round cable
4	Vinyl insulated wire vinyl sheathed cable for control

Within 200 m 0.5 mm² × 2 cores
 Within 300 m 0.75 mm² × 2 cores
 Within 400 m 1.25 mm² × 2 cores
 Within 600 m 2.0 mm² × 2 cores

- ③ Clamp the connection cables with cable clamps.


Connection of wired remote control

Regarding the connection of wired remote control, refer to the installation manual of wired remote control.

- Switch ON the DIP switch SW2-2 (Factory setting : ON) on the interface PCB.

Caution: Wireless remote control attached to the indoor unit can be used in parallel, after connecting the wired remote control. However, some of functions other than the basic functions such as RUN/STOP, temperature setting, etc. may not work properly and may have a mismatch between the display and the actual behavior.

- Wiring connection between the interface and the wired remote control.

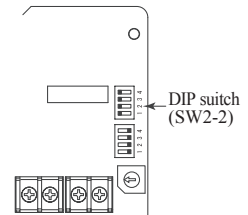


Installation and wiring of wired remote control

- Install the wired remote control with reference to the attached installation manual of wired remote control.
 - 0.3mm² × 2 cores cable should be used for the wiring of wired remote control.
 - Maximum length of wiring is 600m.
If the length of wiring exceeds 100m, change the size of cable as mentioned below.
100m-200m: 0.5mm² × 2 cores, 300m or less: 0.75mm² × 2 cores, 400m or less: 1.25mm² × 2 cores, 600m or less: 2.0mm² × 2 cores
However, cable size connecting to the terminal of wired remote control should not exceed 0.5mm². Accordingly if the size of connection cable exceeds 0.5mm², be sure to downsize it to 0.5mm² at the nearest section of the wired remote control and waterproof treatment should be done at the connecting section in order to avoid contact failure.
 - Don't use the multi-core cable to avoid malfunction.
 - Keep the wiring of wired remote control away from grounding (Don't touch it to any metal frame of building, etc.).
 - Connect the connection cables to the terminal blocks of the wired remote control and the interface securely (No polarity).
- Clamp the connection cables with cable clamps.

Control of multiple units by a single wired remote control

Multiple units (up to 16) can be controlled by a single wired remote control. In this case, all units connected with a single wired remote control will operate under the same mode and same setting temperature.

- Connect all the interface with 2 cores cables of wired remote control line.
- Set the address of indoor unit for remote control communication from "0" to "F" with the rotary switch SW1 on the interface PCB.
- After turning the power ON, the address of indoor unit can be displayed by pressing [AIR CON No.] button on the wired remote control.
Make sure all indoor units connected are displayed in order by pressing [▲] or [▼] button.

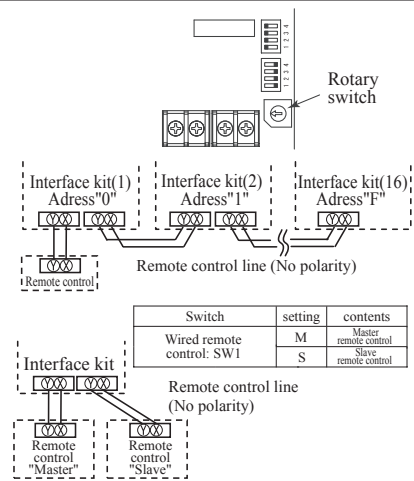

Master/Slave setting wired when 2 of wired remote control are used


Maximum two wired remote control can be connected to one indoor unit (or one group of indoor units)

- Set the DIP switch SW1 on the wired remote control to "Slave" for the slave remote control. (Factory setting : Master)
○ Caution : Remote control sensor of the slave remote control is invalid.

- When using the wireless remote control in parallel with the wired remote control; Since temperature setting range of wired remote control is different from that of wireless remote control, please adjust the setting range of wired remote control to be the same setting range of wireless remote control by following procedure. (The set temperature may not be displayed correctly on the wireless remote control, unless change of temperature setting range is done.)
Changing procedure of temperature setting range is as follows.

How to set upper and lower limit of temperature setting range

- Stop the air-conditioner, and press [○] (SET) and [▽] (MODE) button at the same time for 3 seconds or more.
The indication changes to "FUNCTION SET ▼"
- Press [▼] button once, and change to the "TEMP RANGE ▲" indication.
- Press [○] (SET) button, and enter the temperature range setting mode.
- Confirm that the "Upper limit ▼" is shown on the display.
- Press [○] (SET) button to fix.
- ① Indication: "UPPER 28°C ▼ ▲"
② Select the upper limit value 30°C with temperature setting button [▲]. "UPPER 30°C ▼" (blinking)
③ Press [○] (SET) button to fix. "UPPER 30°C" (Displayed for two seconds)
After the fixed upper limit value displayed for two seconds, the indication will return to "UPPER LIMIT ▼".
- Press [▼] button once, "LOWER LIMIT ▲" is selected, press [○] (SET) button to fix.
① Indication: "LOWER 20°C ▼ ▲"
② Select the lower limit value 18°C with temperature setting button [▼]. "LOWER 18°C ▲" (blinking)
③ Press [○] (SET) button to fix. "LOWER 18°C" (Displayed for two seconds)
After the fixed lower limit value displayed for two seconds, the indication will return to "LOWER LIMIT ▼"
- Press [ON/OFF] button to finish.
Temperature setting range

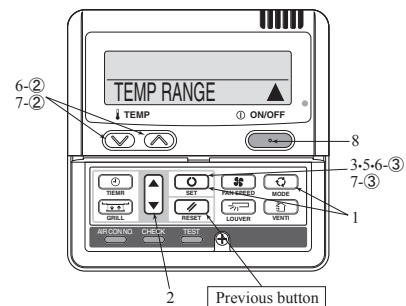

- It is possible to quit in the middle by pressing [ON/OFF] button, but the change of setting is incompleated.
- During setting, if pressing [RESET] button, it returns to the previous screen.

Mode	Temperature setting range
Cooling, Heating, Dry, Auto	18-30°C

11.7 Superlink E board (SC-ADNA-E)

PJZ012D029K 

- Read and understand the instructions completely before starting installation.
- Refer to the instructions for both indoor and outdoor units.

Safety precautions

- Carefully read “Safety precautions” first. Follow the instructions for installation.
- Precautions are grouped into “Warning⚠” and “Caution⚠”. The “Warning⚠” group includes items that may lead to serious injury or death if not observed. The items included in the “Caution⚠” group also may lead to serious results under certain conditions. Both groups are crucial for safety installation. Read and understand them carefully.
- After installation, conduct the test operation of the device to check for any abnormalities. Describe how to operate the device to the customer following the installation instruction manual. Instruct the customer to keep this installation instruction for future reference.

⚠Warning

- This device should be installed by the dealer where you purchase the device or a licensed professional shop. If the device is incorrectly installed by the customer, it may result in electric shock or fire.
- Install the device carefully following the installation instruction. If the device is incorrectly installed, it may result in electric shock or fire.
- Use the accessory parts and specified parts for installation. If any parts that do not match the specifications are used, it may result in electric shock or fire.
- A person with the electrical service certification should conduct the service based on the “Technical standards for electrical facilities”, “Electrical Wiring Code”, and the installation instruction. If the work is done incorrectly, it may result in electric shock or fire.
- Wiring should be securely connected using the specified types of wire. No external force on the wire should be applied to any terminals. If a secure connection is not achieved, it may result in electric shock or fire.











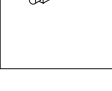

⚠Caution

- Provide ground connection.
The ground line should never be connected to the gas supply piping, the water supply piping, the lightning conductor rod, nor the telephone ground. If the grounding is improper, it may result in electric shock.
- Do not install the device in the following locations.
 1. Where there is mist/spray of oil or steam such as kitchens.
 2. Where there is corrosive gases such as sulfurous acid gas.
 3. Where there is a device generating electromagnetic waves.
These may interfere with the control system resulting in the device becoming uncontrollable.
 4. Where flammable volatile materials such as paint thinner and gasoline may exist or where they are handled. This may cause a fire.

1 Application

Indoor-to-outdoor three core communication specification type 3 (since October 2007)

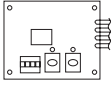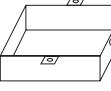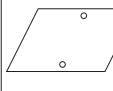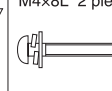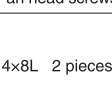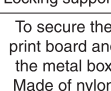2 Accessories

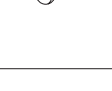			 M4x8L 2 pieces
			
 φ4x8L 2 pieces	 To secure the print board and the metal box Made of nylon 4 pieces		

3 Function

Allowing the central control SL1N-E, SL2N-E, and SL4N-AE/BE to control and monitor the commercial air-conditioner unit.

4 Control switching


Settings can be changed by the switch SW3 on the SL E board as in the following.

Switch	Symbol	Switch	Remarks
SW3	1	ON	Master
		OFF (default)	Slave
	2	ON	Fixed previous protocol
		OFF (default)	Automatic adjustment of Superlink protocol
	3	ON	Indicates the forced operation stop when abnormality has occurred.
		OFF (default)	Indicates the status of running/stop as it is, when abnormality has occurred.
	4	ON	The hundredth address activated “1”
		OFF (default)	The hundredth address activated “0”

5 Connection Outline

Note for setting the address

- Set the address between 00 and 47 for the previous Superlink connection and between 000 and 127 for the new Superlink connection. (*1)
- Do not set the address overlapping with those of the other devices in the network. (The default is 000)

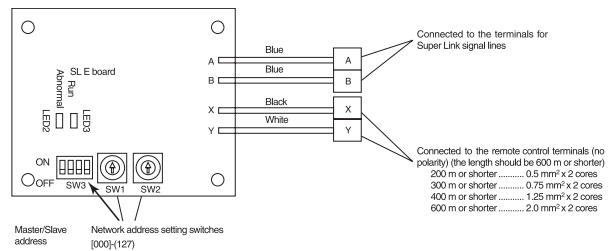

(*1) Whether the actual link is either the new Superlink or the previous Superlink depends on the models of the connected outdoor and indoor units. Consult the agent or the dealer.

Signal line specification

Communication method	Previous Superlink	New Superlink
Line type	MVVS	MVVS
Line diameter	0.75 - 1.25mm ²	0.75/1.25mm ²
Signal line (total length)	up to 1000m	up to 1500/1000m (*2)
Signal line (maximum length)	up to 1000m	up to 1000m


(*2) Up to 1500 m for 0.75 mm², and up to 1000 m for 1.25 mm².

Do not use 2.0 mm². It may cause an error.


(*3) Connect grounding on both ends of the shielding wire.

For the grounding method, refer to the section “[6](#) Installation”.


- Set the Superlink network address with SW1 (tens place), SW2 (ones place), and SW3 (hundreds place).
- Set the SL E board SW3-1 to be ON (Master) when using this without any remote control (no wired remote controller nor wireless remote control).
- Set up the plural master/slave device using the dip switches on the indoor unit board.
- Set up the remote control master/slave device using the slide switch on the remote control board.
- Set up "0" to "F" using the address rotary switch on the indoor unit board when controlling the indoor unit with the multiple remote control.

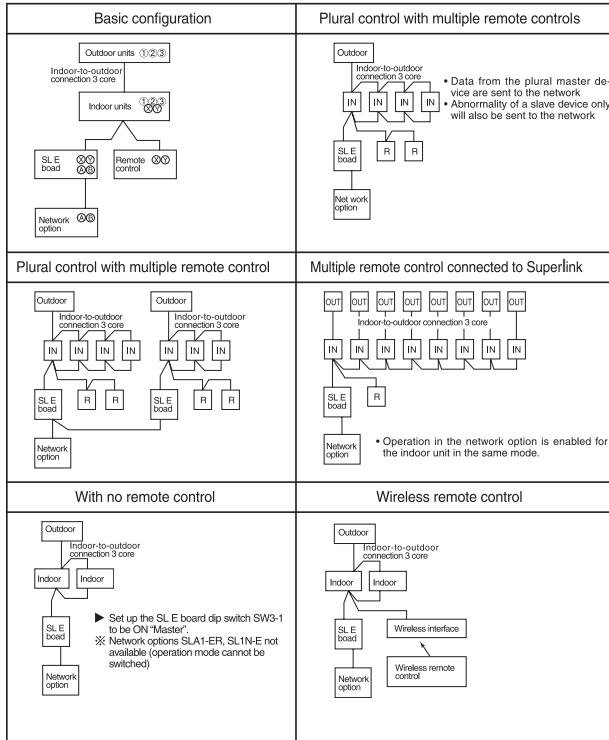

Connect grounding. Connect grounding for the power line to Ground ①, and grounding for the signal line to Ground ② or to the Ground on the indoor unit control box.

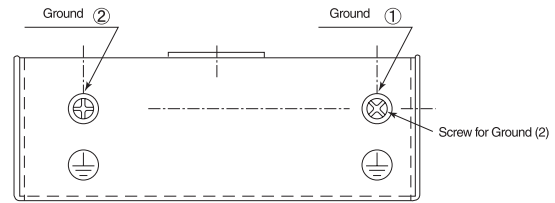

- When connecting to the indoor unit control box (ceiling-concealed type and FDT type only):
 - Mount the SL E board in the control box using the locking supports.
 - Remove 6 bands from the box and put the wiring through the bands to be secured.

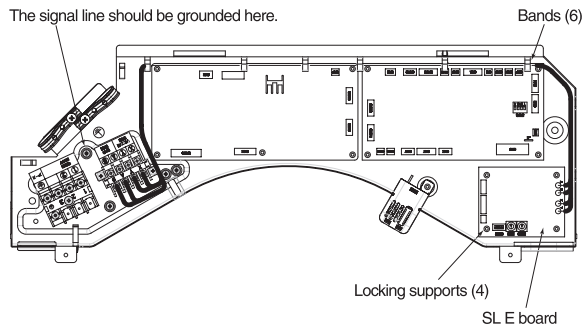

Electrical shock hazard! Make sure to turn the power off for servicing. Be cautious so that no abnormal force should be applied to the wiring. Do not let the SL E board hung by the wiring. Do not damage the board with a screw driver. The board is sensitive to static electricity. Release the static electricity of your body before servicing. (you can do this by touching the control board which is grounded).


Location of installation

Install the device at the location where there are no electromagnetic waves nor where there is water and dust. The specified temperature range of the device is 0 to 40°C. Install the device at the location where the ambient temperature stays within the range. If it exceeds the specification, make sure to provide solution such as installing a cooling fan. When used outside of the range, it may cause abnormal operation.


6 Installation

- When using the metal box (mounted on the indoor unit / mounted on the back of the remote control):
 - Mount the SL E board in the metal box using the locking supports.
 - Wiring should go through the provided grommet since then through the wiring to the hole on the Metal box.


Secure the grommet after inserting the grommet into the Metal box as shown in below figure, then tie the wiring at the outlet of the unit using a binding band.

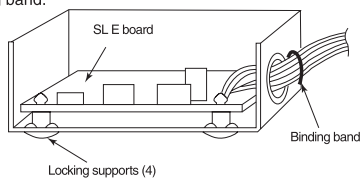

- ▲ When installed outside the indoor unit, put the metal cover on.

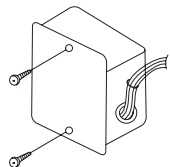

- ▲ When installed on the back of the remote control, mount it directly on the remote control bottom case.

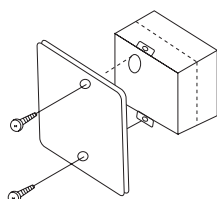

7 Indicator display

Check the LED 3 (green) and LED 2 (red) on the SL E board for flashing.

SL E board LEDs		Inspection mode	Display on the integrated network control device
Red	Green		
Off	Flashing	Normal communication	
Off	Off	<ul style="list-style-type: none"> Disconnection in the remote control communication line (X or Y) Short-circuit in the remote control communication line (between X and Y) Faulty indoor unit remote control power Faulty remote control communication circuit Faulty CPU on SL E board 	No corresponding unit number
One flash	Flashing	<ul style="list-style-type: none"> Disconnection in the Superlink signal line (A or B) Short-circuit in the Superlink signal line (between A and B) Faulty Superlink signal circuit 	
Two flashes	Flashing	<ul style="list-style-type: none"> Faulty address setting for the SL E board (Set up the address for previous SL E board : more than 48 new SL E board : more than 128) 	
Three flashes	Flashing	<ul style="list-style-type: none"> SL E board parent not set up when used without a remote control Faulty remote control communication circuit 	E1
Four flashes	Flashing	<ul style="list-style-type: none"> Address overlapping for the SL E board and the Superlink network connected indoor unit 	E2
Off	Flashing	<ul style="list-style-type: none"> Number of connected devices exceeds the specification for the multiple indoor unit control 	E10

12. TECHNICAL INFORMATION

(1) Ceiling cassette-4 way type (FDT)

Model FDT71VNPVG

Information to identify the model(s) to which the information relates to:		If function includes heating: Indicate the heating season the information relates to. Indicated values should relate to one heating season at a time. Include at least the heating season 'Average'.	
Indoor unit model name	FDT71VG		
Outdoor unit model name	FDC71VNP		
Function(indicate if present)		Average(mandatory)	
cooling	Yes	Warmer(if designated)	No
heating	Yes	Colder(if designated)	No
Item	symbol	value	unit
Design load			
cooling	Pdesignc	7.1	kW
heating / Average	Pdesignh	5.7	kW
heating / Warmer	Pdesignh	-	kW
heating / Colder	Pdesignh	-	kW
Declared capacity at outdoor temperature Tdesignh		Back up heating capacity at outdoor temperature Tdesignh	
heating / Average (-10°C)	Pdh	5.70	kW
heating / Warmer (2°C)	Pdh	-	kW
heating / Colder (-22°C)	Pdh	-	kW
Declared capacity for cooling, at indoor temperature 27(19)°C and outdoor temperature Tj		Declared energy efficiency ratio, at indoor temperature 27(19)°C and outdoor temperature Tj	
Tj=35°C	Pdc	7.10	kW
Tj=30°C	Pdc	5.20	kW
Tj=25°C	Pdc	3.40	kW
Tj=20°C	Pdc	1.50	kW
Declared capacity for heating / Average season, at indoor temperature 20°C and outdoor temperature Tj		Declared coefficient of performance / Average season, at indoor temperature 20°C and outdoor temperature Tj	
Tj=-7°C	Pdh	5.00	kW
Tj=2°C	Pdh	3.00	kW
Tj=7°C	Pdh	2.00	kW
Tj=12°C	Pdh	1.30	kW
Tj=bivalent temperature	Pdh	5.70	kW
Tj=operating limit	Pdh	5.10	kW
Declared capacity for heating / Warmer season, at indoor temperature 20°C and outdoor temperature Tj		Declared coefficient of performance / Warmer season, at indoor temperature 20°C and outdoor temperature Tj	
Tj=2°C	Pdh	-	kW
Tj=7°C	Pdh	-	kW
Tj=12°C	Pdh	-	kW
Tj=bivalent temperature	Pdh	-	kW
Tj=operating limit	Pdh	-	kW
Declared capacity for heating / Colder season, at indoor temperature 20°C and outdoor temperature Tj		Declared coefficient of performance / Colder season, at indoor temperature 20°C and outdoor temperature Tj	
Tj=-7°C	Pdh	-	kW
Tj=2°C	Pdh	-	kW
Tj=7°C	Pdh	-	kW
Tj=12°C	Pdh	-	kW
Tj=bivalent temperature	Pdh	-	kW
Tj=operating limit	Pdh	-	kW
Tj=-15°C	Pdh	-	kW
Bivalent temperature		Operating limit temperature	
heating / Average	Tbiv	-10	°C
heating / Warmer	Tbiv	-	°C
heating / Colder	Tbiv	-	°C
heating / Average		heating / Average	
heating / Warmer		heating / Warmer	
heating / Colder		heating / Colder	
Cycling interval capacity		Cycling interval efficiency	
for cooling	Pcycc	-	kW
for heating	Pcyhc	-	kW
for cooling		for cooling	
for heating		for heating	
Degradation coefficient		Degradation coefficient	
cooling	Cdc	0.25	-
cooling		heating	
cooling		heating	
Electric power input in power modes other than 'active mode'		Annual electricity consumption	
off mode	Poff	10	W
standby mode	Psb	10	W
thermostat-off mode	Pto	13	W
crankcase heater mode	Pck	0	W
cooling		cooling	
heating / Average		heating / Average	
heating / Warmer		heating / Warmer	
heating / colder		heating / colder	
Capacity control(indicate one of three options)		Other items	
fixed	No	Sound power level(indoor)	Lwa 62 dB(A)
staged	No	Sound power level(outdoor)	Lwa 67 dB(A)
variable	Yes	Global warming potential	GWGP 1975 kgCO2eq.
		Rated air flow(indoor)	- 1680 m3/h
		Rated air flow(outdoor)	- 2160 m3/h
Contact details for obtaining more information	Name and address of the manufacturer or of its authorised representative.		
	Mitsubishi Heavy Industries Air-Conditioning Europe, Ltd. 5 The Square, Stockley Park, Uxbridge, Middlesex, UB11 1ET, United Kingdom		

Model FDT90VNP1VG

Information to identify the model(s) to which the information relates to:				If function includes heating: Indicate the heating season the information relates to. Indicated values should relate to one heating season at a time. Include at least the heating season 'Average'.			
Indoor unit model name		FDT100VG		Average (mandatory)		Yes	
Outdoor unit model name		FDC90VNP1		Warmer (if designated)		No	
Function (indicate if present)				Colder (if designated)			
cooling		Yes					
heating		Yes					
Item				Item			
		symbol value unit				symbol value class	
Design load				Seasonal efficiency and energy efficiency class			
cooling		Pdesignc 9.0 kW		cooling		SEER 6.78 A++	
heating / Average		Pdesignh 8.1 kW		heating / Average		SCOP/A 4.12 A+	
heating / Warmer		Pdesignh - kW		heating / Warmer		SCOP/W - -	
heating / Colder		Pdesignh - kW		heating / Colder		SCOP/C - -	
				unit			
Declared capacity at outdoor temperature Tdesignh				Back up heating capacity at outdoor temperature Tdesignh			
heating / Average (-10°C)		Pdh 8.10 kW		heating / Average (-10°C)		elbu 0 kW	
heating / Warmer (2°C)		Pdh - kW		heating / Warmer (2°C)		elbu - kW	
heating / Colder (-22°C)		Pdh - kW		heating / Colder (-22°C)		elbu - kW	
Declared capacity for cooling, at indoor temperature 27(19)°C and outdoor temperature Tj				Declared energy efficiency ratio, at indoor temperature 27(19)°C and outdoor temperature Tj			
Tj=35°C		Pdc 9.00 kW		Tj=35°C		EERd 3.37 -	
Tj=30°C		Pdc 6.60 kW		Tj=30°C		EERd 5.10 -	
Tj=25°C		Pdc 4.30 kW		Tj=25°C		EERd 8.20 -	
Tj=20°C		Pdc 2.20 kW		Tj=20°C		EERd 12.50 -	
Declared capacity for heating / Average season, at indoor temperature 20°C and outdoor temperature Tj				Declared coefficient of performance / Average season, at indoor temperature 20°C and outdoor temperature Tj			
Tj=-7°C		Pdh 7.10 kW		Tj=-7°C		COPd 2.85 -	
Tj=2°C		Pdh 4.30 kW		Tj=2°C		COPd 4.00 -	
Tj=7°C		Pdh 2.70 kW		Tj=7°C		COPd 5.35 -	
Tj=12°C		Pdh 1.36 kW		Tj=12°C		COPd 5.00 -	
Tj=bivalent temperature		Pdh 8.10 kW		Tj=bivalent temperature		COPd 2.50 -	
Tj=operating limit		Pdh 7.10 kW		Tj=operating limit		COPd 2.20 -	
Declared capacity for heating / Warmer season, at indoor temperature 20°C and outdoor temperature Tj				Declared coefficient of performance / Warmer season, at indoor temperature 20°C and outdoor temperature Tj			
Tj=2°C		Pdh - kW		Tj=2°C		COPd - -	
Tj=7°C		Pdh - kW		Tj=7°C		COPd - -	
Tj=12°C		Pdh - kW		Tj=12°C		COPd - -	
Tj=bivalent temperature		Pdh - kW		Tj=bivalent temperature		COPd - -	
Tj=operating limit		Pdh - kW		Tj=operating limit		COPd - -	
Declared capacity for heating / Colder season, at indoor temperature 20°C and outdoor temperature Tj				Declared coefficient of performance / Colder season, at indoor temperature 20°C and outdoor temperature Tj			
Tj=-7°C		Pdh - kW		Tj=-7°C		COPd - -	
Tj=2°C		Pdh - kW		Tj=2°C		COPd - -	
Tj=7°C		Pdh - kW		Tj=7°C		COPd - -	
Tj=12°C		Pdh - kW		Tj=12°C		COPd - -	
Tj=bivalent temperature		Pdh - kW		Tj=bivalent temperature		COPd - -	
Tj=operating limit		Pdh - kW		Tj=operating limit		COPd - -	
Tj=-15°C		Pdh - kW		Tj=-15°C		COPd - -	
Bivalent temperature				Operating limit temperature			
heating / Average		Tbiv -10 °C		heating / Average		Tol -15 °C	
heating / Warmer		Tbiv - °C		heating / Warmer		Tol - °C	
heating / Colder		Tbiv - °C		heating / Colder		Tol - °C	
Cycling interval capacity				Cycling interval efficiency			
for cooling		Pcyc - kW		for cooling		EERcyc - -	
for heating		Pcyc - kW		for heating		COPcyc - -	
Degradation coefficient				Degradation coefficient			
cooling		Cdc 0.25 -		heating		Cdh 0.25 -	
Electric power input in power modes other than 'active mode'				Annual electricity consumption			
off mode		Poff 9 W		cooling		Qce 465 kWh/a	
standby mode		Psb 9 W		heating / Average		Qhe 2756 kWh/a	
thermostat-off mode		Pto 25 W		heating / Warmer		Qhe - kWh/a	
crankcase heater mode		Pck 0 W		heating / Colder		Qhe - kWh/a	
Capacity control (indicate one of three options)				Other items			
fixed		No		Sound power level (indoor)		Lwa 63 dB(A)	
staged		No		Sound power level (outdoor)		Lwa 69 dB(A)	
variable		Yes		Global warming potential		GWP 1975 kgCO2eq.	
				Rated air flow (indoor)		- 2220 m3/h	
				Rated air flow (outdoor)		- 3780 m3/h	
Contact details for obtaining more information		Name and address of the manufacturer or of its authorised representative. Mitsubishi Heavy Industries Air-Conditioning Europe, Ltd. 5 The Square, Stockley Park, Uxbridge, Middlesex, UB11 1ET, United Kingdom					

(2) Duct connected-High static pressure type (FDU)
Model FDU71VNPVF1

Information to identify the model(s) to which the information relates to:				If function includes heating: Indicate the heating season the information relates to. Indicated values should relate to one heating season at a time. Include at least the heating season 'Average'.			
Indoor unit model name		FDU71VF1		Average (mandatory)		Yes	
Outdoor unit model name		FDC71VNP		Warmer (if designated)		No	
Function (indicate if present)				Colder (if designated)			
cooling		Yes		Colder (if designated)		No	
heating		Yes					
Item	symbol	value	unit	Item	symbol	value	class
Design load				Seasonal efficiency and energy efficiency class			
cooling	Pdesignc	7.1	kW	cooling	SEER	5.73	A+
heating / Average	Pdesignh	5.7	kW	heating / Average	SCOP/A	4.00	A+
heating / Warmer	Pdesignh	-	kW	heating / Warmer	SCOP/W	-	-
heating / Colder	Pdesignh	-	kW	heating / Colder	SCOP/C	-	-
				unit			
Declared capacity at outdoor temperature Tdesignh				Back up heating capacity at outdoor temperature Tdesignh			
heating / Average (-10°C)	Pdh	5.70	kW	heating / Average (-10°C)	elbu	0	kW
heating / Warmer (2°C)	Pdh	-	kW	heating / Warmer (2°C)	elbu	-	kW
heating / Colder (-22°C)	Pdh	-	kW	heating / Colder (-22°C)	elbu	-	kW
Declared capacity for cooling, at indoor temperature 27(19)°C and outdoor temperature Tj				Declared energy efficiency ratio, at indoor temperature 27(19)°C and outdoor temperature Tj			
Tj=35°C	Pdc	7.10	kW	Tj=35°C	EERd	2.70	-
Tj=30°C	Pdc	5.20	kW	Tj=30°C	EERd	4.30	-
Tj=25°C	Pdc	3.40	kW	Tj=25°C	EERd	7.40	-
Tj=20°C	Pdc	1.50	kW	Tj=20°C	EERd	9.80	-
Declared capacity for heating / Average season, at indoor temperature 20°C and outdoor temperature Tj				Declared coefficient of performance / Average season, at indoor temperature 20°C and outdoor temperature Tj			
Tj=-7°C	Pdh	5.00	kW	Tj=-7°C	COPd	2.50	-
Tj=2°C	Pdh	3.00	kW	Tj=2°C	COPd	3.90	-
Tj=7°C	Pdh	2.00	kW	Tj=7°C	COPd	5.40	-
Tj=12°C	Pdh	1.40	kW	Tj=12°C	COPd	6.00	-
Tj=bivalent temperature	Pdh	5.70	kW	Tj=bivalent temperature	COPd	2.40	-
Tj=operating limit	Pdh	5.10	kW	Tj=operating limit	COPd	2.10	-
Declared capacity for heating / Warmer season, at indoor temperature 20°C and outdoor temperature Tj				Declared coefficient of performance / Warmer season, at indoor temperature 20°C and outdoor temperature Tj			
Tj=2°C	Pdh	-	kW	Tj=2°C	COPd	-	-
Tj=7°C	Pdh	-	kW	Tj=7°C	COPd	-	-
Tj=12°C	Pdh	-	kW	Tj=12°C	COPd	-	-
Tj=bivalent temperature	Pdh	-	kW	Tj=bivalent temperature	COPd	-	-
Tj=operating limit	Pdh	-	kW	Tj=operating limit	COPd	-	-
Declared capacity for heating / Colder season, at indoor temperature 20°C and outdoor temperature Tj				Declared coefficient of performance / Colder season, at indoor temperature 20°C and outdoor temperature Tj			
Tj=-7°C	Pdh	-	kW	Tj=-7°C	COPd	-	-
Tj=2°C	Pdh	-	kW	Tj=2°C	COPd	-	-
Tj=7°C	Pdh	-	kW	Tj=7°C	COPd	-	-
Tj=12°C	Pdh	-	kW	Tj=12°C	COPd	-	-
Tj=bivalent temperature	Pdh	-	kW	Tj=bivalent temperature	COPd	-	-
Tj=operating limit	Pdh	-	kW	Tj=operating limit	COPd	-	-
Tj=-15°C	Pdh	-	kW	Tj=-15°C	COPd	-	-
Bivalent temperature				Operating limit temperature			
heating / Average	Tbiv	-10	°C	heating / Average	Tol	-15	°C
heating / Warmer	Tbiv	-	°C	heating / Warmer	Tol	-	°C
heating / Colder	Tbiv	-	°C	heating / Colder	Tol	-	°C
Cycling interval capacity				Cycling interval efficiency			
for cooling	Pcyc	-	kW	for cooling	EERcyc	-	-
for heating	Pcyc	-	kW	for heating	COPcyc	-	-
Degradation coefficient				Degradation coefficient			
cooling	Cdc	0.25	-	heating	Cdh	0.25	-
Electric power input in power modes other than 'active mode'				Annual electricity consumption			
off mode	Poff	10	W	cooling	Qce	434	kWh/a
standby mode	Psb	10	W	heating / Average	Qhe	1995	kWh/a
thermostat-off mode	Pto	25	W	heating / Warmer	Qhe	-	kWh/a
crankcase heater mode	Pck	0	W	heating / colder	Qhe	-	kWh/a
Capacity control (indicate one of three options)				Other items			
fixed		No		Sound power level (indoor)	Lwa	65	dB(A)
staged		No		Sound power level (outdoor)	Lwa	67	dB(A)
variable		Yes		Global warming potential	GWGP	1975	kgCO2eq.
				Rated air flow (indoor)	-	1440	m³/h
				Rated air flow (outdoor)	-	2160	m³/h
Contact details for obtaining more information	Name and address of the manufacturer or of its authorised representative. Mitsubishi Heavy Industries Air-Conditioning Europe, Ltd. 5 The Square, Stockley Park, Uxbridge, Middlesex, UB11 1ET. United Kingdom						

Model FDU90VNP1VF2

Information to identify the model(s) to which the information relates to:				If function includes heating: Indicate the heating season the information relates to. Indicated values should relate to one heating season at a time. Include at least the heating season 'Average'.			
Indoor unit model name		FDU100VF2		Average (mandatory)		Yes	
Outdoor unit model name		FDC90VNP1		Warmer (if designated)		No	
Function (indicate if present)				Colder (if designated)			
cooling		Yes		Colder (if designated)		No	
heating		Yes					
Item	symbol	value	unit	Item	symbol	value	class
Design load				Seasonal efficiency and energy efficiency class			
cooling	Pdesignc	9.0	kW	cooling	SEER	6.56	A++
heating / Average	Pdesignh	8.1	kW	heating / Average	SCOP/A	3.98	A
heating / Warmer	Pdesignh	-	kW	heating / Warmer	SCOP/W	-	-
heating / Colder	Pdesignh	-	kW	heating / Colder	SCOP/C	-	-
				unit			
Declared capacity at outdoor temperature Tdesignh				Back up heating capacity at outdoor temperature Tdesignh			
heating / Average (-10°C)	Pdh	8.10	kW	heating / Average (-10°C)	elbu	0	kW
heating / Warmer (2°C)	Pdh	-	kW	heating / Warmer (2°C)	elbu	-	kW
heating / Colder (-22°C)	Pdh	-	kW	heating / Colder (-22°C)	elbu	-	kW
Declared capacity for cooling, at indoor temperature 27(19)°C and outdoor temperature Tj				Declared energy efficiency ratio, at indoor temperature 27(19)°C and outdoor temperature Tj			
Tj=35°C	Pdc	9.00	kW	Tj=35°C	EERd	3.35	-
Tj=30°C	Pdc	6.60	kW	Tj=30°C	EERd	5.05	-
Tj=25°C	Pdc	4.30	kW	Tj=25°C	EERd	7.97	-
Tj=20°C	Pdc	2.20	kW	Tj=20°C	EERd	11.75	-
Declared capacity for heating / Average season, at indoor temperature 20°C and outdoor temperature Tj				Declared coefficient of performance / Average season, at indoor temperature 20°C and outdoor temperature Tj			
Tj=-7°C	Pdh	7.10	kW	Tj=-7°C	COPd	2.69	-
Tj=2°C	Pdh	4.30	kW	Tj=2°C	COPd	3.93	-
Tj=7°C	Pdh	2.70	kW	Tj=7°C	COPd	5.12	-
Tj=12°C	Pdh	1.80	kW	Tj=12°C	COPd	5.25	-
Tj=bivalent temperature	Pdh	8.10	kW	Tj=bivalent temperature	COPd	2.50	-
Tj=operating limit	Pdh	7.10	kW	Tj=operating limit	COPd	2.36	-
Declared capacity for heating / Warmer season, at indoor temperature 20°C and outdoor temperature Tj				Declared coefficient of performance / Warmer season, at indoor temperature 20°C and outdoor temperature Tj			
Tj=2°C	Pdh	-	kW	Tj=2°C	COPd	-	-
Tj=7°C	Pdh	-	kW	Tj=7°C	COPd	-	-
Tj=12°C	Pdh	-	kW	Tj=12°C	COPd	-	-
Tj=bivalent temperature	Pdh	-	kW	Tj=bivalent temperature	COPd	-	-
Tj=operating limit	Pdh	-	kW	Tj=operating limit	COPd	-	-
Declared capacity for heating / Colder season, at indoor temperature 20°C and outdoor temperature Tj				Declared coefficient of performance / Colder season, at indoor temperature 20°C and outdoor temperature Tj			
Tj=-7°C	Pdh	-	kW	Tj=-7°C	COPd	-	-
Tj=2°C	Pdh	-	kW	Tj=2°C	COPd	-	-
Tj=7°C	Pdh	-	kW	Tj=7°C	COPd	-	-
Tj=12°C	Pdh	-	kW	Tj=12°C	COPd	-	-
Tj=bivalent temperature	Pdh	-	kW	Tj=bivalent temperature	COPd	-	-
Tj=operating limit	Pdh	-	kW	Tj=operating limit	COPd	-	-
Tj=-15°C	Pdh	-	kW	Tj=-15°C	COPd	-	-
Bivalent temperature				Operating limit temperature			
heating / Average	Tbiv	-10	°C	heating / Average	Tol	-15	°C
heating / Warmer	Tbiv	-	°C	heating / Warmer	Tol	-	°C
heating / Colder	Tbiv	-	°C	heating / Colder	Tol	-	°C
Cycling interval capacity				Cycling interval efficiency			
for cooling	Pcyc	-	kW	for cooling	EERcyc	-	-
for heating	Pcyc	-	kW	for heating	COPcyc	-	-
Degradation coefficient				Degradation coefficient			
cooling	Cdc	0.25	-	heating	Cdh	0.25	-
Electric power input in power modes other than 'active mode'				Annual electricity consumption			
off mode	Poff	8	W	cooling	Qce	480	kWh/a
standby mode	Psb	8	W	heating / Average	Qhe	2848	kWh/a
thermostat-off mode	Pto	50	W	heating / Warmer	Qhe	-	kWh/a
crankcase heater mode	Pck	0	W	heating / colder	Qhe	-	kWh/a
Capacity control (indicate one of three options)				Other items			
fixed		No		Sound power level (indoor)	Lwa	65	dB(A)
staged		No		Sound power level (outdoor)	Lwa	69	dB(A)
variable		Yes		Global warming potential	GWGP	1975	kgCO2eq.
				Rated air flow (indoor)	-	2160	m³/h
				Rated air flow (outdoor)	-	3780	m³/h
Contact details for obtaining more information	Name and address of the manufacturer or of its authorised representative. Mitsubishi Heavy Industries Air-Conditioning Europe, Ltd. 5 The Square, Stockley Park, Uxbridge, Middlesex, UB11 1ET. United Kingdom						

(3) Duct connected-Low/Middle static pressure type (FDUM)
Model FDUM71VNPVF1


Information to identify the model(s) to which the information relates to:				If function includes heating: Indicate the heating season the information relates to. Indicated values should relate to one heating season at a time. Include at least the heating season 'Average'.			
Indoor unit model name		FDUM71VF1		Average (mandatory)		Yes	
Outdoor unit model name		FDC71VNP		Warmer (if designated)		No	
Function (indicate if present)				Colder (if designated)			
cooling		Yes		Colder (if designated)		No	
heating		Yes					
Item	symbol	value	unit	Item	symbol	value	class
Design load				Seasonal efficiency and energy efficiency class			
cooling	Pdesignc	7.1	kW	cooling	SEER	5.73	A+
heating / Average	Pdesignh	5.7	kW	heating / Average	SCOP/A	4.00	A+
heating / Warmer	Pdesignh	-	kW	heating / Warmer	SCOP/W	-	-
heating / Colder	Pdesignh	-	kW	heating / Colder	SCOP/C	-	-
				unit			
Declared capacity at outdoor temperature Tdesignh				Back up heating capacity at outdoor temperature Tdesignh			
heating / Average (-10°C)		Pdh 5.70 kW		heating / Average (-10°C)		elbu 0 kW	
heating / Warmer (2°C)		Pdh - kW		heating / Warmer (2°C)		elbu - kW	
heating / Colder (-22°C)		Pdh - kW		heating / Colder (-22°C)		elbu - kW	
Declared capacity for cooling, at indoor temperature 27(19)°C and outdoor temperature Tj				Declared energy efficiency ratio, at indoor temperature 27(19)°C and outdoor temperature Tj			
Tj=35°C		Pdc 7.10 kW		Tj=35°C		EERd 2.70 -	
Tj=30°C		Pdc 5.20 kW		Tj=30°C		EERd 4.30 -	
Tj=25°C		Pdc 3.40 kW		Tj=25°C		EERd 7.40 -	
Tj=20°C		Pdc 1.50 kW		Tj=20°C		EERd 9.80 -	
Declared capacity for heating / Average season, at indoor temperature 20°C and outdoor temperature Tj				Declared coefficient of performance / Average season, at indoor temperature 20°C and outdoor temperature Tj			
Tj=-7°C		Pdh 5.00 kW		Tj=-7°C		COPd 2.50 -	
Tj=2°C		Pdh 3.00 kW		Tj=2°C		COPd 3.90 -	
Tj=7°C		Pdh 2.00 kW		Tj=7°C		COPd 5.40 -	
Tj=12°C		Pdh 1.40 kW		Tj=12°C		COPd 6.00 -	
Tj=bivalent temperature		Pdh 5.70 kW		Tj=bivalent temperature		COPd 2.40 -	
Tj=operating limit		Pdh 5.10 kW		Tj=operating limit		COPd 2.10 -	
Declared capacity for heating / Warmer season, at indoor temperature 20°C and outdoor temperature Tj				Declared coefficient of performance / Warmer season, at indoor temperature 20°C and outdoor temperature Tj			
Tj=2°C		Pdh - kW		Tj=2°C		COPd - -	
Tj=7°C		Pdh - kW		Tj=7°C		COPd - -	
Tj=12°C		Pdh - kW		Tj=12°C		COPd - -	
Tj=bivalent temperature		Pdh - kW		Tj=bivalent temperature		COPd - -	
Tj=operating limit		Pdh - kW		Tj=operating limit		COPd - -	
Declared capacity for heating / Colder season, at indoor temperature 20°C and outdoor temperature Tj				Declared coefficient of performance / Colder season, at indoor temperature 20°C and outdoor temperature Tj			
Tj=-7°C		Pdh - kW		Tj=-7°C		COPd - -	
Tj=2°C		Pdh - kW		Tj=2°C		COPd - -	
Tj=7°C		Pdh - kW		Tj=7°C		COPd - -	
Tj=12°C		Pdh - kW		Tj=12°C		COPd - -	
Tj=bivalent temperature		Pdh - kW		Tj=bivalent temperature		COPd - -	
Tj=operating limit		Pdh - kW		Tj=operating limit		COPd - -	
Tj=-15°C		Pdh - kW		Tj=-15°C		COPd - -	
Bivalent temperature				Operating limit temperature			
heating / Average		Tbiv -10 °C		heating / Average		Tol -15 °C	
heating / Warmer		Tbiv - °C		heating / Warmer		Tol - °C	
heating / Colder		Tbiv - °C		heating / Colder		Tol - °C	
Cycling interval capacity				Cycling interval efficiency			
for cooling		Pcycc - kW		for cooling		EERcyc - -	
for heating		Pcyh - kW		for heating		COPcyc - -	
Degradation coefficient				Degradation coefficient			
cooling		Cdc 0.25 -		heating		Cdh 0.25 -	
Electric power input in power modes other than 'active mode'				Annual electricity consumption			
off mode		Poff 10 W		cooling		Qce 434 kWh/a	
standby mode		Psb 10 W		heating / Average		Qhe 1995 kWh/a	
thermostat-off mode		Pto 25 W		heating / Warmer		Qhe - kWh/a	
crankcase heater mode		Pck 0 W		heating / colder		Qhe - kWh/a	
Capacity control (indicate one of three options)				Other items			
fixed		No		Sound power level (indoor)		Lwa 65 dB(A)	
staged		No		Sound power level (outdoor)		Lwa 67 dB(A)	
variable		Yes		Global warming potential		GWP 1975 kgCO2eq.	
				Rated air flow (indoor)		- 1440 m³/h	
				Rated air flow (outdoor)		- 2160 m³/h	
Contact details for obtaining more information		Name and address of the manufacturer or of its authorised representative. Mitsubishi Heavy Industries Air-Conditioning Europe, Ltd. 5 The Square, Stockley Park, Uxbridge, Middlesex, UB11 1ET. United Kingdom					

Model FDUM90VNP1VF2

Information to identify the model(s) to which the information relates to:				If function includes heating: Indicate the heating season the information relates to. Indicated values should relate to one heating season at a time. Include at least the heating season 'Average'.			
Indoor unit model name		FDUM100VF2		Average (mandatory)		Yes	
Outdoor unit model name		FDC90VNP1		Warmer (if designated)		No	
Function (indicate if present)				Colder (if designated)			
cooling		Yes		Colder (if designated)		No	
heating		Yes					
Item	symbol	value	unit	Item	symbol	value	class
Design load				Seasonal efficiency and energy efficiency class			
cooling	Pdesignc	9.0	kW	cooling	SEER	6.56	A++
heating / Average	Pdesignh	8.1	kW	heating / Average	SCOP/A	3.98	A
heating / Warmer	Pdesignh	-	kW	heating / Warmer	SCOP/W	-	-
heating / Colder	Pdesignh	-	kW	heating / Colder	SCOP/C	-	-
				unit			
Declared capacity at outdoor temperature Tdesignh				Back up heating capacity at outdoor temperature Tdesignh			
heating / Average (-10°C)	Pdh	8.10	kW	heating / Average (-10°C)	elbu	0	kW
heating / Warmer (2°C)	Pdh	-	kW	heating / Warmer (2°C)	elbu	-	kW
heating / Colder (-22°C)	Pdh	-	kW	heating / Colder (-22°C)	elbu	-	kW
Declared capacity for cooling, at indoor temperature 27(19)°C and outdoor temperature Tj				Declared energy efficiency ratio, at indoor temperature 27(19)°C and outdoor temperature Tj			
Tj=35°C	Pdc	9.00	kW	Tj=35°C	EERd	3.35	-
Tj=30°C	Pdc	6.60	kW	Tj=30°C	EERd	5.05	-
Tj=25°C	Pdc	4.30	kW	Tj=25°C	EERd	7.97	-
Tj=20°C	Pdc	2.20	kW	Tj=20°C	EERd	11.75	-
Declared capacity for heating / Average season, at indoor temperature 20°C and outdoor temperature Tj				Declared coefficient of performance / Average season, at indoor temperature 20°C and outdoor temperature Tj			
Tj=-7°C	Pdh	7.10	kW	Tj=-7°C	COPd	2.69	-
Tj=2°C	Pdh	4.30	kW	Tj=2°C	COPd	3.93	-
Tj=7°C	Pdh	2.70	kW	Tj=7°C	COPd	5.12	-
Tj=12°C	Pdh	1.80	kW	Tj=12°C	COPd	5.25	-
Tj=bivalent temperature	Pdh	8.10	kW	Tj=bivalent temperature	COPd	2.50	-
Tj=operating limit	Pdh	7.10	kW	Tj=operating limit	COPd	2.36	-
Declared capacity for heating / Warmer season, at indoor temperature 20°C and outdoor temperature Tj				Declared coefficient of performance / Warmer season, at indoor temperature 20°C and outdoor temperature Tj			
Tj=2°C	Pdh	-	kW	Tj=2°C	COPd	-	-
Tj=7°C	Pdh	-	kW	Tj=7°C	COPd	-	-
Tj=12°C	Pdh	-	kW	Tj=12°C	COPd	-	-
Tj=bivalent temperature	Pdh	-	kW	Tj=bivalent temperature	COPd	-	-
Tj=operating limit	Pdh	-	kW	Tj=operating limit	COPd	-	-
Declared capacity for heating / Colder season, at indoor temperature 20°C and outdoor temperature Tj				Declared coefficient of performance / Colder season, at indoor temperature 20°C and outdoor temperature Tj			
Tj=-7°C	Pdh	-	kW	Tj=-7°C	COPd	-	-
Tj=2°C	Pdh	-	kW	Tj=2°C	COPd	-	-
Tj=7°C	Pdh	-	kW	Tj=7°C	COPd	-	-
Tj=12°C	Pdh	-	kW	Tj=12°C	COPd	-	-
Tj=bivalent temperature	Pdh	-	kW	Tj=bivalent temperature	COPd	-	-
Tj=operating limit	Pdh	-	kW	Tj=operating limit	COPd	-	-
Tj=-15°C	Pdh	-	kW	Tj=-15°C	COPd	-	-
Bivalent temperature				Operating limit temperature			
heating / Average	Tbiv	-10	°C	heating / Average	Tol	-15	°C
heating / Warmer	Tbiv	-	°C	heating / Warmer	Tol	-	°C
heating / Colder	Tbiv	-	°C	heating / Colder	Tol	-	°C
Cycling interval capacity				Cycling interval efficiency			
for cooling	Pcyc	-	kW	for cooling	EERcyc	-	-
for heating	Pcyc	-	kW	for heating	COPcyc	-	-
Degradation coefficient				Degradation coefficient			
cooling	Cdc	0.25	-	heating	Cdh	0.25	-
Electric power input in power modes other than 'active mode'				Annual electricity consumption			
off mode	Poff	8	W	cooling	Qce	480	kWh/a
standby mode	Psb	8	W	heating / Average	Qhe	2848	kWh/a
thermostat-off mode	Pto	50	W	heating / Warmer	Qhe	-	kWh/a
crankcase heater mode	Pck	0	W	heating / colder	Qhe	-	kWh/a
Capacity control (indicate one of three options)				Other items			
fixed		No		Sound power level (indoor)	Lwa	65	dB(A)
staged		No		Sound power level (outdoor)	Lwa	69	dB(A)
variable		Yes		Global warming potential	GWGP	1975	kgCO2eq.
				Rated air flow (indoor)	-	2160	m³/h
				Rated air flow (outdoor)	-	3780	m³/h
Contact details for obtaining more information	Name and address of the manufacturer or of its authorised representative. Mitsubishi Heavy Industries Air-Conditioning Europe, Ltd. 5 The Square, Stockley Park, Uxbridge, Middlesex, UB11 1ET. United Kingdom						


(4) Ceiling suspended type (FDE)
Model FDE71VNPVG

Information to identify the model(s) to which the information relates to:				If function includes heating: Indicate the heating season the information relates to. Indicated values should relate to one heating season at a time. Include at least the heating season 'Average'.			
Indoor unit model name		FDE71VG		Average (mandatory)		Yes	
Outdoor unit model name		FDC71VNP		Warmer (if designated)		No	
Function (indicate if present)				Colder (if designated)			
cooling		Yes					
heating		Yes					
Item	symbol	value	unit	Item	symbol	value	class
Design load				Seasonal efficiency and energy efficiency class			
cooling	Pdesignc	7.1	kW	cooling	SEER	6.35	A++
heating / Average	Pdesignh	5.8	kW	heating / Average	SCOP/A	4.22	A+
heating / Warmer	Pdesignh	-	kW	heating / Warmer	SCOP/W	-	-
heating / Colder	Pdesignh	-	kW	heating / Colder	SCOP/C	-	-
				unit			
Declared capacity at outdoor temperature Tdesignh				Back up heating capacity at outdoor temperature Tdesignh			
heating / Average (-10°C)	Pdh	5.8	kW	heating / Average (-10°C)	elbu	0	kW
heating / Warmer (2°C)	Pdh	-	kW	heating / Warmer (2°C)	elbu	-	kW
heating / Colder (-22°C)	Pdh	-	kW	heating / Colder (-22°C)	elbu	-	kW
Declared capacity for cooling, at indoor temperature 27(19)°C and outdoor temperature Tj				Declared energy efficiency ratio, at indoor temperature 27(19)°C and outdoor temperature Tj			
Tj=35°C	Pdc	7.10	kW	Tj=35°C	EERd	2.84	-
Tj=30°C	Pdc	5.23	kW	Tj=30°C	EERd	4.43	-
Tj=25°C	Pdc	3.37	kW	Tj=25°C	EERd	7.49	-
Tj=20°C	Pdc	1.55	kW	Tj=20°C	EERd	15.50	-
Declared capacity for heating / Average season, at indoor temperature 20°C and outdoor temperature Tj				Declared coefficient of performance / Average season, at indoor temperature 20°C and outdoor temperature Tj			
Tj=-7°C	Pdh	5.13	kW	Tj=-7°C	COPd	2.73	-
Tj=2°C	Pdh	3.12	kW	Tj=2°C	COPd	4.27	-
Tj=7°C	Pdh	2.01	kW	Tj=7°C	COPd	5.15	-
Tj=12°C	Pdh	1.02	kW	Tj=12°C	COPd	5.96	-
Tj=bivalent temperature	Pdh	5.80	kW	Tj=bivalent temperature	COPd	2.28	-
Tj=operating limit	Pdh	5.17	kW	Tj=operating limit	COPd	2.17	-
Declared capacity for heating / Warmer season, at indoor temperature 20°C and outdoor temperature Tj				Declared coefficient of performance / Warmer season, at indoor temperature 20°C and outdoor temperature Tj			
Tj=2°C	Pdh	-	kW	Tj=2°C	COPd	-	-
Tj=7°C	Pdh	-	kW	Tj=7°C	COPd	-	-
Tj=12°C	Pdh	-	kW	Tj=12°C	COPd	-	-
Tj=bivalent temperature	Pdh	-	kW	Tj=bivalent temperature	COPd	-	-
Tj=operating limit	Pdh	-	kW	Tj=operating limit	COPd	-	-
Declared capacity for heating / Colder season, at indoor temperature 20°C and outdoor temperature Tj				Declared coefficient of performance / Colder season, at indoor temperature 20°C and outdoor temperature Tj			
Tj=-7°C	Pdh	-	kW	Tj=-7°C	COPd	-	-
Tj=2°C	Pdh	-	kW	Tj=2°C	COPd	-	-
Tj=7°C	Pdh	-	kW	Tj=7°C	COPd	-	-
Tj=12°C	Pdh	-	kW	Tj=12°C	COPd	-	-
Tj=bivalent temperature	Pdh	-	kW	Tj=bivalent temperature	COPd	-	-
Tj=operating limit	Pdh	-	kW	Tj=operating limit	COPd	-	-
Tj=-15°C	Pdh	-	kW	Tj=-15°C	COPd	-	-
Bivalent temperature				Operating limit temperature			
heating / Average	Tbiv	-10	°C	heating / Average	Tol	-15	°C
heating / Warmer	Tbiv	-	°C	heating / Warmer	Tol	-	°C
heating / Colder	Tbiv	-	°C	heating / Colder	Tol	-	°C
Cycling interval capacity				Cycling interval efficiency			
for cooling	Pcycc	-	kW	for cooling	EERcyc	-	-
for heating	Pcyhc	-	kW	for heating	COPcyc	-	-
Degradation coefficient				Degradation coefficient			
cooling	Cdc	0.25	-	heating	Cdh	0.25	-
Electric power input in power modes other than 'active mode'				Annual electricity consumption			
off mode	Poff	9	W	cooling	Qce	392	kWh/a
standby mode	Psb	9	W	heating / Average	Qhe	1925	kWh/a
thermostat-off mode	Pto	20	W	heating / Warmer	Qhe	-	kWh/a
crankcase heater mode	Pck	0	W	heating / colder	Qhe	-	kWh/a
Capacity control (indicate one of three options)				Other items			
fixed		No		Sound power level (indoor)	Lwa	60	dB(A)
staged		No		Sound power level (outdoor)	Lwa	67	dB(A)
variable		Yes		Global warming potential	GWP	1975	kgCO2eq.
				Rated air flow (indoor)	-	1200	m3/h
				Rated air flow (outdoor)	-	2160	m3/h
Contact details for obtaining more information	Name and address of the manufacturer or of its authorised representative. Mitsubishi Heavy Industries Air-Conditioning Europe, Ltd. 5 The Square, Stockley Park, Uxbridge, Middlesex, UB11 1ET. United Kingdom						



Model FDE90VNP1VG

Information to identify the model(s) to which the information relates to:				If function includes heating: Indicate the heating season the information relates to. Indicated values should relate to one heating season at a time. Include at least the heating season 'Average'.			
Indoor unit model name		FDE100VG		Average(mandatory)		Yes	
Outdoor unit model name		FDC90VNP1		Warmer(if designated)		No	
Function(indicate if present)				Colder(if designated)			
cooling		Yes					
heating		Yes					
Item	symbol	value	unit	Item	symbol	value	class
Design load				Seasonal efficiency and energy efficiency class			
cooling	Pdesignc	9.0	kW	cooling	SEER	6.63	A++
heating / Average	Pdesignh	8.2	kW	heating / Average	SCOP/A	4.25	A+
heating / Warmer	Pdesignh	-	kW	heating / Warmer	SCOP/W	-	-
heating / Colder	Pdesignh	-	kW	heating / Colder	SCOP/C	-	-
				unit			
Declared capacity at outdoor temperature Tdesignh				Back up heating capacity at outdoor temperature Tdesignh			
heating / Average (-10°C)	Pdh	8.2	kW	heating / Average (-10°C)	elbu	0	kW
heating / Warmer (2°C)	Pdh	-	kW	heating / Warmer (2°C)	elbu	-	kW
heating / Colder (-22°C)	Pdh	-	kW	heating / Colder (-22°C)	elbu	-	kW
Declared capacity for cooling, at indoor temperature 27(19)°C and outdoor temperature Tj				Declared energy efficiency ratio, at indoor temperature 27(19)°C and outdoor temperature Tj			
Tj=35°C	Pdc	9.00	kW	Tj=35°C	EERd	3.27	-
Tj=30°C	Pdc	6.63	kW	Tj=30°C	EERd	5.10	-
Tj=25°C	Pdc	4.27	kW	Tj=25°C	EERd	8.54	-
Tj=20°C	Pdc	2.20	kW	Tj=20°C	EERd	10.63	-
Declared capacity for heating / Average season, at indoor temperature 20°C and outdoor temperature Tj				Declared coefficient of performance / Average season, at indoor temperature 20°C and outdoor temperature Tj			
Tj=-7°C	Pdh	7.26	kW	Tj=-7°C	COPd	2.90	-
Tj=2°C	Pdh	4.41	kW	Tj=2°C	COPd	4.20	-
Tj=7°C	Pdh	2.84	kW	Tj=7°C	COPd	5.30	-
Tj=12°C	Pdh	1.45	kW	Tj=12°C	COPd	5.58	-
Tj=bivalent temperature	Pdh	8.20	kW	Tj=bivalent temperature	COPd	2.60	-
Tj=operating limit	Pdh	7.20	kW	Tj=operating limit	COPd	2.31	-
Declared capacity for heating / Warmer season, at indoor temperature 20°C and outdoor temperature Tj				Declared coefficient of performance / Warmer season, at indoor temperature 20°C and outdoor temperature Tj			
Tj=2°C	Pdh	-	kW	Tj=2°C	COPd	-	-
Tj=7°C	Pdh	-	kW	Tj=7°C	COPd	-	-
Tj=12°C	Pdh	-	kW	Tj=12°C	COPd	-	-
Tj=bivalent temperature	Pdh	-	kW	Tj=bivalent temperature	COPd	-	-
Tj=operating limit	Pdh	-	kW	Tj=operating limit	COPd	-	-
Declared capacity for heating / Colder season, at indoor temperature 20°C and outdoor temperature Tj				Declared coefficient of performance / Colder season, at indoor temperature 20°C and outdoor temperature Tj			
Tj=-7°C	Pdh	-	kW	Tj=-7°C	COPd	-	-
Tj=2°C	Pdh	-	kW	Tj=2°C	COPd	-	-
Tj=7°C	Pdh	-	kW	Tj=7°C	COPd	-	-
Tj=12°C	Pdh	-	kW	Tj=12°C	COPd	-	-
Tj=bivalent temperature	Pdh	-	kW	Tj=bivalent temperature	COPd	-	-
Tj=operating limit	Pdh	-	kW	Tj=operating limit	COPd	-	-
Tj=-15°C	Pdh	-	kW	Tj=-15°C	COPd	-	-
Bivalent temperature				Operating limit temperature			
heating / Average	Tbiv	-10	°C	heating / Average	Tol	-15	°C
heating / Warmer	Tbiv	-	°C	heating / Warmer	Tol	-	°C
heating / Colder	Tbiv	-	°C	heating / Colder	Tol	-	°C
Cycling interval capacity				Cycling interval efficiency			
for cooling	Pcycc	-	kW	for cooling	EERcyc	-	-
for heating	Pcyh	-	kW	for heating	COPcyc	-	-
Degradation coefficient				Degradation coefficient			
cooling	Cdc	0.25	-	heating	Cdh	0.25	-
Electric power input in power modes other than 'active mode'				Annual electricity consumption			
off mode	Poff	9	W	cooling	Qce	475	kWh/a
standby mode	Psb	9	W	heating / Average	Qhe	2704	kWh/a
thermostat-off mode	Pto	30	W	heating / Warmer	Qhe	-	kWh/a
crankcase heater mode	Pck	0	W	heating / colder	Qhe	-	kWh/a
Capacity control(indicate one of three options)				Other items			
fixed		No		Sound power level(indoor)	Lwa	64	dB(A)
staged		No		Sound power level(outdoor)	Lwa	69	dB(A)
variable		Yes		Global warming potential	GWP	1975	kgCO2eq.
				Rated air flow(indoor)	-	1920	m3/h
				Rated air flow(outdoor)	-	3780	m3/h
Contact details for obtaining more information	Name and address of the manufacturer or of its authorised representative. Mitsubishi Heavy Industries Air-Conditioning Europe, Ltd. 5 The Square, Stockley Park, Uxbridge, Middlesex, UB11 1ET. United Kingdom						




(5) Floor standing type (FDF)
Model FDF71VNPVD1

Information to identify the model(s) to which the information relates to:				If function includes heating: Indicate the heating season the information relates to. Indicated values should relate to one heating season at a time. Include at least the heating season 'Average'.			
Indoor unit model name		FDF71VD1		Average (mandatory)		Yes	
Outdoor unit model name		FDC71VNP		Warmer (if designated)		No	
Function (indicate if present)				Colder (if designated)			
cooling		Yes		Colder (if designated)		No	
heating		Yes					
Item	symbol	value	unit	Item	symbol	value	class
Design load				Seasonal efficiency and energy efficiency class			
cooling	Pdesignc	7.1	kW	cooling	SEER	5.25	A
heating / Average	Pdesignh	5.5	kW	heating / Average	SCOP/A	3.91	A
heating / Warmer	Pdesignh	-	kW	heating / Warmer	SCOP/W	-	-
heating / Colder	Pdesignh	-	kW	heating / Colder	SCOP/C	-	-
				unit			
Declared capacity at outdoor temperature Tdesignh				Back up heating capacity at outdoor temperature Tdesignh			
heating / Average (-10°C)		Pd h		heating / Average (-10°C)		elbu	
		5.50				0	
heating / Warmer (2°C)		Pd h		heating / Warmer (2°C)		elbu	
		-				-	
heating / Colder (-22°C)		Pd h		heating / Colder (-22°C)		elbu	
		-				-	
Declared capacity for cooling, at indoor temperature 27(19)°C and outdoor temperature Tj				Declared energy efficiency ratio, at indoor temperature 27(19)°C and outdoor temperature Tj			
Tj=35°C		Pdc		Tj=35°C		EERd	
		7.10				2.66	
Tj=30°C		Pdc		Tj=30°C		EERd	
		5.20				3.95	
Tj=25°C		Pdc		Tj=25°C		EERd	
		3.40				6.60	
Tj=20°C		Pdc		Tj=20°C		EERd	
		1.50				8.90	
Declared capacity for heating / Average season, at indoor temperature 20°C and outdoor temperature Tj				Declared coefficient of performance / Average season, at indoor temperature 20°C and outdoor temperature Tj			
Tj=-7°C		Pd h		Tj=-7°C		COPd	
		4.90				2.40	
Tj=2°C		Pd h		Tj=2°C		COPd	
		3.00				3.80	
Tj=7°C		Pd h		Tj=7°C		COPd	
		1.90				5.30	
Tj=12°C		Pd h		Tj=12°C		COPd	
		1.20				6.00	
Tj=bivalent temperature		Pd h		Tj=bivalent temperature		COPd	
		5.50				2.30	
Tj=operating limit		Pd h		Tj=operating limit		COPd	
		4.90				2.20	
Declared capacity for heating / Warmer season, at indoor temperature 20°C and outdoor temperature Tj				Declared coefficient of performance / Warmer season, at indoor temperature 20°C and outdoor temperature Tj			
Tj=2°C		Pd h		Tj=2°C		COPd	
		-				-	
Tj=7°C		Pd h		Tj=7°C		COPd	
		-				-	
Tj=12°C		Pd h		Tj=12°C		COPd	
		-				-	
Tj=bivalent temperature		Pd h		Tj=bivalent temperature		COPd	
		-				-	
Tj=operating limit		Pd h		Tj=operating limit		COPd	
		-				-	
Declared capacity for heating / Colder season, at indoor temperature 20°C and outdoor temperature Tj				Declared coefficient of performance / Colder season, at indoor temperature 20°C and outdoor temperature Tj			
Tj=-7°C		Pd h		Tj=-7°C		COPd	
		-				-	
Tj=2°C		Pd h		Tj=2°C		COPd	
		-				-	
Tj=7°C		Pd h		Tj=7°C		COPd	
		-				-	
Tj=12°C		Pd h		Tj=12°C		COPd	
		-				-	
Tj=bivalent temperature		Pd h		Tj=bivalent temperature		COPd	
		-				-	
Tj=operating limit		Pd h		Tj=operating limit		COPd	
		-				-	
Tj=-15°C		Pd h		Tj=-15°C		COPd	
		-				-	
Bivalent temperature				Operating limit temperature			
heating / Average		Tbiv		heating / Average		Tol	
		-10				-15	
heating / Warmer		Tbiv		heating / Warmer		Tol	
		-				-	
heating / Colder		Tbiv		heating / Colder		Tol	
		-				-	
Cycling interval capacity				Cycling interval efficiency			
for cooling		Pcyc c		for cooling		EERcyc	
		-				-	
for heating		Pcyc h		for heating		COPcyc	
		-				-	
Degradation coefficient				Degradation coefficient			
cooling		Cdc		heating		Cdh	
		0.25				0.25	
Electric power input in power modes other than 'active mode'				Annual electricity consumption			
off mode		Poff		cooling		Qce	
		11				474	
standby mode		Psb		heating / Average		Qhe	
		11				1972	
thermostat-off mode		Pto		heating / Warmer		Qhe	
		25				-	
crankcase heater mode		Pck		heating / colder		Qhe	
		0				-	
Capacity control (indicate one of three options)				Other items			
fixed		No		Sound power level (indoor)		Lwa	
		No				61	
staged		No		Sound power level (outdoor)		Lwa	
		No				67	
variable		Yes		Global warming potential		GWP	
		Yes				1975	
				Rated air flow (indoor)		-	
						1080	
				Rated air flow (outdoor)		-	
						2160	
Contact details for obtaining more information				Name and address of the manufacturer or of its authorised representative.			
				Mitsubishi Heavy Industries Air-Conditioning Europe, Ltd. 5 The Square, Stockley Park, Uxbridge, Middlesex, UB11 1ET. United Kingdom			

Model FDF90VNP1VD2

Information to identify the model(s) to which the information relates to:				If function includes heating: Indicate the heating season the information relates to. Indicated values should relate to one heating season at a time. Include at least the heating season 'Average'.			
Indoor unit model name		FDF100VD2		Average (mandatory)		Yes	
Outdoor unit model name		FDC90VNP1		Warmer (if designated)		No	
Function (indicate if present)				Colder (if designated)			
cooling		Yes		Colder (if designated)		No	
heating		Yes					
Item	symbol	value	unit	Item	symbol	value	class
Design load				Seasonal efficiency and energy efficiency class			
cooling	Pdesignc	9.0	kW	cooling	SEER	5.69	A+
heating / Average	Pdesignh	8.1	kW	heating / Average	SCOP/A	4.01	A+
heating / Warmer	Pdesignh	-	kW	heating / Warmer	SCOP/W	-	-
heating / Colder	Pdesignh	-	kW	heating / Colder	SCOP/C	-	-
				unit			
Declared capacity at outdoor temperature Tdesignh				Back up heating capacity at outdoor temperature Tdesignh			
heating / Average (-10°C)		Pd h 8.10 kW		heating / Average (-10°C)		elbu 0 kW	
heating / Warmer (2°C)		Pd h - kW		heating / Warmer (2°C)		elbu - kW	
heating / Colder (-22°C)		Pd h - kW		heating / Colder (-22°C)		elbu - kW	
Declared capacity for cooling, at indoor temperature 27(19)°C and outdoor temperature Tj				Declared energy efficiency ratio, at indoor temperature 27(19)°C and outdoor temperature Tj			
Tj=35°C		Pdc 9.00 kW		Tj=35°C		EERd 3.20 -	
Tj=30°C		Pdc 6.60 kW		Tj=30°C		EERd 4.61 -	
Tj=25°C		Pdc 4.30 kW		Tj=25°C		EERd 7.30 -	
Tj=20°C		Pdc 1.90 kW		Tj=20°C		EERd 8.00 -	
Declared capacity for heating / Average season, at indoor temperature 20°C and outdoor temperature Tj				Declared coefficient of performance / Average season, at indoor temperature 20°C and outdoor temperature Tj			
Tj=-7°C		Pd h 7.10 kW		Tj=-7°C		COPd 2.80 -	
Tj=2°C		Pd h 4.30 kW		Tj=2°C		COPd 3.85 -	
Tj=7°C		Pd h 2.70 kW		Tj=7°C		COPd 5.30 -	
Tj=12°C		Pd h 2.00 kW		Tj=12°C		COPd 5.70 -	
Tj=bivalent temperature		Pd h 8.10 kW		Tj=bivalent temperature		COPd 2.40 -	
Tj=operating limit		Pd h 7.10 kW		Tj=operating limit		COPd 2.20 -	
Declared capacity for heating / Warmer season, at indoor temperature 20°C and outdoor temperature Tj				Declared coefficient of performance / Warmer season, at indoor temperature 20°C and outdoor temperature Tj			
Tj=2°C		Pd h - kW		Tj=2°C		COPd - -	
Tj=7°C		Pd h - kW		Tj=7°C		COPd - -	
Tj=12°C		Pd h - kW		Tj=12°C		COPd - -	
Tj=bivalent temperature		Pd h - kW		Tj=bivalent temperature		COPd - -	
Tj=operating limit		Pd h - kW		Tj=operating limit		COPd - -	
Declared capacity for heating / Colder season, at indoor temperature 20°C and outdoor temperature Tj				Declared coefficient of performance / Colder season, at indoor temperature 20°C and outdoor temperature Tj			
Tj=-7°C		Pd h - kW		Tj=-7°C		COPd - -	
Tj=2°C		Pd h - kW		Tj=2°C		COPd - -	
Tj=7°C		Pd h - kW		Tj=7°C		COPd - -	
Tj=12°C		Pd h - kW		Tj=12°C		COPd - -	
Tj=bivalent temperature		Pd h - kW		Tj=bivalent temperature		COPd - -	
Tj=operating limit		Pd h - kW		Tj=operating limit		COPd - -	
Tj=-15°C		Pd h - kW		Tj=-15°C		COPd - -	
Bivalent temperature				Operating limit temperature			
heating / Average		Tbiv -10 °C		heating / Average		Tol -15 °C	
heating / Warmer		Tbiv - °C		heating / Warmer		Tol - °C	
heating / Colder		Tbiv - °C		heating / Colder		Tol - °C	
Cycling interval capacity				Cycling interval efficiency			
for cooling		Pcyc c - kW		for cooling		EERcyc - -	
for heating		Pcyc h - kW		for heating		COPcyc - -	
Degradation coefficient				Degradation coefficient			
cooling		Cdc 0.25 -		heating		Cdh 0.25 -	
Electric power input in power modes other than 'active mode'				Annual electricity consumption			
off mode		Poff 10 W		cooling		Qce 554 kWh/a	
standby mode		Psb 10 W		heating / Average		Qhe 2825 kWh/a	
thermostat-off mode		Pto 65 W		heating / Warmer		Qhe - kWh/a	
crankcase heater mode		Pck 0 W		heating / colder		Qhe - kWh/a	
Capacity control (indicate one of three options)				Other items			
fixed		No		Sound power level(indoor)		Lwa 65 dB(A)	
staged		No		Sound power level(outdoor)		Lwa 69 dB(A)	
variable		Yes		Global warming potential		GWP 1975 kgCO2eq.	
				Rated air flow(indoor)		- 1740 m³/h	
				Rated air flow(outdoor)		- 3780 m³/h	
Contact details for obtaining more information		Name and address of the manufacturer or of its authorised representative. Mitsubishi Heavy Industries Air-Conditioning Europe, Ltd. 5 The Square, Stockley Park, Uxbridge, Middlesex, UB11 1ET. United Kingdom					



STANDARD INVERTER PACKAGED AIR-CONDITIONERS



MITSUBISHI HEAVY INDUSTRIES THERMAL SYSTEMS, LTD.

16-5 Konan 2-chome, Minato-ku, Tokyo, 108-8215, Japan
<http://www.mhi-mth.co.jp/en/>

Because of our policy of continuous improvement, we reserve the right to make changes in all specifications without notice.

© Copyright MITSUBISHI HEAVY INDUSTRIES THERMAL SYSTEMS, LTD.