



mitsubishi
HEAVY INDUSTRIES

DATA BOOK

Manual No.'19 · PAC-DB-306

updated June 30, 2022

INVERTER PACKAGED AIR-CONDITIONERS (Split system, air to air heat pump type)

HYPER INVERTER

CEILING CASSETTE - 4 WAY TYPE

Single type	Twin type
FDT71VNXVH	FDT140VNXPVH
100VNXVH	140VSXPVH
100VSXVH	
125VNXVH	
125VSXVH	
140VNXVH	
140VSXVH	

V Multi system

(OUTDOOR UNIT)	(INDOOR UNIT)
FDC125VNX	FDT50VH
125VSX	71VH
140VNX	
140VSX	

MICRO INVERTER

CEILING CASSETTE - 4 WAY TYPE

Single type	Twin type	Triple type
FDT100VNAVH	FDT140VNAPVH	FDT200VSATVH
100VSAVH	140VSAPVH	
125VNAVH	200VSAPVH	
125VSAVH	250VSAPVH	
140VNAVH		
140VSAVH		

V Multi system

(OUTDOOR UNIT)	(INDOOR UNIT)
FDC125VNA	FDT50VH
125VSA	60VH
140VNA	71VH
140VSA	100VH
200VSA	125VH
250VSA	

STANDARD INVERTER

CEILING CASSETTE - 4 WAY TYPE

Single type
FDT71VNPVH
90VNP1VH
100VNP1VH

TABLE OF CONTENTS

1. HYPER INVERTER PACKAGED AIR-CONDITIONERS	2
2. MICRO INVERTER PACKAGED AIR-CONDITIONERS	99
3. STANDARD INVERTER PACKAGED AIR-CONDITIONERS	180
4. V MULTI SYSTEM	226
5. OPTION PARTS	257


1. HYPER INVERTER PACKAGED AIR-CONDITIONERS

CONTENTS

1.1 SPECIFICATIONS	3
1.2 EXTERIOR DIMENSIONS	12
(1) Indoor units	12
(2) Outdoor units	14
(3) Remote control (Option parts)	16
1.3 ELECTRICAL WIRING	19
(1) Indoor units	19
(2) Outdoor units	20
1.4 NOISE LEVEL	23
1.5 TEMPERATURE AND VELOCITY DISTRIBUTION	26
1.6 PIPING SYSTEM	28
1.7 RANGE OF USAGE & LIMITATIONS	30
1.8 SELECTION CHART	33
1.8.1 Capacity tables	33
1.8.2 Correction of cooling and heating capacity in relation to air flow rate control (Fan speed)	40
1.8.3 Correction of cooling and heating capacity in relation to one way length of refrigerant piping	40
1.8.4 Height difference between the indoor unit and outdoor unit	40
1.9 APPLICATION DATA	42
1.9.1 Installation of indoor unit	42
1.9.2 Electric wiring work installation	48
1.9.3 Installation of wired remote control (Option parts)	52
1.9.4 Installation of outdoor unit	64
(1) Model FDC71VNX	64
(2) Models FDC100 - 140VNX, 100 - 140VSX	72
1.9.5 Instructions for branching pipe set (DIS-WA1,WB1,TA1,TB1)	80
1.10 TECHNICAL INFORMATION	83

■ How to read the model name

Example: FDT 140 VNX P VH

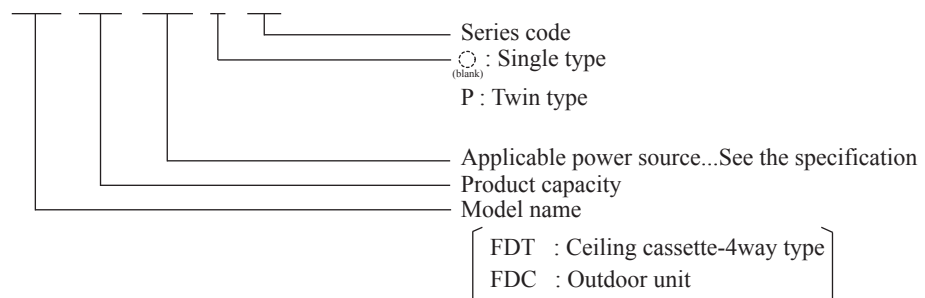

1.1 SPECIFICATIONS

(1) Single type

Item		Model	FDT71VNXVH			
			Indoor unit FDT71VH	Outdoor unit FDC71VNX		
Power source			1 Phase, 220-240V 50Hz / 220V 60Hz			
Operation data	Nominal cooling capacity (range)	kW	7.1 [3.2(Min.) - 8.0(Max.)]			
	Nominal heating capacity (range)	kW	8.0 [3.6(Min.) - 9.0(Max.)]			
	Power consumption	Cooling	kW	1.96		
		Heating		1.91		
	Max power consumption		3.26			
	Running current	Cooling	A	8.7 / 9.1		
		Heating		8.5 / 8.9		
	Inrush current, max current		5 , 17			
	Power factor	Cooling	%	98		
		Heating		98		
	EER	Cooling		3.62		
	COP	Heating		4.19		
Sound power level	Cooling	dB(A)	59	66		
	Heating		60			
Sound pressure level	Cooling	dB(A)	P-Hi : 46 Hi : 34 Me : 31 Lo : 26	51		
	Heating		P-Hi : 46 Hi : 34 Me : 31 Lo : 26	48		
Silent mode sound pressure level			-			
Exterior dimensions (Height x Width x Depth)	mm		Unit 236 × 840 × 840 Panel 35 × 950 × 950	750×880(+88)×340		
Exterior appearance (Munsell color)			Plaster white (6.8Y8.9/0.2) near equivalent	Stucco white (4.2Y7.5/1.1) near equivalent		
Net weight	kg		Unit 21 Panel 5	60		
Compressor type & Q'ty			-	RMT5118MDE2×1		
Compressor motor (Starting method)	kW		-	Direct line start		
Refrigerant oil (Amount, type)	L		-	0.675 (M-MA68)		
Refrigerant (Type, amount, pre-charge length)	kg		R410A 2.95 in outdoor unit (Incl. the amount for the piping of 30m)			
Heat exchanger			Louver fin & inner grooved tubing	M shape fin & inner grooved tubing		
Refrigerant control			Electronic expansion valve			
Fan type & Q'ty			Turbo fan ×1	Propeller fan ×1		
Fan motor (Starting method)	W		50 < Direct line start >	86 < Direct line start >		
Air flow	Cooling	m ³ /min	P-Hi : 28 Hi : 18 Me : 15 Lo : 12			
	Heating		60			
Available external static pressure	Pa		0	-		
Outside air intake			Possible	-		
Air filter, Quality / Quantity			Pocket plastic net ×1(Washable)	-		
Shock & vibration absorber			Rubber sleeve(for fan motor)	Rubber sleeve(for compressor)		
Electric heater	W		-	20 (Crank case heater)		
Operation control	Remote control		(Option) Wired : RC-EX3A, RC-E5, RCH-E3 Wireless : RCN-T-5AW-E2			
	Room temperature control		Thermostat by electronics			
	Operation display		-			
Safety equipments			Overload protection for fan motor Frost protection thermostat Internal thermostat for fan motor Abnormal discharge temperature protection			
Installation data	Refrigerant piping size (O.D.)	mm	Liquid line : I/U φ 9.52 (3/8") Pipe φ 9.52(3/8")x0.8 O/U φ 9.52 (3/8")			
	Connecting method		Gas line : φ 15.88 (5/8") φ 15.88(5/8")x1.0 φ 15.88 (5/8")			
	Attached length of piping	m	Flare piping	Flare piping		
	Insulation for piping		Necessary (both Liquid & Gas lines)			
	Refrigerant line (one way) length	m	Max.50m			
	Vertical height diff. between O/U and I/U	m	Max.30m (Outdoor unit is higher)	Max.15m (Outdoor unit is lower)		
Drain hose		Hose connectable VP25(O.D.32)	Hole size φ 20 x 3 pcs			
Drain pump, max lift height	mm	Built-in drain pump , 850		-		
Recommended breaker size	A	-				
L.R.A. (Locked rotor ampere)	A	5.0				
Interconnecting wires	Size x Core number	φ 1.6mm x 3 cores (Including earth cable) / Terminal block (Screw fixing type)				
IP number		IPX0		IP24		
Standard accessories		Mounting kit, Drain hose				
Option parts		-				
Notes (1) The data are measured at the following conditions.			The pipe length is 7.5m.			
	Item	Indoor air temperature		Outdoor air temperature		Standards
Operation		DB	WB	DB	WB	
	Cooling	27°C	19°C	35°C	24°C	ISO5151-T1
	Heating	20°C	-	7°C	6°C	ISO5151-H1
(2) This air-conditioner is manufactured and tested in conformity with the ISO.						
(3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.						
(4) Select the breaker size according to the own national standard.						
(5) The operation data indicate when the air-conditioner is operated at 230V 50Hz or 220V 60Hz.						

Item		Model		FDT100VNXVH		
				Indoor unit FDT100VH	Outdoor unit FDC100VNX	
Power source		1 Phase, 220-240V 50Hz / 220V 60Hz				
Operation data	Nominal cooling capacity (range)	kW		10.0 [4.0(Min.) - 11.2(Max.)]		
	Nominal heating capacity (range)	kW		11.2 [4.0(Min.) - 12.5(Max.)]		
	Power consumption	Cooling	kW		2.50	
		Heating	kW		2.58	
	Max power consumption			4.13		
	Running current	Cooling	A		11.1 / 11.6	
		Heating	A		11.4 / 12.0	
	Inrush current, max current			5 , 24		
	Power factor	Cooling	%		98	
		Heating	%		98	
	EER	Cooling		4.00		
	COP	Heating		4.34		
	Sound power level	Cooling	dB(A)		62	70
Heating		dB(A)		62	70	
Sound pressure level	Cooling	dB(A)		P-Hi : 47 Hi : 39 Me : 36 Lo : 30	48	
	Heating	dB(A)		P-Hi : 47 Hi : 39 Me : 36 Lo : 29	50	
Silent mode sound pressure level			-			
Exterior dimensions (Height x Width x Depth)	mm		Unit 298 × 840 × 840 Panel 35 × 950 × 950		1300×970×370	
Exterior appearance (Munsell color)			Plaster white (6.8Y8.9/0.2) near equivalent		Stucco white (4.2Y7.5/1.1) near equivalent	
Net weight	kg		Unit 25 Panel 5		105	
Compressor type & Q'ty			-		RMT5134MDE2×1	
Compressor motor (Starting method)	kW		-		Direct line start	
Refrigerant oil (Amount, type)	L		-		0.9 (M-MA68)	
Refrigerant (Type, amount, pre-charge length)	kg		R410A 4.5 in outdoor unit (Incl. the amount for the piping of 30m)			
Heat exchanger			Louver fin & inner grooved tubing		M shape fin & inner grooved tubing	
Refrigerant control			Electronic expansion valve			
Fan type & Q'ty			Turbo fan ×1		Propeller fan ×2	
Fan motor (Starting method)	W		140 < Direct line start >		86 × 2 < Direct line start >	
Air flow	Cooling	m³/min		P-Hi : 37 Hi : 26 Me : 23 Lo : 17		
	Heating	m³/min		100		
Available external static pressure	Pa		0			
Outside air intake			Possible			
Air filter, Quality / Quantity			Pocket plastic net ×1 (Washable)			
Shock & vibration absorber			Rubber sleeve(for fan motor)		Rubber sleeve(for compressor)	
Electric heater	W		-		20 (Crank case heater)	
Operation control	Remote control	(Option) Wired : RC-EX3A, RC-E5, RCH-E3 Wireless : RCN-T-5AW-E2				
	Room temperature control	Thermostat by electronics				
	Operation display	-				
Safety equipments			Overload protection for fan motor Frost protection thermostat Internal thermostat for fan motor Abnormal discharge temperature protection			
Installation data	Refrigerant piping size (O.D.)	mm		Liquid line : I/U φ 9.52 (3/8") Pipe φ 9.52(3/8")x0.8 O/U φ 9.52 (3/8")		
				Gas line : φ 15.88 (5/8") φ 15.88(5/8")x1.0 φ 15.88 (5/8")		
	Connecting method			Flare piping		
	Attached length of piping	m		-		
	Insulation for piping			Necessary (both Liquid & Gas lines)		
	Refrigerant line (one way) length	m		Max.100m		
Vertical height diff. between O/U and I/U	m		Max.30m (Outdoor unit is higher)		Max.15m (Outdoor unit is lower)	
Drain hose			Hose connectable VP25(O.D.32)		Hole size φ 20 x 3 pcs	
Drain pump, max lift height	mm		Built-in drain pump , 850		-	
Recommended breaker size	A		-			
L.R.A. (Locked rotor ampere)	A		5.0			
Interconnecting wires	Size x Core number		φ 1.6mm x 3 cores (Including earth cable) / Terminal block (Screw fixing type)			
IP number			IPX0		IP24	
Standard accessories			Mounting kit, Drain hose		Edging	
Option parts			-			

Notes (1) The data are measured at the following conditions.

The pipe length is 7.5m.

Operation	Indoor air temperature		Outdoor air temperature		Standards
	DB	WB	DB	WB	
Cooling	27°C	19°C	35°C	24°C	ISO5151-T1
Heating	20°C	-	7°C	6°C	ISO5151-H1

(2) This air-conditioner is manufactured and tested in conformity with the ISO.

(3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.

(4) Select the breaker size according to the own national standard.

(5) The operation data indicate when the air-conditioner is operated at 230V 50Hz or 220V 60Hz.

Item		Model	FDT100VSVXH		
			Indoor unit FDT100VH	Outdoor unit FDC100VSX	
Power source			3 Phase, 380-415V 50Hz / 380V 60Hz		
Operation data	Nominal cooling capacity (range)	kW	10.0 [4.0(Min.) - 11.2(Max.)]		
	Nominal heating capacity (range)	kW	11.2 [4.0(Min.) - 16.0(Max.)]		
	Power consumption	Cooling	kW	2.50	
		Heating		2.58	
	Max power consumption		5.16		
	Running current	Cooling	A	3.7 / 3.9	
		Heating		3.8 / 4.0	
	Inrush current, max current		5 , 15		
	Power factor	Cooling	%	98 / 97	
		Heating		98	
	EER	Cooling		4.00	
	COP	Heating		4.34	
Sound power level	Cooling	dB(A)	62		
	Heating		70		
Sound pressure level	Cooling	dB(A)	P-Hi : 47 Hi : 39 Me : 36 Lo : 30		
	Heating		P-Hi : 47 Hi : 39 Me : 36 Lo : 29		
Silent mode sound pressure level			-		
Exterior dimensions (Height x Width x Depth)		mm	Unit 298 × 840 × 840 Panel 35 × 950 × 950	1300×970×370	
Exterior appearance (Munsell color)			Plaster white (6.8Y8.9/0.2) near equivalent	Stucco white (4.2Y7.5/1.1) near equivalent	
Net weight		kg	Unit 25 Panel 5	105	
Compressor type & Q'ty			-	RMT5134MDE3×1	
Compressor motor (Starting method)		kW	-	Direct line start	
Refrigerant oil (Amount, type)		L	-	0.9 (M-MA68)	
Refrigerant (Type, amount, pre-charge length)		kg	R410A 4.5 in outdoor unit (Incl. the amount for the piping of 30m)		
Heat exchanger			Louver fin & inner grooved tubing	M shape fin & inner grooved tubing	
Refrigerant control			Electronic expansion valve		
Fan type & Q'ty			Turbo fan ×1	Propeller fan ×2	
Fan motor (Starting method)		W	140 < Direct line start >	86 × 2 < Direct line start >	
Air flow	Cooling	m³/min	P-Hi : 37 Hi : 26 Me : 23 Lo : 17		
	Heating		100		
Available external static pressure		Pa	0		
Outside air intake			Possible		
Air filter, Quality / Quantity			Pocket plastic net ×1(Washable)		
Shock & vibration absorber			Rubber sleeve(for fan motor)		
Electric heater		W	-	20 (Crank case heater)	
Operation control	Remote control		(Option) Wired : RC-EX3A, RC-E5, RCH-E3 Wireless : RCN-T-5AW-E2		
	Room temperature control		Thermostat by electronics		
	Operation display		-		
Safety equipments			Overload protection for fan motor Frost protection thermostat Internal thermostat for fan motor Abnormal discharge temperature protection		
Installation data	Refrigerant piping size (O.D.)	mm	Liquid line : I/U φ 9.52 (3/8")	Pipe φ 9.52(3/8")x0.8 O/U φ 9.52 (3/8")	
	Connecting method		Gas line : φ 15.88 (5/8")	φ 15.88(5/8")x1.0 φ 15.88 (5/8")	
	Attached length of piping	m	Flare piping		
	Insulation for piping		Necessary (both Liquid & Gas lines)		
	Refrigerant line (one way) length	m	Max.100m		
	Vertical height diff. between O/U and I/U	m	Max.30m (Outdoor unit is higher)	Max.15m (Outdoor unit is lower)	
Drain hose		Hose connectable VP25(O.D.32)		Hole size φ 20 x 3 pcs	
Drain pump, max lift height		mm	Built-in drain pump , 850		
Recommended breaker size		A	-		
L.R.A. (Locked rotor ampere)		A	5.0		
Interconnecting wires Size x Core number			φ 1.6mm x 3 cores (Including earth cable) / Terminal block (Screw fixing type)		
IP number			IPX0	IP24	
Standard accessories			Mounting kit, Drain hose	Edging	
Option parts			-		

Notes (1) The data are measured at the following conditions. The pipe length is 7.5m.

Item	Indoor air temperature		Outdoor air temperature		Standards
	DB	WB	DB	WB	
Cooling	27°C	19°C	35°C	24°C	ISO5151-T1
Heating	20°C	-	7°C	6°C	ISO5151-H1

(2) This air-conditioner is manufactured and tested in conformity with the ISO.

(3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.

(4) Select the breaker size according to the own national standard.

(5) The operation data indicate when the air-conditioner is operated at 400V 50Hz or 380V 60Hz.

Item		Model	FDT125VNXVH		
			Indoor unit FDT125VH	Outdoor unit FDC125VNX	
Power source			1 Phase, 220-240V 50Hz / 220V 60Hz		
Operation data	Nominal cooling capacity (range)	kW	12.5 [5.0(Min.) - 14.0(Max.)]		
	Nominal heating capacity (range)	kW	14.0 [4.0(Min.) - 17.0(Max.)]		
	Power consumption	Cooling	kW	3.42	
		Heating		3.43	
	Max power consumption		5.49		
	Running current	Cooling	A	15.0 / 15.7	
		Heating		15.2 / 15.9	
	Inrush current, max current		5 , 26		
	Power factor	Cooling	%	99	
		Heating		98	
	EER	Cooling		3.65	
	COP	Heating		4.08	
	Sound power level	Cooling	dB(A)	63	
Heating		64			
Sound pressure level	Cooling	dB(A)	P-Hi : 48 Hi : 41 Me : 39 Lo : 31		
	Heating		P-Hi : 48 Hi : 41 Me : 38 Lo : 31		
Silent mode sound pressure level			-		
Exterior dimensions (Height x Width x Depth)		mm	Unit 298 × 840 × 840 Panel 35 × 950 × 950	1300×970×370	
Exterior appearance (Munsell color)			Plaster white (6.8Y8.9/0.2) near equivalent	Stucco white (4.2Y7.5/1.1) near equivalent	
Net weight		kg	Unit 25 Panel 5	105	
Compressor type & Q'ty			-	RMT5134MDE2×1	
Compressor motor (Starting method)		kW	-	Direct line start	
Refrigerant oil (Amount, type)		L	-	0.9 (M-MA68)	
Refrigerant (Type, amount, pre-charge length)		kg	R410A 4.5 in outdoor unit (Incl. the amount for the piping of 30m)		
Heat exchanger			Louver fin & inner grooved tubing	M shape fin & inner grooved tubing	
Refrigerant control			Electronic expansion valve		
Fan type & Q'ty			Turbo fan ×1	Propeller fan ×2	
Fan motor (Starting method)		W	140 < Direct line start >	86 × 2 < Direct line start >	
Air flow	Cooling Heating	m³/min	P-Hi : 38 Hi : 28 Me : 25 Lo : 18	100	
Available external static pressure		Pa	0		
Outside air intake			Possible		
Air filter, Quality / Quantity			Pocket plastic net ×1(Washable)		
Shock & vibration absorber			Rubber sleeve(for fan motor)		
Electric heater		W	-	20 (Crank case heater)	
Operation control	Remote control		(Option) Wired : RC-EX3A, RC-E5, RCH-E3 Wireless : RCN-T-5AW-E2		
	Room temperature control		Thermostat by electronics		
	Operation display		-		
Safety equipments			Overload protection for fan motor Frost protection thermostat Internal thermostat for fan motor Abnormal discharge temperature protection		
Installation data	Refrigerant piping size (O.D.)	mm	Liquid line : I/U φ 9.52 (3/8") Gas line : φ 15.88 (5/8")	Pipe φ 9.52(3/8")x0.8 φ 15.88(5/8")x1.0 φ 15.88 (5/8")	
	Connecting method		Flare piping		
	Attached length of piping	m	-		
	Insulation for piping		Necessary (both Liquid & Gas lines)		
	Refrigerant line (one way) length	m	Max.100m		
	Vertical height diff. between O/U and I/U	m	Max.30m (Outdoor unit is higher) Max.15m (Outdoor unit is lower)		
Drain hose		Hose connectable VP25(O.D.32) Hole size φ 20 x 3 pcs			
Drain pump, max lift height		mm	Built-in drain pump , 850		
Recommended breaker size		A	-		
L.R.A. (Locked rotor ampere)		A	5.0		
Interconnecting wires Size x Core number			φ 1.6mm x 3 cores (Including earth cable) / Terminal block (Screw fixing type)		
IP number			IPX0		
Standard accessories			Mounting kit, Drain hose		
Option parts			-		

Notes (1) The data are measured at the following conditions. The pipe length is 7.5m.

Item	Indoor air temperature		Outdoor air temperature		Standards
	DB	WB	DB	WB	
Cooling	27°C	19°C	35°C	24°C	ISO5151-T1
Heating	20°C	-	7°C	6°C	ISO5151-H1

- (2) This air-conditioner is manufactured and tested in conformity with the ISO.
- (3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.
- (4) Select the breaker size according to the own national standard.
- (5) The operation data indicate when the air-conditioner is operated at 230V 50Hz or 220V 60Hz.

Item		Model	FDT125VSVXH		
			Indoor unit FDT125VH	Outdoor unit FDC125VSX	
Power source			3 Phase, 380-415V 50Hz / 380V 60Hz		
Operation data	Nominal cooling capacity (range)	kW	12.5 [5.0(Min.) - 14.0(Max.)]		
	Nominal heating capacity (range)	kW	14.0 [4.0(Min.) - 18.0(Max.)]		
	Power consumption	Cooling	kW	3.42	
		Heating		3.43	
	Max power consumption		6.86		
	Running current	Cooling	A	5.0 / 5.3	
		Heating		5.1 / 5.3	
	Inrush current, max current		5 , 15		
	Power factor	Cooling	%	99 / 98	
		Heating		97 / 98	
	EER	Cooling		3.65	
	COP	Heating		4.08	
Sound power level	Cooling	dB(A)	63	70	
	Heating		64		
Sound pressure level	Cooling	dB(A)	P-Hi : 48 Hi : 41 Me : 39 Lo : 31	48	
	Heating		P-Hi : 48 Hi : 41 Me : 38 Lo : 31	50	
Silent mode sound pressure level			-		
Exterior dimensions (Height x Width x Depth)	mm		Unit 298 × 840 × 840 Panel 35 × 950 × 950	1300×970×370	
Exterior appearance (Munsell color)			Plaster white (6.8Y8.9/0.2) near equivalent	Stucco white (4.2Y7.5/1.1) near equivalent	
Net weight	kg		Unit 25 Panel 5	105	
Compressor type & Q'ty			-	RMT5134MDE3×1	
Compressor motor (Starting method)	kW		-	Direct line start	
Refrigerant oil (Amount, type)	L		-	0.9 (M-MA68)	
Refrigerant (Type, amount, pre-charge length)	kg		R410A 4.5 in outdoor unit (Incl. the amount for the piping of 30m)		
Heat exchanger			Louver fin & inner grooved tubing	M shape fin & inner grooved tubing	
Refrigerant control			Electronic expansion valve		
Fan type & Q'ty			Turbo fan ×1	Propeller fan ×2	
Fan motor (Starting method)	W		140 < Direct line start >	86 x 2 < Direct line start >	
Air flow	Cooling	m³/min	P-Hi : 38 Hi : 28 Me : 25 Lo : 18		
	Heating		100		
Available external static pressure	Pa		0		
Outside air intake			Possible		
Air filter, Quality / Quantity			Pocket plastic net ×1(Washable)		
Shock & vibration absorber			Rubber sleeve(for fan motor)		
Electric heater	W		-	20 (Crank case heater)	
Operation control	Remote control		(Option) Wired : RC-EX3A, RC-E5, RCH-E3 Wireless : RCN-T-5AW-E2		
	Room temperature control		Thermostat by electronics		
	Operation display		-		
Safety equipments			Overload protection for fan motor Frost protection thermostat Internal thermostat for fan motor Abnormal discharge temperature protection		
Installation data	Refrigerant piping size (O.D.)	mm	Liquid line : I/U φ 9.52 (3/8")	Pipe φ 9.52(3/8")x0.8 O/U φ 9.52 (3/8")	
	Connecting method		Gas line : φ 15.88 (5/8")	φ 15.88(5/8")x1.0 φ 15.88 (5/8")	
	Attached length of piping	m	Flare piping		
	Insulation for piping		Necessary (both Liquid & Gas lines)		
	Refrigerant line (one way) length	m	Max.100m		
	Vertical height diff. between O/U and I/U	m	Max.30m (Outdoor unit is higher) Max.15m (Outdoor unit is lower)		
Drain hose			Hose connectable VP25(O.D.32)	Hole size φ 20 x 3 pcs	
Drain pump, max lift height	mm		Built-in drain pump , 850		
Recommended breaker size	A		-		
L.R.A. (Locked rotor ampere)	A		5.0		
Interconnecting wires	Size x Core number		φ 1.6mm x 3 cores (Including earth cable) / Terminal block (Screw fixing type)		
IP number			IPX0	IP24	
Standard accessories			Mounting kit, Drain hose	Edging	
Option parts			-		

Notes (1) The data are measured at the following conditions. The pipe length is 7.5m.

Item	Indoor air temperature		Outdoor air temperature		Standards
	DB	WB	DB	WB	
Cooling	27°C	19°C	35°C	24°C	ISO5151-T1
Heating	20°C	-	7°C	6°C	ISO5151-H1

(2) This air-conditioner is manufactured and tested in conformity with the ISO.

(3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.

(4) Select the breaker size according to the own national standard.

(5) The operation data indicate when the air-conditioner is operated at 400V 50Hz or 380V 60Hz.

Model		FDT140VNXVH		
Item		Indoor unit FDT140VH	Outdoor unit FDC140VNX	
Power source		1 Phase, 220-240V 50Hz / 220V 60Hz		
Operation data	Nominal cooling capacity (range)	kW 14.0 [5.0(Min.) - 16.0(Max.)]		
	Nominal heating capacity (range)	kW 16.0 [4.0(Min.) - 18.0(Max.)]		
	Power consumption	Cooling	kW 4.58	
		Heating	4.20	
	Max power consumption	kW 5.96		
	Running current	Cooling	A 20.3 / 21.2	
		Heating	18.6 / 19.5	
	Inrush current, max current	A 5 , 26		
	Power factor	Cooling	% 98	
		Heating	98	
	EER	Cooling	3.06	
	COP	Heating	3.81	
	Sound power level	Cooling	dB(A) 63	
Heating		64		
Sound pressure level	Cooling	P-Hi : 48 Hi : 42 Me : 39 Lo : 32		
	Heating	P-Hi : 48 Hi : 41 Me : 38 Lo : 31		
Silent mode sound pressure level	dB(A) -		72	
Exterior dimensions (Height x Width x Depth)		mm Unit 298 x 840 x 840 Panel 35 x 950 x 950	1300x970x370	
Exterior appearance (Munsell color)		Plaster white (6.8Y8.9/0.2) near equivalent	Stucco white (4.2Y7.5/1.1) near equivalent	
Net weight		kg Unit 25 Panel 5	105	
Compressor type & Q'ty		RMT5134MDE2x1		
Compressor motor (Starting method)		Direct line start		
Refrigerant oil (Amount, type)		L - 0.9 (M-MA68)		
Refrigerant (Type, amount, pre-charge length)		kg R410A 4.5 in outdoor unit (Incl. the amount for the piping of 30m)		
Heat exchanger		Louver fin & inner grooved tubing M shape fin & inner grooved tubing		
Refrigerant control		Electronic expansion valve		
Fan type & Q'ty		Turbo fan x1 Propeller fan x2		
Fan motor (Starting method)		W 140 < Direct line start > 86 x 2 < Direct line start >		
Air flow	Cooling	m³/min P-Hi : 38 Hi : 29 Me : 26 Lo : 19		
	Heating	100		
Available external static pressure		Pa 0		
Outside air intake		Possible -		
Air filter, Quality / Quantity		Pocket plastic net x1(Washable) -		
Shock & vibration absorber		Rubber sleeve(for fan motor) Rubber sleeve(for compressor)		
Electric heater		W - 20 (Crank case heater)		
Operation control	Remote control	(Option) Wired : RC-EX3A, RC-E5, RCH-E3 Wireless : RCN-T-5AW-E2		
	Room temperature control	Thermostat by electronics		
	Operation display	-		
Safety equipments		Overload protection for fan motor Frost protection thermostat Internal thermostat for fan motor Abnormal discharge temperature protection		
Installation data	Refrigerant piping size (O.D.)	mm Liquid line : I/U φ 9.52 (3/8") Pipe φ 9.52(3/8")x0.8 O/U φ 9.52 (3/8")		
	Connecting method	Gas line : φ 15.88 (5/8") φ 15.88(5/8")x1.0 φ 15.88 (5/8")		
	Attached length of piping	m - Flare piping		
	Insulation for piping	Necessary (both Liquid & Gas lines)		
	Refrigerant line (one way) length	m Max.100m		
	Vertical height diff. between O/U and I/U	m Max.30m (Outdoor unit is higher) Max.15m (Outdoor unit is lower)		
Drain hose		Hose connectable VP25(O.D.32) Hole size φ 20 x 3 pcs		
Drain pump, max lift height		mm Built-in drain pump , 850 -		
Recommended breaker size		A -		
L.R.A. (Locked rotor ampere)		A 5.0		
Interconnecting wires Size x Core number		φ 1.6mm x 3 cores (Including earth cable) / Terminal block (Screw fixing type)		
IP number		IPX0 IP24		
Standard accessories		Mounting kit, Drain hose Edging		
Option parts		-		

Notes (1) The data are measured at the following conditions. The pipe length is 7.5m.

Item	Indoor air temperature		Outdoor air temperature		Standards
	DB	WB	DB	WB	
Cooling	27°C	19°C	35°C	24°C	ISO5151-T1
Heating	20°C	-	7°C	6°C	ISO5151-H1

- (2) This air-conditioner is manufactured and tested in conformity with the ISO.
- (3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.
- (4) Select the breaker size according to the own national standard.
- (5) The operation data indicate when the air-conditioner is operated at 230V 50Hz or 220V 60Hz.

Item		Model	FDT140VSVH		
			Indoor unit FDT140VH	Outdoor unit FDC140VSX	
Power source			3 Phase, 380-415V 50Hz / 380V 60Hz		
Operation data	Nominal cooling capacity (range)	kW	14.0 [5.0(Min.) - 16.0(Max.)]		
	Nominal heating capacity (range)	kW	16.0 [4.0(Min.) - 20.0(Max.)]		
	Power consumption	Cooling	kW	4.58	
		Heating		4.20	
	Max power consumption		7.46		
	Running current	Cooling	A	6.7 / 7.1	
		Heating		6.2 / 6.5	
	Inrush current, max current		5 , 15		
	Power factor	Cooling	%	98	
		Heating		98	
	EER	Cooling		3.06	
	COP	Heating		3.81	
Sound power level	Cooling	dB(A)	63	72	
	Heating		64		
Sound pressure level	Cooling	dB(A)	P-Hi : 48 Hi : 42 Me : 39 Lo : 32	49	
	Heating		P-Hi : 48 Hi : 41 Me : 38 Lo : 31	52	
Silent mode sound pressure level			-		
Exterior dimensions (Height x Width x Depth)		mm	Unit 298 × 840 × 840 Panel 35 × 950 × 950	1300×970×370	
Exterior appearance (Munsell color)			Plaster white (6.8Y8.9/0.2) near equivalent	Stucco white (4.2Y7.5/1.1) near equivalent	
Net weight		kg	Unit 25 Panel 5	105	
Compressor type & Q'ty			-	RMT5134MDE3×1	
Compressor motor (Starting method)		kW	-	Direct line start	
Refrigerant oil (Amount, type)		L	-	0.9 (M-MA68)	
Refrigerant (Type, amount, pre-charge length)		kg	R410A 4.5 in outdoor unit (Incl. the amount for the piping of 30m)		
Heat exchanger			Louver fin & inner grooved tubing	M shape fin & inner grooved tubing	
Refrigerant control			Electronic expansion valve		
Fan type & Q'ty			Turbo fan ×1	Propeller fan ×2	
Fan motor (Starting method)		W	140 < Direct line start >	86 × 2 < Direct line start >	
Air flow	Cooling	m³/min	P-Hi : 38 Hi : 29 Me : 26 Lo : 19		
	Heating		100		
Available external static pressure		Pa	0		
Outside air intake			Possible		
Air filter, Quality / Quantity			Pocket plastic net ×1(Washable)		
Shock & vibration absorber			Rubber sleeve(for fan motor)		
Electric heater		W	-	20 (Crank case heater)	
Operation control	Remote control		(Option) Wired : RC-EX3A, RC-E5, RCH-E3 Wireless : RCN-T-5AW-E2		
	Room temperature control		Thermostat by electronics		
	Operation display		-		
Safety equipments			Overload protection for fan motor Frost protection thermostat Internal thermostat for fan motor Abnormal discharge temperature protection		
Installation data	Refrigerant piping size (O.D.)	mm	Liquid line : I/U φ 9.52 (3/8")	Pipe φ 9.52(3/8")x0.8 O/U φ 9.52 (3/8")	
	Connecting method		Gas line : φ 15.88 (5/8")	φ 15.88(5/8")x1.0 φ 15.88 (5/8")	
	Attached length of piping	m	Flare piping		
	Insulation for piping		Necessary (both Liquid & Gas lines)		
	Refrigerant line (one way) length	m	Max.100m		
	Vertical height diff. between O/U and I/U	m	Max.30m (Outdoor unit is higher)	Max.15m (Outdoor unit is lower)	
Drain hose		Hose connectable VP25(O.D.32)		Hole size φ 20 x 3 pcs	
Drain pump, max lift height		mm	Built-in drain pump , 850		
Recommended breaker size		A	-		
L.R.A. (Locked rotor ampere)		A	5.0		
Interconnecting wires Size x Core number			φ 1.6mm x 3 cores (Including earth cable) / Terminal block (Screw fixing type)		
IP number			IPX0	IP24	
Standard accessories			Mounting kit, Drain hose	Edging	
Option parts			-		

Notes (1) The data are measured at the following conditions. The pipe length is 7.5m.

Item	Indoor air temperature		Outdoor air temperature		Standards
	DB	WB	DB	WB	
Cooling	27°C	19°C	35°C	24°C	ISO5151-T1
Heating	20°C	-	7°C	6°C	ISO5151-H1

(2) This air-conditioner is manufactured and tested in conformity with the ISO.

(3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.

(4) Select the breaker size according to the own national standard.

(5) The operation data indicate when the air-conditioner is operated at 400V 50Hz or 380V 60Hz.

(2) Twin type

Item		Model	FDT140VNXPVH		
			Indoor unit FDT71VH (2 units)	Outdoor unit FDC140VNX	
Power source			1 Phase, 220-240V 50Hz / 220V 60Hz		
Operation data	Nominal cooling capacity (range)	kW	14.0 [5.0(Min.) - 16.0(Max.)]		
	Nominal heating capacity (range)	kW	16.0 [4.0(Min.) - 20.0(Max.)]		
	Power consumption	Cooling	kW	3.88	
		Heating		3.74	
	Max power consumption		5.43		
	Running current	Cooling	A	17.2 / 18.0	
		Heating		16.6 / 17.3	
	Inrush current, max current		5 , 26		
	Power factor	Cooling	%	98	
		Heating		98	
	EER	Cooling		3.61	
	COP	Heating		4.28	
	Sound power level	Cooling	dB(A)	59	72
Heating		60			
Sound pressure level	Cooling	dB(A)	P-Hi : 46 Hi : 34 Me : 31 Lo : 26	49	
	Heating		P-Hi : 46 Hi : 34 Me : 31 Lo : 26	52	
Silent mode sound pressure level			-		
Exterior dimensions (Height x Width x Depth)		mm	Unit 236 × 840 × 840 Panel 35 × 950 × 950	1300×970×370	
Exterior appearance (Munsell color)			Plaster white (6.8Y8.9/0.2) near equivalent	Stucco white (4.2Y7.5/1.1) near equivalent	
Net weight		kg	Unit 21 Panel 5	105	
Compressor type & Q'ty			-	RMT5134MDE2×1	
Compressor motor (Starting method)		kW	-	Direct line start	
Refrigerant oil (Amount, type)		L	-	0.9 (M-MA68)	
Refrigerant (Type, amount, pre-charge length)		kg	R410A 4.5 in outdoor unit (Pre-charged up to the piping length of 30m)		
Heat exchanger			Louver fin & inner grooved tubing	M shape fin & inner grooved tubing	
Refrigerant control			Electronic expansion valve		
Fan type & Q'ty			Turbo fan ×1	Propeller fan ×2	
Fan motor (Starting method)		W	50 < Direct line start >	86 × 2 < Direct line start >	
Air flow	Cooling	m ³ /min	P-Hi : 28 Hi : 18 Me : 15 Lo : 12		
	Heating		100		
Available external static pressure		Pa	0		
Outside air intake			Possible		
Air filter, Quality / Quantity			Pocket plastic net ×1(Washable)		
Shock & vibration absorber			Rubber sleeve(for fan motor)		
Electric heater		W	-	20 (Crank case heater)	
Operation control	Remote control		(Option) Wired : RC-EX3A, RC-E5, RCH-E3 Wireless : RCN-T-5AW-E2		
	Room temperature control		Thermostat by electronics		
	Operation display		-		
Safety equipments			Overload protection for fan motor Frost protection thermostat Internal thermostat for fan motor Abnormal discharge temperature protection		
Installation data	Refrigerant piping size (O.D.)	mm	Liquid line : I/U φ 9.52 (3/8") ② φ 9.52(3/8")x0.8 ① φ 9.52(3/8")x0.8 O/U φ 9.52 (3/8") Gas line : I/U φ 15.88 (5/8") ② φ 15.88(5/8")x1.0 ① φ 15.88(5/8")x1.0 O/U φ 15.88 (5/8")		
	Connecting method		Flare piping		
	Attached length of piping	m	-		
	Insulation for piping		Necessary (both Liquid & Gas lines)		
	Refrigerant line (one way) length	m	Max.100m		
	Vertical height diff. between O/U and I/U	m	Max.30m (Outdoor unit is higher) Max.15m (Outdoor unit is lower)		
Drain hose			Hose connectable VP25(O.D.32)	Hole size φ 20 x 3 pcs	
Drain pump, max lift height		mm	Built-in drain pump , 850		
Recommended breaker size		A	-		
L.R.A. (Locked rotor ampere)		A	5.0		
Interconnecting wires Size x Core number			φ 1.6mm x 3 cores (Including earth cable) / Terminal block (Screw fixing type)		
IP number			IPX0	IP24	
Standard accessories			Mounting kit, Drain hose	Edging	
Option parts			-		

Notes (1) The data are measured at the following conditions.

The pipe length is 7.5m.

Item	Indoor air temperature		Outdoor air temperature		Standards
	DB	WB	DB	WB	
Cooling	27°C	19°C	35°C	24°C	ISO5151-T1
Heating	20°C	-	7°C	6°C	ISO5151-H1

(2) This air-conditioner is manufactured and tested in conformity with the ISO.

(3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.

(4) Select the breaker size according to the own national standard.

(5) The operation data indicate when the air-conditioner is operated at 230V 50Hz or 220V 60Hz.

(6) Indoor unit specifications for one unit. Capacity and operation data is two indoor units are combined and run together.

(7) Branching pipe set "DIS-WA1G"×1(Option). ① : Pipe of O/U-Branch, ② : Pipe of Branch-I/U

Item		Model	FDT140VSPVH		
			Indoor unit FDT71VH (2 units)	Outdoor unit FDC140VSX	
Power source			3 Phase, 380-415V 50Hz / 380V 60Hz		
Operation data	Nominal cooling capacity (range)	kW	14.0 [5.0(Min.) - 16.0(Max.)]		
	Nominal heating capacity (range)	kW	16.0 [4.0(Min.) - 18.0(Max.)]		
	Power consumption	Cooling	kW	3.88	
		Heating		3.74	
	Max power consumption		6.79		
	Running current	Cooling	A	5.7 / 6.0	
		Heating		5.5 / 5.8	
	Inrush current, max current		5 , 15		
	Power factor	Cooling	%	98	
		Heating		98	
	EER	Cooling		3.61	
	COP	Heating		4.28	
	Sound power level	Cooling	dB(A)	59	72
Heating		60			
Sound pressure level	Cooling	dB(A)	P-Hi : 46 Hi : 34 Me : 31 Lo : 26	49	
	Heating		P-Hi : 46 Hi : 34 Me : 31 Lo : 26		
Silent mode sound pressure level			-		
Exterior dimensions (Height x Width x Depth)		mm	Unit 236 × 840 × 840 Panel 35 × 950 × 950	1300×970×370	
Exterior appearance (Munsell color)			Plaster white (6.8Y8.9/0.2) near equivalent	Stucco white (4.2Y7.5/1.1) near equivalent	
Net weight		kg	Unit 21 Panel 5	105	
Compressor type & Q'ty			-	RMT5134MDE3×1	
Compressor motor (Starting method)		kW	-	Direct line start	
Refrigerant oil (Amount, type)		L	-	0.9 (M-MA68)	
Refrigerant (Type, amount, pre-charge length)		kg	R410A 4.5 in outdoor unit (Pre-charged up to the piping length of 30m)		
Heat exchanger			Louver fin & inner grooved tubing	M shape fin & inner grooved tubing	
Refrigerant control			Electronic expansion valve		
Fan type & Q'ty			Turbo fan ×1	Propeller fan ×2	
Fan motor (Starting method)		W	50 < Direct line start >	86 × 2 < Direct line start >	
Air flow	Cooling	m ³ /min	P-Hi : 28 Hi : 18 Me : 15 Lo : 12		
	Heating		100		
Available external static pressure		Pa	0		
Outside air intake			Possible		
Air filter, Quality / Quantity			Pocket plastic net ×1(Washable)		
Shock & vibration absorber			Rubber sleeve(for fan motor)		
Electric heater		W	-	20 (Crank case heater)	
Operation control	Remote control		(Option) Wired : RC-EX3A, RC-E5, RCH-E3 Wireless : RCN-T-5AW-E2		
	Room temperature control		Thermostat by electronics		
	Operation display		-		
Safety equipments			Overload protection for fan motor Frost protection thermostat Internal thermostat for fan motor Abnormal discharge temperature protection		
Installation data	Refrigerant piping size (O.D.)	mm	Liquid line : I/U φ 9.52 (3/8") ② φ 9.52(3/8")x0.8 ① φ 9.52(3/8")x0.8 O/U φ 9.52 (3/8")		
			Gas line : I/U φ 15.88 (5/8") ② φ 15.88(5/8")x1.0 ① φ 15.88(5/8")x1.0 O/U φ 15.88 (5/8")		
	Connecting method		Flare piping		
	Attached length of piping	m	-		
	Insulation for piping		Necessary (both Liquid & Gas lines)		
	Refrigerant line (one way) length	m	Max.100m		
Vertical height diff. between O/U and I/U	m	Max.30m (Outdoor unit is higher) Max.15m (Outdoor unit is lower)			
Drain hose		Hose connectable VP25(O.D.32) Hole size φ 20 x 3 pcs			
Drain pump, max lift height		mm	Built-in drain pump , 850		
Recommended breaker size		A	-		
L.R.A. (Locked rotor ampere)		A	5.0		
Interconnecting wires Size x Core number			φ 1.6mm x 3 cores (Including earth cable) / Terminal block (Screw fixing type)		
IP number			IPX0 IP24		
Standard accessories			Mounting kit, Drain hose Edging		
Option parts			-		

Notes (1) The data are measured at the following conditions.

The pipe length is 7.5m.

Item	Indoor air temperature		Outdoor air temperature		Standards
	DB	WB	DB	WB	
Cooling	27°C	19°C	35°C	24°C	ISO5151-T1
Heating	20°C	-	7°C	6°C	ISO5151-H1

(2) This air-conditioner is manufactured and tested in conformity with the ISO.

(3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.

(4) Select the breaker size according to the own national standard.


(5) The operation data indicate when the air-conditioner is operated at 400V 50Hz or 380V 60Hz.

(6) Indoor unit specifications for one unit. Capacity and operation data is two indoor units are combined and run together.

(7) Branching pipe set "DIS-WA1G"×1(Option). ① : Pipe of O/U-Branch, ② : Pipe of Branch-I/U

1.2 EXTERIOR DIMENSIONS






(1) Indoor units Models FDT71VH

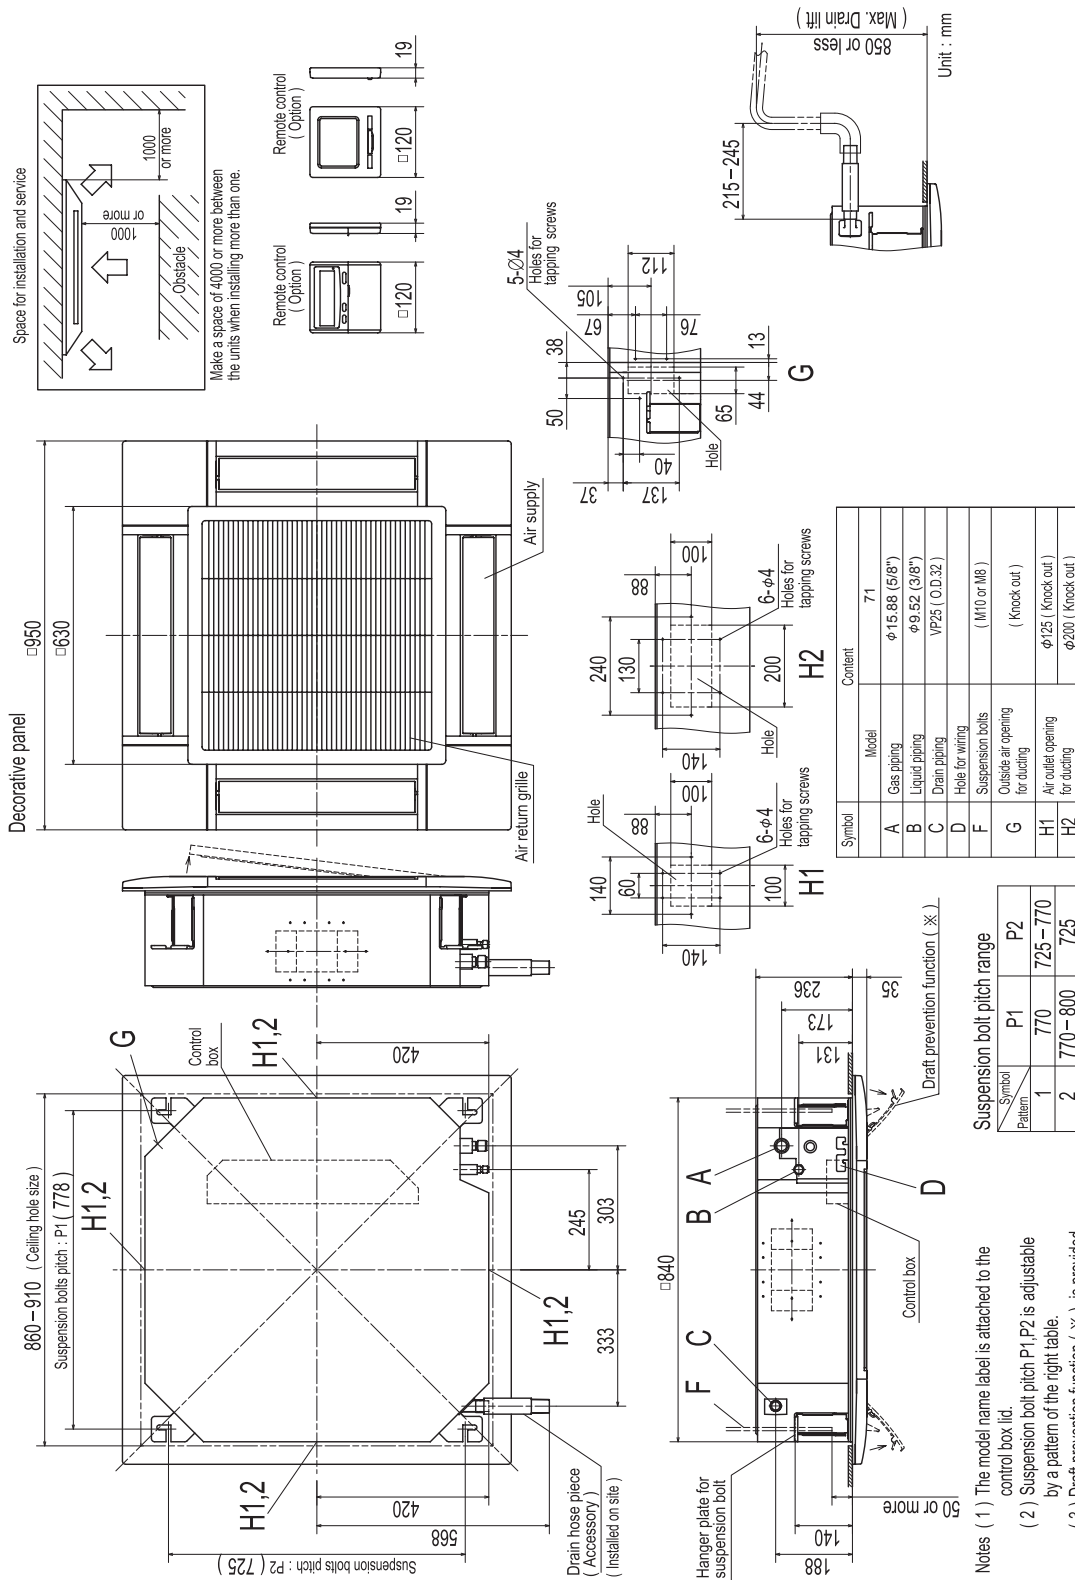

PJF000Z552

Model FDT100VH, 125VH, 140VH

Symbol	Content
A	Gas piping φ15.88 (5/8") (Flare)
B	Liquid piping φ9.52 (3/8") (Flare)
C	Drain piping VP25 (O.D.32)
D	Hole for wiring (M10 or M8)
F	Suspension bolts Outside air opening for ducting (Knock out)
G	Air outlet opening for ducting φ125 (Knock out) φ200 (Knock out)

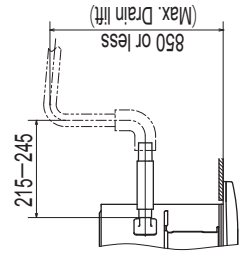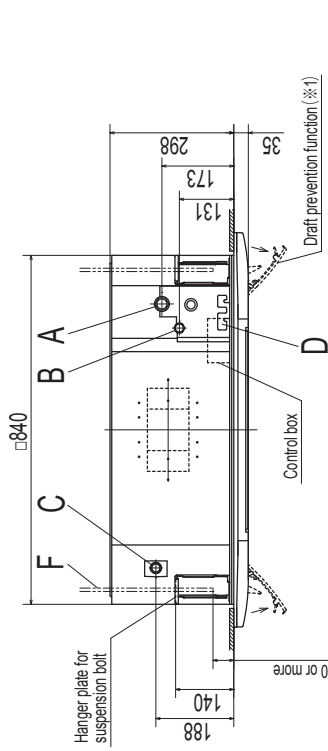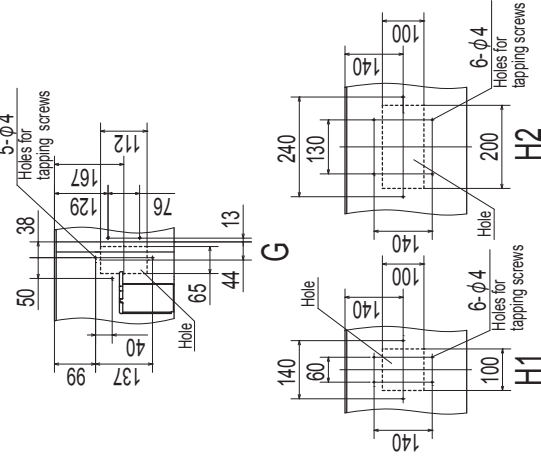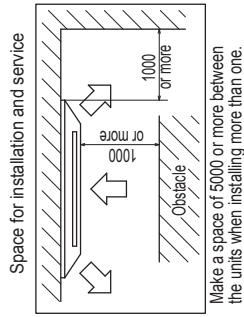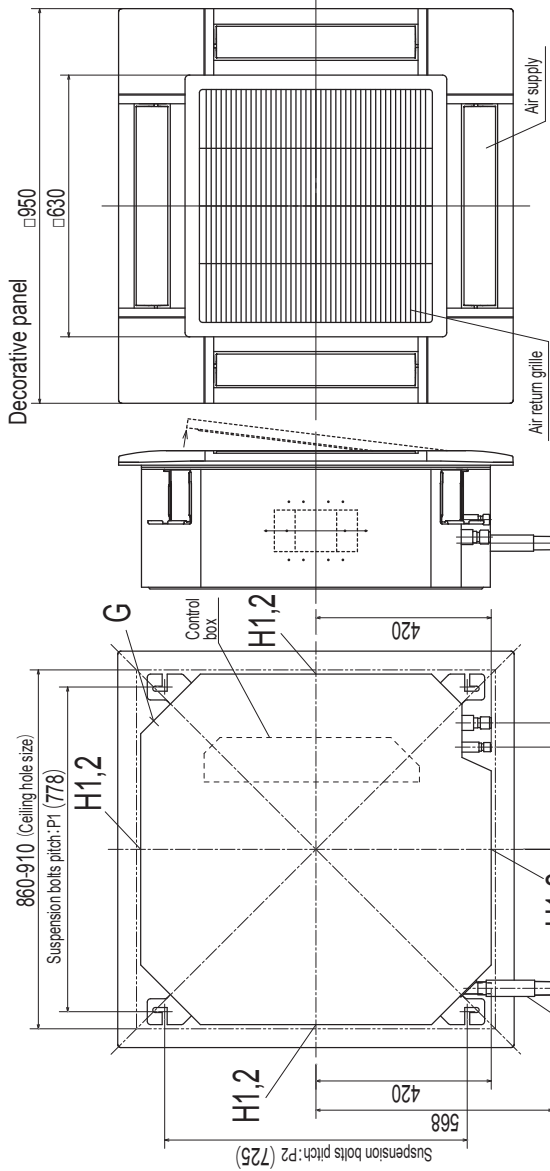

Suspension bolt pitch range

Symbol	P1	P2
1	770	725-770
2	770-800	725

- Notes
- (1) The model name label is attached to the control box lid.
 - (2) Suspension bolt pitch P1, P2 is adjustable by a pattern of the right table.
 - (3) Draft prevention function (※1) is provided on the panel T-PSAE-5AW-E only.

Unit:mm





PJF000Z553

**(2) Outdoor units
Model FDC71VNX**

Notes

- (1) It must not be surrounded by walls on the four sides.
- (2) The unit must be fixed with anchor bolts. An anchor bolt must not protrude more than 15mm.
- (3) Where the unit is subjected to strong winds, lay it in such a direction that the blower outlet faces perpendicularly to the dominant wind direction.
- (4) Leave 1m or more space above the unit.
- (5) A wall in front of the blower outlet must not exceed the unit's height.
- (6) The model name label is attached on the lower right corner of the front panel.

Symbol	Content
A	Service valve connection (gas side) (Flare)
B	Service valve connection (liquid side) (Flare)
C	Pipe/cable draw-out hole
D	Drain discharge hole
E	Anchor bolt hole

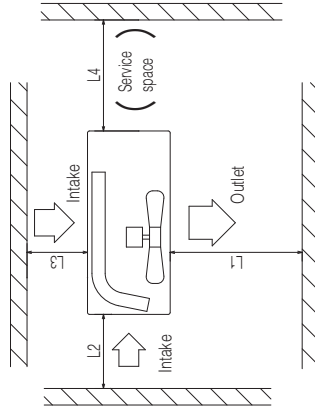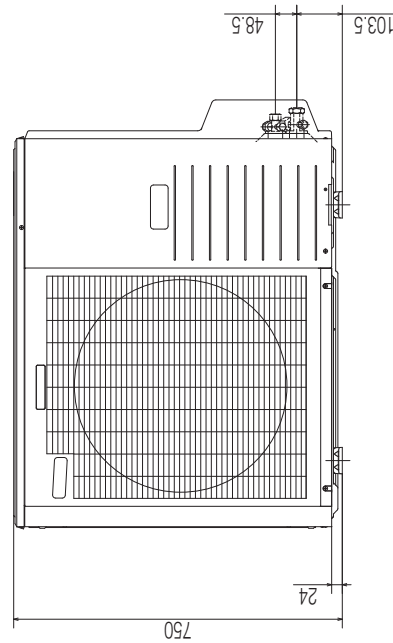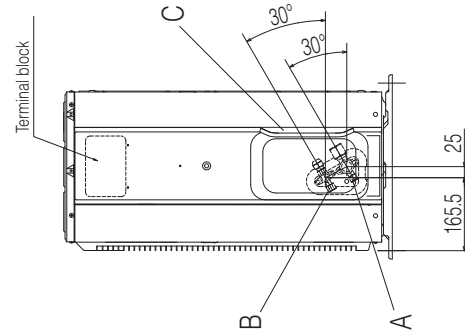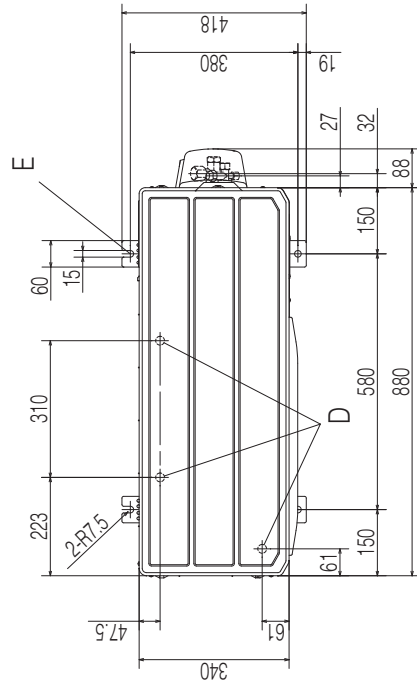

Minimum installation space

Examples of installation Dimensions	I	II	III
L1	Open	Open	500
L2	300	250	Open
L3	100	150	100
L4	250	250	250


Unit:mm

**Models FDC100VNX, 125VNX, 140VNX
100VSX, 125VSX, 140VSX**

Notes

- (1) It must not be surrounded by walls on the four sides.
- (2) The unit must be fixed with anchor bolts. An anchor bolt must not protrude more than 15mm.
- (3) Where the unit is subject to strong winds, lay it in such a direction that the blower outlet faces perpendicularly to the dominant wind direction.
- (4) Leave 1m or more space above the unit.
- (5) A wall in front of the blower outlet must not exceed the unit's height.
- (6) The model name label is attached on the lower right corner of the front panel.
- (7) Connect the Service valve with local pipe by using the pipe of the attachment. (Gas side only)


Symbol	Content
A	Service valve connection of the attached connecting pipe (gas side) $\phi 15.88$ (5/8") (Flare)
B	Service valve connection (liquid side) $\phi 9.52$ (3/8") (Flare)
C	Pipe/cable draw-out hole
D	Drain discharge hole $\phi 20 \times 3$ places
E	Anchor bolt hole M10 \times 4 places
F	Cable draw-out hole $\phi 30$ (front) $\phi 45$ (side) $\phi 50$ (back)

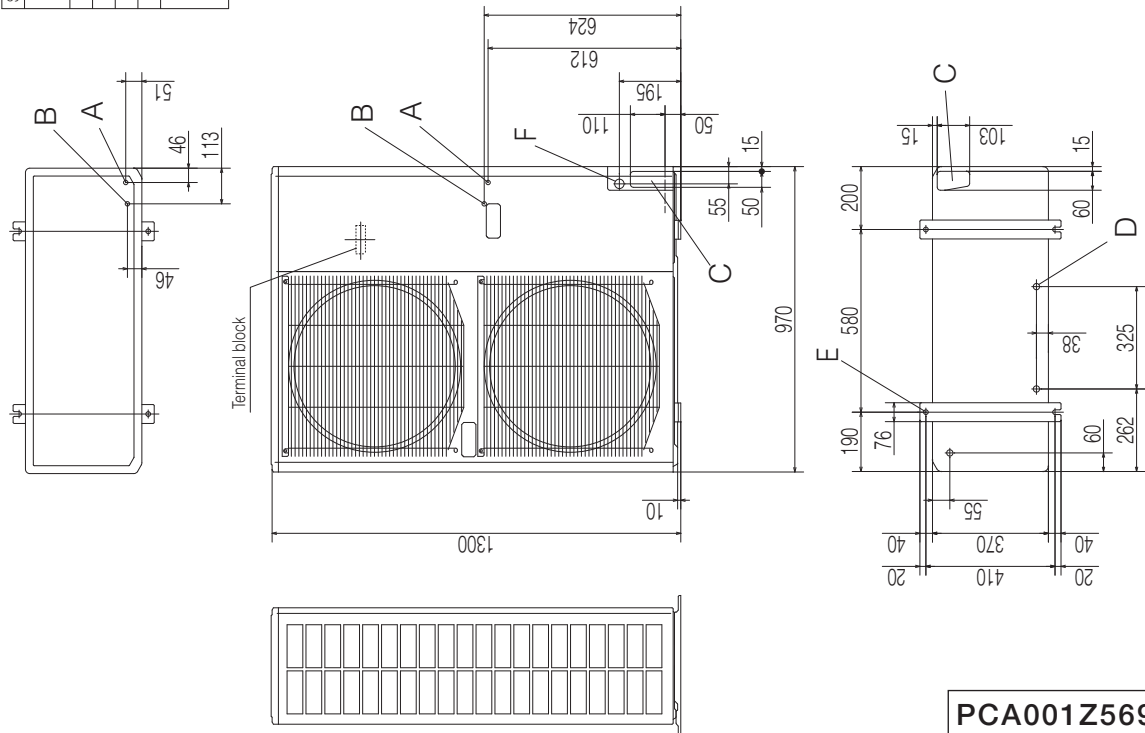

Examples of installation Dimensions	I	II	III
	L1	Open	Open
L2	300	5	Open
L3	150	300	150
L4	5	5	5

Unit:mm

(3) Remote control (Option parts)
(a) Wired remote control
Model RC-EX3A

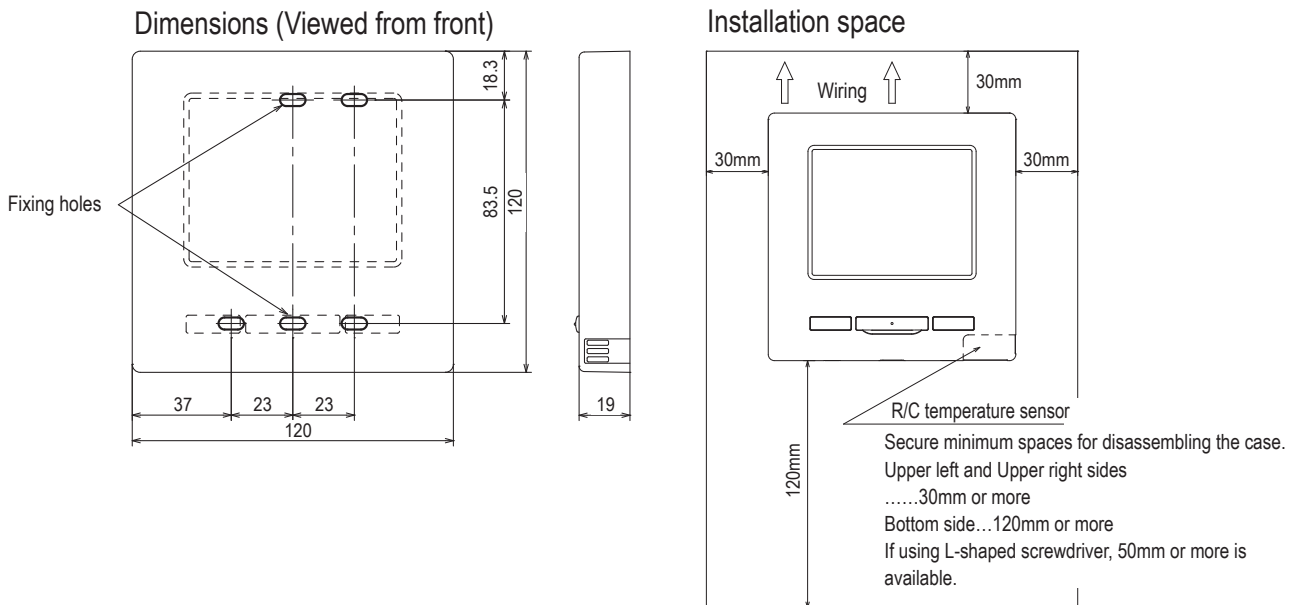

• Do not install the remote control at following places.

- 1) It could cause break-down or deformation of remote control.
 - Where it is exposed to direct sunlight
 - Where the ambient temperature becomes 0 °C or below, or 40 °C or above
 - Where the surface is not flat
 - Where the strength of installation area is insufficient
- 2) Moisture may be attached to internal parts of the remote control, resulting in a display failure.
 - Place with high humidity where condensation occurs on the remote control
 - Where the remote control gets wet
- 3) Accurate room temperature may not be detected using the temperature sensor of the remote control.
 - Where the average room temperature cannot be detected
 - Place near the equipment to generate heat
 - Place affected by outside air in opening/closing the door
 - Place exposed to direct sunlight or wind from air-conditioner
 - Where the difference between wall and room temperature is large
- 4) When you are using the automatic grille up and down panel in the IU, you may not be able to confirm the up and down motion.
 - Where the IU cannot be visually confirmed

R/C cable: 0.3mm²x2 cores

When the cable length is longer than 100 m, the max size for wires used in the R/C case is 0.5 mm². Connect them to wires of larger size near the outside of R/C. When wires are connected, take measures to prevent water, etc. from entering inside.

≤ 200 m	0.5 mm ² x 2 cores
≤ 300m	0.75 mm ² x 2 cores
≤ 400m	1.25 mm ² x 2 cores
≤ 600m	2.0 mm ² x 2 cores

• When installing the unit at a hospital, telecommunication facility, etc., take measures to suppress electric noises.

It could cause malfunction or break-down due to hazardous effects on the inverter, private power generator, high frequency medical equipment, radio communication equipment, etc.


The influences transmitted from the remote control to medical or communication equipment could disrupt medical activities, video broadcasting or cause noise interference.

Adapted RoHS directive

PJZ000Z333


Model RC-E5

Exposed mounting

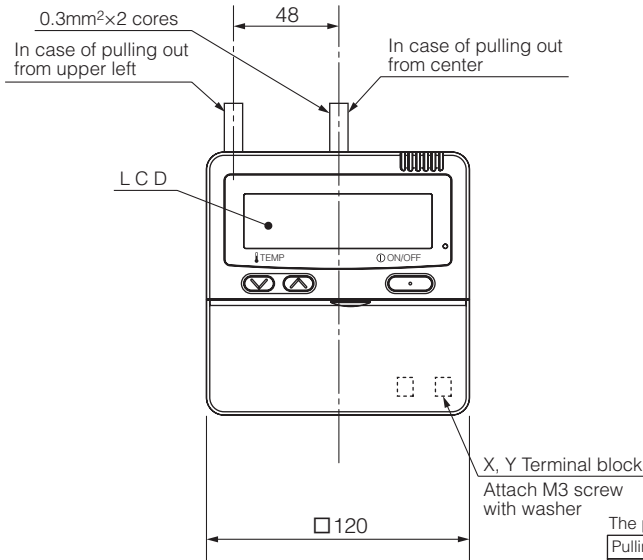


Exterior appearance (Munsell color)	Pearl white (N8.5) near equivalent
-------------------------------------	------------------------------------


Embedded mounting

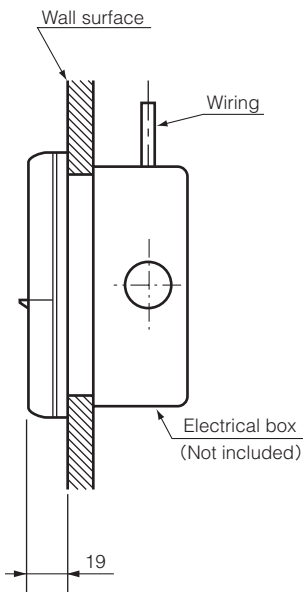


Wiring outlet
Cut off the upper thin part of remote control lower case with a nipper or knife, and grind burrs with a file etc.

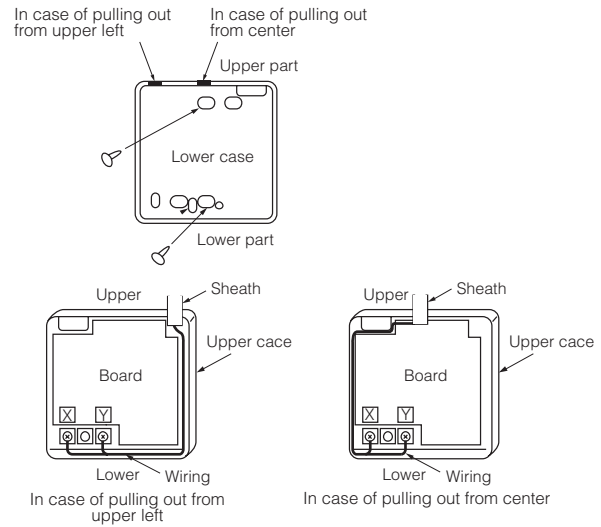

The peeling-off length of sheath	
Pulling out from upper left	Pulling out from center
X wiring : 215mm	X wiring : 170mm
Y wiring : 195mm	Y wiring : 190mm



Remote control installation dimensions

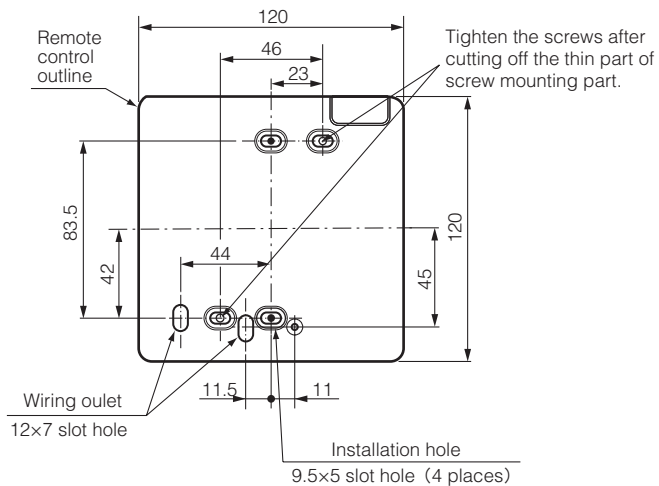

(1) Installation screw for remote control
M4 screw (2 pieces)

Unit:mm

Wiring specifications


(1) If the prolongation is over 100m, change to the size below.
But, wiring in the remote control case should be under 0.5mm². Change the wire size outside of the case according to wire connecting. Waterproof treatment is necessary at the wire connecting section. Be careful about contact failure.

Length	Wiring thickness
100 to 200m	0.5mm²x2 cores
Under 300m	0.75mm²x2 cores
Under 400m	1.25mm²x2 cores
Under 600m	2.0mm²x2 cores

PJZ000Z295

(b) Wireless remote control
RCN-E2

Unit: mm

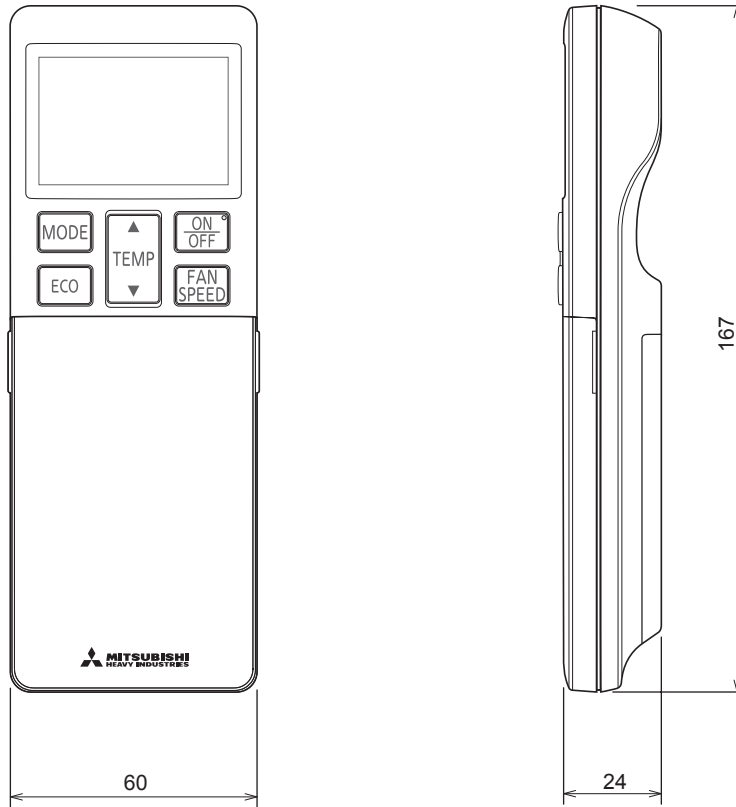

1.3 ELECTRICAL WIRING

(1) Indoor units


Models FDT71VH, 100VH, 125VH, 140VH

Meaning of marks

Item	Description
AM1-4	Draft prevention function motor
CNB-Z	Connector
DM	Drain pump motor
F1,2	Fuse
FMi	Fan motor
FS	Float switch
HS	Humidity sensor
L	Reactor
LED·2	Indication lamp (Green-Normal operation)
LED·3	Indication lamp (Red-Inspection)
LM1-4	Lower motor
PIS	Motion sensor
SW2	Remote control communication address
SW5	Plural units Master / Slave setting
SW6	Model capacity setting
SW7-1	Operation check, drain pump motor test run
TB1	Terminal block (Power source) (□ mark)
TB2	Terminal block (Signal line) (□ mark)
ThC	Temperature sensor (Remote control)
Th-A	Temperature sensor (Return air)
Th-R1,2,3	Temperature sensor (Heat exchanger)

Color marks

Mark	Color	Mark	Color
BK	Black	WH	White
BL	Blue	YE	Yellow
BR	Brown	GY	Gray
OR	Orange	YE / GN	Yellow / Green
RD	Red		

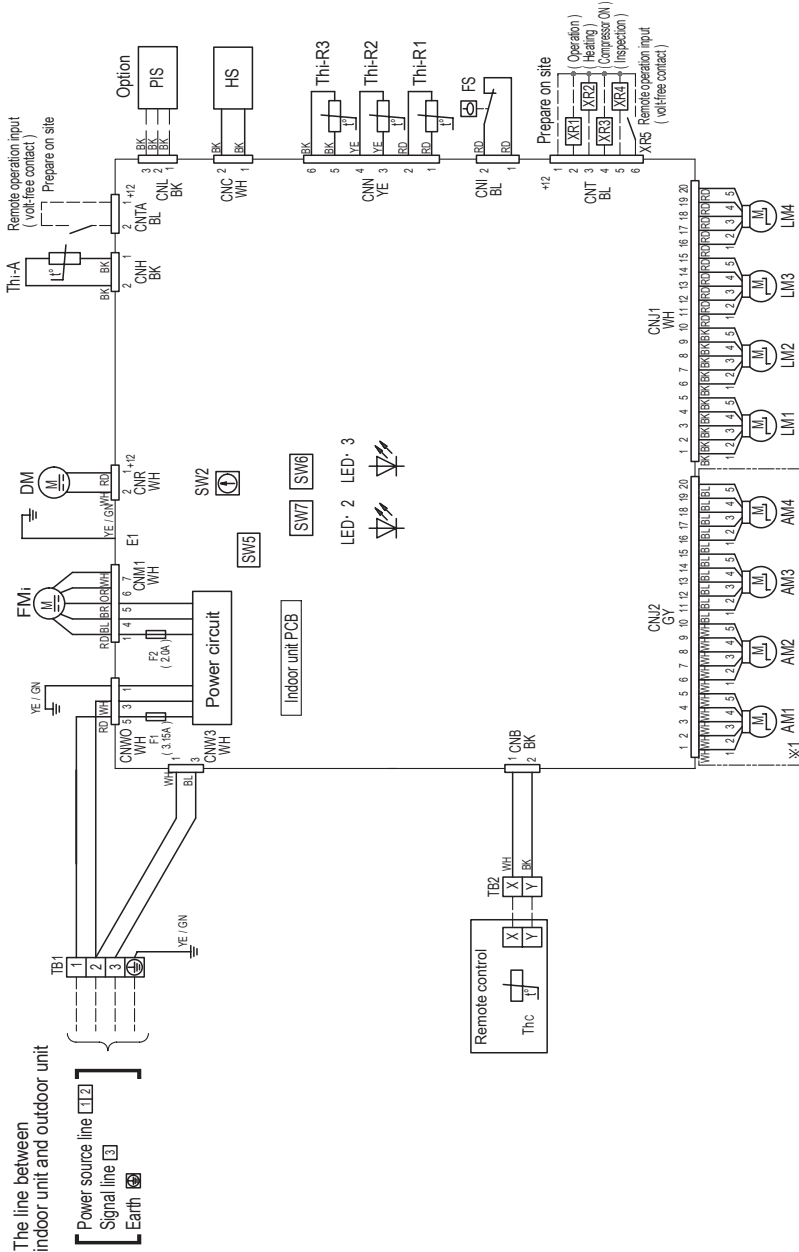

- Notes
1. — indicates wiring on site.
 2. See the wiring diagram of outside unit about the line between indoor unit and outdoor unit.
 3. Use twin core cord (0.3mm²) at remote control line.
See spec sheet of remote control in case that the total length is more than 100m.
 4. Do not put remote control line alongside power source line.
 5. Section 1 (※1) is provided on the panel T-PSAE-SAW-E only.

PJF000Z554


(2) Outdoor units
Model FDC71VNX

Meaning of marks

Item	Description
CM	Compressor motor
FM01	Fan motor
CH	Crankcase heater
DH	Drain pan heater
52X1	Auxiliary relay (for CH)
52X3	Auxiliary relay (for 2OS)
52X4	Auxiliary relay (for DH)
2OS	Solenoid valve for 4-way valve
SM1	Expansion valve for cooling
SM2	Expansion valve for heating
63H1	High pressure switch
Tho-A	Temperature sensor (Outdoor air)
Tho-D	Temperature sensor (Discharge pipe)
Tho-R1/R2	Temperature sensor (Heat exchanger)
Tho-S	Temperature sensor (Suction pipe)
Tho-IPM	Temperature sensor (IPM)
LPT	Low pressure sensor
IPM	Intelligent power module
TB	Terminal block
FF3	Fuse
CnA-Z	Connector
SW9	Pump down switch
SW3.5	Local setting switch
LED1	Indication lamp (GREEN)
LED2	Indication lamp (RED)
L1	Reactor

Color marks

Mark	Color
BK	Black
BL	Blue
BR	Brown
OR	Orange
RD	Red
WH	White
YE	Yellow
YE/GN	Yellow/Green
GY	Gray
PK	Pink

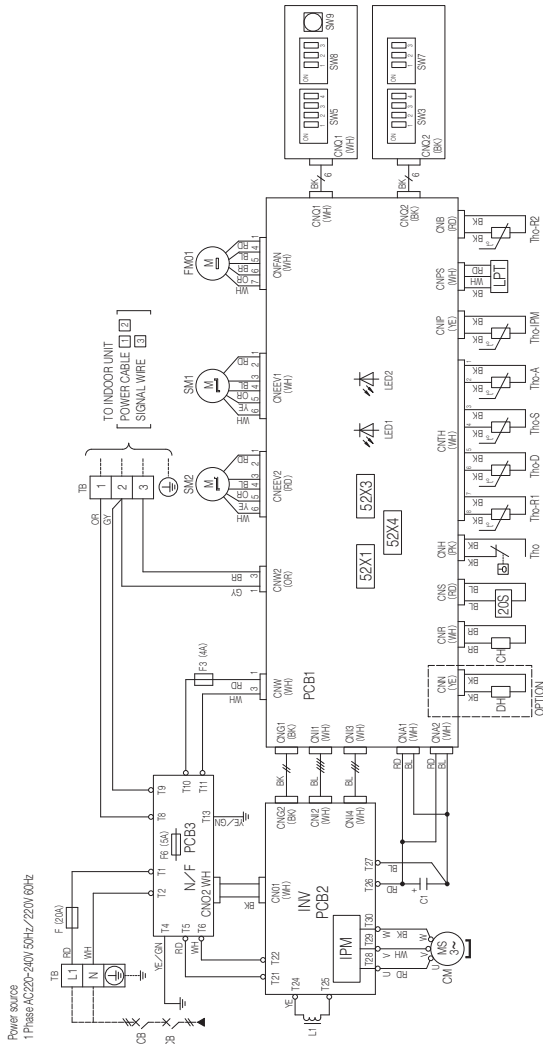

Local setting switch SW3, SW5 (Set up at shipment OFF)

SW3-1	Defrost control change	The defrost operation interval becomes shorter by turning ON this switch. This switch should be turned ON in the area where outside temperature becomes below the freezing point.
SW5-2	Snow guard fan control	When this switch is turned ON, the outdoor unit fan will run for 10 seconds in 10 minutes, when outdoor temperature falls to 3°C or lower and the compressor is not running when the unit is used in a very snowy country, set this switch to ON.
SW5-3,4	Trial operation	Method of trial operation 1. Trial operation can be performed by using SW5-3. 2. Cooling trial operation will be performed when SW5-4 is OFF, and heating trial operation when SW5-4 is ON. 3. Be sure to turn OFF SW5-3 after the trial operation is finished.

Power cable, indoor-outdoor connecting wires

Model	MAX over current (A)	Power cable size (mm ²)	Power cable length (m)	Indoor-outdoor wire size x number	Earth wire size
FDC71	17	3.5	21	φ 1.6mm x 3	φ 1.6mm


- The specifications shown in the above table are for units without heaters. For units with heaters, refer to the installation instructions or the construction instructions of the indoor unit.
- Switching gear of circuit breaker capacity which is calculated from MAX. over current should be chosen along the regulations in each country.
- The cable specifications are based on the assumption that a metal or plastic conduit is used with no more than three cables contained in a conduit and a voltage drop is 2%. For an installation falling outside of these conditions, please follow the internal cabling regulations. Adapt it to the regulation in effect in each country.
- Refer to installation manual or technical manual about usage of local setting switch.
- Don't operate SW3-3, SW5-1, SW5-2, SW7, SW8

PCA001Z605

Models FDC100VNX, 125VNX, 140VNX

Coormarks		Meaning of marks	
Mark	Color	Item	Description
BK	Black	Con-Z	Connector
BL	Blue	CH	Crankcase heater
BR	Brown	DH	Drain pan heater
GN	Green	CM	Compressor motor
GR	Gray	CT	Current sensor
P	Pink	DM	Diode module
OR	Orange	F	Fuse
RD	Red	FM01	Fan motor
WH	White	IPM	Intelligent power module
Y	Yellow	L	Reactor
Y/GN	Yellow/Green	LED1	Indication lamp (GREEN)
		LED2	Indication lamp (RED)
		LPT	Low pressure sensor
		SM1	Expansion valve for cooling
		SM2	Expansion valve for heating
		SW1	Pump down switch
		SW3.5	Local setting switch
		TB	Terminal block
		Tho-A	Temperature sensor (Outdoor air)
		Tho-D	Temperature sensor (Discharge pipe)
		Tho-P	Temperature sensor (IPM)
		Tho-R1.2	Temperature sensor (Heat exchanger pipe)
		Tho-S	Temperature sensor (Suction pipe)
		20S	Solenoid valve for 4-way valve
		52X1	Auxiliary relay (for CH)
		52X2	Auxiliary relay (for DH)
		52X3	Auxiliary relay (for 20S)
		63H1	High pressure switch

Mark	Color
BK	Black
BL	Blue
BR	Brown
GN	Green
GR	Gray
P	Pink
OR	Orange
RD	Red
WH	White
Y	Yellow
Y/GN	Yellow/Green

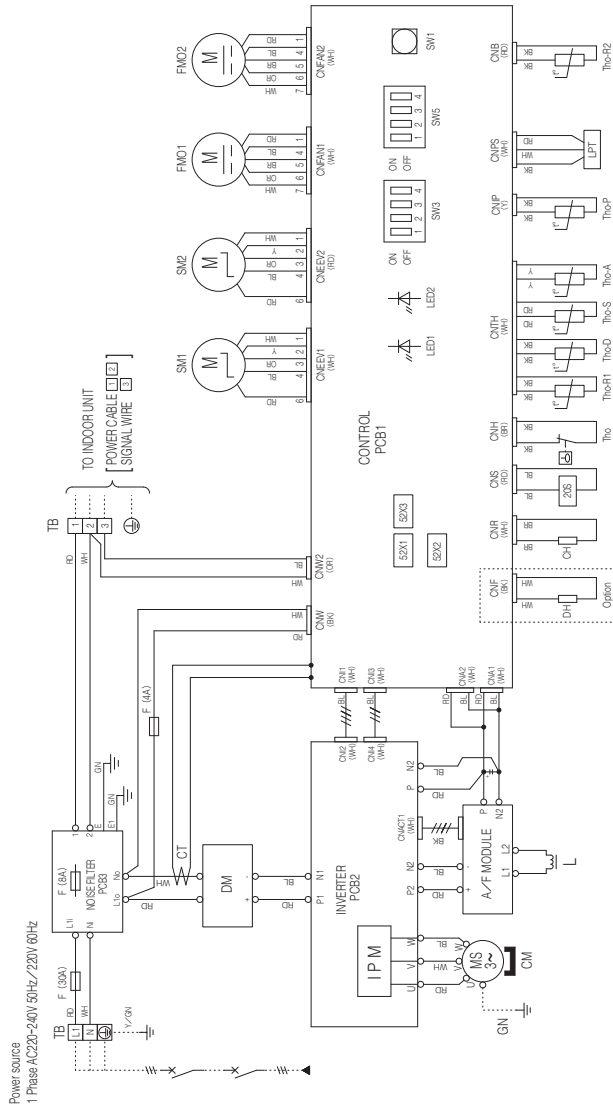

Power cable, indoor-outdoor connecting wires

Model	MAX over current (A)	Power cable size (mm ²)	Power cable length (m)	Indoor-outdoor wire size x number	Earth wire size (mm)
FDC100	24	5.5	25	φ1.6mm x 3	φ1.6
FDC125	26		23		

- The specifications shown in the above table are for units without heaters. For units with heaters, refer to the installation instructions or the construction instructions of the indoor unit.
- Switchgear or circuit breaker capacity which is calculated from MAX. over current should be chosen along the regulations in each country.
- The cable specifications are based on the assumption that a metal or plastic conduit is used with no more than three cables contained in a conduit and a voltage drop is 2%. For an installation falling outside of these conditions, please follow the internal cabling regulations. Adapt it to the regulation in effect in each country.

Local setting switch SW3 (Set up at shipment OFF)

SW3-1	Defrost control change
SW3-2	Snow guard fan control
SW3-3.4	Trial operation

The defrost operation interval becomes shorter by turning ON this switch. This switch should be turned ON in the area where outside temperature becomes below the freezing point.


When this switch is turned ON, the outdoor fan will run for 30 seconds in every 10 minutes, when outdoor temperature falls to 3°C or lower and the compressor is not running when the unit is used in a very snowy country, set this switch to ON.

Method of trial operation

- ① Trial operation can be performed by using SW3-3.4.
- ② Compressor will be in the operation when SW3-3 is ON.
- ③ Cooling trial operation will be performed when SW3-4 is OFF, and heating trial operation when SW3-4 is ON.
- ④ Be sure to turn OFF SW3-3 after the trial operation is finished.

Models FDC100VSX, 125VSX, 140VSX

Item	Description
CH	Crankcase heater
CM	Compressor motor
ChA-Z	Connector
CT	Current sensor
DH	Drain pan heater
DM	Diode module
F	Fuse
Fm1,2	Fan motor
IPM	Intelligent power module
L	Reactor
LED1	Indication lamp (GREEN)
LED2	Indication lamp (RED)
LPT	Low pressure sensor
SM1	Expansion valve for cooling
SM2	Expansion valve for heating
SW1	Pump down switch
SW3.5	Local setting switch
TB	Terminal block
Tho-A	Temperature sensor (Outdoor air)
Tho-D	Temperature sensor (Discharge pipe)
Tho-P	Temperature sensor (Heat exchanger pipe)
Tho-S	Temperature sensor (Suction pipe)
20S	Solenoid valve for 4-way valve
52C	Relay
52X1	Auxiliary relay (for CH)
52X2	Auxiliary relay (for DH)
52X3	Auxiliary relay (for 20S)
52X6	Auxiliary relay (for 52C)
63H1	High pressure switch

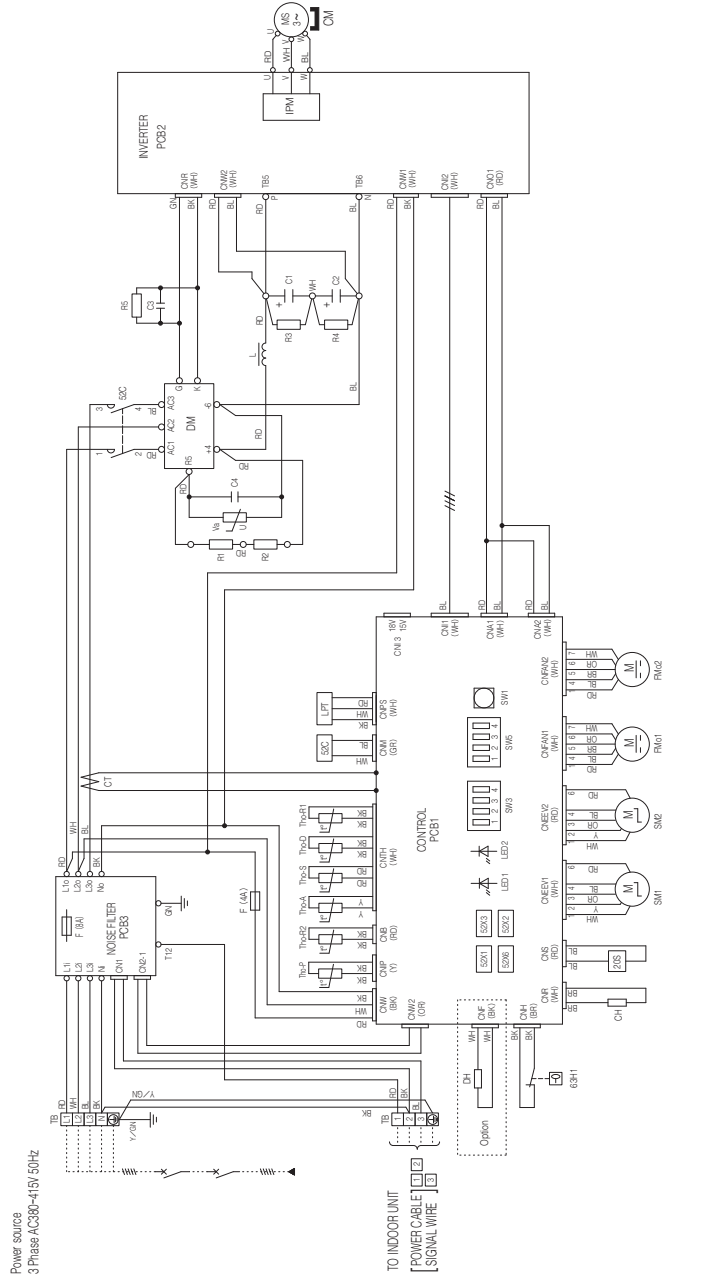

Power source
3 Phase AC380-415/50Hz

Local setting switch SW3 (Set up at shipment OFF)

SW3-1	Defrost control change	The defrost operation interval becomes shorter by turning ON this switch. This switch should be turned ON in the area where outside temperature becomes below the freezing point.
SW3-2	Snow guard fan control	When this switch is turned ON, the outdoor unit fan will run for 30 seconds in every 10 minutes, when outdoor temperature falls to 3°C or lower and the compressor is not running when the unit is used in a very snowy country, set this switch to ON.
SW3-3,4	Trial operation	Method of trial operation ① Trial operation can be performed by using SW3-3,4. ② Compressor will be in the operation when SW3-3 is ON. ③ Cooling trial operation will be performed when SW3-4 is OFF, and heating trial operation when SW3-4 is ON. ④ Be sure to turn OFF SW3-3 after the trial operation is finished.


Power cable, indoor-outdoor connecting wires

Model	MAX over current (A)	Power cable size (mm ²)	Power cable length (m)	Indoor-outdoor wire size x number	Earth wire size (mm)
FDC100	15	3.5	27	φ 1.6mm x 3	φ 1.6
FDC125					
FDC140					

- The specifications shown in the above table are for units without heaters. For units with heaters, refer to the installation instructions or the construction instructions of the indoor unit.
- Switchgear or circuit breaker capacity which is calculated from MAX. over current should be chosen along the regulations in each country.
- The cable specifications are based on the assumption that a metal or plastic conduit is used with no more than three cables contained in a conduit and a voltage drop is 2%. For an installation falling outside of these conditions, please follow the internal cabling regulations. Adapt it to the regulation in effect in each country.

Color marks

Mark	Color
BK	Black
BL	Blue
BR	Brown
OR	Orange
RD	Red
WH	White
Y	Yellow
Y/GN	Yellow/Green
GR	Gray
P	Pink



1.4 NOISE LEVEL

Notes(1) The data are based on the following conditions.

Ambient air temperature: Indoor unit 27°CWB. Outdoor unit 35°CDB.


(2) The data in the chart are measured in an anechoic room.

(3) The noise levels measured in the field are usually higher than the data because of reflection.

(1) Indoor units

(a) Sound power level


Measured based on JIS B 8616
Mike position

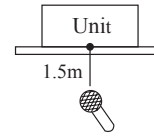

Mike (in front & below unit)


Model FDT71VH

Noise level Cooling: 59 dB (A)
Heating: 60 dB (A)

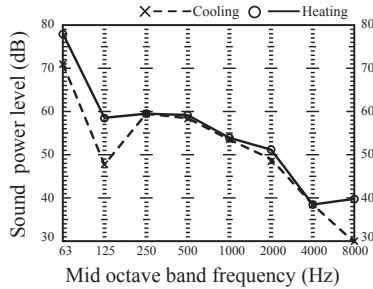


Model FDT100VH

Noise level Cooling: 63 dB (A)
Heating: 63 dB (A)

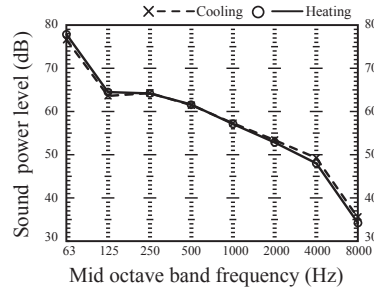

Model FDT125VH,140VH


Noise level Cooling: 64 dB (A)
Heating: 64 dB (A)

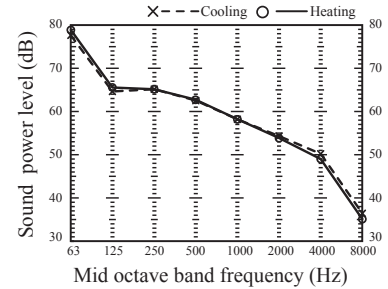


(b) Sound pressure level

Model FDT71VH

Noise level 46 dB (A) at P-Hi
34 dB (A) at Hi
31 dB (A) at Me
26 dB (A) at Lo

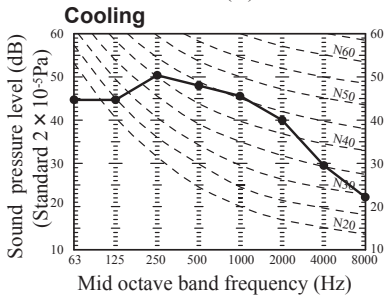


Noise level 46 dB (A) at P-Hi
34 dB (A) at Hi
31 dB (A) at Me
26 dB (A) at Lo

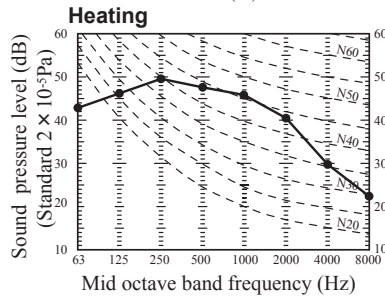


Model FDT100VH

Noise level 47 dB (A) at P-Hi
39 dB (A) at Hi
36 dB (A) at Me
30 dB (A) at Lo

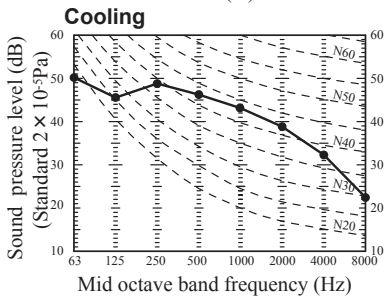



Noise level 47 dB (A) at P-Hi
39 dB (A) at Hi
36 dB (A) at Me
29 dB (A) at Lo

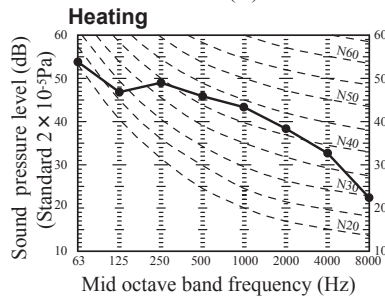

Models FDT125VH,140VH

Noise level 48 dB (A) at P-Hi
 41 [42] dB (A) at Hi
 39 dB (A) at Me
 31 [32] dB (A) at Lo



Noise level 48 dB (A) at P-Hi
 41 dB (A) at Hi
 38 dB (A) at Me
 31 dB (A) at Lo

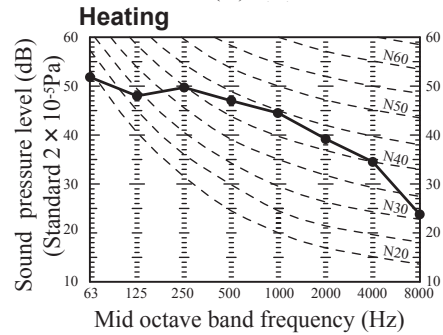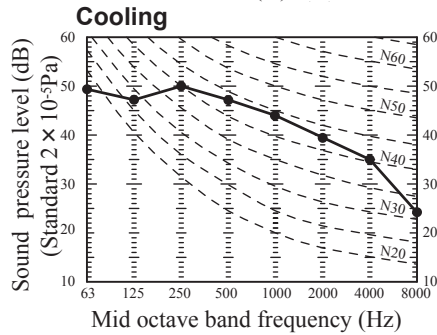



Note(1) Values in [] are for the FDT140VH.

(2) Outdoor units



Model FDC71VNX

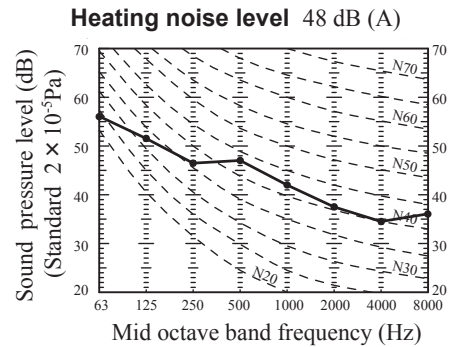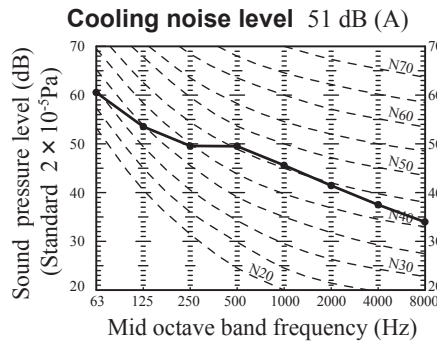

Models FDC100VNX,100VSX

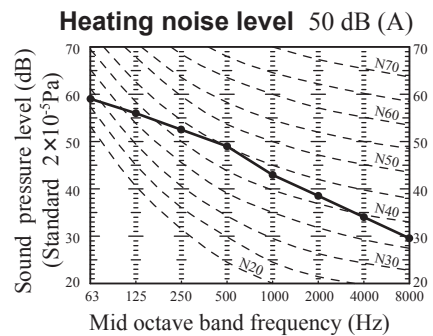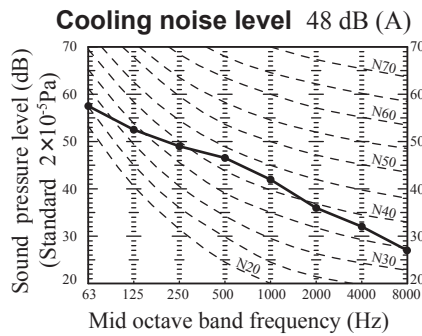


Models FDC125VNX,125VSX

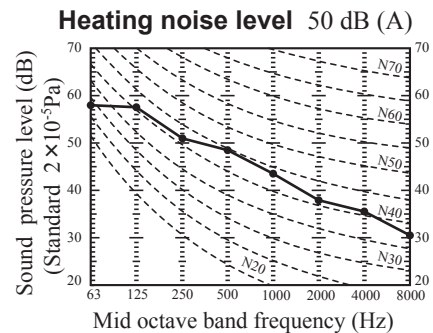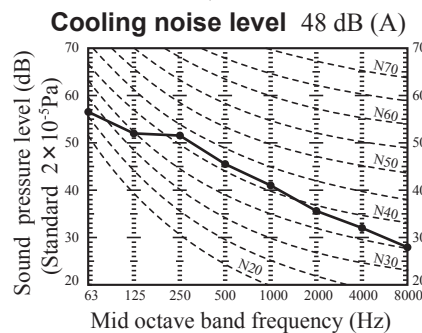


Models FDC140VNX,140VSX

Cooling noise level 49 dB (A)

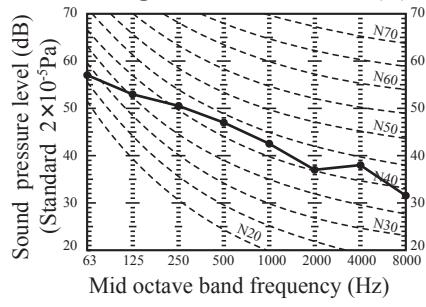

Heating noise level 52 dB (A)

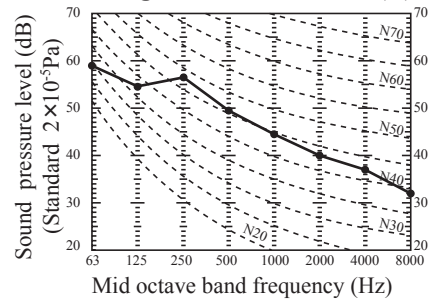


1.5 TEMPERATURE AND VELOCITY DISTRIBUTION

Indoor temperature
 Cooling 27°CDB / 19°CWB
 Heating 20°CDB
 Note: These figures represent the typical main range of temperature and velocity distribution at the center of air outlet within the published conditions.
 In the actual installation, they may differ from the typical figures under the influence of air temperature conditions, ceiling height, operation conditions and obstacles.


Models FDT71VH

Cooling Air flow: P-Hi


Louver position

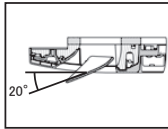

Temperature distribution

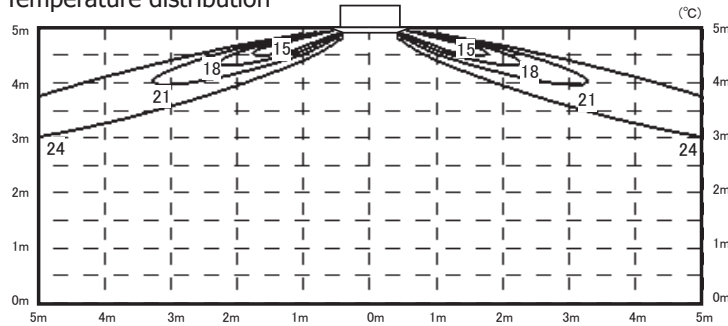


Velocity distribution

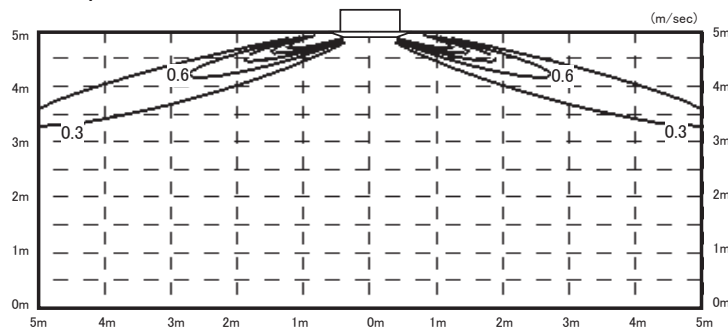


Heating Air flow: P-Hi


Louver position

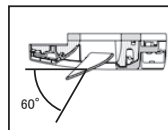

Temperature distribution

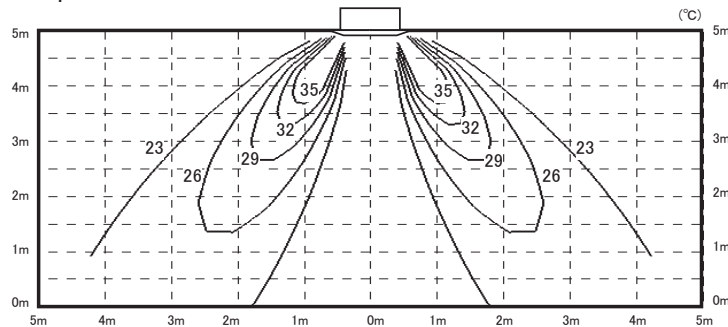


Velocity distribution

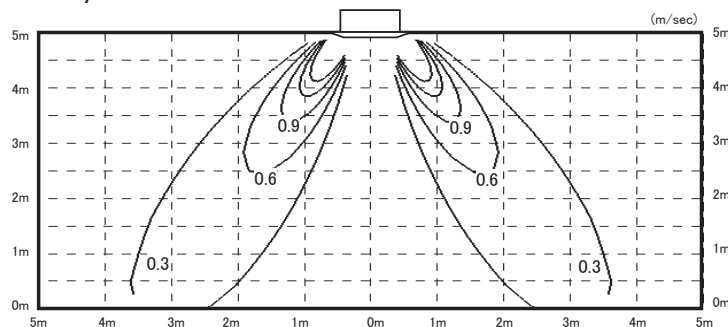


Models FDT100VH, 125VH, 140VH

Cooling Air flow: P-Hi


Louver position

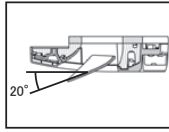

Temperature distribution

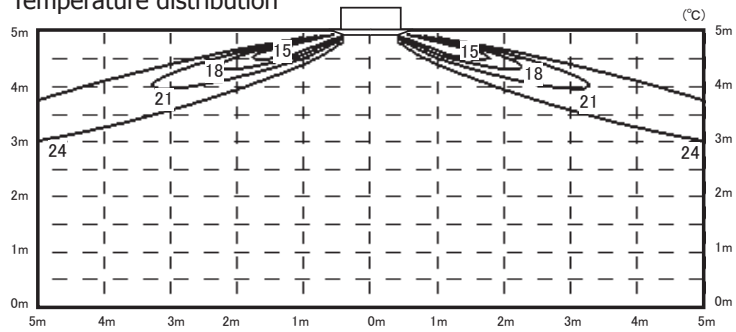


Velocity distribution

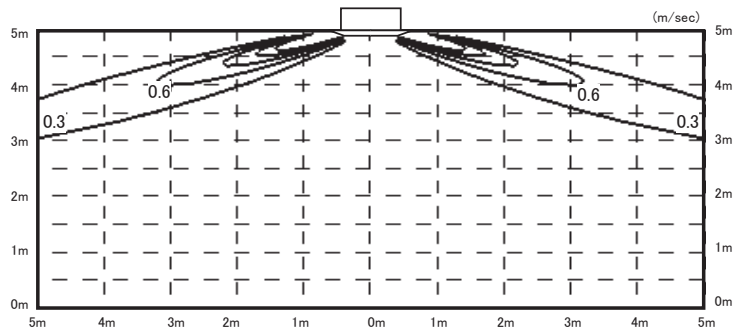


Heating Air flow: P-Hi


Louver position

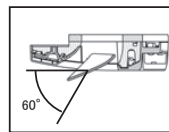

Temperature distribution

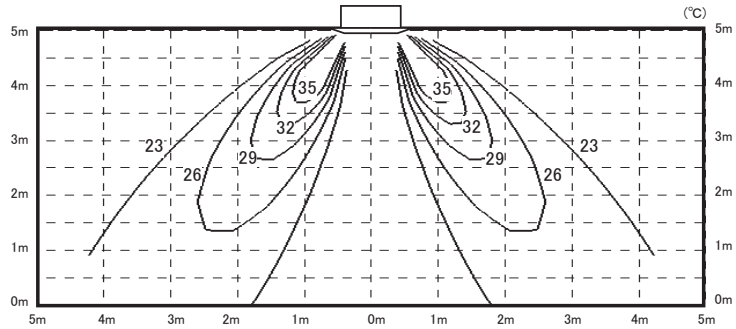


Velocity distribution

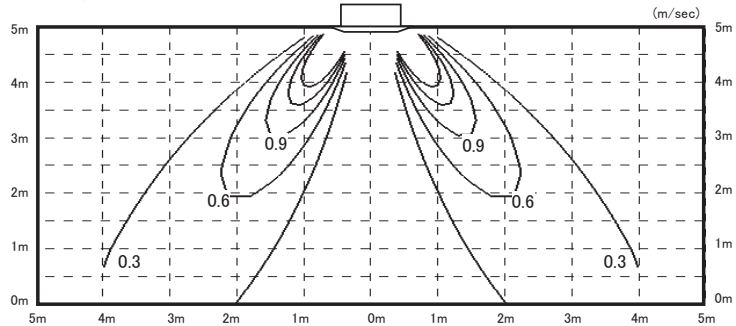


1.6 PIPING SYSTEM

(1) Single type
Models FDT71, 100, 125, 140

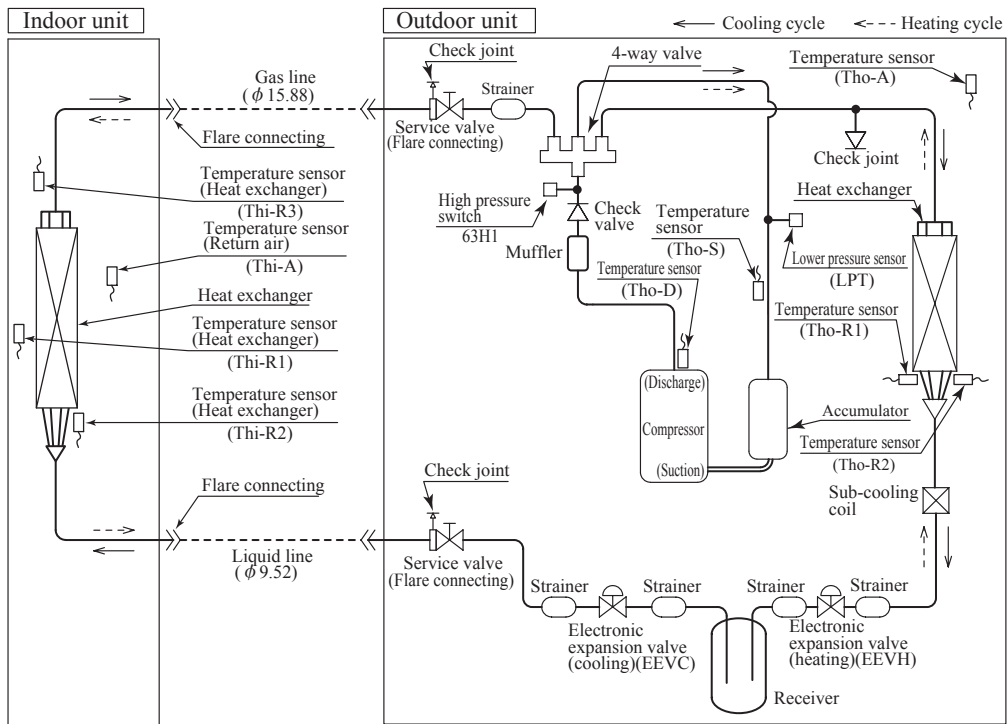

(2) Twin type
Model FDT140

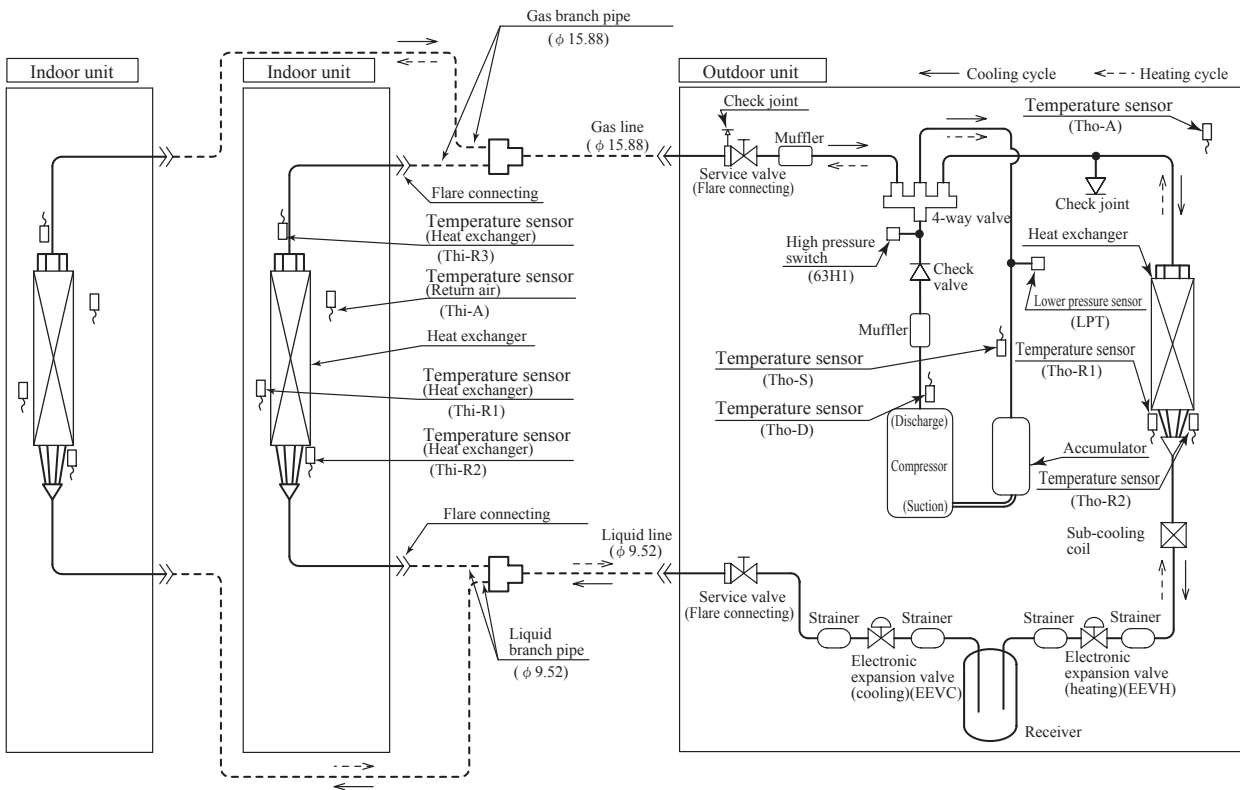

Preset point of the protective devices

Parts name	Mark	Equipped unit	FDT71, 100, 125, 140 model
Temperature sensor (for protection overloading in heating)	Thi-R	Indoor unit	OFF 63°C ON 56°C
Temperature sensor (for frost prevention)	Thi-R		OFF 1.0°C ON 10°C
Temperature sensor (for protection high pressure in cooling)	Tho-R	Outdoor unit	OFF 65°C ON 51°C
Temperature sensor (for detecting discharge pipe temperature)	Tho-D	Outdoor unit	OFF 115°C ON 85°C
High pressure switch (for protection)	63H1	Outdoor unit	OFF 4.15MPa ON 3.15MPa
Low pressure sensor (for protection)	LPT	Outdoor unit	OFF 0.079MPa ON 0.227MPa

1.7 RANGE OF USAGE & LIMITATIONS

Operating temperature range		See the next page.
		When used below -5°C, install a snow hood. <FDC71-140 only>
Recommendable area to install		Considering to get sufficient heating capacity, the area where the averaged lowest ambient air temperature in day time during winter is above 0°C, and it has no accumulation of snow.
Installation site		The limitations of installation space are shown in the page for outline drawing. Install the indoor unit at least 2.5m higher than the floor surface.
Temperature and humidity conditions surrounding the indoor unit in the ceiling (Note 2)		Dew point temperature : 28°C or less, relative humidity : 80% or less
Limitations on unit and piping installation		See page 32.
Compressor ON-OFF cycling	Cycle time	7 minutes or more (from OFF to OFF) or (from ON to ON)
	Stop time	3 minutes or more
Power source	Voltage range	Rating ±10%
	Voltage drop at start-up	Min.85% of rating
	Phase-to-phase unbalance	3% or less

Note 1. Do not install the unit in places which :


- 1) Flammable gas may leak.
- 2) Carbon fiber, metal particles, powder, etc. are floating.
- 3) Cosmetic or special sprays are used frequently.
- 4) Exposed to oil splashes or steam (e.g. kitchen and machine plant).
- 5) Exposed to sea breeze (e.g. coastal area) or calcium chloride (e.g. snow melting agent).
- 6) Exposed to ammonia substance (e.g. organic fertilizer).
- 7) Matters affecting devices, such as sulfuric gas, chlorine gas, acid, alkali, etc. may generate or accumulate.
- 8) Chimney smoke is hanging.
- 9) Sucking the exhaust gas from heat exchanger.
- 10) Adjacent to equipment generating electromagnetic waves or high frequency waves.
- 11) There is light beams that affect the receiving device of indoor unit in case of the wireless specification.
- 12) Snow falls heavily.
- 13) At an elevation of 1000 meters or higher.
- 14) On mobile machine (e.g. vehicle, ship, etc.)
- 15) Splashed with water to indoor unit (e.g. laundry room).
- 16) Indoor units of twin and triple specifications separately in a room with partition.

Note 2. If ambient temperature and humidity exceed the above values, add polyurethane foam insulation on the outer plate (10mm or thicker) of indoor unit.


Note 3. Both gas and liquid pipes need to be cover with 20mm or thicker heat insulation materials at the place where humidity exceeds 70%.

Operating temperature range

■ Cooling

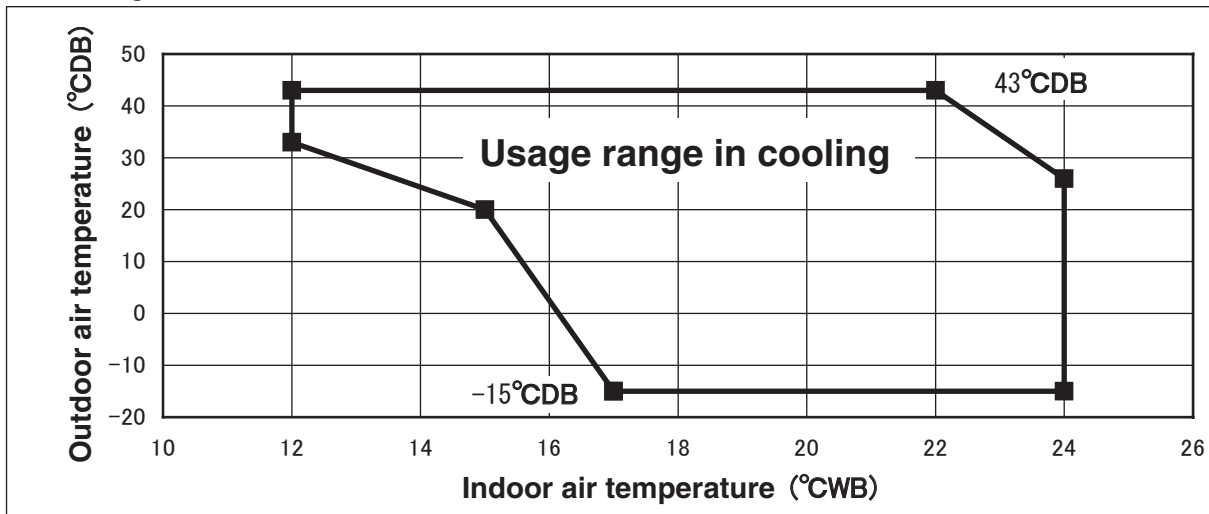

■ Heating

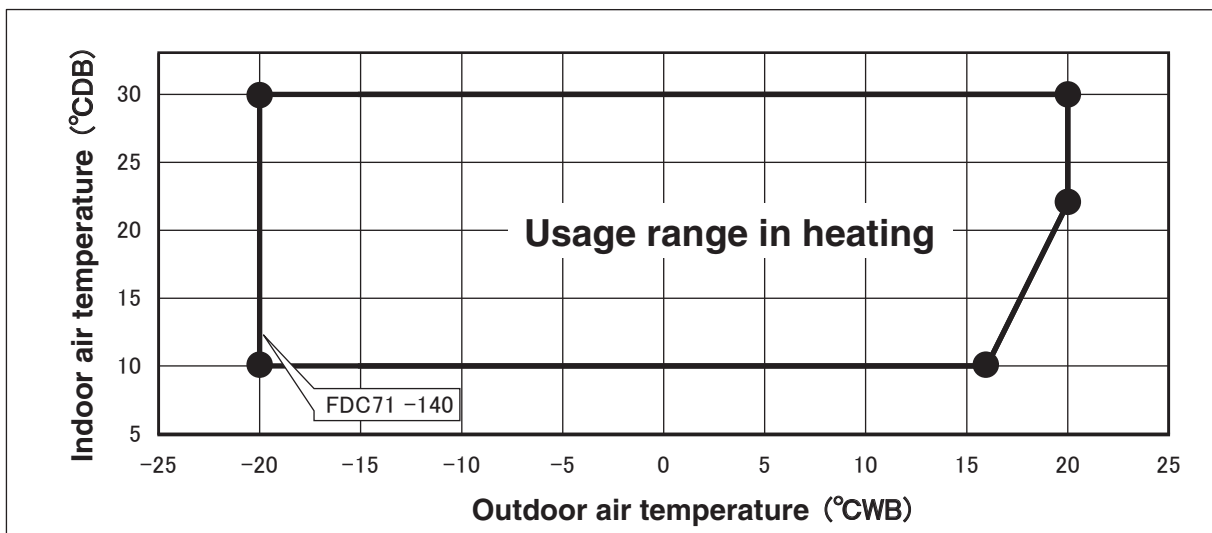

Decline in cooling and heating capacity or operation stop may occur when the outdoor unit is installed in places where natural wind can increase or decrease its design air flow rate.

“CAUTION” Cooling operation under low outdoor air temperature conditions

PAC models can be operated in cooling mode at low outdoor air temperature condition within above temperature range. However in case of severely low temperature conditions if the following precaution is not observed, it may not be operated in spite of operable temperature range mentioned above and cooling capacity may not be established under certain conditions.

[Precaution]

In case of severely low temperature condition

- 1) Install the outdoor unit at the place where strong wind cannot blow directly into the outdoor unit.
- 2) If there is no installation place where can prevent strong wind from directly blowing into the outdoor unit, mount the flex flow adapter (prepared as option part) or like such devices onto the outdoor unit in order to divert the strong wind.

[Reason]

Under the low outdoor air temperature conditions of -5°C or lower, the outdoor fan is controlled at lower or lowest speed by outdoor fan control, but if strong wind directly blow into the outdoor unit, the outdoor heat exchanger temperature will drop more.

This makes high and low pressures to drop as well. This low pressure drop makes the indoor heat exchanger temperature to drop and will activate anti-frost control at indoor heat exchanger at frequent intervals, that cooling operation may not be established for any given time.

Limitation on unit and piping installation - single, twin.				
Descriptions	Models for outdoor unit	Dimensional limitations	Marks appearing in the drawing	
			Single type	Twin type
One-way pipe length	FDC71	≤ 50m	L	L + L1 + L2
Main pipe length	FDC140	≤ 100m		L
One-way pipe length after first branching point	FDC140	≤ 30m		L1, L2
Difference of pipe length after first branching point		≤ 10m		L1 - L2 L2 - L1
Total pipe length after the second branching point		≤ 15m		
Elevation difference between indoor and outdoor unit	When outdoor unit is positioned higher	FDC71 FDC100 · 125 · 140	H	H
	When outdoor unit is positioned lower	FDC71 FDC100 · 125 · 140	H	H
Elevation difference among indoor units		≤ 0.5m		h

Single type

Twin type

Model for outdoor units	Refrigerant to be reduced
FDC71 · 100 · 125 · 140	1.0 kg

Model for outdoor units	Branch piping set (option)
FDC140	DIS-WA1

(1) A riser pipe must be part of the main.
A branching pipe set should be installed horizontally at point as close to an indoor unit as possible.
(2) Reduce refrigerant amount by according to table below from the factory charge when refrigerant piping is shorter than 3m.

1.8 SELECTION CHART

Correct the cooling and heating capacity in accordance with the operating conditions. The net cooling and heating capacity can be obtained in the following way.

Net capacity = Capacity shown in the capacity tables (1.8.1) × Correction factors shown in the table (1.8.2) (1.8.3) (1.8.4).

Caution: In case that the cooling operation during low outdoor air temperature below -5°C is expected, install the outdoor unit where it is not influenced by natural wind. Otherwise protection control by low pressure will be activated much more frequently and it will cause insufficient capacity or breakdown of the compressor in worst case.

1.8.1 Capacity tables

(1) Single type

Model FDT71VNXVH Indoor unit FDT71VH Outdoor unit FDC71VNX
Cooling Mode

Outdoor air temp. °CDB	Indoor air temperature															
	18 °CDB		21 °CDB		23 °CDB		26 °CDB		27 °CDB		28 °CDB		31 °CDB		33 °CDB	
	12 °CWB	14 °CWB	16 °CWB	18 °CWB	19 °CWB	20 °CWB	22 °CWB	24 °CWB	TC	SHC	TC	SHC	TC	SHC	TC	SHC
11					4.87	4.77	6.02	5.90	6.59	5.96	6.79	5.89	7.19	6.27	7.59	6.09
13					5.33	5.22	6.32	6.01	6.82	6.02	7.03	5.94	7.45	6.32	7.88	6.14
15					5.79	5.43	6.63	6.10	7.05	6.08	7.27	6.00	7.71	6.38	8.16	6.20
17					6.26	5.58	6.94	6.18	7.27	6.14	7.51	6.06	7.97	6.44	8.44	6.25
19					6.59	5.69	7.16	6.25	7.44	6.19	7.68	6.11	8.15	6.48	8.63	6.28
21					6.93	5.80	7.38	6.31	7.60	6.23	7.84	6.15	8.33	6.52	8.82	6.32
23					6.91	5.79	7.35	6.30	7.57	6.22	7.81	6.14	8.30	6.51	8.78	6.31
25			6.46	6.01	6.89	5.78	7.32	6.29	7.54	6.21	7.78	6.13	8.26	6.50	8.74	6.31
27			6.45	6.01	6.87	5.78	7.30	6.29	7.52	6.21	7.74	6.12	8.18	6.48		
29			6.34	5.97	6.75	5.74	7.19	6.26	7.41	6.18	7.64	6.10	8.09	6.46		
31			6.23	5.93	6.64	5.70	7.08	6.22	7.31	6.15	7.54	6.07	7.99	6.44		
33	5.77	5.45	6.05	5.87	6.53	5.67	6.97	6.19	7.20	6.12	7.44	6.05	7.90	6.42		
35	5.67	5.41	5.95	5.83	6.42	5.63	6.86	6.16	7.10	6.09	7.34	6.02	7.81	6.40		
37	5.58	5.37	5.85	5.73	6.31	5.60	6.72	6.12	6.95	6.05	7.18	5.98	7.64	6.36		
39	5.49	5.34	5.76	5.64	6.20	5.56	6.59	6.09	6.81	6.02	7.03	5.94	7.46	6.32		
41	5.39	5.28	5.67	5.56	6.09	5.53	6.45	6.05	6.66	5.98	6.87	5.91	7.29	6.29		
43	5.30	5.19	5.57	5.46	5.97	5.49	6.31	6.01	6.51	5.94	6.71	5.87	7.12	6.25		

(kW) Heating Mode : HC (kW)

Outdoor air temp. °CDB	°CWB	Indoor air temperature °CDB				
		16	18	20	22	24
-19.8	-20	3.95	3.93	3.91	3.88	3.86
-17.7	-18	4.18	4.16	4.14	4.11	4.09
-15.7	-16	4.42	4.39	4.37	4.34	4.32
-13.5	-14	4.68	4.65	4.63	4.60	4.57
-11.5	-12	4.94	4.91	4.88	4.85	4.82
-9.5	-10	5.20	5.17	5.14	5.11	5.08
-7.5	-8	5.46	5.43	5.40	5.36	5.33
-5.5	-6	5.59	5.55	5.52	5.48	5.44
-3.0	-4	5.71	5.68	5.64	5.60	5.56
-1.0	-2	5.84	5.80	5.76	5.72	5.67
1.0	0	5.97	5.92	5.88	5.83	5.79
2.0	1	6.03	5.98	5.94	5.89	5.85
3.0	2	6.45	6.40	6.35	6.30	6.25
5.0	4	7.29	7.23	7.18	7.12	7.06
7.0	6	8.13	8.06	8.00	7.93	7.87
9.0	8	8.42	8.36	8.29	8.23	8.16
11.5	10	8.72	8.65	8.59	8.52	8.46
13.5	12	9.20	9.13	9.06	9.00	8.92
15.5	14	9.69	9.61	9.53	9.47	9.39
16.5	16	9.93	9.85	9.77	9.71	9.62

PJF000Z587

Model FDT100VNXVH Indoor unit FDT100VH Outdoor unit FDC100VNX
Cooling Mode

Outdoor air temp. °CDB	Indoor air temperature															
	18 °CDB		21 °CDB		23 °CDB		26 °CDB		27 °CDB		28 °CDB		31 °CDB		33 °CDB	
	12 °CWB	14 °CWB	16 °CWB	18 °CWB	19 °CWB	20 °CWB	22 °CWB	24 °CWB	TC	SHC	TC	SHC	TC	SHC	TC	SHC
11					8.33	7.28	8.84	7.95	9.10	7.84	9.38	7.73	9.94	8.22	10.50	7.96
13					8.63	7.37	9.17	8.04	9.43	7.92	9.73	7.82	10.32	8.29	10.92	8.03
15					8.93	7.46	9.49	8.13	9.77	8.01	10.09	7.90	10.71	8.37	11.34	8.10
17					9.23	7.56	9.82	8.22	10.11	8.10	10.44	7.99	11.10	8.45	11.75	8.18
19					9.44	7.62	10.04	8.28	10.34	8.16	10.68	8.05	11.35	8.51	12.01	8.22
21					9.64	7.69	10.26	8.34	10.57	8.22	10.91	8.10	11.59	8.56	12.28	8.27
23					9.64	7.69	10.28	8.35	10.59	8.23	10.94	8.11	11.63	8.57	12.32	8.28
25			8.95	7.98	9.64	7.69	10.30	8.35	10.62	8.24	10.97	8.12	11.66	8.57	12.36	8.29
27			8.91	7.97	9.64	7.69	10.33	8.36	10.64	8.24	10.96	8.12	11.59	8.56		
29			8.84	7.94	9.51	7.64	10.16	8.31	10.48	8.20	10.80	8.08	11.45	8.53		
31			8.76	7.91	9.37	7.60	10.00	8.27	10.32	8.16	10.65	8.04	11.30	8.50		
33	8.21	7.33	8.58	7.85	9.23	7.56	9.83	8.22	10.16	8.11	10.49	8.00	11.15	8.47		
35	7.77	7.16	8.31	7.76	9.09	7.51	9.66	8.17	10.00	8.07	10.34	7.96	11.01	8.44		
37	7.68	7.12	8.18	7.71	8.92	7.46	9.49	8.13	9.81	8.02	10.13	7.91	10.77	8.39		
39	7.58	7.08	8.04	7.66	8.76	7.41	9.31	8.08	9.62	7.97	9.93	7.86	10.54	8.34		
41	7.49	7.05	7.91	7.62	8.59	7.36	9.14	8.03	9.43	7.92	9.73	7.82	10.31	8.29		
43	7.40	7.02	7.78	7.57	8.42	7.30	8.96	7.98	9.24	7.88	9.52	7.77	10.08	8.24		

(kW) Heating Mode : HC (kW)

Outdoor air temp. °CDB	°CWB	Indoor air temperature °CDB				
		16	18	20	22	24
-19.8	-20	7.30	7.24	7.18	7.12	7.06
-17.7	-18	7.74	7.68	7.62	7.55	7.49
-15.7	-16	8.18	8.12	8.05	7.99	7.92
-13.5	-14	8.54	8.47	8.40	8.33	8.27
-11.5	-12	8.89	8.82	8.75	8.68	8.61
-9.5	-10	9.25	9.17	9.10	9.03	8.95
-7.5	-8	9.60	9.53	9.45	9.38	9.30
-5.5	-6	10.00	9.92	9.84	9.76	9.68
-3.0	-4	10.39	10.31	10.23	10.14	10.06
-1.0	-2	10.79	10.70	10.62	10.53	10.44
1.0	0	11.18	11.09	11.01	10.91	10.82
2.0	1	11.38	11.29	11.20	11.10	11.01
3.0	2	11.38	11.29	11.20	11.10	11.01
5.0	4	11.38	11.29	11.20	11.11	11.01
7.0	6	11.37	11.29	11.20	11.11	11.01
9.0	8	11.85	11.76	11.67	11.58	11.48
11.5	10	12.32	12.23	12.15	12.05	11.95
13.5	12	12.97	12.88	12.78	12.68	12.72
15.5	14	13.62	13.52	13.41	13.32	13.49
16.5	16	13.95	13.84	13.72	13.63	13.87

PJF000Z587

Notes(1) These data show average statuses.
Depending on the system control, there may be ranges where the operation is not conducted continuously.
These data show the case where the operation frequency of a compressor is fixed.

(2) Capacities are based on the following conditions.
Corresponding refrigerant piping length : 7.5m
Level difference of Zero.

(3) Symbols are as follows.
TC : Total cooling capacity (kW)
SHC : Sensible heat capacity (kW)
HC : Heating capacity (kW)

Model **FDT100VSXVH** Indoor unit **FDT100VH** Outdoor unit **FDC100VSX**
 Cooling Mode

Outdoor air temp.	Indoor air temperature															
	18 °CDB		21 °CDB		23 °CDB		26 °CDB		27 °CDB		28 °CDB		31 °CDB		33 °CDB	
	12 °CWB		14 °CWB		16 °CWB		18 °CWB		19 °CWB		20 °CWB		22 °CWB		24 °CWB	
°CDB	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC
11					8.33	7.28	8.84	7.95	9.10	7.84	9.38	7.73	9.94	8.22	10.50	7.96
13					8.63	7.37	9.17	8.04	9.43	7.92	9.73	7.82	10.32	8.29	10.92	8.03
15					8.93	7.46	9.49	8.13	9.77	8.01	10.09	7.90	10.71	8.37	11.34	8.10
17					9.23	7.56	9.82	8.22	10.11	8.10	10.44	7.99	11.10	8.45	11.75	8.18
19					9.44	7.62	10.04	8.28	10.34	8.16	10.68	8.05	11.35	8.51	12.01	8.22
21					9.64	7.69	10.26	8.34	10.57	8.22	10.91	8.10	11.59	8.56	12.28	8.27
23					9.64	7.69	10.28	8.35	10.59	8.23	10.94	8.11	11.63	8.57	12.32	8.28
25			8.95	7.98	9.64	7.69	10.30	8.35	10.62	8.24	10.97	8.12	11.66	8.57	12.36	8.29
27			8.91	7.97	9.64	7.69	10.33	8.36	10.64	8.24	10.96	8.12	11.59	8.56		
29			8.84	7.94	9.51	7.64	10.16	8.31	10.48	8.20	10.80	8.08	11.45	8.53		
31			8.76	7.91	9.37	7.60	10.00	8.27	10.32	8.16	10.65	8.04	11.30	8.50		
33	8.21	7.33	8.58	7.85	9.23	7.56	9.83	8.22	10.16	8.11	10.49	8.00	11.15	8.47		
35	7.77	7.16	8.31	7.76	9.09	7.51	9.66	8.17	10.00	8.07	10.34	7.96	11.01	8.44		
37	7.68	7.12	8.18	7.71	8.92	7.46	9.49	8.13	9.81	8.02	10.13	7.91	10.77	8.39		
39	7.58	7.08	8.04	7.66	8.76	7.41	9.31	8.08	9.62	7.97	9.93	7.86	10.54	8.34		
41	7.49	7.05	7.91	7.62	8.59	7.36	9.14	8.03	9.43	7.92	9.73	7.82	10.31	8.29		
43	7.40	7.02	7.78	7.57	8.42	7.30	8.96	7.98	9.24	7.88	9.52	7.77	10.08	8.24		

Heating Mode : HC (kW)

Outdoor air temp.	Indoor air temperature					
	°CDB					
	°CDB	°CWB	16	18	20	22
-19.8	-20	11.29	11.20	11.11	11.02	10.93
-17.7	-18	11.34	11.25	11.16	11.06	10.97
-15.7	-16	11.38	11.29	11.20	11.11	11.02
-13.5	-14	11.38	11.29	11.20	11.11	11.02
-11.5	-12	11.38	11.29	11.20	11.11	11.02
-9.5	-10	11.38	11.29	11.20	11.11	11.02
-7.5	-8	11.37	11.29	11.20	11.11	11.02
-5.5	-6	11.38	11.29	11.20	11.11	11.02
-3.0	-4	11.38	11.29	11.20	11.11	11.01
-1.0	-2	11.38	11.29	11.20	11.11	11.01
1.0	0	11.38	11.29	11.20	11.10	11.01
2.0	1	11.38	11.29	11.20	11.10	11.01
3.0	2	11.38	11.29	11.20	11.10	11.01
5.0	4	11.38	11.29	11.20	11.11	11.01
7.0	6	11.37	11.29	11.20	11.11	11.01
9.0	8	11.85	11.76	11.67	11.58	11.48
11.5	10	12.32	12.23	12.15	12.05	11.95
13.5	12	12.97	12.88	12.78	12.68	12.72
15.5	14	13.62	13.52	13.41	13.32	13.49
16.5	16	13.95	13.84	13.72	13.63	13.87

PJF000Z587A

Model **FDT125VNXVH** Indoor unit **FDT125VH** Outdoor unit **FDC125VNX**
 Cooling Mode

Outdoor air temp.	Indoor air temperature															
	18 °CDB		21 °CDB		23 °CDB		26 °CDB		27 °CDB		28 °CDB		31 °CDB		33 °CDB	
	12 °CWB		14 °CWB		16 °CWB		18 °CWB		19 °CWB		20 °CWB		22 °CWB		24 °CWB	
°CDB	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC
11					10.41	8.23	11.05	8.91	11.37	8.79	11.72	8.67	12.42	9.14	13.12	8.85
13					10.79	8.36	11.46	9.04	11.79	8.91	12.16	8.79	12.91	9.26	13.65	8.96
15					11.16	8.49	11.87	9.16	12.22	9.04	12.61	8.91	13.39	9.38	14.17	9.07
17					11.54	8.63	12.27	9.29	12.64	9.16	13.05	9.04	13.87	9.50	14.69	9.19
19					11.80	8.72	12.55	9.38	12.93	9.25	13.34	9.12	14.18	9.57	15.02	9.26
21					12.05	8.81	12.83	9.47	13.21	9.34	13.64	9.21	14.49	9.65	15.34	9.33
23					12.05	8.81	12.85	9.48	13.24	9.35	13.67	9.22	14.54	9.67	15.40	9.34
25			11.19	9.11	12.05	8.81	12.88	9.49	13.27	9.36	13.71	9.23	14.58	9.68	15.45	9.35
27			11.14	9.09	12.05	8.81	12.91	9.50	13.30	9.36	13.70	9.22	14.49	9.65		
29			11.05	9.05	11.88	8.75	12.70	9.43	13.10	9.30	13.51	9.17	14.31	9.61		
31			10.95	9.01	11.71	8.69	12.49	9.36	12.90	9.24	13.31	9.11	14.13	9.56		
33	10.26	8.41	10.73	8.93	11.53	8.62	12.29	9.30	12.70	9.18	13.11	9.06	13.94	9.51		
35	9.71	8.18	10.39	8.80	11.36	8.56	12.08	9.23	12.50	9.12	12.92	9.00	13.76	9.47		
37	9.60	8.13	10.22	8.73	11.15	8.49	11.86	9.16	12.26	9.05	12.67	8.93	13.47	9.40		
39	9.48	8.08	10.05	8.67	10.94	8.42	11.64	9.09	12.03	8.98	12.41	8.86	13.18	9.33		
41	9.36	8.03	9.89	8.61	10.74	8.35	11.42	9.02	11.79	8.91	12.16	8.79	12.89	9.26		
43	9.25	7.99	9.72	8.54	10.53	8.27	11.21	8.96	11.55	8.84	11.90	8.72	12.60	9.19		

Heating Mode : HC (kW)

Outdoor air temp.	Indoor air temperature					
	°CDB					
	°CDB	°CWB	16	18	20	22
-19.8	-20	9.12	9.05	8.97	8.90	8.83
-17.7	-18	9.67	9.60	9.52	9.44	9.37
-15.7	-16	10.23	10.15	10.07	9.98	9.90
-13.5	-14	10.67	10.59	10.50	10.42	10.33
-11.5	-12	11.11	11.03	10.94	10.85	10.76
-9.5	-10	11.56	11.47	11.38	11.29	11.19
-7.5	-8	12.00	11.91	11.82	11.72	11.62
-5.5	-6	12.49	12.40	12.30	12.20	12.10
-3.0	-4	12.99	12.89	12.79	12.68	12.57
-1.0	-2	13.48	13.38	13.27	13.16	13.05
1.0	0	13.98	13.87	13.76	13.64	13.52
2.0	1	14.22	14.11	14.00	13.88	13.76
3.0	2	14.22	14.11	14.00	13.88	13.76
5.0	4	14.22	14.11	14.00	13.88	13.76
7.0	6	14.22	14.11	14.00	13.88	13.77
9.0	8	14.81	14.70	14.59	14.47	14.35
11.5	10	15.41	15.29	15.18	15.06	14.94
13.5	12	16.22	16.09	15.97	15.85	15.90
15.5	14	17.03	16.90	16.76	16.65	16.86
16.5	16	17.44	17.30	17.16	17.04	17.34

PJF000Z587A

- Notes(1) These data show average statuses.
 Depending on the system control, there may be ranges where the operation is not conducted continuously.
 These data show the case where the operation frequency of a compressor is fixed.(Cooling only)
- (2) Capacities are based on the following conditions.
 Corresponding refrigerant piping length :7.5m
 Level difference of Zero.
- (3) Symbols are as follows.
 TC : Total cooling capacity (kW)
 SHC : Sensible heat capacity (kW)
 HC : Heating capacity (kW)

Model **FDT125VSVH** Indoor unit FDT125VH Outdoor unit FDC125VSX

Cooling Mode

(kW)

Heating Mode : HC

(kW)

Outdoor air temp.	Indoor air temperature															
	18 °CDB		21 °CDB		23 °CDB		26 °CDB		27 °CDB		28 °CDB		31 °CDB		33 °CDB	
	12 °CWB		14 °CWB		16 °CWB		18 °CWB		19 °CWB		20 °CWB		22 °CWB		24 °CWB	
°CDB	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC
11					10.41	8.23	11.05	8.91	11.37	8.79	11.72	8.67	12.42	9.14	13.12	8.85
13					10.79	8.36	11.46	9.04	11.79	8.91	12.16	8.79	12.91	9.26	13.65	8.96
15					11.16	8.49	11.87	9.16	12.22	9.04	12.61	8.91	13.39	9.38	14.17	9.07
17					11.54	8.63	12.27	9.29	12.64	9.16	13.05	9.04	13.87	9.50	14.69	9.19
19					11.80	8.72	12.55	9.38	12.93	9.25	13.34	9.12	14.18	9.57	15.02	9.26
21					12.05	8.81	12.83	9.47	13.21	9.34	13.64	9.21	14.49	9.65	15.34	9.33
23					12.05	8.81	12.85	9.48	13.24	9.35	13.67	9.22	14.54	9.67	15.40	9.34
25			11.19	9.11	12.05	8.81	12.88	9.49	13.27	9.36	13.71	9.23	14.58	9.68	15.45	9.35
27			11.14	9.09	12.05	8.81	12.91	9.50	13.30	9.36	13.70	9.22	14.49	9.65		
29			11.05	9.05	11.88	8.75	12.70	9.43	13.10	9.30	13.51	9.17	14.31	9.61		
31			10.95	9.01	11.71	8.69	12.49	9.36	12.90	9.24	13.31	9.11	14.13	9.56		
33	10.26	8.41	10.73	8.93	11.53	8.62	12.29	9.30	12.70	9.18	13.11	9.06	13.94	9.51		
35	9.71	8.18	10.39	8.80	11.36	8.56	12.08	9.23	12.50	9.12	12.92	9.00	13.76	9.47		
37	9.60	8.13	10.22	8.73	11.15	8.49	11.86	9.16	12.26	9.05	12.67	8.93	13.47	9.40		
39	9.48	8.08	10.05	8.67	10.94	8.42	11.64	9.09	12.03	8.98	12.41	8.86	13.18	9.33		
41	9.36	8.03	9.89	8.61	10.74	8.35	11.42	9.02	11.79	8.91	12.16	8.79	12.89	9.26		
43	9.25	7.99	9.72	8.54	10.53	8.27	11.21	8.96	11.55	8.84	11.90	8.72	12.60	9.19		

Outdoor air temp.	Indoor air temperature						
	°CDB	°CWB	16	18	20	22	24
-19.8	-20	11.07	10.99	10.90	10.81	10.72	
-17.7	-18	12.32	12.22	12.12	12.02	11.92	
-15.7	-16	13.06	12.95	12.85	12.74	12.63	
-13.5	-14	13.64	13.52	13.42	13.31	13.20	
-11.5	-12	13.98	13.87	13.77	13.66	13.54	
-9.5	-10	14.22	14.11	14.00	13.88	13.77	
-7.5	-8	14.22	14.11	14.00	13.88	13.77	
-5.5	-6	14.22	14.11	14.00	13.88	13.77	
-3.0	-4	14.22	14.11	14.00	13.88	13.77	
-1.0	-2	14.22	14.11	14.00	13.88	13.77	
1.0	0	14.22	14.11	14.00	13.88	13.77	
2.0	1	14.22	14.11	14.00	13.88	13.77	
3.0	2	14.22	14.11	14.00	13.88	13.77	
5.0	4	14.22	14.11	14.00	13.88	13.77	
7.0	6	14.22	14.11	14.00	13.88	13.77	
9.0	8	14.81	14.70	14.59	14.47	14.35	
11.5	10	15.41	15.29	15.18	15.06	14.94	
13.5	12	16.22	16.09	15.97	15.85	15.90	
15.5	14	17.03	16.90	16.76	16.65	16.86	
16.5	16	17.44	17.30	17.16	17.04	17.34	

PJF000Z587

Model **FDT140VNXVH** Indoor unit FDT140VH Outdoor unit FDC140VNX

Cooling Mode

(kW)

Heating Mode : HC

(kW)

Outdoor air temp.	Indoor air temperature															
	18 °CDB		21 °CDB		23 °CDB		26 °CDB		27 °CDB		28 °CDB		31 °CDB		33 °CDB	
	12 °CWB		14 °CWB		16 °CWB		18 °CWB		19 °CWB		20 °CWB		22 °CWB		24 °CWB	
°CDB	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC
11					11.66	8.86	12.38	9.54	12.73	9.41	13.13	9.30	13.91	9.77	14.70	9.48
13					12.08	9.02	12.83	9.69	13.21	9.57	13.62	9.45	14.45	9.91	15.28	9.62
15					12.50	9.17	13.29	9.85	13.68	9.72	14.12	9.60	14.99	10.06	15.87	9.76
17					12.92	9.33	13.75	10.01	14.16	9.88	14.62	9.76	15.54	10.22	16.45	9.90
19					13.21	9.45	14.06	10.12	14.48	9.98	14.95	9.86	15.88	10.31	16.82	9.99
21					13.50	9.56	14.36	10.22	14.80	10.09	15.28	9.97	16.23	10.41	17.19	10.08
23					13.50	9.56	14.40	10.24	14.83	10.10	15.31	9.98	16.28	10.43	17.25	10.10
25			12.53	9.84	13.50	9.56	14.43	10.25	14.87	10.12	15.35	9.99	16.33	10.44	17.30	10.11
27			12.48	9.82	13.50	9.56	14.46	10.26	14.90	10.13	15.34	9.98	16.23	10.41		
29			12.37	9.77	13.31	9.48	14.23	10.18	14.68	10.05	15.13	9.92	16.03	10.35		
31			12.26	9.72	13.11	9.41	13.99	10.09	14.45	9.97	14.91	9.85	15.82	10.29		
33	11.49	9.11	12.02	9.62	12.92	9.33	13.76	10.01	14.23	9.90	14.69	9.78	15.61	10.24		
35	10.88	8.84	11.63	9.46	12.72	9.26	13.53	9.93	14.00	9.83	14.47	9.71	15.41	10.18		
37	10.75	8.78	11.45	9.39	12.49	9.17	13.29	9.85	13.74	9.74	14.18	9.62	15.08	10.09		
39	10.62	8.72	11.26	9.31	12.26	9.08	13.04	9.76	13.47	9.65	13.90	9.53	14.76	10.00		
41	10.49	8.66	11.07	9.23	12.02	8.99	12.80	9.68	13.21	9.57	13.62	9.45	14.44	9.91		
43	10.35	8.60	10.89	9.16	11.79	8.91	12.55	9.60	12.94	9.48	13.33	9.36	14.11	9.82		

Outdoor air temp.	Indoor air temperature						
	°CDB	°CWB	16	18	20	22	24
-19.8	-20	10.42	10.34	10.26	10.17	10.09	
-17.7	-18	11.06	10.97	10.88	10.79	10.70	
-15.7	-16	11.69	11.60	11.50	11.41	11.32	
-13.5	-14	12.20	12.10	12.00	11.91	11.81	
-11.5	-12	12.70	12.60	12.50	12.40	12.30	
-9.5	-10	13.21	13.11	13.00	12.90	12.79	
-7.5	-8	13.71	13.61	13.50	13.39	13.28	
-5.5	-6	14.28	14.17	14.06	13.94	13.83	
-3.0	-4	14.84	14.73	14.61	14.49	14.37	
-1.0	-2	15.41	15.29	15.17	15.04	14.91	
1.0	0	15.97	15.85	15.72	15.59	15.45	
2.0	1	16.26	16.13	16.00	15.86	15.73	
3.0	2	16.25	16.13	16.00	15.86	15.73	
5.0	4	16.25	16.13	16.00	15.86	15.73	
7.0	6	16.25	16.12	16.00	15.87	15.73	
9.0	8	16.93	16.80	16.68	16.54	16.40	
11.5	10	17.61	17.48	17.35	17.21	17.07	
13.5	12	18.53	18.39	18.25	18.12	18.17	
15.5	14	19.46	19.31	19.16	19.02	19.27	
16.5	16	19.93	19.77	19.61	19.48	19.82	

PJF000Z587

Notes(1) These data show average statuses.

Depending on the system control, there may be ranges where the operation is not conducted continuously.

These data show the case where the operation frequency of a compressor is fixed (Cooling only)

(2) Capacities are based on the following conditions.

Corresponding refrigerant piping length :7.5m

Level difference of Zero.

(3) Symbols are as follows.

TC : Total cooling capacity (kW)

SHC : Sensible heat capacity (kW)

HC : Heating capacity (kW)

Model **FDT140VSVH** Indoor unit **FDT140VH** Outdoor unit **FDC140VSX**
 Cooling Mode

Outdoor air temp. °CDB	Indoor air temperature (kW)															
	18 °CDB		21 °CDB		23 °CDB		26 °CDB		27 °CDB		28 °CDB		31 °CDB		33 °CDB	
	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC
11					11.66	8.86	12.38	9.54	12.73	9.41	13.13	9.30	13.91	9.77	14.70	9.48
13					12.08	9.02	12.83	9.69	13.21	9.57	13.62	9.45	14.45	9.91	15.28	9.62
15					12.50	9.17	13.29	9.85	13.68	9.72	14.12	9.60	14.99	10.06	15.87	9.76
17					12.92	9.33	13.75	10.01	14.16	9.88	14.62	9.76	15.54	10.22	16.45	9.90
19					13.21	9.45	14.06	10.12	14.48	9.98	14.95	9.86	15.88	10.31	16.82	9.99
21					13.50	9.56	14.36	10.22	14.80	10.09	15.28	9.97	16.23	10.41	17.19	10.08
23					13.50	9.56	14.40	10.24	14.83	10.10	15.31	9.98	16.28	10.43	17.25	10.10
25			12.53	9.84	13.50	9.56	14.43	10.25	14.87	10.12	15.35	9.99	16.33	10.44	17.30	10.11
27			12.48	9.82	13.50	9.56	14.46	10.26	14.90	10.13	15.34	9.98	16.23	10.41		
29			12.37	9.77	13.31	9.48	14.23	10.18	14.68	10.05	15.13	9.92	16.03	10.35		
31			12.26	9.72	13.11	9.41	13.99	10.09	14.45	9.97	14.91	9.85	15.82	10.29		
33	11.49	9.11	12.02	9.62	12.92	9.33	13.76	10.01	14.23	9.90	14.69	9.78	15.61	10.24		
35	10.88	8.84	11.63	9.46	12.72	9.26	13.53	9.93	14.00	9.83	14.47	9.71	15.41	10.18		
37	10.75	8.78	11.45	9.39	12.49	9.17	13.29	9.85	13.74	9.74	14.18	9.62	15.08	10.09		
39	10.62	8.72	11.26	9.31	12.26	9.08	13.04	9.76	13.47	9.65	13.90	9.53	14.76	10.00		
41	10.49	8.66	11.07	9.23	12.02	8.99	12.80	9.68	13.21	9.57	13.62	9.45	14.44	9.91		
43	10.35	8.60	10.89	9.16	11.79	8.91	12.55	9.60	12.94	9.48	13.33	9.36	14.11	9.82		

Heating Mode : HC (kW)

Outdoor air temp. °CDB	°CWB	Indoor air temperature °CDB				
		16	18	20	22	24
		-19.8	-20	12.09	12.00	11.90
-17.7	-18	13.61	13.51	13.40	13.29	13.18
-15.7	-16	14.63	14.52	14.40	14.28	14.17
-13.5	-14	15.24	15.12	15.00	14.88	14.76
-11.5	-12	15.64	15.53	15.40	15.27	15.15
-9.5	-10	15.95	15.83	15.70	15.57	15.44
-7.5	-8	16.15	16.02	15.90	15.77	15.64
-5.5	-6	16.25	16.13	16.00	15.86	15.73
-3.0	-4	16.25	16.13	16.00	15.86	15.72
-1.0	-2	16.25	16.13	16.00	15.86	15.73
1.0	0	16.25	16.13	16.00	15.86	15.73
2.0	1	16.25	16.13	16.00	15.86	15.73
3.0	2	16.25	16.13	16.00	15.86	15.73
5.0	4	16.25	16.13	16.00	15.86	15.73
7.0	6	16.25	16.13	16.00	15.87	15.73
9.0	8	16.93	16.80	16.68	16.54	16.40
11.5	10	17.61	17.48	17.35	17.21	17.07
13.5	12	18.53	18.39	18.25	18.12	18.17
15.5	14	19.46	19.31	19.16	19.02	19.27
16.5	16	19.93	19.77	19.61	19.48	19.82

PJF000Z587

(2) Twin type

Model **FDT140VNXPVH** Indoor unit **FDT71VH (2units)** Outdoor unit **FDC140VNX**
 Cooling Mode

Outdoor air temp. °CDB	Indoor air temperature (kW)															
	18 °CDB		21 °CDB		23 °CDB		26 °CDB		27 °CDB		28 °CDB		31 °CDB		33 °CDB	
	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC
11					11.66	10.89	12.38	11.95	12.73	11.80	13.13	11.66	13.91	12.44	14.70	12.10
13					12.08	11.02	12.83	12.07	13.21	11.93	13.62	11.78	14.45	12.55	15.28	12.20
15					12.50	11.15	13.29	12.20	13.68	12.05	14.12	11.90	14.99	12.66	15.87	12.31
17					12.92	11.29	13.75	12.33	14.16	12.18	14.62	12.03	15.54	12.78	16.45	12.42
19					13.21	11.38	14.06	12.42	14.48	12.26	14.95	12.11	15.88	12.86	16.82	12.49
21					13.50	11.47	14.36	12.51	14.80	12.35	15.28	12.20	16.23	12.94	17.19	12.56
23					13.50	11.47	14.40	12.52	14.83	12.36	15.31	12.20	16.28	12.95	17.25	12.57
25			12.53	11.89	13.50	11.47	14.43	12.53	14.87	12.37	15.35	12.21	16.33	12.96	17.30	12.58
27			12.48	11.87	13.50	11.47	14.46	12.54	14.90	12.38	15.34	12.21	16.23	12.94		
29			12.37	11.83	13.31	11.41	14.23	12.47	14.68	12.32	15.13	12.16	16.03	12.89		
31			12.26	11.79	13.11	11.35	13.99	12.40	14.45	12.26	14.91	12.10	15.82	12.84		
33	11.49	10.87	12.02	11.71	12.92	11.29	13.76	12.34	14.23	12.20	14.69	12.05	15.61	12.80		
35	10.88	10.63	11.63	11.40	12.72	11.22	13.53	12.27	14.00	12.14	14.47	11.99	15.41	12.76		
37	10.75	10.54	11.45	11.22	12.49	11.15	13.29	12.20	13.74	12.07	14.18	11.92	15.08	12.68		
39	10.62	10.41	11.26	11.03	12.26	11.08	13.04	12.13	13.47	12.00	13.90	11.85	14.76	12.62		
41	10.49	10.28	11.07	10.85	12.02	11.00	12.80	12.07	13.21	11.93	13.62	11.78	14.44	12.55		
43	10.35	10.14	10.89	10.67	11.79	10.93	12.55	12.00	12.94	11.86	13.33	11.71	14.11	12.48		

Heating Mode : HC (kW)

Outdoor air temp. °CDB	°CWB	Indoor air temperature °CDB				
		16	18	20	22	24
		-19.8	-20	10.42	10.34	10.26
-17.7	-18	11.06	10.97	10.88	10.79	10.70
-15.7	-16	11.69	11.60	11.50	11.41	11.32
-13.5	-14	12.20	12.10	12.00	11.91	11.81
-11.5	-12	12.70	12.60	12.50	12.40	12.30
-9.5	-10	13.21	13.11	13.00	12.90	12.79
-7.5	-8	13.71	13.61	13.50	13.39	13.28
-5.5	-6	14.28	14.17	14.06	13.94	13.83
-3.0	-4	14.84	14.73	14.61	14.49	14.37
-1.0	-2	15.41	15.29	15.17	15.04	14.91
1.0	0	15.97	15.85	15.72	15.59	15.45
2.0	1	16.26	16.13	16.00	15.86	15.73
3.0	2	16.25	16.13	16.00	15.86	15.73
5.0	4	16.25	16.13	16.00	15.86	15.73
7.0	6	16.25	16.12	16.00	15.87	15.73
9.0	8	16.93	16.80	16.68	16.54	16.40
11.5	10	17.61	17.48	17.35	17.21	17.07
13.5	12	18.53	18.39	18.25	18.12	18.17
15.5	14	19.46	19.31	19.16	19.02	19.27
16.5	16	19.93	19.77	19.61	19.48	19.82

Notes(1) These data show average statuses.

Depending on the system control, there may be ranges where the operation is not conducted continuously.

These data show the case where the operation frequency of a compressor is fixed.(Cooling only)

(2) Capacities are based on the following conditions.

Corresponding refrigerant piping length :7.5m

Level difference of Zero.

(3) Symbols are as follows.

TC : Total cooling capacity (kW)

SHC : Sensible heat capacity (kW)

HC : Heating capacity (kW)

PJF000Z587

Model **FDT140VSPVH** Indoor unit **FDT71VH (2 units)** Outdoor unit **FDC140VSX**

Cooling Mode

(kW)

Heating Mode : HC

(kW)

Outdoor air temp.	Indoor air temperature															
	18 °CDB		21 °CDB		23 °CDB		26 °CDB		27 °CDB		28 °CDB		31 °CDB		33 °CDB	
	12 °CWB		14 °CWB		16 °CWB		18 °CWB		19 °CWB		20 °CWB		22 °CWB		24 °CWB	
	°CDB	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC
11					11.66	10.89	12.38	11.95	12.73	11.80	13.13	11.66	13.91	12.44	14.70	12.10
13					12.08	11.02	12.83	12.07	13.21	11.93	13.62	11.78	14.45	12.55	15.28	12.20
15					12.50	11.15	13.29	12.20	13.68	12.05	14.12	11.90	14.99	12.66	15.87	12.31
17					12.92	11.29	13.75	12.33	14.16	12.18	14.62	12.03	15.54	12.78	16.45	12.42
19					13.21	11.38	14.06	12.42	14.48	12.26	14.95	12.11	15.88	12.86	16.82	12.49
21					13.50	11.47	14.36	12.51	14.80	12.35	15.28	12.20	16.23	12.94	17.19	12.56
23					13.50	11.47	14.40	12.52	14.83	12.36	15.31	12.20	16.28	12.95	17.25	12.57
25			12.53	11.89	13.50	11.47	14.43	12.53	14.87	12.37	15.35	12.21	16.33	12.96	17.30	12.58
27			12.48	11.87	13.50	11.47	14.46	12.54	14.90	12.38	15.34	12.21	16.23	12.94		
29			12.37	11.83	13.31	11.41	14.23	12.47	14.68	12.32	15.13	12.16	16.03	12.89		
31			12.26	11.79	13.11	11.35	13.99	12.40	14.45	12.26	14.91	12.10	15.82	12.84		
33	11.49	10.87	12.02	11.71	12.92	11.29	13.76	12.34	14.23	12.20	14.69	12.05	15.61	12.80		
35	10.88	10.63	11.63	11.40	12.72	11.22	13.53	12.27	14.00	12.14	14.47	11.99	15.41	12.76		
37	10.75	10.54	11.45	11.22	12.49	11.15	13.29	12.20	13.74	12.07	14.18	11.92	15.08	12.68		
39	10.62	10.41	11.26	11.03	12.26	11.08	13.04	12.13	13.47	12.00	13.90	11.85	14.76	12.62		
41	10.49	10.28	11.07	10.85	12.02	11.00	12.80	12.07	13.21	11.93	13.62	11.78	14.44	12.55		
43	10.35	10.14	10.89	10.67	11.79	10.93	12.55	12.00	12.94	11.86	13.33	11.71	14.11	12.48		

Outdoor air temp.		Indoor air temperature					
		°CDB					
°CDB	°CWB	16	18	20	22	24	
-19.8	-20	12.09	12.00	11.90	11.80	11.71	
-17.7	-18	13.61	13.51	13.40	13.29	13.18	
-15.7	-16	14.63	14.52	14.40	14.28	14.17	
-13.5	-14	15.24	15.12	15.00	14.88	14.76	
-11.5	-12	15.64	15.53	15.40	15.27	15.15	
-9.5	-10	15.95	15.83	15.70	15.57	15.44	
-7.5	-8	16.15	16.02	15.90	15.77	15.64	
-5.5	-6	16.25	16.13	16.00	15.86	15.73	
-3.0	-4	16.25	16.13	16.00	15.86	15.72	
-1.0	-2	16.25	16.13	16.00	15.86	15.73	
1.0	0	16.25	16.13	16.00	15.86	15.73	
2.0	1	16.25	16.13	16.00	15.86	15.73	
3.0	2	16.25	16.13	16.00	15.86	15.73	
5.0	4	16.25	16.13	16.00	15.86	15.73	
7.0	6	16.25	16.13	16.00	15.87	15.73	
9.0	8	16.93	16.80	16.68	16.54	16.40	
11.5	10	17.61	17.48	17.35	17.21	17.07	
13.5	12	18.53	18.39	18.25	18.12	18.17	
15.5	14	19.46	19.31	19.16	19.02	19.27	
16.5	16	19.93	19.77	19.61	19.48	19.82	

- Notes(1) These data show average statuses.
 Depending on the system control, there may be ranges where the operation is not conducted continuously.
 These data show the case where the operation frequency of a compressor is fixed.(Cooling only)
- (2) Capacities are based on the following conditions.
 Corresponding refrigerant piping length :7.5m
 Level difference of Zero.
- (3) Symbols are as follows.
 TC : Total cooling capacity (kW)
 SHC : Sensible heat capacity (kW)
 HC : Heating capacity (kW)




[References data]


Capacity variation against outdoor and indoor temperature at the maximum compressor speed capacity compensation coefficient shows the ratio to nominal capacity.

(I) Model FDC71VNX

① Cooling

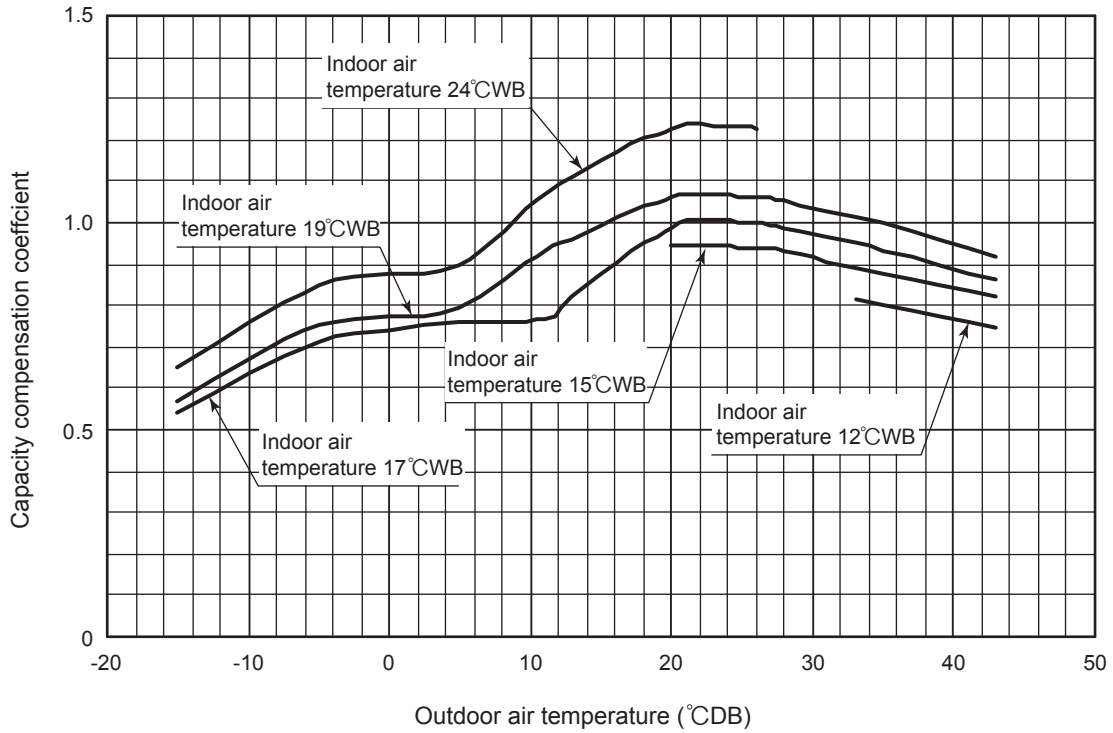


② Heating

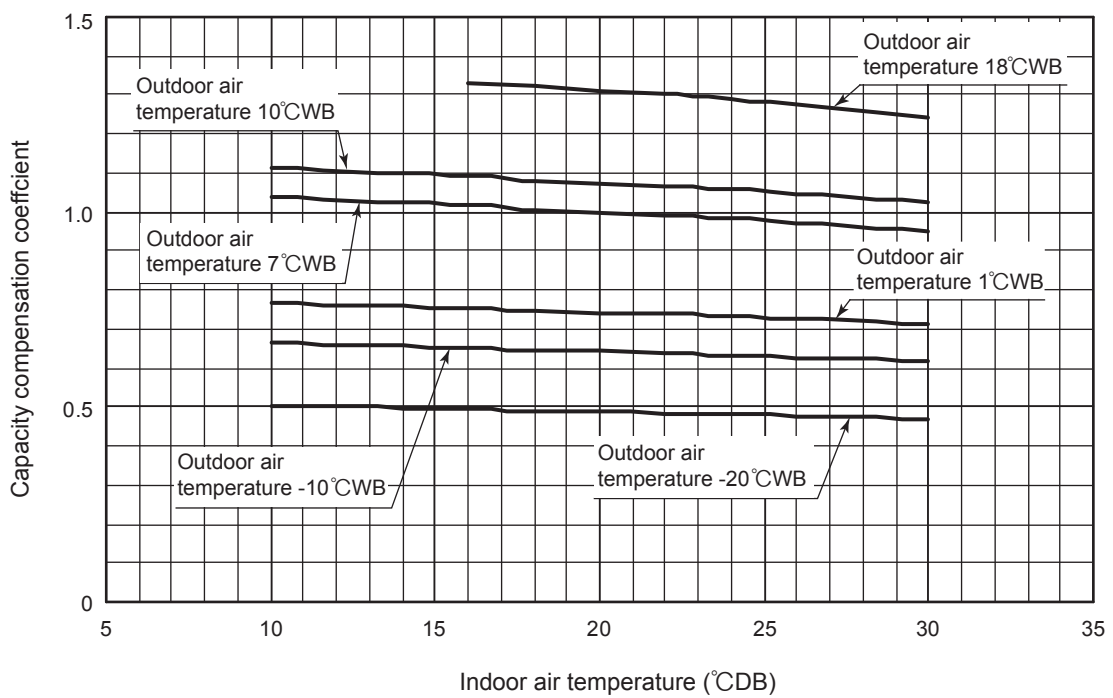


(II) Models FDC100, 125, 140VNX, 100, 125, 140VSX

① Cooling

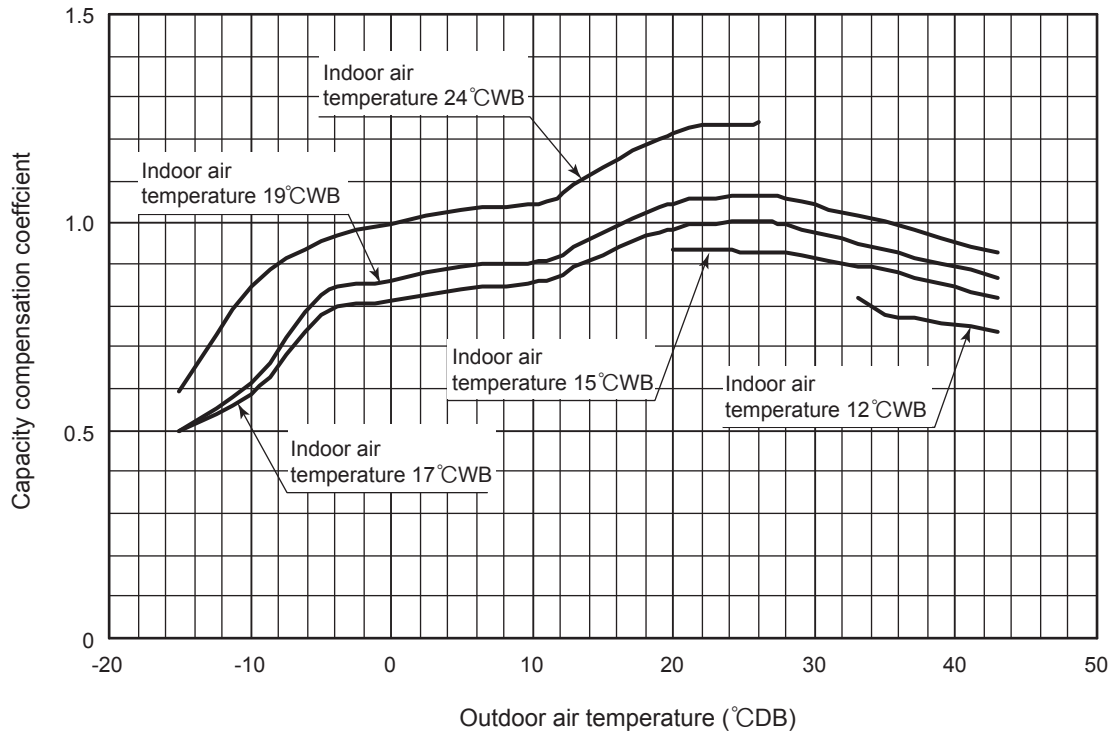

② Heating

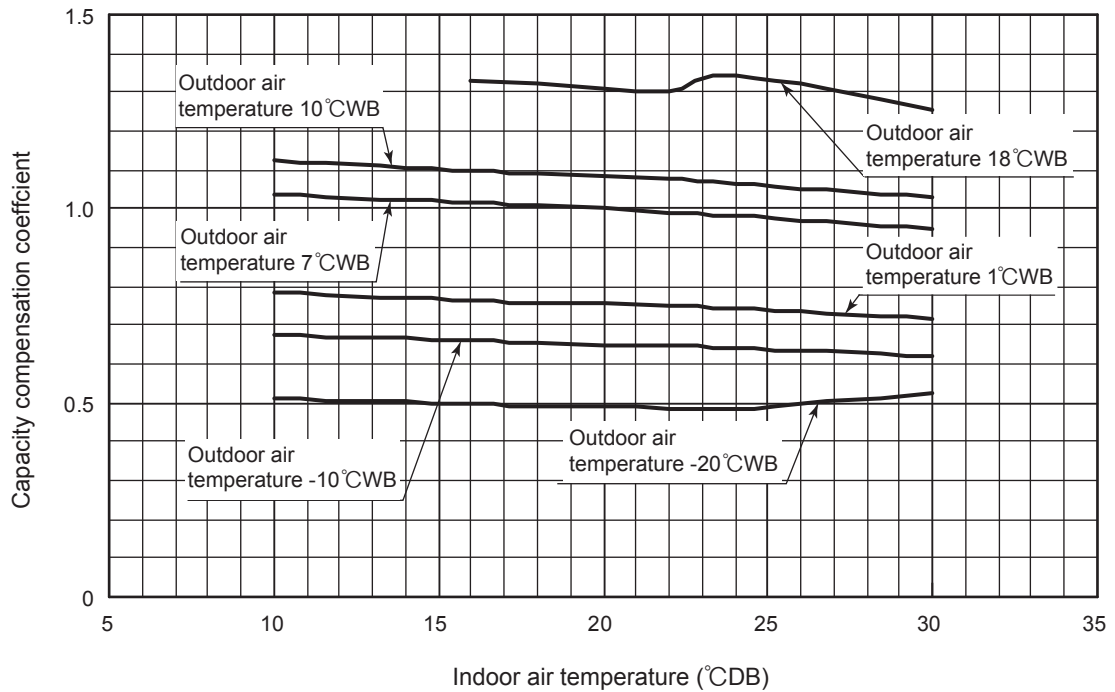

1.8.2 Correction of cooling and heating capacity in relation to air flow rate control (Fan speed)

Fan speed	P-Hi or Hi	Me	Lo
Coefficient	1.00	0.97	0.95

1.8.3 Correction of cooling and heating capacity in relation to one way length of refrigerant piping

It is necessary to correct the cooling and heating capacity in relation to the one way equivalent piping length between the indoor and outdoor units.

Equivalent piping length ⁽¹⁾ (m)		7.5	10	15	20	25	30	35	40	45	50	55	
Heating		1	1	1	1	1	0.998	0.998	0.993	0.993	0.988	0.988	
Cooling	FDC71 model	φ 15.88	1	0.996	0.989	0.982	0.975	0.968	0.961	0.954	0.947	0.940	0.933
	FDC100 model		1	0.991	0.978	0.964	0.951	0.937	0.924	0.910	0.897	0.883	0.870
	FDC125 model		1	0.986	0.968	0.950	0.932	0.914	0.896	0.878	0.860	0.842	0.824
	FDC140 model		1	0.985	0.966	0.946	0.927	0.907	0.888	0.868	0.849	0.829	0.810
	FDC71 model	φ 19.05	1.008	1.006	1.003	1	0.997	0.994	0.991	0.988	0.985	0.982	0.979
	FDC100 model		1.016	1.013	1.007	1.002	0.996	0.991	0.985	0.980	0.974	0.969	0.963
	FDC125 model		1.022	1.018	1.009	1.001	0.992	0.984	0.975	0.967	0.958	0.950	0.941
	FDC140 model		1.026	1.021	1.011	1.002	0.992	0.983	0.973	0.964	0.954	0.945	0.935

Equivalent piping length ⁽¹⁾ (m)		60	65	70	75	80	85	90	95	100	105	
Heating		0.983	0.983	0.978	0.978	0.973	0.973	0.968	0.968	0.963	0.963	
Cooling	FDC71 model	φ 15.88	—	—	—	—	—	—	—	—	—	
	FDC100 model		0.856	0.843	0.829	0.816	0.803	0.789	0.776	0.762	0.749	0.736
	FDC125 model		0.806	0.788	0.770	0.752	0.734	0.716	0.698	0.680	0.662	0.644
	FDC140 model		0.790	0.771	0.751	0.732	0.712	0.693	0.673	0.654	0.634	0.615
	FDC71 model	φ 19.05	—	—	—	—	—	—	—	—	—	
	FDC100 model		0.959	0.955	0.951	0.948	0.944	0.940	0.936	0.932	0.929	0.926
	FDC125 model		0.935	0.929	0.924	0.919	0.912	0.908	0.902	0.897	0.892	0.887
	FDC140 model		0.928	0.920	0.913	0.907	0.900	0.894	0.888	0.882	0.876	0.870

Note (1) Calculate the equivalent length using the following formula.

However, install the piping so that the piping length is within +5 m of the limit length (actual length) for the respective types.

- Equivalent length = Actual length + (Equivalent bend length x number of bends in the piping.)
Equivalent length per bend. (Models FDC71-140 only)

Gas pipe diameter (mm)	φ 12.7	φ 15.88	φ 19.05
Equivalent bend length	0.20	0.25	0.30

1.8.4 Height difference between the indoor unit and outdoor unit

When the outdoor unit is located below indoor units in cooling mode, or when the outdoor unit is located above indoor units in heating mode, the correction coefficient mentioned in the below table should be subtracted from the value in the above table.

Height difference between the indoor unit and outdoor unit in the vertical height difference	5m	10m	15m	20m	25m	30m
Adjustment coefficient	0.99	0.98	0.97	0.96	0.95	0.94

Piping length limitations

Item	Model	FDC71	FDC100, 125, 140
Max. one way piping length		50m	100m
Max. vertical height difference		Outdoor unit is higher 30m Outdoor unit is lower 15m	

Note (1) Values in the table indicate the one way piping length between the indoor and outdoor units.

How to obtain the cooling and heating capacity

Example : The net cooling capacity of the model FDT140VNXPVH with the air flow “P-Hi”, the piping length of 15m, the outdoor unit located 5m lower than the indoor unit, indoor wet-bulb temperature at 19.0°C and outdoor dry-bulb temperature 35°C is

$$\text{Net cooling capacity} = \frac{14.0}{\text{Net cooling total capacity of FDT140VNXPVH (Outdoor temp. : 35°CDB Indoor temp. : 19°CWB) shown in table 1.8.1}} \times \frac{1.00}{\text{Air flow : P-Hi shown in table 1.8.2}} \times \frac{0.966}{\text{Piping length : 15m (Gas pipe size is } \phi 15.88 \text{) shown in table 1.8.3}} \times \frac{0.99}{\text{Height diff. : 5m (Outdoor unit : below) shown in table 1.8.4}} = 13.4\text{kW}$$

1.9 APPLICATION DATA

1.9.1 Installation of indoor unit

PJF012D062

This manual is for the installation of the indoor unit.
 For electrical wiring work (Indoor unit), refer to page 48. For remote control installation, refer to page 52. For wireless kit installation, refer to page 258. For electrical wiring work (Outdoor unit) and refrigerant pipe work installation for outdoor unit, refer to page 64. For motion sensor kit installation, refer to page 266. This unit must always be used with the panel.

SAFETY PRECAUTIONS

- Read the "SAFETY PRECAUTIONS" carefully first of all and then strictly follow it during the installation work in order to protect yourself.
- The precautionary items mentioned below are distinguished into two levels, **⚠️ WARNING** and **⚠️ CAUTION**.
 [⚠️ WARNING]: Wrong installation would cause serious consequences such as injuries or death.
 [⚠️ CAUTION]: Wrong installation might cause serious consequences depending on circumstances.
 Both mentions the important items to protect your health and safety so strictly follow them by any means.
- The meanings of "Marks" used here are as shown on the right:
 [⊘] Never do it under any circumstances. [⚠️] Always do it according to the instruction.
- After completing the installation, do commissioning to confirm there are no abnormalities, and explain to the customers about "SAFETY PRECAUTIONS", correct operation method and maintenance method (air filter cleaning, operation method and temperature setting method) with user's manual of this unit.
 Ask your customers to keep this installation manual together with the user's manual. Also, ask them to hand over the user's manual to the new user when the owner is changed.

⚠️ WARNING

- **Installation should be performed by the specialist.**
 If you install the unit by yourself, it may lead to serious trouble such as water leakage, electric shock, fire, and injury due to overturn of the unit. [⚠️]
- **Install the system correctly according to these installation manuals.**
 Improper installation may cause explosion, injury, water leakage, electric shock, and fire. [⚠️]
- **Check the density referred by the formula (accordance with ISO5149).**
 If the density exceeds the limit density, please consult the dealer and installate the ventilation system. [⚠️]
- **Use the genuine accessories and the specified parts for installation.**
 If parts unspecified by our company are used it could cause water leakage, electric shock, fire, and injury due to overturn of the unit. [⚠️]
- **Ventilate the working area well in case the refrigerant leaks during installation.**
 If the refrigerant contacts the fire, toxic gas is produced. [⚠️]
 In case of R32, the refrigerant could be ignited because of its flammability. [⚠️]
- **Install the unit in a location that can hold heavy weight.**
 Improper installation may cause the unit to fall leading to accidents. [⚠️]
- **Install the unit properly in order to be able to withstand strong winds such as typhoons, and earthquakes.**
 Improper installation may cause the unit to fall leading to accidents. [⚠️]
- **Do not mix air in to the cooling cycle on installation or removal of the air conditioner.**
 If air is mixed in, the pressure in the cooling cycle will rise abnormally and may cause explosion and injuries. [⊘]
- **Be sure to have the electrical wiring work done by qualified electrical installer, and use exclusive circuit.**
 Power source with insufficient capacity and improper work can cause electric shock and fire. [⚠️]
- **Use specified wire for electrical wiring, fasten the wiring to the terminal securely, and hold the cable securely in order not to apply unexpected stress on the terminal.**
 Loose connections or hold could result in abnormal heat generation or fire. [⚠️]
- **Arrange the electrical wires in the control box properly to prevent them from rising. Fit the lid of the services panel properly.**
 Improper fitting may cause abnormal heat and fire. [⚠️]
- **Check for refrigerant gas leakage after installation is completed.**
 If the refrigerant gas leaks into the house and comes in contact with a fan heater, a stove, or an oven, toxic gas is produced. [⚠️]
- **Use the specified pipe, flare nut, and tools for R32 or R410A.**
 Using existing parts (R22) could cause the unit failure and serious accident due to explosion of the cooling cycle. [⚠️]
- **Tighten the flare nut according to the specified method by with torque wrench.**
 If the flare nut were tightened with excess torque, it could cause burst and refrigerant leakage after a long period. [⚠️]
- **Do not put the drainage pipe directly into drainage channels where poisonous gases such as sulfide gas can occur.**
 Poisonous gases will flow into the room through drainage pipe and seriously affect the user's health and safety. This can also cause the corrosion of the indoor unit and a resultant unit failure or refrigerant leak. [⊘]
- **Connect the pipes for refrigeration circuit securely in installation work before compressor is operated.**
 If the compressor is operated when the service valve is open without connecting the pipe, it could cause explosion and injuries due to abnormal high pressure in the system. [⚠️]
- **Stop the compressor before removing the pipe after shutting the service valve on pump down work.**
 If the pipe is removed when the compressor is in operation with the service valve open, air would be mixed in the refrigeration circuit and it could cause explosion and injuries due to abnormal high pressure in the cooling cycle. [⚠️]
- **Only use prescribed optional parts. The installation must be carried out by the qualified installer.**
 If you install the system by yourself, it can cause serious trouble such as water leaks, electric shocks, fire. [⚠️]
- **Do not repair by yourself. And consult with the dealer about repair.**
 Improper repair may cause water leakage, electric shock or fire. [⊘]
- **Consult the dealer or a specialist about removal of the air conditioner.**
 Improper installation may cause water leakage, electric shock or fire. [⚠️]
- **Turn off the power source during servicing or inspection work.**
 If the power is supplied during servicing or inspection work, it could cause electric shock and injury by the operating fan. [⚠️]
- **Do not run the unit when the panel or protection guard are taken off.**
 Touching the rotating equipment, hot surface, or high voltage section could cause an injury to be caught in the machine, to get burned, or electric shock. [⊘]
- **Shut off the power before electrical wiring work.**
 It could cause electric shock, unit failure and improper running. [⚠️]

⚠️ CAUTION

- **Perform earth wiring surely.**
 Do not connect the earth wiring to the gas pipe, water pipe, lightning rod and telephone earth wiring. Improper earth could cause unit failure and electric shock due to a short circuit. [⚠️]
- **Earth leakage breaker must be installed.**
 If the earth leakage breaker is not installed, it can cause electric shocks. [⚠️]
- **Use the circuit breaker of correct capacity. Circuit breaker should be the one that disconnect all poles under over current.**
 Using the incorrect one could cause the system failure and fire. [⚠️]
- **Do not use any materials other than a fuse of correct capacity where a fuse should be used.**
 Connecting the circuit by wire or copper wire could cause unit failure and fire. [⊘]
- **Do not install the indoor unit near the location where there is possibility of flammable gas leakages.**
 If the gas leaks and gathers around the unit, it could cause fire. [⊘]
- **Do not install and use the unit where corrosive gas (such as sulfurous acid gas etc.) or flammable gas (such as thinner, petroleum etc.) may be generated or accumulated, it could be sprayed with chemicals, or volatile flammable substances are handled.**
 It could cause the corrosion of heat exchanger, breakage of plastic parts etc. And inflammable gas could cause fire. [⊘]
- **Secure a space for installation, inspection and maintenance specified in the manual.**
 Insufficient space can result in accident such as personal injury due to falling from the installation place. [⚠️]
- **Do not use the indoor unit at the place where water splashes such as laundry.**
 Indoor unit is not waterproof. It could cause electric shock and fire. [⊘]
- **Do not use the indoor unit for a special purpose such as food storage, cooling for precision instrument, preservation of animals, plants, and a work of art.**
 It could cause the damage of the items. [⊘]
- **Do not install nor use the system near equipments which generate electromagnetic wave or high harmonics.**
 Equipments like inverter equipment, private power generator, high-frequency medical equipment, or telecommunication equipment might influence the air conditioner and cause a malfunction and breakdown. Or the air conditioner might influence medical equipments or telecommunication equipments, and obstruct their medical activity or cause jamming. [⊘]
- **Do not install the remote control at the direct sunlight.**
 It could cause breakdown or deformation of the remote control. [⊘]
- **Do not install the indoor unit at the place listed below.**
 - Places where flammable gas could leak.
 - Places where carbon fiber, metal powder or any powder is floated.
 - Place where the substances which affect the air conditioner are generated such as sulfide gas, chloride gas, acid, alkali or ammoniac atmospheres.
 - Places exposed to oil mist or steam directly.
 - On vehicles and ships
 - Places where machinery which generates high harmonics is used.
 - Places where cosmetics or special sprays are frequently used.
 - Highly salted area such as beach.
 - Heavy snow area
 - Places where the system is affected by smoke from a chimney.
 - Altitude over 1000m
- **Do not install the indoor unit in the locations listed below (Be sure to install the indoor unit according to the installation manual for each model because each indoor unit has each limitation)**
 - Locations with any obstacles which can prevent inlet and outlet air of the unit.
 - Locations where vibration can be amplified due to insufficient strength of structure.
 - Locations where the infrared receiver is exposed to the direct sunlight or the strong light beam. (in case of the infrared specification unit)
 - Locations where an equipment affected by high harmonics is placed. (TV set or radio receiver is placed within 5m)
 - Locations where drainage cannot run off safely. It can affect performance or function and etc..
 - Do not install the motion sensor mounting panel at following places. It could cause detection error, incapacity of detection, or characteristic degradation.
 - Place where vibration is applied to it for a long period of time.
 - Place where static electricity or electromagnetic wave generates.
 - Place where it is exposed to high temperature or humidity for a long period of time.
 - Dusty place or where the lens face could be fouled or damaged.
- **Do not put any valuables which will break down by getting wet under the air conditioner.**
 Condensation could drop when the relative humidity is higher than 80% or drain pipe is clogged, and it damages user's belongings. [⊘]
- **Do not use the base frame for the outdoor unit which is corroded or damaged after a long period of use.**
 It could cause the unit falling down and injury. [⊘]
- **Pay attention not to damage the drain pan by weld sputter when brazing work is done near the unit.**
 If sputter entered into the unit during brazing work, it could cause damage (pinhole) of drain pan and leakage of water. To avoid damaging, keep the indoor unit packed or cover the indoor unit. [⚠️]
- **Install the drain pipe to drain the water surely according to the installation manual.**
 Water may drip in the room, damaging user's belongings, unless it is worked as instructed. [⚠️]
- **Be sure to perform air tightness test by pressurizing with nitrogen gas after completed refrigerant piping work.**
 If the density of refrigerant exceeds the limit in the event of refrigerant leakage in the small room, lack of oxygen can occur, which can cause serious accidents. [⚠️]
- **For drain pipe installation, be sure to make descending slope of greater than 1/100, not to make traps, and not to make air-bleeding.**
 Check if the drainage is correctly done during commissioning and ensure the space for inspection and maintenance. [⚠️]
- **Ensure the insulation on the pipes for refrigeration circuit so as not to condense water.**
 Incomplete insulation could cause condensation and it would wet ceiling, floor, and any other valuables. [⚠️]
- **Do not install the outdoor unit where is likely to be a nest for insects and small animals.**
 Insects and small animals could come into the electronic components and cause breakdown and fire. Instruct the user to keep the surroundings clean. [⊘]
- **Pay extra attention, carrying the unit by hand.**
 Carry the unit with 2 people if it is heavier than 20kg. Do not use the plastic straps but the grabbing place, moving the unit by hand. Use protective gloves in order to avoid injury. [⚠️]
- **Make sure to dispose of the packaging material.**
 Leaving the materials may cause injury as metals like nail and woods are used in the package. [⚠️]
- **Do not operate the system without the air filter.**
 It may cause the breakdown of the system due to clogging of the heat exchanger. [⊘]
- **Do not touch any button with wet hands.**
 It could cause electric shock. [⊘]
- **Do not touch the refrigerant piping with bare hands when in operation.**
 The pipe during operation would become very hot or cold according to the operating condition, and it could cause a burn or frostbite. [⊘]
- **Do not clean up the air conditioner with water, and do not spray disinfectants etc. directly over the air conditioner.**
 It could cause electrical shock or corrode parts. [⊘]
- **Do not turn off the power source immediately after stopping the operation.**
 Be sure to wait for more than 5 minutes. Otherwise it could cause water leakage or breakdown. [⊘]
- **Do not control the operation with the circuit breaker.**
 It could cause fire or water leakage. In addition, the fan may start operation unexpectedly and it may cause injury. [⊘]

① Before installation

- Install correctly according to the installation manual.
- Confirm the following points:
 - Unit type/Power supply specification
 - Pipes/Wires/Small parts
 - Accessory items

When moving the indoor unit, hold only the hanging hardware (4 places) only, with care not to apply forces to any other parts of the unit (particularly the refrigerant pipe, drain pipe, and resin parts).

Accessory item

For unit hanging		For refrigerant pipe			For drain pipe			
Flat washer (M10)	Level gauge	Pipe cover(big)	Pipe cover (small)	Strap	Pipe cover(big)	Pipe cover(small)	Drain hose	Hose clamp
8	1	1	1	4	1	1	1	1
For unit hanging	For all height adjustment of ceiling part	For heat insulation of gas pipe	For heat insulation of liquid tube	For pipe cover fixing	For heat insulation of drain socket	For heat insulation of drain socket	For drain pipe connecting	For drain hose mounting


② Selection of installation location for the indoor unit

- Select the suitable areas to install the unit under approval of the user.
 - Areas where the indoor unit can deliver hot and cold wind sufficiently. Suggest to the user to use a circulator if the ceiling height is over 3m to avoid warm air being accumulated on the ceiling.
 - In case of the panel having the motion sensor, the installation height must be no higher than 4 m. It could reduce the sensitivity of motion sensor, disabling the detection.
 - Areas where there is enough space to install and service.
 - Areas where it can be drained properly. Areas where drain pipe descending slope can be taken.
 - Areas where there is no obstruction of airflow on both air return grille and air supply port.
 - Areas where fire alarm will not be accidentally activated by the air conditioner.
 - Areas where the supply air does not short-circuit.
 - Areas where it is not influenced by draft air.
 - Areas not exposed to direct sunlight.
 - Areas where dew point is lower than around 28°C and relative humidity is lower than 80%.
(This indoor unit is tested under the condition of JIS (Japan Industrial Standard) high humidity condition and confirmed there is no problem. However, there is some risk of condensation drop if the air conditioner is operated under the severer condition than mentioned above.
If there is a possibility to use it under such a condition, attach additional insulation of 10 to 20mm thick for entire surface of indoor unit, refrigeration pipe and drain pipe.)
 - Areas where TV and radio stays away more than 1m. (It could cause jamming and noise.)
 - Areas where any items which will be damaged by getting wet are not placed such as food, table wares, server, or medical equipment under the unit.
 - Areas where there is no influence by the heat which cookware generates.
 - Areas where not exposed to oil mist, powder and/or steam directly such as above fryer.
 - Areas where lighting device such as fluorescent light or incandescent light doesn't affect the operation.
(A beam from lighting device sometimes affects the infrared receiver for the wireless remote control and the air conditioner might not work properly.)

- Check if the place where the air conditioner is installed can hold the weight of the unit. If it is not able to hold, reinforce the structure with boards and beams strong enough to hold it. If the strength is not enough, it could cause injury due to unit falling.
- If there are 2 units of wireless type, keep them away for more than 6m to avoid malfunction due to cross communication.
- When plural indoor units are installed nearby, keep them away for more than 4 to 5m.

Space for installation and service

- When it is not possible to keep enough space between indoor unit and wall or between indoor units, close the air supply port where it is not possible to keep space and confirm there is no short circuit of airflow.
- Install the indoor unit at a height of more than 2.5m above the floor.

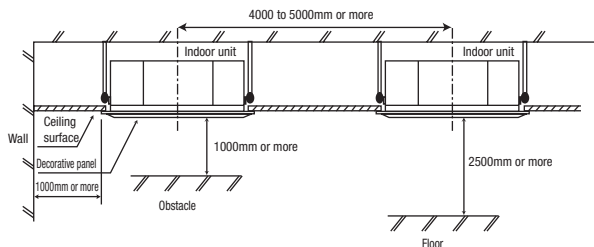

Set blow-out pattern

- Select the most proper number of blow-out air supply port direction from 4 way, 3 way or 2 way according to the shape of the room and installation position. (1 way is not available.)
- If it is necessary to change the number of air supply port, prepare the covering materials. (sold as accessory)
- Instruct the user not to use low fan speed when 2way or 3way air supply is used.
- Do not use 2way air supply port under high temperature and humidity environment. (Otherwise it could cause condensation and leakage of water.)
- It is possible to set the airflow direction port by port independently. Refer to the user's manual for details.

③ Preparation before installation

- If suspension bolt becomes longer, do reinforcement of earthquake resistant.
 - For grid ceiling
 - When suspension bolt length is over 500mm, or the gap between the ceiling and roof is over 700mm, apply earthquake resistant brace to the bolt.
 - In case the unit is hung directly from the slab and is installed on the ceiling plane which has enough strength.
 - When suspension bolt length is over 1000mm, apply the earthquake resistant brace to the bolt.
- Prepare four (4) sets of suspension bolt, nut and spring washer (M10 or M8) on site.


Ceiling opening, Suspension bolts pitch, Pipe position

* It is possible the suspension bolts pitch to adjust according to the this table.

Type	Mark	P1	P2
1		770	725~770
2		770~800	725

Series	Type	a	d	f	g	h
Single Split (PAC) series	40 to 71 type	236	37	105	88	67
	100 to 140 type	298	99	167	140	129
VRF (KX) series	28 to 71 type	236	37	105	88	67
	90 to 160 type	298	99	167	140	129


Symbol	
A	Gas piping
B	Liquid piping
C	Drain piping
D	Hole for wiring
F	Suspension bolts
G	Outside air opening for ducting
H1	Air outlet opening for ducting
H2	

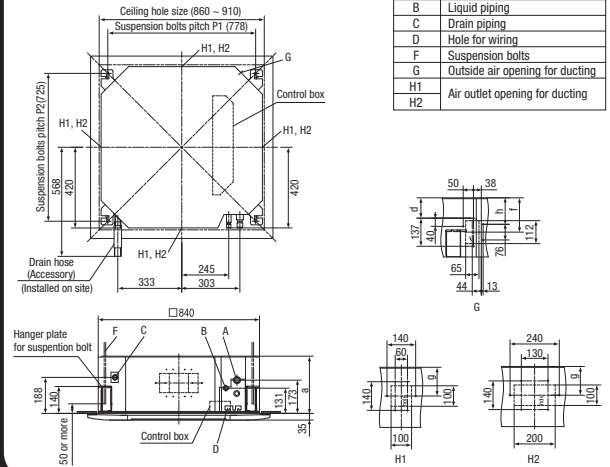

④ Installation of indoor unit

Work procedure


- Set the suspension bolt length to about 50 mm from the ceiling.
- Temporarily locate the lower nuts of the suspension bolts (4 places) at a position approximately 150 mm from the ceiling.
- Temporarily locate the upper nuts of the suspension bolts (4 places) at positions sufficiently distance from the lower nuts so that they do not interfere with the suspension of the indoor unit and with its height adjustment.
- Set the upper nuts of the suspension bolts and upper washers (4 places) at positions sufficiently distance from the lower nuts. Then, push and insert the temporary fixing carton of washers (*) onto suspension bolts. Make sure that the upper washers do not slide down.
- Suspend the indoor unit.
- After suspending the indoor unit, mount the level gauge (*) to the air outlet of the indoor unit, and adjust the suspension height of the indoor unit. Loosen the upper nuts (4 places), and adjust the suspension height using the lower nuts (4 places). Confirm there is no slack between the lower nuts and flat washers of the indoor unit hanger plate (4 places).
- Remove the temporary fixing carton of washers (from all 4 places).
- Make sure that the indoor unit is installed horizontally. Confirm the levelness of the indoor unit using a level gauge or transparent hose filled with water. (Keep the height difference at both ends of the indoor unit within 3 mm.)
- Tighten the upper nuts of the suspension bolts (4 places).

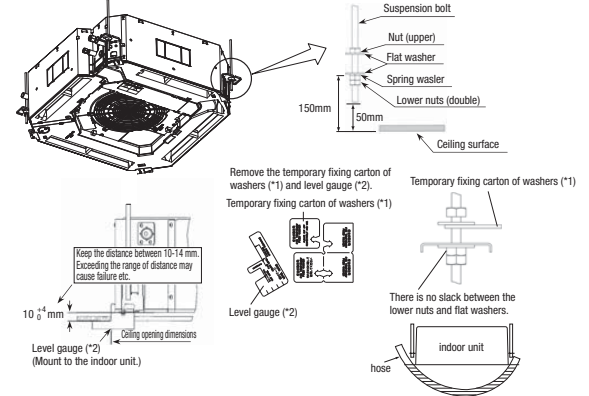

④ Installation of indoor unit (continued)

Protection of the indoor unit

- If it is not possible to install the panel for a while or if attaching the ceiling board after installing the indoor unit, protect the indoor unit by using upper carton.

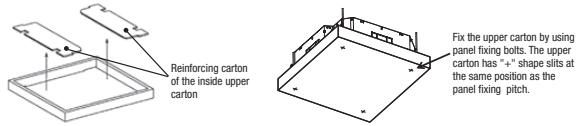


Caution

- Do not adjust the unit height by adjusting the upper nuts. Doing so will cause unexpected stress on the indoor unit and cause the unit to become deformed, prevent the panel from being installed, and be generated fan interference noise.
- Make sure that the indoor unit is installed horizontally and set the appropriate gap between the underside of the unit and the ceiling plane. Improper installation may cause air leakage, dew condensation, water leakage and noise.
- Even after the panel has been installed, the unit height can still be finely adjusted. Refer to the panel installation manual for details.
- Make sure there is no gap between the panel and the ceiling surface, and between the panel and the indoor unit. Any gap may cause air and/or water to leak, or condensation to form.

⑤ Refrigerant pipe

Caution

- Be sure to use new pipes for the refrigerant pipes. Use the flare nut attached to the product. Regarding whether existing pipes can be reused or not, and the washing method, refer to the instruction manual of the outdoor unit, catalogue or technical data.
 - 1) In case of reuse: Do not use old flare nut, but use the nut attached to the unit.
 - 2) In case of reuse: Flare the end of pipe replaced partially for R32 or R410A.
- ⚠ **WARNING** : When flared joints are reused indoors, the flare part shall be re-fabricated. (only for R32)

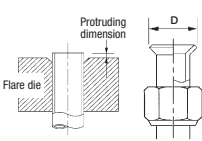


Pipe dia. d mm	Min. pipe wall thickness mm	Protruding dimension for flare, mm		Flare O.D. D mm	Flare nut tightening torque N·m
		Rigid (Clutch type) For R32 For R410A	Conventional tool		
6.35	0.8			8.9 ~ 9.1	14 ~ 18
9.52	0.8			12.8 ~ 13.2	34 ~ 42
12.7	0.8	0 ~ 0.5	0.7 ~ 1.3	16.2 ~ 16.6	49 ~ 61
15.88	1			19.3 ~ 19.7	68 ~ 82
19.05	1.2			23.6 ~ 24.0	100 ~ 120

- Use phosphorus deoxidized copper alloy seamless pipe (C1220T) for refrigeration pipe installation. In addition, make sure there is no damage both inside and outside of the pipe, and no harmful substances such as sulfur, oxide, dust or a contaminant stuck on the pipes.
- Do not use any refrigerant other than the designated refrigerant.
- Using other refrigerant except the designated refrigerant, may degrade inside refrigeration oil. And air getting into refrigeration circuit may cause over-pressure and resultant it may result in bursting, etc.
- Store the copper pipes indoors and seal the both end of them until they are brazed in order to avoid any dust, dirt or water getting into pipe. Otherwise it will cause degradation of refrigeration oil and compressor breakdown, etc.
- Use special tools for R32 or R410A refrigerant.

Work procedure

1. Remove the flare nut and blind flanges on the pipe of the indoor unit.
 - * Make sure to loosen the flare nut with holding the nut on pipe side with a spanner and giving torque to the nut with another spanner in order to avoid unexpected stress to the copper pipe, and then remove them. (Gas may come out at this time, but it is not abnormal.)
 - Pay attention whether the flare nut pops out. (as the indoor unit is sometimes pressured.)
2. Make a flare on liquid pipe and gas pipe, and connect the refrigeration pipes on the indoor unit.
 - * Bend radius of pipe must be 4D or larger. Once a pipe is bent, do not readjust the bending. Do not twist a pipe or collapse to 2/3D or smaller.
 - Make sure to use flare nuts assembled on the unions.
 - Usage of other flare nuts could cause refrigerant leakage.
 - * Do a flare connection as follows:
 - Make sure to hold the nut on indoor unit pipe side using double spanner method as indicated when fastening / loosening flare nuts in order to prevent unintentional twisting of the copper pipe.
 - When fastening the flare nut, align the refrigeration pipe with the center of flare nut, screw the nut for 3-4 times by hand and then tighten it with spanner with the specified torque mentioned in the table above.
3. Cover the flare connection part of the indoor unit with attached insulation material after a gas leakage inspection, and tighten both ends with attached straps.
 - Make sure to insulate both gas pipes and liquid pipes completely.
 - * Incomplete insulation may cause dew condensation or water dropping.
 - Use heat-resistant (120 °C or more) insulations on the gas side pipes.
 - In case of using at high humidity condition, reinforce insulation of refrigerant pipes. Surface of insulation may cause dew condition or water dropping, if insulations are not reinforced.
4. Refrigerant is charged in the outdoor unit.
 - As for the additional refrigerant charge for the indoor unit and piping, refer to the installation manual attached to the outdoor unit.

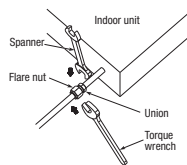


⑤ Refrigerant pipe (continued)


Caution:

Refrigerating machine oil should not be applied to the threads of union or external surface of flare. It is because, even if the same tightening torque is applied, the oil is likely to decrease the slide friction force on the threads and increase, in turn, the axial component force so that it could crack the flare by the stress corrosion. Refrigerating machine oil may be applied to the internal surface of flare only.

<The case of using thickness of insulation is 10mm>



<The case of using reinforced insulation>




⑥ Drain pipe

Caution

- Install the drain pipe according to the installation manual in order to drain properly. Water may drip in the room, damaging user's belongings, unless it is worked as instructed.
- Be sure to use the supplied drain hose. Unless it is used, the drain socket could be damaged by undue stresses, causing water leakage.
- Do not put the drain pipe directly into the ditch where toxic gas such as sulfur, the other harmful and inflammable gas is generated. Toxic gas would flow into the room and it would cause serious damage to user's health and safety (some poisoning or deficiency of oxygen). In addition, it may cause corrosion of heat exchanger and bad smell.
- Connect the pipe securely to avoid water leakage from the joint.
- Insulate the pipe properly to avoid condensation drop.
- Check if the water can flow out properly from both the drain outlet on the indoor unit and the end of the drain pipe after installation.
- Make sure to make descending slope of greater than 1/100 and do not make up-down bend and/or trap in the midway. In addition, do not put air vent on the drain pipe. Check if water is drained out properly from the pipe during commissioning. Also, keep sufficient space for inspection and maintenance.


Drain socket and drain hose connection

- Where temperatures around the drain socket may rise beyond 50°C, adhere the drain socket and the drain hose.
- Avoid using the hose clamp with adhesive. It could cause water leakage.

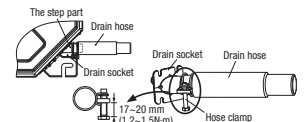

<When using the hose clamp>

1. Make sure that the drain hose (the soft PVC side) is inserted into the end of the step part of the drain socket.
 - Shorten the distance as much as possible (250 mm or less)
 - Fix the hose clamp so that its bolt is located on the outside of the indoor unit, and the bolt are fastened in a vertical orientation.
2. Position the hose clamp so that it touches the insulation of the drain hose, and then tighten the bolt.
3. Turn the bolt several times until it is securely tightened, but do not tighten it excessively. Target extent of bolt tightening should be 17 to 20 mm (Reference: 1.2 to 1.5N·m)



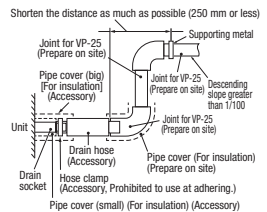


<When using adhesives>

1. Connect the drain hose (the soft PVC side) to the drain socket using polyvinyl type adhesives. Make sure that the drain hose (the soft PVC side) is inserted into the end of the step part of the drain socket.
2. Use the adhesive according to maker's instructions.
 - * Do not use adhesives containing phthalic esters. It could cause water leak.
 - Make sure that the adhesive will not get into the drain hose or drain socket.


Drain hose and piping connection

1. Prepare a joint for connecting VP-25 pipe, adhere and connect the joint to the drain hose (the rigid PVC side), and adhere and connect VP-25 pipe (prepare on site).
 - * As for drain pipe, apply VP-25 made of rigid PVC which is on the market.
 - Make sure that the adhesive will not get into the supplied drain hose. It may cause the flexible part broken after the adhesive is dried up and gets rigid.
 - The flexible drain hose is intended to absorb a small difference at installation of the unit or drain pipes. Intentional bending, expanding may cause the flexible hose broken and water leakage.
2. Pay attention not to apply stresses to the drain socket or drain pipe, and support and fix the drain pipe as close place to the unit as possible when connecting the drain pipe. (within 250 mm from the end of joint prepared at site)
 - As for drain pipe, apply VP25 (OD32). If apply PVC25 (OD25), connect the expanded connector to the drain hose, with adhesive. (Multi unit only)
3. Make sure to make descending slope of greater than 1/100 and do not make up-down bend and/or trap in the midway.
 - Pay attention not to give stress on the pipe on the indoor unit side, and support and fix the pipe as close place to the unit as possible when connecting the drain pipe.
 - Do not set up air vent.

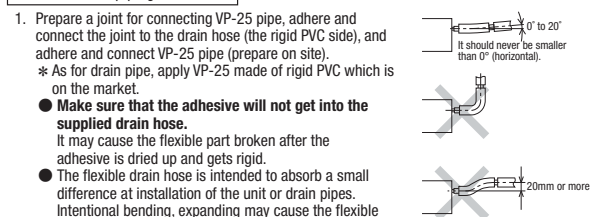

⑥ Drain pipe (continued)

- When sharing a drain pipe for more than 1 unit, lay the main pipe 100mm below the drain outlet of the unit. In addition, select VP-30 or bigger size for main drain pipe.

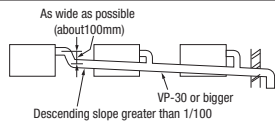


4. Insulate the drain pipe.

- Be sure to insulate the drain socket and rigid PVC pipe installed indoors otherwise it may cause dew condensation and water leakage.
- * After drainage test implementation, cover the drain socket part with pipe cover (small size), then use the pipe cover (big size) to cover the pipe cover (small size), hose clamp and part of the drain hose, and fix and wrap it with tapes to wrap and make joint part gapless.

Drain up


- The position for drain pipe outlet can be raised up to 850mm above the ceiling. Use elbows for installation to avoid obstacles inside ceiling. If the horizontal drain pipe is too long before vertical pipe, the backflow of water will increase when the unit is stopped, and it may cause overflow of water from the drain pan on the indoor unit. In order to avoid overflow, keep the horizontal pipe length and offset of the pipe within the limit shown in the right figure.

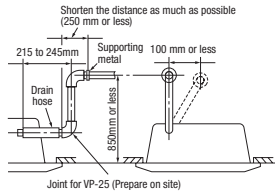

Drain test

- After installing the drain pipe, make sure that drain system works correctly and that no water leaks from the joint and drain pan. Check whether the motor sound of the drain pump is normal.
 - Conduct a drain test when installing, even during the heating season.
 - In the case of new buildings, be sure to complete the test before fixing the ceiling.
1. Pour about 1,000 cc of test water into the drain pan of the indoor unit. Exercise care not to allow electrical equipment such as the drain pump and other components to become wet while filling water. Pour test water through the pouring port of the pipe lid using a feed water pump or a similar device, or through the refrigerant pipe joint.

- In case of pouring water from the air outlet
- In case of pouring water from the pouring port of the pipe lid

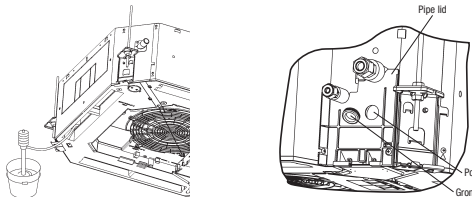

2. Make sure that water drains out completely and that no water leaks from any joints of the drain pipe during the test. Test to confirm that the water drains out correctly while listening to the drain pump motor operating sound. At the drain socket (transparent), it is possible to check whether the water drains out correctly.
3. Unplug the rubber plug on the indoor unit so that the remaining water drains from the drain pan after the draining test. After checking the water drainage, fix the rubber plug correctly. Installation work for the drain pipe must be performed for the entire drain pipe up to the indoor unit. If the pipe lid has been removed in order to pour water, mount the pipe lid again.

Drain pump operation

- In case electrical wiring work completed
Drain pump can be operated by the wired remote controller. For the operation method, refer to [Operation for drain pump] in the installation manual for wiring work.
- In case electrical wiring work not completed
Drain pump will run continuously when the dip switch "SW7-1" on the indoor unit PCB is turned ON, the Connector CNB is disconnected, and then the power supply (230VAC on the terminal block ① and ②) is turned ON. Make sure to turn OFF "SW7-1" and reconnect the Connector CNB after the test.

⑦ Wiring-out position and wiring connection


- Electrical installation work must be performed according to the installation manual by an electrical installation service provider qualified by a power provider of the country, and be executed according to the technical standards and other regulations applicable to electrical installation in the country.
- Be sure to use an exclusive circuit.
- Use specified cord, fasten the wiring to the terminal securely, and hold the cord securely in order not to apply unexpected stress on the terminal.
- Do not put both power source line and signal line on the same route. It may cause miscommunication and malfunction.
- Be sure to do D type earth work.
- For the details of electrical wiring work, see attached instruction manual for electrical wiring work.

1. Loosen the 2 screws of the lid of the control box, and slide the lid in the direction of the arrow shown in the figure. It will then be possible to open the lid.

When opening the lid of the control box

When closing the lid of the control box


2. Unhook the lid from the control box, and remove the lid.
3. Remove the 2 screws from the wiring cover, and remove the wiring cover.
4. Hold each wire inside the unit, and securely fasten them to the terminal block.
5. Fix the wiring using clamps.
6. Install the wiring cover and the lid of the control box.

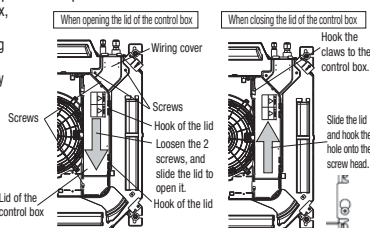

Main fuse specification

Specification	Part No.
T3.15A L250V	SSA564A149AF

⑦ Wiring-out position and wiring connection (continued)

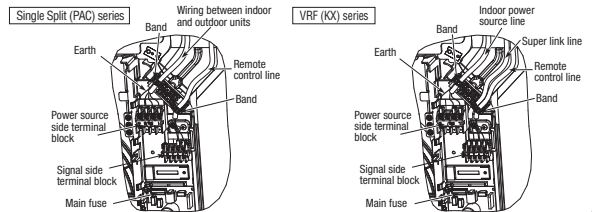

⑧ Panel installation

- Install the panel on the indoor unit after electrical wiring work.
- Refer to the attached manual for panel installation for details.

⑨ Check list after installation


- Check the following items after all installation work completed.

Check if;	Expected trouble	Check
The indoor and outdoor units are fixed securely?	Falling, vibration, noise	
Inspection for leakage is done?	Insufficient capacity	
Insulation work is properly done?	Water leakage	
Water is drained properly?	Water leakage	
Supply voltage is same as mentioned in the model name plate?	PCB burnt out, not working at all	
There is mis-wiring or mis-connection of piping?	PCB burnt out, not working at all	
Earth wiring is connected properly?	Electric shock	
Cable size comply with specified size?	PCB burnt out, not working at all	
Any obstacle blocks airflow on air inlet and outlet?	Insufficient capacity	

⑩ How to check the dirt of drain pan and cleaning the inlet of the drain pump. (Maintenance)


The method of checking the dirt of drain pan

- It is possible to check dirt on the drain pan and drain pump inlet without removing the panel.
1. Open the inlet grille and remove the corner lid on the drain pan side.
 2. Remove the drain cap cover (1 screw) from the panel corner.
 3. Check the dirt on the drain pan from the drain cap, and check the drain pump inlet. If the drain pan is very dirty, remove the drain pan and clean it.
 4. After checking, refix the drain cap cover securely. If the cover is not refixed correctly, it may cause condensation to form and/or water to leak.




Cleaning of drain pump inlet

- It is possible to clean the drain pump inlet and surrounding area by removing the drain cap only; it is not necessary to remove the panel and drain pan.
 - Before removing the drain cap, remove the rubber plug and drain water from the drain pan.
1. Remove the drain cap cover as described above.
 2. Insert the nose of the pliers into the concave portions (2 places) of the drain cap, and rotate the pliers about 1 turn in the CCW direction. The drain cap is removed.
 3. When cleaning the drain pump inlet, use a soft plastic tool. If a metallic tool is used, the drain cap mounting portion may be scratched and water may leak.
 4. Before mounting the drain cap, rinse it and remove any foreign material from the inside of the cap. If the drain cap is installed with foreign material inside it, it may cause water to leak.
 5. Insert the nose of the pliers into the concave portions of the drain cap and rotate the pliers to install the drain cap. Rotate the drain cap about 1 turn in the CW direction until it stops rotating. If the drain cap is not rotated for 1 or more turns, the cap will not have been installed correctly. Remove the drain cap, and then install it again correctly.
 6. After tightening the drain cap, make sure the triangle (△) mark of the drain cap comes close to the triangle mark on the panel. If these triangle marks are not close to each other, tighten the drain cap further.
 7. Refix the drain cap cover and rubber plug securely. If the cover is not refixed correctly, it may cause condensation to form and/or water to leak.

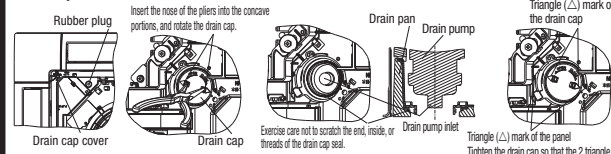

Notes for removing the drain pan

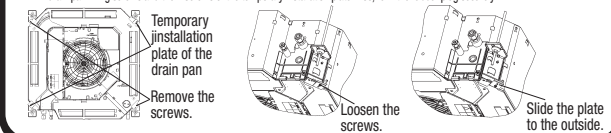

- Before removing the drain pan, drain water from the drain pan. Remove the rubber plug and drain water.
- The drain pan is installed by the temporary installation plate. Remove the 2 drain pan fixing screws, and loosen the 2 screws of the temporary installation plate. Slide the temporary installation plate to the outside of the drain pan. And then, it is possible to remove the drain pan.
- When reinstalling the drain pan, slide the temporary installation plate to the inside and temporarily fix the drain pan. Then, tighten the 2 drain pan fixing screws and the 2 screws of the temporary installation plate. Also, refix the rubber plug securely.



• Panel installation

Read this manual together with the indoor unit's installation manual.

⚠ WARNING

- **Fasten the wiring to the terminal securely and hold the cable securely so as not to apply unexpected stress on the terminal. Loose connection or hold will cause abnormal heat generation or fire.** 
- **Make sure the power source is turned off when electric wiring work. Otherwise, electric shock, malfunction and improper running may occur.** 

Function


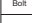

The Anti draft panel has the anti draft mechanism. If the Anti draft panel is installed and the anti draft function is set, the anti draft function will be operated and reduce the draft feeling. (Refer to **⑥ Panel setting** for details.)

- Standard panel : without the anti draft mechanism
- Anti draft panel : with the anti draft mechanism


① Before installation

- Follow installation manual carefully, and install the panel properly.
- Check the following items.

○ Accessories

Accessories		
	4 pieces	For panel installation
	4 pieces	For avoiding the corner panel from falling
	4 pieces	For fixing the corner panel

Note: Accessories are laid in the position removing the corner lid.

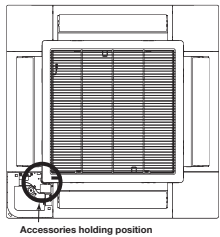


② Checking the indoor unit installation position

- Read this manual together with the air-conditioner installation manual carefully.
- Check if the opening size for the indoor unit is correct with the level gauge supplied in the indoor unit.
- Check if the gap between the plane and the indoor unit is correct by inserting the level gauge into the air outlet port of the indoor unit. (See below drawing)
- Adjust the installation elevation if necessary.
- Remove the level gauge before installing the panel.

Caution


If there is a height difference beyond the design limit between the installation level of the indoor unit and the panel, the panel may be subject to excessive stress during installation and it may cause distortion and damage.

The installation level of the indoor unit can be adjusted finely from the opening provided on the corner, even after panel is installed. (Refer to **④ Installing the panel** for details.)

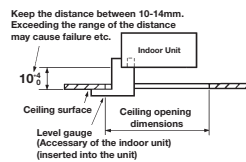


③ Removing the inlet grille

1. Hold the stoppers on the inlet grille (2 places) toward OPEN direction, open the inlet grille.
2. Remove the hooks of the inlet grille from the panel while it is in the open position.



④ Removing the corner lid

- Pull the corner lid toward the direction indicated by the arrow and remove it. (Same way for all 4 corner lids)




⑤ Orientation of the panel installation

- Take note that there is an orientation to install the panel.
- Install the panel with the orientation shown on the right.
 - Align the "PIPE SIDE" mark (on the panel) with the refrigerant pipes on the indoor unit.
 - Align the "DRAIN" mark (on the panel) with the drain pipe on the indoor unit.



CAUTION

In case the orientation of the panel is not correct, it will lead to air leakage and also it is not possible to connect the flap motor wiring.

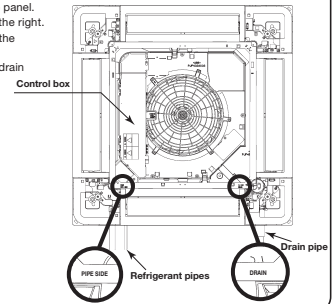

⑥ Installing the panel

1. Temporary hanging
 - Lift up the hanger (2 places) on the panel for temporary support.
 - Hang the panel on the hook on the indoor unit.

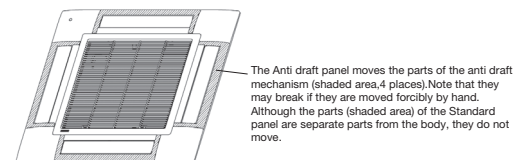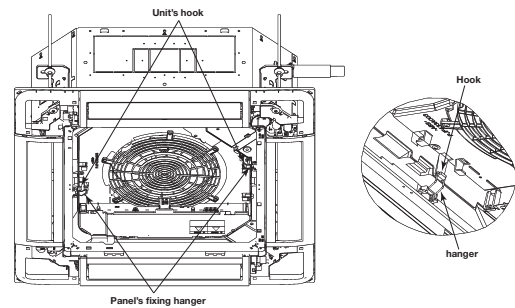

Caution


The parts (shaded area), of the anti draft mechanism around the air outlet, are separate parts. Handle the panel with care. Especially, the shaded area of the Anti draft panel move. Note that they may break if they are moved forcibly by hand.

2. Fix the panel on the indoor unit
 - Fasten the panel on the indoor unit with the 4 bolts supplied with the panel.


Caution

Improperly tightened fixing bolts cause the problems listed below, so make sure that bolts are securely tightened.

- If there is a gap between the ceiling and the panel even after the fixing bolts are tightened, adjust the installation level of the indoor unit again.



- It is possible to adjust the installation height of the indoor unit with the panel installed as long as there is no influence on the drain pipe inclination and/or the indoor unit levelness.

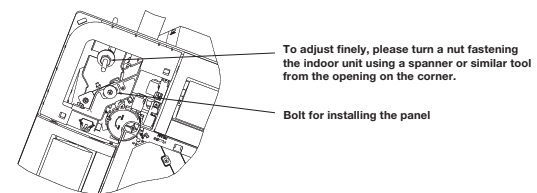


Caution

Do not give any stress on the panel when adjusting the height of the indoor unit to avoid unexpected distortion. It may cause the distortion of panel or failing to close the inlet grille, and the parts of the anti draft mechanism.

⑦ Electrical wiring


The wiring work varies depending on the panel type. Select the wiring work appropriate for the panel type. The connection positions of the indoor unit are as shown below irrespective of the panel type.

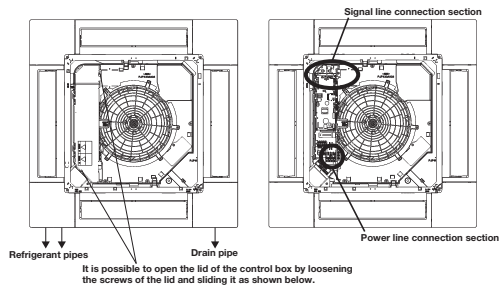

<For the Standard panel>

1. Loosen 2 screws on the control box lid of the indoor unit, and remove the lid by sliding it.
2. Pass the flap motor wiring (20-wire) through the hook of the control box, and connect to CnJ1 (20P, white).
3. Fix the control box lid of the indoor unit, and tighten 2 screws.


For the Standard panel
Signal line connection section

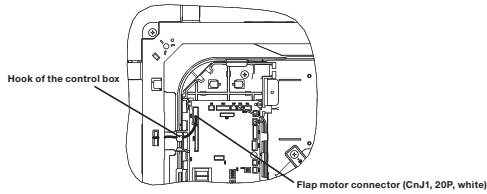

<For the Anti draft panel>


1. Loosen 2 screws on the control box lid of the indoor unit, and remove the lid by sliding it.
2. Pass the flap motor cable (20-wire) through the hook of the control box, and connect to CnJ1 (20P, white).
3. Pass the anti draft motor cable (20-wire) through the hook of the control box, and connect to CnJ2 (20P, white).
4. Fix the control box lid of the indoor unit, and tighten the 2 screws.

For the Anti draft panel
Signal line connection section

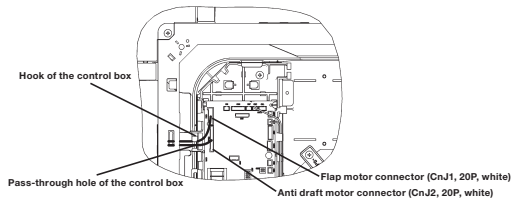

⑧ Installing a corner lid

1. To avoid unexpected falling of the corner lid, put the strap onto the corner lid's pin with turning the strap up.
2. Then hang the strap of a corner lid onto the panel's pin.
3. First insert the part "a" of a corner lid into the part "A" of the panel, and then engage 2 hooks.
4. Fix with screw.

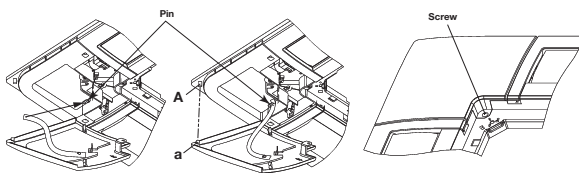


⑨ Installing the inlet grille

To attach the inlet grille, follow the procedure described in ⑧ **Removing the inlet grille** in the reverse order.

1. Hang the hooks of the inlet grille in the hole of the panel. (The hooks of the grille can be hanged in 4 side of the panel as following.)
2. After the grille is hanged, close the grille while the stoppers(2 places) on the grille are kept pressed to "OPEN" direction. When the grille comes to the original position, release the stoppers to hold the grille. Make sure to hear the sound of "CLICK" in both stoppers.

<Installation>

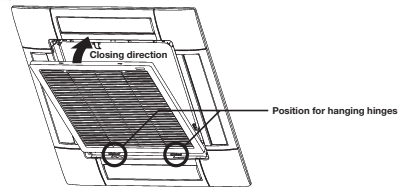

Caution

- Installing the inlet grille from the hinge side.
- Be careful in the inlet grille installing, unstable installing may cause grille falling.
- Repair or replace the distorted, broken stopper at once, or the grille falling may occur.

⑩ Panel setting

<Flap swing range setting (Individual flap control setting)>

It is possible to change the swing range of the flap by the wired remote control. Once the upper and lower limit positions are set, the flap will swing within the set range. It is also possible to set the different range to each flap.

<Anti draft setting>

The anti draft function will not be operated if the anti draft panel is installed and its wirings are only connected. To operate the anti draft function, enable the anti draft setting by using the wired or wireless remote control.

Note: It is not possible to set by the following remote control models or older.

- Wired: RC-EX1A, RC-E5, RCH-E3
- Wireless: RCN-E1R

Once you have enabled the settings in this mode, the anti draft function is operated when the air-conditioner is started, and the parts of the anti draft mechanism are always open when the air-conditioner is operating. When the air-conditioner is stopped, they are closed. It is possible to enable or disabled the anti draft function for each air outlet.

For the setting details, refer to the user's manual supplied with the remote control.


1.9.2 Electric wiring work installation


Electrical wiring work must be performed by an electrician qualified by a local power provider according to the electrical installation technical standards and interior wiring regulations applicable to the installation site.


Security instructions


- Read the "SAFETY PRECAUTIONS" carefully first of all and then strictly follow it during the installation work in order to protect yourself.
- The precautionary items mentioned below are distinguished into two levels, **WARNING** and **CAUTION**.
 - WARNING** : Wrong installation would cause serious consequences such as injuries or death.
 - CAUTION** : Wrong installation might cause serious consequences depending on circumstances.
 Both mentions the important items to protect your health and safety so strictly follow them by any means.
- The meanings of "Marks" used here are as shown on the right:
 - ⊘ Never do it under any circumstances.
 - ⊙ Always do it according to the instruction.
- Accord with following items. Otherwise, there will be the risks of electric shock and fire caused by overheating or short-circuit.


WARNING


- Be sure to have the electric wiring work done by qualified electrical installer, and use exclusive circuit. 


Power source with insufficient capacity and improper work can cause electric shock and fire.
- Use specified wire for electrical wiring, fasten the wiring to the terminal securely, and hold the cable securely in order not to apply unexpected stress on the terminal. 


Loose connections or hold could result in abnormal heat generation or fire.
- Arrange the electrical wires in the control box properly to prevent them from rising. Fit the lid of the services panel properly. 

Improper fitting may cause abnormal heat and fire.
- Use the genuine option parts. And installation should be performed by a specialist. 

If you install the unit by yourself, it could cause water leakage, electric shock and fire.
- Do not repair by yourself. And consult with the dealer about repair. 


Improper repair may cause water leakage, electric shock or fire.
- Consult the dealer or a specialist about removal of the air-conditioner. 


Improper installation may cause water leakage, electric shock or fire.
- Turn off the power source during servicing or inspection work. 


If the power is supplied during servicing or inspection work, it could cause electric shock and injury by the operating fan.
- Shut off the power before electrical wiring work. 


It could cause electric shock, unit failure and improper running.


CAUTION


- Perform earth wiring surely. 


Do not connect the earth wiring to the gas pipe, water pipe, lightning rod and telephone earth wiring. Improper earth could cause unit failure and electric shock due to a short-circuit.
- Earth leakage breaker must be installed. 


If the earth leakage breaker is not installed, it can cause electric shocks.
- Make sure to install earth leakage breaker on power source line. (countermeasure thing to high harmonics.) 


Absence of breaker could cause electric shock.
- Use the circuit breaker of correct capacity. Circuit breaker should be the one that disconnect all poles under over current. 

Using the incorrect one could cause the system failure and fire.
- Do not use any materials other than a fuse of correct capacity where a fuse should be used. 

Connecting the circuit by wire or copper wire could cause unit failure and fire.
- Use power source line of correct capacity. 

Using incorrect capacity one could cause electric leak, abnormal heat generation and fire.
- Do not mingle solid cord and stranded cord on power source and signal side terminal block. 

In addition, do not mingle difference capacity solid or stranded cord. Inappropriate cord setting could cause loosening screw on terminal block, bad electrical contact, smoke and fire.
- Do not turn off the power source immediately after stopping the operation. 

Be sure to wait for more than 5 minutes. Otherwise it could cause water leakage or breakdown.
- Do not control the operation with the circuit breaker. 

It could cause fire or water leakage. In addition, the fan may start operation unexpectedly and it may cause injury.

Control mode switching

- The control content of indoor units can be switched in following way. (is the default setting)

Switch No.	Control Content	
SW2	Indoor unit address (0-Fh)	
SW5-1	Master/Slave Switching (plural /Slave unit Setting)	
SW5-2		
SW6-1~4	Model capacity setting	
SW7-1	ON	Operation check, Drain motor test run
	OFF	Normal operation

① Electrical wiring connection

- Electrical wiring work must be performed by an electrician qualified by a local power provider. These wiring specifications are determined on the assumption that the following instructions are observed:

① Do not use cords other than copper ones.

Do not use any source line lighter than one specified in parentheses for each type below.

- braided cord (code designation 60245 IEC 51), if allowed in the relevant part 2;
- ordinary tough rubber sheathed cord (code designation 60245 IEC 53);
- flat twin (tinsel) cord (code designation 60227 IEC 41);
- ordinary polyvinyl chloride sheathed cord (code designation 60227 IEC 53);

② Connect the power source to the outdoor unit.

③ Pay extra attention so as not to confuse signal line and power source line connection, because an error in their connection can be burn all the boards at once.

- Connect ground wires before connecting wires between the indoor and outdoor units and between indoor units. The ground wires need to be longer than the wires between the indoor and outdoor units, and protected from undue stress.

- Do not turn on the power source before completing the work.

- The ground wires must be connected by the Class D grounding connection.

- Use the round crimp terminals for connections to the terminal block.

- Use dedicated branch circuits, avoiding combination with other devices. Otherwise, it could trip the power source breaker, resulting in secondary accidents.

- Install the overcurrent and earth leakage breakers (sensitivity current: 30 mA) specified to respective models.

- Do not connect indoor and outdoor signal cables to extension cables on the way. If the joint is wetted with intruding water, it could cause a ground insulation failure or poor connection, resulting in communication errors. (If it is inevitable to connect cables on the way, make sure to prevent the water intrusion completely.)

- When running wires (wires for power source, remote controller, connecting between indoor and outdoor units, or other) behind the ceiling, protect them using copper or other pipes against assault by rat, or other.

- It is up to 3.5 mm² the size of power supply cables connected to indoor units. When using cables of 5.5 mm² or larger, provide a dedicated pull box for branching connection to indoor units.

- If signal and power source cables are connected mistakenly, it could burn down all PCBs.

① Even if the power source of 220/240/380/415 V is connected mistakenly to A-B signal cable, it is protected at initial occasion only.

② If the remote control fails to detect the unit No. (address) at 15 minutes after turning the power on, check and repair all signal cables for misconnection.

③ Cut the jumper wire J10S1 of burnt PCB, and reconnect connectors CnK (yellow) and CnK1 (white) to CnK2 (black).

④ If any anomaly is found on wires between the A-B terminal block and the PCB, replace them.

- At the outside of indoor and outdoor units, take care to avoid direct contacts between remote control and power source cables.

- In no event connect the power source of 220/240/380/415 V to the remote control terminal block. It could cause failures.

- Connections of wiring between units, ground wire and remote control cable

① When connecting wires between units, ground wire or remote control wire, connect them according to the number of terminals on the power source terminal block or signal terminal block in the control box. Connect the ground wire to the ground terminal on the power source terminal block.

② Make sure to install an earth leakage breaker for the power source. Select a breaker for inverter circuit.

③ When the earth leakage breaker is exclusive for the earth leakage protection, it is necessary to connect also an isolating switch (Switch + Class B fuse) or wiring circuit breaker in series to the earth leakage breaker.

④ Install the isolating switch close to the unit.

- Connect wires securing by tightening screws firmly. Confirm also no connector or wire (from terminal) is disconnected in the control box.


- When installing an auxiliary electric heater, consult the electric heater manual or technical data.

Cable connection for single unit installation

- ① As for connecting method of power source, select from following connecting patterns. In principle, do not directly connect power source line to inside unit.

※As for exceptional connecting method of power source, discuss with the power provider of the country with referring to technical documents, and follow its instruction.

- ② For cable size and circuit breaker selection, refer to the outdoor unit installation manual.

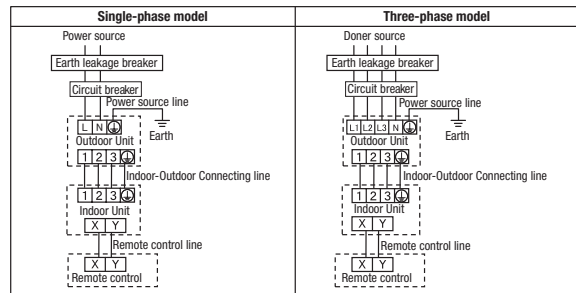



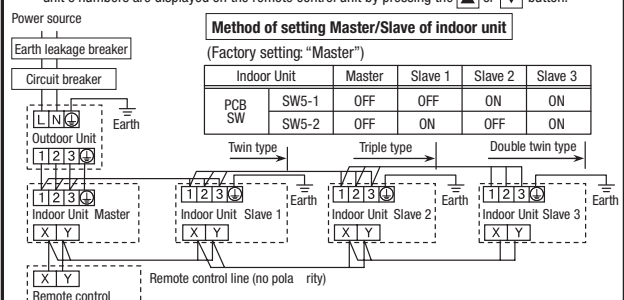
Cable connection for a V multi configuration installation

- ① Connect the same pairs number of terminal block "①, ②, and ③" and "ⓧ and ⓞ" between master and slave indoor units.

- ② Do the same address setting of all inside units belong to same refrigerant system by rotary switch SW2 on indoor unit's PCB (Printed circuit board).

- ③ Set slave indoor unit as "slave 1" through "slave 3" by address switch SW5-1, 5-2 on PCB.

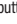- ④ When the [AIR CON NO.] button on the remote control unit is pressed after turning on the power, an indoor unit's address number will be displayed. Do not fail to confirm that the connected indoor unit's numbers are displayed on the remote control unit by pressing the  or  button.



② Remote control, wiring and functions

● Do not install it on the following places


- ① Places exposed to direct sunlight
- ② Places near heat devices
- ③ High humidity places
- ④ Hot surface or cold surface enough to generate condensation
- ⑤ Places exposed to oil mist or steam directly.
- ⑥ Uneven surface

Installation and wiring of remote control

- ① Install remote control referring to the attached installation manual.
- ② Wiring of remote control should use 0.3mm² × 2 core wires or cables.
The insulation thickness is 1mm or more. (on-site configuration)
- ③ Maximum prolongation of remote control wiring is 600 m.
If the prolongation is over 100m, change to the size below.
But, wiring in the remote control case should be under 0.5mm². Change the wire size outside of the case according to wire connecting. Waterproof treatment is necessary at the wire connecting section. Be careful about contact failure.
100 - 200m 0.5mm² × 2 cores
Under 300m 0.75mm² × 2 cores
Under 400m 1.25mm² × 2 cores
Under 600m 2.0mm² × 2 cores
- ④ Avoid using multi-core cables to prevent malfunction.
- ⑤ Keep remote control line away from earth (frame or any metal of building).
- ⑥ Make sure to connect remote control line to the remote control and terminal block of indoor unit. (No polarity)

Control plural indoor units by a single remote control

- ① A remote control can control plural indoor units (Up to 16).
- In above setting, all plural indoor units will operate under same mode and temperature setting.
- ② Connect all indoor units with 2 core remote control line.
- ③ Set unique remote control communication address from "0" to "F" to each inside unit by the rotary switch SW2 on the indoor unit's PCB.

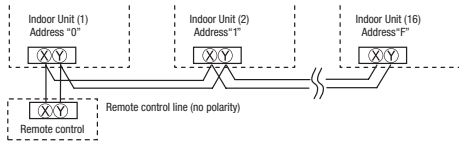

Master/ slave setting when more than one remote control unit are used


A maximum of two remote control units can be connected to one indoor unit (or one group of indoor units.)

The air-conditioner operation follows the last operation of the remote control regardless of the master/slave setting of it.

Acceptable combination is "two (2) wired remote controls", "one (1) wired remote control and one (1) wireless kit" or "two (2) wireless kits".

Set one to "Master" and the other to "Slave".

Note: The setting "Remote control unit sensor enabled" is only selectable with the master remote control unit in the position where you want to check room temperature.

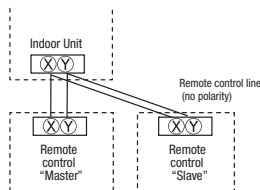


③ Operation and confirmation from remote control

No.	Item	Operation from the eco touch remote control (RC-EX series)	Operation from the standard remote control (RC-E series)
1	Check the number of units connected in the multi remote control system.	[Menu] ⇒ [Service setting] ⇒ [Service & Maintenance] ⇒ [Service password] ⇒ [IU address]	① Press the [AIR CON NO] button to display the IU address. ② Press the [▲] or [▼] button and check addresses of connected indoor units one by one.
2	Check if each unit is connected properly in the remote control system.	[Menu] ⇒ [Service setting] ⇒ [Service & Maintenance] ⇒ [Service password] ⇒ [IU address] ⇒ [Check run mode]	① Press the [AIR CON NO] button to display the IU address. ② Press the [▲] or [▼] button and select one of IU addresses. ③ Press the [MODE] button. The unit starts to blow air.
3	Setting main/sub remote controls	[Menu] ⇒ [Service setting] ⇒ [R/C function settings] ⇒ [Service password] ⇒ [Main/Sub of R/C]	Set SW1 to "Sub" for the sub remote control unit.
4	Checking operation data	[Menu] ⇒ [Service setting] ⇒ [Service & Maintenance] ⇒ [Service password] ⇒ [Operation data]	Press the [CHECK] button. ⇒ "DIFFER DATA ▼" is displayed. ⇒ Press the [SET] button. ⇒ "DATA LOADING" is displayed. ⇒ Select one of addresses for connected indoor units by pressing the [▲] or [▼] button. ⇒ Press the [SET] button. ⇒ "DATA LOADING" is displayed. ⇒ Select data by pressing the [▲] or [▼] button.
5	Checking inspection display	[Menu] ⇒ [Service setting] ⇒ [Service & Maintenance] ⇒ [Service password] ⇒ [Error display]	Press the [CHECK] button. ⇒ "DIFFER DATA ▼" is displayed. ⇒ Press the [▼] button. ⇒ "ERRR DATA ▲" is displayed. ⇒ Press the [SET] button. ⇒ "DATA LOADING" is displayed. ⇒ Data is displayed.
6	Cooling test run from remote control	[Menu] ⇒ [Service setting] ⇒ [Installation settings] ⇒ [Service password] ⇒ [Test run] ⇒ [Cooling test run] ⇒ [Start]	① Start the system by pressing the [ON/OFF] button. ② Select "Cool" with the [MODE] button. ③ Press the [TEST] button for 3 seconds or longer. The screen display will switch to "TEST RUN ▼". ④ Pressing the [SET] button, while the "TEST RUN ▼" is displayed, starts the cooling test run. The screen display will switch to "TEST RUN ▼".
7	Trial operation of drain pump from remote control	[Menu] ⇒ [Service setting] ⇒ [Installation settings] ⇒ [Service password] ⇒ [Test run] ⇒ [Drain pump test run] ⇒ [Run]	① Start the system by pressing the [ON/OFF] button. The display will change to "TEST RUN ▼". ② Press the [▼] button once to display "DRAIN PUMP ▲". ③ Pressing the [SET] button starts the drain pump operation. The display will show "STOP TO STOP".

The menu configuration may vary depending on models of the remote control. If the model of your remote control is different, refer to the installation manual attached to the remote control.

④ Function of CNT connector of indoor printed circuit board

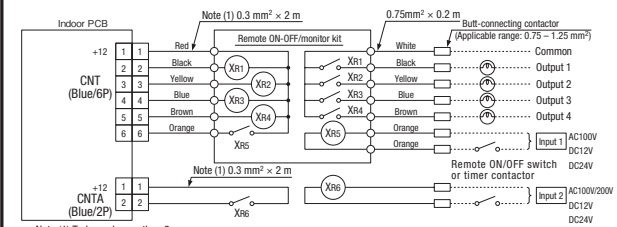

Note (1) To be no longer than 2 m.

- XR1-4 are DC 12 V relays. (Equivalent to Omron's LY2F)
- XR5 is a DC 12 V, 24 V or 100 V, 200 V relay. (Equivalent to Omron's MY2F)
- Maker and model of CnT connector (Site side)
Connector : Molex 5264-06
Terminal : Molex 5263T
- CnTA connector is used on FDT, or other. <Check with the specifications.> (Site side) Maker and model
Connector : J.S.T. Mfg. XAP02V-1-E
Terminal : J.S.T. Mfg. SXA-01T-P0.6
- Output 1 - 4 and input1/2 can be selected/set as required from following items.
Factory default is set as shown below.

Output	
① RUN output	⑧ Fan ON output 3
② Heating output	⑨ Defrost/oil return output
③ Compressor ON output	⑩ Ventilation output
④ Inspection (error) output	⑪ Heater output
⑤ Cooling output	⑫ Free cleaning output
⑥ Fan ON output 1	⑬ Indoor overload error output
⑦ Fan ON output 2	

Input	
① RUN/STOP	⑤ Setting temp. shift
② RUN permit prohibition	⑥ Compulsory thermostat OFF
③ Emergency stop	⑦ Temporary stop
④ Cooling/Heating	⑧ Silent mode

Factory default setting			
CnT-2	Output 1 RUN output	CnT-5	Output 4 Inspection (error) output
CnT-3	Output 2 Heating output	CnT-6	Input 1 RUN/STOP
CnT-4	Output 3 Compressor ON output	CnTA	Input 2 RUN/STOP

● For the setting method, refer to the technical data.

⑤ Operation and setting from remote control

A : Refer to the instruction manual for RC-EX series ○ : Nearly same function setting and operations are possible. *1: Remote controls before RC-EX1A don't have this function.
 B : Refer to the installation manual for RC-EX series △ : Similar function setting and operations are possible. *2: Remote controls before RC-EX3 don't have this function.
 C : Loading a utility software via Internet

Setting & display item	Description	RC-EX3A	RC-E5	
1.Remote Control network				
1 Control plural indoor units by a single remote control	A remote control can control plural indoor units up to 16 (in one group of remote control network). An address is set to each indoor unit.		○	
2 Main/sub setting of remote controls	A pair of remote controls (including option wireless remote control) can be connected within the remote control network. Set one to "Main" and the other to "Sub".	B	○	
2.TOP screen, Switch manipulation				
1 Menu	"Control", "State", or "Details" can be selected. (3-8)	A		
2 Operation mode	"Cooling", "Heating", "Fan", "Dry" or "Auto" can be set.	A	○	
3 Set temp.	"Set temperature" can be set by 0.5°C interval.	A	○	
4 Air flow direction	"Air flow direction" (Individual flap control) can be set. Select Enable or Disable for the "3D AUTO" (in case of FDK). *1	A	△	
5 Fan speed	"Fan speed" can be set.	A	○	
6 Timer setting	"Timer operation" can be set.	A	○	
7 ON/OFF	"On/Off operation of the system" can be done.	A	○	
8 F1 SW	*1 The system operates and is controlled according to the function specified to the F1 switch.	A		
9 F2 SW	*1 The system operates and is controlled according to the function specified to the F2 switch.	A		
10 Select the language	*2 Select the language to display on the remote control. • Select from English, German, French, Spanish, Italian, Dutch, Turkish, Portuguese, Russian, Polish, Japanese and Chinese.	A		
3.Useful functions				
1 Individual flap control	The moving range (the positions of upper limit and lower limit) of the flap for individual flap can be set. Set also the left and right limit positions for FDK. *1	A	△	
2 Anti draft setting When the panel with the anti-draft function is assembled.	*1 • DetailsYou can set Enable or Disable for anti draft motion performed at each blow outlet in each operation mode. • ON/OFF settingYou can set ON/OFF (operation/stop) of anti draft function for the enabled blow outlet set in Details. *2	A		
3 Timer settings	Set On timer by hour	The period of time to start operation after stopping can be set. • The period of set time can be set within range of 1hour-12hours (1hr interval). • The operation mode, set temp-and fan speed at starting operation can be set.	A	△
	Set Off timer by hour	The period of time to stop operation after starting can be set. • The period of set time can be set within range of 1hour-12hours (1hr interval).	A	△
	Set On timer by clock	The clock time to start operation can be set. • The set clock time can be set by 5-minutes intervals. • [Once (one time only)] or [Everyday] operation can be switched. • The operation mode, set temp. and fan speed at starting operation can be set.	A	△
	Set Off timer by clock	The clock time to stop operation can be set. • The set clock time can be set by 5-minute intervals. • [Once (one time only)] or [Everyday] operation can be switched.	A	△
	Confirmation of timer settings	Status of timer settings can be seen.	A	
4 Favorite setting [Administrator password]	*1 Set the operation mode, setting temperature, air flow capacity and air flow direction for the choice setting operations. Set them for the Favorite set 1 and the Favorite set 2 respectively.	A		
5 Weekly timer	On timer and Off timer on weekly basis can be set. • 8-operation patterns per day can be set at a maximum. • The setting clock time can be set by 5-minute intervals. • Holiday setting is available. • The operation mode, set temp. and fan speed at starting operation can be set.	A	△	
6 Home leave mode [Administrator password]	When leaving home for a long period like a vacation leave, the unit can be operated to maintain the room temperature not to be hotter in summer or not to be colder in winter. • The judgment to switch the operation mode (Cooling ⇄ Heating) is done by the both factors of the set temp. and outdoor air temp. • The set temp. and fan speed can be set.	A		
7 External Ventilation When the ventilator is combined.	On/Off operation of the external ventilator can be done. It is necessary to set from [Menu] ⇒ [Service setting] ⇒ [R/C function settings] ⇒ [Ventilation setting]. • If the "Independent" is selected for the ventilation setting, the ventilator can be operated or stopped.	A	○	
8 Select the language	Select the language to display on the remote control. • Select from English, German, French, Spanish, Italian, Dutch, Turkish, Portuguese, Russian, Polish, Japanese and Chinese. *1	A		
9 Silent mode control	*2 The period of time to operate the unit by prioritizing the quietness can be set. • Start and end can be set for the silent mode	A		
4.Energy-saving setting				
Administrator password				
1 Sleep timer	To prevent the timer from keeping ON, set hours to stop operation automatically with this timer. • The selectable range of setting time is from 30 to 240 minutes. (10-minute intervals) • When setting is "Enable", this timer will activate whenever the ON timer is set.	A	△	
2 Peak-cut timer	Power consumption can be reduced by restructuring the maximum capacity. Set the [Start time], the [End time] and the capacity limit % (Peak-cut %). • 4-operation patterns per day can be set at maximum. • The setting time can be changed by 5-minute intervals. • The selectable range of capacity limit % (Peak-cut %) is from 0% to 40-80% (20% interval) • Holiday setting is available.	A		
3 Automatic temp set back	After the elapse of the set time period, the current set temp. will be set back to the [Set back time.] • The setting can be done in cooling and heating mode respectively. • Selectable range of the set time is from 20 min. to 120 min. (10 min. interval). • Set the [Set back temp.] by 1°C interval.	A	△	
4 Motion sensor control When the panel with the motion sensor is assembled.	*1 When the motion sensor is used, it is necessary to set Enable or Disable for the "Power control" and the "Auto-off".	A		
5.Filter				
1 Filter sign reset	Filter sign reset	The filter sign can be reset.	A	
	Setting next cleaning date	The next cleaning date can be set.	A	
6.User setting				
1 Internal settings	Clock setting	The current date and time can be set or revised. • If a power failure continues no longer than 80 hours, the clock continues to tick by the built-in power source.	A	△
	Date and time display	[Display] or [Hide] the date and/or time can be set, and [12H] or [24H] display can be set.	A	
	Summer time	When select [Enable], the +1-hour adjustment of current time can be set. When select [Disable], the [Summer time] adjustment can be reset.	A	
	Contrast	The contrast of LCD can be adjusted higher or lower.	A	
	Backlight	Switching on/off a light can be set and period of the lighting time can be set within the range of 5sec-90 sec (5sec interval).	A	
	Control sound	It can set with or without [Control sound (beep sound)] at touch panel.	A	
	Operation lamp luminance	*1 This is used to adjust the luminance of operation lamp.	A	
2 Administrator settings [Administrator password]	Permission/Prohibition setting	• Permission/Prohibition setting of operation can be set. [On/Off] [Change set temp] [Change operation mode] [Change flap direction] [Change fan speed] [High power operation] [Energy-saving operation] [Timer] Request for administrator can be set. [Individual flap control] [Weekly timer] [Select the language] [Anti draft setting] *1	A	△
	Outdoor unit silent mode timer	The period of time to operate the outdoor unit by prioritizing the quietness can be set. • The [Start time] and the [End time] for operating outdoor unit in silent mode can be set. • The period of the operation time can be set once a day by 5-minute intervals.	A	△
	Setting temp. range	The upper/lower limit of temp. setting range can be set. • The limitation of indoor temp. setting range can be set for each operation mode in cooling and heating.	A	△

⑤ Operation and setting from remote control (continued)

Setting & display item		Description	RC-EX3A	RC-E5	
2 Administrator settings [Administrator password]	Temp increment setting	The temp increment setting can be changed by 0.5°C or 1.0°C.	A		
	Set temp display	Ways of displaying setting temperatures can be selected.	A		
	R/C display setting	Register [Room name] [Name of I/U] Display [Indoor temp display] or not. Display [Error code display] or not. Display [Heating stand-by display] [Defrost operation display] [Auto cooling/heating display] [Display temp of R/C, Room, Outdoor] or not	A	△	
	Change administrator password	The administrator password can be changed. (Default setting is "0000") The administrator password can be reset.	A B		
	F1/F2 function setting *1	Functions can be set for F1 and F2. Selectable functions: [Anti draft ON/OFF] *2 [High power operation], [Energy-saving operation], [Silent mode cont.], [Home leave mode], [Favorite set 1], [Favorite set 2] and [Filter sign reset].	A		
7. Service setting					
1 Installer settings [Service password]	Installation date	The [Installation date] can be registered. • When registering the [Installation date], the [Next service date] is displayed automatically. (For changing the [Next service date], please refer the item of [Service & Maintenance])	B		
	Company information	The [Company information] can be registered and can be displayed on the R/C. • The [Company] can be registered within 26 characters. • The [Phone No.] can be registered within 13 digits.	B		
	Test run	On/Off operation of the test run can be done.			
		Cooling test run	The [Cooling test run] can be done at 5°C of set temp. for 30 minutes.	B	○
	Drain pump test run	Only drain pump can be operated.			
	Static pressure adjustment	In case of combination with only the ducted indoor unit which has a function of static pressure adjustment, the static pressure is adjustable. • It can be set for each indoor unit individually.	B		
	Change auto-address	The set address of each indoor unit decided by auto-address setting method can be changed to any other address. (For multiple KX units only)	B	△	
	Address setting of main IU	Main indoor unit address can be set. • Only the Main indoor unit can change operation mode and the Sub indoor units dominated by the Main indoor shall follow. • The Main indoor unit can domain 10 indoor units at a maximum.	B	△	
	IU back-up function	When a pair of indoor units (2 groups) is connected to one unit of remote control, it can be set Enable or Disable for the [IU rotation], [IU capacity back-up] and [IU fault back-up]	B		
	Motion sensor setting *1	Set Enable or Disable for the infrared sensor detectors of indoor units connected to the remote control. If Disable is selected, it cannot be control the motion sensor control for the energy-saving setting.	B		
2 R/C function setting [Service password]	Main/Sub R/C	The R/C setting of [Main/Sub] can be changed.	B	○	
	Return air temp	When two or more indoor units are connected to one unit of remote control, suction sensors, which are used for the judgement by thermostat, can be selected. • It can be selected from [Individual], [Master IU] and [Average temp].	B		
	R/C sensor	It can be set the mode to switch to the remote control sensor. It can be selected from cooling and heating.	B	△	
	R/C sensor adjustment	The offset value of [R/C sensor] sensing temp. can be set respectively in heating and cooling.	B	△	
	Operation mode	Enable or Disable can be set for each operation mode.	B	△	
	°C / °F	Set the unit for setting temperatures. • °C or °F can be selected.	B		
	Fan speed	Fan speeds can be selected.	B	○	
	External input	When two or more indoor units are connected to one unit of remote control, the range to apply CNT inputs can be set.	B	○	
	Upper/lower flap control	[Stop at fixed position] or [Stop at any position] can be selected for the upper and lower louvers.	B	○	
	Left/right flap control *1	[Fixed position stop] or [Stop at any position] can be selected for the right and left louvers.	B		
	Ventilation setting	Combination control for ventilator can be set.	B	○	
	Auto-restart	The operation control method after recovery of power failure happened during operation can be set.	B	○	
	Auto temp setting	[Enable] or [Disable] of [Auto temp setting] can be selected.	B		
	Auto fan speed	[Enable] or [Disable] of [Auto fan speed] can be selected.	B		
	3 IU settings [Service password]	Fan speed setting	The fan speed for indoor units can be set.	B	○
Filter sign		The setting of filter sign display timer can be done from following patterns.	B	○	
External input 1		The connect of control by external input 1 can be changed.	B	○	
External input 1 signal		The type of external input 1 signal can be changed.	B	○	
External input 2		The connect of control by external input 2 can be changed.	B		
External input 2 signal		The type of external input 2 signal can be changed.	B		
Heating thermo-OFF temp adjustment		The judgement temp. of heating thermo-off can be adjusted within the range from 0 to +3°C (1°C interval)	B	△	
Return temperature adjustment		The sensing temp. of return air temp. sensor built in the indoor unit can be adjusted within the range of ±2°C.	B	△	
Fan control in cooling thermo-OFF		Fan control, when the cooling thermostat is turned OFF, can be changed.	B	○	
Fan control in heating thermo-OFF		Fan control, when the heating thermostat is turned OFF, can be changed.	B	○	
Anti-frost temp		Judgment temperature for the anti-frost control during cooling can be changed.	B	○	
Anti-frost control		When the anti-frost control of indoor unit in cooling is activated, the fan speed can be changed.	B	○	
Drain pump operation		In any operation mode in addition to cooling and dry mode, the setting of drain pump operation can be done.	B	○	
Keep fan operating after cooling is stopped		The time period residual fan operation after stopping or thermo-off in cooling mode can be set.	B	○	
Keep fan operating after heating is stopped		The time period residual fan operation after stopping or thermo-off in heating mode can be set.	B	○	
Intermittent fan operation in heating	The fan operation rule following the residual fan operation after stopping or thermo-off in heating mode can be set.	B	○		
Fan circulator operation	In case that the fan is operated as the circulator, the fan control rule can be set.	B			
Control pressure adjust	When only the OA processing units are operated, control pressure value can be changed.	B			
Auto operation mode	The [Auto rule selection] for switching the operation mode automatically can be selected from 3 patterns.	B			
Thermo. rule setting	When selecting [Outdoor air temp. control], the judgment temp can be offset by outdoor temp..	B			
Auto fan speed control	Auto switching range for the auto fan speed control can be set.	B			
IU overload alarm	If the difference between the setting temperature and the suction temperature becomes larger than the temperature difference set for the overload alarm, at 30 minutes after the start of operation, the overload alarm signal is transmitted from the external output (CNT-5).	B			
External output setting *1	Functions assigned to the external outputs 1 to 4 can be changed.	B			
4 Service & Maintenance [Service password]	IU address	Max 16 indoor units can be connected to one remote control, and all address No. of the connected indoor units can be displayed. • The indoor unit conforming to the address No. can be identified by selecting the address No. and tapping [Check] to operate the indoor fan.	B	○	
	Next service date	The [Next service date] can be registered. • The [Next service date] and [Company information] is displayed on the message screen.	A B	○	
	Operation data	The [Operation data] for indoor unit and outdoor unit can be displayed.	B	○	
	Error display	Error history	The error history can be displayed.		
		Display anomaly data	The operation data just before the latest error stop can be displayed.	B	△
		Erase anomaly data	Anomaly operation data can be erased.		
		Reset periodical check	The timer for the periodical check can be reset.		
	Saving IU settings	The [IU settings] memorized in the indoor PCB connected to the remote control can be saved in the memory of the remote control.	B		
Special settings	[Erase IU address] [CPU reset] [Restore of default setting] [Touch panel calibration]	B	△		
Indoor unit capacity display *1	Address No. and capacities of indoor units connected to the remote control are displayed.	B			
8. Contact company					
9. Inspection					
[Confirmation of Inspection]		This is displayed when any error occurs.	A	△	
10. PC connection					
[USB connection]		Weekly timer setting and etc., can be set from PC.	C		



◆ Listed items may not function depending on the specifications of indoor and outdoor units which are combined.

1.9.3 Installation of wired remote control (Option parts)

(1) Model RC-EX3A

1) Safety precautions

- Please read this manual carefully before starting installation work to install the unit properly. Every one of the followings is important information to be observed strictly.

 WARNING	Failure to follow these instructions properly may result in serious consequences such as death, severe injury, etc.
 CAUTION	Failure to follow these instructions properly may cause injury or property damage.

It could have serious consequences depending on the circumstances.

- The following pictograms are used in the text.

	Never do.		Always follow the instructions given.
---	-----------	---	---------------------------------------

- Keep this manual at a safe place where you can consult with whenever necessary. Show this manual to installers when moving or repairing the unit. When the ownership of the unit is transferred, this manual should be given to a new owner.

WARNING



Consult your dealer or a professional contractor to install the unit.

Improper installation made on your own may cause electric shocks, fire or dropping of the unit.



Installation work should be performed properly according to this installation manual.

Improper installation work may result in electric shocks, fire or break-down.



Be sure to use accessories and specified parts for installation work.

Use of unspecified parts may result in drop, fire or electric shocks.



Install the unit properly to a place with sufficient strength to hold the weight.

If the place is not strong enough, the unit may drop and cause injury.



Be sure to have the electrical wiring work done by qualified electrical installer, and use exclusive circuit.

Power source with insufficient and improper work can cause electric shock and fire.



Shut OFF the main power source before starting electrical work.

Otherwise, it could result in electric shocks, break-down or malfunction.



Do not modify the unit.

It could cause electric shocks, fire, or break-down.



Be sure to turn OFF the power circuit breaker before repairing/ inspecting the unit.

Repairing/inspecting the unit with the power circuit breaker turned ON could cause electric shocks or injury.

⚠ WARNING**Do not install the unit in appropriate environment or where inflammable gas could generate, flow in, accumulate or leak.**

If the unit is used at places where air contains dense oil mist, steam, organic solvent vapor, corrosive gas (ammonium, sulfuric compound, acid, etc) or where acidic or alkaline solution, special spray, etc. are used, it could cause electric shocks, break-down, smoke or fire as a result of significant deterioration of its performance or corrosion.

Do not install the unit where water vapor is generated excessively or condensation occurs.

It could cause electric shocks, fire, or break-down.

Do not use the unit in a place where it gets wet, such as laundry room.

It could cause electric shocks, fire, or break-down.

Do not operate the unit with wet hands.

It could cause electric shocks.

Do not wash the unit with water.

It could cause electric shocks, fire, or break-down.

Use the specified cables for wiring, and connect them securely with care to protect electronic parts from external forces.

Improper connections or fixing could cause heat generation, fire, etc.

Seal the inlet hole for remote control cable with putty.

If dew, water, insect, etc. enters through the hole, it could cause electric shocks, fire or break-down.

If dew or water enters the unit, it may cause screen display anomalies.

When installing the unit at a hospital, telecommunication facility, etc., take measures to suppress electric noises.

It could cause malfunction or break-down due to hazardous effects on the inverter, private power generator, high frequency medical equipment, radio communication equipment, etc.

The influences transmitted from the remote control to medical or communication equipment could disrupt medical activities, video broadcasting or cause noise interference.

Do not leave the remote control with its upper case removed.

If dew, water, insect, etc. enters through the hole, it could cause electric shocks, fire or break-down.

 CAUTION

Do not install the remote control at following places.

- (1) It could cause break-down or deformation of remote control.
- Where it is exposed to direct sunlight
 - Where the ambient temperature becomes 0 °C or below, or 40 °C or above
 - Where the surface is not flat
 - Where the strength of installation area is insufficient
- (2) Moisture may be attached to internal parts of the remote control, resulting in a display failure.
- Place with high humidity where condensation occurs on the remote control
 - Where the remote control gets wet
- (3) Accurate room temperature may not be detected using the temperature sensor of the remote control.
- Where the average room temperature cannot be detected
 - Place near the equipment to generate heat
 - Place affected by outside air in opening/closing the door
 - Place exposed to direct sunlight or wind from air-conditioner
 - Where the difference between wall and room temperature is large



To connect to a personal computer via USB, use the dedicated software.



Do not connect other USB devices and the remote control at the same time.

It could cause malfunction or break-down of the remote control/personal computer.

2) Accessories & Prepare on site

Following parts are provided.

Accessories	R/C main unit, wood screw (ø3.5 x 16) 2 pcs, Quick reference
-------------	--

Following parts are arranged at site. Prepare them according to the respective installation procedures.

Item name	Q'ty	Remark
Switch box For 1 piece or 2 pieces (JIS C 8340 or equivalent)	1	These are not required when installing directly on a wall.
Thin wall steel pipe for electric appliance directly on a wall. (JIS C 8305 or equivalent)	As required	
Lock nut, bushing (JIS C 8330 or equivalent)	As required	
Lacing (JIS C 8425 or equivalent)	As required	Necessary to run R/C cable on the wall.
Putty	Suitably	For sealing gaps
Molly anchor	As required	
R/C cable (0.3 mm ² x 2 pcs)	As required	See right table when longer than 100 m

When the cable length is longer than 100 m, the max size for wires used in the R/C case is 0.5 mm². Connect them to wires of larger size near the outside of R/C. When wires are connected, take measures to prevent water, etc. from entering inside.

≦ 200 m	0.5 mm ² x 2 cores
≦ 300m	0.75 mm ² x 2 cores
≦ 400m	1.25 mm ² x 2 cores
≦ 600m	2.0 mm ² x 2 cores

3) Installation place


Secure the installation space shown in the figure.

For the installation method, "embedding wiring" or "exposing wiring" can be selected.

For the wiring direction, "Backward", "Upper center" or "Upper left" can be selected.

Determine the installation place in consideration of the installation method and wiring direction.

Installation space

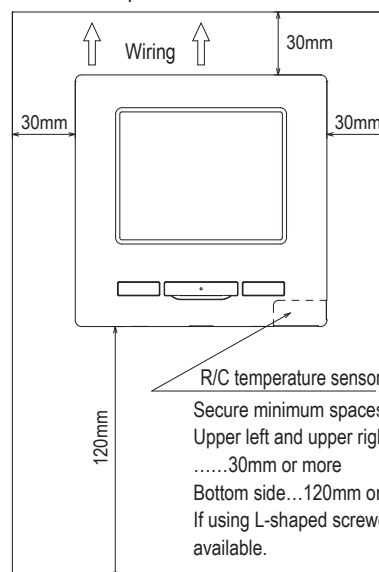


Secure minimum spaces for disassembling the case.
 Upper left and upper right sides
30mm or more
 Bottom side...120mm or more
 If using L-shaped screwdriver, 50mm or more is available.

4) Installation procedure

Perform installation and wiring work for the remote control according to the following procedure.

Dimensions (Viewed from front)

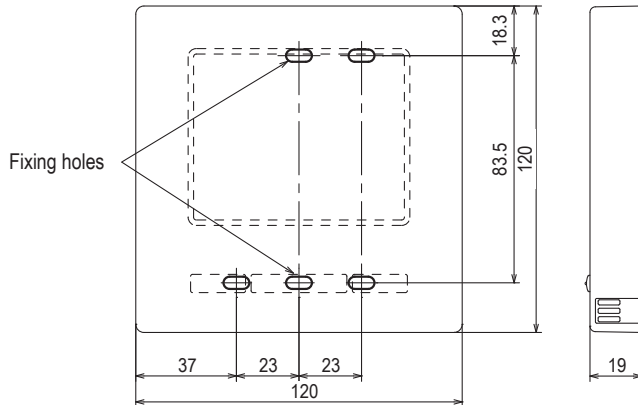

To disassemble the R/C case into the upper and lower pieces after assembling them once

- Insert the tip of flat head screwdriver or the like in the recess at the lower part of R/C and twist it lightly to remove. It is recommended that the tip of the screwdriver be wrapped with tape to avoid damaging the case.

Take care to protect the removed upper case from moisture or dust.




In case of embedding wiring

(When the wiring is retrieved "Backward")



① Embed the switch box and the R/C wires beforehand.

Seal the inlet hole for the R/C wiring with putty.

PCB side (Viewed from rear)

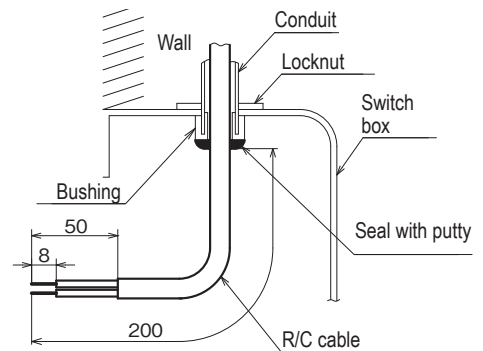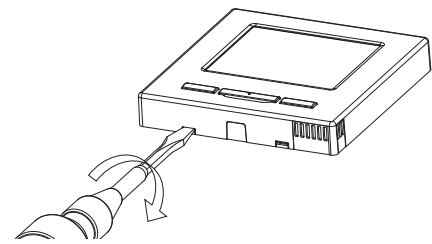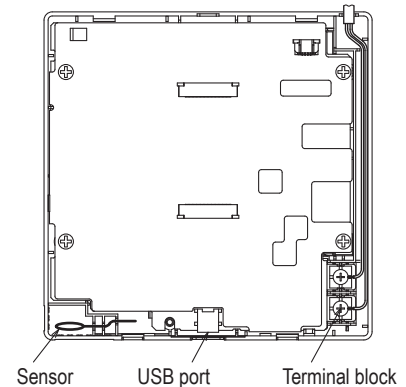

② When wires are passed through the bottom case, fix the bottom case at 2 places on the switch box.

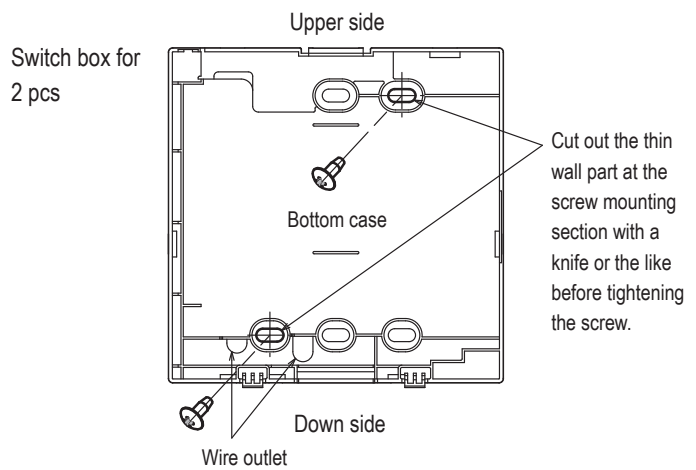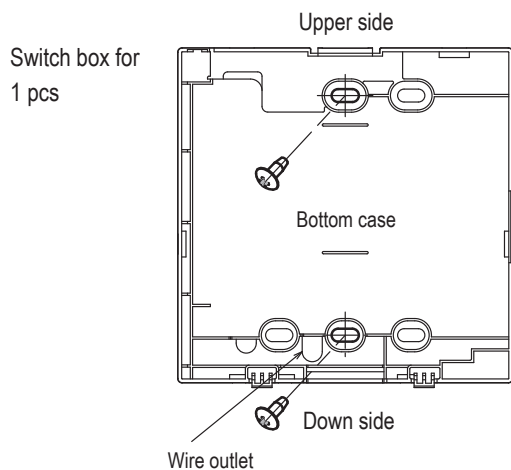

- ③ Connect wires from X and Y terminals of R/C to X and Y terminals of indoor unit. R/C wires (X, Y) have no polarity. Fix wires such that the wires will run around the terminal screws on the top case of R/C.
- ④ Install the upper case with care not to pinch wires of R/C.

Cautions for wire connection


Use wires of no larger than 0.5 mm² for wiring running through the remote control case. Take care not to pinch the sheath.

Tighten by hand (0.7 N·m or less) the wire connection. If the wire is connected using an electric driver, it may cause failure or deformation.


In case of exposing wiring

(When the wiring is taken out from the “upper center” or “upper left” of R/C)


- ① Cut out the thin wall sections on the cases for the size of wire.

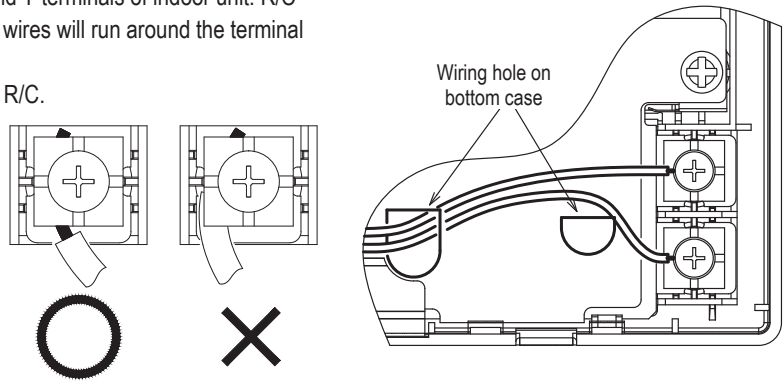

When taking the wiring out from the upper center, open a hole before separating the upper and bottom cases. This will reduce risk of damaging the PCB and facilitate subsequent work.
 When taking the wiring out from the upper left, take care not to damage the PCB and not to leave any chips of cut thin wall inside.

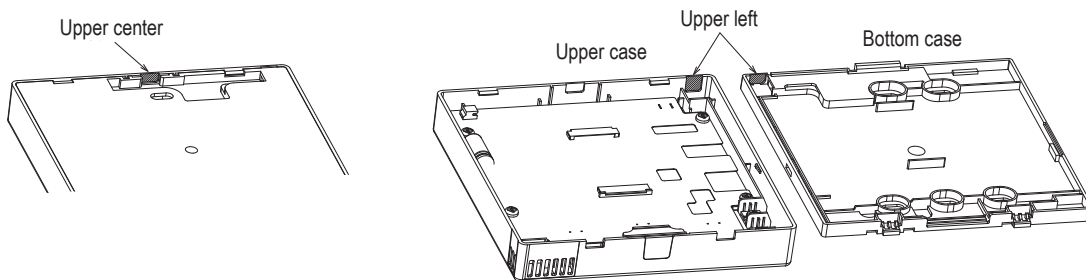

- ② Fix the bottom R/C case on a flat surface with two wood screws.
- ③ In case of the upper center, pass the wiring behind the bottom case. (Hatched section)
- ④ Connect wires from X and Y terminals of R/C to X and Y terminals of indoor unit. R/C wires (X, Y) have no polarity. Fix wires such that the wires will run around the terminal screws on the top case of R/C.
- ⑤ Install the top case with care not to pinch wires of R/C.
- ⑥ Seal the area cut in ① with putty.

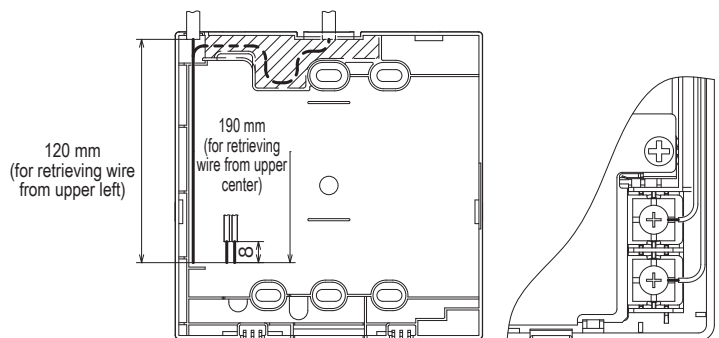


5) Main/Sub setting when more than one remote control are used

Up to two units of R/C can be used at the maximum for 1 indoor unit or 1 group.

One is main R/C and the other is sub R/C.

Operating range is different depending on the main or sub R/C.

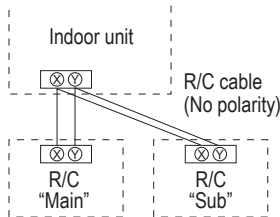


R/C operations		Main	Sub	
Run/Stop, Change set temp., Change flap direction, Auto swing, Change fan speed operations		○	○	
High power operation, Energy-saving operation		○	○	
Silent mode control		○	×	
Useful functions	Individual flap control	○	×	
	Anti draft setting	○	×	
	Timer	○	○	
	Favorite setting	○	○	
	Weekly timer	○	×	
	Home leave mode	○	×	
	External ventilation	○	○	
	Select the language	○	○	
	Silent mode control	○	×	
	Energy-saving setting		○	×
Filter	Filter sign reset	○	○	
User setting	Initial settings		○	○
	Administrator settings	Permission/Prohibition setting	○	×
		Outdoor unit silent mode timer	○	×
		Setting temp. range	○	×
	Temp increment setting	○	×	
	Set temp. display	○	○	
	R/C display setting	○	○	
	Change administrator password	○	○	
F1/F2 function setting	○	○		

○ : operable × : not operable

R/C operations		Main	Sub		
Service setting	Installation settings	Installation date	○	×	
		Company information	○	○	
		Test run	○	×	
		Static pressure adjustment	○	×	
		Change auto-address	○	×	
		Address setting of main IU	○	×	
		IU back-up function	○	×	
		Motion sensor setting	○	×	
		R/C function settings	Main/Sub of R/C	○	○
			Return air temp.	○	×
	R/C sensor		○	×	
	R/C sensor adjustment		○	×	
	Operation mode		○	×	
	°C / °F		○	×	
	Fan speed		○	×	
	External input		○	×	
	Upper/lower flap control		○	×	
	Left/right flap control		○	×	
	IU settings	Service & Maintenance	IU address	○	○
			Next service date	○	×
			Operation data	○	×
		Error display	Error history	○	○
			Display/erase anomaly data	○	×
			Reset periodical check	○	○
		Saving IU settings	○	×	
		Special settings	Erase IU address	○	×
			CPU reset	○	○
			Restore of default setting	○	×
			Touch panel calibration	○	○
		Indoor unit capacity display	○	×	

Advice: Connection to personal computer


It can be set from a personal computer via the USB port (mini-B). Connect after removing the cover for USB port of upper case. Replace the cover after use. Special software is necessary for the connection. For details, view the web site.

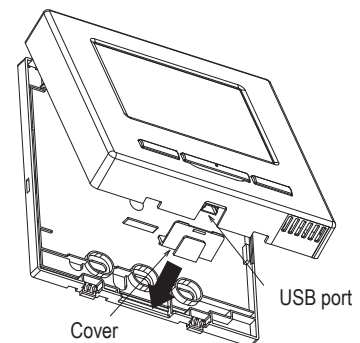

Advice: Initializing of password

Administrator password (for daily setting items) and service password (for installation, test run and maintenance) are used.

- The administrator password at factory default is "0000". This setting can be changed (Refer to User's Manual).
If the administrator password is forgotten, it can be initialized by holding down the [F1] and [F2] switches together for five seconds on the administrator password input screen.
- Service password is "9999", which cannot be changed.
When the administrator password is input, the service password is also accepted.

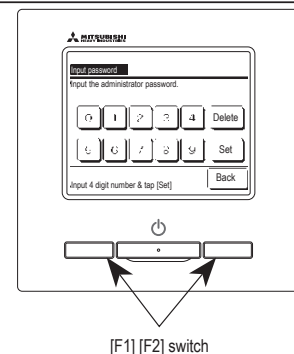

Advice

When connecting two or more FDT/FDTC to one R/C, unify the panel type either to a panel with anti draft function or a standard panel.



(2) Model RC-E5

Read together with indoor unit's installation manual.

⚠ WARNING

- Fasten the wiring to the terminal securely and hold the cable securely so as not to apply unexpected stress on the terminal.
Loose connection or hold will cause abnormal heat generation or fire. !
- Make sure the power source is turned off when electric wiring work.
Otherwise, electric shock, malfunction and improper running may occur. !

⚠ CAUTION

- Do not install the remote control at the following places in order to avoid malfunction.


(1) Places exposed to direct sunlight	(4) Hot surface or cold surface enough to generate condensation
(2) Places near heat devices	(5) Places exposed to oil mist or steam directly
(3) High humidity places	(6) Uneven surface

⊘
- Do not leave the remote control without the upper case.
In case the upper case needs to be detached, protect the remote control with a packaging box or bag in order to keep it away from water and dust. ⊘

Accessories	Remote control, wood screw (ø3.5×16) 2 pieces
Prepare on site	Remote control cord (2 cores) the insulated thickness in 1mm or more. [In case of embedding cord] Electrical box, M4 screw (2 pieces) [In case of exposing cord] Cord clamp (if needed)


Installation procedure

- ① Open the cover of remote control, and remove the screw under the buttons without fail.
- ② Remove the upper case of remote control.
Insert a flat-blade screwdriver into the dented part of the upper part of the remote control, and wrench slightly.

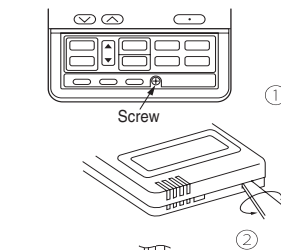


[In case of embedding cord]


- ③ Embed the electrical box and remote control cord beforehand.

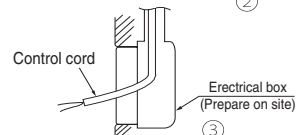

- ④ Prepare two M4 screws (recommended length is 12-16mm) on site, and install the lower case to electrical box. Choose either of the following two positions in fixing it with screws.

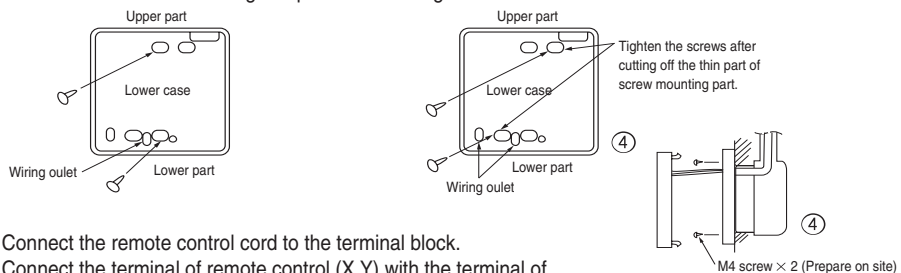


- ⑤ Connect the remote control cord to the terminal block.
Connect the terminal of remote control (X,Y) with the terminal of indoor unit (X,Y). (X and Y are no polarity)
- ⑥ Install the upper case as before so as not to catch up the remote control cord, and tighten with the screws.

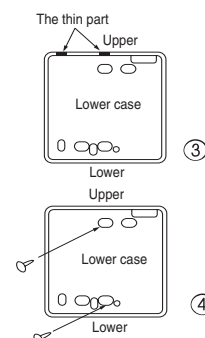

[In case of exposing cord]


- ③ You can pull out the remote control cord from left upper part or center upper part.
Cut off the upper thin part of remote control lower case with a nipper or knife, and grind burrs with a file etc.
- ④ Install the lower case to the flat wall with attached two wooden screws.

- ⑤ Connect the remote control cord to the terminal block. Connect the terminal of remote control (X,Y) with the terminal of indoor unit (X,Y). (X and Y are no polarity) Wiring route is as shown in the right diagram depending on the pulling out direction.

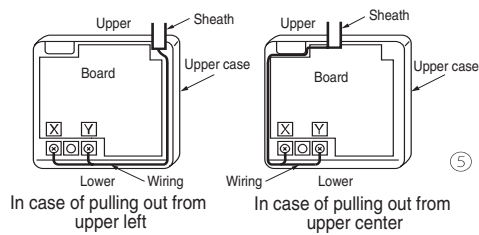

The wiring inside the remote control case should be within 0.3mm² (recommended) to 0.5mm². The sheath should be peeled off inside the remote control case. The peeling-off length of each wire is as below.

Pulling out from upper left	Pulling out from upper center
X wiring : 215mm	X wiring : 170mm
Y wiring : 195mm	Y wiring : 190mm




- ⑥ Install the upper case as before so as not to catch up the remote control cord, and tighten with the screws.
- ⑦ In case of exposing cord, fix the cord on the wall with cord clamp so as not to slack.

Installation and wiring of remote control

- ① Wiring of remote control should use 0.3mm² × 2 cores wires or cables. (on-site configuration)
- ② Maximum prolongation of remote control wiring is 600 m. If the prolongation is over 100m, change to the size below. But, wiring in the remote control case should be under 0.5mm². Change the wire size outside of the case according to wire connecting. Waterproof treatment is necessary at the wire connecting section. Be careful about contact failure.
 - 100 - 200m.....0.5mm² × 2 cores
 - Under 300m.....0.75mm² × 2 cores
 - Under 400m.....1.25mm² × 2 cores
 - Under 500m.....2.0mm² × 2 cores

Master/ slave setting when more than one remote controls are used

A maximum of two remote controls can be connected to one indoor unit (or one group of indoor units.)

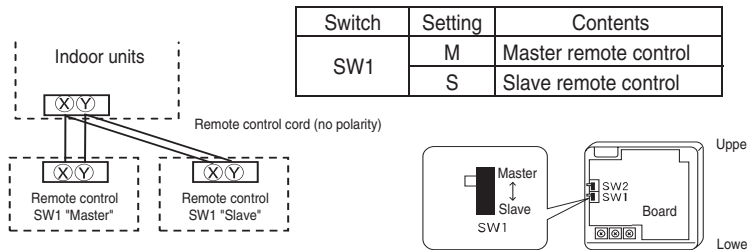


Set SW1 to "Slave" for the slave remote control. It was factory set to "Master" for shipment. Note: The setting "Remote control sensor enabled" is only selectable with the master remote control in the position where you want to check room temperature. The air-conditioner operation follows the last operation of the remote control regardless of the master/ slave setting of it.

The indication when power source is supplied

When power source is turned on, the following is displayed on the remote control until the communication between the remote control and indoor unit settled.

Master remote control : " 06 AC WAIT M"
 Slave remote control : " 06 AC WAIT S"

At the same time, a mark or a number will be displayed for two seconds first. This is the software's administration number of the remote control, not an error cord.



When remote control cannot communicate with the indoor unit for half an hour, the below indication will appear. Check wiring of the indoor unit and the outdoor unit etc.



The range of temperature setting

When shipped, the range of set temperature differs depending on the operation mode as below.

Heating : 16-30°C (55-86°F)

Except heating (cooling, fan, dry, automatic) : 18-30°C (62-86°F)

● **Upper limit and lower limit of set temperature can be changed with remote control.**

Upper limit setting: valid during heating operation. Possible to set in the range of 20 to 30°C (68 to 86°F).

Lower limit setting: valid except heating (automatic, cooling, fan, dry) Possible to set in the range of 18 to 26°C (62 to 79°F).

When you set upper and lower limit by this function, control as below.

- When ⑫ TEMP RANGE SET, remote control function of function setting mode is "INDN CHANGE" (factory setting),
 [If upper limit value is set]

During heating, you cannot set the value exceeding the upper limit.

- [If lower limit value is set]

During operation mode except heating, you cannot set the value below the lower limit.

- When ⑫ TEMP RANGE SET, remote control function of function setting mode is "NO INDN CHANGE"

- [If upper limit value is set]

During heating, even if the value exceeding the upper limit is set, upper limit value will be sent to the indoor unit.

But, the indication is the same as the temperature set.

- [If lower limit value is set]

During except heating, even if the value lower than the lower limit is set, lower limit value will be sent to the indoor unit.

But, the indication is the same as the temperature set.

● **How to set upper and lower limit value**

- Stop the air-conditioner, and press (SET) and (MODE) button at the same time for over three seconds .

The indication changes to "FUNCTION SET ▼".

- Press button once, and change to the "TEMP RANGE ▲" indication.

- Press (SET) button, and enter the temperature range setting mode.

- Select "UPPER LIMIT ▼" or "LOWER LIMIT ▲" by using button.

- Press (SET) button to fix.

- When "UPPER LIMIT ▼" is selected (valid during heating)

① Indication: " ▼ ^ SET UP " → "UPPER 30°C ▼"

② Select the upper limit value with temperature setting button . Indication example: "UPPER 26°C ▼ ^" (blinking)

③ Press (SET) button to fix. Indication example: "UPPER 26°C" (Displayed for two seconds)

After the fixed upper limit value displayed for two seconds, the indication will return to "UPPER LIMIT ▼".

- When "LOWER LIMIT ▲" is selected (valid during cooling, dry, fan, automatic)

① Indication: " ▼ ^ SET UP " → "LOWER 18°C ^"

② Select the lower limit value with temperature setting button . Indication example: "LOWER 24°C ▼ ^" (blinking)


③ Press (SET) button to fix. Indication for example: "LOWER 24°C" (Displayed for two seconds)

After the fixed lower limit value displayed for two seconds, the indication will return to "LOWER LIMIT ▼".

- Press button to finish.

• It is possible to finish by pressing button on the way, but unfinished change of setting is unavailable.


• During setting, if you press (RESET) button, you return to the previous screen.

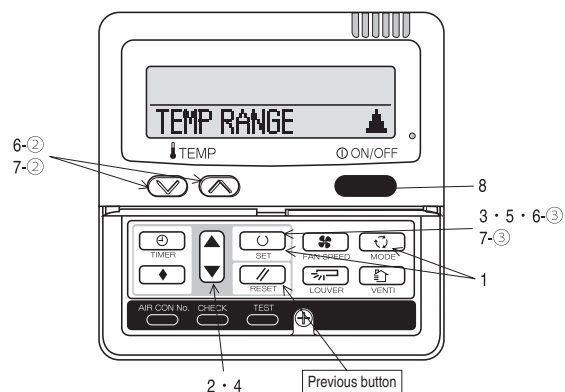

The functional setting

● The initial function setting for typical using is performed automatically by the indoor unit connected, when remote control and indoor unit are connected.
 As long as they are used in a typical manner, there will be no need to change the initial settings.
 If you would like to change the initial setting marked "○", set your desired setting as for the selected item.
 The procedure of functional setting is shown as the following diagram.


[Flow of function setting]

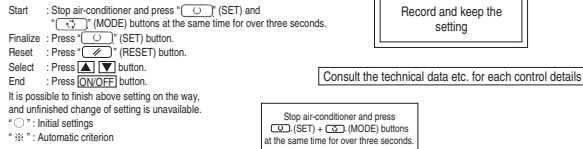

Note 1: The initial setting marked "※" is decided by connected indoor and outdoor unit, and is automatically defined as following table.

Function No.	Item	Default	Model
Remote control function02	AUTO RUN SET	AUTO RUN ON	"Auto-RUN" mode selectable indoor unit.
	AUTO RUN OFF	AUTO RUN OFF	Indoor unit without "Auto-RUN" mode
Remote control function06	FAN SPEED SW	INVALID	Indoor unit with two or three step of air flow setting
	INVALID	INVALID	Indoor unit with only one of air flow setting
Remote control function07	LOUVER SW	INVALID	Indoor unit with automatically swing louver
	INVALID	INVALID	Indoor unit without automatically swing louver
Remote control function13	1/3 FAN	HI-MID-LO	Indoor unit with three step of air flow setting
		HI-LO	Indoor unit with two step of air flow setting
		INVALID	Indoor unit with only one of air flow setting
Remote control function15	MODEL TYPE	HEAT PUMP	Heat pump unit
	COOLING ONLY	COOLING ONLY	Exclusive cooling unit

Note 3: As for plural indoor unit, set indoor functions to each master and slave indoor unit.
 But only master indoor unit is received the setting change of indoor unit function "05 EXTERNAL INPUT" and "06 PERMISSION / PROHIBITION".

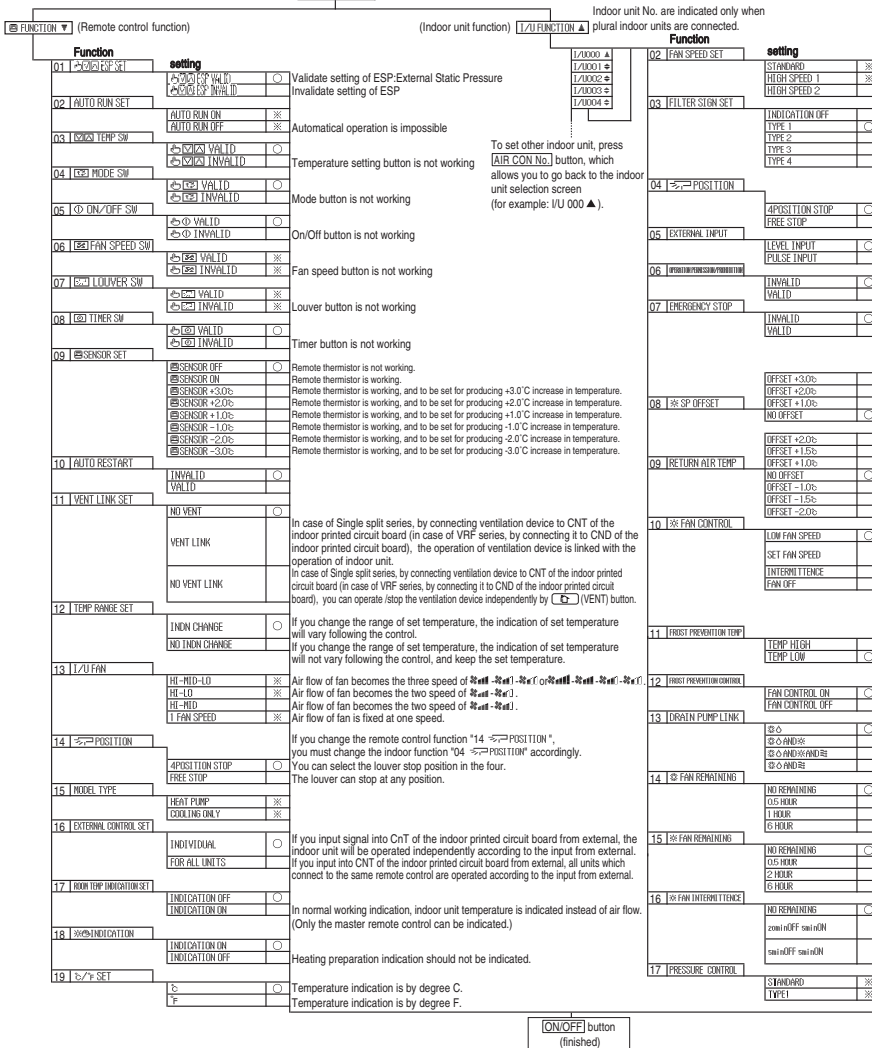

Note2: Fan setting of "HIGH SPEED"

Fan tap	Standard	High Speed1	High Speed2
FAN SPEED SET	UH - Hi - Me - Lo	UH - UH - Hi - Me	UH - Hi - Me

Initial function setting of some indoor unit is "HIGH SPEED".

Validate setting of ESP: External Static Pressure
 Invalidate setting of ESP

Automatic operation is impossible

Temperature setting button is not working

Mode button is not working

On/Off button is not working

Fan speed button is not working

Louver button is not working

Timer button is not working

Remote thermostat is not working.
 Remote thermostat is working.
 Remote thermostat is working, and to be set for producing +3.0°C increase in temperature.
 Remote thermostat is working, and to be set for producing +2.0°C increase in temperature.
 Remote thermostat is working, and to be set for producing +1.0°C increase in temperature.
 Remote thermostat is working, and to be set for producing -1.0°C increase in temperature.
 Remote thermostat is working, and to be set for producing -2.0°C increase in temperature.
 Remote thermostat is working, and to be set for producing -3.0°C increase in temperature.

In case of Single split series, by connecting ventilation device to CNT of the indoor printed circuit board (in case of VRF series, by connecting it to CND of the indoor printed circuit board), the operation of ventilation device is linked with the operation of indoor unit.
 In case of Single split series, by connecting ventilation device to CNT of the indoor printed circuit board (in case of VRF series, by connecting it to CND of the indoor printed circuit board), you can operate (stop) the ventilation device independently by (VENT) button.

If you change the range of set temperature, the indication of set temperature will vary following the control.
 If you change the range of set temperature, the indication of set temperature will not vary following the control, and keep the set temperature.

Air flow of fan becomes the three speed of $R_{set} - R_{set} - R_{set}$ (or $R_{set} - R_{set} - R_{set}$)
 Air flow of fan becomes the two speed of $R_{set} - R_{set}$.
 Air flow of fan becomes the two speed of $R_{set} - R_{set}$.
 Air flow of fan is fixed at one speed.

If you change the remote control function "14 POSITION", you must change the indoor function "04 POSITION" accordingly.
 You can select the lower stop position in the four.
 The louver can stop at any position.

If you input signal into CNT of the indoor printed circuit board from external, the indoor unit will be operated independently according to the input from external.
 If you input into CND of the indoor printed circuit board from external, all units which connected to the same remote control are operated according to the input from external.

In normal working indication, indoor unit temperature is indicated instead of air flow.
 (Only the master remote control can be indicated.)

Heating preparation indication should not be indicated.

Temperature indication is by degree C.
 Temperature indication is by degree F.

When heating thermostat is OFF, fan speed is low speed.
 When heating thermostat is OFF, fan speed is set speed.

When heating thermostat is OFF, fan speed is operated intermittently.
 When heating thermostat is OFF, the fan is stopped.
 When the remote thermostat is working, "FAN OFF" is set automatically.
 Do not set "FAN OFF" when the indoor unit's thermostat is working.

Change of indoor heat exchanger temperature to start frost prevention control.

Working only with the Single split series.
 To control frost prevention, the indoor fan tap is raised.

Drain pump is run during cooling and dry.
 Drain pump is run during cooling, dry and heating.
 Drain pump is run during cooling, dry, heating and fan.
 Drain pump is run during cooling, dry and fan.

After cooling is stopped is OFF, the fan does not perform extra operation.
 After cooling is stopped is OFF, the fan perform extra operation for half an hour.
 After cooling is stopped is OFF, the fan perform extra operation for an hour.
 After cooling is stopped is OFF, the fan perform extra operation for two hours.
 After cooling is stopped is OFF, the fan perform extra operation for six hours.

After heating is stopped or heating thermostat is OFF, the fan does not perform extra operation.
 After heating is stopped or heating thermostat is OFF, the fan perform extra operation for half an hour.
 After heating is stopped or heating thermostat is OFF, the fan perform extra operation for two hours.
 After heating is stopped or heating thermostat is OFF, the fan perform extra operation for six hours.

During heating is stopped or heating thermostat is OFF, the fan perform intermittent operation for five minutes with low fan speed after twenty minutes OFF.
 During heating is stopped or heating thermostat is OFF, the fan perform intermittent operation for five minutes with low fan speed after five minutes' OFF.


Connected "OA Processing" type indoor unit, and is automatically defined.

How to set function

1. Stop air-conditioner and press (SET) (MODE) buttons at the same time for over three seconds, and the "FUNCTION SET ▼" will be displayed.



2. Press (SET) button.
3. Make sure which do you want to set, "FUNCTION ▼" (remote control function) or "I/U FUNCTION ▲" (indoor unit function).
4. Press or button.
Select "FUNCTION ▼" (remote control function) or "I/U FUNCTION ▲" (indoor unit function).




5. Press (SET) button.

6. 【On the occasion of remote control function selection】


- ① "DATA LOADING" (Indication with blinking)

↓
Display is changed to "01 ESP SET".


- ② Press or button.
"No. and function" are indicated by turns on the remote control function table, then you can select from them.
(For example)



- ③ Press (SET) button.
The current setting of selected function is indicated.
(for example) "AUTO RUN ON" ← If "02 AUTO RUN SET" is selected




- ④ Press or button.
Select the setting.

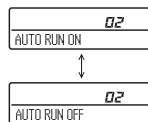

- ⑤ Press (SET)
"SET COMPLETE" will be indicated, and the setting will be completed.
Then after "No. and function" indication returns, Set as the same procedure if you want to set continuously, and if to finish, go to 7.



7. Press (ON/OFF) button.
Setting is finished.

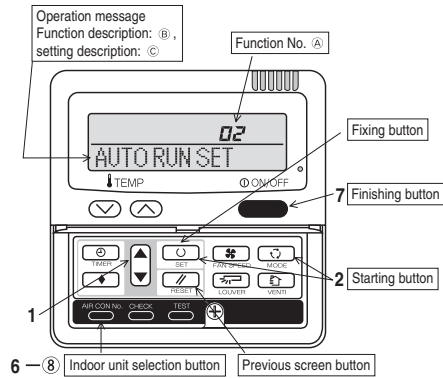


【On the occasion of indoor unit function selection】

- ① "DATA LOADING" (Blinking for 2 to 23 seconds to read the data)

↓
Indication is changed to "02 FAN SPEED SET".
Go to ②.


【Note】

- (1) If plural indoor units are connected to a remote control, the indication is "I/U 000" (blinking) ← The lowest number of the indoor unit connected is indicated.




- (2) Press or button.
Select the number of the indoor unit you are to set
If you select "ALL UNIT ▼", you can set the same setting with all unites.
- (3) Press (SET) button.

- ② Press or button.
"No. and function" are indicated by turns on the indoor unit function table, then you can select from them.
(For example)



- ③ Press (SET) button.
The current setting of selected function is indicated.
(For example) "STANDARD" ← If "02 FAN SPEED SET" is selected.



- ④ Press or button.
Select the setting.

- ⑤ Press (SET) button.
"SET COMPLETE" will be indicated, and the setting will be completed.
Then after "No. and function" indication returns, set as the same procedure if you want to set continuously, and if to finish, go to 7.



- ※ When plural indoor units are connected to a remote control, press the (AIR CON No.) button, which allows you to go back to the indoor unit selection screen. (example "I/U 000 ▲")

- It is possible to finish by pressing (ON/OFF) button on the way, but unfinished change of setting is unavailable.
- During setting, if you press (RESET) button, you return to the previous screen.
- Setting is memorized in the control and it is saved independently of power failure.

【How to check the current setting】

When you select from "No. and function" and press set button by the previous operation, the "Setting" displayed first is the current setting.
(But, if you select "ALL UNIT ▼", the setting of the lowest number indoor unit is displayed.)

1.9.4 Installation of outdoor unit

(1) Model FDC71VNX

PSC012D062FA
Inverter driven single split PAC
71V
Designed for R410A refrigerant

Check before installation work

- Model name and power source
- Refrigerant piping length
- Piping, wiring and miscellaneous small parts
- Indoor unit installation manual

- Ⓞ This installation manual deals with outdoor units and general installation specifications only. For indoor units, refer to page 42.
- Ⓞ When install the unit, be sure to check whether the selection of installation place, power source specifications, usage limitation (piping length, height differences between indoor and outdoor units, power source voltage and etc.) and installation spaces

SAFETY PRECAUTIONS

- We recommend you to read this "SAFETY PRECAUTIONS" carefully before the installation work in order to gain full advantage of the functions of the unit and to avoid malfunction due to mishandling.
- The precautions described below are divided into **⚠ WARNING** and **⚠ CAUTION**. The matters with possibilities leading to serious consequences such as death or serious personal injury due to erroneous handling are listed in the **⚠ WARNING** and the matters with possibilities leading to personal injury or damage of the unit due to erroneous handling including probability leading to serious consequences in some cases are listed in **⚠ CAUTION**. **These are very important precautions for safety. Be sure to observe all of them without fail.** The meaning of "Marks" used here are as shown below.
- ⓧ Never do it under any circumstance. **⚠** Always do it according to the instruction
- Be sure to confirm no anomaly on the equipment by commissioning after completed installation and explain the operating methods as well as the maintenance methods of this equipment to the user according to the owner's manual.
- Keep the installation manual together with owner's manual at a place where any user can read at any time. Moreover if necessary, ask to hand them to a new user

⚠ WARNING	⚠ CAUTION
<ul style="list-style-type: none"> ● Do not perform brazing work in the airtight room It can cause lack of oxygen. ● Use the prescribed pipes, flare nuts and tools for R410A. Using existing parts (for R22 or R407C) can cause the unit failure and serious accidents due to burst of the refrigerant circuit. ● Tighten the flare nut by using double spanners and torque wrench according to prescribed method. Be sure not to tighten the flare nut too much. Loose flare connection or damage on the flare part by tightening with excess torque can cause burst or refrigerant leaks which may result in lack of oxygen. ● Do not open the service valves for liquid line and gas line until completed refrigerant piping work, air tightness test and evacuation. If the evaporator is operated in state of opening service valves before completed connection of refrigerant piping work, you may incur frost bite or injury from an abrupt refrigerant outflow and air can be sucked into refrigerant circuit, which can cause burst or personal injury due to anomalously high pressure in the refrigerant. ● Only use prescribed optional parts. The installation must be carried out by the qualified installer. If you install the system by yourself, it can cause serious trouble such as water leaks, electric shocks, fire. ● Do not perform any change of protective device itself or its setup condition The forced operation by short-circuiting protective device of pressure switch and temperature controller or the use of non specified component can cause fire or burst. ● Be sure to switch off the power source in the event of installation, inspection or servicing. If the power source is not shut off, there is a risk of electric shocks, unit failure or personal injury due to the unexpected start of fan. ● Consult the dealer or an expert regarding removal of the unit. Incorrect installation can cause water leaks, electric shocks or fire. ● Stop the compressor before closing valve and disconnecting refrigerant pipes in case of pump down operation. If disconnecting refrigerant pipes in state of opening service valves before compressor stopping, you may incur frost bite or injury from an abrupt refrigerant outflow and air can be sucked, which can cause burst or personal injury due to anomalously high pressure in the refrigerant circuit. ● Ensure that no air enters in the refrigerant circuit when the unit is installed and removed. If air enters in the refrigerant circuit, the pressure in the refrigerant circuit becomes too high, which can cause burst and personal injury. ● Do not run the unit with removed panels or protections Touching rotating equipments, hot surfaces or high voltage parts can cause personal injury due to entrapment, burn or electric shocks. ● Be sure to fix up the service panels. Incorrect fixing can cause electric shocks or fire due to intrusion of dust or water. ● Do not perform any repairs or modifications by yourself. Consult the dealer if the unit requires repair. If you repair or modify the unit, it can cause water leaks, electric shocks or fire. 	<ul style="list-style-type: none"> ● Installation must be carried out by the qualified installer. If you install the system by yourself, it may cause serious trouble such as water leaks, electric shocks, fire and personal injury, as a result of a system malfunction. ● Install the system in full accordance with the instruction manual. Incorrect installation may cause bursts, personal injury, water leaks, electric shocks and fire. ● Use the original accessories and the specified components for installation. If parts other than those prescribed by us are used, it may cause fall of the unit, water leaks, electric shocks, fire, refrigerant leak, substandard performance, control failure and personal injury. ● When installing in small rooms, take prevention measures not to exceed the density limit of refrigerant in the event of leakage accordance with the instruction manual. Consult the expert about prevention measures. If the density of refrigerant exceeds the limit in the event of leakage, lack of oxygen can occur, which can cause serious accidents. ● Ventilate the working area well in the event of refrigerant leakage during installation. If the refrigerant comes into contact with naked flames, poisonous gas is produced. ● After completed installation, check that no refrigerant leaks from the system. If refrigerant leaks into the room and comes into contact with an oven or other hot surface, poisonous gas is produced. ● Hang up the unit at the specified points with ropes which can support the weight in lifting for portage. And to avoid jolting out of alignment, be sure to hang up the unit at 4-point support. An improper manner of portage such as 3-point support can cause death or serious personal injury due to falling of the unit. ● Install the unit in a location with good support. Unstable installation locations can cause the unit to fall and cause material damage and personal injury. ● Ensure the unit is stable when installed, so that it can withstand earthquakes and strong winds. Unstable installation locations can cause the unit to fall and cause material damage and personal injury. ● The electrical installation must be carried out by the qualified electrician in accordance with "the norm for electrical work" and "national wiring regulation", and the system must be connected to the dedicated circuit. Power source with insufficient capacity and incorrect function done by improper work can cause electric shocks and fire. ● Be sure to shut off the power before starting electrical work. Failure to shut off the power can cause electric shocks, unit failure or incorrect function of equipment. ● Be sure to use the cables conformed to safety standard and cable ampacity for power distribution work. Unconformable cables can cause electric leak, anomalous heat production or fire. ● Use the prescribed cables for electrical connection, tighten the cables securely in terminal block and relieve the cables correctly to prevent overloading the terminal blocks. Loose connections or cable mountings can cause anomalous heat production or fire. ● Arrange the wiring in the control box so that it cannot be pushed up further into the box. Install the service panel correctly. Incorrect installation may result in overheating and fire.

	CAUTION	<ul style="list-style-type: none"> ● Carry out the electrical work for ground lead with care Do not connect the ground lead to the gas line, water line, lightning conductor or telephone line's ground lead. Incorrect grounding can cause unit faults such as electric shocks due to short-circuiting. Never connect the grounding wire to a gas pipe because it can cause explosion or ignition. ● Use the circuit breaker for all pole with correct capacity. Using the incorrect circuit breaker, it can cause the unit malfunction and fire. ● Install isolator or disconnect switch on the power source wiring in accordance with the local codes and regulations. The isolator should be locked in accordance with EN61820-1-1. ● Take care when carrying the unit by hand. If the unit weighs more than 20kg, it must be carried by two or more persons. Do not carry by the plastic straps, always use the carry handle when carrying the unit by hand. Use gloves to minimize the risk of cuts by the aluminum fins. ● Dispose of any packing materials correctly. Any remaining packing materials can cause personal injury as it contains nails and wood. And to avoid danger of suffocation, be sure to keep the plastic wrapper away from children and to dispose after tear it up. ● Pay attention not to damage the drain pan by weld spatter when welding work is done near the indoor unit. If weld spatter enters into the indoor unit during welding work, it can cause hole in drain pan and result in water leakage. To prevent such damage, keep the indoor unit in its packaging or cover it. ● Be sure to insulate the refrigerant pipes so as not to condense the ambient air moisture on them. Insufficient insulation can cause condensation, which can lead to moisture damage on the ceiling, floor, furniture, and any other valuables. ● Be sure to perform air tightness test by pressurizing with nitrogen gas after completed refrigerant piping work. If the density of refrigerant exceeds the limit in the event of refrigerant leakage in the small room, lack of oxygen can occur, which can cause serious accidents. ● Perform installation work properly according to this installation manual. Improper installation can cause abnormal vibrations or increased noise generation. ● Earth leakage breaker must be installed If the earth leakage breaker is not installed, it can cause fire or electric shocks. ● Do not use any materials other than a fuse with the correct rating in the location where fuses are to be used. Connecting the circuit with copper wire or other metal thread can cause unit failure and fire. ● Do not install the unit near the location where leakage of combustible gases can occur. If leaked gases accumulate around the unit, it can cause fire. ● Do not install the unit where corrosive gas (such as sulfuric acid gas etc.) or combustible gas (such as thinner and petroleum gases) can accumulate or collect, or where volatile combustible substances are handled. Corrosive gas can cause corrosion of heat exchanger, leakage of plastic parts and etc. And combustible gas can cause fire. ● Secure a space for installation, inspection and maintenance specified in the manual. Insufficient space can result in an accident such as personal injury due to falling from the installation place. ● When the outdoor unit is installed on a roof or a high place, provide permanent ladders and handrails along the access route and fences and handrails around the outdoor unit. If safety facilities are not provided, it can cause personal injury due to falling from the installation place. ● Do not install nor use the system close to the equipment that generates electromagnetic fields or high frequency harmonics Equipment such as inverters, standby generators, medical high frequency equipments and telecommunication equipments can affect the system, and cause malfunctions and breakdowns. The system can also affect medical equipment and telecommunication equipment, and obstruct its function or cause jamming. ● Do not install the outdoor unit in a location where insects and small animals can inhabit. Insects and small animals can enter the electric parts and cause damage or fire. Instruct the user to keep the surroundings clean.
	CAUTION	<ul style="list-style-type: none"> ● Do not use the base frame for outdoor unit which is corroded or damaged due to long periods of operation. Using an old and damaged base frame can cause the unit falling down and cause personal injury. ● Do not install the unit in the locations listed below <ul style="list-style-type: none"> • Locations where carbon fiber, metal powder or any powder is floating. • Locations where any substances that can affect the unit such as sulphide gas, chloride gas, acid and alkaline can occur. • Vehicles and ships • Locations where cosmetics or special sprays are often used • Locations with high level of heat or steam such as kitchen and machine plant. • Locations where any machines which generate high frequency harmonics are used. • Locations with salty atmospheres such as coastlines • Locations with heavy snow (if installed, be sure to provide base frame and snow hood mentioned in the manual) • Locations where the unit is exposed to chimney smoke • Locations at high altitude (more than 1000m high) • Locations with ammoniac atmospheres • Locations where heat radiation from other heat source can affect the unit • Locations with any obstacles which can prevent intake and outlet air of the unit • Locations where there are strong currents (such as power lines or high voltage power lines) or electromagnetic waves (such as radio waves or microwave radiation) • Locations where the air flow is fast in the outlet of outdoor unit It can cause remarkable decrease in performance, corrosion and damage of components, malfunction and fire. ● Do not install the outdoor unit in the locations listed below. <ul style="list-style-type: none"> • Locations where discharged hot air or operating sound of the outdoor unit can bother neighborhood • Locations where the unit is installed in a place where the unit is not intended to be installed. The operation of the unit may affect adversely to the plant etc. • Locations where vibration can be amplified and transmitted due to insufficient strength of structure. • Locations where vibration and operating sound generated by the outdoor unit can affect seriously (on the wall or at the place near bed room) • Locations where an equipment affected by high harmonics is placed, (TV set or radio receiver is placed within 5m) • Locations where damage cannot run off safely. • Locations where damage cannot be repaired. It can affect surrounding environment and cause a claim ● Do not use the unit for special purposes such as storing foods, cooling precision instruments and preservation of animals, plants or art. It can cause the damage of the items. ● Do not touch any buttons with wet hands It can cause electric shocks ● Do not touch any refrigerant pipes with your hands when the system is in operation. During operation the refrigerant pipes become extremely hot or extremely cold depending the operating condition, and it can cause burn injury or frost injury. ● Do not clean up the unit with water It can cause electric shocks ● Do not operate the outdoor unit with any article placed on it. You may incur property damage or personal injury from a fall of the article. ● Do not step onto the outdoor unit You may incur injury from a drop or fall.

Notabilia as a unit designed for R410A


- Do not use any refrigerant other than R410A. R410A will rise to pressure about 1.6 times higher than that of a conventional refrigerant.
- A cylinder containing R410A has a pink indication mark on the top.
- A unit designed for R410A has adopted a different size indoor unit service valve charge port and a different size check joint provided in the unit to prevent the charging of a wrong refrigerant by mistake.
- The processed dimension of the flared part of a refrigerant pipe and a flare nut's parallel side measurement have also been altered to raise strength against pressure. Accordingly, you are required to arrange dedicated R410A tools listed in the table on the right before installing or servicing this unit.
- Do not use a charge cylinder. The use of a charge cylinder will cause the refrigerant composition to change, which results in performance degradation.
- In charging refrigerant, always take it out from a cylinder in the liquid phase.
- All indoor units must be models designed exclusively for R410A. Check connectable indoor unit models in a catalog, etc. (A wrong indoor unit, if connected into the system, will impair proper system operation)

	Dedicated R410A tools
a)	Gauge manifold
b)	Charge hose
c)	Electronic scale for refrigerant charging
d)	Torque wrench
e)	Flare tool
f)	Protusion control copper pipe gauge
g)	Vacuum pump adapter
h)	Gas leak detector

1. HAULAGE AND INSTALLATION (Take particular care in carrying in or moving the unit, and always perform such an operation with two or more persons.)

CAUTION

When a unit is hoisted with slings for haulage, take into consideration the offset of its gravity center position. If not properly balanced, the unit can be thrown off-balance and fall.

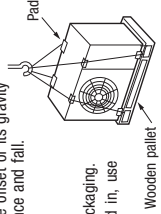


1) Delivery

- Deliver the unit as close as possible to the installation site before removing it from the packaging.
- When some compelling reason necessitates the unpacking of the unit before it is carried in, use nylon slings or protective wood pieces so as not to damage the unit by ropes lifting it.

2) Portage

- The right hand side of the unit as viewed from the front (diffuser side) is heavier. A person carrying the right hand side must take heed of this fact. A person carrying the left hand side must hold with his right hand the handle provided on the front panel of the unit and with his left hand the corner column section.

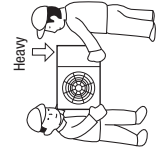

2) Determination of pipe size

- Determine refrigerant pipe size pursuant to the following guidelines based on the indoor unit specifications.

	Model 71V	
	Gas pipe	Liquid pipe
Outdoor unit connected	φ15.88 Flare	φ9.52 Flare
	φ15.88	φ9.52
	φ15.88	φ9.52
In the case of a single type	Indoor unit connected	
	Capacity of indoor unit	
In the case of a twin type	Branching pipe set	
	Refrigerant piping (branch pipe L1,L2)	
	φ12.7	φ9.52
	φ12.7	φ6.35
Capacity of indoor unit		
Model 40V×2		

- When the 40V model is connected as an indoor unit, always use a φ9.52 liquid pipe for the branch (branching pipe – indoor unit) and a different diameter joint supplied with the branching pipe set for connection with the indoor unit (φ6.35 on the liquid pipe side).
- If a φ6.35 pipe is used for connection with a branching pipe, a refrigerant distribution disorder may occur, causing one of the indoor units to fall short of the rated capacity.
- A riser pipe must be a part of the main. A branching pipe set should be installed horizontally at a point as close to an indoor unit as possible.
- A branching part must be dressed with a heat-insulation material supplied as an accessory.
- For the details of installation work required at and near a branching area, see the installation manual supplied with your branching pipe set.

CAUTION

3) Refrigerant pipe wall thickness and material

- Select refrigerant pipes of the table shown on the right wall thickness and material as specified for each pipe size.

Pipe diameter [mm]	6.35	9.52	12.7	15.88
Minimum pipe wall thickness [mm]	0.8	0.8	0.8	1.0
Pipe material*	O-type pipe	O-type pipe	O-type pipe	O-type pipe

- Select pipes having a wall thickness larger than the specified minimum pipe thickness.
- *Phosphorus deoxidized seamless copper pipe C1220T, JIS H 3300

4) On-site piping work

- Take care so that installed pipes may not touch components within a unit. If touching with an internal component, it will generate abnormal sounds and/or vibrations.

IMPORTANT

How to remove the side cover

Please remove the screw of a side cover and remove to the front.


- Carry out the on site piping work with the service valve fully closed.
- Give sufficient protection to a pipe end (compressed and brazed, or with an adhesive tape) so that water or foreign matters may not enter the piping.
- Bend a pipe to a radius as large as practical.(R100-R150) Do not bend a pipe repeatedly to correct its form.
- Flare connection is used between the unit and refrigerant pipe. Flare a pipe after engaging a flare nut onto it. Flare dimensions for R410A are different from those for conventional R407C. Although we recommend the use of flaring tools designed specifically for R410A, conventional flaring tools can also be used by adjusting the measurement of protrusion B with a protrusion control gauge.
- The pipe should be anchored every 1.5m or less to isolate the vibration.
- Tighten a flare joint securely with a double spanner.

Do not apply force beyond proper fastening torque in tightening the flare nut.



Fix both liquid and gas service valves at the valve main bodies as illustrated on the right, and then fasten them, applying appropriate fastening torque.

Service valve size (mm)	Tightening torque (N·m)	Tightening angle (°)	Recommended length of a tool handle (mm)
φ6.35 (1/4")	14-18	45-60	150
φ9.52 (3/8")	34-42	30-45	200
φ12.7 (1/2")	49-61	30-45	250
φ15.88(5/8")	68-82	15-20	300

CAUTION

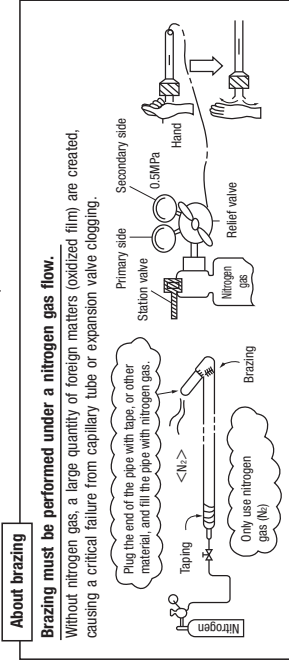


Flared pipe end: A (mm)		Copper pipe protrusion for flaring: B (mm)	
Copper pipe outer diameter	A	In the case of a rigid (clutch) type	With a conventional tool
φ6.35	0	With an R410A tool	0.7-1.3
φ9.52	-0.4		
φ12.7	9.1		
φ15.88	13.2		
	16.6		
	19.7		

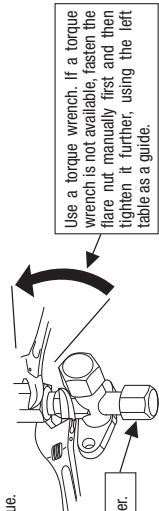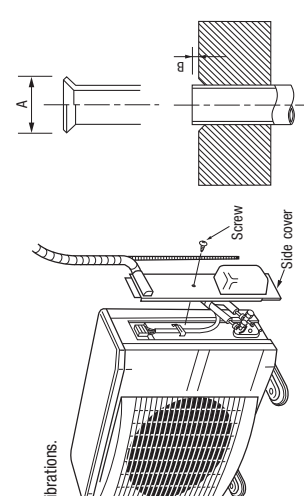

5) Air tightness test


- ① Although outdoor and indoor units themselves have been tested for air tightness at the factory, check the connecting pipes after the installation work for air tightness from the service valve's check joint equipped on the outdoor unit side. While conducting a test, keep the service valve shut all the time.
 - a) Raise the pressure to 0.5 MPa, and then stop. Leave it for five minutes to see if the pressure drops.
 - b) Then raise the pressure to 1.5 MPa, and stop. Leave it for five more minutes to see if the pressure drops.
 - c) Then raise the pressure to the specified level (4.15 MPa), and record the ambient temperature and the pressure.
 - d) If no pressure drop is observed with an installation pressurized to the specified level and left for about one day, it is acceptable. When the ambient temperature fall 1°C, the pressure also fall approximately 0.01 MPa. The pressure, if changed, should be compensated for.
 - e) If a pressure drop is observed in checking a) and a) - d), a leak exists somewhere. Find a leak by applying bubble test liquid to welded parts and flare joints and repair it. After repair, conduct an air-tightness test again.
- ② In conducting an air-tightness test, use nitrogen gas and pressurize the system with nitrogen gas from the gas side. Do not use a medium other than nitrogen gas under any circumstances.

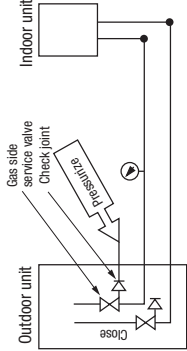

6) Evacuation

<Work flow>

When the system has remaining moisture inside or a leaky point, the vacuum gauge indicator will rise. Check the system for a leaky point and then draw air to create a vacuum again.

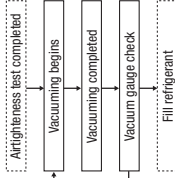

Pay attention to the following points in addition to the above for the R410A and compatible machines.

- To prevent a different oil from entering, assign dedicated tools, etc. to each refrigerant type. Under no circumstances must a gauge manifold and a charge hose in particular be shared with other refrigerant types (R22, R407C, etc.).
- Use a counterflow prevention adapter to prevent vacuum pump oil from entering the refrigerant system.

7) Additional refrigerant charge

(1) Calculate a required refrigerant charge volume from the following table.

Model	Standard refrigerant charge volume (kg)	Pipe length for standard refrigerant charge volume (m)	Additional charge volume (kg) per meter of refrigerant piping (liquid pipe φ6.35)	Refrigerant volume charged for shipment at the factory (kg)	Installation's pipe length (m) covered without additional refrigerant charge
Model 71V	2.35	20	0.06	2.95	30

- This unit contains factory charged refrigerant covering 30m of refrigerant piping and additional refrigerant charge on the installation site is not required for an installation with up to 30m refrigerant piping.
- When refrigerant piping exceeds 30m, additionally charge an amount calculated from the pipe length and the above table for the portion in excess of 30m.
- When refrigerant piping is shorter than 3m, reduce refrigerant by 1kg from the factory charged volume and adjust to 1.95kg.
- If an existing pipe system is used, a required refrigerant charge volume will vary depending on the liquid pipe size. For further information, please see "6. UTILIZATION OF EXISTING PIPING."

Formula to calculate the volume of additional refrigerant required

$$\text{Additional charge volume (kg)} = \{ \text{Main pipe length (m)} - \text{Length covered without additional charge 30 (m)} \} \times 0.06 \text{ (kg/m)} + \text{Total length of branch pipes (m)} \times 0.06 \text{ (kg/m)}$$

*When an additional charge volume calculation result is negative, it is not necessary to charge refrigerant additionally.


(2) Charging refrigerant

- Since R410A refrigerant must be charged in the liquid phase, you should charge it, keeping the container cylinder upside down or using a refrigerant cylinder equipped with a siphon tube.
- Charge refrigerant always from the liquid side service port with the service valve shut. When you find it difficult to charge a required amount, fully open the outdoor unit valves on both liquid and gas sides and charge refrigerant from the gas (suction) side service port, while running the unit in the cooling mode. In doing so, care must be taken so that refrigerant may be discharged from the cylinder in the liquid phase all the time. When the cylinder valve is throttled down or a dedicated conversion tool to charge liquid-phase refrigerant into mist is used to protect the compressor, however, adjust charge conditions so that refrigerant will gasify upon entering the unit.
- In charging refrigerant, always charge a calculated volume by using a scale to measure the charge volume.
- When refrigerant is charged with the unit being run, complete a charge operation within 30 minutes. Running the unit with an insufficient quantity of refrigerant for a long time can cause a compressor failure.

NOTE Put down the refrigerant volume calculated from the pipe length onto the caution label attached on the back side of the service panel.


8) Heating and condensation prevention

- (1) Dress refrigerant pipes (both gas and liquid pipes) for heat insulation and prevention of dew condensation.
 - Improper heat insulation/dew dressing can result in a water leak or dripping causing damage to household effects, etc.
- (2) Use a heat insulating material that can withstand 120°C or a higher temperature. Poor heat insulating capacity can cause heat insulation problems or cable deterioration.
 - All gas pipes must be securely heat insulated in order to prevent damage from dripping water that comes from the condensation formed on them during a cooling operation or personal injury from burns because their surface can reach quite a high temperature due to discharged gas flowing inside during a heating operation.
 - Wrap indoor units' flare joints with heat insulating parts (pipe cover) for heat insulation (both gas and liquid pipes).
 - Give heat insulation to both gas and liquid side pipes. Bundle a heat insulating material and a pipe tightly together so that no gaps may be left between them and wrap them together with a connecting cable by a dressing tape.
 - Although it is verified in a test that this air-conditioning unit shows satisfactory performance under JIS condensation test conditions, **both gas and liquid pipes need to be dressed with 20 mm or thicker heat insulation materials above the ceiling, where relative humidity exceeds 70%.**

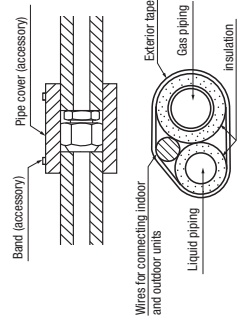

3. DRAIN PIPING WORK

- Execute drain piping by using a drain elbow and drain grommets supplied separately as optional parts, where water drained from the outdoor unit is a problem.

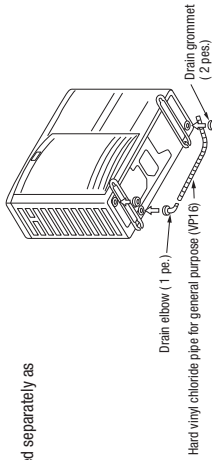

- There are 3 drain holes provided on the bottom plate of an outdoor unit to discharge condensed water.
- When condensed water needs to be led to a drain, etc., install the unit on a flat base (supplied separately as an optional part) or concrete blocks.
- Connect a drain elbow as shown in the illustration and close the other two drain holes with grommets.

4. ELECTRICAL WIRING WORK For details of electrical cabling, refer to the indoor unit installation manual.


- Electrical installation work must be performed by an electrical installation service provider qualified by a power provider of the country. Electrical installation work must be executed according to the technical standards and other regulations applicable to electrical installations in the country.
- Do not use any supply cord lighter than one specified in parentheses for each type below.
 - braided cord (code designation 60245 IEC 51).
 - ordinary tough rubber sheathed cord (code designation 60245 IEC 53)
 - flat twin tinsel cord (code designation 60227 IEC 41).
 - Do not use anything lighter than polychloroprene sheathed flexible cord (code designation 60245 IEC57) for supply cords of parts of appliances for outdoor use.
 - Ground the unit. Do not connect the grounding wire to a gas pipe, water pipe, lightning rod or telephone grounding wire.

- If improperly grounded, an electric shock or malfunction may result.
- A grounding wire must be connected before connecting the power cable. Provide a grounding wire longer than the power cable.
- The installation of an impulse withstanding type earth leakage breaker is necessary. A failure to install an earth leakage breaker can result in an accident such as an electric shock or a fire.
- Do not turn on the power until the electrical work is completed.
- Do not use a condensative capacitor for power factor improvement under any circumstances. (It does not improve power factor, while it can cause an abnormal overheat accident.)
- For power source cables, use conduits.
- Do not lay electronic control cables (remote control and signaling wires) and other cables together outside the unit. Laying them together can result in the malfunctioning or a failure of the unit due to electric noises.
- Fasten cables so that they may not touch the piping, etc.
- When cables are connected, make sure that all electrical components within the electrical component box are free of loose connector coupling or terminal connection and then attach the cover securely. (Improper cover attachment can result in malfunctioning or a failure of the unit, if water penetrates into the box.)
- Always use a three-core cable for an indoor-outdoor connecting cable. Never use a shield cable.

Power cable, indoor-outdoor connecting wires


- Always perform grounding system installation work with the power cord unplugged.

CAUTION Always use an earth leakage circuit breaker designed for inverter circuits to prevent a faulty operation.

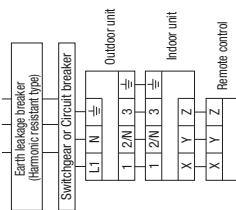


Model	Power source	Power cable thickness (mm ²)	MAX. over current (A)	Cable length (m)	Grounding wire thickness	Indoor-outdoor wire thickness number
71V	Single phase 3 wire 220-240V 50Hz	3.5	17	21	φ1.6mm	φ1.6mm x 3

- The specifications shown in the above table are for units without heaters. For units with heaters, refer to the installation instructions or the construction instructions of the indoor unit.
- Switchgear or Circuit breaker capacity which is calculated from MAX. over current should be chosen along the regulations in each country.
- The cable specifications are based on the assumption that a metal or plastic conduit is used with no more than three cables contained in a conduit and a voltage drop is 2%. For an installation falling outside of these conditions, follow the internal cabling regulations. Adapt it to the regulation in effect in each country.

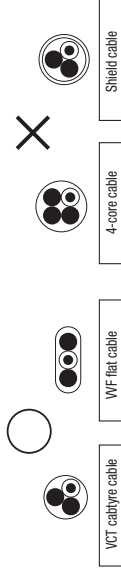

- Connect a pair bearing a common terminal number with an indoor-outdoor connecting wire.
- In cabling, fasten cables securely with cable clamps so that no external force may work on terminal connections.
- Grounding terminals are provided in the control box.

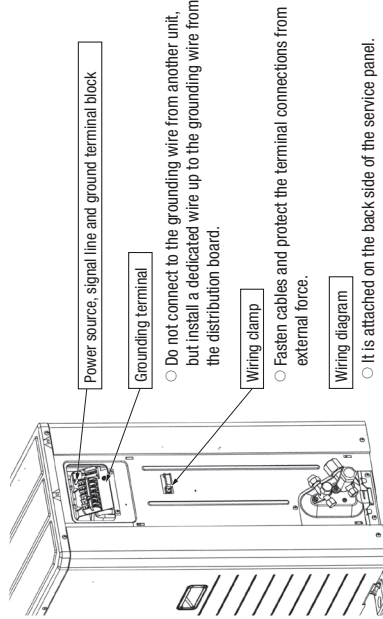

- Do not connect to the grounding wire from another unit, but install a dedicated wire up to the grounding wire from the distribution board.
- Fasten cables and protect the terminal connections from external force.
- It is attached on the back side of the service panel.

5. TEST RUN

⚠ WARNING

- Before conduct a test run, do not fail to make sure that the service valves are closed.
- Turn on power 6 hours prior to a test run to energize the crank case heater.
- In case of the first operation after turning on power, even if the unit does not move for 30 minutes, it is not a breakdown.
- Always give a 3-minute or longer interval before you start the unit again whenever it is stopped.
- Removing the service panel will expose high-voltage live parts and high-temperature parts, which are quite dangerous. Take utmost care not to incur an electric shock or burns. Do not leave the unit with the service panel open.

⚠ CAUTION

- When you operate switches for on-site setting, be careful not to touch a live part.
- You cannot check discharge pressure from the liquid service valve charge port.
- The unit will start a cooling operation.
- When power goes off, reset the unit after 30 minutes before you turn on power again after power is cut off.
- If this procedure is not observed in turning on power again, "E5" (Communication error) may occur.

⚠ About insulation resistance

- An insulation resistance value may drop to several M ohms immediately after installation or when the unit is left for a long time without power, because refrigerant is gathered in the compressor. When the earth-leakage breaker is actuated due to low insulation resistance, please check the following:
- (1) Check whether a normal insulation resistance value is restored about 6 hours after power is turned. Turning on power will energize the compressor and heat it to evaporate refrigerant gathered in it.
- (2) Check whether the earth-leakage breaker is a harmonic resistant type.

This unit is equipped with an inverter and therefore, the use of a harmonic resistant type earth-leakage breaker is necessary to prevent a false actuation.

1) Test run method

Please remove a side cover.

- (1) A test run can be initiated from an outdoor unit by using SW5-4 and SW5-3 for on-site setting.
- (2) Switching SW3-3 to ON will start the compressor.
- (3) The unit will start a cooling operation, when SW5-4 is OFF, or a heating operation, when SW5-4 is ON.
- (4) Do not fail to switch SW5-3 to OFF when a test run is completed.

※ In case of the first operation after turning on the power source, when the unit runs in the cooling mode at outside temperature 5°C or lower, it automatically changes into the cooling mode after it runs in the heating mode for 10 minutes.

2) Checking the state of the unit in operation

Please remove a service panel.

Use check joints provided on the piping before and after the four-way valve installed inside the outdoor unit for checking discharge pressure and suction pressure.

As indicated in the table shown on the right, pressure detected at each point will vary depending on whether a cooling or heating operation has been selected.

Operation	Check point of the pipe	Charge port of the gas service valve
Cooling operation	Discharge pressure (High pressure)	Suction pressure (Low pressure)
Heating operation	Suction pressure (Low pressure)	Discharge pressure (High pressure)

3) Setting SW3-1, SW3-2.

Please remove a service panel.

- (1) Defrost control switching (SW3-1)
 - When this switch is turned ON, the unit will run in the defrost mode more frequently.
 - Set this switch to ON, when installed in a region where outdoor temperature falls below zero during the season the unit is run for a heating operation.
- (2) Snow guard fan control (SW3-2)
 - When this switch is turned on, the outdoor fan will run for 30 seconds in every 10 minutes, when outdoor temperature falls to 3°C or lower and the compressor is not running.
 - When the unit is used in a very snowy country, set this switch to ON.

4) Failure diagnosis in a test run

Error indicates on the remote control unit	Flashed (red)board LED (The cycles of 5 seconds)	Panel LED	Green LED	Failure event	Action
E94	Blinking once	Blinking continuously	Blinking continuously	Open phase	Check power cables for loose contact or disconnection
E40	Blinking once	Blinking continuously	Blinking continuously	ECOH1 actuation or operation with service valves shut (Occurs mainly during a heating operation)	1. Check whether the service valves are open. 2. If an error has been cancelled when 3 minutes have elapsed since a compressor stop, you can restart the unit by enforcing Check focus from the remote control unit.
E49	Blinking once	Blinking continuously	Blinking continuously	Low pressure error or operation with service valves shut (Occurs mainly during a cooling operation)	Check focus from the remote control unit.

● If an error code other than those listed above is indicated, refer to the wiring diagram of the outdoor unit and the indoor unit.

5) The state of the electronic expansion valve.

The following table illustrates the steady states of the electronic expansion valve.

Value for a cooling operation	Value for a heating operation	When power is turned on	When the unit comes to a normal stop
Complete shut position	Complete shut position	During a heating operation	When the unit comes to an abnormal stop
Full open position	Full open position	Full open position	During a cooling operation
Full open position	Full open position	Complete shut position	Full open position
Full open position	Full open position	Complete shut position	Full open position

6) Heed the following on the first operation after turning on the circuit breaker.

This outdoor unit may start in the standby mode (waiting for a compressor startup), which can continue up to 30 minutes, to prevent the oil level in the compressor from lowering on the first operation after turning on the circuit breaker. If that is the case, do not suspect a unit failure.


A failure to observe these instructions can result in a compressor breakdown.

● When you leave the outdoor unit with power supplied to it, be sure to close the panel.

Item focused in the installation manual	Item	Check item	Check
2	Refrigerant piping	If correct, use the correct order, as follows, as they are: 1. Are all service panel and seal vacuum extraction, airtight performance? 2. Were all pressure test and vacuum extraction, airtight performance? 3. Are heat insulation materials installed on both liquid and gas pipes? 4. Are service valves airtight, clean and not for both liquid and gas systems? 5. Have you recorded the additional refrigerant charge volume and refrigerant pipe length in the panel label? 6. Is the unit free of cables, wires such as unaccomplished connection, an absent or reversed phase? 7. Are power meter electrical wiring items used for circuit breakers and cables?	
4	Electric wiring	1. Do not connect connecting cables between the same terminal numbers? 2. Are indoor-outdoor connecting cables correct between the same terminal numbers? 3. Are all three VCC cables (power, ground, or OFF) the cables used for indoor-outdoor connecting cables? 4. Does grounding satisfy the D type grounding type. If grounding requirement? 5. Are cables tied off loosely screws at their connection points? 6. Are cables tied down with cable clamps so that no external force works onto terminal connections? 7. Where a two-core power cord is connected to an indoor unit, is the flex cover attached to the indoor unit?	
—	Indoor unit		

● Always carry out a test run and check the following in order as listed.

Turn	The contents of operation	Check
①	Open the gas side service valve safely.	
②	Open the liquid side service valve safely.	
③	Close the panel.	
④	When a remote control unit is used for an on-site setting, follow instructions for an on-site setting in the installation manual with a remote control unit.	
⑤	SW5-3 (SW5-4) OFF: The unit will start a cooling operation.	
⑥	SW5-3 (SW5-4) ON: The unit will start a heating operation.	
⑦	Place your hand below the indoor unit's display to check whether cold/warm which come out in a cooling/heating operation.	
⑧	Make sure that a red LED is not blinking.	
⑨	When you complete the test run, please turn on SW5-3 for 1 second and be sure to read a test run.	
⑩	When options are used, check their operation according to the respective instruction manuals.	

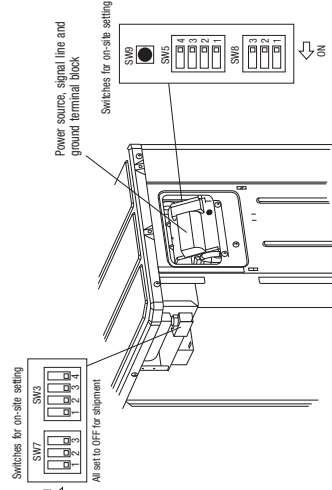


All set to OFF for shipment

※1 Do not operate SW3-3, SW5-1, SW5-2, SW5-3, SW5-4, SW5-5, SW5-6, SW5-7, SW5-8, SW5-9, SW5-10, SW5-11, SW5-12, SW5-13, SW5-14, SW5-15, SW5-16, SW5-17, SW5-18, SW5-19, SW5-20, SW5-21, SW5-22, SW5-23, SW5-24, SW5-25, SW5-26, SW5-27, SW5-28, SW5-29, SW5-30, SW5-31, SW5-32, SW5-33, SW5-34, SW5-35, SW5-36, SW5-37, SW5-38, SW5-39, SW5-40, SW5-41, SW5-42, SW5-43, SW5-44, SW5-45, SW5-46, SW5-47, SW5-48, SW5-49, SW5-50, SW5-51, SW5-52, SW5-53, SW5-54, SW5-55, SW5-56, SW5-57, SW5-58, SW5-59, SW5-60, SW5-61, SW5-62, SW5-63, SW5-64, SW5-65, SW5-66, SW5-67, SW5-68, SW5-69, SW5-70, SW5-71, SW5-72, SW5-73, SW5-74, SW5-75, SW5-76, SW5-77, SW5-78, SW5-79, SW5-80, SW5-81, SW5-82, SW5-83, SW5-84, SW5-85, SW5-86, SW5-87, SW5-88, SW5-89, SW5-90, SW5-91, SW5-92, SW5-93, SW5-94, SW5-95, SW5-96, SW5-97, SW5-98, SW5-99, SW5-100.

6. UTILIZATION OF EXISTING PIPING.

Check whether an existing pipe system is reusable or not by using the following flow chart.

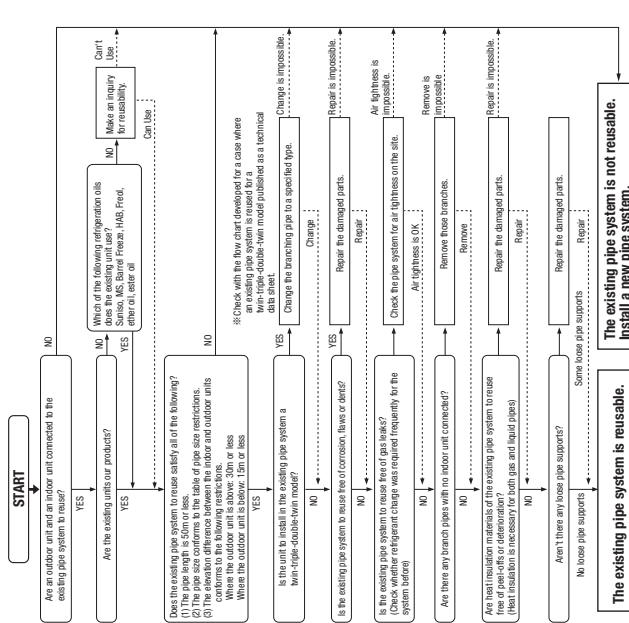

WARNING

<Where the existing unit can be run for a cooling operation ->

- Carry out the following steps with the existing unit (in the order of (1), (2), (3) and (4))**
- (1) Run the unit for 30 minutes for a cooling operation.
 - (2) Stop the indoor fan and run the unit for 3 minutes for a cooling operation (returning liquid)
 - (3) Close the liquid side service valve of the outdoor unit and pump down (refrigerant recovery)
 - (4) Blow with nitrogen gas. ※ If discolored refrigeration oil or any foreign matters is discharged by the blow, wash the pipe system or install a new pipe system.
- For the flare nut, do not use the old one, but use the one supplied with the outdoor unit.
 - Turn on-site setting switch SW8-1 to the ON position. (Where the gas pipe size is φ19.05)

<Table of pipe size restrictions>

◎:Standard pipe size ○:Usable △:Restricted to shorter pipe length limits Cool ↓ : Cooling capacity drop

Pipe size	Liquid pipe		Gas pipe		Usability
	φ9.52	φ12.7	φ15.88	φ19.05	
71V	○	○	○	○	△
Maximum one-way pipe length	35	50	50	25	
Length covered without additional charge	30	30	30	15	

● The pipe length should be at least 3m. If the pipe length is shorter than 3m, the quantity of refrigerant needs to be reduced. Please consult with our distributor in the area, if you need to recover refrigerant and charge it again.
● Any combinations of pipe sizes not listed in the table are not usable.

<Pipe system after the branching pipe>

◎:Standard pipe size ○:Usable

Pipe size	Liquid pipe		Gas pipe		Combination type
	φ9.52	φ12.7	φ15.88	φ19.05	
FDCT1	○	○	○	○	40+40

● Any combinations of pipe sizes not listed in the table are not usable.

<The model types of existing units of which branching pipes are reusable.>

The branching pipes used with models other than those listed above are not reusable.
Use our genuine branching pipes for R410A.

Formula to calculate additional charge volume

$$\text{Additional charge volume (kg)} = (\text{Main pipe length (m)} - \text{Length covered without additional charge shown in the table (m)}) \times \text{Additional charge volume per meter of pipe shown in the table (kg/m)} + (\text{Total length of branch pipes (m)} \times \text{Additional charge volume per meter of pipe shown in the table (kg/m)})$$

※ If you obtain a negative figure as a result of calculation, no additional refrigerant needs to be charged.

Example When an 71V (single installation) is installed in a 30m long existing pipe system (liquid φ12.7, gas φ15.88), the quantity of refrigerant to charge additionally should be (30m-15m) x 0.06kg/m = 1.2 kg.

Example When an 71V (twin installation) is installed in a 30m long existing pipe system (main pipe length 20m, liquid φ12.7, gas φ15.88; pipe length after branching pipe 5m x 2, liquid φ9.52, gas φ12.7), the quantity of refrigerant to charge additionally should be (20m-15m) x 0.06kg/m + 5m x 2 x 0.06kg/m = 1.0 kg.

<Where the existing unit cannot be run for a cooling operation.>

Wash the pipe system or install a new pipe system.

● If you choose to wash the pipe system, contact our distributor in the area.

(2) Models FDC100-140VNX, 100-140VSX

PSC012D066H 
Inverter driven split PAC
100VN~140VN, 100VS~140VS
100VNX~140VNX, 100VSX~140VSX
Designed for R410A refrigerant



Ⓞ This installation manual deals with outdoor units and general installation specifications only. For indoor units, refer to page 42.
 Ⓞ When install the unit, be sure to check whether the selection of installation place, power source specifications, usage limitation (piping length, height differences between indoor and outdoor units, power source voltage and etc.) and installation spaces

SAFETY PRECAUTIONS

● We recommend you to read this "SAFETY PRECAUTIONS" carefully before the installation work in order to gain full advantage of the functions of the unit and to avoid malfunction due to mishandling.


● The precautions described below are divided into **⚠ WARNING** and **⚠ CAUTION**. The matters with possibilities leading to serious consequences such as death or serious personal injury due to erroneous handling are listed in the **⚠ WARNING** and the matters with possibilities leading to personal injury or damage of the unit due to erroneous handling including probability leading to serious consequences in some cases are listed in **⚠ CAUTION**. **These are very important precautions for safety. Be sure to observe all of them without fail.**

● The meaning of "Marks", used here are as shown below.

<p> Never do it under any circumstance.</p> <p>● For 3 phase power source outdoor unit, EN61000-3-2 is not applicable if consent by the utility company or notification to the utility company is given before usage.</p> <p>● 3 phase power source unit, both indoor and outdoor, is suitable for installation in a commercial and light industrial environment. If installed as a house-hold appliance, it could cause electromagnetic interference.</p> <p>● 5 and 6 HP units of single phase power source are equipment complying with IEC 61000-3-12.</p> <p>● Be sure to confirm no anomaly on the equipment by commissioning after completed installation and explain the operating methods as well as the maintenance methods of this equipment to the user according to the owner's manual.</p> <p>● Keep the installation manual together with owner's manual at a place where any user can read at any time. Moreover if necessary, ask to hand them to a new user.</p>	<p> Always do it according to the instruction</p>
---	--

Check before installation work

[Accessory]

	1 piece	knock-out hole protection
---	---------	---------------------------

- Model name and power source
- Refrigerant piping length
- Piping, wiring and miscellaneous small parts
- Indoor unit installation manual

WARNING

<p>⚠ Installation must be carried out by the qualified installer.</p> <p>If you install the system by yourself, it may cause serious troubles such as water leaks, electric shocks, fire and personal injury, as a result of a system malfunction.</p> <p>● Install the system in full accordance with the instruction manual.</p> <p>Incorrect installation may cause burst, personal injury, water leaks, electric shocks and fire.</p> <p>● Use the original accessories and the specified components for installation.</p> <p>If parts other than those prescribed by us are used, it may cause fall of the unit, water leaks, electric shocks, fire, refrigerant leak, substandard performance, control failure and personal injury.</p> <p>● When installing in small rooms, take prevention measures not to exceed the density limit of refrigerant in the event of leakage accordance with ISO5148.</p> <p>Consult the expert and prevention measures. If the density of refrigerant exceeds the limit in the event of leakage, lack of oxygen can occur, which can cause serious accidents.</p> <p>● Ventilate the working area well in the event of refrigerant leakage during installation.</p> <p>If the refrigerant comes into contact with naked flames, poisonous gas is produced.</p> <p>● After completed installation, check that no refrigerant leaks from the system.</p> <p>If refrigerant leaks into the room and comes into contact with an oven or other hot surface, poisonous gas is produced.</p> <p>● Hang up the unit at the specified points with ropes which can support the weight in fitting for portage. And to avoid pointing out of alignment, be sure to hang up the unit at 4-point support.</p> <p>An improper manner of portage such as 3-point support can cause death or serious personal injury due to falling of the unit.</p> <p>● Install the unit in a location with good support.</p> <p>Unstable installation locations can cause the unit to fall and cause material damage and personal injury.</p> <p>● Ensure the unit is stable when installed, so that it can withstand earthquakes and strong winds.</p> <p>Unstable installation locations can cause the unit to fall and cause material damage and personal injury.</p> <p>● The electrical installation must be carried out by the qualified electrician in accordance with "the norm for electrical work" and "national wiring regulation", and the system must be connected to the dedicated circuit.</p> <p>Power source with insufficient capacity and incorrect function done by improper work can cause electric shocks and fire.</p> <p>● Be sure to shut off the power before starting electrical work.</p> <p>Failure to shut off the power can cause electric shocks, unit failure or incorrect function of equipment.</p> <p>● Be sure to use the cables conforming to safety standard and cable ampacity for power distribution work.</p> <p>Unconformable cables can cause electric leak, abnormal heat production or fire.</p> <p>● Use the prescribed cables for electrical connection. Tighten the cables securely in terminal block and relieve the cables correctly to prevent loose connections or cable mountings can cause anomalous heat production or fire.</p> <p>● Arrange the wiring in the control box so that it cannot be pushed up further into the box. Install the service panel correctly.</p> <p>Incorrect installation may result in overheating and fire.</p>	<p>⚠ Do not perform brazing work in the airtight room</p> <p>It can cause lack of oxygen.</p> <p>● Use the prescribed pipes, flare nuts and tools for R410A.</p> <p>Using existing parts for R22 or R407C can cause the unit failure and serious accidents due to burst of the refrigerant circuit.</p> <p>● Tighten the flare nut by using double spanners and torque wrench according to prescribed method. Be sure not to tighten the flare nut too much.</p> <p>Loose flare connection or damage on the flare part by tightening with excess torque can cause burst or refrigerant leaks which may result in lack of oxygen.</p> <p>● Do not open the service valves for liquid line and gas line until completed refrigerant piping work, air tightness test and evacuation.</p> <p>If the compressor is operated in state of opening service valves before completed connection of refrigerant piping work, you may incur personal injury due to anomalous high pressure and air can be sucked into refrigerant circuit, which can cause burst or personal injury due to anomalously high pressure in the refrigerant circuit.</p> <p>● Only use prescribed optional parts. The installation must be carried out by the qualified installer.</p> <p>If you install the system by yourself, it can cause serious trouble such as water leaks, electric shocks, fire.</p> <p>● Do not perform any change of protective device itself or its setup condition</p> <p>The forced operation by short-circuiting protective device of pressure switch and temperature controller or the use of non specified component can cause fire or dust.</p> <p>● Be sure to switch off the power source in the event of installation, inspection or servicing.</p> <p>If the power source is not shut off, there is a risk of electric shocks, unit failure or personal injury due to the unexpected start of fan.</p> <p>● Consult the dealer or an expert regarding removal of the unit.</p> <p>Incorrect installation can cause water leaks, electric shocks or fire.</p> <p>● Stop the compressor before closing valve and disconnecting refrigerant pipes in case of pump down operation.</p> <p>If disconnecting refrigerant pipes in state of opening service valves before compressor stopping, you may incur frost bite or injury from an abrupt refrigerant outflow and air can be sucked, which can cause burst or personal injury due to anomalously high pressure in the refrigerant circuit.</p> <p>● Ensure that no air enters in the refrigerant circuit when the unit is installed and removed.</p> <p>If air enters in the refrigerant circuit, the pressure in the refrigerant circuit becomes too high, which can cause burst and personal injury.</p> <p>● Do not run the unit with removed panels or protections</p> <p>Touching rotating equipments, hot surfaces or high voltage parts can cause personal injury due to entrapment, burn or electric shocks.</p> <p>● Be sure to fix up the service panels.</p> <p>Incorrect fixing can cause electric shocks or fire due to intrusion of dust or water.</p> <p>● Do not perform any repairs or modifications by yourself. Consult the dealer if the unit requires repair.</p> <p>If you repair or modify the unit, it can cause water leaks, electric shocks or fire.</p>
---	---

	<p>● Carry out the electrical work for ground lead with care Do not connect the ground lead to the gas line, water line, lightning conductor or telephone line's ground lead. Incorrect grounding can cause unit faults such as electric shocks due to short-circuiting. Never connect the grounding wire to a gas pipe because if gas leaks, it could cause explosion or lightning.</p> <p>● Use the circuit breaker for all pole with correct capacity. Using the incorrect circuit breaker, it can cause the unit malfunction and fire.</p> <p>● Install isolator or disconnect switch on the power source wiring in accordance with the local codes and regulations. The isolator should be locked in accordance with EN62024-1.</p> <p>● Take care when carrying the unit by hand. If the unit weights more than 20kg, it must be carried by two or more persons. Do not carry by the plastic straps, always use the carry handle when carrying the unit by hand. Use gloves to minimize the risk of cuts by the aluminium fins.</p> <p>● Dispose of any packing materials correctly. Any remaining packing materials can cause personal injury as it contains nails and wood. And to avoid danger of suffocation, be sure to keep the plastic wrapper away from children and to dispose after use it up.</p> <p>● Pay attention not to damage the drain pan by weld sparks when welding work is done near the indoor unit. If the drain pan is damaged, it may cause water leakage. To prevent damage, keep the indoor unit in its packing or cover it.</p> <p>● Be sure to inspect the refrigerant pipes, do not touch to connect the ambient air ducts, air vents, and air filters. Insufficient insulation can cause condensation which can lead to moisture damage on the ceiling, floor, furniture and any other valuables.</p> <p>● Be sure to perform air tightness test by pressurizing with nitrogen gas after completed refrigerant piping work. If the density of refrigerant exceeds the limit in the event of refrigerant leakage in the small room, lack of oxygen can occur, which can cause serious accidents.</p> <p>● Perform installation work properly according to this installation manual. Improper installation can cause abnormal vibrations or increased noise generation.</p> <p>● Earth leakage breaker must be installed If the earth leakage breaker is not installed, it can cause fire or electric shocks.</p> <p>● Do not use any materials other than a fuse with the correct rating in the location where fuses are to be used. Connecting the circuit with copper wire or other metal thread can cause unit failure and fire.</p> <p>● Do not install the unit near the location where leakage of combustible gases can occur. If leaked gases accumulate around the unit, it can cause fire.</p> <p>● Do not install the unit where corrosive gas (such as sulfuric acid gas etc.) or combustible gas (such as thinner and petroleum gases) can accumulate or collect, or where volatile combustible substances are handled. Corrosive gas can cause corrosion of heat exchanger, breakage of plastic parts and etc. And combustible gas can cause fire.</p> <p>● Secure a space for installation, inspection and maintenance specified in the manual. Insufficient space can result in accident such as personal injury due to falling from the installation place.</p> <p>● When the outdoor unit is installed on a roof at a high place, provide permanent ladders and handrails along the access route and handrails around the outdoor unit. If safety facilities are not provided, it can cause personal injury due to falling from the installation place.</p> <p>● Do not install nor use the equipment that generates electromagnetic fields or high frequency harmonics Equipment such as inverters, standby generators, medical high frequency equipments and telecommunication equipments can affect the system, and cause malfunctions and breakdowns. The system can also affect medical equipment and telecommunication equipment, and obstructs its function or cause jamming.</p> <p>● Do not install the outdoor unit in a location where insects and small animals can inhabit. Insects and small animals can enter the electric parts and cause damage or fire. Instruct the user to keep the surroundings clean.</p>
	<p>● Do not use the base frame for outdoor unit which is corroded or damaged due to long periods of operation. Using an old and damaged base frame can cause the unit falling down and cause personal injury.</p> <p>● Do not install the unit in the locations listed below • Locations where carbon fiber, metal powder or any powder is floating. • Locations where any substances that can affect the unit such as sulphide gas, chloride gas, acid and alkaline can occur. • Vehicles and ships. • Aerosols or special sprays are often used. • Locations with direct exposure of oil mist and steam such as kitchen and machine plant. • Locations where any machines which generate high frequency harmonics are used. • Locations with salty atmospheres such as coastlines • Locations with heavy snow (if installed, be sure to provide base frame and snow hood mentioned in the manual) • Locations at high altitude (more than 1000m high) • Locations with ammoniac atmospheres (e.g. organic fertilizer). • Locations with calcium chloride (e.g. snow melting agent). • Locations where heat radiation from other heat source can affect the unit • Locations with any obstacles which can prevent inlet and outlet air of the unit • Locations where strong air blows against the air outlet of outdoor unit • Locations where air blows against the air outlet of outdoor unit It can cause remarkable decrease in performance, corrosion and damage of components, malfunction and fire.</p> <p>● Do not install the outdoor unit in the locations listed below. • Locations where discharged hot air or operating sound of the outdoor unit can bother neighborhood. • Locations where outlet air of the outdoor unit blows directly to an animal or plants. The outlet air can affect adversely to the plant etc. • Locations where vibration and operation sound generated by the outdoor unit can affect seriously (on the wall or at the place near bed room) • Locations where an equipment affected by high harmonics is placed. (TV set or radio receiver is placed within 5m) • Locations where drainage cannot run off safely. It can affect surrounding environment, and cause a claim</p> <p>● Do not use fire unit for special purposes such as storing books, cooling precision instruments and preservation of animals, plants or art. It can cause the damage of the items.</p> <p>● Do not touch any buttons with wet hands It can cause electric shocks</p> <p>● Do not touch any refrigerant pipes with your hands when the system is in operation. During operation the refrigerant pipes become extremely hot or extremely cold depending the operating condition, and it can cause burn injury or frost injury.</p> <p>● Do not clean up the unit with water It can cause electric shocks</p> <p>● Do not operate the outdoor unit with any article placed on it. You may incur property damage or personal injury from a fall of the article.</p> <p>● Do not step onto the outdoor unit. You may incur injury from a step or fall.</p>

Notabilia as a unit designed for R410A	
● Do not use any refrigerant other than R410A. R410A will rise to pressure about 1.6 times higher than that of a conventional refrigerant.	
● A cylinder containing R410A has a pink indication mark on the top.	
● A unit designed for R410A has adopted a different size indoor unit service valve charge port and a flare nut's parallel side measurement have also been altered to raise strength against pressure. Accordingly, you are required to arrange dedicated R410A tools listed in the table on the right before installing or servicing this unit.	
● Do not use a charge cylinder. The use of a charge cylinder will cause the refrigerant composition to change, which results in performance degradation.	
● In charging refrigerant, always take it out from a cylinder in the liquid phase.	
● All indoor units must be models designed exclusively for R410A. Check connectable indoor unit models in a catalog, etc. (A wrong indoor unit, if connected into the system, will impair proper system operation)	

1. HAULAGE AND INSTALLATION (Take particular care in carrying in or moving the unit, and always perform such an operation with two or more persons.)

CAUTION When a unit is hoisted with slings for haulage, take into consideration the offset of its gravity center position.
If not properly balanced, the unit can be thrown off-balance and fall.

1) Delivery

- Deliver the unit as close as possible to the installation site before removing it from the packaging.
- When some compelling reason necessitates the unpacking of the unit before it is carried in, use nylon slings or protective wood pieces so as not to damage the unit by ropes lifting it.

2) Portage

- The right hand side of the unit as viewed from the front (diffuser side) is heavier. A person carrying the right hand side must take heed of this fact. A person carrying the left hand side must hold with his right hand the handle provided on the front panel of the unit and with his left hand the corner column section.




Dedicated R410A tools	
a)	Gauge manifold
b)	Charge hose
c)	Electronic scale for refrigerant charging
d)	Torque wrench
e)	Flare tool
f)	Protrusion control copper pipe gauge
g)	Vacuum pump adapter
h)	Gas leak detector

3) Selection of installation location for the outdoor unit

- Be sure to select a suitable installation place in consideration of following conditions.
- A place where it is horizontal, stable, and can reduce the unit weight and not allow vibration transmission of the unit.
 - A place where it can be free from possibility of being damaged by vibration, noise or exhaust air from the unit.
 - A place where it can be free from possibility of oil splashes.
 - A place where it can be free from danger of flammable gas leakage.
 - A place where drain water can be disposed without any trouble.
 - A place where it is not exposed to direct sunlight.
 - A place where snow will not accumulate.
 - A place where the unit can be kept away 5m or more from TV set and/or radio receiver in order to avoid any radio or TV interference.
 - A place where good air circulation can be secured, and enough service space can be secured for maintenance and service of the unit safely.
 - A place where the unit will not be affected by electromagnetic waves and/or high-frequency waves generated by other equipment.
 - A place where chemical substances like sulfuric gas, chlorine gas, acid and alkali (including ammonia), which can harm the unit, are not present.
 - A place where strong wind will not blow against the outlet air blow of the unit.
 - Do not install the unit in places which exposed to sea breeze (e.g. coastal area) or calcium chloride (e.g. snow melting agent), exposed to ammonia substance (e.g. organic fertilizer).

4) Caution about selection of installation location

- (1) If the unit is installed in the area where the snow will accumulate, following measures are required.
 - The bottom plate of unit and intake, outlet may be blocked by snow.
 - Provide a snow hood to the outdoor unit on site.
- (2) Regarding outline of a snow hood, refer to our technical manual.

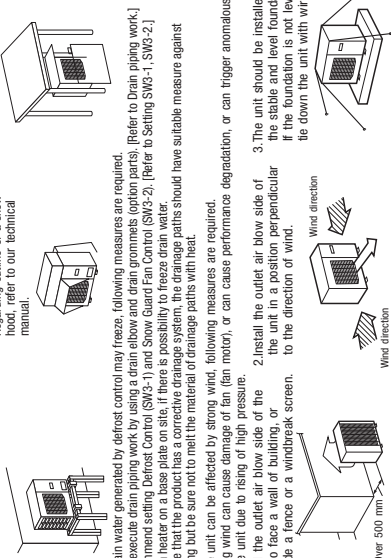

Since drain water generated by defrost control may freeze, following measures are required.

- Don't execute drain piping work by using a drain elbow and drain grommets (option parts). (Refer to Drain piping work.)
- Recommend setting Defrost Control (SW3-1) and Snow Guard Fan Control (SW3-2). (Refer to Setting SW3-1, SW3-2.)
- Attach heater on a base plate on site, if there is possibility to freeze drain water.


In case that the product has a corrective drainage system, the drainage paths should have suitable measure against freezing but be sure not to melt the material of drainage paths with heat.

- (2) If the unit can be affected by strong wind, following measures are required.
 - Strong wind can cause damage of fan (fan motor), or can cause performance degradation, or can trigger anomalous stop of the unit due to rising of high pressure.
 - Install the outlet air blow side of the unit to face a wall of building, or to the direction of wind.
 - Provide a fence or a windbreak screen.
- (3) The unit should be installed on the stable and level foundation. If the foundation is not level, tie down the unit with wires.

5) Installation space


- Walls surrounding the unit in the four sides are not acceptable.
- If there are any pipes or wires on the top of the unit, please refer to the "Piping" chapter.
- Where a drain of short-circuiting water exists, install guide flanges.
- When more than one unit are installed, provide sufficient intake space consciously so that short-circuiting may not occur.
- Where piping snow can bury the outdoor unit, provide proper snow guards.
- A barrier wall placed in front of the exhaust diffuser must not be higher than the unit.

Size	Average installation (mm)		
	I	II	III
L1	Open	Open	500
L2	300	5	Open
L3	150	300	150
L4	5	5	5



6) Installation

- Anchor bolt fixer position
- Notable for installation

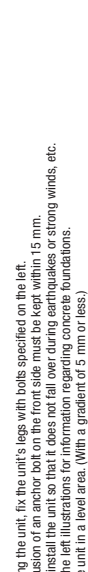

7) To run the unit for a cooling operation, when the outdoor temperature is -5°C or lower.

- When the outdoor air temperature is -5°C or lower, provide a snow hood to the outdoor unit on site.
- So that strong wind will not blow against the outdoor heat exchanger directly. Regarding outline of a snow hood, refer to our technical manual.


2. REFRIGERANT PIPING WORK

1) Restrictions on unit installation and use


- Check the following points in light of the indoor unit specifications and the installation site.
- Observe the following restrictions on unit installation and use. Improper installation can result in a compressor failure or performance degradation.

Descriptions	One-way pipe length difference from the first branching point to the indoor unit		Marked separately in the drawing	
	Model for outdoor units	Dimensional limitations	Single type	Twin type
One-way pipe length of refrigerant piping	140W, 125W, 100W, 80W, 60W, 40W, 30W, 20W	≤ 50m	L	L1, L1+L2, L3
	140W, 125W, 100W, 80W, 60W, 40W, 30W, 20W	≤ 100m	L	L1+L1+L2+L3
	140W, 125W, 100W, 80W, 60W, 40W, 30W, 20W	≤ 50m	L	L1+L1+L2+L3
	140W, 125W, 100W, 80W, 60W, 40W, 30W, 20W	≤ 100m	L	L1+L1+L2+L3
Main pipe length	140W, 140WS, 140W, 140WS, 140W, 140WS	≤ 50m	L	L
	140W, 125W, 100W, 80W, 60W, 40W, 30W, 20W	≤ 100m	L	L
One-way pipe length between the first branching point and the second branching point	140W, 140WS, 140W, 140WS, 140W, 140WS	≤ 5m	-	La
	140W, 125W, 100W, 80W, 60W, 40W, 30W, 20W	≤ 50m	-	L1, L2, L3
One-way pipe length after the first branching point	140W, 140WS, 140W, 140WS, 140W, 140WS	≤ 50m	-	L1 (1)
	140W, 125W, 100W, 80W, 60W, 40W, 30W, 20W	≤ 27m	-	L1+L2, L1+L3 (1)
One-way pipe length after the first branching point and second branching point	140W, 140WS, 140W, 140WS, 140W, 140WS	≤ 10m	-	-
	140W, 125W, 100W, 80W, 60W, 40W, 30W, 20W	≤ 10m	L1+L2	L1+L2, L1+L3 (1)
One-way pipe length difference from the first branching point to the indoor unit	140W, 140WS, 140W, 140WS, 140W, 140WS	≤ 10m	-	-
	140W, 125W, 100W, 80W, 60W, 40W, 30W, 20W	≤ 10m	L1+L2, L1+L3 (1)	L1+L2, L1+L3 (1)
Elevation difference between indoor and outdoor units	When the outdoor unit is positioned higher	≤ 30m	-	H
	When the outdoor unit is positioned lower	≤ 15m	-	H
Elevation difference between indoor units	-	≤ 0.9m	-	h
				IN, IZ, IS

< Single type >

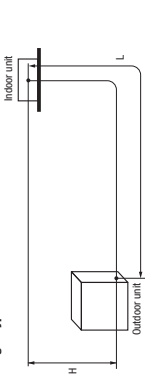

< Twin type >

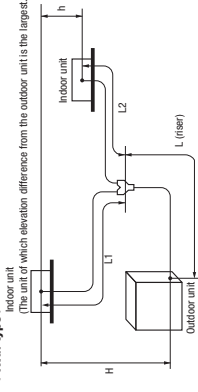

CAUTION

- The use restrictions appearing in the table above are applicable to the standard pipe size combinations shown in the table below. Where an existing pipe system is utilized, different one-way pipe length restrictions should apply depending on its pipe size. For more information, see "6. UTILIZATION OF EXISTING PIPING."
- With the triple pipe connection, the way of use is different when the difference of one-way pipe length after the first branching point is 3m to 10m. For details, refer to the above table and right figure.

Note (1) Install the indoor units so that L + L1 becomes the longest one-way pipe. Keep the pipe length difference between L1 and (La + L2) or (La + L3) within 10m.

2) Determination of pipe size

- Determine refrigerant pipe size pursuant to the following guidelines based on the indoor unit specifications.

	Model 100V		Model 125V		Model 140V	
	Gas pipe	Liquid pipe	Gas pipe	Liquid pipe	Gas pipe	Liquid pipe
Outdoor unit connected	Flare	Flare	Flare	Flare	Flare	Flare
	Flare	Flare	Flare	Flare	Flare	Flare
Refrigerant piping (Main pipe L)	Flare	Flare	Flare	Flare	Flare	Flare
	Flare	Flare	Flare	Flare	Flare	Flare
Indoor unit connected	Flare	Flare	Flare	Flare	Flare	Flare
	Flare	Flare	Flare	Flare	Flare	Flare
In the case of a single type	Flare	Flare	Flare	Flare	Flare	Flare
	Flare	Flare	Flare	Flare	Flare	Flare
In the case of a twin type	Flare	Flare	Flare	Flare	Flare	Flare
	Flare	Flare	Flare	Flare	Flare	Flare
In the case of a triple type A	Flare	Flare	Flare	Flare	Flare	Flare
	Flare	Flare	Flare	Flare	Flare	Flare
In the case of a triple type B	Flare	Flare	Flare	Flare	Flare	Flare
	Flare	Flare	Flare	Flare	Flare	Flare


CAUTION

- When the 50V or 60V model is connected as an indoor unit, always use φ9.52 liquid pipe for the branch (branching pipe - indoor unit) and a different size pipe for the main pipe. When the 125V model is connected as an indoor unit, always use φ12.7 liquid pipe for the branch (branching pipe - indoor unit) and a different size pipe for the main pipe. If a φ6.35 pipe is used for connection with a branching pipe, a refrigerant distribution disorder may occur, causing one of the indoor units to fail short of the rated capacity.
- A riser pipe must be a part of the main. A branching pipe set should be installed horizontally at a point as close to an indoor unit as possible. A branching part must be dressed with a heat-insulation material supplied as an accessory.
- For the details of installation work required at and near a branching area, see the installation manual supplied with your branching pipe set.

About brazing

Brazing must be performed under a nitrogen gas flow.

Without nitrogen gas, a large quantity of foreign matters (oxidized film) are created, causing a critical failure from capillary tube or expansion valve clogging.

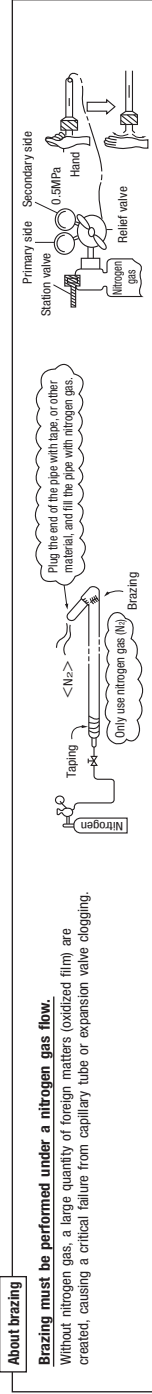

3) Refrigerant pipe wall thickness and material

- Select refrigerant pipes of the table shown on the right wall thickness and material as specified for each pipe size.
- This unit uses R410A. Always use 1/2H pipes having a 1.0mm or thicker wall for φ19.05 or larger pipes, because O-type pipes do not meet the pressure resistance requirement.

Pipe diameter (mm)	6.35	9.52	12.7	15.88	22.22	25.4	28.58
	Minimum pipe wall thickness (mm)	0.8	0.8	0.8	1.0	1.0	1.0

Pipe material*
 O-type pipe: O-type pipe; O-type pipe; O-type pipe; 1/2H-type pipe; 1/2H-type pipe; 1/2H-type pipe; 1/2H-type pipe

*Phosphorus deoxidized seamless copper pipe: C12207, JIS H 3300


4) On-site piping work

- Take care so that installed pipes may not touch components within a unit. If touching with an internal component, it will generate abnormal sounds and/or vibrations.
- First remove the screws (X mark) of the service panel and push it down into the direction of the arrow mark and then remove it by pulling it toward you.
- The pipe can be laid in any of the following directions: side right, front, rear, and downward.
- Remove a knock-out plate provided on the pipe penetration to open a minimum necessary area and attach an edging material supplied as an accessory by cutting it to an appropriate length before laying a pipe.
- Carry out the on-site piping work with the service valve fully closed.
- Give sufficient protection to a pipe end (compressed and brazed, or with an adhesive tape) so that water or foreign matters may not enter the piping.
- Bend a pipe to a radius as large as practical (R100-R150). Do not bend a pipe repeatedly to correct its form.
- Flare R410A pipes with a flare nut and catch. Flare dimensions are different from those for conventional R407C. Although we recommend the use of flaring tools designed specifically for R410A, conventional flaring tools can also be used by adjusting the measurement of protrusion B with a protrusion control gauge.
- The pipe should be anchored every 1.5m or less to isolate the vibration.
- Tighten a flare joint securely with a double spanner.

Do not apply force beyond proper fastening torque in tightening the flare nut.


Fix both liquid and gas service valves at the valve main bodies as illustrated on the right, and then tighten them, applying appropriate fastening torque.

Service valve size (mm)	Tightening torque (N·m)	Tightening angle (°)	Recommended length of a tool handle (mm)
φ6.35 (1/4")	14-18	45-60	150
φ9.52 (3/8")	34-42	30-45	200
φ12.7 (1/2")	49-61	30-45	250
φ15.88 (5/8")	68-82	15-20	300

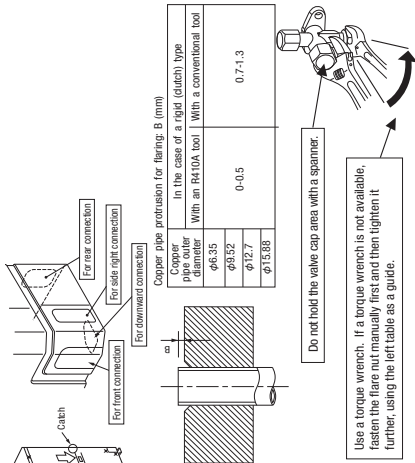


- Select pipes having a wall thickness larger than the specified minimum pipe thickness.

< Triple type A >

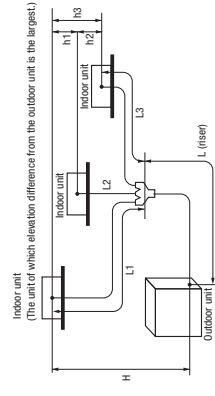


< Triple type B >

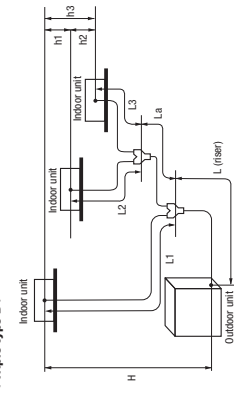

5) Air tightness test

- ① Although outdoor and indoor units themselves have been tested for air tightness at the factory, check the connecting pipes after the installation work for air tightness from the service valve's check joint equipped on the outdoor unit side. While conducting a test, keep the service valve shut all the time.
 - a) Raise the pressure to 0.5 MPa, and then stop. Leave it for five minutes to see if the pressure drops.
 - b) Then raise the pressure to 1.5 MPa, and stop. Leave it for five more minutes to see if the pressure drops.
 - c) Then raise the pressure to the specified level (4.15 MPa), and record the ambient temperature and the pressure.
 - d) If no pressure drop is observed with an installation pressurized to the specified level and left for about one day, it is acceptable. When the ambient temperature fall 1°C, the pressure also fall approximately 0.01 MPa. The pressure, if changed, should be compensated for.
 - e) If a pressure drop is observed in checking e) and a) - d), a leak exists somewhere. Find a leak by applying bubble test liquid to welded parts and flare joints and repair it. After repair, conduct an air-tightness test again.
- ② In conducting an air-tightness test, use nitrogen gas and pressurize the system with nitrogen gas from the gas side. Do not use a medium other than nitrogen gas under any circumstances.

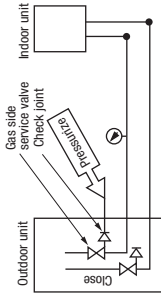

6) Evacuation

- <Work flow>
 - Run the vacuum pump for at least one hour after the vacuum gauge shows -101kPa or lower. (7.55mmHg or lower)
 - Confirm that the vacuum gauge indicator does not rise even if the system is left for one hour or more.
- When the system has remaining moisture inside or a leaky point, the vacuum gauge indicator will rise. Check the system for a leaky point and then draw air to create a vacuum again.

Pay attention to the following points in addition to the above for the R410A and compatible machines.

- To prevent a different oil from entering, assign dedicated tools, etc. to each refrigerant type. Under no circumstances must a gauge manifold and a charge hose in particular be shared with other refrigerant types (R22, R407C, etc.).
- Use a counterflow prevention adapter to prevent vacuum pump oil from entering the refrigerant system.

7) Additional refrigerant charge

- (1) Calculate a required refrigerant charge volume from the following table.

Item	Standard refrigerant charge volume (kg)	Pipe length for standard refrigerant charge volume (m)	Additional charge volume (kg) per meter of refrigerant piping (liquid pipe)	Refrigerant volume charged for shipment at the factory (kg)	Installation's pipe length (m) covered without additional refrigerant charge
Capacity					
100W~140W	2.0	0	0.06	3.8	30
100S~140SX	2.7			4.5	

Item	Standard refrigerant charge volume (kg)	Pipe length for standard refrigerant charge volume (m)	Additional charge volume (kg) (liquid pipe)		Refrigerant volume charged for shipment at the factory (kg)	Installation's pipe length (m) covered without additional refrigerant charge
			Main pipe	Branch pipe		
Capacity						
100W~140W	2.0	0	0.06	0.06	3.8	30
100S~140SX	2.7				4.5	

- A standard refrigerant charge volume means a refrigerant charge volume for an installation with 0m long refrigerant piping.
- This unit contains factory charged refrigerant covering 30m of refrigerant piping and additional refrigerant charge on the installation site is not required for an installation with up to 30m refrigerant piping.
- When refrigerant piping exceeds 30m, additionally charge an amount calculated from the pipe length and the above table for the portion in excess of 30m.
- When refrigerant piping is shorter than 3m, reduce refrigerant by 1kg from the factory charged volume and adjust to 2.8kg or 3.5kg.
- If an existing pipe system is used, a required refrigerant charge volume will vary depending on the liquid pipe size. For further information, see "6. UTILIZATION OF EXISTING PIPING."

Formula to calculate the volume of additional refrigerant required

$$\text{Additional charge volume (kg)} = (\text{Main pipe length (m)} - \text{Length covered without additional charge (m)}) \times 0.06 \text{ (kg/m)} + \text{Total length of branch pipes (m)} \times 0.06 \text{ (kg/m)}$$

*When an additional charge volume calculation result is negative, it is not necessary to charge refrigerant additionally.

- To charge refrigerant again, recover refrigerant from the system first and then charge the volume calculated from the above table (Standard refrigerant charge volume + additional charge volume for total pipe length).

(2) Charging refrigerant


- Since R410A refrigerant must be charged in the liquid phase, you should charge it, keeping the container cylinder upside down or using a refrigerant cylinder equipped with a siphon tube.
- Charge refrigerant always from the liquid side service port with the service valve shut. When you find it difficult to charge a required amount, fully open the outdoor unit valves on both liquid and gas sides and charge refrigerant from the gas (suction) side service port, while running the unit in the cooling mode. In doing so, care must be taken so that refrigerant may be discharged from the cylinder in the liquid phase all the time. When the cylinder valve is throttled down or a dedicated conversion tool to change liquid-phase refrigerant into mist is used to protect the compressor, however, adjust charge conditions so that refrigerant will gassy upon entering the unit.
- In charging refrigerant, always charge a calculated volume by using a scale to measure the charge volume.
- When refrigerant is charged with the unit being run, complete a charge operation within 30 minutes. Running the unit with an insufficient quantity of refrigerant for a long time can cause a compressor failure.

NOTE

Put down the refrigerant volume calculated from the pipe length onto the caution label attached on the back side of the service panel.


8) Heating and condensation prevention

- (1) Dress refrigerant pipes (both gas and liquid pipes) for heat insulation and prevention of dew condensation.
- (2) Use a heat insulating material that can withstand 120°C or a higher temperature. Poor heat insulating capacity can cause heat insulation problems or cable deterioration.
 - Improper heat insulation/anti-dew dressing can result in a water leak or dripping causing damage to household effects, etc.
 - All gas pipes must be securely heat insulated in order to prevent damage from dripping water that comes from the condensation formed on them during a cooling operation or personal injury from burns because their surface can reach quite a high temperature due to discharged gas flowing inside during a heating operation.
 - Wrap indoor units' flare joints with heat insulating parts (pipe cover) for heat insulation (both gas and liquid pipes)
 - Give heat insulation to both gas and liquid side pipes. Bundle a heat insulating material and a pipe tightly together so that no gaps may be left between them and wrap them together with a connecting cable by a dressing tape.
 - Although it is verified in a test that this air-conditioning unit shows satisfactory performance under JIS condensation test conditions, both gas and liquid pipes need to be dressed with 20 mm or thicker heat insulation materials above the ceiling where relative humidity exceeds 70%.

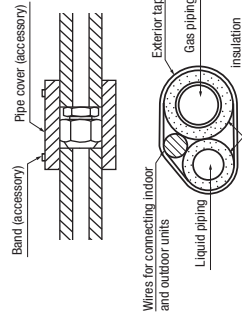


3. DRAIN PIPING WORK

- Execute drain piping by using a drain elbow and drain grommets supplied separately as option parts, where water drained from the outdoor unit is a problem.
- Water may drip where there is a larger amount of drain water. Seal around the drain elbow and drain grommets with putty or adequate caulking material.
- Condensed water may flow out from vicinity of service valve or connected pipes.
- Where you are likely to have several days of sub-zero temperatures in a row, do not use a drain elbow and drain grommets. (There is a risk of drain water freezing inside and blocking the drain.)
- Do not use drain elbow and grommet made of plastic for drain piping when base heater for outdoor unit is used. Plastic grommet and elbow will be damaged and burnt in worst case.
- Prepare another drain tray made of metallic material for collecting drain when base heater is used.

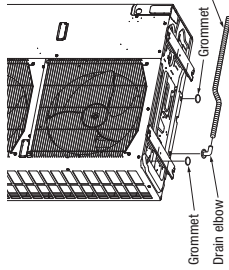

- When condensed water needs to be led to a drain, etc., install the unit on a flat base (supplied separately as an option part) or concrete blocks.
- Then, please secure space for the drain elbow and the drain hose.




4. ELECTRICAL WIRING WORK

For details of electrical cabling, refer to the indoor unit installation manual.

Electrical installation work must be performed by an electrical installation service provider, qualified by a power provider of the country. Electrical installation work must be executed according to the technical standards and other regulations applicable to electrical installations in the country.


- Do not use any supply cord lighter than one specified in parentheses for each type below.
 - braided cord (code designation 60245 IEC 51),
 - ordinary tough rubber sheathed cord (code designation 60245 IEC 53)
 - flat twin tinsel cord (code designation 60227 IEC 41);
- Do not use anything lighter than polychloroprene sheathed flexible cord (code designation 60245 IEC57) for supply cords of parts of appliances for outdoor use.
- Ground the unit. Do not connect the grounding wire to a gas pipe, water pipe, lightning rod or telephone grounding wire. If improper grounded, an electric shock or malfunction may result.
- Grounding wire must be connected before connecting the power cable. Provide a grounding wire longer than the power cable.
- The installation of an impulse withstanding type earth leakage breaker is necessary. A failure to install an earth leakage breaker can result in an accident such as an electric shock or a fire.

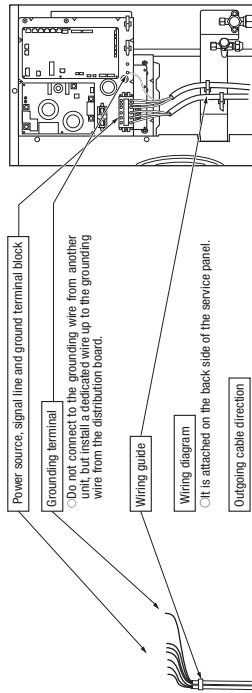

Model 100VN-140VN
100VS-140VS

Model 100VNX-140VNX
100VSX-140VSX

- Do not turn on the power until the electrical work is completed
- Do not use a condensative capacitor for power factor improvement under any circumstances. (It dose not improve power factor, while it can cause an abnormal overheat accident)
- For power source cables, use conduits.
- Do not lay electronic control cables (remote control and signaling wires) and other cables together outside the unit. Laying them together can result in the malfunctioning or a failure of the unit due to electric noises.
- Fasten cables so that may not touch the piping, etc.
- When cables are connected, make sure that all electrical components within the electrical component box are free of loose connector, coupling or terminal connection and then attach the cover securely. (Improper cover attachment can result in malfunctioning or a failure of the unit, if water penetrates into the box.)
- Always use a three-core cable for an indoor-outdoor connecting cable. Never use a shield cable.
- Connect a pair bearing a common terminal number with an indoor-outdoor connecting wire.
- In cabling, fasten cables securely with cable clamps so that no external force may work on terminal connections.
- Grounding terminals are provided in the control box.

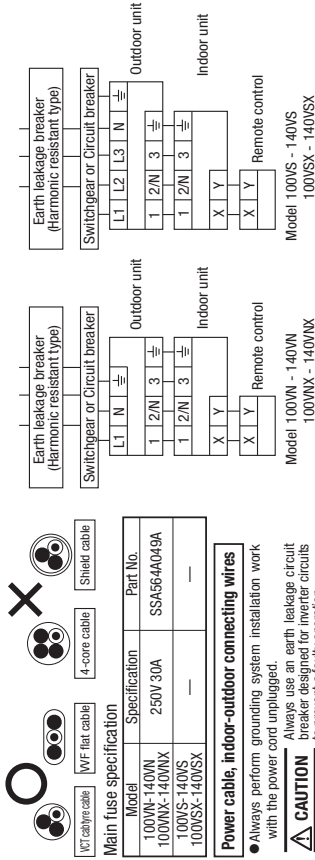

CAUTION
Always use an earth leakage circuit breaker designed for inverter circuits to prevent a faulty operation.

※At the connection with the duct type indoor unit.

Model	Power source	Power cable thickness(mm)	MAX. over current (A)	Cable length (m)	Grounding wire thickness	Indoor-outdoor wire thickness × number
100VN-140VN	Single phase 3 wire 220-240V 50Hz	5.5	24	25	φ 1.6mm	φ 1.6mm x 3
100VNX			26	23		
100VS-140VS	3 phase 4 wire 380-415V 50Hz	3.5	15	27	φ 1.6mm	φ 1.6mm x 3
100VSX-140VSX			18	23		

- The specifications shown in the above table are for units without heaters. For units with heaters, refer to the installation instructions or the construction instructions of the indoor unit.
- Switchgear or Circuit breaker capacity which is calculated from MAX. over current should be chosen along the regulations in each country.
- The cable specifications are based on the assumption that a metal or plastic conduit is used with no more than three cables contained in a conduit and a voltage drop is 2%. For an installation falling outside of these conditions, follow the internal cabling regulations. Adapt it to the regulation in effect in each country.

5. TEST RUN

⚠ WARNING

- Before conduct a test run, make sure that the service valves are closed.
- Turn on power 6 hours prior to a test run to energize the crank case heater.
- In case of the first operation after turning on power, even if the unit does not move for 30 minutes, it is not a breakdown.
- Always give a 3-minute or longer interval before you start the unit again whenever it is stopped.
- Removing the service panel will expose high-voltage live parts and high-temperature parts, which are quite dangerous. Take utmost care not to incur an electric shock or burns. Do not leave the unit with the service panel open.

⚠ CAUTION

- When you operate switches (SW3, SW5) for on-site setting, be careful not to touch a live part.
- You cannot check discharge pressure from the liquid service valve charge port.
- The 4-way valve (20S) is energized during a heating operation.
- When power source is cut off to reset the unit, give 3 or more minutes before you turn on power again after power is cut off. If this procedure is not observed in turning on power again, "Communication error between outdoor and indoor unit" may occur.

1) Test run method

- (1) A test run can be initiated from an outdoor unit by using SW3-3 and SW3-4, for on-site setting.
- (2) Switching SW3-3 to ON will start the compressor.
- (3) The unit will start a cooling operation, when SW3-4 is OFF or a heating operation, when SW3-4 is ON.
- (4) **Do not fail to switch SW3-3 to OFF when a test run is completed.**

2) Checking the state of the unit in operation

Use check joints provided on the piping before and after the four-way valve installed inside the outdoor unit for checking discharge pressure and suction pressure.
As indicated in the table shown on the right, pressure detected at each point will vary depending on whether a cooling or heating operation has been selected.

Check joint of the pipe	Charge port of the gas service valve
Cooling operation (High pressure)	Suction pressure (Low pressure)
Heating operation (Low pressure)	Discharge pressure (High pressure)

3) Setting SW3-1, SW3-2, on-site

- (1) Defrost control switching (SW3-1)
 - When this switch is turned ON, the unit will run in the defrost mode more frequently.
 - Set this switch to ON, when installed in a region where outdoor temperature falls below zero during the season the unit is run for a heating operation.
- (2) Snow guard fan control (SW3-2)
 - When this switch is turned on, the outdoor unit fan will run for 10 seconds in every 10 minutes, when outdoor temperature falls to 3°C or lower and the compressor is not running.
 - When the unit is used in a very snowy country, set this switch to ON.

4) Failure diagnosis in a test run

Error indicated on the remote control unit	Flashed circuit board LED (the cycles of 5 seconds)	Failure event	Action
E34	Red LED Blinking once	Open phase	Check power cables for loose contact or disconnection 1. Check whether the service valves are open. 2. If an error has been canceled when 3 minutes has elapsed since a compressor stop, you can restart the unit by effecting Check Reset from the remote control unit.
E40	Blinking once	CSHT activation or operation with service valves shut (occurs mainly during a heating operation)	
E49	Blinking once	Low pressure error or operation with service valves shut (occurs mainly during a cooling operation)	

- If an error code other than those listed above is indicated, refer to the wiring diagram of the outdoor unit and the indoor unit.

5) The state of the electronic expansion valve.

The following table illustrates the steady states of the electronic expansion valve.

	When power is turned on	When the unit comes to a normal stop	When the unit comes to an abnormal stop
Valve for a cooling operation	Complete shut position	During a heating operation	During a cooling operation
Valve for a heating operation	Full open position	Complete shut position	Full open position
	Full open position	Complete shut position	Full open position

6) Heed the following on the first operation after turning on the circuit breaker.

This outdoor unit may start in the standby mode (waiting for a compressor startup), which can continue up to 30 minutes, to prevent the oil level in the compressor from lowering on the first operation after turning on the circuit breaker. If that is the case, do not suspect a unit failure.


A failure to observe these instructions can result in a compressor breakdown.

- When you leave the outdoor unit with power supplied to it, be sure to close the panel.

Item No used in the installation manual	Item	Check item	Check
2	Refrigerant plumbing	If brazed, was it traced under a nitrogen gas flow? Were air-tightness test and vacuum extraction surely performed? Are test insulation materials installed on both liquid and gas pipes? Are service valves surely opened for both liquid and gas systems? Have you recorded the additional refrigerant charge volume and refrigerant pipe length on the panel's label? Is the unit free of cabling errors such as uncompleted connection, an absent or reversed phase? Are properly rated electrical equipments used for circuit breakers and cables? Doesn't cabling cross-connect between units, where more than one unit are installed? Do indoor-outdoor signal wires connect to remote control wires? Do indoor-outdoor connecting cables connect between the same terminal numbers? Are either VCT category cables or WF flat cables used for indoor-outdoor connecting cables? Does grounding satisfy the 2 type grounding type II grounding requirements? Are cables free of loose screws at their connection points? Are cables held down with cable clamps so that no external force works onto terminal connections? Is indoor unit installation work completed? Where a face cover should be attached onto an indoor unit, is the face cover attached to the indoor unit?	
4	Electric wiring		
—	Indoor unit		


- Always carry out a test run and check the following in order as listed.

Turn	The contents of operation	Check
①	Open the gas side service valve fully.	
②	Open the liquid side service valve fully.	
③	Close the panel.	
④	When a remote control unit is used for unit setup on the installation site, follow instructions for unit setup on the installation site with a remote control unit.	
⑤	SW3-3 ON / SW3-4 OFF: the unit will start a cooling operation. SW3-3 ON / SW3-4 ON: the unit will start a heating operation.	
⑥	When the unit starts operation, press the wind direction button provided on the remote control unit to check its operation.	
⑦	Place your hand before the indoor unit's diffuser to check whether cold (warm) winds come out in a cooling (heating) operation.	
⑧	Make sure that a red LED is not blinking.	
⑨	When you complete the test run, do not forget to turn SW3-3 to the OFF position.	
⑩	Where options are used, check their operation according to the respective instruction manuals.	

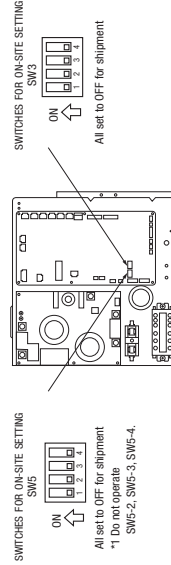

6. UTILIZATION OF EXISTING PIPING.

Check whether an existing pipe system is reusable or not by using the following flow chart.

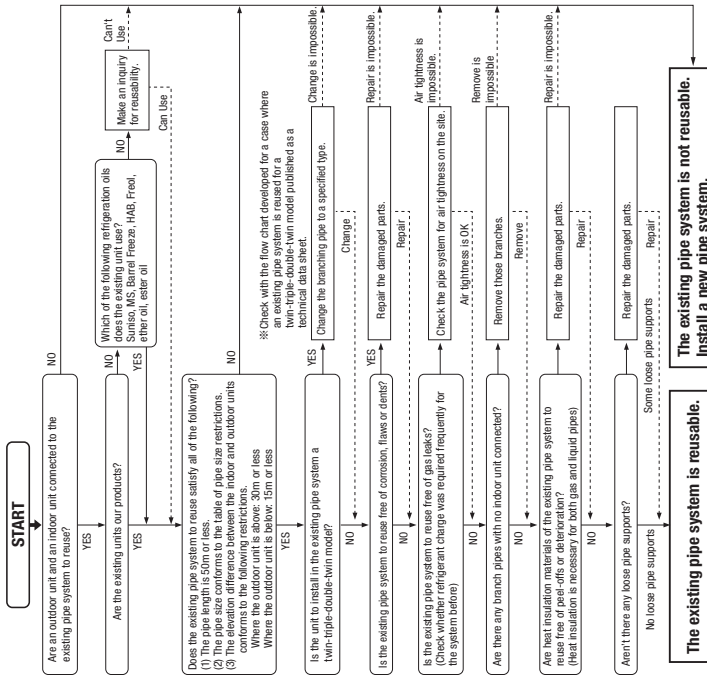

WARNING

<Where the existing unit can be run for a cooling operation.>

Carry out the following steps with the existing unit (in the order of (1), (2), (3) and (4))

- (1) Run the unit for 30 minutes for a cooling operation.
- (2) Stop the indoor fan and run the unit for 3 minutes for a cooling operation (returning liquid)
- (3) Close the liquid side service valve of the outdoor unit and pump down (refrigerant recovery) wash the pipe system or install a new pipe system.
- (4) Blow with nitrogen gas. ※ If discolored refrigeration oil or any foreign matters is discharged by the blow, wash the pipe system or install a new pipe system.
 - For the flare nut, do not use the old one, but use the one supplied with the outdoor unit.
 - Turn on-site setting switch SW5-1 to the ON position. (Where the gas pipe size is φ19.05)

<Where the existing unit cannot be run for a cooling operation.>

- Wash the pipe system or install a new pipe system.
- If you choose to wash the pipe system, contact our distributor in the area.

<Table of pipe size restrictions>

- : Standard pipe size
- △: Usable
- ×: Restricted to shorter pipe length limits
- ×: Not usable

Pipe size	Additional charging amount of refrigerant per 1m		0.08kg/m		0.06kg/m		0.05kg/m	
	Liquid pipe	Gas pipe	φ 9.52	φ 12.7	φ 15.88	φ 19.05	φ 25.4	φ 31.75
100WX	Usability	Usability	○	△	○	△	○	△
100WS	Maximum one-way pipe length	Length covered without additional charge	50	25	50	25	50	25
125WX	Usability	Usability	○	△	○	△	○	△
125WS	Maximum one-way pipe length	Length covered without additional charge	50	25	50	25	50	25
140WX	Usability	Usability	○	△	○	△	○	△
140WS	Maximum one-way pipe length	Length covered without additional charge	50	25	50	25	50	25

<Pipe system after the branching pipe>

Pipe size	Additional charging amount of refrigerant per 1m		After 1st branch ※4		After 2nd branch	
	Liquid pipe	Gas pipe	φ 9.52	φ 12.7	φ 9.52	φ 12.7
100V	Combination type	Combination of capacity	○	○	○	○
125V	Twin	50+50	○	○	○	○
140V	Twin	60+60	○	○	○	○
	Triple A	71+71	○	○	○	○
	Triple B	50+50+50	○	○	○	○

※1 Because of its insufficient pressure resistance, turn the dip switch SW5-1 provided on the outdoor unit board to the ON position for φ19.05 × t1.0. However, you need not turn the dip switch SW5-1 to the ON position, if 1/2H pipes or pipes having 1.2 or thicker walls are used.

※2 When the main pipe length exceeds 40m, a significant capacity drop may be experienced due to pressure loss in the liquid pipe system. Use φ12.7 for the liquid main.

※3 Keep the total pipe length, not one-way pipe length, below the specified maximum pipe length.

※4 Piping size after branch should be equal or smaller than main pipe size.

※5 Piping size from first branch to indoor unit should be φ9.52 (Liquid) / φ12.7 (Gas).

● When refrigerant piping is shorter than 3m, reduce refrigerant by 1kg from factory charged volume.

● Any combinations of pipe sizes not listed in the table or marked with × in the table are not usable.

<The model types of existing units of which branching pipes are reusable.>

Models later than type 8.

● FDC * * * 8 □ □ □ □

● FDCP * * * 8 □ □ □ □

The branching pipes used with models other than those listed above are not reusable because of their insufficient pressure resistance. Please use our genuine branching pipes for R410A.

● * * * are numbers representing horsepower. □ □ □ □ is an alphanumeric letter.


Formula to calculate additional charge volume

$$\text{Additional charge volume (kg)} = \text{Main pipe length (m)} \times \text{Length covered without additional charge shown in the table (m)} \times \text{Additional charge volume per meter of pipe shown in the table (kg/m)} + \text{Length covered without additional charge} \times \text{Additional charge volume per meter of pipe shown in the table (kg/m)}$$

※ If you obtain a negative figure as a result of calculation, no additional refrigerant needs to be charged.
 Example) When an 140V (single installation) is installed in a 20m long existing pipe system (liquid φ12.7, gas φ19.05), the quantity of refrigerant to charge additionally should be (20m-15m) × 0.08kg/m = 0.4 kg.

1.9.5 Instructions for branching pipe set (DIS-WA1, WB1, TA1, TB1)

For R410A

PSB012D865 




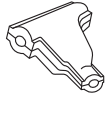
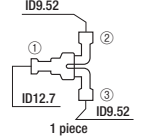
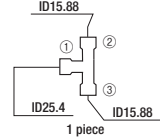
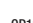
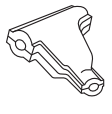
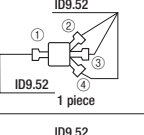
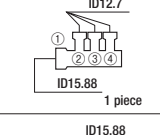
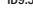

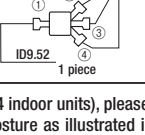
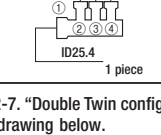

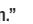

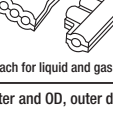
WARNING / CAUTION

- This set is for R410A refrigerant.
- Select a branching pipe set correctly rated for the combined total capacity of connected indoor units and install it according to this manual. An improperly installed branching pipe set can cause degraded performance or an abnormal unit stop.
- Provide good heat insulation to the pipes by following instructions contained in this manual.
- Improper heat insulation can result in degraded performance or a water leak accident from condensation.
- Please make sure that only parts supplied as accessories or the manufacturer's approved parts are used in installing the unit, because a leak of refrigerant can result in a lack-of-oxygen accident, if it reaches a concentration beyond the tolerable limit.

This manual explains how to use a branching pipe set that is indispensable in connecting pipes for a twin/triple/double-twin configuration installation (system). For the details of piping work, unit installation work and electrical installation work, please refer to the installation manuals and installation guides supplied with your outdoor and indoor units.

1. Branching pipe set specifications


- (1) Please make sure that you have chosen the right branching pipe set and the specifications of the parts contained in it by checking with the table below.
- (2) Connect pipes as illustrated in the table below. The pipe from an outdoor unit must be brazed to the pipe connection port "①" and the pipes from indoor units to "②," "③" and "④."

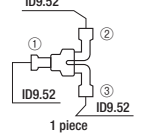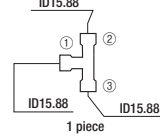Branching pipe set type	Supported outdoor/indoor unit combinations		Part lists			
	Outdoor unit model	Indoor unit model	Branching pipe set for a liquid pipe	Branching pipe set for a gas pipe	Different diameter pipe joint	Heat insulation material
DIS-WA1 (Two-way branching set)	3HP	1.5HP + 1.5HP			Joint A ID9.52  2 pieces Flare joint (for indoor unit side connection)	
	4HP	2HP + 2HP 1.5HP + 2.5HP				
	5HP	2.5HP + 2.5HP 2HP + 3HP				
	6HP	3HP + 3HP 2HP + 4HP				
DIS-WB1 (Two-way branching set)	8HP	4HP + 4HP 3HP + 5HP			Joint C OD12.7  1 piece ID9.52	
	10HP	5HP + 5HP				
DIS-TA1 (Three-way branching set)	6HP	2HP + 2HP + 2HP			Joint A ID9.52  3 pieces Flare joint (for indoor unit side connection)	
DIS-TB1 (Three-way branching set)	8HP	3HP + 3HP + 3HP			Joint A ID9.52  2 pieces Flare joint (for indoor unit side connection) Joint B OD15.88  1 piece ID12.7 Joint D ID12.7  1 piece OD9.52	

- (3) To connect pipes for a Double Twin installation (involving 4 indoor units), please see 2-7. "Double Twin configuration."
- (4) A branching pipe set must always be installed into the posture as illustrated in the drawing below.

ID stands for inner diameter and OD, outer diameter.

< Posture to install into >

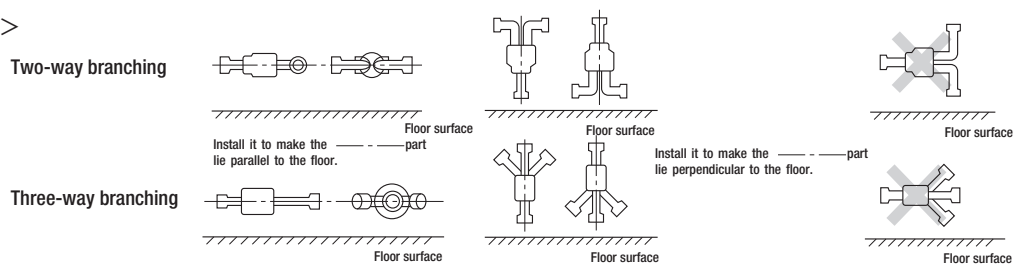

2. Pipe connecting procedure

Braze the different diameter pipe joint found in the set matching the connected outdoor and indoor unit capacities according to the instructions set out below.



CAUTION

In connecting an indoor unit of which capacity is 1.5HP, 2HP or 2.5HP, always use a $\phi 9.52$ liquid pipe to connect to the branching pipe (branching pipe – indoor unit).
In connecting to an indoor unit (liquid pipe side: $\phi 6.35$), use the different diameter pipe joint A supplied with the set and follow the procedure set out below.




2-1 DIS-WA1

Supported combinations		Liquid branching pipe	Gas branching pipe
Outdoor unit model	Indoor unit model		
3HP	1.5HP + 1.5HP		
4HP	2HP + 2HP		
	1.5HP + 2.5HP		
5HP	2.5HP + 2.5HP		
	2HP + 3HP		
6HP	3HP + 3HP		
	2HP + 4HP		

Note When connect the indoor unit of an old model that is shown in the model list, use the joint supplied with the branch piping set like ※A

2-5. Triple type for same model/same capacity or different model/same capacity

When the difference in length of pipes after the branch is longer than 3m and shorter than 10m

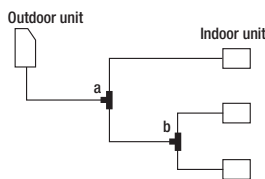

Outdoor unit model	Indoor unit model	Branching pipe	Branching pipe set type	Liquid branching pipe	Gas branching pipe
6HP	2HP + 2HP + 2HP	a	DIS-WA1		
		b			
8HP	3HP + 3HP + 3HP	a	DIS-WB1		
		b	DIS-WA1		

2-2 DIS-WB1

Supported combinations		Liquid branching pipe	Gas branching pipe
Outdoor unit model	Indoor unit model		
8HP	3HP + 5HP		
	4HP + 4HP		
10HP	5HP + 5HP		

2-3 DIS-TA1

Applicable to the difference in length of pipes after the branch being less than 3m
* Connection is not allowed when the difference in length of pipes is larger than 3m.

Supported combinations		Liquid branching pipe	Gas branching pipe
Outdoor unit model	Indoor unit model		
6HP	2HP + 2HP + 2HP		

2-4 DIS-TB1


Applicable to the difference in length of pipes after the branch being less than 3 m
* Connection is not allowed when the difference in length of pipes is larger than 3 m.









Supported combinations		Liquid branching pipe	Gas branching pipe
Outdoor unit model	Indoor unit model		
8HP	3HP + 3HP + 3HP		

2-6. Triple type for same model/different capacity or different model/different capacity

Applicable to the difference in length of pipes after the branch being less than 3m

* Connection is not allowed when the difference in length of pipes is larger than 3m.

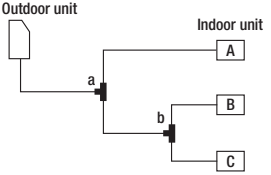

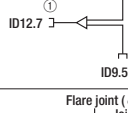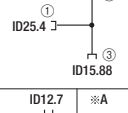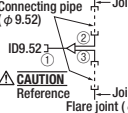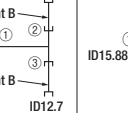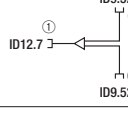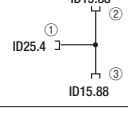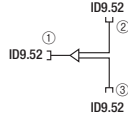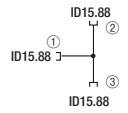Outdoor unit model	Indoor unit model	Branching pipe	Branching pipe set type	Liquid branching pipe	Gas branching pipe
10HP	2.5HP+2.5HP+5HP	a	DIS-WB1		
		b	DIS-WA1		
10HP	3HP+3HP+4HP	a	DIS-WB1		
		b	DIS-WA1		




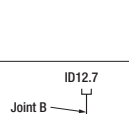
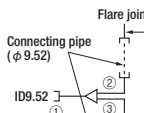
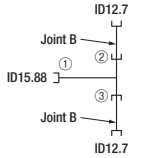
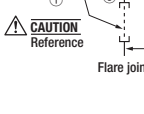
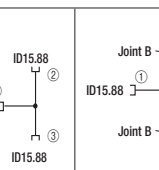
Connecting position


Outdoor unit model	Indoor unit model	A	B	C
10HP	2.5HP+2.5HP+5HP	5HP	2.5HP	2.5HP
	3HP+3HP+4HP	4HP	3HP	3HP

Note When connect the indoor unit of an old model that is shown in the model list, use the joint supplied with the branch piping set like ※ A.

2-7. Double Twin type

Pipes should be connected as follows for a Double Twin installation (4 connected indoor units. The capacity of an outdoor unit available for this configuration is either 8HP or 10HP only):

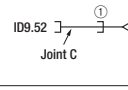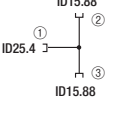
Outdoor unit capacity	Indoor unit capacity	Branching pipe	Branching pipe set type	Outdoor unit model	Liquid branching pipe	Gas branching pipe
8HP	2HP × 4 units	a	DIS-WB1	8HP		
10HP	2.5HP × 4 units			10HP		
		b	DIS-WA1	8HP		
				10HP		

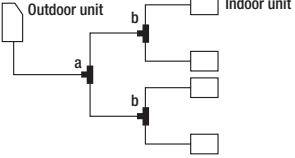

Note When connect the indoor unit of an old model that is shown in the model list, use the joint supplied with the branch piping set like ※ A.


3. Heat insulation work

- (1) Condensation can also occur on liquid pipes with this model. Please provide good heat insulation to both liquid and gas pipes.
- (2) For the heat insulation of a branching pipe, always use the heat insulation material supplied with the set and provide heat insulation according to the instructions set out below.

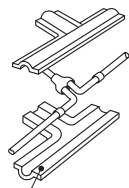

1. It has an adhesive layer on the entire inner face. Remove a separator and wrap it around the branching pipe.

Heat insulation material (for pipe insulation, etc.) to be procured locally

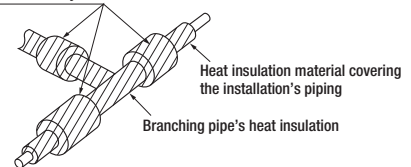

2. Apply a heat insulation material (to be procured locally) to the joint between the branching pipe's heat insulation and the heat insulation material covering the installation's piping as described above and wrap a tape over the gap shown as a hatched (///) area to complete dressing of the piping.

1.10 TECHNICAL INFORMATION

Model FDT71VNXVH


Information to identify the model(s) to which the information relates to:				If function includes heating: Indicate the heating season the information relates to. Indicated values should relate to one heating season at a time. Include at least the heating season 'Average'.			
Indoor unit model name		FDT71VH		Average(mandatory)		Yes	
Outdoor unit model name		FDC71VNX		Warmer(if designated)		No	
Function(indicate if present)				Colder(if designated)			
cooling		Yes					
heating		Yes					
Item	symbol	value	unit	Item	symbol	value	class
Design load				Seasonal efficiency and energy efficiency class			
cooling	Pdesignc	7.1	kW	cooling	SEER	5.72	A+
heating / Average	Pdesignh	5.8	kW	heating / Average	SCOP/A	4.34	A+
heating / Warmer	Pdesignh	-	kW	heating / Warmer	SCOP/W	-	-
heating / Colder	Pdesignh	-	kW	heating / Colder	SCOP/C	-	-
Declared capacity at outdoor temperature Tdesignh				Back up heating capacity at outdoor temperature Tdesignh			
heating / Average (-10°C)	Pdh	5.8	kW	heating / Average (-10°C)	elbu	0	kW
heating / Warmer (2°C)	Pdh	-	kW	heating / Warmer (2°C)	elbu	-	kW
heating / Colder (-22°C)	Pdh	-	kW	heating / Colder (-22°C)	elbu	-	kW
Declared capacity for cooling, at indoor temperature 27(19)°C and outdoor temperature Tj				Declared energy efficiency ratio, at indoor temperature 27(19)°C and outdoor temperature Tj			
Tj=35°C	Pdc	7.10	kW	Tj=35°C	EERd	3.62	-
Tj=30°C	Pdc	5.05	kW	Tj=30°C	EERd	5.60	-
Tj=25°C	Pdc	3.30	kW	Tj=25°C	EERd	8.40	-
Tj=20°C	Pdc	3.00	kW	Tj=20°C	EERd	12.42	-
Declared capacity for heating / Average season, at indoor temperature 20°C and outdoor temperature Tj				Declared coefficient of performance / Average season, at indoor temperature 20°C and outdoor temperature Tj			
Tj=-7°C	Pdh	5.10	kW	Tj=-7°C	COPd	3.05	-
Tj=2°C	Pdh	3.10	kW	Tj=2°C	COPd	4.27	-
Tj=7°C	Pdh	2.00	kW	Tj=7°C	COPd	5.35	-
Tj=12°C	Pdh	2.25	kW	Tj=12°C	COPd	6.95	-
Tj=bivalent temperature	Pdh	5.80	kW	Tj=bivalent temperature	COPd	2.66	-
Tj=operating limit	Pdh	4.95	kW	Tj=operating limit	COPd	2.19	-
Declared capacity for heating / Warmer season, at indoor temperature 20°C and outdoor temperature Tj				Declared coefficient of performance / Warmer season, at indoor temperature 20°C and outdoor temperature Tj			
Tj=2°C	Pdh	-	kW	Tj=2°C	COPd	-	-
Tj=7°C	Pdh	-	kW	Tj=7°C	COPd	-	-
Tj=12°C	Pdh	-	kW	Tj=12°C	COPd	-	-
Tj=bivalent temperature	Pdh	-	kW	Tj=bivalent temperature	COPd	-	-
Tj=operating limit	Pdh	-	kW	Tj=operating limit	COPd	-	-
Declared capacity for heating / Colder season, at indoor temperature 20°C and outdoor temperature Tj				Declared coefficient of performance / Colder season, at indoor temperature 20°C and outdoor temperature Tj			
Tj=-7°C	Pdh	-	kW	Tj=-7°C	COPd	-	-
Tj=2°C	Pdh	-	kW	Tj=2°C	COPd	-	-
Tj=7°C	Pdh	-	kW	Tj=7°C	COPd	-	-
Tj=12°C	Pdh	-	kW	Tj=12°C	COPd	-	-
Tj=bivalent temperature	Pdh	-	kW	Tj=bivalent temperature	COPd	-	-
Tj=operating limit	Pdh	-	kW	Tj=operating limit	COPd	-	-
Tj=-15°C	Pdh	-	kW	Tj=-15°C	COPd	-	-
Bivalent temperature				Operating limit temperature			
heating / Average	Tbiv	-10	°C	heating / Average	Tol	-20	°C
heating / Warmer	Tbiv	-	°C	heating / Warmer	Tol	-	°C
heating / Colder	Tbiv	-	°C	heating / Colder	Tol	-	°C
Cycling interval capacity				Cycling interval efficiency			
for cooling	Pcyc	-	kW	for cooling	EERcyc	-	-
for heating	Pcyc	-	kW	for heating	COPcyc	-	-
Degradation coefficient				Degradation coefficient			
cooling	Cdc	0.25	-	heating	Cdh	0.25	-
Electric power input in power modes other than 'active mode'				Annual electricity consumption			
off mode	Poff	15	W	cooling	Qce	435	kWh/a
standby mode	Psb	15	W	heating / Average	Qhe	1873	kWh/a
thermostat-off mode	Pto(cooling)	13	W	heating / Warmer	Qhe	-	kWh/a
crankcase heater mode	Pto(heating)	50	W	heating / colder	Qhe	-	kWh/a
	Pck	23	W				
Capacity control(indicate one of three options)				Other items			
fixed		No		Sound power level(indoor)	Lwa	58	dB(A)
staged		No		Sound power level(outdoor)	Lwa	66	dB(A)
variable		Yes		Global warming potential	GWP	2088	kgCO ₂ eq.
				Rated air flow(indoor)	-	1680	m ³ /h
				Rated air flow(outdoor)	-	3600	m ³ /h
Contact details for obtaining more information	Name and address of the manufacturer or of its authorised representative. Mitsubishi Heavy Industries Air-Conditioning Europe, Ltd. 5 The Square, Stockley Park, Uxbridge, Middlesex, UB11 1ET, United kingdom						

Model FDT100VNXVH

Information to identify the model(s) to which the information relates to:				If function includes heating: Indicate the heating season the information relates to. Indicated values should relate to one heating season at a time. Include at least the heating season 'Average'.			
Indoor unit model name		FDT100VH		Average(mandatory)		Yes	
Outdoor unit model name		FDC100VNX		Warmer(if designated)		No	
Function(indicate if present)				Colder(if designated)			
cooling		Yes					
heating		Yes					
Item				Item			
symbol		value		symbol		value	
unit				class			
Design load				Seasonal efficiency and energy efficiency class			
cooling		Pdesignc 10.0 kW		cooling		SEER 5.90 A+	
heating / Average		Pdesignh 11.2 kW		heating / Average		SCOP/A 4.32 A+	
heating / Warmer		Pdesignh - kW		heating / Warmer		SCOP/W - -	
heating / Colder		Pdesignh - kW		heating / Colder		SCOP/C - -	
				unit			
Declared capacity at outdoor temperature Tdesignh				Back up heating capacity at outdoor temperature Tdesignh			
heating / Average (-10°C)		Pdh 11.2 kW		heating / Average (-10°C)		elbu 0 kW	
heating / Warmer (2°C)		Pdh - kW		heating / Warmer (2°C)		elbu - kW	
heating / Colder (-22°C)		Pdh - kW		heating / Colder (-22°C)		elbu - kW	
Declared capacity for cooling, at indoor temperature 27(19)°C and outdoor temperature Tj				Declared energy efficiency ratio, at indoor temperature 27(19)°C and outdoor temperature Tj			
Tj=35°C		Pdc 10.00 kW		Tj=35°C		EERd 4.00 -	
Tj=30°C		Pdc 7.30 kW		Tj=30°C		EERd 5.64 -	
Tj=25°C		Pdc 5.13 kW		Tj=25°C		EERd 8.15 -	
Tj=20°C		Pdc 5.38 kW		Tj=20°C		EERd 10.60 -	
Declared capacity for heating / Average season, at indoor temperature 20°C and outdoor temperature Tj				Declared coefficient of performance / Average season, at indoor temperature 20°C and outdoor temperature Tj			
Tj=-7°C		Pdh 9.90 kW		Tj=-7°C		COPd 2.95 -	
Tj=2°C		Pdh 5.80 kW		Tj=2°C		COPd 4.30 -	
Tj=7°C		Pdh 4.10 kW		Tj=7°C		COPd 5.40 -	
Tj=12°C		Pdh 4.80 kW		Tj=12°C		COPd 6.40 -	
Tj=bivalent temperature		Pdh 11.20 kW		Tj=bivalent temperature		COPd 2.62 -	
Tj=operating limit		Pdh 9.70 kW		Tj=operating limit		COPd 2.17 -	
Declared capacity for heating / Warmer season, at indoor temperature 20°C and outdoor temperature Tj				Declared coefficient of performance / Warmer season, at indoor temperature 20°C and outdoor temperature Tj			
Tj=2°C		Pdh - kW		Tj=2°C		COPd - -	
Tj=7°C		Pdh - kW		Tj=7°C		COPd - -	
Tj=12°C		Pdh - kW		Tj=12°C		COPd - -	
Tj=bivalent temperature		Pdh - kW		Tj=bivalent temperature		COPd - -	
Tj=operating limit		Pdh - kW		Tj=operating limit		COPd - -	
Declared capacity for heating / Colder season, at indoor temperature 20°C and outdoor temperature Tj				Declared coefficient of performance / Colder season, at indoor temperature 20°C and outdoor temperature Tj			
Tj=-7°C		Pdh - kW		Tj=-7°C		COPd - -	
Tj=2°C		Pdh - kW		Tj=2°C		COPd - -	
Tj=7°C		Pdh - kW		Tj=7°C		COPd - -	
Tj=12°C		Pdh - kW		Tj=12°C		COPd - -	
Tj=bivalent temperature		Pdh - kW		Tj=bivalent temperature		COPd - -	
Tj=operating limit		Pdh - kW		Tj=operating limit		COPd - -	
Tj=-15°C		Pdh - kW		Tj=-15°C		COPd - -	
Bivalent temperature				Operating limit temperature			
heating / Average		Tbiv -10 °C		heating / Average		Tol -20 °C	
heating / Warmer		Tbiv - °C		heating / Warmer		Tol - °C	
heating / Colder		Tbiv - °C		heating / Colder		Tol - °C	
Cycling interval capacity				Cycling interval efficiency			
for cooling		Pcycc - kW		for cooling		EERcyc - -	
for heating		Pcyh - kW		for heating		COPcyc - -	
Degradation coefficient				Degradation coefficient			
cooling		Cdc 0.25 -		heating		Cdh 0.25 -	
Electric power input in power modes other than 'active mode'				Annual electricity consumption			
off mode		Poff 15 W		cooling		Qce 594 kWh/a	
standby mode		Psb 15 W		heating / Average		Qhe 3634 kWh/a	
thermostat-off mode		Pto(cooling) 25 W		heating / Warmer		Qhe - kWh/a	
		Pto(heating) 68 W		heating / colder		Qhe - kWh/a	
crankcase heater mode		Pck 23 W					
Capacity control(indicate one of three options)				Other items			
fixed		No		Sound power level(indoor)		Lwa 62 dB(A)	
staged		No		Sound power level(outdoor)		Lwa 70 dB(A)	
variable		Yes		Global warming potential		GWP 2088 kgCO ₂ eq.	
				Rated air flow(indoor)		- 2220 m ³ /h	
				Rated air flow(outdoor)		- 6000 m ³ /h	
Contact details for obtaining more information				Name and address of the manufacturer or of its authorised representative.			
				Mitsubishi Heavy Industries Air-Conditioning Europe, Ltd.			
				5 The Square, Stockley Park, Uxbridge, Middlesex, UB11 1ET, United kingdom			

Model FDT100VSXVH

Information to identify the model(s) to which the information relates to:				If function includes heating: Indicate the heating season the information relates to. Indicated values should relate to one heating season at a time. Include at least the heating season 'Average'.			
Indoor unit model name		FDT100VH		Average (mandatory)		Yes	
Outdoor unit model name		FDC100VSX		Warmer (if designated)		No	
Function (indicate if present)				Colder (if designated)			
cooling		Yes		Colder (if designated)		No	
heating		Yes					
Item	symbol	value	unit	Item	symbol	value	class
Design load				Seasonal efficiency and energy efficiency class			
cooling	Pdesignc	10.0	kW	cooling	SEER	5.90	A+
heating / Average	Pdesignh	11.2	kW	heating / Average	SCOP/A	4.32	A+
heating / Warmer	Pdesignh	-	kW	heating / Warmer	SCOP/W	-	-
heating / Colder	Pdesignh	-	kW	heating / Colder	SCOP/C	-	-
Declared capacity at outdoor temperature Tdesignh				Back up heating capacity at outdoor temperature Tdesignh			
heating / Average (-10°C)	Pdh	11.2	kW	heating / Average (-10°C)	elbu	0	kW
heating / Warmer (2°C)	Pdh	-	kW	heating / Warmer (2°C)	elbu	-	kW
heating / Colder (-22°C)	Pdh	-	kW	heating / Colder (-22°C)	elbu	-	kW
Declared capacity for cooling, at indoor temperature 27(19)°C and outdoor temperature Tj				Declared energy efficiency ratio, at indoor temperature 27(19)°C and outdoor temperature Tj			
Tj=35°C	Pdc	10.00	kW	Tj=35°C	EERd	4.00	-
Tj=30°C	Pdc	7.30	kW	Tj=30°C	EERd	5.64	-
Tj=25°C	Pdc	5.13	kW	Tj=25°C	EERd	8.15	-
Tj=20°C	Pdc	5.38	kW	Tj=20°C	EERd	10.60	-
Declared capacity for heating / Average season, at indoor temperature 20°C and outdoor temperature Tj				Declared coefficient of performance / Average season, at indoor temperature 20°C and outdoor temperature Tj			
Tj=-7°C	Pdh	9.90	kW	Tj=-7°C	COPd	2.95	-
Tj=2°C	Pdh	5.80	kW	Tj=2°C	COPd	4.30	-
Tj=7°C	Pdh	4.10	kW	Tj=7°C	COPd	5.40	-
Tj=12°C	Pdh	4.80	kW	Tj=12°C	COPd	6.40	-
Tj=bivalent temperature	Pdh	11.20	kW	Tj=bivalent temperature	COPd	2.62	-
Tj=operating limit	Pdh	9.70	kW	Tj=operating limit	COPd	2.17	-
Declared capacity for heating / Warmer season, at indoor temperature 20°C and outdoor temperature Tj				Declared coefficient of performance / Warmer season, at indoor temperature 20°C and outdoor temperature Tj			
Tj=2°C	Pdh	-	kW	Tj=2°C	COPd	-	-
Tj=7°C	Pdh	-	kW	Tj=7°C	COPd	-	-
Tj=12°C	Pdh	-	kW	Tj=12°C	COPd	-	-
Tj=bivalent temperature	Pdh	-	kW	Tj=bivalent temperature	COPd	-	-
Tj=operating limit	Pdh	-	kW	Tj=operating limit	COPd	-	-
Declared capacity for heating / Colder season, at indoor temperature 20°C and outdoor temperature Tj				Declared coefficient of performance / Colder season, at indoor temperature 20°C and outdoor temperature Tj			
Tj=-7°C	Pdh	-	kW	Tj=-7°C	COPd	-	-
Tj=2°C	Pdh	-	kW	Tj=2°C	COPd	-	-
Tj=7°C	Pdh	-	kW	Tj=7°C	COPd	-	-
Tj=12°C	Pdh	-	kW	Tj=12°C	COPd	-	-
Tj=bivalent temperature	Pdh	-	kW	Tj=bivalent temperature	COPd	-	-
Tj=operating limit	Pdh	-	kW	Tj=operating limit	COPd	-	-
Tj=-15°C	Pdh	-	kW	Tj=-15°C	COPd	-	-
Bivalent temperature				Operating limit temperature			
heating / Average	Tbiv	-10	°C	heating / Average	Tol	-20	°C
heating / Warmer	Tbiv	-	°C	heating / Warmer	Tol	-	°C
heating / Colder	Tbiv	-	°C	heating / Colder	Tol	-	°C
Cycling interval capacity				Cycling interval efficiency			
for cooling	Pcycc	-	kW	for cooling	EERcyc	-	-
for heating	Pcyh	-	kW	for heating	COPcyc	-	-
Degradation coefficient				Degradation coefficient			
cooling	Cdc	0.25	-	heating	Cdh	0.25	-
Electric power input in power modes other than 'active mode'				Annual electricity consumption			
off mode	Poff	15	W	cooling	Qce	594	kWh/a
standby mode	Psb	15	W	heating / Average	Qhe	3634	kWh/a
thermostat-off mode	Pto(cooling)	25	W	heating / Warmer	Qhe	-	kWh/a
	Pto(heating)	68	W	heating / colder	Qhe	-	kWh/a
crankcase heater mode	Pck	23	W				
Capacity control (indicate one of three options)				Other items			
fixed		No		Sound power level (indoor)	Lwa	62	dB(A)
staged		No		Sound power level (outdoor)	Lwa	70	dB(A)
variable		Yes		Global warming potential	GWP	2088	kgCO ₂ eq.
				Rated air flow (indoor)	-	2220	m ³ /h
				Rated air flow (outdoor)	-	6000	m ³ /h
Contact details for obtaining more information	Name and address of the manufacturer or of its authorised representative. Mitsubishi Heavy Industries Air-Conditioning Europe, Ltd. 5 The Square, Stockley Park, Uxbridge, Middlesex, UB11 1ET, United Kingdom						



Model FDT125VNXVH

Model(s) : FDC125VNX / FDT125VH			
Outdoor side heat exchanger of air conditioner : air			
Indoor side heat exchanger of air conditioner : air			
Type : vapour compression			
if applicable : electric motor			
Item	Symbol	Value	Unit
Rated cooling capacity	Prated,c	12.5	kW
Declared cooling capacity for part load at given outdoor temperatures Tj and indoor 27°C/19°C(dry/wet bulb)			
Tj=+35°C	Pdc	12.5	kW
Tj=+30°C	Pdc	9.2	kW
Tj=+25°C	Pdc	5.9	kW
Tj=+20°C	Pdc	5.5	kW
Degradation coefficient for air conditioners**	Cdc	0.25	-
Power consumption in other than 'active mode'			
Off mode	P _{OFF}	0.015	kW
Thermostat-off mode	P _{TO}	0.025	kW
Other items			
Capacity control		variable	
Sound power level, outdoor	L _{WA}	70.0	dB
If engine driven: Emissions of nitrogen oxides	NOx ***	-	mg/kWh fuel input GCV
GWP of the refrigerant		2088	kgCO ₂ eq. (100years)
Seasonal space cooling energy efficiency ηs,c			
		244.3	%
Declared energy efficiency ratio or gas utilization efficiency / auxiliary energy factor for part load at given outdoor temperatures Tj			
Tj=+35°C	EERd or GUEc,bin / AEFc,bin	365.0	%
Tj=+30°C	EERd or GUEc,bin / AEFc,bin	518.0	%
Tj=+25°C	EERd or GUEc,bin / AEFc,bin	754.0	%
Tj=+20°C	EERd or GUEc,bin / AEFc,bin	1040.0	%
Crankcase heater mode PCK			
		0.023	kW
Standby mode PSB			
		0.015	kW
For air-to-air air conditioner: air flow-rate,outdoor measured			
		6000	m ³ /h
Contact details Mitsubishi heavy industries thermal systems,LTD			
** If Cdc is not determined by measurement then the default degradation coefficient air conditioners shall be 0,25.			
*** from 26 September 2018			
Where information relates to multi-split air conditioners,the test result and performance data be obtained on the basis of the performance of the outdoor unit, with a combination of indoor unit(s) recommended by the manufacturer or importer.			

Information to identify the model(s) to which the information relates :				FDC125VNX / FDT125VH			
Outdoor side heat exchanger of heat pump :				air			
Indoor side heat exchanger of heat pump :				air			
Indication if the heater is equipped with a supplementary heater :				No			
if applicable :				electric motor			
Parameters shall be declared for the average heating season , parameters for the warmer and colder heating seasons are optional.							
Item	Symbol	Value	Unit	Item	Symbol	Value	Unit
Rated heating capacity	Prated,h	14.0	kW	Seasonal space heating energy efficiency ηs,h		160.4	%
Declared heating capacity for part load at indoor temperature 20°C and outdoor temperature Tj				Declared coefficient of performance or gas utilization efficiency / auxiliary energy factor for part load at given outdoor temperatures Tj			
Tj=-7°C	Pdh	10.1	kW	Tj=-7°C	COPd or GUEh,bin / AEFh,bin	301.0	%
Tj=+2°C	Pdh	6.1	kW	Tj=+2°C	COPd or GUEh,bin / AEFh,bin	381.0	%
Tj=+7°C	Pdh	4.3	kW	Tj=+7°C	COPd or GUEh,bin / AEFh,bin	541.0	%
Tj=+12°C	Pdh	4.5	kW	Tj=+12°C	COPd or GUEh,bin / AEFh,bin	645.0	%
Tbiv=bivalent temperature	Pdh	11.4	kW	Tbiv=bivalent temperature	COPd or GUEh,bin / AEFh,bin	250.0	%
TOL=operation limit	Pdh	9.0	kW	TOL=operation limit	COPd or GUEh,bin / AEFh,bin	225.0	%
For air-to-water heat pumps : Tj=-15°C (if TOL < -20°C)	Pdh	-	kW	For air-to-water heat pumps:Tj=-15°C (if TOL < -20°C)	COPd or GUEh,bin / AEFh,bin	-	%
Bivalent temperature	Tbiv	-10.0	°C	For water-to-air heat pumps:Operation limit Ta temperature		-	°C
Degradation coefficient heat pumps**	Cdh	0.25	-				
Power consumption in modes other than 'active mode'				Supplementary heater back-up heating capacity			
Off mode	P _{OFF}	0.020	kW		elbu	-	kW
Thermostat-off mode	P _{TO}	0.074	kW	Type of energy input Standby mode	P _{SB}	0.020	kW
Crankcase heater mode	P _{CK}	0.023	kW				
Other items				For air-to-air heat pumps: air flow-rate,outdoor measured			
Capacity control		variable				6000	m³/h
Sound power level, outdoor measured	L _{WA}	70.0	dB	For water-/brine-to-air heat pumps : Rated brine or water flow-rate, outdoor side heat exchanger		-	m³/h
Emissions of nitrogen oxides(if applicable)	NOx ***	-	mg/kWh fuel input GCV				
GWP of the refrigerant		2088	kgCO ₂ eq.(100years)				
Contact details				Mitsubishi heavy industries thermal systems,LTD			
** If Cdh is not determined by measurement then the default degradation coefficient air conditioners shall be 0.25.							
*** from 26 September 2018							
Where information relates to multi-split air conditioners,the test result and performance data be obtained on the basis of the performance of the outdoor unit, with a combination of indoor unit(s) recommended by the manufacturer or importer.							

Model FDT125VSXVH

Model(s) : FDC125VSX / FDT125VH			
Outdoor side heat exchanger of air conditioner : air			
Indoor side heat exchanger of air conditioner : air			
Type : vapour compression			
if applicable : electric motor			
Item	Symbol	Value	Unit
Rated cooling capacity	Prated,c	12.5	kW
Seasonal space cooling energy efficiency $\eta_{s,c}$			
		244.3	%
Declared cooling capacity for part load at given outdoor temperatures Tj and indoor 27°C/19°C(dry/wet bulb)			
Tj=+35°C	Pdc	12.5	kW
Tj=+30°C	Pdc	9.2	kW
Tj=+25°C	Pdc	5.9	kW
Tj=+20°C	Pdc	5.5	kW
Degradation coefficient for air conditioners**	Cdc	0.25	-
Declared energy efficiency ratio or gas utilization efficiency / auxiliary energy factor for part load at given outdoor temperatures Tj			
Tj=+35°C	EERd or GUEc,bin / AEFc,bin	365.0	%
Tj=+30°C	EERd or GUEc,bin / AEFc,bin	518.0	%
Tj=+25°C	EERd or GUEc,bin / AEFc,bin	754.0	%
Tj=+20°C	EERd or GUEc,bin / AEFc,bin	1040.0	%
Power consumption in other than 'active mode'			
Off mode	P _{OFF}	0.015	kW
Thermostat-off mode	P _{TO}	0.025	kW
Crankcase heater mode PCK 0.023 kW			
Standby mode PSB 0.015 kW			
Other items			
Capacity control		variable	
Sound power level, outdoor	L _{WA}	70.0	dB
If engine driven: Emissions of nitrogen oxides	NOx ***	-	mg/kWh fuel input GCV
GWP of the refrigerant		2088	kgCO ₂ eq. (100years)
For air-to-air conditioner: air flow-rate,outdoor measured 6000 m ³ /h			
Contact details Mitsubishi heavy industries thermal systems,LTD			
** If Cdc is not determined by measurement then the default degradation coefficient air conditioners shall be 0,25.			
*** from 26 September 2018			
Where information relates to multi-split air conditioners,the test result and performance data be obtained on the basis of the performance of the outdoor unit, with a combination of indoor unit(s) recommended by the manufacturer or importer.			

Information to identify the model(s) to which the information relates :				FDC125VSX / FDT125VH			
Outdoor side heat exchanger of heat pump :				air			
Indoor side heat exchanger of heat pump :				air			
Indication if the heater is equipped with a supplementary heater :				No			
if applicable :				electric motor			
Parameters shall be declared for the average heating season , parameters for the warmer and colder heating seasons are optional.							
Item	Symbol	Value	Unit	Item	Symbol	Value	Unit
Rated heating capacity	Prated,h	14.0	kW	Seasonal space heating energy efficiency ηs,h		158.4	%
Declared heating capacity for part load at indoor temperature 20°C and outdoor temperature Tj				Declared coefficient of performance or gas utilization efficiency / auxiliary energy factor for part load at given outdoor temperatures Tj			
Tj=-7°C	Pdh	12.4	kW	Tj=-7°C	COPd or GUEh,bin / AEFh,bin	279.0	%
Tj=+2°C	Pdh	7.5	kW	Tj=+2°C	COPd or GUEh,bin / AEFh,bin	385.0	%
Tj=+7°C	Pdh	4.9	kW	Tj=+7°C	COPd or GUEh,bin / AEFh,bin	525.0	%
Tj=+12°C	Pdh	4.5	kW	Tj=+12°C	COPd or GUEh,bin / AEFh,bin	658.0	%
Tbiv=bivalent temperature	Pdh	14.0	kW	Tbiv=bivalent temperature	COPd or GUEh,bin / AEFh,bin	240.0	%
TOL=operation limit	Pdh	10.9	kW	TOL=operation limit	COPd or GUEh,bin / AEFh,bin	215.0	%
For air-to-water heat pumps : Tj=-15°C (if TOL < -20°C)	Pdh	-	kW	For air-to-water heat pumps:Tj=-15°C (if TOL < -20°C)	COPd or GUEh,bin / AEFh,bin	-	%
Bivalent temperature	Tbiv	-10.0	°C	For water-to-air heat pumps:Operation limit Ta temperature		-	°C
Degradation coefficient heat pumps**	Cdh	0.25	-				
Power consumption in modes other than 'active mode'				Supplementary heater back-up heating capacity			
Off mode	P _{OFF}	0.020	kW		elbu	-	kW
Thermostat-off mode	P _{TO}	0.074	kW	Type of energy input Standby mode	P _{SB}	0.020	kW
Crankcase heater mode	P _{CK}	0.023	kW				
Other items				For air-to-air heat pumps: air flow-rate,outdoor measured			
Capacity control		variable				6000	m³/h
Sound power level, outdoor measured	L _{WA}	70.0	dB	For water-/brine-to-air heat pumps : Rated brine or water flow-rate, outdoor side heat exchanger		-	m³/h
Emissions of nitrogen oxides(if applicable)	NOx ***	-	mg/kWh fuel input GCV				
GWP of the refrigerant		2088	kgCO ₂ eq. (100years)				
Contact details				Mitsubishi heavy industries thermal systems,LTD			
** If Cdh is not determined by measurement then the default degradation coefficient air conditioners shall be 0.25.							
*** from 26 September 2018							
Where information relates to multi-split air conditioners,the test result and performance data be obtained on the basis of the performance of the outdoor unit, with a combination of indoor unit(s) recommended by the manufacturer or importer.							

Model FDT140VNXVH

Model(s) : FDC140VNX / FDT140VH			
Outdoor side heat exchanger of air conditioner : air			
Indoor side heat exchanger of air conditioner : air			
Type : vapour compression			
if applicable : electric motor			
Item	Symbol	Value	Unit
Rated cooling capacity	Prated,c	14.0	kW
Seasonal space cooling energy efficiency $\eta_{s,c}$		235.9	%
Declared cooling capacity for part load at given outdoor temperatures Tj and indoor 27°C/19°C(dry/wet bulb)		Declared energy efficiency ratio or gas utilization efficiency / auxiliary energy factor for part load at given outdoor temperatures Tj	
Tj=+35°C	Pdc	14.0	kW
Tj=+30°C	Pdc	10.3	kW
Tj=+25°C	Pdc	6.6	kW
Tj=+20°C	Pdc	5.5	kW
Degradation coefficient for air conditioners**	Cdc	0.25	-
Power consumption in other than 'active mode'		Crankcase heater mode	
Off mode	P _{OFF}	0.015	kW
Thermostat-off mode	P _{TO}	0.025	kW
Other items		Standby mode	
Capacity control		variable	
Sound power level, outdoor	L _{WA}	72.0	dB
If engine driven: Emissions of nitrogen oxides	NOx ***	-	mg/kWh fuel input GCV
GWP of the refrigerant		2088	kgCO ₂ eq. (100years)
For air-to-air conditioner: air flow-rate,outdoor measured		6000	m ³ /h
Contact details Mitsubishi heavy industries thermal systems.LTD			
** If Cdc is not determined by measurement then the default degradation coefficient air conditioners shall be 0,25.			
*** from 26 September 2018			
Where information relates to multi-split air conditioners,the test result and performance data be obtained on the basis of the performance of the outdoor unit, with a combination of indoor unit(s) recommended by the manufacturer or importer.			

Information to identify the model(s) to which the information relates :				FDC140VNX / FDT140VH			
Outdoor side heat exchanger of heat pump :				air			
Indoor side heat exchanger of heat pump :				air			
Indication if the heater is equipped with a supplementary heater :				No			
if applicable :				electric motor			
Parameters shall be declared for the average heating season , parameters for the warmer and colder heating seasons are optional.							
Item	Symbol	Value	Unit	Item	Symbol	Value	Unit
Rated heating capacity	Prated,h	16.0	kW	Seasonal space heating energy efficiency ηs,h		159.3	%
Declared heating capacity for part load at indoor temperature 20°C and outdoor temperature Tj				Declared coefficient of performance or gas utilization efficiency / auxiliary energy factor for part load at given outdoor temperatures Tj			
Tj=-7°C	Pdh	11.5	kW	Tj=-7°C	COPd or GUEh,bin / AEFh,bin	289.0	%
Tj=+2°C	Pdh	7.0	kW	Tj=+2°C	COPd or GUEh,bin / AEFh,bin	380.0	%
Tj=+7°C	Pdh	4.5	kW	Tj=+7°C	COPd or GUEh,bin / AEFh,bin	534.0	%
Tj=+12°C	Pdh	4.7	kW	Tj=+12°C	COPd or GUEh,bin / AEFh,bin	655.0	%
Tbiv=bivalent temperature	Pdh	13.0	kW	Tbiv=bivalent temperature	COPd or GUEh,bin / AEFh,bin	248.0	%
TOL=operation limit	Pdh	10.9	kW	TOL=operation limit	COPd or GUEh,bin / AEFh,bin	205.0	%
For air-to-water heat pumps : Tj=-15°C (if TOL < -20°C)	Pdh	-	kW	For air-to-water heat pumps:Tj=-15°C (if TOL < -20°C)	COPd or GUEh,bin / AEFh,bin	-	%
Bivalent temperature	Tbiv	-10.0	°C	For water-to-air heat pumps:Operation limit Ta temperature		-	°C
Degradation coefficient heat pumps**	Cdh	0.25	-				
Power consumption in modes other than 'active mode'				Supplementary heater back-up heating capacity			
Off mode	P _{OFF}	0.015	kW		elbu	-	kW
Thermostat-off mode	P _{TO}	0.070	kW	Type of energy input Standby mode	P _{SB}	0.015	kW
Crankcase heater mode	P _{CK}	0.025	kW				
Other items				For air-to-air heat pumps: air flow-rate,outdoor measured			
Capacity control		variable				6000	m³/h
Sound power level, outdoor measured	L _{WA}	72.0	dB	For water-/brine-to-air heat pumps : Rated brine or water flow-rate, outdoor side heat exchanger		-	m³/h
Emissions of nitrogen oxides(if applicable)	NOx ***	-	mg/kWh fuel input GCV				
GWP of the refrigerant		2088	kgCO ₂ eq. (100years)				
Contact details				Mitsubishi heavy industries thermal systems,LTD			
** If Cdh is not determined by measurement then the default degradation coefficient air conditioners shall be 0.25.							
*** from 26 September 2018							
Where information relates to multi-split air conditioners,the test result and performance data be obtained on the basis of the performance of the outdoor unit, with a combination of indoor unit(s) recommended by the manufacturer or importer.							

Model FDT140VSXVH

Model(s) : FDC140VSX / FDT140VH							
Outdoor side heat exchanger of air conditioner : air							
Indoor side heat exchanger of air conditioner : air							
Type : vapour compression							
if applicable : electric motor							
Item	Symbol	Value	Unit	Item	Symbol	Value	Unit
Rated cooling capacity	Prated,c	14.0	kW	Seasonal space cooling energy efficiency ηs,c		241.5	%
Declared cooling capacity for part load at given outdoor temperatures Tj and indoor 27°C/19°C(dry/wet bulb)				Declared energy efficiency ratio or gas utilization efficiency / auxiliary energy factor for part load at given outdoor temperatures Tj			
Tj=+35°C	Pdc	14.0	kW	Tj=+35°C	EERd or GUEc,bin / AEFc,bin	329.0	%
Tj=+30°C	Pdc	10.3	kW	Tj=+30°C	EERd or GUEc,bin / AEFc,bin	502.0	%
Tj=+25°C	Pdc	6.6	kW	Tj=+25°C	EERd or GUEc,bin / AEFc,bin	736.0	%
Tj=+20°C	Pdc	5.5	kW	Tj=+20°C	EERd or GUEc,bin / AEFc,bin	1077.0	%
Degradation coefficient for air conditioners**	Cdc	0.25	-				
Power consumption in other than 'active mode'				Crankcase heater mode			
Off mode	P _{OFF}	0.015	kW	Standby mode	P _{SB}	0.015	kW
Thermostat-off mode	P _{TO}	0.025	kW				
Other items				For air-to-air air conditioner:			
Capacity control		variable		air flow-rate,outdoor measured		6000	m ³ /h
Sound power level, outdoor	L _{WA}	72.0	dB				
If engine driven: Emissions of nitrogen oxides	NOx ***	-	mg/kWh fuel input GCV				
GWP of the refrigerant		2088	kgCO ₂ eq. (100years)				
Contact details		Mitsubishi heavy industries thermal systems,LTD					
** If Cdc is not determined by measurement then the default degradation coefficient air conditioners shall be 0,25.							
*** from 26 September 2018							
Where information relates to multi-split air conditioners,the test result and performance data be obtained on the basis of the performance of the outdoor unit, with a combination of indoor unit(s) recommended by the manufacturer or importer.							

Information to identify the model(s) to which the information relates :				FDC140VSX / FDT140VH			
Outdoor side heat exchanger of heat pump :				air			
Indoor side heat exchanger of heat pump :				air			
Indication if the heater is equipped with a supplementary heater :				No			
if applicable :				electric motor			
Parameters shall be declared for the average heating season , parameters for the warmer and colder heating seasons are optional.							
Item	Symbol	Value	Unit	Item	Symbol	Value	Unit
Rated heating capacity	Prated,h	16.0	kW	Seasonal space heating energy efficiency ηs,h		156.7	%
Declared heating capacity for part load at indoor temperature 20°C and outdoor temperature Tj				Declared coefficient of performance or gas utilization efficiency / auxiliary energy factor for part load at given outdoor temperatures Tj			
Tj=-7°C	Pdh	13.7	kW	Tj=-7°C	COPd or GUEh,bin / AEFh,bin	271.0	%
Tj=+2°C	Pdh	8.4	kW	Tj=+2°C	COPd or GUEh,bin / AEFh,bin	383.0	%
Tj=+7°C	Pdh	5.4	kW	Tj=+7°C	COPd or GUEh,bin / AEFh,bin	517.0	%
Tj=+12°C	Pdh	4.5	kW	Tj=+12°C	COPd or GUEh,bin / AEFh,bin	661.0	%
Tbiv=bivalent temperature	Pdh	15.5	kW	Tbiv=bivalent temperature	COPd or GUEh,bin / AEFh,bin	229.0	%
TOL=operation limit	Pdh	11.9	kW	TOL=operation limit	COPd or GUEh,bin / AEFh,bin	209.0	%
For air-to-water heat pumps : Tj=-15°C (if TOL < -20°C)	Pdh	-	kW	For air-to-water heat pumps:Tj=-15°C (if TOL < -20°C)	COPd or GUEh,bin / AEFh,bin	-	%
Bivalent temperature	Tbiv	-10.0	°C	For water-to-air heat pumps:Operation limit Ta temperature		-	°C
Degradation coefficient heat pumps**	Cdh	0.25	-				
Power consumption in modes other than 'active mode'				Supplementary heater back-up heating capacity			
Off mode	P _{OFF}	0.015	kW		elbu	-	kW
Thermostat-off mode	P _{TO}	0.070	kW	Type of energy input Standby mode	P _{SB}	0.015	kW
Crankcase heater mode	P _{CK}	0.025	kW				
Other items				For air-to-air heat pumps: air flow-rate,outdoor measured			
Capacity control		variable				6000	m³/h
Sound power level, outdoor measured	L _{WA}	72.0	dB	For water-/brine-to-air heat pumps : Rated brine or water flow-rate, outdoor side heat exchanger		-	m³/h
Emissions of nitrogen oxides(if applicable)	NOx ***	-	mg/kWh fuel input GCV				
GWP of the refrigerant		2088	kgCO ₂ eq. (100years)				
Contact details				Mitsubishi heavy industries thermal systems,LTD			
** If Cdh is not determined by measurement then the default degradation coefficient air conditioners shall be 0.25.							
*** from 26 September 2018							
Where information relates to multi-split air conditioners,the test result and performance data be obtained on the basis of the performance of the outdoor unit, with a combination of indoor unit(s) recommended by the manufacturer or importer.							

Model FDT140VNXPVH

Model(s) : FDC140VNX / FDT71VH (x2 units)							
Outdoor side heat exchanger of air conditioner : air							
Indoor side heat exchanger of air conditioner : air							
Type : vapour compression							
if applicable : electric motor							
Item	Symbol	Value	Unit	Item	Symbol	Value	Unit
Rated cooling capacity	Prated,c	14.0	kW	Seasonal space cooling energy efficiency ηs,c		263.5	%
Declared cooling capacity for part load at given outdoor temperatures Tj and indoor 27°C/19°C(dry/wet bulb)				Declared energy efficiency ratio or gas utilization efficiency / auxiliary energy factor for part load at given outdoor temperatures Tj			
Tj=+35°C	Pdc	14.0	kW	Tj=+35°C	EERd or GUEc,bin / AEFc,bin	371.0	%
Tj=+30°C	Pdc	10.3	kW	Tj=+30°C	EERd or GUEc,bin / AEFc,bin	588.0	%
Tj=+25°C	Pdc	6.6	kW	Tj=+25°C	EERd or GUEc,bin / AEFc,bin	825.0	%
Tj=+20°C	Pdc	6.0	kW	Tj=+20°C	EERd or GUEc,bin / AEFc,bin	1285.0	%
Degradation coefficient for air conditioners**	Cdc	0.25	-				
Power consumption in other than 'active mode'				Crankcase heater mode			
Off mode	P _{OFF}	0.040	kW	Standby mode	P _{SB}	0.040	kW
Thermostat-off mode	P _{TO}	0.000	kW				
Other items				For air-to-air air conditioner:			
Capacity control		variable		air flow-rate,outdoor measured		6000	m ³ /h
Sound power level, outdoor	L _{WA}	72.0	dB				
If engine driven: Emissions of nitrogen oxides	NOx ***	-	mg/kWh fuel input GCV				
GWP of the refrigerant		2088	kgCO ₂ eq. (100years)				
Contact details		Mitsubishi heavy industries thermal systems.LTD					
** If Cdc is not determined by measurement then the default degradation coefficient air conditioners shall be 0,25.							
*** from 26 September 2018							
Where information relates to multi-split air conditioners,the test result and performance data be obtained on the basis of the performance of the outdoor unit, with a combination of indoor unit(s) recommended by the manufacturer or importer.							

Information to identify the model(s) to which the information relates :				FDC140VNX / FDT71VH (x2 units)			
Outdoor side heat exchanger of heat pump :				air			
Indoor side heat exchanger of heat pump :				air			
Indication if the heater is equipped with a supplementary heater :				No			
if applicable :				electric motor			
Parameters shall be declared for the average heating season , parameters for the warmer and colder heating seasons are optional.							
Item	Symbol	Value	Unit	Item	Symbol	Value	Unit
Rated heating capacity	Prated,h	16.0	kW	Seasonal space heating energy efficiency ηs,h		170.8	%
Declared heating capacity for part load at indoor temperature 20°C and outdoor temperature Tj				Declared coefficient of performance or gas utilization efficiency / auxiliary energy factor for part load at given outdoor temperatures Tj			
Tj=-7°C	Pdh	11.5	kW	Tj=-7°C	COPd or GUEh,bin / AEFh,bin	273.0	%
Tj=+2°C	Pdh	7.0	kW	Tj=+2°C	COPd or GUEh,bin / AEFh,bin	419.0	%
Tj=+7°C	Pdh	4.5	kW	Tj=+7°C	COPd or GUEh,bin / AEFh,bin	583.0	%
Tj=+12°C	Pdh	4.5	kW	Tj=+12°C	COPd or GUEh,bin / AEFh,bin	744.0	%
Tbiv=bivalent temperature	Pdh	13.0	kW	Tbiv=bivalent temperature	COPd or GUEh,bin / AEFh,bin	289.0	%
TOL=operation limit	Pdh	10.3	kW	TOL=operation limit	COPd or GUEh,bin / AEFh,bin	248.0	%
For air-to-water heat pumps : Tj=-15°C (if TOL < -20°C)	Pdh	-	kW	For air-to-water heat pumps:Tj=-15°C (if TOL < -20°C)	COPd or GUEh,bin / AEFh,bin	-	%
Bivalent temperature	Tbiv	-10.0	°C	For water-to-air heat pumps:Operation limit Ta temperature		-	°C
Degradation coefficient heat pumps**	Cdh	0.25	-				
Power consumption in modes other than 'active mode'				Supplementary heater back-up heating capacity			
Off mode	P _{OFF}	0.040	kW		elbu	-	kW
Thermostat-off mode	P _{TO}	0.045	kW	Type of energy input Standby mode	P _{SB}	0.040	kW
Crankcase heater mode	P _{CK}	0.040	kW				
Other items				For air-to-air heat pumps: air flow-rate,outdoor measured			
Capacity control		variable				6000	m³/h
Sound power level, outdoor measured	L _{WA}	72.0	dB	For water-/brine-to-air heat pumps : Rated brine or water flow-rate, outdoor side heat exchanger		-	m³/h
Emissions of nitrogen oxides(if applicable)	NOx ***	-	mg/kWh fuel input GCV				
GWP of the refrigerant		2088	kgCO ₂ eq. (100years)				
Contact details				Mitsubishi heavy industries thermal systems,LTD			
** If Cdh is not determined by measurement then the default degradation coefficient air conditioners shall be 0.25.							
*** from 26 September 2018							
Where information relates to multi-split air conditioners,the test result and performance data be obtained on the basis of the performance of the outdoor unit, with a combination of indoor unit(s) recommended by the manufacturer or importer.							

Model FDT140VSPVH

Model(s) : FDC140VSX / FDT71VH (x2 units)			
Outdoor side heat exchanger of air conditioner : air			
Indoor side heat exchanger of air conditioner : air			
Type : vapour compression			
if applicable : electric motor			
Item	Symbol	Value	Unit
Rated cooling capacity	Prated,c	14.0	kW
Declared cooling capacity for part load at given outdoor temperatures Tj and indoor 27°C/19°C(dry/wet bulb)			
Tj=+35°C	Pdc	14.0	kW
Tj=+30°C	Pdc	10.3	kW
Tj=+25°C	Pdc	6.6	kW
Tj=+20°C	Pdc	6.0	kW
Degradation coefficient for air conditioners**	Cdc	0.25	-
Power consumption in other than 'active mode'			
Off mode	P _{OFF}	0.035	kW
Thermostat-off mode	P _{TO}	0.000	kW
Other items			
Capacity control		variable	
Sound power level, outdoor	L _{WA}	72.0	dB
If engine driven: Emissions of nitrogen oxides	NO _x ***	-	mg/kWh fuel input GCV
GWP of the refrigerant		2088	kgCO ₂ eq. (100years)
Seasonal space cooling energy efficiency η _{s,c}			
		271.5	%
Declared energy efficiency ratio or gas utilization efficiency / auxiliary energy factor for part load at given outdoor temperatures Tj			
Tj=+35°C	EERd or GUEc,bin / AEFc,bin	371.0	%
Tj=+30°C	EERd or GUEc,bin / AEFc,bin	600.0	%
Tj=+25°C	EERd or GUEc,bin / AEFc,bin	842.0	%
Tj=+20°C	EERd or GUEc,bin / AEFc,bin	1311.0	%
For air-to-air air conditioner: air flow-rate,outdoor measured			
		6000	m ³ /h
Contact details Mitsubishi heavy industries thermal systems.LTD			
** If Cdc is not determined by measurement then the default degradation coefficient air conditioners shall be 0,25.			
*** from 26 September 2018			
Where information relates to multi-split air conditioners,the test result and performance data be obtained on the basis of the performance of the outdoor unit, with a combination of indoor unit(s) recommended by the manufacturer or importer.			

Information to identify the model(s) to which the information relates :				FDC140VSX / FDT71VH (x2 units)			
Outdoor side heat exchanger of heat pump :				air			
Indoor side heat exchanger of heat pump :				air			
Indication if the heater is equipped with a supplementary heater :				No			
if applicable :				electric motor			
Parameters shall be declared for the average heating season , parameters for the warmer and colder heating seasons are optional.							
Item	Symbol	Value	Unit	Item	Symbol	Value	Unit
Rated heating capacity	Prated,h	16.0	kW	Seasonal space heating energy efficiency ηs,h		170.3	%
Declared heating capacity for part load at indoor temperature 20°C and outdoor temperature Tj				Declared coefficient of performance or gas utilization efficiency / auxiliary energy factor for part load at given outdoor temperatures Tj			
Tj=-7°C	Pdh	13.7	kW	Tj=-7°C	COPd or GUEh,bin / AEFh,bin	257.0	%
Tj=+2°C	Pdh	8.4	kW	Tj=+2°C	COPd or GUEh,bin / AEFh,bin	430.0	%
Tj=+7°C	Pdh	5.4	kW	Tj=+7°C	COPd or GUEh,bin / AEFh,bin	565.0	%
Tj=+12°C	Pdh	4.5	kW	Tj=+12°C	COPd or GUEh,bin / AEFh,bin	760.0	%
Tbiv=bivalent temperature	Pdh	15.5	kW	Tbiv=bivalent temperature	COPd or GUEh,bin / AEFh,bin	250.0	%
TOL=operation limit	Pdh	11.9	kW	TOL=operation limit	COPd or GUEh,bin / AEFh,bin	224.0	%
For air-to-water heat pumps : Tj=-15°C (if TOL < -20°C)	Pdh	-	kW	For air-to-water heat pumps:Tj=-15°C (if TOL < -20°C)	COPd or GUEh,bin / AEFh,bin	-	%
Bivalent temperature	Tbiv	-10.0	°C	For water-to-air heat pumps:Operation limit Ta temperature		-	°C
Degradation coefficient heat pumps**	Cdh	0.25	-				
Power consumption in modes other than 'active mode'				Supplementary heater back-up heating capacity			
Off mode	P _{OFF}	0.035	kW		elbu	-	kW
Thermostat-off mode	P _{TO}	0.040	kW	Type of energy input Standby mode	P _{SB}	0.035	kW
Crankcase heater mode	P _{CK}	0.035	kW				
Other items				For air-to-air heat pumps: air flow-rate,outdoor measured			
Capacity control		variable				6000	m³/h
Sound power level, outdoor measured	L _{WA}	72.0	dB	For water-/brine-to-air heat pumps : Rated brine or water flow-rate, outdoor side heat exchanger		-	m³/h
Emissions of nitrogen oxides(if applicable)	NOx ***	-	mg/kWh fuel input GCV				
GWP of the refrigerant		2088	kgCO ₂ eq. (100years)				
Contact details				Mitsubishi heavy industries thermal systems,LTD			
** If Cdh is not determined by measurement then the default degradation coefficient air conditioners shall be 0.25.							
*** from 26 September 2018							
Where information relates to multi-split air conditioners,the test result and performance data be obtained on the basis of the performance of the outdoor unit, with a combination of indoor unit(s) recommended by the manufacturer or importer.							

Models FDT71VH, 100VH, 125VH, 140VH

Model(s) : FDT71VH							
Item	Symbol	Value	Unit	Item	Symbol	Value	Unit
Cooling capacity (sensible)	$P_{rated,c}$	6.1	kW	Total electric power input	P_{elec}	0.080	kW
Cooling capacity (latent)	$P_{rated,c}$	1.0	kW	Sound power level (per speed setting,if applicable)	L_{WA}	59.0	dB
Heating capacity	$P_{rated,h}$	8.0	kW				
Contact details	Mitsubishi heavy industries thermal systems,LTD						

Model(s) : FDT100VH							
Item	Symbol	Value	Unit	Item	Symbol	Value	Unit
Cooling capacity (sensible)	$P_{rated,c}$	8.1	kW	Total electric power input	P_{elec}	0.130	kW
Cooling capacity (latent)	$P_{rated,c}$	1.9	kW	Sound power level (per speed setting,if applicable)	L_{WA}	62.0	dB
Heating capacity	$P_{rated,h}$	11.2	kW				
Contact details	Mitsubishi heavy industries thermal systems,LTD						

Model(s) : FDT125VH							
Item	Symbol	Value	Unit	Item	Symbol	Value	Unit
Cooling capacity (sensible)	$P_{rated,c}$	9.1	kW	Total electric power input	P_{elec}	0.140	kW
Cooling capacity (latent)	$P_{rated,c}$	3.4	kW	Sound power level (per speed setting,if applicable)	L_{WA}	63.0	dB
Heating capacity	$P_{rated,h}$	14.0	kW				
Contact details							

Model(s) : FDT140VH							
Item	Symbol	Value	Unit	Item	Symbol	Value	Unit
Cooling capacity (sensible)	$P_{rated,c}$	9.8	kW	Total electric power input	P_{elec}	0.140	kW
Cooling capacity (latent)	$P_{rated,c}$	2.7	kW	Sound power level (per speed setting,if applicable)	L_{WA}	63.0	dB
Heating capacity	$P_{rated,h}$	16.0	kW				
Contact details							


2. MICRO INVERTER PACKAGED AIR-CONDITIONERS

CONTENTS

2.1 SPECIFICATIONS	100
2.2 EXTERIOR DIMENSIONS	111
(1) Indoor units	111
(2) Outdoor units	111
(3) Remote control (Option parts)	113
2.3 ELECTRICAL WIRING	114
(1) Indoor units	114
(2) Outdoor units	114
2.4 NOISE LEVEL	118
2.5 TEMPERATURE AND VELOCITY DISTRIBUTION	119
2.6 PIPING SYSTEM	120
2.7 RANGE OF USAGE & LIMITATIONS	123
2.8 SELECTION CHART	127
2.8.1 Capacity tables	127
2.8.2 Correction of cooling and heating capacity in relation to air flow rate control (Fan speed)	136
2.8.3 Correction of cooling and heating capacity in relation to one way length of refrigerant piping	136
2.8.4 Height difference between the indoor unit and outdoor unit	136
2.9 APPLICATION DATA	138
2.9.1 Installation of indoor unit	138
2.9.2 Electric wiring work installation	138
2.9.3 Installation of wired remote control (Option parts)	138
2.9.4 Installation of outdoor unit	138
(1) Models FDC100 – 140VNA, 100 – 140VSA	138
(2) Models FDC200, 250VSA	147
2.9.5 Method for connecting the accessory pipe	155
2.9.6 Instructions for branching pipe set (DIS-WA1, WB1, TA1, TB1)	158
2.10 TECHNICAL INFORMATION	159

■ How to read the model name

Example: FDT 140 VNA P VH

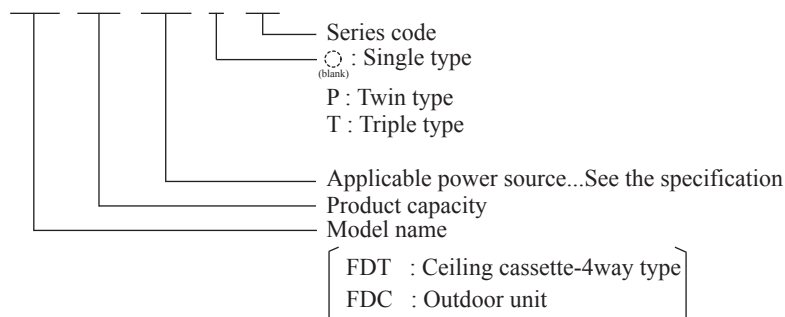

2.1 SPECIFICATIONS

(1) Single type

Item		Model	FDT100VNAVH		
			Indoor unit FDT100VH	Outdoor unit FDC100VNA	
Power source			1 Phase, 220-240V 50Hz / 220V 60Hz		
Operation data	Nominal cooling capacity (range)	kW	10.0 [4.0(Min.) - 11.2(Max.)]		
	Nominal heating capacity (range)	kW	11.2 [4.0(Min.) - 12.5(Max.)]		
	Power consumption	Cooling	kW	2.73	
		Heating		2.64	
	Max power consumption		6.40		
	Running current	Cooling	A	13.2 / 13.8	
		Heating		12.9 / 13.5	
	Inrush current, max current		5 , 24		
	Power factor	Cooling	%	90	
		Heating		89	
	EER	Cooling		3.66	
	COP	Heating		4.26	
	Sound power level	Cooling	dB(A)	62	
Heating		70			
Sound pressure level	Cooling	dB(A)	P-Hi : 47 Hi : 39 Me : 36 Lo : 30		
	Heating		P-Hi : 47 Hi : 39 Me : 36 Lo : 29		
Silent mode sound pressure level			50 / 44 (Normal / Silent)		
Exterior dimensions (Height x Width x Depth)		mm	Unit 298 × 840 × 840 Panel 35 × 950 × 950	845×970×370	
Exterior appearance (Munsell color)			Plaster white (6.8Y8.9/0.2) near equivalent	Stucco white (4.2Y7.5/1.1) near equivalent	
Net weight		kg	Unit 25 Panel 5	80	
Compressor type & Q'ty			—	RMT5126MCE3×1	
Compressor motor (Starting method)		kW	—	Direct line start	
Refrigerant oil (Amount, type)		L	—	0.9 (M-MA68)	
Refrigerant (Type, amount, pre-charge length)		kg	R410A 3.8 in outdoor unit (Incl. the amount for the piping of 30m)		
Heat exchanger			Louver fin & inner grooved tubing	Straight fin & inner grooved tubing	
Refrigerant control			Electronic expansion valve		
Fan type & Q'ty			Turbo fan ×1	Propeller fan ×1	
Fan motor (Starting method)		W	140 < Direct line start >	86 < Direct line start >	
Air flow	Cooling	m ³ /min	P-Hi : 37 Hi : 26 Me : 23 Lo : 17		
	Heating		75		
Available external static pressure		Pa	0		
Outside air intake			Possible		
Air filter, Quality / Quantity			Pocket plastic net ×1(Washable)		
Shock & vibration absorber			Rubber sleeve(for fan motor)		
Electric heater		W	—	20 (Crank case heater)	
Operation control	Remote control		(Option) Wired : RC-EX3A, RC-E5, RCH-E3 Wireless : RCN-T-5AW-E2		
	Room temperature control		Thermostat by electronics		
	Operation display		—		
Safety equipments			Overload protection for fan motor Frost protection thermostat Internal thermostat for fan motor Abnormal discharge temperature protection		
Installation data	Refrigerant piping size (O.D.)	mm	Liquid line : I/U φ 9.52 (3/8")	Pipe φ 9.52(3/8")x0.8 O/U φ 9.52 (3/8")	
	Connecting method		Gas line : φ 15.88 (5/8")	φ 15.88(5/8")x1.0 φ 15.88 (5/8")	
	Attached length of piping	m	Flare piping		
	Insulation for piping		Necessary (both Liquid & Gas lines)		
	Refrigerant line (one way) length	m	Max.50m		
	Vertical height diff. between O/U and I/U	m	Max.50 (Outdoor unit is higher) Max.15m (Outdoor unit is lower)		
Drain hose		Hose connectable with VP25(O.D.32)		Hole size φ 20 x 3 pcs	
Drain pump, max lift height		mm	Built-in drain pump , 850		
Recommended breaker size		A	—		
L.R.A. (Locked rotor ampere)		A	5.0		
Interconnecting wires Size x Core number			φ 1.6mm x 3 cores (Including earth cable) / Terminal block (Screw fixing type)		
IP number			IPX0		
Standard accessories			Mounting kit, Drain hose		
Option parts			—		

Notes (1) The data are measured at the following conditions.

The pipe length is 7.5m.

Item	Indoor air temperature		Outdoor air temperature		Standards
	DB	WB	DB	WB	
Cooling	27°C	19°C	35°C	24°C	ISO5151-T1
Heating	20°C	—	7°C	6°C	ISO5151-H1

(2) This air-conditioner is manufactured and tested in conformity with the ISO.

(3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.

(4) Select the breaker size according to the own national standard.

(5) The operation data indicate when the air-conditioner is operated at 230V 50Hz or 220V 60Hz.

Item		Model	FDT100VSAVH		
			Indoor unit FDT100VH	Outdoor unit FDC100VSA	
Power source			3 Phase, 380-415V 50Hz / 380V 60Hz		
Operation data	Nominal cooling capacity (range)	kW	10.0 [4.0(Min.) - 11.2(Max.)]		
	Nominal heating capacity (range)	kW	11.2 [4.0(Min.) - 12.5(Max.)]		
	Power consumption	Cooling	kW	2.73	
		Heating		2.63	
	Max power consumption		10.20		
	Running current	Cooling	A	4.2 / 4.4	
		Heating		4.1 / 4.3	
	Inrush current, max current		5 , 15		
	Power factor	Cooling	%	94	
		Heating		93	
	EER	Cooling		3.66	
	COP	Heating		4.26	
Sound power level	Cooling	dB(A)	62		
	Heating		70		
Sound pressure level	Cooling	dB(A)	P-Hi : 47 Hi : 39 Me : 36 Lo : 30		
	Heating		P-Hi : 47 Hi : 39 Me : 36 Lo : 29		
Silent mode sound pressure level			50 / 44 (Normal / Silent)		
Exterior dimensions (Height x Width x Depth)		mm	Unit 298 x 840 x 840 Panel 35 x 950 x 950		
Exterior appearance (Munsell color)			Plaster white (6.8Y8.9/0.2) near equivalent Stucco white (4.2Y7.5/1.1) near equivalent		
Net weight		kg	Unit 25 Panel 5 82		
Compressor type & Q'ty			— RMT5126MCE4x1		
Compressor motor (Starting method)		kW	— Direct line start		
Refrigerant oil (Amount, type)		L	— 0.9 (M-MA68)		
Refrigerant (Type, amount, pre-charge length)		kg	R410A 3.8 in outdoor unit (Incl. the amount for the piping of 30m)		
Heat exchanger			Louver fin & inner grooved tubing Straight fin & inner grooved tubing		
Refrigerant control			Electronic expansion valve		
Fan type & Q'ty			Turbo fan x1 Propeller fan x1		
Fan motor (Starting method)		W	140 < Direct line start > 86 < Direct line start >		
Air flow	Cooling	m³/min	P-Hi : 37 Hi : 26 Me : 23 Lo : 17		
	Heating		75 73		
Available external static pressure		Pa	0 —		
Outside air intake			Possible —		
Air filter, Quality / Quantity			Pocket plastic net x1(Washable) —		
Shock & vibration absorber			Rubber sleeve(for fan motor) Rubber sleeve(for compressor)		
Electric heater		W	— 20 (Crank case heater)		
Operation control	Remote control		(Option) Wired : RC-EX3A, RC-E5, RCH-E3 Wireless : RCN-T-5AW-E2		
	Room temperature control		Thermostat by electronics		
	Operation display		—		
Safety equipments			Overload protection for fan motor Frost protection thermostat Internal thermostat for fan motor Abnormal discharge temperature protection		
Installation data	Refrigerant piping size (O.D.)	mm	Liquid line : I/U φ 9.52 (3/8") Pipe φ 9.52(3/8")x0.8 O/U φ 9.52 (3/8") Gas line : φ 15.88 (5/8") φ 15.88(5/8")x1.0 φ 15.88 (5/8")		
	Connecting method		Flare piping Flare piping		
	Attached length of piping	m	— —		
	Insulation for piping		Necessary (both Liquid & Gas lines)		
	Refrigerant line (one way) length	m	Max.50m		
	Vertical height diff. between O/U and I/U	m	Max.50 (Outdoor unit is higher) Max.15m (Outdoor unit is lower)		
Drain hose		Hose connectable with VP25(O.D.32) Hole size φ 20 x 3 pcs			
Drain pump, max lift height		mm	Built-in drain pump , 850 —		
Recommended breaker size		A	—		
L.R.A. (Locked rotor ampere)		A	5.0		
Interconnecting wires Size x Core number			φ 1.6mm x 3 cores (Including earth cable) / Terminal block (Screw fixing type)		
IP number			IPX0 IP24		
Standard accessories			Mounting kit, Drain hose —		
Option parts			—		

Notes (1) The data are measured at the following conditions. The pipe length is 7.5m.

Item	Indoor air temperature		Outdoor air temperature		Standards
	DB	WB	DB	WB	
Cooling	27°C	19°C	35°C	24°C	ISO5151-T1
Heating	20°C	—	7°C	6°C	ISO5151-H1

- (2) This air-conditioner is manufactured and tested in conformity with the ISO.
- (3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.
- (4) Select the breaker size according to the own national standard.
- (5) The operation data indicate when the air-conditioner is operated at 400V 50Hz or 380V 60Hz.

Item		Model	FDT125VNAVH		
			Indoor unit FDT125VH	Outdoor unit FDC125VNA	
Power source			1 Phase, 220-240V 50Hz / 220V 60Hz		
Operation data	Nominal cooling capacity (range)	kW	12.5 [5.0(Min.) - 14.0(Max.)]		
	Nominal heating capacity (range)	kW	14.0 [4.0(Min.) - 16.0(Max.)]		
	Power consumption	Cooling	kW	4.05	
		Heating		3.74	
	Max power consumption		6.40		
	Running current	Cooling	A	18.7 / 19.6	
		Heating		17.5 / 18.3	
	Inrush current, max current		5 , 24		
	Power factor	Cooling	%	94	
		Heating		93	
	EER	Cooling		3.09	
	COP	Heating		3.74	
	Sound power level	Cooling	dB(A)	63	71
Heating		64			
Sound pressure level	Cooling	dB(A)	P-Hi : 48 Hi : 41 Me : 39 Lo : 31	55	
	Heating		P-Hi : 48 Hi : 41 Me : 38 Lo : 31	57	
Silent mode sound pressure level			51 / 45 (Normal / Silent)		
Exterior dimensions (Height x Width x Depth)		mm	Unit 298 x 840 x 840 Panel 35 x 950 x 950	845x970x370	
Exterior appearance (Munsell color)			Plaster white (6.8Y8.9/0.2) near equivalent	Stucco white (4.2Y7.5/1.1) near equivalent	
Net weight		kg	Unit 25 Panel 5	80	
Compressor type & Q'ty			—	RMT5126MCE3x1	
Compressor motor (Starting method)		kW	—	Direct line start	
Refrigerant oil (Amount, type)		L	—	0.9 (M-MA68)	
Refrigerant (Type, amount, pre-charge length)		kg	R410A 3.8 in outdoor unit (Incl. the amount for the piping of 30m)		
Heat exchanger			Louver fin & inner grooved tubing	Straight fin & inner grooved tubing	
Refrigerant control			Electronic expansion valve		
Fan type & Q'ty			Turbo fan x1	Propeller fan x1	
Fan motor (Starting method)		W	140 < Direct line start >	86 < Direct line start >	
Air flow	Cooling	m ³ /min	P-Hi : 38 Hi : 28 Me : 25 Lo : 18		
	Heating		75		
Available external static pressure		Pa	0	—	
Outside air intake			Possible	—	
Air filter, Quality / Quantity			Pocket plastic net x1(Washable)	—	
Shock & vibration absorber			Rubber sleeve(for fan motor)	Rubber sleeve(for compressor)	
Electric heater		W	—	20 (Crank case heater)	
Operation control	Remote control		(Option) Wired : RC-EX3A, RC-E5, RCH-E3 Wireless : RCN-T-5AW-E2		
	Room temperature control		Thermostat by electronics		
	Operation display		—		
Safety equipments			Overload protection for fan motor Frost protection thermostat Internal thermostat for fan motor Abnormal discharge temperature protection		
Installation data	Refrigerant piping size (O.D.)	mm	Liquid line : I/U ϕ 9.52 (3/8")	Pipe ϕ 9.52(3/8")x0.8 O/U ϕ 9.52 (3/8")	
	Connecting method		Gas line : ϕ 15.88 (5/8")	ϕ 15.88(5/8")x1.0 ϕ 15.88 (5/8")	
	Attached length of piping	m	Flare piping	Flare piping	
	Insulation for piping		Necessary (both Liquid & Gas lines)		
	Refrigerant line (one way) length	m	Max.50m		
	Vertical height diff. between O/U and I/U	m	Max.50 (Outdoor unit is higher)	Max.15m (Outdoor unit is lower)	
Drain hose			Hose connectable with VP25(O.D.32)	Hole size ϕ 20 x 3 pcs	
Drain pump, max lift height		mm	Built-in drain pump , 850	—	
Recommended breaker size		A	—		
L.R.A. (Locked rotor ampere)		A	5.0		
Interconnecting wires Size x Core number			ϕ 1.6mm x 3 cores (Including earth cable) / Terminal block (Screw fixing type)		
IP number			IPX0	IP24	
Standard accessories			Mounting kit, Drain hose		
Option parts			—		

Notes (1) The data are measured at the following conditions.

The pipe length is 7.5m.

Item	Indoor air temperature		Outdoor air temperature		Standards
	DB	WB	DB	WB	
Cooling	27°C	19°C	35°C	24°C	ISO5151-T1
Heating	20°C	—	7°C	6°C	ISO5151-H1

(2) This air-conditioner is manufactured and tested in conformity with the ISO.

(3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.

(4) Select the breaker size according to the own national standard.

(5) The operation data indicate when the air-conditioner is operated at 230V 50Hz or 220V 60Hz.

Item		Model	FDT125VSAVH		
			Indoor unit FDT125VH	Outdoor unit FDC125VSA	
Power source			3 Phase, 380-415V 50Hz / 380V 60Hz		
Operation data	Nominal cooling capacity (range)	kW	12.5 [5.0(Min.) - 14.0(Max.)]		
	Nominal heating capacity (range)	kW	14.0 [4.0(Min.) - 16.0(Max.)]		
	Power consumption	Cooling	kW	4.05	
		Heating		3.74	
	Max power consumption		10.20		
	Running current	Cooling	A	6.2 / 6.5	
		Heating		5.7 / 6.0	
	Inrush current, max current		5 , 15		
	Power factor	Cooling	%	94 / 95	
		Heating		95	
	EER	Cooling		3.09	
	COP	Heating		3.74	
Sound power level	Cooling	dB(A)	63		
	Heating		64		
Sound pressure level	Cooling	dB(A)	P-Hi : 48 Hi : 41 Me : 39 Lo : 31		
	Heating		P-Hi : 48 Hi : 41 Me : 38 Lo : 31		
Silent mode sound pressure level			51 / 45 (Normal / Silent)		
Exterior dimensions (Height x Width x Depth)		mm	Unit 298 x 840 x 840 Panel 35 x 950 x 950		
Exterior appearance (Munsell color)			Plaster white (6.8Y8.9/0.2) near equivalent Stucco white (4.2Y7.5/1.1) near equivalent		
Net weight		kg	Unit 25 Panel 5 82		
Compressor type & Q'ty			— RMT5126MCE4x1		
Compressor motor (Starting method)		kW	— Direct line start		
Refrigerant oil (Amount, type)		L	— 0.9 (M-MA68)		
Refrigerant (Type, amount, pre-charge length)		kg	R410A 3.8 in outdoor unit (Incl. the amount for the piping of 30m)		
Heat exchanger			Louver fin & inner grooved tubing Straight fin & inner grooved tubing		
Refrigerant control			Electronic expansion valve		
Fan type & Q'ty			Turbo fan x1 Propeller fan x1		
Fan motor (Starting method)		W	140 < Direct line start > 86 < Direct line start >		
Air flow	Cooling	m³/min	P-Hi : 38 Hi : 28 Me : 25 Lo : 18		
	Heating		75 73		
Available external static pressure		Pa	0 —		
Outside air intake			Possible —		
Air filter, Quality / Quantity			Pocket plastic net x1(Washable) —		
Shock & vibration absorber			Rubber sleeve(for fan motor) Rubber sleeve(for compressor)		
Electric heater		W	— 20 (Crank case heater)		
Operation control	Remote control		(Option) Wired : RC-EX3A, RC-E5, RCH-E3 Wireless : RCN-T-5AW-E2		
	Room temperature control		Thermostat by electronics		
	Operation display		—		
Safety equipments			Overload protection for fan motor Frost protection thermostat Internal thermostat for fan motor Abnormal discharge temperature protection		
Installation data	Refrigerant piping size (O.D.)	mm	Liquid line : I/U φ 9.52 (3/8") Pipe φ 9.52(3/8")x0.8 O/U φ 9.52 (3/8") Gas line : φ 15.88 (5/8") φ 15.88(5/8")x1.0 φ 15.88 (5/8")		
	Connecting method		Flare piping Flare piping		
	Attached length of piping	m	— —		
	Insulation for piping		Necessary (both Liquid & Gas lines)		
	Refrigerant line (one way) length	m	Max.50m		
	Vertical height diff. between O/U and I/U	m	Max.50 (Outdoor unit is higher) Max.15m (Outdoor unit is lower)		
Drain hose			Hose connectable with VP25(O.D.32) Hole size φ 20 x 3 pcs		
Drain pump, max lift height		mm	Built-in drain pump , 850 —		
Recommended breaker size		A	—		
L.R.A. (Locked rotor ampere)		A	5.0		
Interconnecting wires Size x Core number			φ 1.6mm x 3 cores (Including earth cable) / Terminal block (Screw fixing type)		
IP number			IPX0 IP24		
Standard accessories			Mounting kit, Drain hose —		
Option parts			—		

Notes (1) The data are measured at the following conditions. The pipe length is 7.5m.

Item	Indoor air temperature		Outdoor air temperature		Standards
	DB	WB	DB	WB	
Cooling	27°C	19°C	35°C	24°C	ISO5151-T1
Heating	20°C	—	7°C	6°C	ISO5151-H1

(2) This air-conditioner is manufactured and tested in conformity with the ISO.

(3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.

(4) Select the breaker size according to the own national standard.

(5) The operation data indicate when the air-conditioner is operated at 400V 50Hz or 380V 60Hz.

Item		Model	FDT140VNAVH		
			Indoor unit FDT140VH	Outdoor unit FDC140VNA	
Power source			1 Phase, 220-240V 50Hz / 220V 60Hz		
Operation data	Nominal cooling capacity (range)	kW	13.6 [5.0(Min.) - 14.5(Max.)]		
	Nominal heating capacity (range)	kW	15.5 [4.0(Min.) - 16.5(Max.)]		
	Power consumption	Cooling	kW	5.09	
		Heating		4.43	
	Max power consumption		6.40		
	Running current	Cooling	A	22.6 / 23.6	
		Heating		19.7 / 20.5	
	Inrush current, max current		5 , 24		
	Power factor	Cooling	%	97	
		Heating		98	
	EER	Cooling		2.67	
	COP	Heating		3.50	
Sound power level	Cooling	dB(A)	63	73	
	Heating		64		
Sound pressure level	Cooling	dB(A)	P-Hi : 48 Hi : 42 Me : 39 Lo : 32	57	
	Heating		P-Hi : 48 Hi : 41 Me : 38 Lo : 31	59	
Silent mode sound pressure level			53 / 47 (Normal / Silent)		
Exterior dimensions (Height x Width x Depth)		mm	Unit 298 x 840 x 840 Panel 35 x 950 x 950	845x970x370	
Exterior appearance (Munsell color)			Plaster white (6.8Y8.9/0.2) near equivalent	Stucco white (4.2Y7.5/1.1) near equivalent	
Net weight		kg	Unit 25 Panel 5	80	
Compressor type & Q'ty			—	RMT5126MCE3x1	
Compressor motor (Starting method)		kW	—	Direct line start	
Refrigerant oil (Amount, type)		L	—	0.9 (M-MA68)	
Refrigerant (Type, amount, pre-charge length)		kg	R410A 3.8 in outdoor unit (Incl. the amount for the piping of 30m)		
Heat exchanger			Louver fin & inner grooved tubing	Straight fin & inner grooved tubing	
Refrigerant control			Electronic expansion valve		
Fan type & Q'ty			Turbo fan x1	Propeller fan x1	
Fan motor (Starting method)		W	140 < Direct line start >	86 < Direct line start >	
Air flow	Cooling	m³/min	P-Hi : 38 Hi : 29 Me : 26 Lo : 19		
	Heating		75		
Available external static pressure		Pa	0	—	
Outside air intake			Possible	—	
Air filter, Quality / Quantity			Pocket plastic net x1(Washable)	—	
Shock & vibration absorber			Rubber sleeve(for fan motor)	Rubber sleeve(for compressor)	
Electric heater		W	—	20 (Crank case heater)	
Operation control	Remote control		(Option) Wired : RC-EX3A, RC-E5, RCH-E3 Wireless : RCN-T-5AW-E2		
	Room temperature control		Thermostat by electronics		
	Operation display		—		
Safety equipments			Overload protection for fan motor Frost protection thermostat Internal thermostat for fan motor Abnormal discharge temperature protection		
Installation data	Refrigerant piping size (O.D.)	mm	Liquid line : I/U φ 9.52 (3/8")	Pipe φ 9.52(3/8")x0.8 O/U φ 9.52 (3/8")	
	Connecting method		Gas line : φ 15.88 (5/8")	φ 15.88(5/8")x1.0 φ 15.88 (5/8")	
	Attached length of piping	m	Flare piping	Flare piping	
	Insulation for piping		Necessary (both Liquid & Gas lines)		
	Refrigerant line (one way) length	m	Max.50m		
	Vertical height diff. between O/U and I/U	m	Max.50 (Outdoor unit is higher)	Max.15m (Outdoor unit is lower)	
Drain hose			Hose connectable with VP25(O.D.32)	Hole size φ 20 x 3 pcs	
Drain pump, max lift height		mm	Built-in drain pump , 850	—	
Recommended breaker size		A	—		
L.R.A. (Locked rotor ampere)		A	5.0		
Interconnecting wires Size x Core number			φ 1.6mm x 3 cores (Including earth cable) / Terminal block (Screw fixing type)		
IP number			IPX0	IP24	
Standard accessories			Mounting kit, Drain hose		
Option parts			—		

Notes (1) The data are measured at the following conditions. The pipe length is 7.5m.

Item	Indoor air temperature		Outdoor air temperature		Standards
	DB	WB	DB	WB	
Cooling	27°C	19°C	35°C	24°C	ISO5151-T1
Heating	20°C	—	7°C	6°C	ISO5151-H1

(2) This air-conditioner is manufactured and tested in conformity with the ISO.

(3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.

(4) Select the breaker size according to the own national standard.

(5) The operation data indicate when the air-conditioner is operated at 230V 50Hz or 220V 60Hz.

Item		Model	FDT140VSAVH		
			Indoor unit FDT140VH	Outdoor unit FDC140VSA	
Power source			3 Phase, 380-415V 50Hz / 380V 60Hz		
Operation data	Nominal cooling capacity (range)	kW	13.6 [5.0(Min.) - 14.5(Max.)]		
	Nominal heating capacity (range)	kW	15.5 [4.0(Min.) - 16.5(Max.)]		
	Power consumption	Cooling	kW	5.09	
		Heating		4.43	
	Max power consumption		10.20		
	Running current	Cooling	A	7.6 / 8.0	
		Heating		7.0 / 7.4	
	Inrush current, max current		5 , 15		
	Power factor	Cooling	%	94	
		Heating		91	
	EER	Cooling		2.67	
	COP	Heating		3.50	
Sound power level	Cooling	dB(A)	63	73	
	Heating		64		
Sound pressure level	Cooling	dB(A)	P-Hi : 48 Hi : 42 Me : 39 Lo : 32	57	
	Heating		P-Hi : 48 Hi : 41 Me : 38 Lo : 31	59	
Silent mode sound pressure level			53 / 47 (Normal / Silent)		
Exterior dimensions (Height x Width x Depth)		mm	Unit 298 × 840 × 840 Panel 35 × 950 × 950	845×970×370	
Exterior appearance (Munsell color)			Plaster white (6.8Y8.9/0.2) near equivalent	Stucco white (4.2Y7.5/1.1) near equivalent	
Net weight		kg	Unit 25 Panel 5	82	
Compressor type & Q'ty			—	RMT5126MCE4×1	
Compressor motor (Starting method)		kW	—	Direct line start	
Refrigerant oil (Amount, type)		L	—	0.9 (M-MA68)	
Refrigerant (Type, amount, pre-charge length)		kg	R410A 3.8 in outdoor unit (Incl. the amount for the piping of 30m)		
Heat exchanger			Louver fin & inner grooved tubing	Straight fin & inner grooved tubing	
Refrigerant control			Electronic expansion valve		
Fan type & Q'ty			Turbo fan ×1	Propeller fan ×1	
Fan motor (Starting method)		W	140 < Direct line start >	86 < Direct line start >	
Air flow	Cooling	m³/min	P-Hi : 38 Hi : 29 Me : 26 Lo : 19		
	Heating		75		
Available external static pressure		Pa	0	—	
Outside air intake			Possible	—	
Air filter, Quality / Quantity			Pocket plastic net ×1(Washable)	—	
Shock & vibration absorber			Rubber sleeve(for fan motor)	Rubber sleeve(for compressor)	
Electric heater		W	—	20 (Crank case heater)	
Operation control	Remote control		(Option) Wired : RC-EX3A, RC-E5, RCH-E3 Wireless : RCN-T-5AW-E2		
	Room temperature control		Thermostat by electronics		
	Operation display		—		
Safety equipments			Overload protection for fan motor Frost protection thermostat Internal thermostat for fan motor Abnormal discharge temperature protection		
Installation data	Refrigerant piping size (O.D.)	mm	Liquid line : I/U φ 9.52 (3/8") Pipe φ 9.52(3/8")x0.8 O/U φ 9.52 (3/8")		
	Connecting method		Gas line : φ 15.88 (5/8") φ 15.88(5/8")x1.0 φ 15.88 (5/8")		
	Attached length of piping	m	Flare piping	Flare piping	
	Insulation for piping		Necessary (both Liquid & Gas lines)		
	Refrigerant line (one way) length	m	Max.50m		
	Vertical height diff. between O/U and I/U	m	Max.50 (Outdoor unit is higher)	Max.15m (Outdoor unit is lower)	
Drain hose		Hose connectable with VP25(O.D.32)		Hole size φ 20 x 3 pcs	
Drain pump, max lift height		mm	Built-in drain pump , 850		
Recommended breaker size		A	—		
L.R.A. (Locked rotor ampere)		A	5.0		
Interconnecting wires Size x Core number			φ 1.6mm x 3 cores (Including earth cable) / Terminal block (Screw fixing type)		
IP number			IPX0	IP24	
Standard accessories			Mounting kit, Drain hose		
Option parts			—		

Notes (1) The data are measured at the following conditions. The pipe length is 7.5m.

Item	Indoor air temperature		Outdoor air temperature		Standards
	DB	WB	DB	WB	
Cooling	27°C	19°C	35°C	24°C	ISO5151-T1
Heating	20°C	—	7°C	6°C	ISO5151-H1

(2) This air-conditioner is manufactured and tested in conformity with the ISO.

(3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.

(4) Select the breaker size according to the own national standard.

(5) The operation data indicate when the air-conditioner is operated at 400V 50Hz or 380V 60Hz.

(2) Twin type

Item		Model		FDT140VNAPVH		
				Indoor unit FDT71VH (2 units)	Outdoor unit FDC140VNA	
Power source		1 Phase, 220-240V 50Hz / 220V 60Hz				
Operation data	Nominal cooling capacity (range)	kW		13.6 [5.0(Min.) - 14.5(Max.)]		
	Nominal heating capacity (range)	kW		15.5 [4.0(Min.) - 16.5(Max.)]		
	Power consumption	Cooling	kW		4.22	
		Heating	kW		3.72	
	Max power consumption			6.40		
	Running current	Cooling	A		18.5 / 19.4	
		Heating	A		16.3 / 17.1	
	Inrush current, max current			5 , 24		
	Power factor	Cooling	%		99	
		Heating	%		99	
	EER	Cooling		3.22		
	COP	Heating		4.17		
	Sound power level	Cooling	dB(A)		59	
Heating		dB(A)		60		
Sound pressure level	Cooling	dB(A)		P-Hi : 46 Hi : 34 Me : 31 Lo : 26		
	Heating	dB(A)		P-Hi : 46 Hi : 34 Me : 31 Lo : 26		
Silent mode sound pressure level			53 / 47 (Normal / Silent)			
Exterior dimensions (Height x Width x Depth)		mm		Unit 236 × 840 × 840 Panel 35 × 950 × 950		
Exterior appearance (Munsell color)				Plaster white (6.8Y8.9/0.2) near equivalent		
Net weight		kg		Unit 21 Panel 5		
Compressor type & Q'ty				—		
Compressor motor (Starting method)		kW		—		
Refrigerant oil (Amount, type)		L		—		
Refrigerant (Type, amount, pre-charge length)		kg		R410A 3.8 in outdoor unit (Pre-charged up to the piping length of 30m)		
Heat exchanger				Louver fin & inner grooved tubing		
Refrigerant control				Straight fin & inner grooved tubing		
Fan type & Q'ty				Electronic expansion valve		
Fan motor (Starting method)		W		Turbo fan ×1		
Air flow		m ³ /min		Propeller fan ×1		
Available external static pressure		Pa		50 < Direct line start >		
Outside air intake				86 < Direct line start >		
Air filter, Quality / Quantity				75		
Shock & vibration absorber				73		
Electric heater		W		0		
Operation control				Possible		
Safety equipments				Pocket plastic net ×1(Washable)		
Installation data				Rubber sleeve(for fan motor)		
Refrigerant piping size (O.D.)		mm		Rubber sleeve(for compressor)		
Connecting method				20 (Crank case heater)		
Attached length of piping		m		—		
Insulation for piping				(Option) Wired : RC-EX3A, RC-E5, RCH-E3 Wireless : RCN-T-5AW-E2		
Refrigerant line (one way) length		m		Thermostat by electronics		
Vertical height diff. between O/U and I/U		m		—		
Drain hose				Overload protection for fan motor Frost protection thermostat Internal thermostat for fan motor Abnormal discharge temperature protection		
Drain pump, max lift height		mm		Liquid line : I/U φ 9.52 (3/8") ② φ 9.52(3/8")x0.8 ① φ 9.52(3/8")x0.8 O/U φ 9.52 (3/8") Gas line : I/U φ 15.88 (5/8") ② φ 15.88(5/8")x1.0 ① φ 15.88(5/8")x1.0 O/U φ 15.88 (5/8")		
Recommended breaker size		A		Flare piping		
L.R.A. (Locked rotor ampere)		A		Flare piping		
Interconnecting wires		Size x Core number		Necessary (both Liquid & Gas lines)		
IP number				Max.50m		
Standard accessories				Max.50 (Outdoor unit is higher) Max.15m (Outdoor unit is lower)		
Option parts				Hose connectable with VP25(O.D.32) Hole size φ 20 x 3 pcs		
Notes (1) The data are measured at the following conditions.				Built-in drain pump , 850		
				—		
				5.0		
				φ 1.6mm x 3 cores (Including earth cable) / Terminal block (Screw fixing type)		
				IPX0		
				IP24		
				Mounting kit, Drain hose		
				—		

Notes (1) The data are measured at the following conditions.

The pipe length is 7.5m.

Item	Indoor air temperature		Outdoor air temperature		Standards
	DB	WB	DB	WB	
Cooling	27°C	19°C	35°C	24°C	ISO5151-T1
Heating	20°C	—	7°C	6°C	ISO5151-H1

(2) This air-conditioner is manufactured and tested in conformity with the ISO.

(3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.

(4) Select the breaker size according to the own national standard.

(5) The operation data indicate when the air-conditioner is operated at 230V 50Hz or 220V 60Hz.

(6) Indoor unit specifications for one unit. Capacity and operation data is two indoor units are combined and run together.

(7) Branching pipe set "DIS-WA1G"×1(Optional). ① : Pipe of O/U-Branch, ② : Pipe of Branch-I/U

Item		Model		FDT140VSAPVH		
				Indoor unit FDT71VH (2 units)	Outdoor unit FDC140VSA	
Power source		3 Phase, 380-415V 50Hz / 380V 60Hz				
Operation data	Nominal cooling capacity (range)	kW	13.6 [5.0(Min.) - 14.5(Max.)]			
	Nominal heating capacity (range)	kW	15.5 [4.0(Min.) - 16.5(Max.)]			
	Power consumption	Cooling	kW	4.22		
		Heating		3.72		
	Max power consumption		10.20			
	Running current	Cooling	A	6.2 / 6.5		
		Heating		5.4 / 5.8		
	Inrush current, max current			5 , 15		
	Power factor	Cooling	%	98 / 99		
		Heating		99 / 97		
	EER	Cooling		3.22		
	COP	Heating		4.17		
Sound power level	Cooling	dB(A)	59		73	
	Heating		60			
Sound pressure level	Cooling	dB(A)	P-Hi : 46 Hi : 34 Me : 31 Lo : 26		57	
	Heating		P-Hi : 46 Hi : 34 Me : 31 Lo : 26			
Silent mode sound pressure level			—		53 / 47 (Normal / Silent)	
Exterior dimensions (Height x Width x Depth)		mm	Unit 236 × 840 × 840 Panel 35 × 950 × 950		845×970×370	
Exterior appearance (Munsell color)			Plaster white (6.8Y8.9/0.2) near equivalent		Stucco white (4.2Y7.5/1.1) near equivalent	
Net weight		kg	Unit 21 Panel 5		82	
Compressor type & Q'ty			—		RMT5126MCE4×1	
Compressor motor (Starting method)		kW	—		Direct line start	
Refrigerant oil (Amount, type)		L	—		0.9 (M-MA68)	
Refrigerant (Type, amount, pre-charge length)		kg	R410A 3.8 in outdoor unit (Pre-charged up to the piping length of 30m)			
Heat exchanger			Louver fin & inner grooved tubing		Straight fin & inner grooved tubing	
Refrigerant control			Electronic expansion valve			
Fan type & Q'ty			Turbo fan ×1		Propeller fan ×2	
Fan motor (Starting method)		W	50 < Direct line start >		86 < Direct line start >	
Air flow	Cooling	m ³ /min	P-Hi : 28 Hi : 18 Me : 15 Lo : 12		75	
	Heating				73	
Available external static pressure		Pa	0		—	
Outside air intake			Possible		—	
Air filter, Quality / Quantity			Pocket plastic net ×1(Washable)		—	
Shock & vibration absorber			Rubber sleeve(for fan motor)		Rubber sleeve(for compressor)	
Electric heater		W	—		20 (Crank case heater)	
Operation control	Remote control		(Option) Wired : RC-EX3A, RC-E5, RCH-E3 Wireless : RCN-T-5AW-E2			
	Room temperature control		Thermostat by electronics			
	Operation display		—			
Safety equipments			Overload protection for fan motor Frost protection thermostat Internal thermostat for fan motor Abnormal discharge temperature protection			
Installation data	Refrigerant piping size (O.D.)	mm	Liquid line : I/U φ 9.52 (3/8") ② φ 9.52(3/8")x0.8 ① φ 9.52(3/8")x0.8 O/U φ 9.52 (3/8")			
			Gas line : I/U φ 15.88 (5/8") ② φ 15.88(5/8")x1.0 ① φ 15.88(5/8")x1.0 O/U φ 15.88 (5/8")			
	Connecting method		Flare piping		Flare piping	
	Attached length of piping	m	—		—	
	Insulation for piping		Necessary (both Liquid & Gas lines)			
	Refrigerant line (one way) length	m	Max.50m			
Vertical height diff. between O/U and I/U	m	Max.50 (Outdoor unit is higher)		Max.15m (Outdoor unit is lower)		
Drain hose		Hose connectable with VP25(O.D.32)		Hole size φ 20 x 3 pcs		
Drain pump, max lift height		mm	Built-in drain pump , 850		—	
Recommended breaker size		A	—			
L.R.A. (Locked rotor ampere)		A	5.0			
Interconnecting wires Size x Core number			φ 1.6mm x 3 cores (Including earth cable) / Terminal block (Screw fixing type)			
IP number			IPX0		IP24	
Standard accessories			Mounting kit, Drain hose		Edging	
Option parts			—			

Notes (1) The data are measured at the following conditions.

The pipe length is 7.5m.

Item	Indoor air temperature		Outdoor air temperature		Standards
	DB	WB	DB	WB	
Cooling	27°C	19°C	35°C	24°C	ISO5151-T1
Heating	20°C	—	7°C	6°C	ISO5151-H1

(2) This air-conditioner is manufactured and tested in conformity with the ISO.

(3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.

(4) Select the breaker size according to the own national standard.

(5) The operation data indicate when the air-conditioner is operated at 400V 50Hz or 380V 60Hz.

(6) Indoor unit specifications for one unit. Capacity and operation data is two indoor units are combined and run together.

(7) Branching pipe set "DIS-WA1G"×1(Option). ① : Pipe of O/U-Branch, ② : Pipe of Branch-I/U

Item		Model	FDT200VSAPVH			
			Indoor unit FDT100VH (2 units)	Outdoor unit FDC200VSA		
Power source			3 Phase, 380-415V 50Hz / 380V 60Hz			
Operation data	Nominal cooling capacity (range)	kW	19.0 [5.2(Min.) - 22.4(Max.)]			
	Nominal heating capacity (range)	kW	22.4 [3.3(Min.) - 25.0(Max.)]			
	Power consumption	Cooling	kW	6.25		
		Heating		6.02		
	Max power consumption		12.0			
	Running current	Cooling	A	9.8 / 10.2		
		Heating		9.4 / 9.8		
	Inrush current, max current		5 , 20			
	Power factor	Cooling	%	92 / 93		
		Heating		92 / 93		
	EER	Cooling		3.04		
	COP	Heating		3.72		
	Sound power level	Cooling	dB(A)	62		
Heating		72				
Sound pressure level	Cooling	dB(A)	P-Hi : 47 Hi : 39 Me : 36 Lo : 30			
	Heating		P-Hi : 47 Hi : 39 Me : 36 Lo : 29			
Silent mode sound pressure level			52			
Exterior dimensions (Height x Width x Depth)		mm	Unit 298 × 840 × 840 Panel 35 × 950 × 950	1300×970×370		
Exterior appearance (Munsell color)			Plaster white (6.8Y8.9/0.2) near equivalent	Stucco white (4.2Y7.5/1.1) near equivalent		
Net weight		kg	Unit 25 Panel 5	115		
Compressor type & Q'ty			—	RMT5134MDE3×1		
Compressor motor (Starting method)		kW	—	Direct line start		
Refrigerant oil (Amount, type)		L	—	0.9(compressor) + 0.6(unit) (M-MA68)		
Refrigerant (Type, amount, pre-charge length)		kg	R410A 5.6 in outdoor unit (Pre-charged up to the piping length of 30m)			
Heat exchanger			Louver fin & inner grooved tubing	M shape fin & inner grooved tubing		
Refrigerant control			Electronic expansion valve			
Fan type & Q'ty			Turbo fan ×1	Propeller fan ×2		
Fan motor (Starting method)		W	140 < Direct line start >	86 × 2 < Direct line start >		
Air flow	Cooling Heating	m ³ /min	P-Hi : 37 Hi : 26 Me : 23 Lo : 17	135		
Available external static pressure		Pa	0	0		
Outside air intake			Possible	—		
Air filter, Quality / Quantity			Pocket plastic net ×1(Washable)	—		
Shock & vibration absorber			Rubber sleeve(for fan motor)	Rubber sleeve(for compressor)		
Electric heater		W	—	20 (Crank case heater)		
Operation control	Remote control		(Option) Wired : RC-EX3A, RC-E5, RCH-E3 Wireless : RCN-T-5AW-E2			
	Room temperature control		Thermostat by electronics			
	Operation display		—			
Safety equipments			Overload protection for fan motor Frost protection thermostat Internal thermostat for fan motor Abnormal discharge temperature protection			
Installation data	Refrigerant piping size (O.D.)	mm	Liquid line : I/U φ 9.52 (3/8") ② φ 9.52(3/8")x0.8 ① φ 9.52(3/8")x0.8 or φ 12.7(1/2")x0.8 O/U φ 9.52(3/8") Gas line: I/U φ 15.88 (5/8") ② φ 15.88(5/8")x1.0 ① φ 22.22(7/8")x1.0 or φ 25.4(1")x1.0 or φ 28.58(1 1/8")x1.0 O/U φ 22.22 (7/8")			
	Connecting method		Flare piping	Flare piping		
	Attached length of piping	m	—	—		
	Insulation for piping		Necessary (both Liquid & Gas lines)			
	Refrigerant line (one way) length	m	Max.70m (Liquid piping: φ 12.7, Gas piping: φ 25.4 or φ 28.58), Max.40m(Liquid piping: φ 9.52), Max.35m(Gas piping: φ 22.22)			
	Vertical height diff. between O/U and I/U	m	Max.30m (Outdoor unit is higher) Max.15m (Outdoor unit is lower)			
Drain hose		Hose connectable with VP25(O.D.32)		Hole size φ 20 x 3 pcs		
Drain pump, max lift height		mm	Built-in drain pump , 850			
Recommended breaker size		A	—			
L.R.A. (Locked rotor ampere)		A	5/5			
Interconnecting wires Size x Core number			φ 1.6mm x 3 cores (Including earth cable) / Terminal block (Screw fixing type)			
IP number			IPX0	IP24		
Standard accessories			Mounting kit, Drain hose	Connecting pipe, Edging		
Option parts			—			
Notes (1) The data are measured at the following conditions.			The pipe length is 7.5m.			
	Item	Indoor air temperature		Outdoor air temperature		Standards
Operation		DB	WB	DB	WB	
	Cooling	27°C	19°C	35°C	24°C	ISO5151-T1
	Heating	20°C	—	7°C	6°C	ISO5151-H1
(2) This air-conditioner is manufactured and tested in conformity with the ISO.						
(3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.						
(4) Select the breaker size according to the own national standard.						
(5) The operation data indicate when the air-conditioner is operated at 400V 50Hz or 380V 60Hz.						
(6) Indoor unit specifications for one unit. Capacity and operation data is two indoor units are combined and run together.						
(7) Branching pipe set "DIS-WB1G"×1(Option). ① : Pipe of O/U-Branch. ② : Pipe of Branch-I/U						
(8) Use 1/2H pipes having a 1.0mm or thicker wall for φ 19.05 or larger pipes.						

Item		Model	FDT250VSAPVH		
			Indoor unit FDT125VH (2 units)	Outdoor unit FDC250VSA	
Power source			3 Phase, 380-415V 50Hz / 380V 60Hz		
Operation data	Nominal cooling capacity (range)	kW	24.0 [6.9(Min.) - 28.0(Max.)]		
	Nominal heating capacity (range)	kW	27.0 [5.5(Min.) - 31.5(Max.)]		
	Power consumption	Cooling	kW	8.36	
		Heating		7.15	
	Max power consumption		13.7		
	Running current	Cooling	A	13.4 / 13.8	
		Heating		11.3 / 11.9	
	Inrush current, max current		5 , 21		
	Power factor	Cooling	%	90 / 92	
		Heating		91	
	EER	Cooling		2.87	
	COP	Heating		3.78	
	Sound power level	Cooling	dB(A)	63	
Heating		73			
Sound pressure level	Cooling	dB(A)	64		
	Heating		75		
Sound pressure level	Cooling	dB(A)	P-Hi : 48 Hi : 41 Me : 39 Lo : 31		
	Heating		P-Hi : 48 Hi : 41 Me : 38 Lo : 31		
Silent mode sound pressure level			—		
Exterior dimensions (Height x Width x Depth)		mm	Unit 298 x 840 x 840 Panel 35 x 950 x 950	1505x970x370	
Exterior appearance (Munsell color)			Plaster white (6.8Y8.9/0.2) near equivalent	Stucco white (4.2Y7.5/1.1) near equivalent	
Net weight		kg	Unit 25 Panel 5	143	
Compressor type & Q'ty			—	GTC5150NC40KF×1	
Compressor motor (Starting method)		kW	—	Direct line start	
Refrigerant oil (Amount, type)		L	—	1.45 (M-MA32R)	
Refrigerant (Type, amount, pre-charge length)		kg	R410A 7.2 in outdoor unit (Pre-charged up to the piping length of 30m)		
Heat exchanger			Louver fin & inner grooved tubing	M shape fin & inner grooved tubing	
Refrigerant control			Electronic expansion valve		
Fan type & Q'ty			Turbo fan ×1	Propeller fan ×2	
Fan motor (Starting method)		W	140 < Direct line start >	86 x 2 < Direct line start >	
Air flow	Cooling	m³/min	P-Hi : 38 Hi : 28 Me : 25 Lo : 18		
	Heating		143		
Available external static pressure		Pa	0	0	
Outside air intake			Possible	—	
Air filter, Quality / Quantity			Pocket plastic net ×1(Washable)	—	
Shock & vibration absorber			Rubber sleeve(for fan motor)	Rubber sleeve(for compressor)	
Electric heater		W	—	20 (Crank case heater)	
Operation control	Remote control		(Option) Wired : RC-EX3A, RC-E5, RCH-E3 Wireless : RCN-T-5AW-E2		
	Room temperature control		Thermostat by electronics		
	Operation display		—		
Safety equipments			Overload protection for fan motor Frost protection thermostat Internal thermostat for fan motor Abnormal discharge temperature protection		
Installation data	Refrigerant piping size (O.D.)	mm	Liquid line : I/U φ 9.52 (3/8") ② φ 9.52(3/8")x0.8 ① φ 12.7(1/2")x0.8 O/U φ 12.7 (1/2") Gas line: I/U φ 15.88 (5/8") ② φ 15.88(5/8")x1.0 ① φ 22.22(7/8")x1.0 or φ 25.4(1")x1.0 or φ 28.58(1 1/8")x1.0 O/U φ 22.22 (7/8")		
	Connecting method		Flare piping	Liquid : Flare / Gas : Brazing	
	Attached length of piping	m	—	—	
	Insulation for piping		Necessary (both Liquid & Gas lines)		
	Refrigerant line (one way) length	m	Max.70m		
	Vertical height diff. between O/U and I/U	m	Max.30m (Outdoor unit is higher)	Max.15m (Outdoor unit is lower)	
Drain hose			Hose connectable with VP25(O.D.32)	Hole size φ 20 x 3 pcs	
Drain pump, max lift height		mm	Built-in drain pump , 850	—	
Recommended breaker size		A	—		
L.R.A. (Locked rotor ampere)		A	5/5		
Interconnecting wires Size x Core number			φ 1.6mm x 3 cores (Including earth cable) / Terminal block (Screw fixing type)		
IP number			IPX0	IP24	
Standard accessories			Mounting kit, Drain hose	Connecting pipe, Edging	
Option parts			—		

Notes (1) The data are measured at the following conditions. The pipe length is 7.5m.

Item	Indoor air temperature		Outdoor air temperature		Standards
	DB	WB	DB	WB	
Cooling	27°C	19°C	35°C	24°C	ISO5151-T1
Heating	20°C	—	7°C	6°C	ISO5151-H1

- (2) This air-conditioner is manufactured and tested in conformity with the ISO.
- (3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.
- (4) Select the breaker size according to the own national standard.
- (5) The operation data indicate when the air-conditioner is operated at 400V 50Hz or 380V 60Hz.
- (6) Indoor unit specifications for one unit. Capacity and operation data is two indoor units are combined and run together.
- (7) Branching pipe set "DIS-WB1G"×1(Option). ① : Pipe of O/U-Branch, ② : Pipe of Branch-I/U
- (8) Use 1/2H pipes having a 1.0mm or thicker wall for φ 19.05 or larger pipes.

(3) Triple type

Item		Model	FDT200VSATVH		
			Indoor unit FDT71VH (3 units)	Outdoor unit FDC200VSA	
Power source			3 Phase, 380-415V 50Hz / 380V 60Hz		
Operation data	Nominal cooling capacity (range)	kW	19.0 [5.2(Min.) - 22.4(Max.)]		
	Nominal heating capacity (range)	kW	22.4 [3.3(Min.) - 25.0(Max.)]		
	Power consumption	Cooling	kW	6.01	
		Heating		5.76	
	Max power consumption		12.0		
	Running current	Cooling	A	9.6 / 10.0	
		Heating		9.2 / 9.6	
	Inrush current, max current		5 , 20		
	Power factor	Cooling	%	90 / 91	
		Heating		90 / 91	
	EER	Cooling		3.16	
	COP	Heating		3.89	
Sound power level	Cooling	dB(A)	59		
	Heating		60		
Sound pressure level	Cooling	dB(A)	P-Hi : 46 Hi : 34 Me : 31 Lo : 26		
	Heating		P-Hi : 46 Hi : 34 Me : 31 Lo : 26		
Silent mode sound pressure level			—		
Exterior dimensions (Height x Width x Depth)		mm	Unit 236 × 840 × 840 Panel 35 × 950 × 950		
Exterior appearance (Munsell color)			Plaster white (6.8Y8.9/0.2) near equivalent Stucco white (4.2Y7.5/1.1) near equivalent		
Net weight		kg	Unit 21 Panel 5 115		
Compressor type & Q'ty			— RMT5134MDE3×1		
Compressor motor (Starting method)		kW	— Direct line start		
Refrigerant oil (Amount, type)		L	— 0.9(compressor) + 0.6(unit) (M-MA68)		
Refrigerant (Type, amount, pre-charge length)		kg	R410A 5.6 in outdoor unit (Pre-charged up to the piping length of 30m)		
Heat exchanger			Louver fin & inner grooved tubing M shape fin & inner grooved tubing		
Refrigerant control			Electronic expansion valve		
Fan type & Q'ty			Turbo fan ×1 Propeller fan ×2		
Fan motor (Starting method)		W	50 < Direct line start > 86 × 2 < Direct line start >		
Air flow		Cooling Heating m ³ /min	P-Hi : 28 Hi : 18 Me : 15 Lo : 12 135		
Available external static pressure		Pa	0 0		
Outside air intake			Possible —		
Air filter, Quality / Quantity			Pocket plastic net ×1(Washable) —		
Shock & vibration absorber			Rubber sleeve(for fan motor) Rubber sleeve(for compressor)		
Electric heater		W	— 20 (Crank case heater)		
Operation control	Remote control		(Option) Wired : RC-EX3A, RC-E5, RCH-E3 Wireless : RCN-T-5AW-E2		
	Room temperature control		Thermostat by electronics		
	Operation display		—		
Safety equipments			Overload protection for fan motor Frost protection thermostat Internal thermostat for fan motor Abnormal discharge temperature protection		
Installation data	Refrigerant piping size (O.D.)	mm	Liquid line : I/U φ 9.52 (3/8") ② φ 9.52(3/8")x0.8 ① φ 9.52(3/8")x0.8 or φ 12.7(1/2")x0.8 O/U φ 9.52(3/8") Gas line: I/U φ 15.88 (5/8") ② φ 15.88(5/8")x1.0 ① φ 22.22(7/8")x1.0 or φ 25.4(1")x1.0 or φ 28.58(1 1/8")x1.0 O/U φ 22.22 (7/8")		
	Connecting method		Flare piping Liquid : Flare / Gas : Brazing		
	Attached length of piping	m	— —		
	Insulation for piping		Necessary (both Liquid & Gas lines)		
	Refrigerant line (one way) length	m	Max.70m (Liquid piping: φ 12.7, Gas piping: φ 25.4 or φ 28.58), Max.40m (Liquid piping: φ 9.52), Max.35m (Gas piping: φ 22.22)		
	Vertical height diff. between O/U and I/U	m	Max.30m (Outdoor unit is higher) Max.15m (Outdoor unit is lower)		
Drain hose		Hose connectable with VP25(O.D.32) Hole size φ 20 x 3 pcs			
Drain pump, max lift height		mm	Built-in drain pump , 850 —		
Recommended breaker size		A	—		
L.R.A. (Locked rotor ampere)		A	5/5		
Interconnecting wires Size x Core number			φ 1.6mm x 3 cores (Including earth cable) / Terminal block (Screw fixing type)		
IP number			IPX0 IP24		
Standard accessories			Mounting kit, Drain hose Connecting pipe, Edging		
Option parts			—		

Notes (1) The data are measured at the following conditions.

The pipe length is 7.5m.

Item	Indoor air temperature		Outdoor air temperature		Standards
	DB	WB	DB	WB	
Cooling	27°C	19°C	35°C	24°C	ISO5151-T1
Heating	20°C	—	7°C	6°C	ISO5151-H1

(2) This air-conditioner is manufactured and tested in conformity with the ISO.

(3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.

(4) Select the breaker size according to the own national standard.

(5) The operation data indicate when the air-conditioner is operated at 400V 50Hz or 380V 60Hz.

(6) Indoor unit specifications for one unit. Capacity and operation data is two indoor units are combined and run together.

(7) Branching pipe set "DIS-TB1G"×1(Option). ① : Pipe of O/U-Branch, ② : Pipe of Branch-I/U

(8) Use 1/2H pipes having a 1.0mm or thicker wall for φ 19.05 or larger pipes.

2.2 EXTERIOR DIMENSIONS

(1) Indoor units See page 12.


(2) Outdoor units

Models FDC100VNA, 125VNA, 140VNA
100VSA, 125VSA, 140VSA

Notes

- (1) It must not be surrounded by walls on the four sides.
- (2) The unit must be fixed with anchor bolts. An anchor bolt must not protrude more than 15mm.
- (3) Where the unit is subject to strong winds, lay it in such a direction that the blower outlet faces perpendicularly to the dominant wind direction.
- (4) Leave 1m or more space above the unit.
- (5) A wall in front of the blower outlet must not exceed the unit's height.
- (6) The model name label is attached on the lower right corner of the front panel.

Symbol	Content
A	Service valve connection (gas side) $\phi 15.88$ (5/8") (Flare)
B	Service valve connection (liquid side) $\phi 9.52$ (3/8") (Flare)
C	Pipe / cable draw-out hole
D	Drain discharge hole $\phi 20 \times 3$ places
E	Anchor bolt hole M10 $\times 4$ places
F	Cable draw-out hole $\phi 30 \times 3$ places

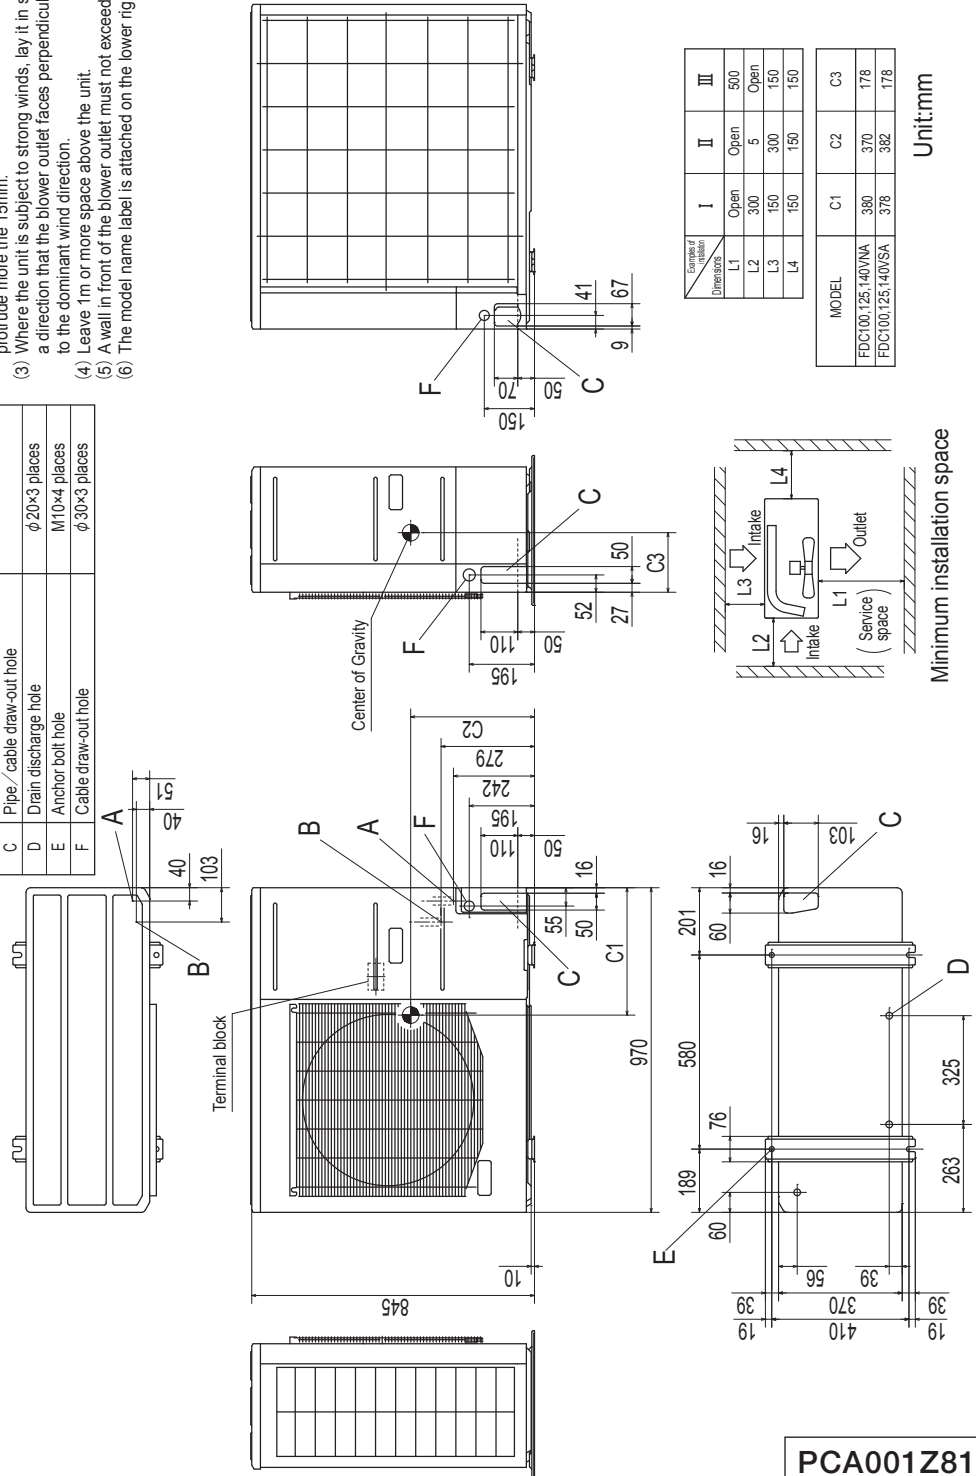






PCA001Z816

Model FDC200VSA

Notes

- (1) It must not be surrounded by walls on the four sides.
- (2) The unit must be fixed with anchor bolts.
An anchor bolt must not protrude more than 15mm.
- (3) Where the unit is subject to strong winds, lay it in such a direction that the blower outlet faces perpendicularly to the dominant wind direction.
- (4) Leave 1m or more space above the unit.
- (5) A wall in front of the blower outlet must not exceed the units height.
- (6) The model name label is attached on the lower right corner of the front panel.
- (7) Connect the service valve with local pipe by using the pipe of the attachment.
(Gas side only)
- (8) Regarding attaching the pipe of accessories, refer to service manual.

Symbol	Content
A	Service valve connection of the attached connecting pipe (gas side) φ19.05(3/4") (Flare)
B	Service valve connection (liquid side) φ9.52(3/8") (Flare)
C	Pipe/cable draw-out hole
D	Drain discharge hole φ20×3 places
E	Anchor bolt hole M10×4 places
F	Cable draw-out hole φ30 (front) φ30 (side) φ30 (back)

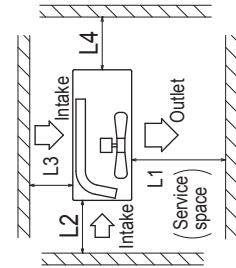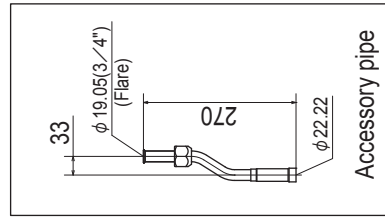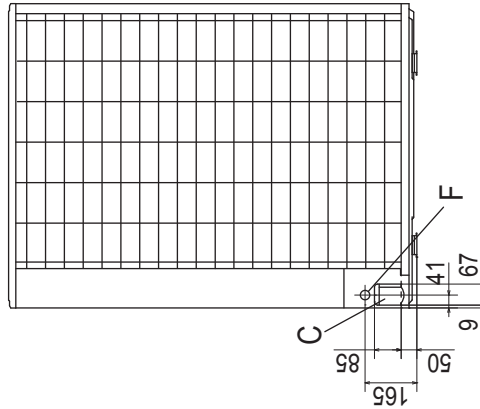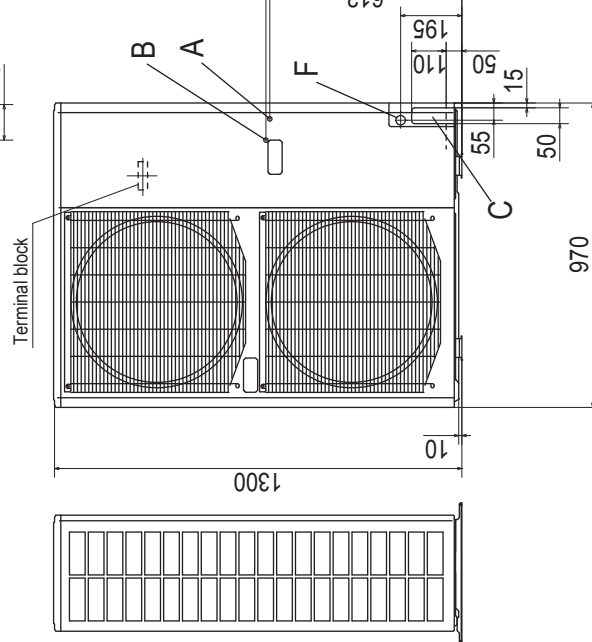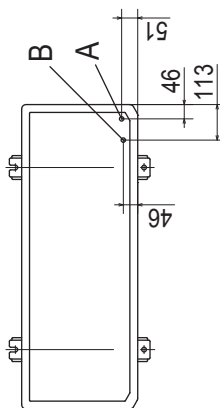

Minimum installation space

Unit:mm

Dimensions	Examples of installation		
	I	II	III
L1	Open	Open	Open
L2	300	5	5
L3	150	300	150
L4	5	5	5






PCA001Z768

Model FDC250VSA

Notes

- (1) It must not be surrounded by walls on the four sides.
- (2) The unit must be fixed with anchor bolts.
- (3) An anchor bolt must not protrude more than 15mm.
- (4) Where the unit is subject to strong winds, lay it in such a direction that the blower outlet faces perpendicularly to the dominant wind direction.
- (5) Leave 1m or more space above the unit.
- (6) A wall in front of the blower outlet must not exceed the units height.
- (7) The model name label is attached on the lower right corner of the front panel.
- (8) Connect the service valve with local pipe by using the pipe of the attachment. (Gas side only)
- (9) Regarding attaching the pipe of accessories, refer to service manual.


Symbol	Content
A	Service valve connection of the attached connecting pipe(gas side) $\phi 19.05(3/4)$ (Flare)
B	Service valve connection (liquid side) $\phi 12.7(1/2)$ (Flare)
C	Cable draw-out hole (front-side) $\phi 30 \times 2$ places
D	Cable draw-out hole (front-side) $\phi 45 \times 2$ places
E	Cable draw-out hole (back) $\phi 50$
F	Pipe/cable draw-out hole 4 places
G	Drain discharge hole $\phi 20 \times 3$ places
H	Anchor bolt hole M10 \times 4 places

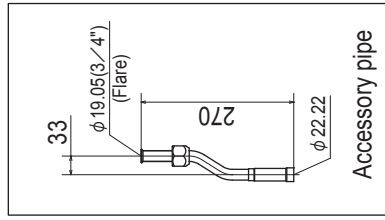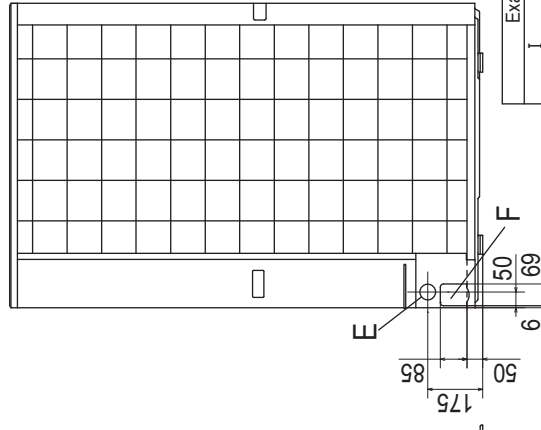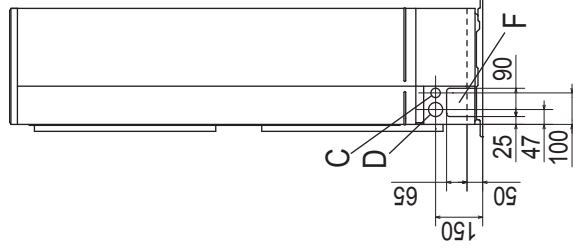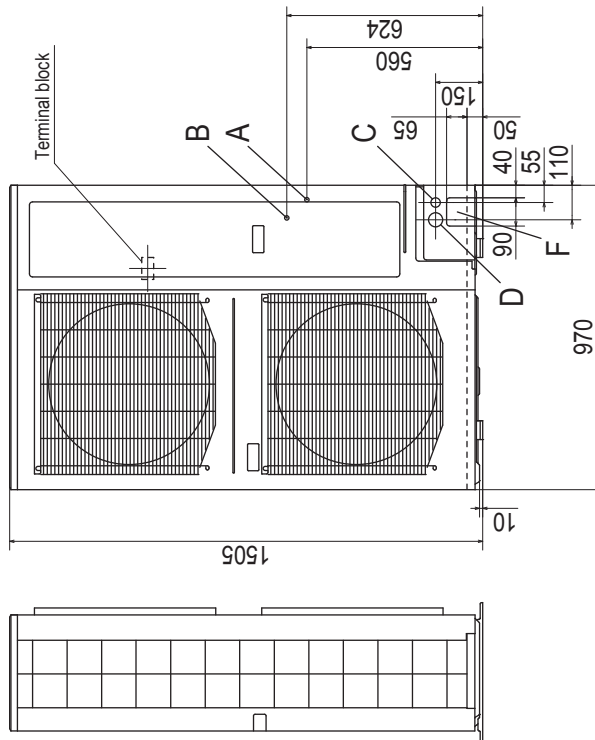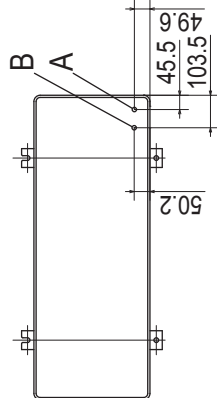

Unit:mm

Examples of installation	
I	II
Open	Open
L1 300	L2 300
L3 150	L3 150
L4 250(5) ^{※1}	L4 250(5) ^{※1}
Dimensions	Dimensions
	500
	Open
	150
	250(5) ^{※1}
	250(5) ^{※1}

※1 At the time of the installation at () dimension, Secure space of 250mm in lateral (L4) by unit movement at the time of the exchange work of the compressor.

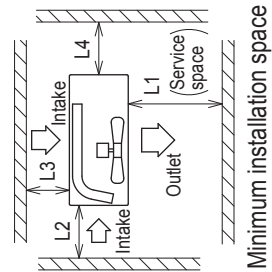

PCB003Z865


(3) Remote control (Option parts) See page 16.

2.3 ELECTRICAL WIRING

- (1) Indoor units See page 19.
- (2) Outdoor units
Models FDC100VNA, 125VNA, 140VNA

Item	Description
CH	Crankcase heater
CM	Compressor motor
CN	Connector
CT1	Current sensor
DH	Drain pan heater
EEVC	Expansion valve for cooling
EEVH	Expansion valve for heating
F	Fuse
FM1	Fan motor
IPM	Intelligent power module
LED1	Indication lamp (GREEN)
LED2	Indication lamp (RED)
L1,2	Reactor
SW1	Switch
SW3,5,7	Local setting switch
TB	Terminal block
Tho-A	Temperature sensor (Outdoor air)
Tho-D	Temperature sensor (Discharge pipe)
Tho-R1,R2	Temperature sensor (Heat exchanger)
Tho-S	Temperature sensor (Suction pipe)
20S	Solenoid valve for 4-way valve
52X1	Auxiliary relay
52X3	Auxiliary relay
52X11	Auxiliary relay (for 20S)
52X14	Auxiliary relay (for CH)
52X15	Auxiliary relay (for DH)
63H1	High pressure switch

Color marks	Color
Mark	Color
BK	Black
BL	Blue
BR	Brown
GN	Green
OR	Orange
RD	Red
WH	White
Y	Yellow
Y/GN	Yellow/Green

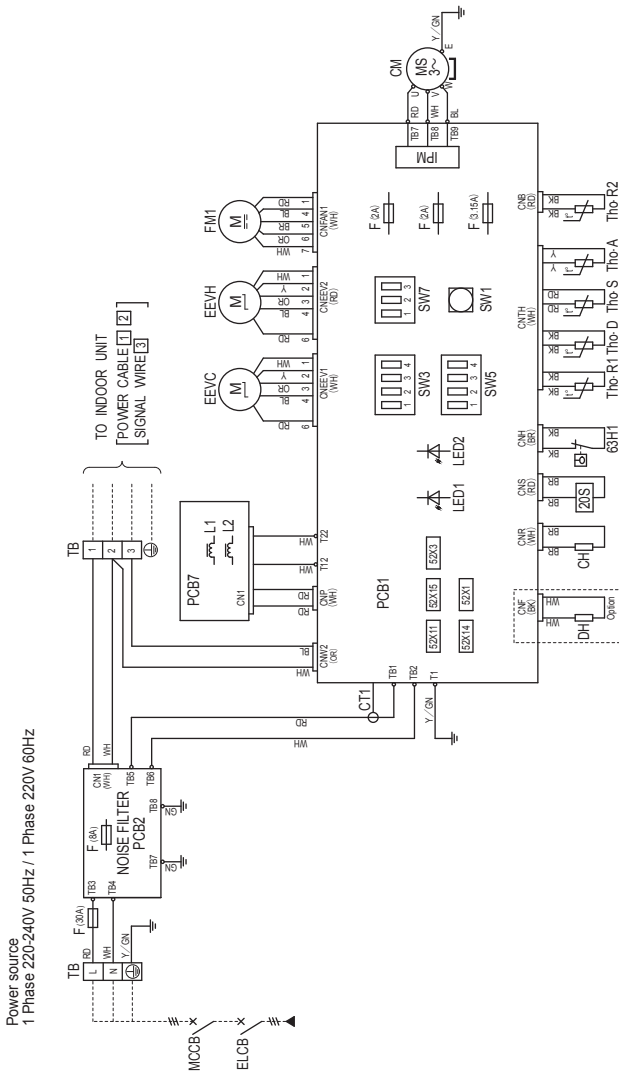

Local setting switch SW3.5.7 (Set up at shipment OFF)	Defrost control change	Snow guard fan control	Trial operation	High height difference operation control	Defrost control change	Lower noise silent mode
<p>The defrosting operation interval becomes shorter by turning ON this switch. This switch should be turned ON in the area where outside temperature becomes below the freezing point.</p> <p>When this switch is turned ON, the outdoor unit fan will run for 10 seconds in every 10 minutes, when outdoor temperature falls to 3°C or lower and the compressor is not running when the unit is used in a very snowy country, set this switch to ON.</p> <p>Method of trial operation</p> <ol style="list-style-type: none"> ① Trial operation can be performed by using SW3.3,4. ② Compressor will be in the operation when SW3.3 is ON. ③ Control trial operation will be performed when SW3.4 is OFF and the running trial operation when SW3.4 is ON. ④ Be sure to turn OFF SW3.3 after the trial operation is finished. <p>Set this switch to ON when outdoor unit is installed at a position higher than indoor unit by 30m or more.</p> <p>Set this switch to ON when managing unit operation by remote control connected external equipment.</p> <p>Upper limit of compressor speed and fan speed becomes lower in silent mode.</p>						

Model	MAX over current (A)	Power cable size (mm ²)	Power cable length (m)	Indoor-outdoor wire size x number	Earth wire size (mm)
100	24	5.5	22	φ 1.6mm x 3	φ 1.6
125					
140					

※At the connection with the duct type indoor unit.

- The specifications shown in the above table are for units without heaters. For units with heaters, refer to the installation instructions or the construction instructions of the indoor unit.
- Switchgear or Circuit breaker capacity which is calculated from MAX. over current should be chosen along the regulations in each country.
- The cable specifications are based on the assumption that a metal or plastic conduit is used with no more than three cables contained in a conduit and a voltage drop is 2%. For an installation falling outside of these conditions, please follow the internal cabling regulations. Adapt it to the regulation in effect in each country.


PCA001Z817

Models FDC100VSA, 125VSA, 140VSA

Meaning of marks

Item	Description
CH	Crankcase heater
CM	Compressor motor
CN	Connector
DH	Drain pan heater
EEVC	Expansion valve for cooling
EEVH	Expansion valve for heating
F	Fuse
FM1	Fan motor
IPM	Intelligent power module
L	Reactor
LED1	Indication lamp (GREEN)
LED2	Indication lamp (RED)
SW1	Switch
SW3.5.7	Local setting switch
TB	Terminal block
Tho-A	Temperature sensor (Outdoor air)
Tho-D	Temperature sensor (Discharge pipe)
Tho-R1,R2	Temperature sensor (Heat exchanger)
Tho-S	Temperature sensor (Suction pipe)
20S	Solenoid valve for 4-way valve
52X1	Auxiliary relay
52X2	Auxiliary relay
52X6	Auxiliary relay (for FM1)
52X11	Auxiliary relay (for 20S)
52X14	Auxiliary relay (for CH)
52X15	Auxiliary relay (for DH)
63H1	High pressure switch

Mark	Color
BK	Black
BL	Blue
BR	Brown
GN	Green
OR	Orange
RD	Red
WH	White
Y	Yellow
Y/GN	Yellow/ Green

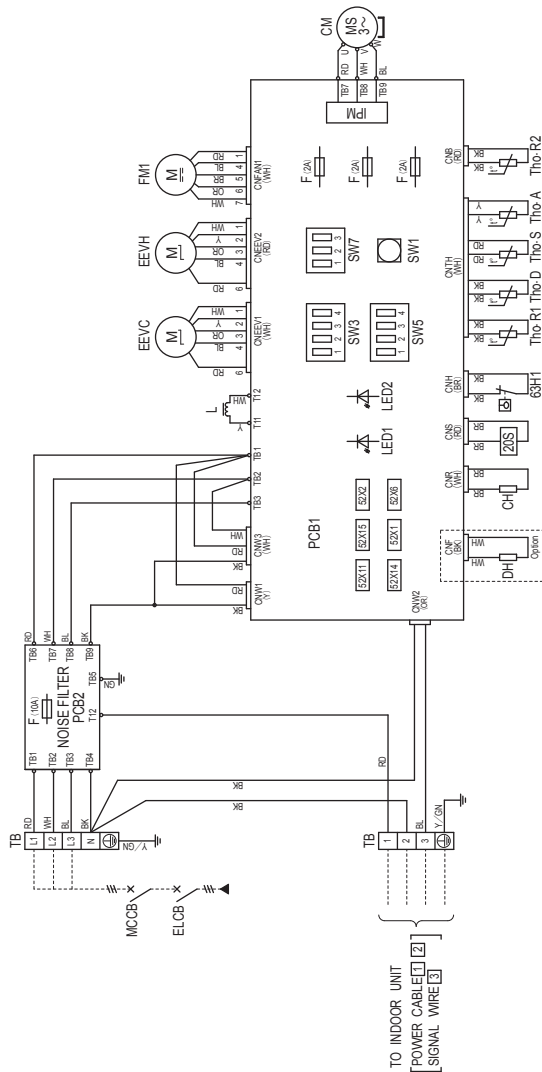

Power source
3 Phase 380~415V 50Hz

Local setting switch SW3.5.7 (Set up at shipment OFF)

SW3-1	Defrost control change
SW3-2	Snow guard fan control
SW3-3,4	Trial operation
SW5-2	High height difference operation control
SW7-2	Defrost control change
SW7-3	Lower noise silent mode

The defrosting operation interval becomes shorter by turning ON this switch. This switch should be turned ON in the area where outside temperature becomes below the freezing point.

When this switch is turned ON, the outdoor unit fan will run for 10 seconds in every 10 minutes, when outdoor temperature falls to 3°C or lower and the compressor is not running when the unit is used in a very snowy country, set this switch to ON.

Method of trial operation

- ① Trial operation can be performed by using SW3.3,4.
- ② Compressor will be in the operation when SW3.3 is ON.
- ③ Cooling trial operation will be performed when SW3.4 is OFF and heating trial operation when SW3.4 is ON.
- ④ Be sure to turn OFF SW3.3 after the trial operation is finished.

Set this switch to ON when outdoor unit is installed at a position higher than indoor unit by 30m or more.

Set this switch to ON when managing unit operation by remote control connected external equipment.

Upper limit of compressor speed and fan speed becomes lower in silent mode.

Power cable, indoor-outdoor connecting wires


Model	MAX over current (A)	Power cable size (mm ²)	Power cable length (m)	Indoor-outdoor wire size x number	Earth wire size (mm)
100	15	3.5	46	φ 1.6mm x 3	φ 1.6
125					
140					
Model	MAX over current (A)	Power cable size (mm ²)	Power cable length (m)	Indoor-outdoor wire size x number	Earth wire size (mm)
100	17	3.5	40	φ 1.6mm x 3	φ 1.6
125					
140					

※At the connection with the ducttype indoor unit.

- The specifications shown in the above table are for units without heaters. For units with heaters, refer to the installation instructions or the construction instructions of the indoor unit.
- Switchgear of Circuit breaker capacity which is calculated from MAX. over current should be chosen along the regulations in each country.
- The cable specifications are based on the assumption that a metal or plastic conduit is used with no more than three cables contained in a conduit and a voltage drop is 2%. For an installation falling outside of these conditions, please follow the internal cabling regulations. Adapt it to the regulation in effect in each country.

PCA001Z818

Model FDC200VSA

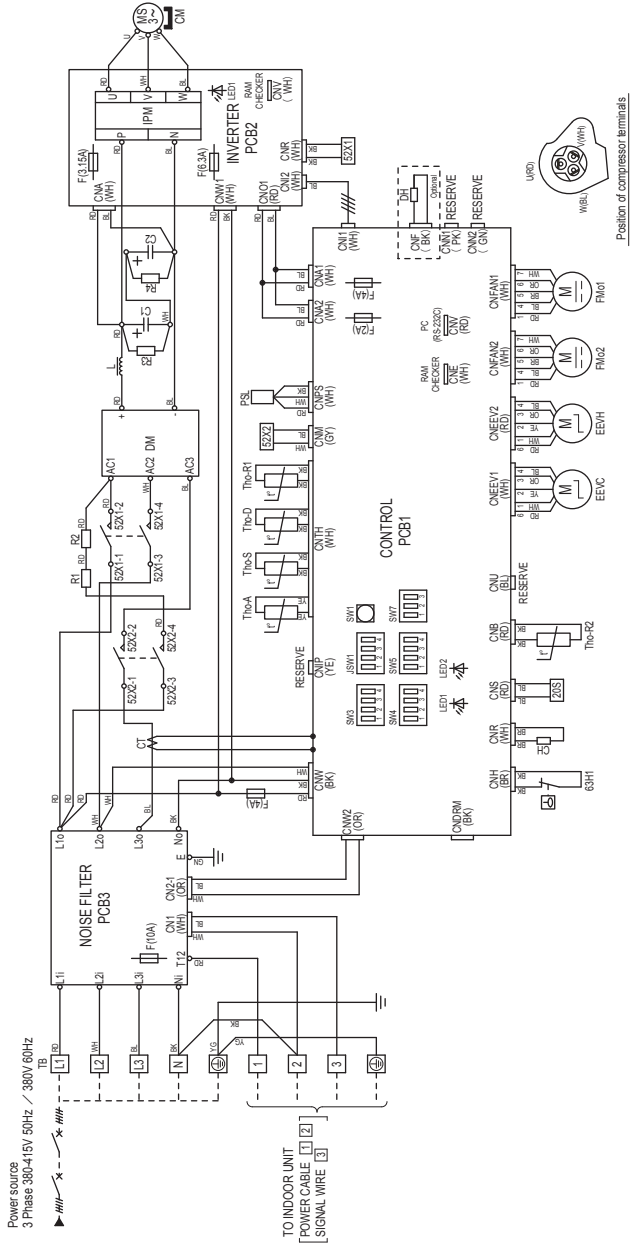

Meaning of marks

Mark	Parts name
CH	Criticase heater
CM	Compressor motor
CNA-Z	Connector
CT	Current sensor
DH	Drain pan heater
DM	Diode module
F	Fuse
FMot.2	Fan motor
IPM	Intelligent power module
L	Reactor
LED1	Indication lamp (GREEN)
LED2	Indication lamp (RED)
PSL	Low pressure sensor
EEVC	Expansion valve for cooling
EEVH	Expansion valve for heating
SW1	Pump down switch
SW3-5,7	Local setting switch
TB	Terminal block
Tho-A	Temperature sensor (Outdoor air)
Tho-D	Temperature sensor (Discharge pipe)
Tho-R1, R2	Temperature sensor (Heat exchanger)
Tho-S	Temperature sensor (Suction pipe)
20S	Solenoid coil for 4-way valve
52X1,2	Relay
63H1	High pressure switch

Color marks

Mark	Color
BK	Black
BL	Blue
BR	Brown
GN	Green
OR	Orange
RD	Red
WH	White
YE	Yellow
YG	Yellow/Green
GY	Gray
PK	Pink

Local setting switch SW3 (Set up at shipment OFF)

SW3-1	Defrost control change
SW3-2	Snow guard fan control
SW3-3,4	Trial operation

The defrosting operation interval becomes shorter by turning ON this switch. This switch should be turned ON in the area where outside temperature becomes below the freezing point.

When this switch is turned ON, the outdoor unit fan will run for 30 seconds in every 10 minutes, when outdoor temperature falls to 3°C or lower and the compressor is not running when the unit is used in a very snowy country, set this switch to ON.

Method of trial operation

1. Trial operation can be performed by using SW3-3,4.
2. Compressor will be in the operation when SW3-3 is ON.
3. Cooling trial operation will be performed when SW3-4 is OFF, and heating trial operation when SW3-4 is ON.
4. Be sure to turn OFF SW3-3 after the trial operation is finished.

Power cable, indoor-outdoor connecting wires

MAX over current (A)	Power cable size (mm)	Indoor-outdoor wire size x number	Earth wire size
25	5.5	φ1.6mm x 3	φ1.6mm


- The specifications shown in the above table are for units without heaters. For units with heaters, refer to the installation instructions or the construction instructions of the indoor unit.
- Switchgear of circuit breaker capacity which is calculated from MAX. over current should be chosen along the regulations in each country
- The cable specifications are based on the assumption that a metal or plastic conduit is used with no more than three cables contained in a conduit and a voltage drop is 2%. For an installation falling outside of these conditions, please follow the internal cabling regulations. Adapt it to the regulation in effect in each country.

PCA001Z769

Model FDC250VSA

Meaning of marks

Mark	Parts name
CH	Crankcase heater
CM	Compressor motor
CNA-Z	Cometor
CT	Current sensor
DH	Drain pan heater
DM	Diode module
F	Fuse
FMo1,2	Fan motor
IPM	Intelligent power module
L	Reactor
LED1	Indication lamp (GREEN)
LED2	Indication lamp (RED)
PSL	Low pressure sensor
EEVC	Expansion valve for cooling
EEVH	Expansion valve for heating
SW1	Pump down switch
SW3-5,7	Local setting switch
TB	Terminal block
Tho-A	Temperature sensor (Outdoor air)
Tho-D	Temperature sensor (Discharge pipe)
Tho-R1,R2	Temperature sensor (Heat exchanger)
Tho-H	Temperature sensor (Compressor under dome)
Tho-S	Temperature sensor (Suction pipe)
20S	Solenoid coil for 4-way valve
SV6	Solenoid coil for 2-way valve
52X1, 2	Relay
63H1	High pressure switch

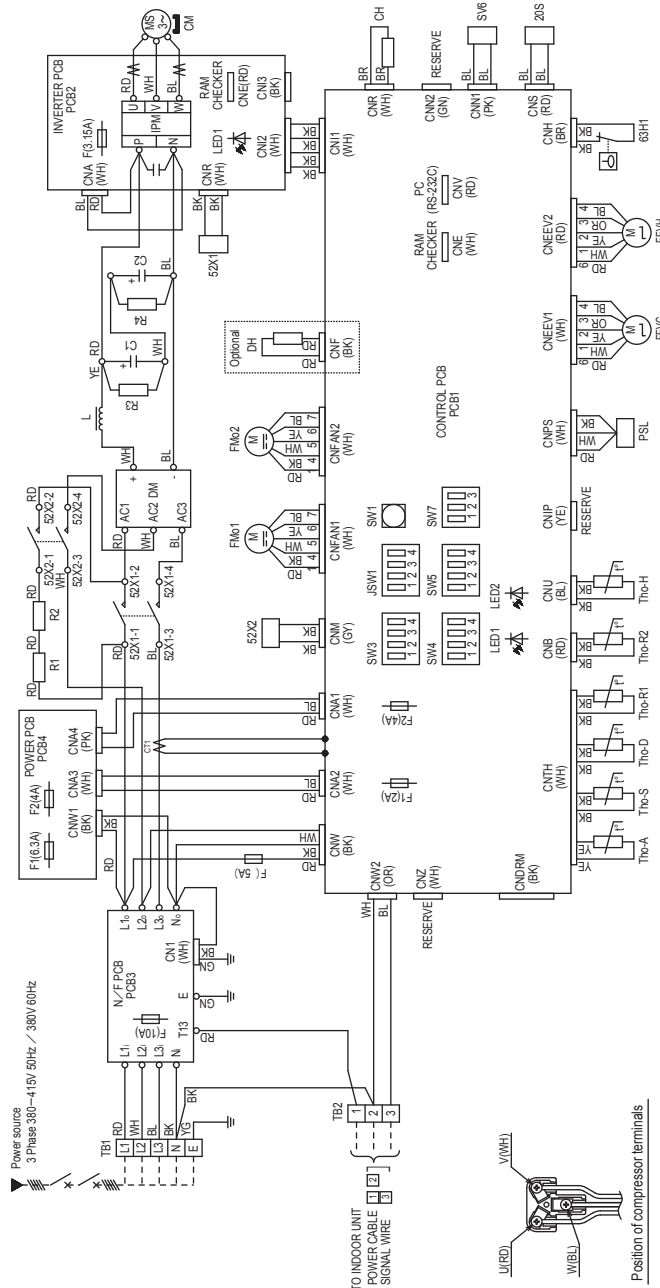

Color marks

Mark	Color
BK	Black
BL	Blue
BR	Brown
GN	Green
OR	Orange
RD	Red
WH	White
YE	Yellow
YG	Yellow/Green
GY	Gray
PK	Pink

Local setting switch SW3 (Set up at shipment OFF)

SW3-1	SW3-2	SW3-3,4
Defrost control change	Snow guard fan control	Trial operation

The defrosting operation interval becomes shorter by turning ON this switch. This switch should be turned ON in the area where outside temperature becomes below the freezing point.

When this switch is turned ON, the outdoor unit fan will run for 30 seconds in every 10 minutes, when outdoor temperature falls to 3°C or lower and the compressor is not running when the unit is used in a very snowy country, set this switch to ON.

Method of trial operation
 ① Trial operation can be performed by using SW3-3,4.
 ② Compressor will be in the operation when SW3-3 is ON.
 ③ Cooling trial operation will be performed when SW3-4 is OFF, and heating trial operation when SW3-4 is ON.
 ④ Be sure to turn OFF SW3-3 after the trial operation is finished.

Power cable, indoor-outdoor connecting wires

MAX over current (A)	Power cable size (mm ²)	Power cable length (m)	Indoor-outdoor wire size x number	Earth wire size
27	5.5	40	φ 1.6mm x 3	φ 1.6mm

- The specifications shown in the above table are for units without heaters. For units with heaters, refer to the installation instructions or the construction instructions of the indoor unit.
- Switchgear of circuit breaker capacity which is calculated from MAX. over current should be chosen along the regulations in each country.
- The cable specifications are based on the assumption that a metal or plastic conduit is used with no more than three cables contained in a conduit and a voltage drop is 2%. For an installation falling outside of these conditions, please follow the internal cabling regulations. Adapt it to the regulation in effect in each country.

PCB003Z866

2.4 NOISE LEVEL

Notes(1) The data are based on the following conditions.

Ambient air temperature: Indoor unit 27°CWB. Outdoor unit 35°CDB.

(2) The data in the chart are measured in an anechoic room.

(3) The noise levels measured in the field are usually higher than the data because of reflection.

(1) Indoor units See page 23.

(2) Outdoor units

Measured based on JIS B 8616

Mike position: at highest noise level in position as mentioned below


Distance from front side 1m

Height 1m


(a) FDC100-140

(i) Sound power level


Models FDC100VNA,100VSA
Noise level 70 dB (A)

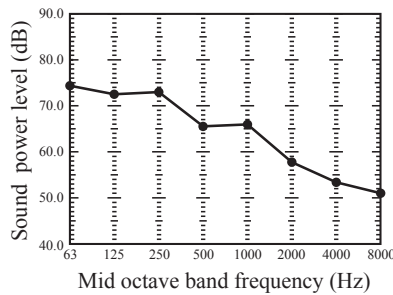

Models FDC125VNA,125VSA
Noise level 71 dB (A)

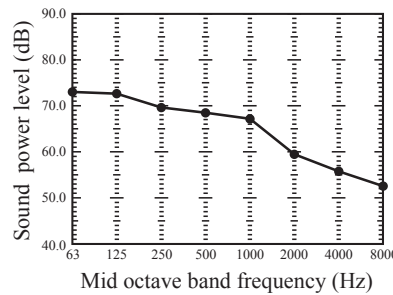


Models FDC140VNA,140VSA
Noise level 73 dB (A)

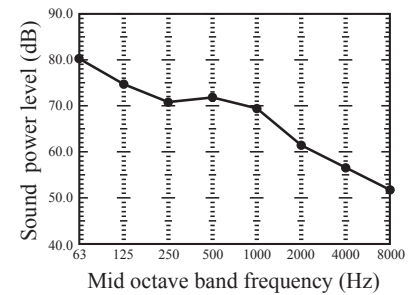


(ii) Sound pressure level

1) Rating mode


Models FDC100VNA,100VSA
Cooling noise level Hi : 54 dB (A)
Heating noise level Hi : 56 dB (A)

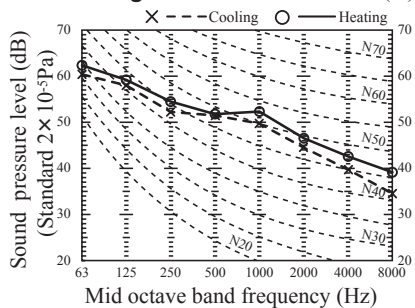

Models FDC125VNA,125VSA
Cooling noise level Hi : 55 dB (A)
Heating noise level Hi : 57 dB (A)

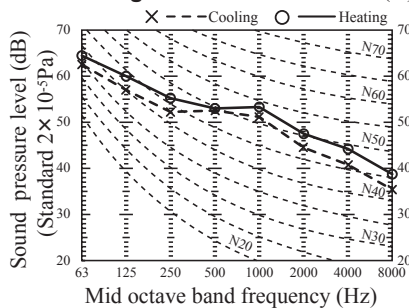


Models FDC140VNA,140VSA
Cooling noise level Hi : 57 dB (A)
Heating noise level Hi : 59 dB (A)

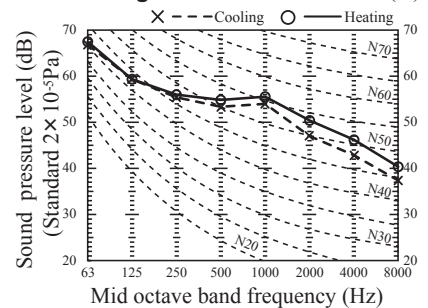


2) Silent mode


Models FDC100VNA,100VSA
Cooling noise level Hi : 50 dB (A)
Heating noise level Hi : 44 dB (A)

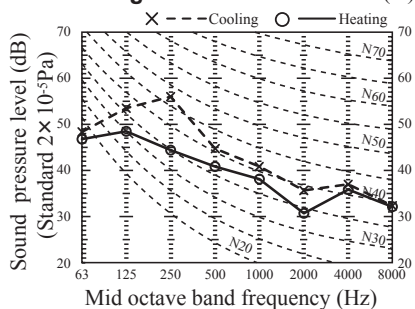

Models FDC125VNA,125VSA
Cooling noise level Hi : 51 dB (A)
Heating noise level Hi : 45 dB (A)


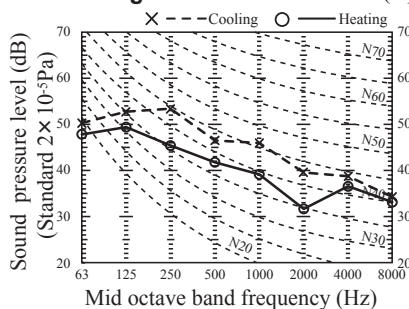


Models FDC140VNA,140VSA
Cooling noise level Hi : 53 dB (A)
Heating noise level Hi : 47 dB (A)


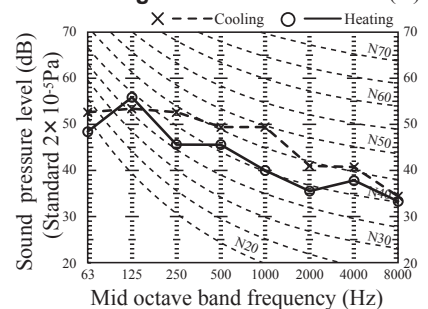


(b) FDC200, 250

Model FDC200VSA

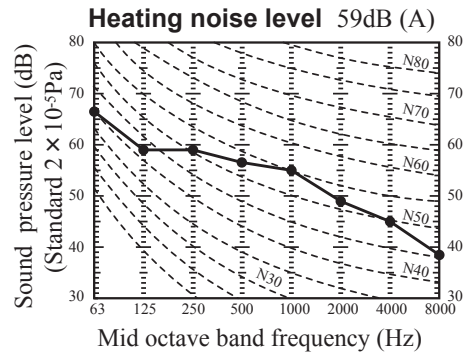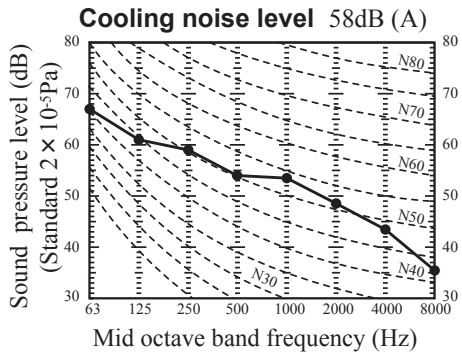

Model FDC250VSA

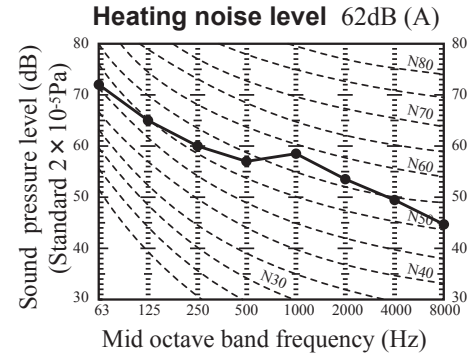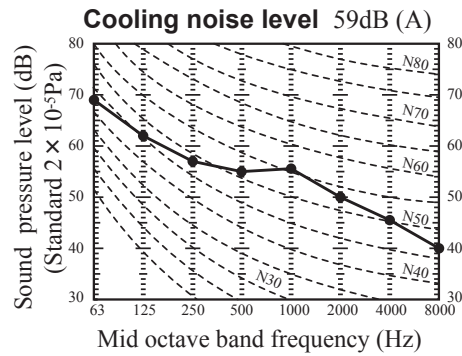


2.5 TEMPERATURE AND VELOCITY DISTRIBUTION


See page 26 of chapter 1.5.



2.6 PIPING SYSTEM

(1) Single type Models FDT100, 125, 140

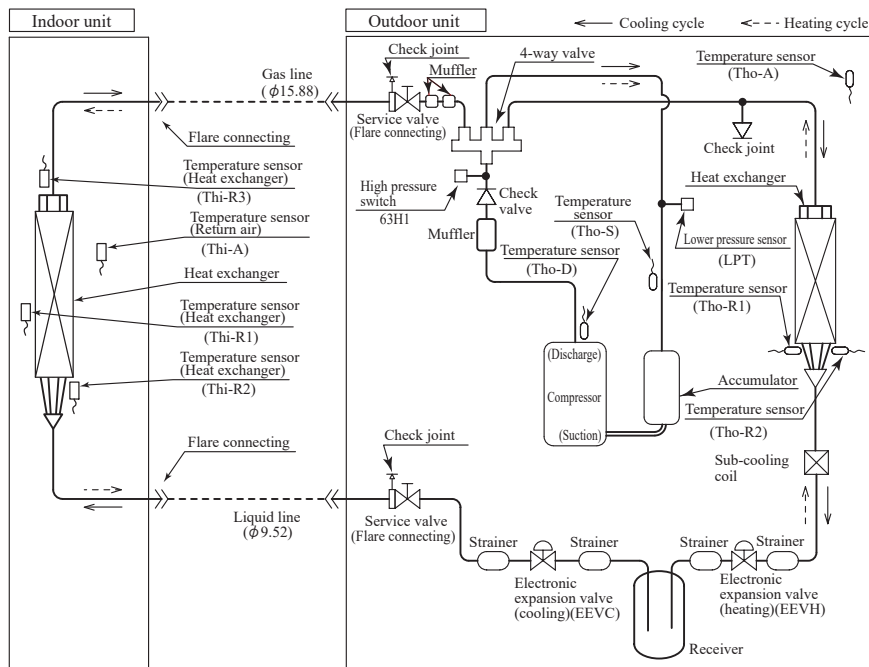

(2) Twin type Models FDT140

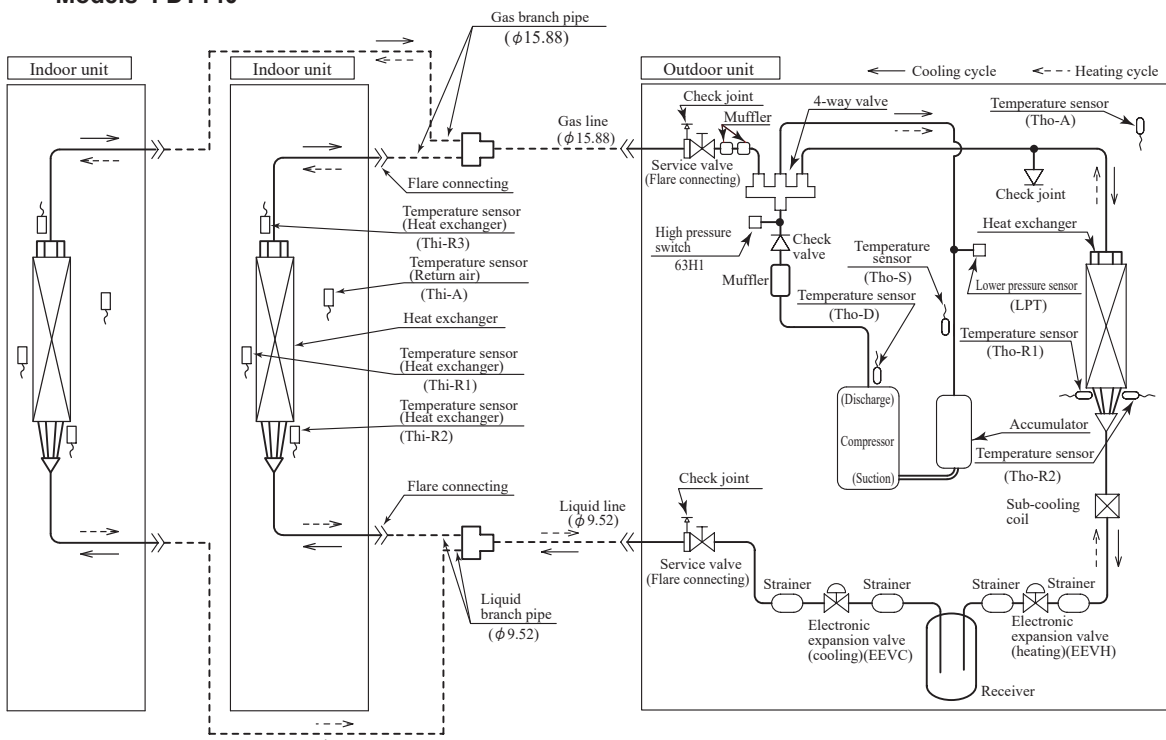


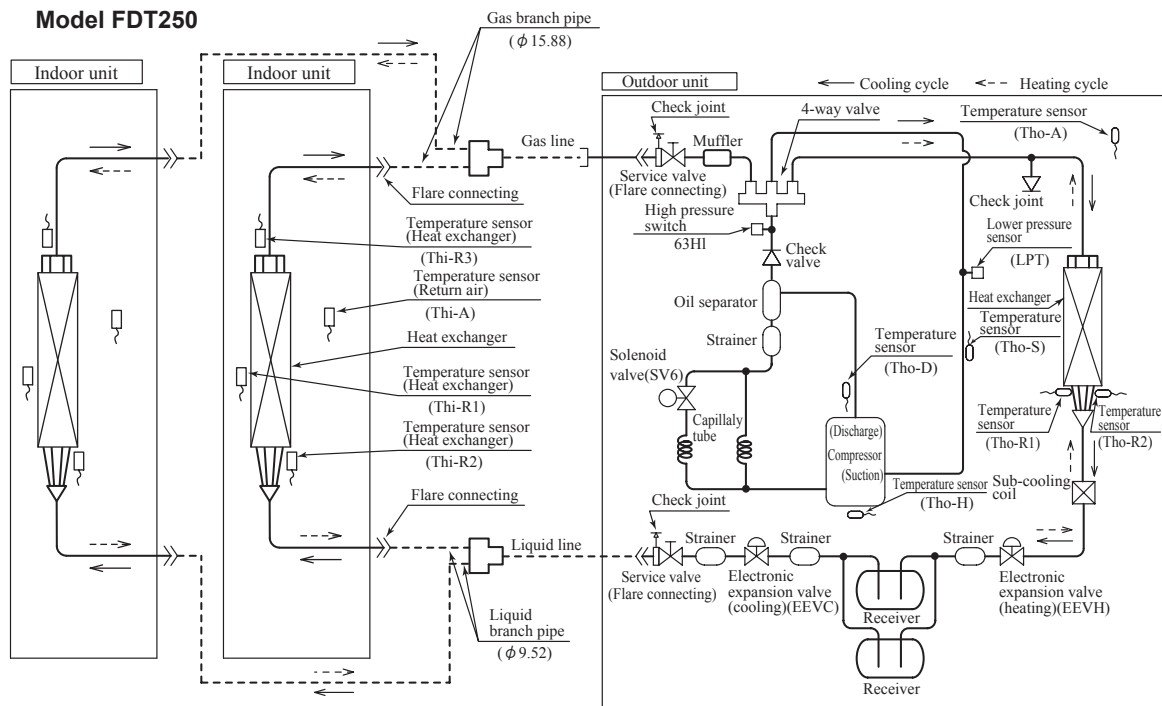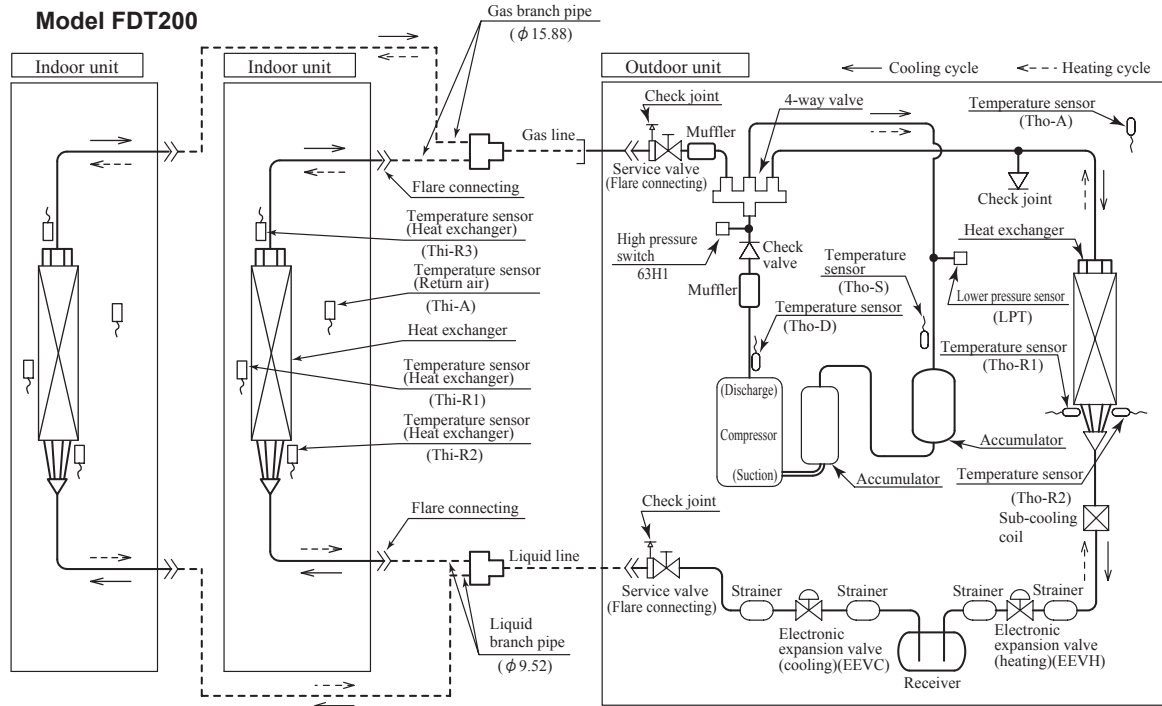

●Refrigerant line (one way) pipe size

Model	Gas line	Liquid line
FDT200	In case of $\phi 22.22$: 35m	In case of $\phi 9.52$: 40m In case of $\phi 12.7$: 70m
FDT250	In case of $\phi 25.4$ or $\phi 28.58$: 70m	In case of $\phi 12.7$: 70m

**(3) Triple type
Model FDT200**

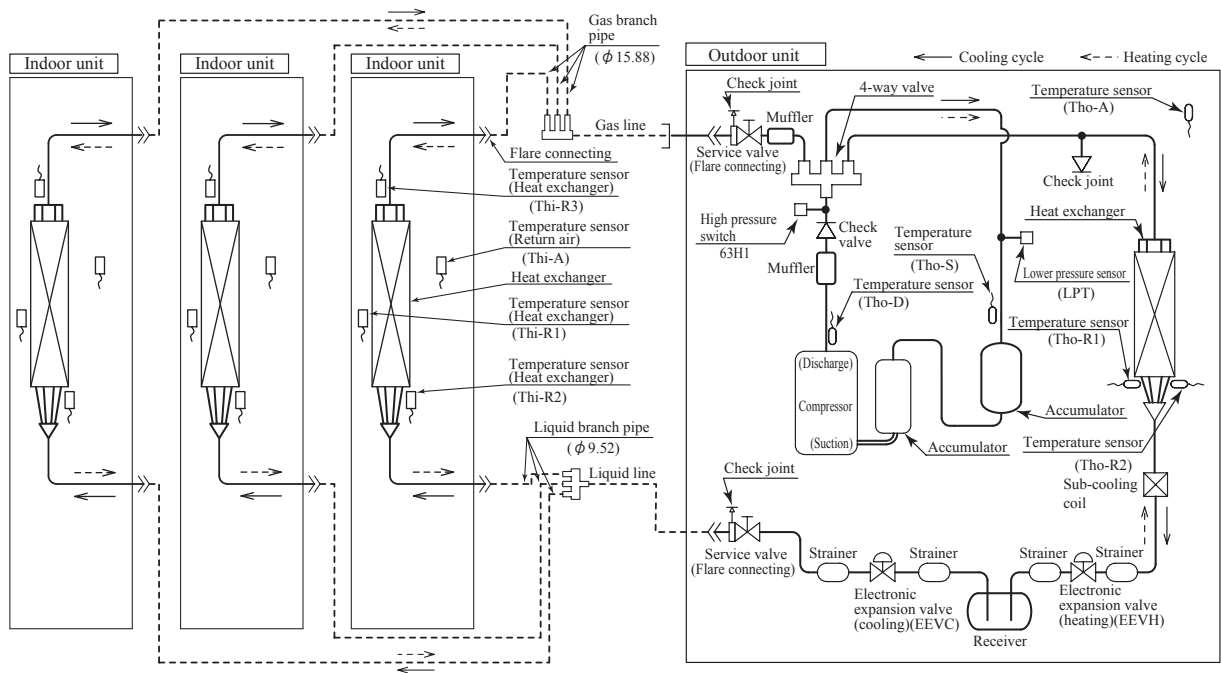

●Refrigerant line (one way) pipe size

Gas line	Liquid line
In case of ϕ 22.22 : 35m	In case of ϕ 9.52 : 40m
In case of ϕ 25.4 or ϕ 28.58 : 70m	In case of ϕ 12.7 : 70m

Preset point of the protective devices

Parts name	Mark	Equipped unit	FDT100, 125, 140 models	FDT200, 250 models
Temperature sensor (for protection overloading in heating)	Thi-R	Indoor unit	OFF 63°C ON 56°C	
Temperature sensor (for frost prevention)	Thi-R		OFF 1.0°C ON 10°C	
Temperature sensor (for protection high pressure in cooling)	Tho-R	Outdoor unit	OFF 51°C ON 65°C	
Temperature sensor (for detecting discharge pipe temperature)	Tho-D	Outdoor unit	OFF 115°C ON 85°C	OFF 135°C ON 90°C
High pressure switch (for protection)	63H1	Outdoor unit		OFF 4.15MPa ON 3.15MPa
Low pressure sensor (for protection)	LPT	Outdoor unit		OFF 0.227MPa ON 0.079MPa

2.7 RANGE OF USAGE & LIMITATIONS

Operating temperature range		See next page.
		When used below -5°C, install a snow hood (FDC100-250 only).
Recommendable area to install		Considering to get sufficient heating capacity, the area where the averaged lowest ambient air temperature in day time during winter is above 0°C, and it has no accumulation of snow.
Installation site		The limitations of installation space are shown in the page for exterior dimensions. Install the indoor unit at least 2.5m higher than the floor surface.
Temperature and humidity conditions surrounding the indoor unit in the ceiling (Note 2)		Dew point temperature : 28°C or less, relative humidity : 80% or less
Limitations on unit and piping installation		See pages 125 and 126.
Compressor ON-OFF cycling	Cycle time	7 minutes or more (from OFF to OFF) or (from ON to ON)
	Stop time	3 minutes or more
Power source	Voltage range	Rating ±10%
	Voltage drop at start-up	Min.85% of rating
	Phase-to-phase unbalance	3% or less

Note 1. Do not install the unit in places which :


- 1) Flammable gas may leak.
- 2) Carbon fiber, metal particles, powder, etc. are floating.
- 3) Cosmetic or special sprays are used frequently.
- 4) Exposed to oil splashes or steam (e.g. kitchen and machine plant).
- 5) Exposed to sea breeze (e.g. coastal area) or calcium chloride (e.g. snow melting agent).
- 6) Exposed to ammonia substance (e.g. organic fertilizer).
- 7) Matters affecting devices, such as sulfuric gas, chlorine gas, acid, alkali, etc. may generate or accumulate.
- 8) Chimney smoke is hanging.
- 9) Sucking the exhaust gas from heat exchanger.
- 10) Adjacent to equipment generating electromagnetic waves or high frequency waves.
- 11) There is light beams that affect the receiving device of indoor unit in case of the wireless specification.
- 12) Snow falls heavily.
- 13) At an elevation of 1000 meters or higher.
- 14) On mobile machine (e.g. vehicle, ship, etc.)
- 15) Splashed with water to indoor unit (e.g. laundry room).
- 16) Indoor units of twin, triple and double-twin specifications separately in a room with partition.

Note 2. If ambient temperature and humidity exceed the above values, add polyurethane foam insulation on the outer plate (10mm or thicker) of indoor unit.


Note 3. Both gas and liquid pipes need to be covered with 20mm or thicker heat insulation materials at the place where humidity exceeds 70%.

Operating temperature range

■ Cooling

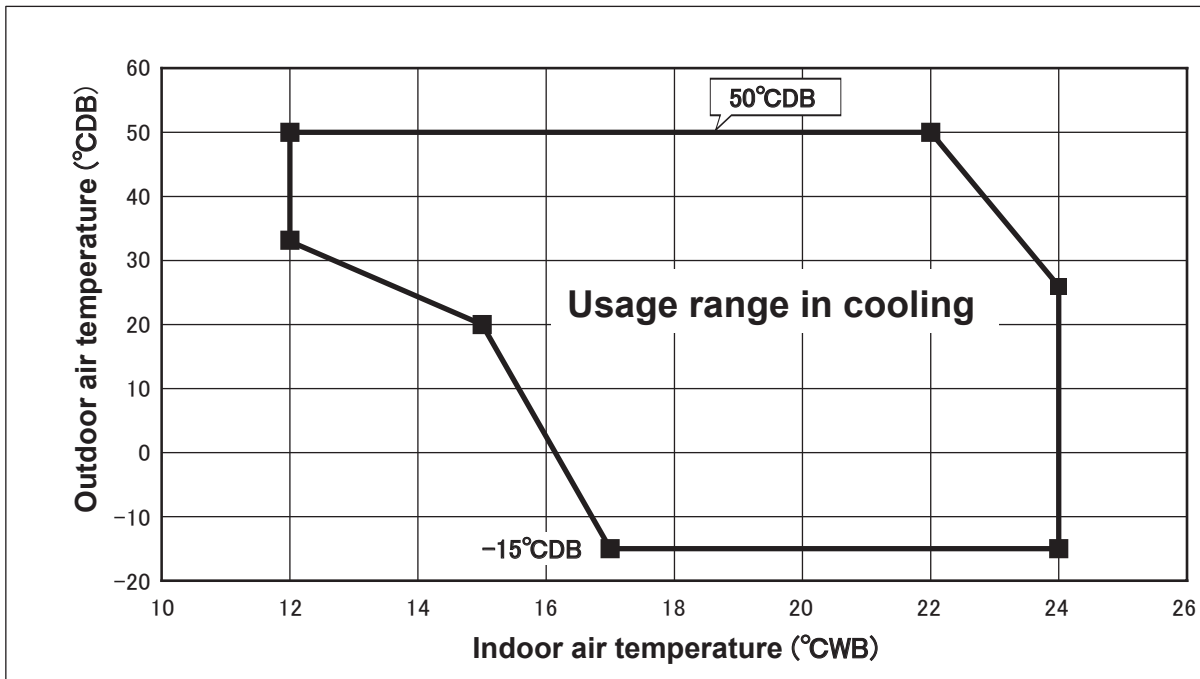

■ Heating

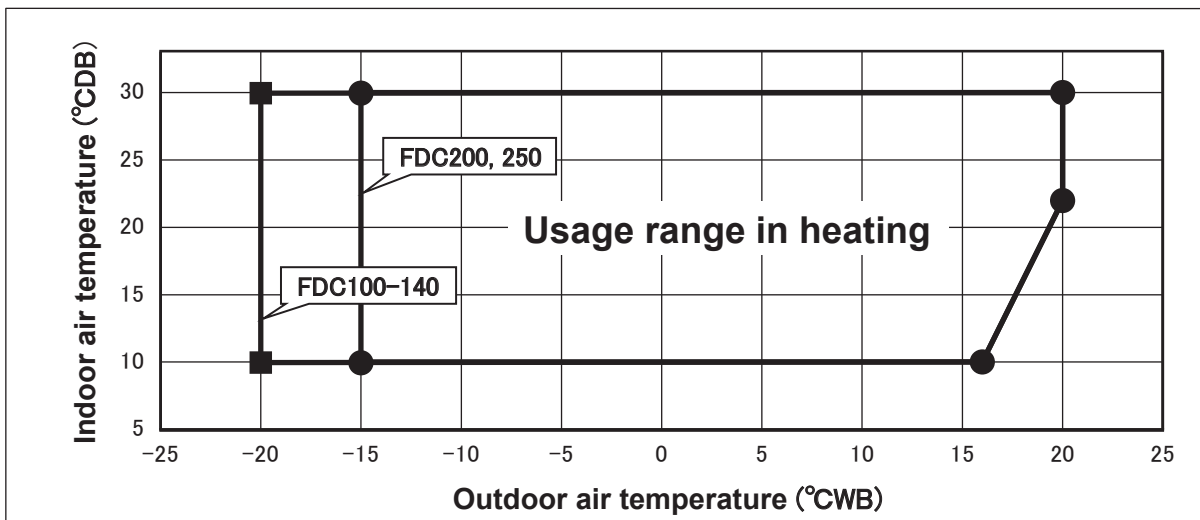

Decline in cooling and heating capacity or operation stop may occur when the outdoor unit is installed in places where natural wind can increase or decrease its design air flow rate.

“CAUTION” Cooling operation under low outdoor air temperature conditions

PAC models can be operated in cooling mode at low outdoor air temperature condition within above temperature range. However in case of severely low temperature conditions if the following precaution is not observed, it may not be operated in spite of operable temperature range mentioned above and cooling capacity may not be established under certain conditions.

[Precaution]

In case of severely low temperature condition

- 1) Install the outdoor unit at the place where strong wind cannot blow directly into the outdoor unit.
- 2) If there is no installation place where can prevent strong wind from directly blowing into the outdoor unit, mount the flex flow adapter (prepared as optional part) or like such devices onto the outdoor unit in order to divert the strong wind.


[Reason]

Under the low outdoor air temperature conditions of -5°C or lower, the outdoor fan is controlled at lower or lowest speed by outdoor fan control, but if strong wind directly blow into the outdoor unit, the outdoor heat exchanger temperature will drop more.


This makes high and low pressures to drop as well. This low pressure drop makes the indoor heat exchanger temperature to drop and will activate anti-frost control at indoor heat exchanger at frequent intervals, that cooling operation may not be established for any given time.

Limitation on unit and piping installation - single,twin,Double twin.			Marks appearing in the drawing	
Descriptions	Model for outdoor units	Dimensional limitations	Single type	Twin type
One-way pipe length	FDC100 · 125 · 140	≤ 50m	L	L+L1+L2
	FDC200	≤ 40m		
	FDC250	≤ 40m L ≤ 70m		
	FDC200 · 250	≤ 70m		
	FDC200 · 250	≤ 35m		
Main pipe length	FDC140	≤ 35m L ≤ 70m		L
	FDC200	≤ 50m		
	FDC250	≤ 40m		
	FDC200 · 250	≤ 40m L ≤ 70m		
	FDC200 · 250	≤ 70m		
One-way pipe length after the first branching point	FDC140	≤ 35m		L1, L2
	FDC200 · 250	≤ 35m L ≤ 70m		
Difference of pipe length after the first branching point		≤ 30m		L1, L2
		≤ 10m		
Elevation difference between indoor and outdoor units	When the outdoor unit is positioned higher	≤ 30m	H	H
	When the outdoor unit is positioned lower	≤ 15m		
Elevation difference among indoor units		≤ 0.5m		h

Single type

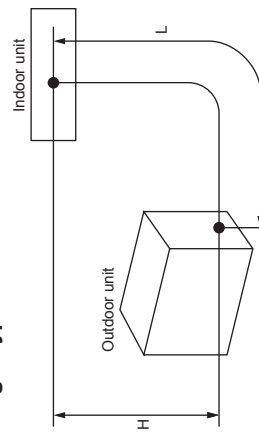

Twin type

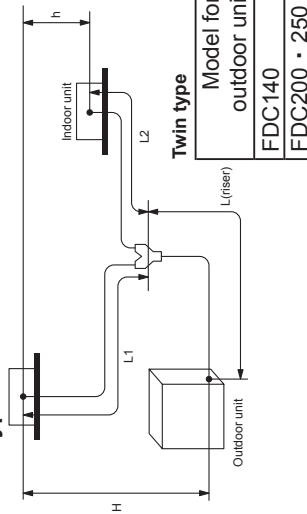

Model for outdoor units	Branch piping set(option)
FDC140	DIS-WA1
FDC200 · 250	DIS-WB1

(1) A riser pipe must be part of the main.


A branching pipe set should be installed horizontally at a point as close to an indoor unit as possible.

(2) Reduce refrigerant amount by according to table below from factory charge when refrigerant piping is shorter than 3m.


Model for outdoor units	Refrigerant to be reduced
FDC100 · 125 · 140	-1.0kg

Limitation on unit and piping installation - triple.		Triple type (In case of FDC200)		Marks appearing in the drawing	
Descriptions	One-way pipe length difference from the first branching point to the indoor unit Model for outdoor units	Dimensional limitations	Triple type A	Triple type B	
One-way pipe length	FDC200	Liquid piping	L+L1, L+L2, L+L3	L+L1 ※1	
		Gas piping			
Main pipe length	FDC200	Liquid piping	L	L	
		Gas piping			
Piping length between the first branching point and the second branching point					
One-way pipe length between the first branching point and indoor units					
One-way pipe length from the first branching point to indoor units through the second branching point					
Piping length difference from the first branching point to indoor unit					
One-way pipe length difference from the second branching point to indoor unit					
Elevation difference between indoor and outdoor units					
Elevation difference among indoor units					

Triple type A

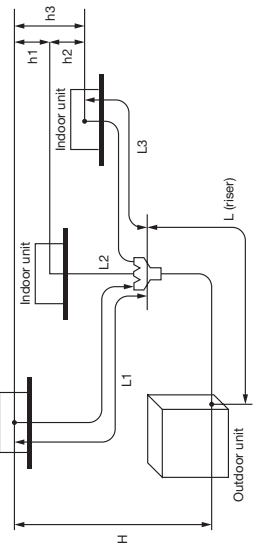

Triple type B

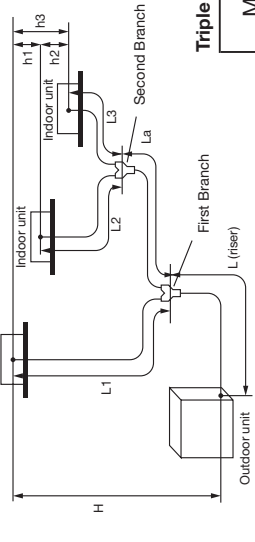

(1) A riser pipe must be part of the main.

A branching pipe set should be installed horizontally at a point as close to an indoor unit as possible.

(2) Reduce refrigerant amount by 1.0kg from the factory charge when refrigerant piping is shorter than 3m.

※ 1 Install the indoor units so that L+L1 becomes the longest one-way pipe. Keep the pipe length difference between L1 and (La+L2) or (La+L3) within 10m.

Triple type

Model for outdoor units	Branch piping set(option)		
	Type A	Type B	
FDC200	Branch pipe	First branch	Second branch
	DIS-TB1	DIS-WB1	DIS-WA1

2.8 SELECTION CHART

Correct the cooling and heating capacity in accordance with the operating conditions. The net cooling and heating capacity can be obtained in the following way.

Net capacity = Capacity shown in the capacity tables (2.8.1) × Correction factors shown in the table (2.8.2) (2.8.3) (2.8.4).

Caution: In case that the cooling operation during low outdoor air temperature below -5°C is expected, install the outdoor unit where it is not influenced by natural wind. Otherwise protection control by low pressure will be activated much more frequently and it will cause insufficient capacity or breakdown of the compressor in worst case.

2.8.1 Capacity tables

(1) Single type

Model **FDT100VNAVH** Indoor unit **FDT100VH** Outdoor unit **FDC100VNA**

Cooling Mode

(kW)

Heating Mode : HC

(kW)

Outdoor air temp. °CDB	Indoor air temperature															
	18 °CDB		21 °CDB		23 °CDB		26 °CDB		27 °CDB		28 °CDB		31 °CDB		33 °CDB	
	12 °CWB	14 °CWB	16 °CWB	18 °CWB	19 °CWB	20 °CWB	22 °CWB	24 °CWB	TC	SHC	TC	SHC	TC	SHC	TC	SHC
11					8.12	7.21	8.59	7.88	8.82	7.77	9.07	7.66	9.56	8.14	10.06	7.89
13					8.50	7.33	9.00	7.99	9.26	7.88	9.52	7.77	10.06	8.24	10.60	7.98
15					8.88	7.45	9.42	8.11	9.69	7.99	9.98	7.88	10.56	8.34	11.14	8.07
17					9.26	7.57	9.84	8.22	10.12	8.10	10.43	7.98	11.05	8.44	11.67	8.16
19					9.46	7.63	10.05	8.28	10.34	8.16	10.65	8.04	11.29	8.49	11.92	8.21
21					9.65	7.69	10.25	8.34	10.56	8.22	10.88	8.10	11.52	8.54	12.16	8.25
23					9.65	7.69	10.28	8.35	10.59	8.23	10.91	8.10	11.56	8.55	12.21	8.26
25			8.93	7.97	9.64	7.69	10.31	8.36	10.62	8.24	10.95	8.11	11.61	8.56	12.27	8.27
27			8.86	7.95	9.64	7.69	10.34	8.37	10.65	8.24	10.96	8.12	11.57	8.55		
29			8.80	7.93	9.50	7.64	10.17	8.32	10.49	8.20	10.81	8.08	11.45	8.53		
31			8.73	7.90	9.35	7.59	9.99	8.27	10.32	8.16	10.66	8.04	11.32	8.50		
33	8.22	7.33	8.58	7.85	9.21	7.55	9.82	8.22	10.16	8.11	10.51	8.00	11.19	8.47		
35	8.05	7.27	8.44	7.80	9.06	7.50	9.64	8.17	10.00	8.07	10.36	7.97	11.07	8.45		
37	7.92	7.22	8.30	7.75	8.91	7.46	9.46	8.12	9.79	8.02	10.13	7.91	10.80	8.39		
39	7.78	7.16	8.16	7.70	8.75	7.41	9.28	8.07	9.59	7.97	9.90	7.86	10.53	8.34		
41	7.64	7.11	8.02	7.66	8.60	7.36	9.09	8.02	9.38	7.91	9.68	7.80	10.26	8.28		
43	7.50	7.05	7.88	7.61	8.45	7.31	8.91	7.97	9.18	7.86	9.45	7.75	9.99	8.23		
46	7.33	6.99	7.67	7.52	8.22	7.24	8.58	7.88	8.83	7.77	9.07	7.66	9.57	8.14		
50	7.09	6.90	7.39	7.24	7.91	7.15	8.19	7.78	8.35	7.66	8.51	7.53	8.83	8.00		

Outdoor air temp. °CDB	°CWB	Indoor air temperature °CDB				
		16	18	20	22	24
		-19.8	-20	6.82	6.79	6.77
-17.7	-18	7.16	7.14	7.10	7.08	7.04
-15.7	-16	7.50	7.46	7.44	7.40	7.37
-13.5	-14	7.86	7.83	7.79	7.76	7.72
-11.5	-12	8.23	8.19	8.15	8.12	8.08
-9.5	-10	8.58	8.55	8.50	8.47	8.42
-7.5	-8	8.93	8.89	8.85	8.80	8.75
-5.5	-6	9.05	9.00	8.97	8.91	8.86
-3.0	-4	9.17	9.12	9.07	9.03	8.97
-1.0	-2	9.29	9.23	9.19	9.13	9.07
1.0	0	9.40	9.34	9.29	9.23	9.18
2.0	1	9.45	9.39	9.34	9.28	9.22
3.0	2	9.82	9.77	9.71	9.67	9.63
5.0	4	10.21	10.15	10.09	10.08	10.07
7.0	6	11.33	11.27	11.20	11.22	11.23
9.0	8	11.78	11.71	11.64	11.62	11.59
11.5	10	12.23	12.16	12.09	12.02	11.94
13.5	12	12.91	12.83	12.75	12.65	12.60
15.5	14	13.59	13.50	13.42	13.29	13.26
16.5	16	13.93	13.84	13.75	13.61	13.59

PJF000Z587

Model **FDT100VSAVH** Indoor unit **FDT100VH** Outdoor unit **FDC100VSA**

Cooling Mode

(kW)

Heating Mode : HC

(kW)

Outdoor air temp. °CDB	Indoor air temperature															
	18 °CDB		21 °CDB		23 °CDB		26 °CDB		27 °CDB		28 °CDB		31 °CDB		33 °CDB	
	12 °CWB	14 °CWB	16 °CWB	18 °CWB	19 °CWB	20 °CWB	22 °CWB	24 °CWB	TC	SHC	TC	SHC	TC	SHC	TC	SHC
11					8.12	7.21	8.59	7.88	8.82	7.77	9.07	7.66	9.56	8.14	10.06	7.89
13					8.50	7.33	9.00	7.99	9.26	7.88	9.52	7.77	10.06	8.24	10.60	7.98
15					8.88	7.45	9.42	8.11	9.69	7.99	9.98	7.88	10.56	8.34	11.14	8.07
17					9.26	7.57	9.84	8.22	10.12	8.10	10.43	7.98	11.05	8.44	11.67	8.16
19					9.46	7.63	10.05	8.28	10.34	8.16	10.65	8.04	11.29	8.49	11.92	8.21
21					9.65	7.69	10.25	8.34	10.56	8.22	10.88	8.10	11.52	8.54	12.16	8.25
23					9.65	7.69	10.28	8.35	10.59	8.23	10.91	8.10	11.56	8.55	12.21	8.26
25			8.93	7.97	9.64	7.69	10.31	8.36	10.62	8.24	10.95	8.11	11.61	8.56	12.27	8.27
27			8.86	7.95	9.64	7.69	10.34	8.37	10.65	8.24	10.96	8.12	11.57	8.55		
29			8.80	7.93	9.50	7.64	10.17	8.32	10.49	8.20	10.81	8.08	11.45	8.53		
31			8.73	7.90	9.35	7.59	9.99	8.27	10.32	8.16	10.66	8.04	11.32	8.50		
33	8.22	7.33	8.58	7.85	9.21	7.55	9.82	8.22	10.16	8.11	10.51	8.00	11.19	8.47		
35	8.05	7.27	8.44	7.80	9.06	7.50	9.64	8.17	10.00	8.07	10.36	7.97	11.07	8.45		
37	7.92	7.22	8.30	7.75	8.91	7.46	9.46	8.12	9.79	8.02	10.13	7.91	10.80	8.39		
39	7.78	7.16	8.16	7.70	8.75	7.41	9.28	8.07	9.59	7.97	9.90	7.86	10.53	8.34		
41	7.64	7.11	8.02	7.66	8.60	7.36	9.09	8.02	9.38	7.91	9.68	7.80	10.26	8.28		
43	7.50	7.05	7.88	7.61	8.45	7.31	8.91	7.97	9.18	7.86	9.45	7.75	9.99	8.23		
46	7.33	6.99	7.67	7.52	8.22	7.24	8.58	7.88	8.83	7.77	9.07	7.66	9.57	8.14		
50	7.09	6.90	7.39	7.24	7.91	7.15	8.19	7.78	8.35	7.66	8.51	7.53	8.83	8.00		

Outdoor air temp. °CDB	°CWB	Indoor air temperature °CDB				
		16	18	20	22	24
		-19.8	-20	6.82	6.79	6.77
-17.7	-18	7.16	7.14	7.10	7.08	7.04
-15.7	-16	7.50	7.46	7.44	7.40	7.37
-13.5	-14	7.86	7.83	7.79	7.76	7.72
-11.5	-12	8.23	8.19	8.15	8.12	8.08
-9.5	-10	8.58	8.55	8.50	8.47	8.42
-7.5	-8	8.93	8.89	8.85	8.80	8.75
-5.5	-6	9.05	9.00	8.97	8.91	8.86
-3.0	-4	9.17	9.12	9.07	9.03	8.97
-1.0	-2	9.29	9.23	9.19	9.13	9.07
1.0	0	9.40	9.34	9.29	9.23	9.18
2.0	1	9.45	9.39	9.34	9.28	9.22
3.0	2	9.82	9.77	9.71	9.67	9.63
5.0	4	10.21	10.15	10.09	10.08	10.07
7.0	6	11.33	11.27	11.20	11.22	11.23
9.0	8	11.78	11.71	11.64	11.62	11.59
11.5	10	12.23	12.16	12.09	12.02	11.94
13.5	12	12.91	12.83	12.75	12.65	12.60
15.5	14	13.59	13.50	13.42	13.29	13.26
16.5	16	13.93	13.84	13.75	13.61	13.59

Notes(1) These data show average status.

Depending on the system control, there may be ranges where the operation is not conducted continuously.

These data show the case where the operation frequency of a compressor is fixed.(Cooling only)

In the heating mode in which the outside air temperature is 0°CDB or less, the compressor operates at maximum frequency.

(2) Capacities are based on the following conditions.

Corresponding refrigerant piping length :7.5m

Level difference of Zero.

(3) Symbols are as follows

TC :Total cooling capacity (kW)

SHC :Sensible heat capacity (kW)

HC :Heating capacity (kW)

PJF000Z587

Model FDT125VNAVH Indoor unit FDT125VH Outdoor unit FDC125VNA

Cooling Mode

(kW)

Heating Mode : HC

(kW)

Outdoor air temp.	Indoor air temperature															
	18 °CDB		21 °CDB		23 °CDB		26 °CDB		27 °CDB		28 °CDB		31 °CDB		33 °CDB	
	12 °CWB		14 °CWB		16 °CWB		18 °CWB		19 °CWB		20 °CWB		22 °CWB		24 °CWB	
°CDB	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC
11					10.15	8.14	10.74	8.82	11.03	8.69	11.34	8.57	11.96	9.03	12.57	8.74
13					10.63	8.31	11.26	8.97	11.57	8.85	11.91	8.72	12.58	9.18	13.25	8.88
15					11.10	8.47	11.78	9.14	12.11	9.00	12.47	8.87	13.20	9.33	13.92	9.02
17					11.58	8.64	12.29	9.30	12.65	9.17	13.04	9.04	13.82	9.48	14.59	9.16
19					11.82	8.73	12.56	9.38	12.92	9.25	13.32	9.12	14.11	9.56	14.90	9.23
21					12.06	8.81	12.82	9.47	13.19	9.33	13.60	9.20	14.40	9.63	15.20	9.30
23					12.06	8.81	12.85	9.48	13.23	9.34	13.64	9.21	14.45	9.64	15.27	9.31
25			11.16	9.10	12.06	8.81	12.89	9.49	13.27	9.36	13.68	9.22	14.51	9.66	15.34	9.33
27			11.08	9.07	12.05	8.81	12.92	9.50	13.31	9.37	13.69	9.22	14.47	9.65		
29			11.00	9.03	11.87	8.74	12.71	9.43	13.11	9.31	13.51	9.17	14.31	9.61		
31			10.92	9.00	11.69	8.68	12.49	9.36	12.90	9.24	13.32	9.12	14.15	9.57		
33	10.27	8.42	10.72	8.92	11.51	8.62	12.27	9.29	12.70	9.18	13.13	9.06	13.99	9.53		
35	10.07	8.33	10.55	8.86	11.33	8.55	12.06	9.22	12.50	9.12	12.94	9.01	13.83	9.49		
37	9.90	8.26	10.38	8.79	11.13	8.48	11.83	9.15	12.24	9.04	12.66	8.93	13.50	9.40		
39	9.72	8.18	10.20	8.72	10.94	8.42	11.60	9.08	11.99	8.97	12.38	8.85	13.16	9.32		
41	9.55	8.11	10.02	8.65	10.75	8.35	11.37	9.01	11.73	8.89	12.09	8.77	12.82	9.24		
43	9.38	8.04	9.85	8.59	10.56	8.28	11.14	8.94	11.47	8.82	11.81	8.69	12.48	9.16		
46	9.21	7.97	9.53	8.47	10.28	8.19	10.88	8.86	11.12	8.72	11.28	8.55	11.96	9.03		
50	7.43	7.26	7.63	7.48	8.25	7.52	8.67	8.21	8.78	8.08	8.80	7.92	9.05	8.39		

Outdoor air temp.	Indoor air temperature					
	°CDB					
	°CDB	°CWB	16	18	20	22
-19.8	-20	7.77	7.73	7.70	7.67	7.65
-17.7	-18	8.16	8.13	8.11	8.06	8.03
-15.7	-16	8.57	8.53	8.50	8.46	8.42
-13.5	-14	9.02	8.98	8.94	8.90	8.86
-11.5	-12	9.46	9.41	9.37	9.33	9.28
-9.5	-10	9.90	9.84	9.80	9.76	9.70
-7.5	-8	10.32	10.28	10.23	10.17	10.12
-5.5	-6	10.50	10.45	10.39	10.33	10.28
-3.0	-4	10.66	10.61	10.55	10.49	10.43
-1.0	-2	10.82	10.77	10.71	10.65	10.58
1.0	0	10.99	10.93	10.87	10.80	10.73
2.0	1	11.07	11.01	10.94	10.88	10.81
3.0	2	11.92	11.85	11.78	11.73	11.68
5.0	4	12.76	12.69	12.61	12.60	12.58
7.0	6	14.16	14.08	14.00	14.02	14.04
9.0	8	14.72	14.64	14.56	14.52	14.49
11.5	10	15.28	15.20	15.11	15.02	14.93
13.5	12	16.13	16.04	15.94	15.82	15.75
15.5	14	16.98	16.88	16.77	16.62	16.58
16.5	16	17.41	17.30	17.19	17.02	16.99

PJF000Z587

Model FDT125VSAVH Indoor unit FDT125VH Outdoor unit FDC125VSA

Cooling Mode

(kW)

Heating Mode : HC

(kW)

Outdoor air temp.	Indoor air temperature															
	18 °CDB		21 °CDB		23 °CDB		26 °CDB		27 °CDB		28 °CDB		31 °CDB		33 °CDB	
	12 °CWB		14 °CWB		16 °CWB		18 °CWB		19 °CWB		20 °CWB		22 °CWB		24 °CWB	
°CDB	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC
11					10.15	8.14	10.74	8.82	11.03	8.69	11.34	8.57	11.96	9.03	12.57	8.74
13					10.63	8.31	11.26	8.97	11.57	8.85	11.91	8.72	12.58	9.18	13.25	8.88
15					11.10	8.47	11.78	9.14	12.11	9.00	12.47	8.87	13.20	9.33	13.92	9.02
17					11.58	8.64	12.29	9.30	12.65	9.17	13.04	9.04	13.82	9.48	14.59	9.16
19					11.82	8.73	12.56	9.38	12.92	9.25	13.32	9.12	14.11	9.56	14.90	9.23
21					12.06	8.81	12.82	9.47	13.19	9.33	13.60	9.20	14.40	9.63	15.20	9.30
23					12.06	8.81	12.85	9.48	13.23	9.34	13.64	9.21	14.45	9.64	15.27	9.31
25			11.16	9.10	12.06	8.81	12.89	9.49	13.27	9.36	13.68	9.22	14.51	9.66	15.34	9.33
27			11.08	9.07	12.05	8.81	12.92	9.50	13.31	9.37	13.69	9.22	14.47	9.65		
29			11.00	9.03	11.87	8.74	12.71	9.43	13.11	9.31	13.51	9.17	14.31	9.61		
31			10.92	9.00	11.69	8.68	12.49	9.36	12.90	9.24	13.32	9.12	14.15	9.57		
33	10.27	8.42	10.72	8.92	11.51	8.62	12.27	9.29	12.70	9.18	13.13	9.06	13.99	9.53		
35	10.07	8.33	10.55	8.86	11.33	8.55	12.06	9.22	12.50	9.12	12.94	9.01	13.83	9.49		
37	9.90	8.26	10.38	8.79	11.13	8.48	11.83	9.15	12.24	9.04	12.66	8.93	13.50	9.40		
39	9.72	8.18	10.20	8.72	10.94	8.42	11.60	9.08	11.99	8.97	12.38	8.85	13.16	9.32		
41	9.55	8.11	10.02	8.65	10.75	8.35	11.37	9.01	11.73	8.89	12.09	8.77	12.82	9.24		
43	9.38	8.04	9.85	8.59	10.56	8.28	11.14	8.94	11.47	8.82	11.81	8.69	12.48	9.16		
46	9.21	7.97	9.53	8.47	10.28	8.19	10.88	8.86	11.12	8.72	11.28	8.55	11.96	9.03		
50	7.43	7.26	7.63	7.48	8.25	7.52	8.67	8.21	8.78	8.08	8.80	7.92	9.05	8.39		

Outdoor air temp.	Indoor air temperature					
	°CDB					
	°CDB	°CWB	16	18	20	22
-19.8	-20	7.77	7.73	7.70	7.67	7.65
-17.7	-18	8.16	8.13	8.11	8.06	8.03
-15.7	-16	8.57	8.53	8.50	8.46	8.42
-13.5	-14	9.02	8.98	8.94	8.90	8.86
-11.5	-12	9.46	9.41	9.37	9.33	9.28
-9.5	-10	9.90	9.84	9.80	9.76	9.70
-7.5	-8	10.32	10.28	10.23	10.17	10.12
-5.5	-6	10.50	10.45	10.39	10.33	10.28
-3.0	-4	10.66	10.61	10.55	10.49	10.43
-1.0	-2	10.82	10.77	10.71	10.65	10.58
1.0	0	10.99	10.93	10.87	10.80	10.73
2.0	1	11.07	11.01	10.94	10.88	10.81
3.0	2	11.92	11.85	11.78	11.73	11.68
5.0	4	12.76	12.69	12.61	12.60	12.58
7.0	6	14.16	14.08	14.00	14.02	14.04
9.0	8	14.72	14.64	14.56	14.52	14.49
11.5	10	15.28	15.20	15.11	15.02	14.93
13.5	12	16.13	16.04	15.94	15.82	15.75
15.5	14	16.98	16.88	16.77	16.62	16.58
16.5	16	17.41	17.30	17.19	17.02	16.99

PJF000Z587

Notes(1) These data show average status.

Depending on the system control, there may be ranges where the operation is not conducted continuously.

These data show the case where the operation frequency of a compressor is fixed.(Cooling only)

In the heating mode in which the outside air temperature is 0°CDB or less, the compressor operates at maximum frequency.

(2) Capacities are based on the following conditions.

Corresponding refrigerant piping length :7.5m

Level difference of Zero.

(3) Symbols are as follows

TC :Total cooling capacity (kW)

SHC :Sensible heat capacity (kW)

HC :Heating capacity (kW)

Model **FDT140VNAVH** Indoor unit **FDT140VH** Outdoor unit **FDC140VNA**
 Cooling Mode (kW)

Outdoor air temp. °CDB	Indoor air temperature															
	18 °CDB		21 °CDB		23 °CDB		26 °CDB		27 °CDB		28 °CDB		31 °CDB		33 °CDB	
	12 °CWB	14 °CWB	16 °CWB	18 °CWB	19 °CWB	20 °CWB	22 °CWB	24 °CWB	TC	SHC	TC	SHC	TC	SHC	TC	SHC
11					11.05	8.63	11.68	9.31	12.00	9.19	12.34	9.06	13.01	9.53	13.68	9.24
13					11.56	8.82	12.25	9.50	12.59	9.37	12.95	9.24	13.69	9.71	14.42	9.41
15					12.07	9.01	12.81	9.68	13.18	9.56	13.57	9.43	14.36	9.89	15.14	9.58
17					12.59	9.21	13.38	9.88	13.77	9.75	14.19	9.62	15.04	10.08	15.87	9.76
19					12.86	9.31	13.66	9.98	14.07	9.85	14.49	9.72	15.35	10.16	16.20	9.84
21					13.12	9.41	13.95	10.08	14.36	9.94	14.79	9.81	15.66	10.25	16.53	9.92
23					13.12	9.41	13.99	10.09	14.40	9.96	14.84	9.83	15.73	10.27	16.61	9.94
25			12.14	9.67	13.11	9.41	14.02	10.10	14.44	9.97	14.89	9.84	15.79	10.28	16.69	9.96
27			12.06	9.64	13.11	9.41	14.06	10.11	14.48	9.99	14.90	9.84	15.74	10.27		
29			11.97	9.60	12.91	9.33	13.82	10.03	14.26	9.91	14.70	9.78	15.56	10.22		
31			11.88	9.56	12.72	9.26	13.59	9.95	14.04	9.84	14.49	9.72	15.40	10.18		
33	11.18	8.97	11.67	9.48	12.52	9.18	13.36	9.87	13.82	9.77	14.29	9.65	15.22	10.13		
35	10.96	8.87	11.48	9.40	12.32	9.10	13.11	9.79	13.60	9.69	14.09	9.59	15.05	10.08		
37	10.76	8.79	11.29	9.32	12.11	9.03	12.87	9.70	13.32	9.60	13.77	9.49	14.69	9.98		
39	10.58	8.70	11.10	9.24	11.91	8.95	12.62	9.62	13.05	9.52	13.46	9.40	14.32	9.88		
41	10.39	8.62	10.91	9.17	11.70	8.87	12.37	9.53	12.76	9.43	13.16	9.31	13.95	9.78		
43	10.21	8.54	10.71	9.09	11.49	8.80	12.11	9.45	12.48	9.34	12.85	9.22	13.58	9.68		
46	10.03	8.46	10.47	8.99	11.13	8.67	11.73	9.32	12.10	9.22	12.27	9.04	13.01	9.53		
50	7.61	7.44	7.88	7.72	8.35	7.70	8.75	8.39	8.97	8.29	8.98	8.13	9.33	8.64		

Heating Mode : HC (kW)

Outdoor air temp. °CDB	°CWB	Indoor air temperature				
		16 °CDB	18 °CDB	20 °CDB	22 °CDB	24 °CDB
-19.8	-20	7.94	7.91	7.88	7.85	7.82
-17.7	-18	8.44	8.41	8.37	8.34	8.30
-15.7	-16	8.94	8.90	8.86	8.82	8.79
-13.5	-14	9.50	9.46	9.41	9.37	9.33
-11.5	-12	10.07	10.02	9.98	9.93	9.88
-9.5	-10	10.64	10.59	10.54	10.49	10.44
-7.5	-8	11.21	11.15	11.10	11.04	10.99
-5.5	-6	11.51	11.45	11.39	11.33	11.27
-3.0	-4	11.80	11.74	11.68	11.62	11.55
-1.0	-2	12.11	12.05	11.98	11.91	11.84
1.0	0	12.42	12.35	12.28	12.20	12.13
2.0	1	12.58	12.50	12.43	12.35	12.28
3.0	2	13.35	13.27	13.20	13.13	13.08
5.0	4	14.12	14.05	13.96	13.95	13.93
7.0	6	15.68	15.59	15.50	15.52	15.55
9.0	8	16.30	16.21	16.11	16.07	16.03
11.5	10	16.91	16.83	16.73	16.63	16.53
13.5	12	17.86	17.76	17.65	17.52	17.44
15.5	14	18.80	18.69	18.57	18.40	18.36
16.5	16	19.28	19.15	19.03	18.84	18.81



Model **FDT140VSAVH** Indoor unit **FDT140VH** Outdoor unit **FDC140VSA**
 Cooling Mode (kW)

Outdoor air temp. °CDB	Indoor air temperature															
	18 °CDB		21 °CDB		23 °CDB		26 °CDB		27 °CDB		28 °CDB		31 °CDB		33 °CDB	
	12 °CWB	14 °CWB	16 °CWB	18 °CWB	19 °CWB	20 °CWB	22 °CWB	24 °CWB	TC	SHC	TC	SHC	TC	SHC	TC	SHC
11					11.05	8.63	11.68	9.31	12.00	9.19	12.34	9.06	13.01	9.53	13.68	9.24
13					11.56	8.82	12.25	9.50	12.59	9.37	12.95	9.24	13.69	9.71	14.42	9.41
15					12.07	9.01	12.81	9.68	13.18	9.56	13.57	9.43	14.36	9.89	15.14	9.58
17					12.59	9.21	13.38	9.88	13.77	9.75	14.19	9.62	15.04	10.08	15.87	9.76
19					12.86	9.31	13.66	9.98	14.07	9.85	14.49	9.72	15.35	10.16	16.20	9.84
21					13.12	9.41	13.95	10.08	14.36	9.94	14.79	9.81	15.66	10.25	16.53	9.92
23					13.12	9.41	13.99	10.09	14.40	9.96	14.84	9.83	15.73	10.27	16.61	9.94
25			12.14	9.67	13.11	9.41	14.02	10.10	14.44	9.97	14.89	9.84	15.79	10.28	16.69	9.96
27			12.06	9.64	13.11	9.41	14.06	10.11	14.48	9.99	14.90	9.84	15.74	10.27		
29			11.97	9.60	12.91	9.33	13.82	10.03	14.26	9.91	14.70	9.78	15.56	10.22		
31			11.88	9.56	12.72	9.26	13.59	9.95	14.04	9.84	14.49	9.72	15.40	10.18		
33	11.18	8.97	11.67	9.48	12.52	9.18	13.36	9.87	13.82	9.77	14.29	9.65	15.22	10.13		
35	10.96	8.87	11.48	9.40	12.32	9.10	13.11	9.79	13.60	9.69	14.09	9.59	15.05	10.08		
37	10.76	8.79	11.29	9.32	12.11	9.03	12.87	9.70	13.32	9.60	13.77	9.49	14.69	9.98		
39	10.58	8.70	11.10	9.24	11.91	8.95	12.62	9.62	13.05	9.52	13.46	9.40	14.32	9.88		
41	10.39	8.62	10.91	9.17	11.70	8.87	12.37	9.53	12.76	9.43	13.16	9.31	13.95	9.78		
43	10.21	8.54	10.71	9.09	11.49	8.80	12.11	9.45	12.48	9.34	12.85	9.22	13.58	9.68		
46	10.03	8.46	10.47	8.99	11.13	8.67	11.73	9.32	12.10	9.22	12.27	9.04	13.01	9.53		
50	7.61	7.44	7.88	7.72	8.35	7.70	8.75	8.39	8.97	8.29	8.98	8.13	9.33	8.64		

Heating Mode : HC (kW)

Outdoor air temp. °CDB	°CWB	Indoor air temperature				
		16 °CDB	18 °CDB	20 °CDB	22 °CDB	24 °CDB
-19.8	-20	7.94	7.91	7.88	7.85	7.82
-17.7	-18	8.44	8.41	8.37	8.34	8.30
-15.7	-16	8.94	8.90	8.86	8.82	8.79
-13.5	-14	9.50	9.46	9.41	9.37	9.33
-11.5	-12	10.07	10.02	9.98	9.93	9.88
-9.5	-10	10.64	10.59	10.54	10.49	10.44
-7.5	-8	11.21	11.15	11.10	11.04	10.99
-5.5	-6	11.51	11.45	11.39	11.33	11.27
-3.0	-4	11.80	11.74	11.68	11.62	11.55
-1.0	-2	12.11	12.05	11.98	11.91	11.84
1.0	0	12.42	12.35	12.28	12.20	12.13
2.0	1	12.58	12.50	12.43	12.35	12.28
3.0	2	13.35	13.27	13.20	13.13	13.08
5.0	4	14.12	14.05	13.96	13.95	13.93
7.0	6	15.68	15.59	15.50	15.52	15.55
9.0	8	16.30	16.21	16.11	16.07	16.03
11.5	10	16.91	16.83	16.73	16.63	16.53
13.5	12	17.86	17.76	17.65	17.52	17.44
15.5	14	18.80	18.69	18.57	18.40	18.36
16.5	16	19.28	19.15	19.03	18.84	18.81




- Notes(1) These data show average status.
 Depending on the system control, there may be ranges where the operation is not conducted continuously.
 These data show the case where the operation frequency of a compressor is fixed. (Cooling only)
 In the heating mode in which the outside air temperature is 0°CDB or less, the compressor operates at maximum frequency.
- (2) Capacities are based on the following conditions.
 Corresponding refrigerant piping length :7.5m
 Level difference of Zero.
- (3) Symbols are as follows
 TC : Total cooling capacity (kW)
 SHC : Sensible heat capacity (kW)
 HC : Heating capacity (kW)

(2) Twin type

Model **FDT140VNPVH** Indoor unit **FDT71VH (2 units)** Outdoor unit **FDC140VNA**

Cooling Mode (kW) Heating Mode : HC (kW)

Outdoor air temp. °CDB	Indoor air temperature														Outdoor air temp.		Indoor air temperature							
	18 °CDB		21 °CDB		23 °CDB		26 °CDB		27 °CDB		28 °CDB		31 °CDB		33 °CDB		°CDB	°CWB	°CDB					
	12 °CWB	14 °CWB	16 °CWB	18 °CWB	19 °CWB	20 °CWB	22 °CWB	24 °CWB	16	18	20	22	24											
TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC			
11						11.05	10.70	11.68	11.44	12.00	11.62	12.34	11.47	13.01	12.25	13.68	11.92	-19.8	-20	7.94	7.91	7.88	7.85	7.82
13						11.56	10.86	12.25	11.91	12.59	11.77	12.95	11.62	13.69	12.39	14.42	12.05	-17.7	-18	8.44	8.41	8.37	8.34	8.30
15						12.07	11.02	12.81	12.07	13.18	11.92	13.57	11.77	14.36	12.53	15.14	12.18	-15.7	-16	8.94	8.90	8.86	8.82	8.79
17						12.59	11.18	13.38	12.23	13.77	12.07	14.19	11.92	15.04	12.67	15.87	12.31	-13.5	-14	9.50	9.46	9.41	9.37	9.33
19						12.86	11.27	13.66	12.31	14.07	12.15	14.49	12.00	15.35	12.74	16.20	12.37	-11.5	-12	10.07	10.02	9.98	9.93	9.88
21						13.12	11.35	13.95	12.39	14.36	12.23	14.79	12.07	15.66	12.81	16.53	12.43	-9.5	-10	10.64	10.59	10.54	10.49	10.44
23						13.12	11.35	13.99	12.40	14.40	12.24	14.84	12.08	15.73	12.82	16.61	12.45	-7.5	-8	11.21	11.15	11.10	11.04	10.99
25			12.14	11.75	13.11	11.35	14.02	12.41	14.44	12.25	14.89	12.10	15.79	12.84	16.69	12.46	-5.5	-6	11.51	11.45	11.39	11.33	11.27	
27			12.06	11.72	13.11	11.35	14.06	12.42	14.48	12.27	14.90	12.10	15.74	12.83			-3.0	-4	11.80	11.74	11.68	11.62	11.55	
29			11.97	11.69	12.91	11.29	13.82	12.35	14.26	12.21	14.70	12.05	15.56	12.79			-1.0	-2	12.11	12.05	11.98	11.91	11.84	
31			11.88	11.64	12.72	11.22	13.59	12.29	14.04	12.15	14.49	12.00	15.40	12.75			1.0	0	12.42	12.35	12.28	12.20	12.13	
33	11.18	10.75	11.67	11.43	12.52	11.16	13.36	12.22	13.82	12.09	14.29	11.95	15.22	12.71			2.0	1	12.58	12.50	12.43	12.35	12.28	
35	10.96	10.67	11.48	11.25	12.32	11.10	13.11	12.15	13.60	12.03	14.09	11.90	15.05	12.68			3.0	2	13.35	13.27	13.20	13.13	13.08	
37	10.76	10.55	11.29	11.06	12.11	11.03	12.87	12.09	13.32	11.96	13.77	11.82	14.69	12.60			5.0	4	14.12	14.05	13.96	13.95	13.93	
39	10.58	10.37	11.10	10.88	11.91	10.97	12.62	12.02	13.05	11.88	13.46	11.74	14.32	12.52			7.0	6	15.68	15.59	15.50	15.52	15.55	
41	10.39	10.19	10.91	10.69	11.70	10.90	12.37	11.95	12.76	11.81	13.16	11.67	13.95	12.44			9.0	8	16.30	16.21	16.11	16.07	16.03	
43	10.21	10.01	10.71	10.50	11.49	10.84	12.11	11.87	12.48	11.74	12.85	11.59	13.58	12.37			11.5	10	16.91	16.83	16.73	16.63	16.53	
46	10.03	9.82	10.47	10.26	11.13	10.73	11.73	11.49	12.10	11.64	12.27	11.46	13.01	12.25			13.5	12	17.86	17.76	17.65	17.52	17.44	
50	7.61	7.45	7.88	7.72	8.35	8.19	8.75	8.58	8.97	8.79	8.98	8.80	9.33	9.14			15.5	14	18.80	18.69	18.57	18.40	18.36	
																		16.5	16	19.28	19.15	19.03	18.84	18.81



Model **FDT140VSAPVH** Indoor unit **FDT71VH (2 units)** Outdoor unit **FDC140VSA**

Cooling Mode (kW) Heating Mode : HC (kW)

Outdoor air temp. °CDB	Indoor air temperature														Outdoor air temp.		Indoor air temperature							
	18 °CDB		21 °CDB		23 °CDB		26 °CDB		27 °CDB		28 °CDB		31 °CDB		33 °CDB		°CDB	°CWB	°CDB					
	12 °CWB	14 °CWB	16 °CWB	18 °CWB	19 °CWB	20 °CWB	22 °CWB	24 °CWB	16	18	20	22	24											
TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC			
11						11.05	10.70	11.68	11.44	12.00	11.62	12.34	11.47	13.01	12.25	13.68	11.92	-19.8	-20	7.94	7.91	7.88	7.85	7.82
13						11.56	10.86	12.25	11.91	12.59	11.77	12.95	11.62	13.69	12.39	14.42	12.05	-17.7	-18	8.44	8.41	8.37	8.34	8.30
15						12.07	11.02	12.81	12.07	13.18	11.92	13.57	11.77	14.36	12.53	15.14	12.18	-15.7	-16	8.94	8.90	8.86	8.82	8.79
17						12.59	11.18	13.38	12.23	13.77	12.07	14.19	11.92	15.04	12.67	15.87	12.31	-13.5	-14	9.50	9.46	9.41	9.37	9.33
19						12.86	11.27	13.66	12.31	14.07	12.15	14.49	12.00	15.35	12.74	16.20	12.37	-11.5	-12	10.07	10.02	9.98	9.93	9.88
21						13.12	11.35	13.95	12.39	14.36	12.23	14.79	12.07	15.66	12.81	16.53	12.43	-9.5	-10	10.64	10.59	10.54	10.49	10.44
23						13.12	11.35	13.99	12.40	14.40	12.24	14.84	12.08	15.73	12.82	16.61	12.45	-7.5	-8	11.21	11.15	11.10	11.04	10.99
25			12.14	11.75	13.11	11.35	14.02	12.41	14.44	12.25	14.89	12.10	15.79	12.84	16.69	12.46	-5.5	-6	11.51	11.45	11.39	11.33	11.27	
27			12.06	11.72	13.11	11.35	14.06	12.42	14.48	12.27	14.90	12.10	15.74	12.83			-3.0	-4	11.80	11.74	11.68	11.62	11.55	
29			11.97	11.69	12.91	11.29	13.82	12.35	14.26	12.21	14.70	12.05	15.56	12.79			-1.0	-2	12.11	12.05	11.98	11.91	11.84	
31			11.88	11.64	12.72	11.22	13.59	12.29	14.04	12.15	14.49	12.00	15.40	12.75			1.0	0	12.42	12.35	12.28	12.20	12.13	
33	11.18	10.75	11.67	11.43	12.52	11.16	13.36	12.22	13.82	12.09	14.29	11.95	15.22	12.71			2.0	1	12.58	12.50	12.43	12.35	12.28	
35	10.96	10.67	11.48	11.25	12.32	11.10	13.11	12.15	13.60	12.03	14.09	11.90	15.05	12.68			3.0	2	13.35	13.27	13.20	13.13	13.08	
37	10.76	10.55	11.29	11.06	12.11	11.03	12.87	12.09	13.32	11.96	13.77	11.82	14.69	12.60			5.0	4	14.12	14.05	13.96	13.95	13.93	
39	10.58	10.37	11.10	10.88	11.91	10.97	12.62	12.02	13.05	11.88	13.46	11.74	14.32	12.52			7.0	6	15.68	15.59	15.50	15.52	15.55	
41	10.39	10.19	10.91	10.69	11.70	10.90	12.37	11.95	12.76	11.81	13.16	11.67	13.95	12.44			9.0	8	16.30	16.21	16.11	16.07	16.03	
43	10.21	10.01	10.71	10.50	11.49	10.84	12.11	11.87	12.48	11.74	12.85	11.59	13.58	12.37			11.5	10	16.91	16.83	16.73	16.63	16.53	
46	10.03	9.82	10.47	10.26	11.13	10.73	11.73	11.49	12.10	11.64	12.27	11.46	13.01	12.25			13.5	12	17.86	17.76	17.65	17.52	17.44	
50	7.61	7.45	7.88	7.72	8.35	8.19	8.75	8.58	8.97	8.79	8.98	8.80	9.33	9.14			15.5	14	18.80	18.69	18.57	18.40	18.36	
																		16.5	16	19.28	19.15	19.03	18.84	18.81

Notes(1) These data show average status.

Depending on the system control, there may be ranges where the operation is not conducted continuously.

These data show the case where the operation frequency of a compressor is fixed.(Cooling only)

In the heating mode in which the outside air temperature is 0°CDB or less, the compressor operates at maximum frequency.

(2) Capacities are based on the following conditions.

Corresponding refrigerant piping length :7.5m

Level difference of Zero.

(3) Symbols are as follows

TC :Total cooling capacity (kW)

SHC :Sensible heat capacity (kW)

HC :Heating capacity (kW)



Model **FDT200VSAPVH** Indoor unit FDT100VH (2 uints) Outdoor unit FDC200VSA

Cooling Mode (kW)

Heating Mode : HC (kW)

Outdoor air temp. °CDB	Indoor air temperature															
	18 °CDB		21 °CDB		23 °CDB		26 °CDB		27 °CDB		28 °CDB		31 °CDB		33 °CDB	
	12 °CWB	14 °CWB	16 °CWB		18 °CWB		19 °CWB		20 °CWB		22 °CWB		24 °CWB			
TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	
11					19.36	15.40	20.45	16.66	20.99	16.41	21.67	16.17	23.02	17.08	24.37	16.51
13					19.46	15.43	20.57	16.70	21.13	16.44	21.78	16.20	23.09	17.10	24.40	16.52
15					19.55	15.46	20.69	16.73	21.26	16.48	21.90	16.23	23.16	17.11	24.43	16.52
17					19.56	15.46	20.77	16.76	21.37	16.51	21.99	16.25	23.23	17.13	24.47	16.53
19					19.64	15.49	20.84	16.78	21.48	16.54	22.09	16.27	23.30	17.14	24.51	16.54
21					19.34	15.39	20.50	16.68	21.11	16.44	21.72	16.18	22.92	17.06	24.13	16.47
23					19.04	15.29	20.16	16.58	20.74	16.34	21.35	16.09	22.55	16.98	23.76	16.40
25			17.82	15.93	18.89	15.25	19.99	16.53	20.56	16.29	21.16	16.04	22.37	16.94	23.57	16.37
27			17.68	15.89	18.74	15.20	19.82	16.49	20.38	16.24	21.25	16.07	22.13	16.89		
29			17.40	15.78	18.43	15.10	19.49	16.39	20.03	16.15	20.93	15.99	21.83	16.83		
31			17.11	15.68	18.11	15.00	19.15	16.30	19.69	16.06	20.60	15.91	21.52	16.77		
33	15.84	14.43	16.58	15.50	17.80	14.90	18.82	16.21	19.34	15.97	20.28	15.83	21.21	16.70		
35	15.73	14.39	16.37	15.43	17.49	14.81	18.49	16.12	19.00	15.89	19.95	15.75	20.91	16.64		
37	15.52	14.31	16.13	15.34	17.14	14.70	18.05	16.00	18.57	15.78	19.48	15.64	20.39	16.53		
39	15.31	14.23	15.89	15.26	16.78	14.59	17.61	15.88	18.13	15.67	19.00	15.52	19.87	16.43		
41	15.10	14.15	15.65	15.18	16.43	14.48	17.18	15.76	17.70	15.56	18.53	15.41	19.36	16.33		
43	14.89	14.07	15.41	15.10	16.07	14.37	16.74	15.65	17.26	15.45	18.05	15.30	18.84	16.22		
46	14.58	13.95	15.05	14.75	15.54	14.21	16.09	15.48	16.61	15.29	17.34	15.14	18.06	16.07		
50	11.25	11.02	11.78	11.54	12.39	12.14	12.68	12.42	12.88	12.62	13.08	12.82	13.28	13.01		

Outdoor air temp. °CDB	°CWB	Indoor air temperature °CDB				
		16	18	20	22	24
-19.8	-20					
-17.7	-18					
-15.7	-16					
-13.5	-14	11.10	10.98	10.86	10.73	10.60
-11.5	-12	11.93	11.80	11.67	11.54	11.40
-9.5	-10	12.75	12.61	12.48	12.34	12.20
-7.5	-8	13.57	13.43	13.29	13.14	13.00
-5.5	-6	13.78	13.64	13.51	13.37	13.24
-3.0	-4	13.99	13.86	13.73	13.60	13.47
-1.0	-2	14.20	14.08	13.95	13.83	13.71
1.0	0	14.41	14.29	14.18	14.06	13.94
2.0	1	14.51	14.40	14.29	14.17	14.06
3.0	2	16.19	16.05	15.91	15.79	15.67
5.0	4	19.54	19.35	19.15	19.02	18.89
7.0	6	22.89	22.64	22.40	22.25	22.11
9.0	8	23.99	23.78	23.58	23.42	23.25
11.5	10	25.09	24.92	24.75	24.58	24.40
13.5	12	25.95	25.79	25.63	25.45	25.27
15.5	14	26.82	26.66	26.50	26.32	26.14
16.5	16	27.25	27.10	26.94	26.76	26.57

PJF000Z587

Model **FDT250VSAPVH** Indoor unit FDT125VH (2 uints) Outdoor unit FDC250VSA

Cooling Mode (kW)

Heating Mode : HC (kW)

Outdoor air temp. °CDB	Indoor air temperature															
	18 °CDB		21 °CDB		23 °CDB		26 °CDB		27 °CDB		28 °CDB		31 °CDB		33 °CDB	
	12 °CWB	14 °CWB	16 °CWB		18 °CWB		19 °CWB		20 °CWB		22 °CWB		24 °CWB			
TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	
11					24.64	17.81	26.08	19.08	26.80	18.79	27.60	18.51	29.20	19.36	30.80	18.68
13					24.67	17.82	26.11	19.09	26.83	18.80	27.63	18.52	29.23	19.37	30.83	18.69
15					24.69	17.83	26.14	19.10	26.86	18.81	27.66	18.53	29.26	19.38	30.86	18.70
17					24.70	17.84	26.23	19.13	26.99	18.85	27.78	18.56	29.34	19.40	30.91	18.71
19					24.81	17.88	26.33	19.16	27.13	18.89	27.90	18.60	29.43	19.42	30.96	18.72
21					24.43	17.74	25.90	19.02	26.67	18.75	27.43	18.46	28.96	19.30	30.48	18.61
23					24.05	17.60	25.47	18.88	26.20	18.61	26.96	18.32	28.49	19.18	30.01	18.51
25			22.51	18.27	23.86	17.53	25.25	18.81	25.97	18.54	26.73	18.26	28.25	19.12	29.77	18.46
27			22.33	18.20	23.67	17.46	25.04	18.74	25.74	18.46	26.85	18.29	27.96	19.05		
29			21.97	18.06	23.27	17.32	24.61	18.61	25.30	18.33	26.44	18.17	27.57	18.95		
31			21.61	17.92	22.88	17.18	24.19	18.47	24.87	18.20	26.03	18.06	27.18	18.85		
33	20.01	16.61	20.94	17.65	22.49	17.04	23.77	18.34	24.44	18.07	25.62	17.94	26.80	18.76		
35	19.87	16.55	20.68	17.55	22.10	16.91	23.35	18.21	24.00	17.94	25.21	17.82	26.41	18.66		
37	19.61	16.44	20.42	17.46	21.78	16.80	22.94	18.08	23.56	17.81	24.66	17.67	25.76	18.51		
39	19.51	16.40	20.33	17.42	21.65	16.75	22.72	18.01	23.30	17.74	24.30	17.57	25.30	18.40		
41	20.09	16.64	20.57	17.51	21.47	16.69	22.44	17.93	22.98	17.65	23.88	17.46	24.77	18.27		
43	19.02	16.19	19.85	17.24	21.05	16.55	21.92	17.76	22.41	17.48	23.19	17.27	23.96	18.08		
46	17.16	15.43	17.71	16.44	18.29	15.62	18.93	16.88	19.55	16.68	20.41	16.54	21.26	17.46		
50	11.31	11.08	11.84	11.60	12.45	12.20	12.74	12.49	12.94	12.69	13.14	12.88	13.35	13.08		

Outdoor air temp. °CDB	°CWB	Indoor air temperature °CDB				
		16	18	20	22	24
-19.8	-20					
-17.7	-18					
-15.7	-16					
-13.5	-14	13.22	13.07	12.93	12.78	12.63
-11.5	-12	13.88	13.73	13.58	13.43	13.28
-9.5	-10	14.55	14.39	14.24	14.08	13.93
-7.5	-8	15.21	15.05	14.89	14.73	14.58
-5.5	-6	15.48	15.32	15.17	15.02	14.87
-3.0	-4	15.74	15.59	15.45	15.30	15.16
-1.0	-2	16.00	15.87	15.73	15.59	15.45
1.0	0	16.27	16.14	16.01	15.87	15.74
2.0	1	16.40	16.27	16.14	16.01	15.88
3.0	2	18.64	18.48	18.32	18.18	18.04
5.0	4	23.11	22.89	22.66	22.50	22.34
7.0	6	27.59	27.29	27.00	26.82	26.65
9.0	8	28.92	28.67	28.42	28.22	28.03
11.5	10	30.24	30.04	29.84	29.63	29.41
13.5	12	31.28	31.09	30.89	30.68	30.46
15.5	14	32.32	32.14	31.95	31.73	31.51
16.5	16	32.85	32.66	32.47	32.25	32.03

Notes(1) These data show average status.
Depending on the system control, there may be ranges where the operation is not conducted continuously.
These data show the case where the operation frequency of a compressor is fixed.

PJF000Z587

(2) Capacities are based on the following conditions.
Corresponding refrigerant piping length :7.5m
Level difference of Zero.

(3) Symbols are as follows
TC :Total cooling capacity (kW)
SHC :Sensible heat capacity (kW)
HC :Heating capacity (kW)

(3) Triple type

Model **FDT200VSATVH** Indoor unit **FDT71VH (3 units)** Outdoor unit **FDC200VSA**

Cooling Mode

(kW)

Heating Mode : HC


(kW)

Outdoor air temp.	Indoor air temperature																Outdoor air temp.		Indoor air temperature				
	18 °CDB		21 °CDB		23 °CDB		26 °CDB		27 °CDB		28 °CDB		31 °CDB		33 °CDB		°CDB	°CWB	°CDB				
	12 °CWB		14 °CWB		16 °CWB		18 °CWB		19 °CWB		20 °CWB		22 °CWB		24 °CWB				16	18	20	22	24
°CDB	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC							
11					19.36	16.93	20.45	18.45	20.99	18.20	21.67	17.98	23.02	19.11	24.37	18.57							
13					19.46	16.96	20.57	18.48	21.13	18.24	21.78	18.01	23.09	19.13	24.40	18.57							
15					19.55	16.99	20.69	18.52	21.26	18.27	21.90	18.03	23.16	19.14	24.43	18.58							
17					19.56	16.99	20.77	18.54	21.37	18.30	21.99	18.06	23.23	19.16	24.47	18.59							
19					19.64	17.01	20.84	18.56	21.48	18.33	22.09	18.08	23.30	19.17	24.51	18.59							
21					19.34	16.92	20.50	18.46	21.11	18.23	21.72	17.99	22.92	19.09	24.13	18.52							
23					19.04	16.82	20.16	18.37	20.74	18.14	21.35	17.90	22.55	19.01	23.76	18.46							
25			17.82	17.46	18.89	16.77	19.99	18.32	20.56	18.09	21.16	17.85	22.37	18.97	23.57	18.42							
27			17.68	17.33	18.74	16.73	19.82	18.27	20.38	18.04	21.25	17.87	22.13	18.92									
29			17.40	17.05	18.43	16.63	19.49	18.18	20.03	17.95	20.93	17.79	21.83	18.86									
31			17.11	16.77	18.11	16.53	19.15	18.08	19.69	17.86	20.60	17.71	21.52	18.79									
33	15.84	15.53	16.58	16.25	17.80	16.43	18.82	17.99	19.34	17.77	20.28	17.63	21.21	18.73									
35	15.73	15.42	16.37	16.05	17.49	16.34	18.49	17.90	19.00	17.68	19.95	17.56	20.91	18.66									
37	15.52	15.21	16.13	15.81	17.14	16.23	18.05	17.69	18.57	17.57	19.48	17.44	20.39	18.55									
39	15.31	15.00	15.89	15.57	16.78	16.12	17.61	17.26	18.13	17.46	19.00	17.33	19.87	18.45									
41	15.10	14.80	15.65	15.34	16.43	16.01	17.18	16.83	17.70	17.34	18.53	17.21	19.36	18.34									
43	14.89	14.59	15.41	15.10	16.07	15.75	16.74	16.41	17.26	16.92	18.05	17.10	18.84	18.24									
46	14.58	14.29	15.05	14.75	15.54	15.23	16.09	15.76	16.61	16.28	17.34	16.93	18.06	17.70									
50	11.25	11.02	11.78	11.54	12.39	12.14	12.68	12.42	12.88	12.62	13.08	12.82	13.28	13.01									

Notes(1) These data show average status.
Depending on the system control, there may be ranges where the operation is not conducted continuously.
These data show the case where the operation frequency of a compressor is fixed.

(2) Capacities are based on the following conditions.
Corresponding refrigerant piping length :7.5m
Level difference of Zero.

(3) Symbols are as follows
TC :Total cooling capacity (kW)
SHC :Sensible heat capacity (kW)
HC :Heating capacity (kW)




[References data]


Capacity variation against outdoor and indoor temperature at rated capacity condition.t

(I) Models FDC100, 125, 140VNA, 100, 125, 140VSA

① Cooling

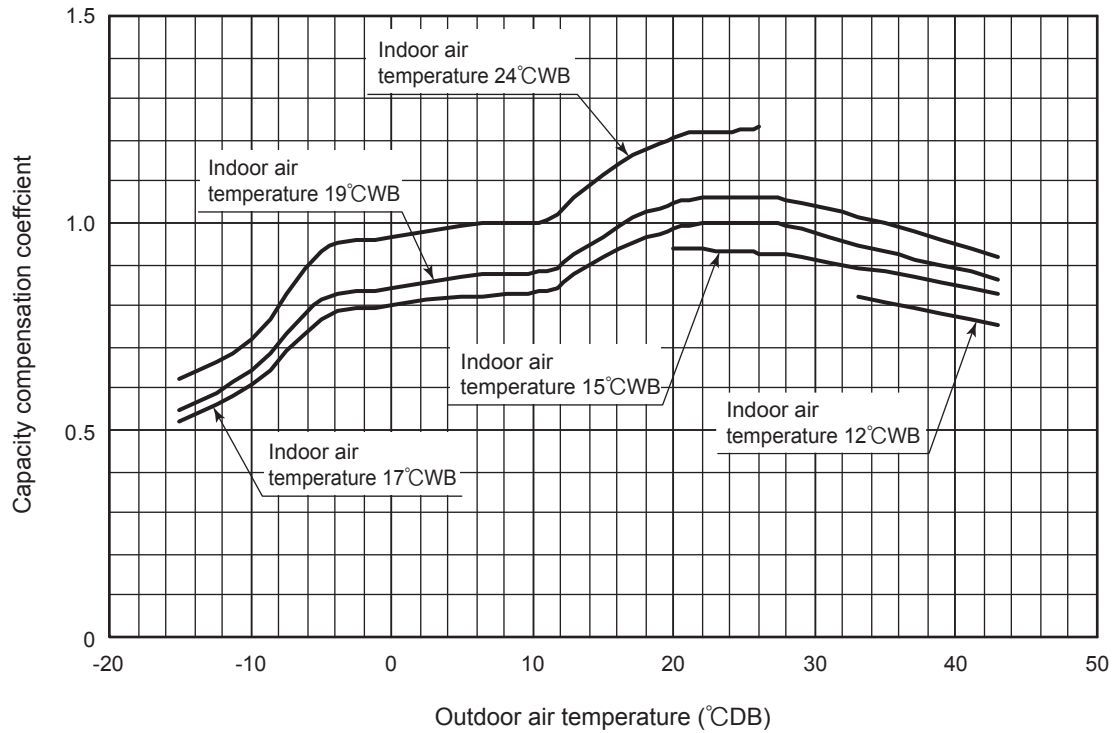


② Heating

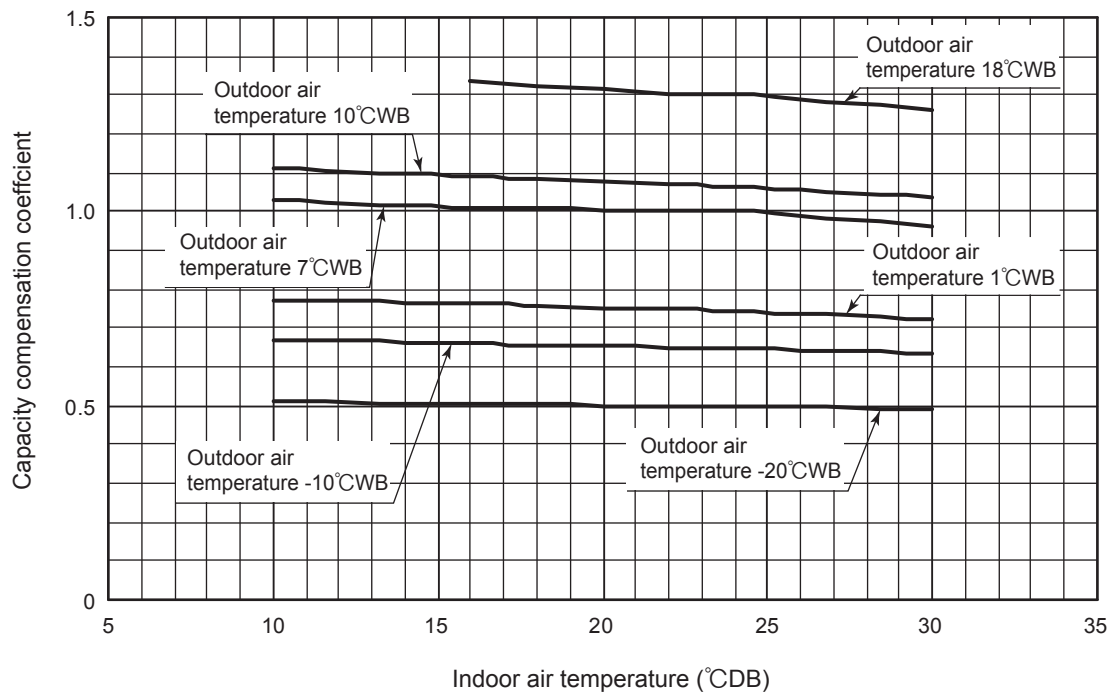


(II) Model FDC200VSA


① Cooling

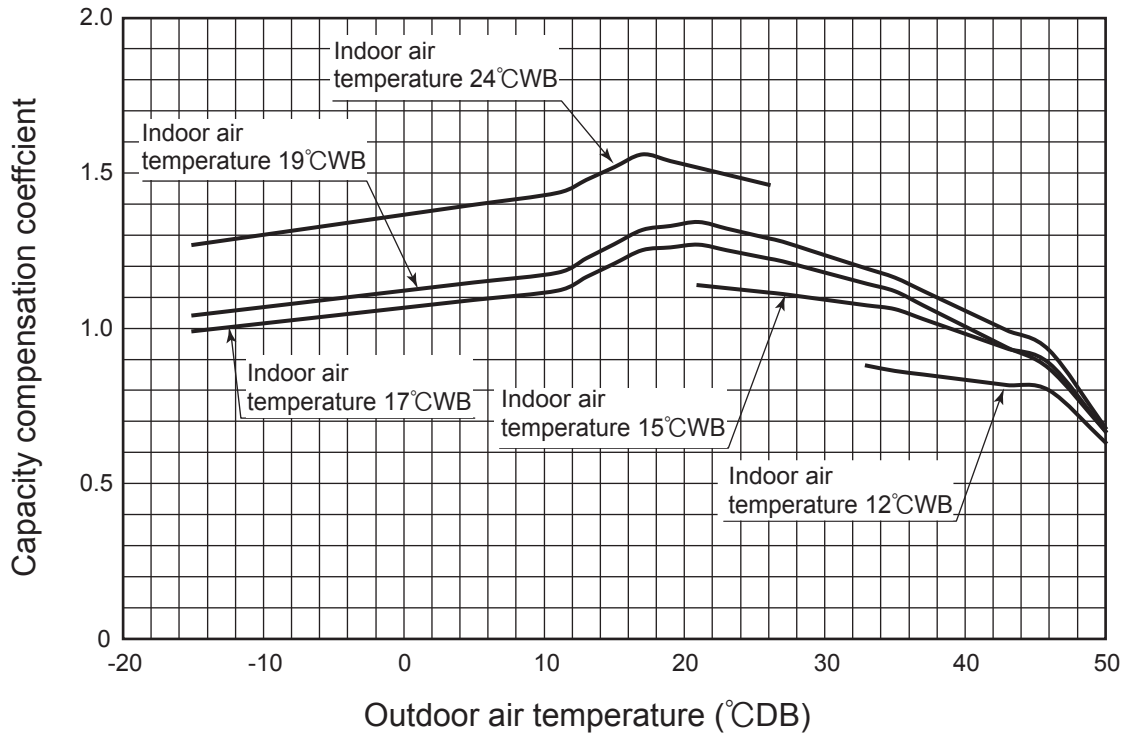


② Heating

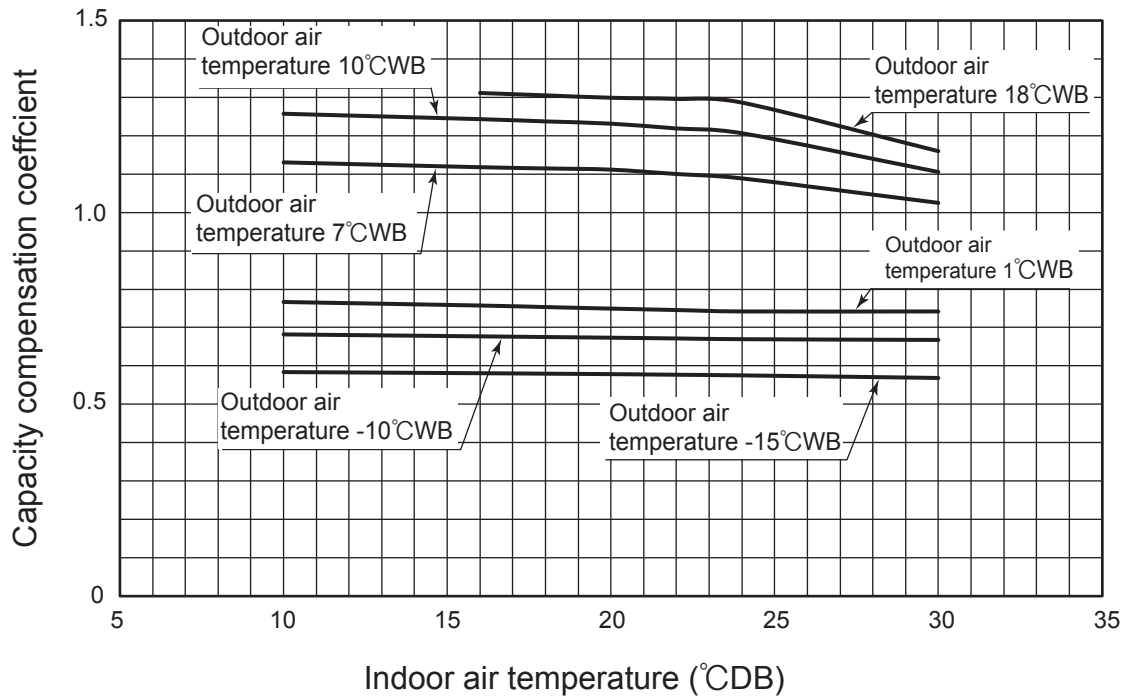

(III) Model FDC250VSA
① Cooling

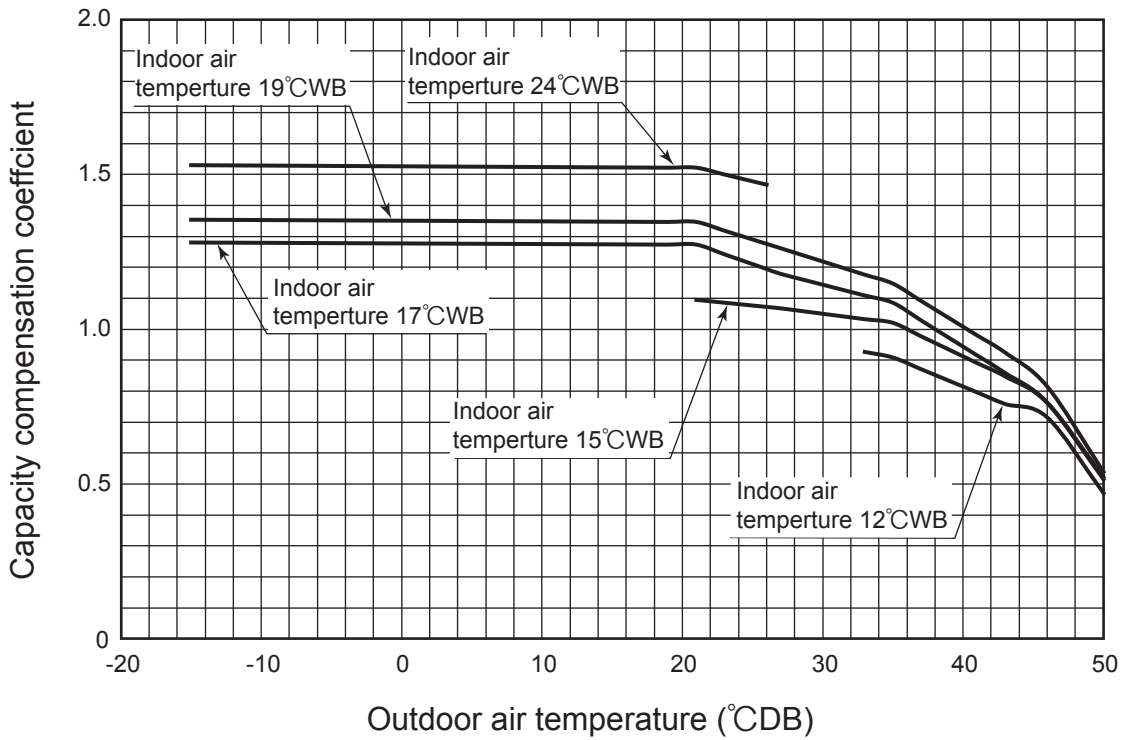

② Heating

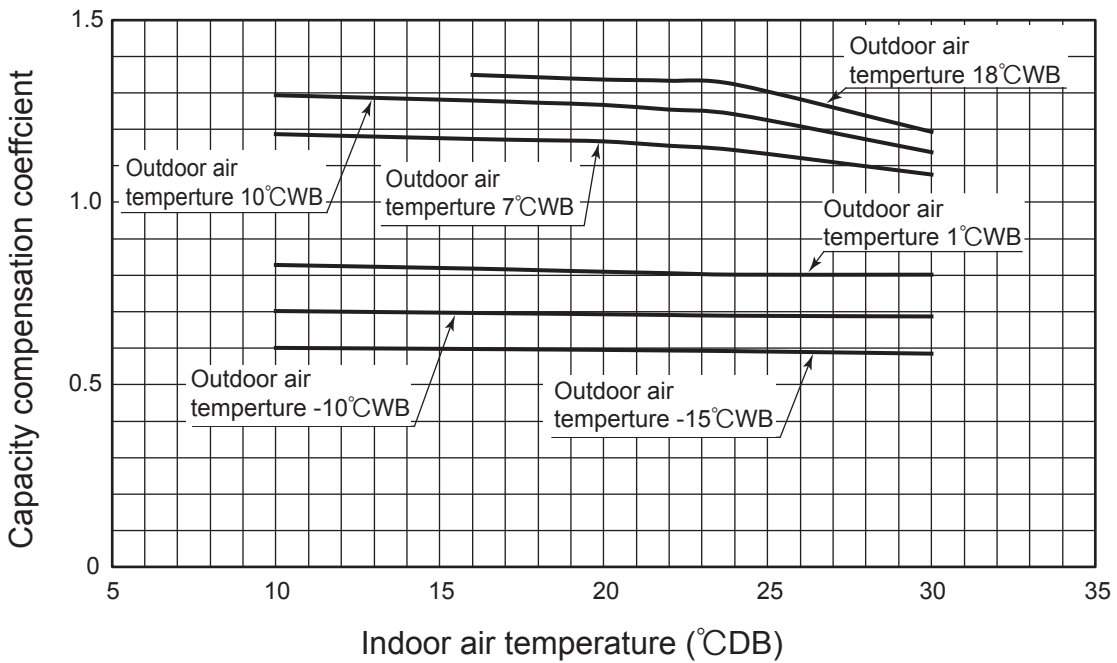

2.8.2 Correction of cooling and heating capacity in relation to air flow rate control (Fan speed)

Fan speed	P-Hi or Hi	Me	Lo
Coefficient	1.00	0.97	0.95

2.8.3 Correction of cooling and heating capacity in relation to one way length of refrigerant piping

It is necessary to correct the cooling and heating capacity in relation to the one way equivalent piping length between the indoor and outdoor units.

(1) Models FDC100 - 140

Equivalent piping length ⁽¹⁾ (m)		7.5	10	15	20	25	30	35	40	45	50	55	
Heating		1	1	1	1	1	0.998	0.998	0.993	0.993	0.988	0.988	
Cooling	FDC100 model	φ 15.88	1	0.991	0.978	0.964	0.951	0.937	0.924	0.910	0.897	0.883	0.870
	FDC125 model		1	0.986	0.968	0.950	0.932	0.914	0.896	0.878	0.860	0.842	0.824
	FDC140 model		1	0.985	0.966	0.946	0.927	0.907	0.888	0.868	0.849	0.829	0.810
	FDC100 model	φ 19.05	1.016	1.013	1.007	1.002	0.996	0.991	0.985	0.980	0.974	0.969	0.963
	FDC125 model		1.022	1.018	1.009	1.001	0.992	0.984	0.975	0.967	0.958	0.950	0.941
	FDC140 model		1.026	1.021	1.011	1.002	0.992	0.983	0.973	0.964	0.954	0.945	0.935

Note (1) Calculate the equivalent length using the following formula.

However, install the piping so that the piping length is within +5 m of the limit length (actual length) for the respective types.

(2) Models FDC200, 250

Equivalent piping length ⁽¹⁾ (m)		7.5	10	15	20	25	30	35	40	45	50	55	60	65	70	75
Heating		1	0.998	0.995	0.991	0.988	0.984	0.981	0.977	0.974	0.970	0.967	0.963	0.960	0.956	0.953
Cooling	FDC200 model	φ 22.22	1	0.997	0.991	0.984	0.978	0.971	0.965	-	-	-	-	-	-	-
	FDC250 model		1	0.995	0.985	0.975	0.965	0.954	0.944	-	-	-	-	-	-	-
	FDC200 model	φ 25.4	-	-	-	-	-	0.988	0.984	0.981	0.977	0.974	0.970	0.967	0.963	0.960
	FDC250 model		-	-	-	-	-	0.978	0.972	0.966	0.960	0.953	0.947	0.941	0.935	0.929
	FDC200 model	φ 28.58	-	-	-	-	-	0.999	0.997	0.995	0.993	0.991	0.989	0.987	0.985	0.983
	FDC250 model		-	-	-	-	-	0.997	0.994	0.990	0.987	0.983	0.980	0.976	0.973	0.969

Note (1) Calculate the equivalent length using the following formula.

However, install the piping so that the piping length is within +5 m of the limit length (actual length) for the respective types.

• Equivalent Length = Actual Length + (Equivalent bend length x number of bends in the piping.)

Equivalent length per bend.

Gas pipe diameter (mm)	φ 12.7	φ 15.88	φ 19.05	φ 22.22	φ 25.4	φ 28.58
Equivalent bend length	0.20	0.25	0.30	0.35	0.40	0.45

2.8.4 Height difference between the indoor unit and outdoor unit

When the outdoor unit is located below indoor units in cooling mode, or when the outdoor unit is located above indoor units in heating mode, the correction coefficient mentioned in the below table should be subtracted from the value in the above table.

Height difference between the indoor unit and outdoor unit in the vertical height difference	5m	10m	15m	20m	25m	30m
Adjustment coefficient	0.99	0.98	0.97	0.96	0.95	0.94

Piping length limitations

Model	FDC100 - 140	FDC200, 250
Item		
Max. one way piping length	50m	70m
Max. vertical height difference	Outdoor unit is higher 30m Outdoor unit is lower 15m	

Note (1) Values in the table indicate the one way piping length between the indoor and outdoor units.

How to obtain the cooling and heating capacity

Example : The net cooling capacity of the model FDT200VSATVH with the air flow “P-Hi”, the piping length of 15m, the outdoor unit located 5m lower than the indoor unit, indoor wet-bulbtemperature at 19.0°C and outdoor dry-bulb temperature 35°C is

$$\text{Net cooling capacity} = \frac{19.0}{\text{Net cooling total capacity of FDT200VSATVH (Outdoor temp. : 35°CDB Indoor temp. : 19°CWB) shown in 2.8.1}} \times \frac{1.00}{\text{Air flow : P-Hi shown in 2.8.2}} \times \frac{0.991}{\text{Piping length : 15m (Gas pipe size is } \phi 22.22 \text{) shown in 2.8.3}} \times \frac{0.99}{\text{Height diff. : 5m (Outdoor unit : below) shown in 2.8.4}} \approx 18.6\text{kW}$$

2.9 APPLICATION DATA

- 2.9.1 Installation of indoor unit See page 42.
- 2.9.2 Electric wiring work installation See page 48.
- 2.9.3 Installation of wired remote control (Option parts) See page 52.
- 2.9.4 Installation of outdoor unit

(1) Models FDC100-140VNA, 100-140VSA

PSC012D106
Inverter driven split PAC
100VNA – 140VNA, 100VSA – 140VSA
Designed for R410A refrigerant

Ⓞ This installation manual deals with outdoor units and general installation specifications only. For indoor units, refer to Page 42.
 Ⓞ When install the unit, be sure to check whether the selection of installation place, power source specifications, usage limitation (piping length, height differences between indoor and outdoor units, power source voltage and etc.) and installation spaces.

Check before installation work

- Model name and power source
- Refrigerant piping length
- Piping, wiring and miscellaneous small parts
- Indoor unit installation manual

SAFETY PRECAUTIONS

- We recommend you to read this "SAFETY PRECAUTIONS" carefully before the installation work in order to gain full advantage of the functions of the unit and to avoid malfunction due to mishandling.
- The precautions described below are divided into **⚠WARNING** and **⚡CAUTION**. The matters with possibilities leading to serious consequences such as death or serious personal injury due to erroneous handling are listed in the **⚠WARNING** and the matters with possibilities leading to personal injury or damage of the unit due to erroneous handling including probability leading to serious consequences in some cases are listed in **⚡CAUTION**. **These are very important precautions for safety. Be sure to observe all of them without fail.**
- The meaning of "Marks" used here are as shown below.

	Never do it under any circumstance.
	Always do it according to the instruction
- For 3 phase power source outdoor unit, ENG1000-3-2 is not applicable if consent by the utility company or notification to the utility company is given before usage.
- 3 phase power source unit, both indoor and outdoor, is suitable for installation in a commercial and light industrial environment. If installed as a house-hold appliance, it could cause electromagnetic interference.
- 5 and 6 HP units of single phase power source are equipment complying with IEC 61000-3-12.
- Be sure to confirm no anomaly on the equipment by commissioning after completed installation and explain the operating methods as well as the maintenance methods of this equipment to the user according to the owner's manual.
- Keep the installation manual together with owner's manual at a place where any user can read at any time. Moreover, if necessary, ask to hand them to a new user.



WARNING

	<ul style="list-style-type: none"> ● Installation must be carried out by the qualified installer. If you install the system by yourself, it may cause serious trouble such as water leaks, electric shocks, fire and personal injury, as a result of a system malfunction. ● Install the system in full accordance with the instruction manual. Incorrect installation may cause bursts, personal injury, water leaks, electric shocks and fire. ● Use the original accessories and the specified components for installation. If parts other than those prescribed by us are used, it may cause fall of the unit, water leaks, electric shocks, fire, refrigerant leak, substandard performance, control failure and personal injury. ● When installing in small rooms, take prevention measures not to exceed the density limit of refrigerant in the event of leakage accordance with ISO5149. Consult the expert about prevention measures. If the density of refrigerant exceeds the limit in the event of leakage, lack of oxygen can occur, which can cause serious accidents. ● Ventilate the working area well in the event of refrigerant leakage during installation. If the refrigerant comes into contact with naked flames, poisonous gas is produced. ● After completed installation, check that no refrigerant leaks from the system. If refrigerant leaks into the room and comes into contact with an open or other hot surface, poisonous gas is produced. ● Hang up the unit at the specified points with ropes which can support the weight in lifting for portage. And to avoid jolting out of alignment, be sure to hang up the unit at 4-point support. An improper manner of portage such as 3-point support can cause death or serious personal injury due to falling of the unit. ● Install the unit in a location with good support. Unsuitable installation locations can cause the unit to fall and cause material damage and personal injury. ● Ensure the unit is stable when installed, so that it can withstand earthquakes and strong winds. Unsuitable installation locations can cause the unit to fall and cause material damage and personal injury. ● The electrical installation must be carried out by the qualified electrician in accordance with "the norm for electrical work" and "national wiring regulation", and the system must be connected to the dedicated circuit. Power source with insufficient capacity and incorrect function done by improper work can cause electric shocks and fire. ● Be sure to shut off the power before starting electrical work. Failure to shut off the power can cause electric shocks, unit failure or incorrect function of equipment. ● Be sure to use the cables conforming to safety standard and cable capacity for power distribution work. Unconformable cables can cause electric leak, anomalous heat production or fire. ● Use the prescribed cables for electrical connection, tighten the cables securely in terminal block and relieve the cables correctly to prevent generating the heat in the block. Loose connections or cable routings can cause anomalous heat production or fire. ● Arrange the wiring in the control box so that it cannot be pushed up further into the box. Install the service panel correctly. Incorrect installation may result in overheating and fire. ● Do not perform brazing work in the airtight room It can cause lack of oxygen. ● Use the prescribed pipes, flare nuts and tools for R410A. Using existing parts (for R22 or R407C) can cause the unit failure and serious accidents due to burst of the refrigerant circuit.
	<ul style="list-style-type: none"> ● Tighten the flare nut by using double spanners and torque wrench according to prescribed method. Be sure not to tighten the flare nut too much. Loose flare connection or damage on the flare part by tightening with excess torque can cause burst or refrigerant leaks which may result in lack of oxygen. ● Do not open the service valves for liquid line and gas line until completed refrigerant piping work, air tightness test and evacuation. If the compressor is operated in state of opening service valves before completed connection of refrigerant piping work, you may incur frost bite or injury from an abrupt refrigerant outflow and air can be sucked into refrigerant circuit, which can cause burst or personal injury due to anomalously high pressure in the refrigerant. ● Only use prescribed optional parts. The installation must be carried out by the qualified installer. If you install the system by yourself, it can cause serious trouble such as water leaks, electric shocks, fire. ● Do not perform any change of protective device itself or its setup condition. The forced operation by short-circuiting protective device of pressure switch and temperature control or the use of non specified component can cause fire or burst. ● Be sure to switch off the power source in the event of installation, inspection or servicing. If the power source is not shut off, there is a risk of electric shocks, unit failure or personal injury due to the unexpected start of fan. ● Consult the dealer or an expert regarding removal of the unit. Incorrect installation can cause water leaks, electric shocks or fire. ● Stop the compressor before closing valve and disconnecting refrigerant pipes in case of pump down operation. If disconnecting refrigerant pipes in state of opening service valves before compressor stopping, you may incur frost bite or injury from an abrupt refrigerant outflow and air can be sucked, which can cause burst or personal injury due to anomalously high pressure in the refrigerant circuit. ● Be sure to wear protective goggles and gloves while at work. ● Ensure that no air enters in the refrigerant circuit when the unit is installed and removed. If air enters in the refrigerant circuit, the pressure in the refrigerant circuit becomes too high, which can cause burst and personal injury. ● Do not run the unit with removed panels or protections. Touching rotating equipments, hot surfaces or high voltage parts can cause personal injury due to entrapment, burn or electric shocks. ● Be sure to fix up the service panels. Incorrect fixing can cause electric shocks or fire due to intrusion of dust or water. ● Do not perform any repairs or modifications by yourself. Consult the dealer if the unit requires repair. If you repair or modify the unit, it can cause water leaks, electric shocks or fire. ● Do not process or splice the power cord, or share the socket with other power plugs. This may cause fire or electric shock due to deflecting contact, deflecting insulation and over-current etc. ● Do not bundle or wind or process the power cord. Do not deform the power cord by treading it. This may cause fire or heating.

CAUTION	
	<ul style="list-style-type: none"> ● Carry out the electrical work for ground lead with care. Do not connect the ground lead to the gas line, water line, lightning conductor or telephone line's ground lead. Incorrect grounding can cause unit faults such as electric shocks due to short-circuiting. Never connect the grounding wire to a gas pipe because if gas leaks it could cause explosion or ignition. ● Use the circuit breaker for all pipe with correct capacity. Using the incorrect circuit breaker, it can cause the unit malfunction and fire. ● Install isolator or disconnect switch on the power source wiring in accordance with the local codes and regulations. The isolator should be locked in accordance with EN62024-1. ● Take care when carrying the unit by hand. If the unit weighs more than 20kg, it must be carried by two or more persons. Do not carry by the plastic straps, always use the carry handle when carrying the unit by hand. Use gloves to minimize the risk of cuts by the aluminium fins. ● Dispose of any packing materials correctly. Any remaining packing materials can cause personal injury as it contains nails and wood. And to avoid danger of suffocation, be sure to keep the plastic wrapper away from children and to dispose after use. ● Pay attention not to damage the drain pan by weld spatter when welding work is done near the indoor unit. If weld spatters on the unit during welding work, it can cause fire and reduce energy. To prevent such damage, keep the indoor unit in its packing or cover it. ● Be sure to insulate the refrigerant pipes so as not to condense the ambient air moisture on them. Insufficient insulation can cause condensation, which can lead to moisture damage on the ceiling, floor, furniture and any other valuables. ● Be sure to perform air tightness test by pressurizing with nitrogen gas after completed refrigerant piping work. If the density of refrigerant leaks, the leak in the case of refrigerant leakage in the small room, lack of oxygen can occur, which can cause serious accidents. ● Perform the installation work properly according to the installation manual. Improper installation can cause abnormal vibrations, noise, excessive noise generation. ● After maintenance of wiring, wiring ties and the like, should be returned to their original state and wiring route, and the necessary clearances from all related parts should be installed. If the extra leakage breaker is not installed, it can cause fire or electric shocks. ● Do not use any materials other than a tube with the correct rating in the location where fuses are to be used. Connecting air ducts with copper wire or other metal thread can cause burn failure and fire. ● Check inside the unit for the location where leakage of combustible gases can occur. If heated gases accumulate around the unit, it can cause fire. ● Do not let the unit where there are flammable gases (such as sulfuric acid gas, etc.) or combustible gas (such as thinner and petroleum gases) can be used or collect or use volatile substances in the field. Corrosive gas can cause corrosion of heat exchanger, leakage of plastic parts and etc. And combustible gas can cause fire. ● Secure a space for installation, inspection and maintenance specified in the manual. Insufficient space can result in accident such as personal injury due to falling from the installation place. ● When the outdoor unit is installed on a roof or a high place, provide permanent ladders and handrails along the access route and fences and handrails around the outdoor unit. If safety facilities are not provided, it can cause personal injury due to falling from the installation place. ● Do not install nor use the system close to the equipment that generates electromagnetic fields or high frequency harmonics. Equipment such as inverters, standby generators, medical high frequency equipments and telecommunication equipments can affect the system, and cause malfunctions and breakdowns. The system can also affect medical equipment and telecommunication equipment, and obstruct its function or cause jamming. ● Do not install the outdoor unit in a location where insects and small animals can inhabit. Insects and small animals can enter the electric parts and cause damage or fire. Instruct the user to keep the surroundings clean. ● Do not use the base frame for outdoor unit which is corroded or damaged due to long periods of operation. Using an old and damaged base frame can cause the unit falling down and cause personal injury.
	<ul style="list-style-type: none"> ● Do not install the unit in the locations listed below. -Locations where carbon fiber, metal powder or any powder is floating. -Locations where any substances that can affect the unit such as sulphide gas, chloride gas, acid and alkaline can occur. -Vehicles and ships. -Hospitals, schools, or special sprays are often used. -Locations with direct exposure of oil mist and steam such as kitchen and machine plant. -Locations where any machines which generate high frequency harmonics are used. -Locations with salty atmospheres such as coastlines. -Locations with heavy snow (if installed, be sure to provide base frame and snow hood mentioned in the manual). -Locations at high altitude (more than 1000m high). -Locations with ammonia atmospheres (e.g. organic fertilizer). -Locations where heat radiation from other heat source can affect the unit. -Locations without good air circulation. -Locations with any obstacles which can prevent inlet and outlet air of the unit. -Locations where short circuit of air can occur (in case of multiple units installation). -Locations where strong air blows against the air outlet of outdoor unit. -Locations where something located above the unit could fall. -Locations where drainage equipment and cause a claim. It can cause remarkable decrease in performance, corrosion and damage of components, malfunction and fire. ● Do not install the outdoor unit in the locations listed below. -Locations where discharged hot air or operating source of the outdoor unit can bother neighborhood. -Locations where outlet air of the outdoor unit blows directly to animals or plants. The outlet air can affect adversely to the plant etc. -Locations where vibration and operation sound generated by the outdoor unit can affect seriously (on the wall or at the place near bed room). -Locations where an equipment affected by high harmonics is placed (TV set or radio receiver is placed within 5m). -Locations where drainage equipment and cause a claim. It can affect surrounding environment and cause a claim. ● Do not use the unit for special purposes such as storing foods, cooling precision instruments and preservation of animals, plants or art. It can cause the damage of the items. ● Do not touch any buttons with wet hands. It can cause electric shocks. ● Do not touch any refrigerant pipes with your hands when the system is in operation. During operation the refrigerant pipes become extremely hot or extremely cold depending the operating condition, and it can cause burn injury or frost injury. ● Do not clean up the unit with water. It can cause electric shocks. ● Do not operate the outdoor unit with any article placed on it. You may incur property damage or personal injury from a fall of the article. ● Do not step onto the outdoor unit. You may incur injury from a drop or fall. ● Do not touch the suction or aluminium fin on the outdoor unit. This may cause injury. ● Do not put anything on the outdoor unit and operating unit. This may cause damage the objects or injury due to falling to the object.


Notabilia as a unit designed for R410A

- Do not use any refrigerant other than R410A. R410A will rise to pressure about 1.6 times higher than that of a conventional refrigerant.
- A cylinder containing R410A has a pink indication mark on the top.
- A unit designed for R410A has adopted a different size indoor unit operation valve charge port and a different size check joint provided in the unit to prevent the charging of a wrong refrigerant by mistake. The processed dimension of the flared part of a refrigerant pipe and a flare nut's parallel side measurement have also been altered to raise strength against pressure. Accordingly, you are required to arrange dedicated R410A tools listed in the table on the right before installing or servicing this unit.
- Do not use a charge cylinder. The use of a charge cylinder will cause the refrigerant composition to change, which results in performance degradation.
- In charging refrigerant, always take it out from a cylinder in the liquid phase.
- All indoor units must be models designed exclusively for R410A. Check connectable indoor unit models in a catalog, etc. (A wrong indoor unit, if connected into the system, will impair proper system operation)

Dedicated R410A tools	
a)	Gauge manifold
b)	Charge hose
c)	Electronic scale for refrigerant charging
d)	Torque wrench
e)	Flare tool
f)	Protusion control copper pipe gauge
g)	Vacuum pump adapter
h)	Gas leak detector

1. HAULAGE AND INSTALLATION (Take particular care in carrying in or moving the unit, and always perform such an operation with two or more persons.)

▲ CAUTION When a unit is hoisted with slings for haulage, take into consideration the offset of its gravity center, position, if not properly balanced, the unit can be thrown off-balance and fall.



- 1) Delivery**
- Deliver the unit as close as possible to the installation site before removing it from the packaging.
 - When some compelling reason necessitates the unpacking of the unit before it is carried in, use nylon slings or protective wood pieces so as not to damage the unit by ropes lifting it.

3) Selection of installation location for the outdoor unit

- Be sure to select a suitable installation place in consideration of following conditions.
- A place where it is horizontal, stable and can endure the unit weight and will not allow vibration transmittance of the unit.
 - A place where it can be free from possibility of bothering neighbors due to noise or exhaust air from the unit.
 - A place where the unit is not exposed to oil splashes.
 - A place where it can be free from danger of flammable gas leakage.
 - A place where drain water can be disposed without any trouble.
 - A place where the unit will not be affected by heat radiation from other heat source.
 - A place where snow will not accumulate.
 - A place where the unit can be kept away 5m or more from TV set and/or radio receiver in order to avoid any radio or TV interference.
 - A place where good air circulation can be secured, and enough service space can be secured for maintenance and service of the unit safely.
 - A place where the unit will not be affected by electromagnetic waves and/or high-harmonic waves generated by other equipment.
 - A place where chemical substances like sulfuric gas, chloric gas, acid and alkali (including ammonia), which can harm the unit, will not be generated, and not remain.
 - A place where strong wind will not blow against the outlet air blow of the unit.
 - Do not install the unit in places which exposed to sea breeze (e.g. coastal area) or calcium chloride (e.g. snow melting agent), exposed to ammonia substance (e.g. organic fertilizer).

4) Caution about selection of installation location

- (1) If the unit is installed in the area where the snow will accumulate, following measures are required.
 - The bottom plate of unit and intake, outlet may be blocked by snow.
- (2) Provide a snow hood to the outdoor unit on site. Regarding outline of a snow hood, refer to our technical manual.
- (3) Install the unit under eaves or provide the roof on site.





Since drain water generated by defrost control may freeze, following measures are required.

- Don't execute drain piping work by using a drain elbow and drain grommets (optional parts). [Refer to Drain piping work.]
- Recommend setting Defrost Control (SW3-1) and Snow Guard Fan Control (SW3-2). [Refer to Setting SW3-1, SW3-2.]
- Attach heater on a base plate on site, if there is possibility to freeze drain water. In case that the product has a corrective drainage system, the drainage paths should have suitable measure against freezing but be sure not to meet the material of drainage paths with heat.

(2) If the unit can be affected by strong wind, following measures are required.

1. Strong wind can cause damage of fan (fan motor), or can cause performance degradation, or can trigger anomalous stop of the unit due to rising of high pressure.
1. Install the outlet air blow side of the unit to face a wall of building, or provide a fence or a windbreak screen.
3. The unit should be installed on the stable and level foundation. If the foundation is not level, tie down the unit with wires.



2) Portage


- The right hand side of the unit as viewed from the front (diffuser side) is heavier. A person carrying the right hand side must take heed of this fact. A person carrying the left hand side must hold with his right hand the handle provided on the front panel of the unit and with his left hand the corner column section.

5) Installation space

- Walls surrounding the unit in the four sides are not acceptable.
- There must be a 1-meter or larger space in the above.
- Where a danger of short-circuiting exists, install guide louvers.
- When more than one unit are installed, provide sufficient intake space consciously so that short-circuiting may not occur.
- Where piling snow can bury the outdoor unit, provide proper snow guards.
- A barrier wall placed in front of the exhaust diffuser must not be higher than the unit.

Size	Example installation (mm)			
	I	II	III	IV
L1	Open	Open	500	Open
L2	300	5	Open	Open
L3	150	300	150	150
L4	150	150	150	150

6) Installation

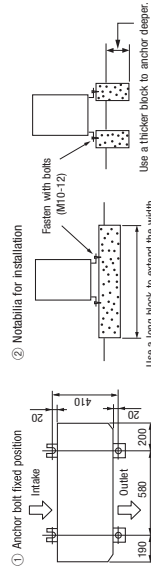

- In installing the unit, fix the unit's legs with bolts specified on the left.
 - The protrusion of an anchor bolt on the front side must be kept within 15 mm.
 - Securely install the unit so that it does not fall over during earthquakes or strong winds, etc.
 - Refer to the left illustrations for information regarding concrete foundations.
 - Install the unit in a level area. (With a gradient of 5 mm or less.)
- Improper installation can result in a compressor failure, broken piping within the unit and abnormal noise generation.

7) To run the unit for a cooling operation, when the outdoor temperature is -5°C or lower.

- When the outdoor air temperature is -5°C or lower, provide a snow hood to the outdoor unit on site. So that strong wind will not blow against the outdoor heat exchanger directly. Regarding outline of a snow hood, refer to our technical manual.

2. REFRIGERANT PIPING WORK

1) Restrictions on unit installation and use

- Check the following points in light of the indoor unit specifications and the installation site.
- Observe the following restrictions on unit installation and use. Improper installation can result in a compressor failure or performance degradation.

Restrictions	One-way pipe length difference from the first branching point to the indoor unit		Mess spacing in the drawing	
	Model for outdoor units	Single type	Twin type	Triple type A
Dimensional restrictions	100WA, L29WA, 100SA, L29SA 140WA, 140SA	L	L+L1+L2	L+L1+L2+L3
One-way pipe length of refrigerant piping	≤ 50m	—	—	—
Main pipe length	≤ 50m	—	L	—
One-way pipe length between the first branching point to the second branching point	140WA, 140SA	—	—	—
One-way pipe length after the first branching point to indoor units through the second branching point	140WA, 140SA	—	L1, L2	—
One-way pipe length difference from the first branching point to the indoor unit	All Models	—	—	L1, L1'
One-way pipe length difference from the second branching point to the indoor unit	140WA, 140SA	—	—	L1+L2, L1+L3 (1)
Elevation difference between indoor and outdoor units	When the outdoor unit is positioned higher, ≤ 50m When the outdoor unit is positioned lower, ≤ 15m	H	H	H
Elevation difference between indoor units	≤ 15m	—	b	H1, H2, H3

- The use restrictions appearing in the table above are applicable to the standard pipe size combinations shown in the table below. Where an existing pipe system is utilized, different one-way pipe length restrictions should apply depending on its pipe size. For more information, see "6. UTILIZATION OF EXISTING PIPING." to the above table and right figure.
- With the triple pipe connection, the way of use is different when the difference of one-way pipe length after the first branching point is 3m to 10m. For details, refer to the above table and right figure.

Note (1) Install the indoor units so that L + L1 becomes the longest one-way pipe.

Note (2) When the outdoor unit is installed at a position higher than the indoor unit by 30m or more, set SW5-2 on the control PCB to ON.

2) Determination of pipe size


- Determine refrigerant pipe size pursuant to the following guidelines based on the indoor unit specifications.

Outdoor unit connected	Model 100V		Model 120V		Model 140V	
	Gas pipe	Liquid pipe	Gas pipe	Liquid pipe	Gas pipe	Liquid pipe
Refrigerant piping (Main pipe L)	φ15.88	φ9.52	φ15.88	φ9.52	φ15.88	φ9.52
In the case of a single type	φ15.88	φ9.52	φ15.88	φ9.52	φ15.88	φ9.52
Capacity of indoor unit	Model 100V	Model 120V	Model 140V	Model 140V	Model 140V	Model 140V
Branching pipe set	φ12.7	φ9.52	φ12.7	φ9.52	φ15.88	φ9.52
In the case of a twin type	φ12.7	φ9.52	φ12.7	φ9.52	φ15.88	φ9.52
Capacity of indoor unit	Model 50V+2	Model 60V+2	Model 50V+2	Model 60V+2	Model 50V+2	Model 60V+2
Branching pipe set	φ12.7	φ9.52	φ12.7	φ9.52	φ12.7	φ9.52
In the case of a triple type A	φ12.7	φ9.52	φ12.7	φ9.52	φ12.7	φ9.52
Capacity of indoor unit	Model 50V+3	Model 60V+3	Model 50V+3	Model 60V+3	Model 50V+3	Model 60V+3
Branching pipe set	φ12.7	φ9.52	φ12.7	φ9.52	φ12.7	φ9.52
In the case of a triple type B	φ12.7	φ9.52	φ12.7	φ9.52	φ12.7	φ9.52
Capacity of indoor unit	Model 50V+3	Model 60V+3	Model 50V+3	Model 60V+3	Model 50V+3	Model 60V+3

- When the 50V or 60V model is connected as an indoor unit, always use a φ9.52 liquid pipe for the branch (branching pipe – indoor unit) and a different diameter joint supplied with the branching pipe set for connection with the indoor unit (φ6.35 on the liquid pipe side).

- If a φ6.35 pipe is used for connection with a branching pipe, a refrigerant distribution disorder may occur, causing one of the indoor units to fall short of the rated capacity.
- A riser pipe must be a part of the main. A branching pipe set should be installed horizontally at a point as close to an indoor unit as possible.
- A branching part must be dressed with a heat-insulation material supplied as an accessory.
- For the details of installation work required at and near a branching area, see the installation manual supplied with your branching pipe set.

CAUTION

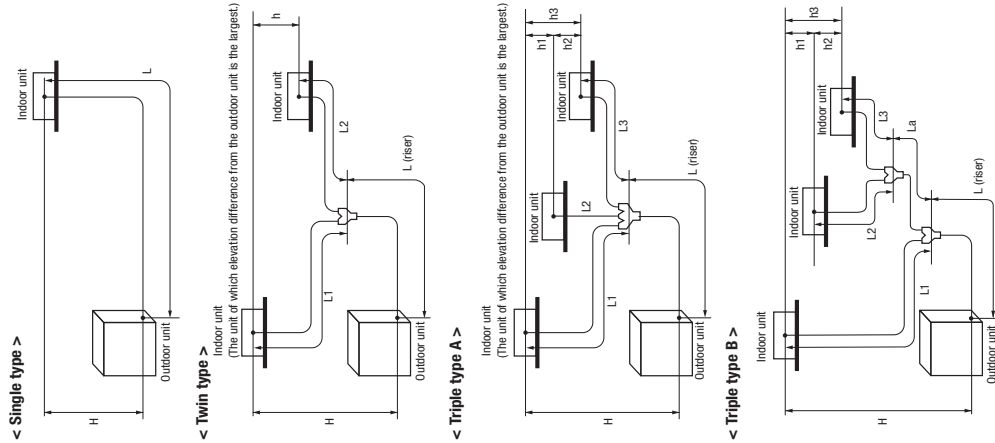

About brazing

Brazing must be performed under a nitrogen gas flow.
Without nitrogen gas, a large quantity of foreign matters (oxidized film) are created, causing a critical failure from capillary tube or expansion valve clogging.

Plug the end of the pipe with tape, or other material, and fill the pipe with nitrogen gas.

3) Refrigerant pipe wall thickness and material

● Select refrigerant pipes of the table shown on the right wall thickness and material as specified for each pipe size.

● This unit uses R410A. Always use 1/2H pipes having a 1.0mm or thicker wall for $\phi 19.05$ or larger pipes, because O-type pipes do not meet the pressure resistance requirement.

*Phosphorus deoxidized seamless copper pipe: C1220T, JIS H 3300

Pipe diameter (mm)	6.35	9.52	12.7	15.88	22.22	25.4	28.58
Minimum pipe wall thickness (mm)	0.8	0.8	0.8	1.0	1.0	1.0	1.0
Pipe material*	O-type pipe	O-type pipe	O-type pipe	O-type pipe	1/2H-type pipe	1/2H-type pipe	1/2H-type pipe

NOTE

● Select pipes having a wall thickness larger than the specified minimum pipe thickness.

4) On-site piping work

● Take care so that installed pipes may not touch components within a unit. If touching with an internal component, it will generate abnormal sounds and/or vibrations.

How to remove the service panel

First remove the five screws (X mark) of the service panel and push it down into the direction of the arrow mark and then remove it by pulling it toward you.

- The pipe can be laid in any of the following directions: side right, front, rear and downward.
- Remove a knock-out plate provided on the pipe penetration to open a minimum necessary area and attach an edging material supplied as an accessory by cutting it to an appropriate length before laying a pipe.
- Carry out the on site piping work with the operation valve fully closed.
- Give sufficient protection to a pipe end (compressed and blazed, or with an adhesive tape) so that water or foreign matters may not enter the piping.
- Bend a pipe to a radius as large as practical. (R100-R150) Do not bend a pipe repeatedly to correct its form.
- Flare connection is used between the unit and refrigerant pipe. Flare a pipe after engaging a flare nut onto it. Flare dimensions for R410A are different from those for conventional R407C. Although we recommend the use of flaring tools designed specifically for R410A, conventional flaring tools can also be used by adjusting the measurement of protrusion B with a protrusion control gauge.
- The pipe should be anchored every 1.5m or less to isolate the vibration.
- Tighten a flare joint securely with a double spanner.

Flared pipe end: A (mm)

Copper pipe outer diameter	0	A	-0.4
$\phi 6.35$	9.1	$\phi 9.52$	13.2
$\phi 12.7$	16.6	$\phi 15.88$	19.7

Copper pipe protrusion for flaring: B (mm)

In the case of a rigid (clutch) type	0.7-1.3
With an R410A tool	0-0.5
With a conventional tool	0-0.5

Recommended length of a tool handle (mm)

150	200	250	300
-----	-----	-----	-----

Tightening angle (°)

45-60	30-45	30-45	15-20
-------	-------	-------	-------

Tightening torque (Nm)

14-18	34-42	49-61	68-82
-------	-------	-------	-------

Operation valve size (mm)

$\phi 6.35$ (1/4")	$\phi 9.52$ (3/8")	$\phi 12.7$ (1/2")	$\phi 15.88$ (5/8")
--------------------	--------------------	--------------------	---------------------

Do not hold the valve cap area with a spanner.

Use a torque wrench. If a torque wrench is not available, fasten the flare nut manually first and then tighten it further, using the left table as a guide.

5) Air tightness test

① Although outdoor and indoor units themselves have been tested for air tightness at the factory, check the connecting pipes after the installation work for air tightness from the operation valve's check joint equipped on the outdoor unit side. While conducting a test, keep the operation valve shut all the time.

a) Raise the pressure to 0.5 MPa, and then stop. Leave it for five minutes to see if the pressure drops.

b) Then raise the pressure to 1.5 MPa, and stop. Leave it for five more minutes to see if the pressure drops.

c) Then raise the pressure to the specified level (4.15 MPa), and record the ambient temperature and the pressure.

d) If no pressure drop is observed with an installation pressurized to the specified level and left for about one day, it is acceptable. When the ambient temperature fall 1°C, the pressure also fall approximately 0.01 MPa. The pressure, if changed, should be compensated for.

e) If a pressure drop is observed in checking e) and a) - d), a leak exists somewhere. Find a leak by applying bubble test liquid to welded parts and flare joints and repair it. After repair, conduct an air-tightness test again.

② In conducting an air-tightness test, use nitrogen gas and pressurize the system with nitrogen gas from the gas side. Do not use a medium other than nitrogen gas under any circumstances.

CAUTION

Do not apply force beyond proper fastening torque in tightening the flare nut.

Fix both liquid and gas service valves at the valve main bodies as illustrated on the right, and then fasten them, applying appropriate fastening torque.

Airtightness test completed

Vacuuming begins

Vacuuming completed

Vacuum gauge check

Fill refrigerant

6) Evacuation

◁ Work flow ▷

When the system has remaining moisture inside or a leaky point, the vacuum gauge indicator will rise.

Check the system for a leaky point and then draw air to create a vacuum again.

Run the vacuum pump for at least one hour after the vacuum gauge shows -10 kPa or lower. (-75mmHg or lower)

Confirm that the vacuum gauge indicator does not rise even if the system is left for one hour or more.

Pay attention to the following points in addition to the above for the R410A and compatible machines.

- To prevent a different oil from entering, assign dedicated tools, etc. to each refrigerant type. Under no circumstances must a gauge manifold and a charge hose in particular be shared with other refrigerant types (R22, R407C, etc.).
- Use a counterflow prevention adapter to prevent vacuum pump oil from entering the refrigerant system.

7) Additional refrigerant charge

(1) Calculate a required refrigerant charge volume from the following table.

<Single type>					
Item	Standard refrigerant charge volume (kg)	Pipe length for standard refrigerant charge volume (m)	Additional charge volume (kg) per meter of refrigerant piping (liquid pipe)	Refrigerant volume charged for shipment at the factory (kg)	Installation's pipe length (m) covered without additional refrigerant charge
Capacity	2.0	0	0.06	3.8	30
100WA~140WA					
100SA~140SA					

<Twin, triple type>

Item	Standard refrigerant charge volume (kg)	Pipe length for standard refrigerant charge volume (m)	Additional charge volume (kg) per meter of refrigerant piping (liquid pipe)		Refrigerant volume charged for shipment at the factory (kg)	Installation's pipe length (m) covered without additional refrigerant charge
			Main pipe	Branch pipe		
Capacity	2.0	0		0.06	3.8	30
100WA~140WA						
100SA~140SA						

- A standard refrigerant charge volume means a refrigerant charge volume for an installation with 0m long refrigerant piping.
- This unit contains factory charged refrigerant covering 30m of refrigerant piping and additional refrigerant charge on the installation site is not required for an installation with up to 30m refrigerant piping. When refrigerant piping exceeds 30m, additionally charge an amount calculated from the pipe length and the above table for the portion in excess of 30m.
- When refrigerant piping is shorter than 3m, reduce refrigerant by 1kg from the factory charged volume and adjust to 2.8kg.
- If an existing pipe system is used, a required refrigerant charge volume will vary depending on the liquid pipe size. For further information, see "6. UTILIZATION OF EXISTING PIPING."

Formula to calculate the volume of additional refrigerant required

$$\text{Additional charge volume (kg)} = (\text{Main pipe length (m)} - \text{Length covered without additional charge 30 (m)}) \times 0.06 \text{ (kg/m)} + \text{Total length of branch pipes (m)} \times 0.06 \text{ (kg/m)}$$

- To charge refrigerant again, recover refrigerant from the system first and then charge the volume calculated from the above table (Standard refrigerant charge volume + additional charge volume for total pipe length.)


(2) Charging refrigerant

- Since R410A refrigerant must be charged in the liquid phase, you should charge it, keeping the container cylinder upside down or using a refrigerant cylinder equipped with a siphon tube.
- Charge refrigerant always from the liquid side service port with the operation valve shut. When you find it difficult to charge a required amount, fully open the outdoor unit valves on both liquid and gas sides and charge refrigerant from the gas (suction) side service port, while running the unit in the cooling mode. In doing so, care must be taken so that refrigerant may be discharged from the cylinder in the liquid phase all the time. When the cylinder valve is throttled down or a dedicated conversion tool to charge liquid-phase refrigerant into mist is used to protect the compressor, however, adjust charge conditions so that refrigerant will gassy upon entering the unit.
- In charging refrigerant, always charge a calculated volume by using a scale to measure the charge volume.
- When refrigerant is charged with the unit being run, complete a charge operation within 30 minutes. Running the unit with an insufficient quantity of refrigerant for a long time can cause a compressor failure.

NOTE Put down the refrigerant volume calculated from the pipe length onto the caution label attached on the back side of the service panel.


8) Heating and condensation prevention

- (1) Dress refrigerant pipes (both gas and liquid pipes) for heat insulation and prevention of dew condensation.
 - Use a heat-insulating material that can withstand 120°C or a higher temperature. Poor heat-insulating capacity can cause heat insulation problems or cable deterioration.
 - Improper heat insulation/anti-dew dressing can result in a water leak or dripping, causing damage to household effects, etc.
 - All gas pipes must be securely heat insulated in order to prevent damage from dripping water that comes from the condensation formed on them during a cooling operation or personal injury from burns because their surface can reach quite a high temperature due to discharged gas flowing inside during a heating operation.
 - Wrap indoor units' flare joints with heat-insulating parts (pipe cover) for heat insulation (both gas and liquid pipes).
 - Give heat insulation to both gas and liquid side pipes. Bundle a heat-insulating material and a pipe tightly together so that no gaps may be left between them and wrap them together with a connecting cable by a dressing tape.
 - Although it is verified in a test that this air-conditioner unit shows satisfactory performance under JIS condensation test conditions, both gas and liquid pipes need to be dressed with 20 mm or thicker heat insulation materials above the ceiling where relative humidity exceeds 70%.

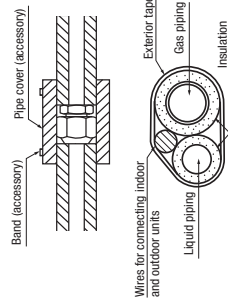


3. DRAIN PIPING WORK

- Execute drain piping by using a drain elbow and drain grommets supplied separately as optional parts, where water drained from the outdoor unit is a problem.
- Water may drip where there is a larger amount of drain water. Seal around the drain elbow and drain grommets with putty or adequate caulking material.
- Condensed water may flow out from vicinity of operation valve or connected pipes.
- Where you are likely to have several days of sub-zero temperatures in a row, do not use a drain elbow and drain grommets. (There is a risk of drain water freezing inside and blocking the drain.)
- Do not use drain elbow and grommet made of plastic for drain piping when base heater for outdoor unit is used. Plastic grommet and elbow will be damaged and burnt in worst case.
- Prepare another drain tray made of metallic material for collecting drain when base heater is used.

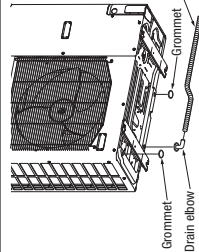


- When condensed water needs to be led to a drain, etc., install the unit on a flat base (supplied separately as an optional part) or concrete blocks. Then, please secure space for the drain elbow and the drain hose.



4. ELECTRICAL WIRING WORK For details of electrical cabling, refer to the indoor unit installation manual.

Electrical installation work must be performed by an electrical installation service provider qualified by a power provider of the country. Electrical installation work must be executed according to the technical standards and other regulations applicable to electrical installations in the country.


- Do not use any supply cord lighter than one specified in parentheses for each type below.
 - braided cord (code designation 60245 IEC 51),
 - ordinary tough rubber sheathed cord (code designation 60245 IEC 53)
 - flat twin tinsel cord (code designation 60227 IEC 41);
- Do not use anything lighter than polychloroprene sheathed flexible cord (code designation 60245 IEC57) for supply cords of parts of appliances for outdoor use.
- Ground the unit. Do not connect the grounding wire to a gas pipe, water pipe, lightning rod or telephone grounding wire.
- If improper grounding, an electric shock or malfunction may result.
- If grounding wire must be connected before connecting the power cable. Provide a grounding wire longer than the power cable.
- The installation of an impulse withstanding type earth leakage breaker is necessary. A failure to install an earth leakage breaker can result in an accident such as an electric shock or a fire.

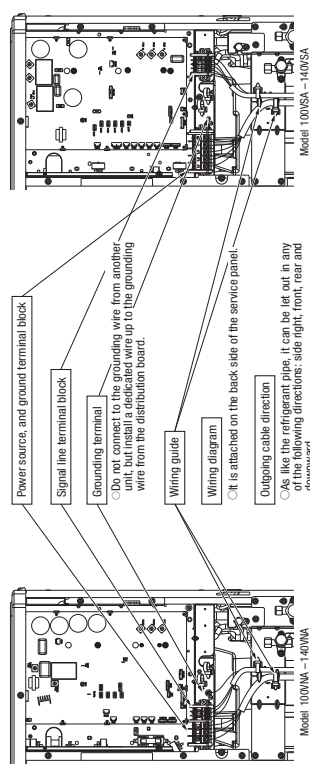

Model	Power source	Power cable thickness(mm)	MAX. over current (A)	Cable length (m)	Grounding wire thickness	Indoor-outdoor wire thickness × number
100VSA-140VSA	Single phase 3 wire 220-240V/50Hz	5.5	24	22	φ1.6mm	φ1.6mm x 3
100VSA-140VSA	3 phase 4 wire 380-415V/50Hz 380V/60Hz	3.5	15	46		

- The specifications shown in the above table are for units without heaters. For units with heaters, refer to the installation instructions or the construction instructions of the indoor unit.
- Switchgear or Circuit breaker capacity which is calculated from MAX. over current should be chosen along the regulations in each country.
- When the specifications are different from the above table, please contact the distributor in each country. In a circuit and a voltage drop is 2%. For an installation falling outside of these conditions, follow the internal cabling regulations. Adapt it to the regulation in effect in each country.

- Do not turn on the power until the electrical work is completed.
- Do not use a condensable capacitor for power factor improvement under any circumstances. (It does not improve power factor, while it can cause an abnormal overheating accident.)
- For power source cables, use conduits.
- Do not lay electronic control cables (remote control and signaling wires) and other cables together outside the unit. Laying them together can result in the malfunctioning or a failure of the unit due to electric noises.
- When cables are connected, make sure that all electrical components within the electrical component box are free of loose conductor coupling or terminal connection, and then attach the cover securely. (Improper cover attachment can result in malfunctioning or a failure of the unit, if water penetrates into the box.)
- Always use a three-core cable for an indoor-outdoor connecting cable. (Never use a shield cable.)
- Connect a pair bearing a common terminal number with an indoor-outdoor connecting wire.
- In cabling, fasten cables securely with cable clamps so that no external force may work on terminal connections.
- Grounding terminals are provided in the control box.

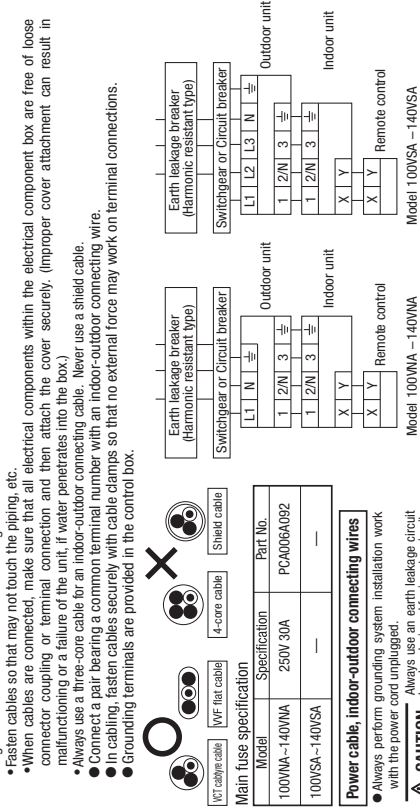

Model	Power source	Power cable thickness(mm)	MAX. over current (A)	Cable length (m)	Grounding wire thickness	Indoor-outdoor wire thickness × number
100VSA-140VSA	Single phase 3 wire 220-240V/50Hz	5.5	26	20	φ1.6mm	φ1.6mm x 3
100VSA-140VSA	3 phase 4 wire 380-415V/50Hz 380V/60Hz	3.5	17	40		
			18	38		

5. TEST RUN

⚠ WARNING

- Before conduct a test run, make sure that the operation valves are open.
- Turn on power 6 hours prior to a test run to energize the air conditioner.
- In case of a power outage, do not move for 30 minutes, it is not a breakdown.
- Always give a 3-minute or longer interval before you start the unit again whenever it is stopped.
- Removing the service panel will expose high-voltage live parts and high-temperature parts, which are quite dangerous. Take utmost care not to incur an electric shock or burns. Do not leave the unit with the service panel open.

⚠ CAUTION

- When you operate switches (SW3, SW5) for on-site setting, be careful not to touch a live part.
- You cannot check discharge pressure from the liquid operation valve charge port.
- The 4-way valve (2DS) is energized during a heating operation.
- When power source is cut off to reset the unit, give 3 or more minutes before you turn on power again after power is cut off. If this procedure is not observed in turning on power again, "Communication error between outdoor and indoor unit" may occur.

1) Test run method

- (1) A test run can be initiated from an outdoor unit by using SW3-3 and SW3-4 for on-site setting.
- (2) Switching SW3-3 to ON will start the compressor.
- (3) The unit will start a cooling operation, when SW3-4 is OFF or a heating operation, when SW3-4 is ON.
- (4) **Do not fail to switch SW3-3 to OFF when a test run is completed.**

2) Checking the state of the unit in operation

Use check joints provided on the piping before and after the four-way valve installed inside the outdoor unit for checking discharge pressure and suction pressure.
As indicated in the table shown on the right, pressure detected at each point will vary depending on whether a cooling or heating operation has been selected.

SW3-3 / SW3-4	SW3-3	SW3-4	Charge port of the pipe
ON / OFF	OFF	OFF	Cooling operation (High pressure)
ON / ON	ON	OFF	Discharge pressure (High pressure)
ON / ON	ON	ON	Suction pressure (Low pressure)
OFF / OFF	OFF	ON	Discharge pressure (High pressure)
OFF / ON	ON	ON	Suction pressure (Low pressure)

3) Setting SW3-1, SW3-2, SW5-2, SW7-3, on-site

- (1) Defrost control switching (SW3-1)
 - When this switch is turned ON, the unit will run in the defrost mode more frequently.
 - Set this switch to ON, when installed in a region where outdoor temperature falls below zero during the season the unit is run for a heating operation.
- (2) Snow guard fan control (SW3-2)
 - When this switch is turned ON, the outdoor unit fan will run for 10 seconds in every 10 minutes, when outdoor temperature falls to 3°C or lower and the compressor is not running.
 - When the unit is used in a very snowy country, set this switch to ON.
- (3) High height difference operation control (SW5-2)
 - Set this switch to ON when outdoor unit is installed at a position higher than indoor unit by 30m or more.
- (4) Lower noise silent mode (SW7-3)
 - Upper limit of compressor speed and fan speed becomes lower in silent mode

4) Failure diagnosis in a test run

Error indicated on the remote control unit	Failure event	Action
E34	Red LED Blinking once	Open phase
E40	Green LED Blinking continuously	Check power cables for loose contact or disconnection. 1. Check whether the operation valves are open. 2. If an error has been canceled when 3 minutes have elapsed since a compressor stop, you can restart the unit by effecting Check Reset from the remote control unit.
E57	Blinking once Blinking continuously	SW4 activation or operation with operation valves shut (occurs mainly during a heating operation) Short of refrigerant error or operation with operation valves shut (occurs mainly during a cooling operation)

● If an error code other than those listed above is indicated, refer to the wiring diagram of the outdoor unit and the indoor unit.

5) The state of the electronic expansion valve.

The following table illustrates the steady states of the electronic expansion valve.

Error indicated on the remote control unit	Failure event	Action
E34	Red LED Blinking once	Open phase
E40	Green LED Blinking continuously	Check power cables for loose contact or disconnection. 1. Check whether the operation valves are open. 2. If an error has been canceled when 3 minutes have elapsed since a compressor stop, you can restart the unit by effecting Check Reset from the remote control unit.
E57	Blinking once Blinking continuously	SW4 activation or operation with operation valves shut (occurs mainly during a heating operation) Short of refrigerant error or operation with operation valves shut (occurs mainly during a cooling operation)

6) Heed the following on the first operation after turning on the circuit breaker.

This outdoor unit may start in the standby mode (waiting for a compressor startup), which can continue up to 30 minutes, to prevent the oil level in the compressor from lowering on the first operation after turning on the circuit breaker. If that is the case, do not suspect a unit failure.


A failure to observe these instructions can result in a compressor breakdown.

● When you leave the outdoor unit with power supplied to it, be sure to close the panel.

Item to check in the installation manual	Item	Check item	Check
2	Refrigerant plumbing	If brazed, was it brazed under a nitrogen gas flow? Were air-tightness test and vacuum extraction surely performed? Are test insulation materials installed on both liquid and gas pipes? Are operation valves surely opened for both liquid and gas systems? Have you recorded the additional refrigerant charge volume and refrigerant pipe length on the panel's label? Are the unit line or cabling errors such as uncompleted connection, an absent or reversed phase? Are properly rated electrical equipments used for circuit breakers and cables? Aren't indoor-outdoor signal wires connected to remote control wires? Do indoor-outdoor connecting cables connect between the same terminal numbers? Are either VCT cables or VFT flat cables used for indoor-outdoor connecting cables? Does grounding satisfy the D type grounding (type III grounding) requirements? Is the unit grounded with a dedicated grounding wire not connected to another unit's grounding wire? Are cables free of loose screws at their connection points? Are cables held down with cable clamps so that no external force works onto terminal connectors? Is indoor unit installation work completed? Where a face cover should be attached onto an indoor unit, is the face cover attached to the indoor unit?	
4	Electric wiring		
-	Indoor unit		


Test run procedure ● Always carry out a test run and check the following in order as listed.

Turn	The contents of operation	Check
①	Open the gas side operation valve fully.	
②	Open the liquid side operation valve fully.	
③	Close the panel.	
④	Where a remote control unit is used for unit setup on the installation site, follow instructions for unit setup on the installation site with a remote control unit.	
⑤	SW3-3 ON / SW3-4 OFF: the unit will start a cooling operation. SW3-3 ON / SW3-4 ON: the unit will start a heating operation.	
⑥	When the unit starts operation, press the wind direction button provided on the remote control unit to check its operation.	
⑦	Place your hand before the indoor unit diffuser to check whether cold (warm) winds come out in a cooling (heating) operation.	
⑧	Make sure that a red LED is not blinking.	
⑨	When you complete the test run, do not forget to turn SW3-3 to the OFF position.	
⑩	When options are used, check their operation according to the respective instruction manuals.	

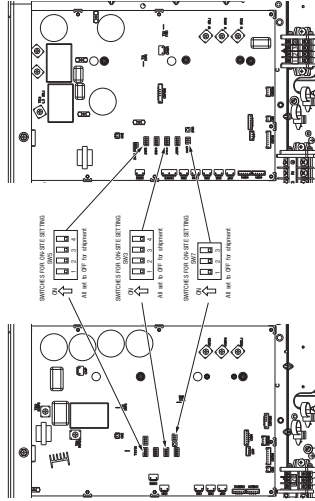

6. UTILIZATION OF EXISTING PIPING

Check whether an existing pipe system is reusable or not by using the following flow chart.

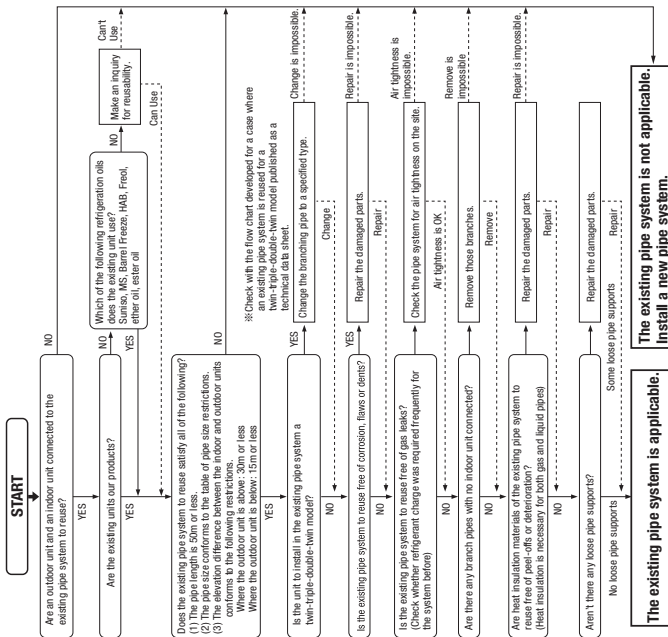

WARNING

<Where the existing unit can be run for a cooling operation.>

Carry out the following steps with the existing unit (in the order of (1), (2), (3) and (4))

- (1) Run the unit for 30 minutes for a cooling operation.
- (2) Stop the indoor fan and run the unit for 3 minutes for a cooling operation (returning liquid)
- (3) Close the liquid side operation valve of the outdoor unit and pump down (refrigerant recovery)
- (4) Blow with nitrogen gas. ※ If discolored refrigeration oil or any foreign matters is discharged by the blow, wash the pipe system or install a new pipe system.
 - For the flare nut, do not use the old one, but use the one supplied with the outdoor unit.
 - Process a flare to the dimensions specified for R410A

<Where the existing unit cannot be run for a cooling operation.>

- Turn on-site existing switch SW5-1 to the ON position. (Where the gas pipe size is φ19.05)
- Wash the pipe system or install a new pipe system.
- If you choose to wash the pipe system, contact our distributor in the area.

<Table of pipe size restrictions>

○: Standard pipe size
△: Restricted to shorter pipe length limits ×: Not applicable

Pipe size	Additional charging amount of refrigerant per 1m		0.06kg/m		0.09kg/m	
	φ6.52	φ9.52	φ12.7	φ12.7	φ12.7	φ12.7
100V	○	○	○	○	○	○
125V	○	○	○	○	○	○
140V	○	○	○	○	○	○

<Pipe system after the branching pipe>

Pipe size	Additional charging amount of refrigerant per 1m		0.06kg/m		0.09kg/m	
	φ6.52	φ9.52	φ12.7	φ12.7	φ12.7	φ12.7
100V	○	○	○	○	○	○
125V	○	○	○	○	○	○
140V	○	○	○	○	○	○

※1 Because of its insufficient pressure resistance, turn the dip switch SW5-1 provided on the outdoor unit board to the ON position for φ19.05 × t1.0. (In the case of a twin-tipe-double-twin model, this also applies to the case where φ19.05 × t1.0 is used in a pipe system after the first branching point.) However, you need not turn the dip switch SW5-1 to the ON position, if 1/2" pipes or pipes having 1/2 or thicker walls are used.

※2 When the main pipe length exceeds 40m, a significant capacity drop may be experienced due to pressure loss in the liquid pipe system. Use φ12.7 for the liquid main pipe length, not one-way pipe length, below the specified maximum pipe length.

※3 For the liquid main pipe length, not one-way pipe length, below the specified maximum pipe length.

※4 Pipe size after branch should be equal or smaller than main pipe size.

※5 When refrigerant piping is shorter than 3m, reduce refrigerant by 1kg from factory charged volume.

● Any combinations of pipe sizes not listed in the table or marked with × in the table are not usable.

<The model types of existing units of which branching pipes are reusable.>

- FDC * * * 8 □ □ □ □
- FDCP * * * 8 □ □ □ □

The branching pipes used with models other than those listed above are not reusable because of their insufficient pressure resistance. Please use our genuine branching pipes for R410A.


● * * * are numbers representing horsepower. □ □ □ is an alphanumeric letter.

Formula to calculate additional charge volume

$$\text{Additional charge volume (kg)} = (\text{Main pipe length (m)} - \text{Length covered without additional charge shown in the table (m)}) \times \text{Total length of branch pipes (m)} \times \text{Additional charge volume per meter of pipe shown in the table (kg/m)}$$

※ If you obtain a negative figure as a result of calculation, no additional refrigerant needs to be charged.
 Example) When an 140V (single installation) is installed in a 20m long existing pipe system (liquid φ12.7, gas φ19.05), the quantity of refrigerant to charge additionally should be (20m-15m) × 0.08kg/m = 0.4 kg.



(2) Models FDC200, 250VSA

PSC012D066D 
Inverter driven split PAC
FDC200VSA, 250VSA (200V, 250V)
FDCA160VSA, 200VSA (A160V, A200V)
Designed for R410A refrigerant

©This installation manual deals with outdoor units and general installation specifications only. For indoor units, refer to page 42.
 ©When install the unit, be sure to check whether the selection of installation place, power source specifications, usage limitation (piping length, height differences between indoor and outdoor units, power source voltage and etc.) and installation spaces



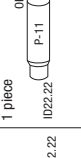
SAFETY PRECAUTIONS

- We recommend you to read this "SAFETY PRECAUTIONS" carefully before the installation work in order to gain full advantage of the functions of the unit and to avoid malfunction due to mishandling.
- The precautions described below are divided into **WARNING** and **CAUTION**. The matters with possibilities leading to serious consequences such as death or serious personal injury due to erroneous handling are listed in the **WARNING**, and the matters with possibilities leading to personal injury or damage of the unit due to erroneous handling including probability leading to serious consequences in some cases are listed in **CAUTION**. **These are very important precautions for safety. Be sure to observe all of them without fail.**
- The meaning of "Marks" used here are as shown below.

	Never do it under any circumstance.
	Always do it according to the instruction
- For 3 phase power source outdoor unit EM61000-3-2 is not applicable if consent by the utility company or notification to the utility company is given before usage.
- 3phase power source unit, both indoor and outdoor, is suitable for installation in a commercial and light industrial environment. If installed as a house-hold appliance it could cause electromagnetic interference.
- Be sure to confirm no anomaly on the equipment by commissioning after completed installation and explain the operating methods as well as the maintenance methods of this equipment to the user according to the owner's manual.
- Keep the installation manual together with owner's manual at a place where any user can read at any time. Moreover if necessary, ask to hand them to a new user.

Check before installation work

[Accessory]

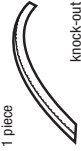
1 piece 	1 piece 	1 piece 
knock-out hole protection	Accessory pipe A	Accessory pipe B

- Model name and power source
- Refrigerant piping length
- Piping, wiring and miscellaneous small parts
- Indoor unit installation manual


WARNING

- **Installation must be carried out by the qualified installer.**
If the system by yourself, it may cause serious trouble such as water leaks, electric shocks, fire and personal injury, as a result of a system malfunction.
- **Install the system in full accordance with the instruction manual.**
- **Use the original accessories and the specified components for installation.**
If parts other than those prescribed by us are used, it may cause fall of the unit, water leaks, electric shocks, fire, refrigerant leak, substandard performance, control failure and personal injury.
- **When installing in small rooms, take prevention measures not to exceed the density limit of refrigerant in the event of leakage** according with 605149.
Consult the expert about prevention measures. If the density of refrigerant exceeds the limit in the event of leakage, lack of oxygen can occur, which can cause serious accidents.
- **Ventilate the working area well in the event of refrigerant leakage during installation.**
If the refrigerant comes into contact with naked flames, poisonous gas is produced.
- **After completed installation, check that no refrigerant leaks from the system.**
If refrigerant leaks into the room and comes into contact with an open or other hot surface, poisonous gas is produced.
- **Hang up the unit at the specified points with ropes which can support the weight in lifting or portage. And to avoid piling out of alignment, be sure to hang up the unit at 4-point support.**
An improper manner of portage such as 3-point support can cause death or serious personal injury due to falling of the unit.
- **Install the unit in a location with good support**
Unstable installation locations can cause the unit to fall and cause material damage and personal injury.
- **Ensure the unit is stable when installed, so that it can withstand earthquakes and strong winds.**
Unstable installation locations can cause the unit to fall and cause material damage and personal injury.
- **The electrical installation must be carried out by the qualified electrician in accordance with "the norm for electrical work" and "national wiring regulation", and the system must be connected to the dedicated circuit.**
Power source with insufficient capacity and incorrect function done by improper work can cause electric shocks and fire.
- **Be sure to shut off the power before starting electrical work.**
Failure to shut off the power can cause electric shocks, unit failure or incorrect function of equipment.
- **Be sure to use the cables conformed to safety standard and cable ampacity for power distribution work.**
Unconformable cables can cause electric leak, anomalous heat production or fire.
- **Use the prescribed cables for electrical connection, tighten the cables securely in terminal block and relieve the cables correctly to prevent overloading the terminal blocks.**
Loose connections or cable mountings can cause anomalous heat production or fire.
- **Arrange the wiring in the control box so that it cannot be pushed up further into the box. Install the service panel correctly.**
Incorrect installation may result in overheating and fire.


- **Do not perform brazing work in the airright room**
It can cause lack of oxygen.
- **Use the prescribed pipes, flare nuts and tools for R410A.**
Using existing parts (for R22 or R407C) can cause the unit failure and serious accidents due to burst of the refrigerant circuit.
- **Tighten the flare nut by using double spanners and torque wrench according to prescribed method. Be sure not to tighten the flare nut too much.**
Loose flare connection or damage on the flare part by tightening with excess torque can cause burst or refrigerant leaks which may result in lack of oxygen.
- **Do not open the service valves for liquid line and gas line until completed refrigerant piping work, air tightness test and evacuation.**
If the compressor is operated in state of opening service valves before completed connection of refrigerant piping work, you may incur frost bite or injury from an abrupt refrigerant outflow and air can be sucked into refrigerant circuit, which can cause burst or personal injury due to anomalously high pressure in the refrigerant.
- **Only use prescribed option parts. The installation must be carried out by the qualified installer.**
If you install the system by yourself, it can cause serious trouble such as water leaks, electric shocks, fire.
- **Do not perform any change of protective device itself or its setup condition**
The forced operation by short-circuiting protective device of pressure switch and temperature controller or the use of non specified component can cause fire or burst.
- **Be sure to switch off the power source in the event of installation, inspection or servicing.**
If the power source is not shut off, there is a risk of electric shocks, unit failure or personal injury due to the unexpected start of fan.
- **Consult the dealer or an expert regarding removal of the unit.**
Incorrect installation can cause water leaks, electric shocks or fire.
- **Stop the compressor before closing valve and disconnecting refrigerant pipes in case of pump down operation.**
If disconnecting refrigerant pipes in state of opening service valves before compressor stopping, you may incur frost bite or injury from an abrupt refrigerant outflow and air can be sucked, which can cause burst or personal injury due to anomalously high pressure in the refrigerant circuit.
- **Ensure that no air enters in the refrigerant circuit when the unit is installed and removed.**
If air enters in the refrigerant circuit, the pressure in the refrigerant circuit becomes too high, which can cause burst and personal injury.
- **Do not run the unit with removed panels or protections**
Touching rotating equipments, hot surfaces or high voltage parts can cause personal injury due to entrapment, burn or electric shocks.
- **Be sure to fix up the service panels.**
Incorrect fixing can cause electric shocks or fire due to intrusion of dust or water.
- **Do not perform any repairs or modifications by yourself. Consult the dealer if the unit requires repair.**
If your repair or modify the unit, it can cause water leaks, electric shocks or fire.



CAUTION




- **Carry out the electrical work for ground lead with care**
Do not connect the ground lead to the gas line, water line, lightning conductor or telephone line's ground lead. Incorrect grounding can cause unit faults such as electric shocks due to short-circuiting. Never connect the grounding wire to a gas pipe because gas leaks could cause explosion or fire.
- **Use the circuit breaker for air pole with correct capacity.**
Use the correct circuit breaker. It can cause the unit malfunction and fire.
- **Install isolator or disconnect switch on the power source wiring in accordance with the local codes and regulations.**
The isolator should be locked in accordance with EN61224-1.
- **Take care when carrying the unit by hand.**
If the unit weights more than 20kg, it must be carried by two or more persons. Do not carry by the plastic straps, always use the carry handle when carrying the unit by hand. Use gloves to minimize the risk of cuts by the aluminum fins.
- **Dispose of any packing materials correctly.**
Any remaining packing materials can cause personal injury as it contains nails and wood. And to avoid danger of suffocation, be sure to keep the plastic wrapper away from children and to dispose after their use.
- **Pay attention not to damage the drain pan by weld spatter when welding work is done near the indoor unit.**
If weld spatter enters into the indoor air during welding work, it can cause pin-hole in drain pan and result in water leakage. To prevent such damage, keep the indoor unit in its packing or cover it.
- **Be sure to insulate the refrigerant pipes so as not to condense the ambient air moisture on them.**
Insufficient insulation can cause condensation, which can lead to moisture damage on the ceiling, floor, furniture and any other valuables.
- **Be sure to perform air tightness test by pressurizing with nitrogen gas after completed refrigerant piping work.**
If the density of refrigerant exceeds the limit in the event of refrigerant leakage in the small room, lack of oxygen can occur, which can cause serious accidents.
- **Perform installation work properly according to this installation manual.**
Improper installation can cause abnormal vibrations or increased noise generation.
- **Earth leak gas breaker must be installed**
If the earth leakage breaker is not installed, it can cause fire or electric shocks.
- **Do not use any materials other than a use with the correct rating in the location where uses are to be used.**
Connecting the circuit with copper wire or other metal thread can cause unit failure and fire.
- **Do not install the unit near the location where leakage or combustible gases can occur.**
If leaked gases accumulate around the unit, it can cause fire.
- **Do not install the unit where corrosive gas (such as sulfuric acid gas etc.) or combustible gas (such as thinner and petroleum gases) can accumulate or collect, or where volatile combustible substances are handled.**
Corrosive gas can cause corrosion of heat exchanger, leakage of plastic parts and etc. And combustible gas can cause fire.
- **Secure a space for installation, inspection and maintenance specified in the manual.**
Insufficient space can result in accident such as personal injury due to falling from the installation place.
- **When the outdoor unit is installed on a roof or a high place, provide permanent ladders and handrails along the access route and fences and handrails around the outdoor unit.**
If safety facilities are not provided, it can cause personal injury due to falling from the installation place.
- **Do not install nor use the system close to the equipment that generates electromagnetic fields or high frequency harmonics**
Equipment such as inverters, standby generators, medical high frequency equipments and telecommunication equipments can affect the system, and cause malfunctions and breakdowns. The system can also affect medical equipment and telecommunication equipment, and obstruct its function or cause jamming.
- **Do not install the outdoor unit in a location where insects and small animals can inhabit.**
Insects and small animals can enter the electric parts and cause damage or fire. Instruct the user to keep the surroundings clean.



Notabilia as a unit designed for R410A

- Do not use any refrigerant other than R410A. R410A will rise to pressure about 1.6 times higher than that of a conventional refrigerant.
- A cylinder containing R410A has a pink indication mark on the top.
- A unit designed for R410A has adopted a different size indoor unit service valve charge port and a different size check joint provided in the unit to prevent the charging of a wrong refrigerant by mistake. The processed dimension of the flared part of a refrigerant pipe and a flare nut's parallel side measurement have also been altered to raise strength against pressure. Accordingly, you are required to arrange dedicated R410A tools listed in the table on the right before installing or servicing this unit.
- Do not use a charge cylinder. The use of a charge cylinder will cause the refrigerant composition to change, which results in performance degradation.
- In charging refrigerant, always take it out from a cylinder in the liquid phase.
- All indoor units must be models designed exclusively for R410A. Check connectable indoor unit models in a catalog, etc. (A wrong indoor unit, if connected into the system, will impair proper system operation)




Notabilia as a unit designed for R410A

- Do not use any refrigerant other than R410A. R410A will rise to pressure about 1.6 times higher than that of a conventional refrigerant.
- A cylinder containing R410A has a pink indication mark on the top.
- A unit designed for R410A has adopted a different size indoor unit service valve charge port and a different size check joint provided in the unit to prevent the charging of a wrong refrigerant by mistake. The processed dimension of the flared part of a refrigerant pipe and a flare nut's parallel side measurement have also been altered to raise strength against pressure. Accordingly, you are required to arrange dedicated R410A tools listed in the table on the right before installing or servicing this unit.
- Do not use a charge cylinder. The use of a charge cylinder will cause the refrigerant composition to change, which results in performance degradation.
- In charging refrigerant, always take it out from a cylinder in the liquid phase.
- All indoor units must be models designed exclusively for R410A. Check connectable indoor unit models in a catalog, etc. (A wrong indoor unit, if connected into the system, will impair proper system operation)

	Dedicated R410A tools
a)	Gauge manifold
b)	Charge hose
c)	Electronic scale for refrigerant charging
d)	Torque wrench
e)	Flare tool
f)	Protrusion control copper pipe gauge
g)	Vacuum pump adapter
h)	Gas leak detector

1. HAULAGE AND INSTALLATION (Take particular care in carrying in or moving the unit, and always perform such an operation with two or more persons.)




CAUTION

When a unit is hoisted with slings for haulage, take into consideration the offset of its gravity center position.
If not properly balanced, the unit can be thrown off-balance and fall.


1) Delivery

- Deliver the unit as close as possible to the installation site before removing it from the packaging.
- When some compelling reason necessitates the unpacking of the unit before it is carried in, use nylon slings or protective wood pieces so as not to damage the unit by ropes lifting it.

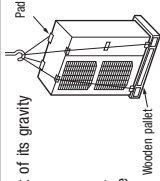

2) Portage

- The right hand side of the unit as viewed from the front (diffuser side) is heavier. A person carrying the right hand side must take heed of this fact. A person carrying the left hand side must hold with his right hand the handle provided on the front panel of the unit and with his left hand the corner column section.



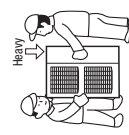


3) Selection of installation location for the outdoor unit

- Be sure to select a suitable installation place in consideration of following conditions.
- A place where it is horizontal, stable and can endure the unit weight and will not allow vibration transmittance of the unit.
- A place where it can be free from possibility of bothering neighbors due to noise or exhaust air from the unit.
- A place where the unit is not exposed to oil splashes.
- A place where it can be free from danger of flammable gas leakage.
- A place where drain water can be disposed without any trouble.
- A place where the unit will not be affected by heat radiation from other heat source.
- A place where the unit will not be affected by direct sunlight.
- A place where the unit can be kept away 5m or more from TV set and/or radio receiver in order to avoid any radio or TV interference.
- A place where the unit can be secured, and enough service space can be secured for maintenance and service of the unit safely.
- A place where the unit will not be affected by electromagnetic waves and/or high-harmonic waves generated by other equipment.
- A place where chemical substances like sulfuric gas, chloric gas, acid and alkali (including ammonia), which can harm the unit, will not be generated and not remain.
- A place where strong wind will not blow against the outlet air blow of the unit.
- Do not install the unit in places which exposed to sea breeze (e.g. coastal area) or calcium chloride (e.g. snow melting agent), exposed to ammonia substance (e.g. organic fertilizer).

4) Caution about selection of installation location

- If the unit is installed in the area where the snow will accumulate, following measures are required.
The bottom plate of unit and intake, outlet may be blocked by snow.
- Provide a snow hood to the outdoor unit on site.
Regarding outline of a snow hood, refer to our technical manual.
- Install the unit under eaves or provide the roof on site.



Since drain water generated by defrost control may freeze, following measures are required.

- Don't execute drain piping work by using a drain elbow and drain grommets (option parts). (Refer to Drain piping work.)
- Recommend setting Defrost Control (SW3-1) and Snow Guard Fan Control (SW3-2). (Refer to Setting SW3-1, SW3-2.)
- Attach heater on a base plate on site, if there is possibility to freeze drain water.


In case that the product has a corrective drainage system, the drainage paths should have suitable measure against freezing but be sure not to melt the material of drainage paths with heat.

- If the unit can be affected by strong wind, following measures are required.
Strong wind can cause damage of fan (fan motor), or can cause performance degradation, or can trigger anomalous stop of the unit due to rising of high pressure.
- Install the outlet air blow side of the unit to face a wall of building, or provide a fence or a windbreak screen, to the direction of wind.
- The unit should be installed on the stable and level foundation. If the foundation is not level, tie down the unit with wires.




5) Installation space

- Walls surrounding the unit in the four sides are not acceptable.
- There must be a 1-meter or larger space in the above.
- Where a danger of short-circuiting exists, install guide covers.
- Where more than one unit are installed, provide sufficient intake space so that short-circuiting may not occur.
- Where piling snow can bury the outdoor unit, provide proper snow guards.
- A barrier wall placed in front of the exhaust diffuser must not be higher than the unit.

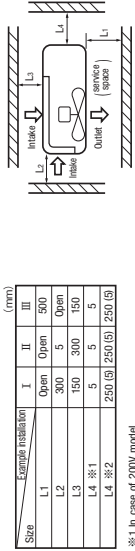

*1 In case of 200V model
*2 In case of 250V, A160V, A200V model. If unit is installed in L4 space with 1) is condition, secure space of 250mm in front (L4) by unit movement at the time of exchange work of compressor.

6) Installation

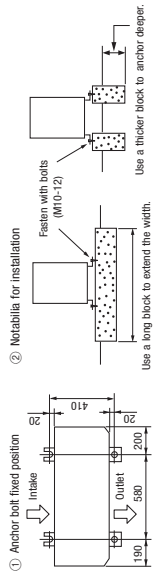

- In installing the unit, fix the unit's legs with bolts specified on the left.
- The protrusion of an anchor bolt on the front side must be kept within 15 mm.
- Securely install the unit so that it does not fall over during earthquakes or strong winds, etc.
- Refer to the left illustrations for information regarding concrete foundations.
- Install the unit in a level area. (With a gradient of 5 mm or less.)
- Improper installation can result in a compressor failure, broken piping within the unit and abnormal noise generation.

7) To run the unit for a cooling operation, when the outdoor temperature is -5°C or lower.

- When the outdoor air temperature is -5°C or lower, provide a snow hood to the outdoor unit on site.
- So that strong wind will not blow against the outdoor heat exchanger directly. Regarding outline of a snow hood, refer to our technical manual.

2. REFRIGERANT PIPING WORK

1) Restrictions on unit installation and use

- Check the following points in light of the indoor unit specifications and the installation site.
- Observe the following restrictions on unit installation and use. Improper installation can result in a compressor failure or performance degradation.

Restrictions	One-way pipe length difference from the first branching point to the indoor unit		Mess. appearing in the diagram	
	Model for outdoor units	Dimensional restrictions	Triple type A	Triple type B
One-way pipe length of refrigerant piping	200V	Liquid Piping φ 9.52	L	200V(L+L1) 250V(Prohibition of the use)
	250V, A160V, A200V	Gas Piping φ 12.7		
	250V, A160V, A200V	Gas Piping φ 22.22		
	250V, A160V, A200V	Gas Piping φ 25.4 or φ 28.38		
Main pipe length	200V	Liquid Piping φ 9.52	L	200V(L) 250V(Prohibition of the use)
	250V	Gas Piping φ 12.7	L	250V(Prohibition of the use)
	250V	Gas Piping φ 22.22	L	250V(Prohibition of the use)
	250V	Gas Piping φ 25.4 or φ 28.38	L	250V(Prohibition of the use)
One-way pipe length between the first branching point from the first branching point to the second branching point	200V	≤ 5m	—	—
	250V	≤ 30m	L1, L2, L3	—
One-way pipe length after the first branching point	200V	≤ 30m	L1, L2	—
	250V	≤ 27m	L1, L2, L3	—
One-way pipe length from the first branching point to indoor units through the second branching point	200V	≤ 10m	—	—
	250V	≤ 30m	L1, L2, L3	—
One-way pipe length difference from the first branching point to the indoor unit	200V, 250V	≤ 10m	L1, L2	—
	200V, 250V	≤ 30m	L1, L2, L3	—
Elevation difference between indoor and outdoor units	When the outdoor unit is positioned higher.	≤ 15m	—	—
	When the outdoor unit is positioned lower.	≤ 30m	H	H
Elevation difference between indoor units	When the outdoor unit is positioned higher.	≤ 0.5m	h	h1, h2, h3
	When the outdoor unit is positioned lower.	≤ 0.5m	h	h1, h2, h3, h4, h5, h6

CAUTION

- For model 200V, always use φ12.7mm liquid main pipe when the one way pipe length exceeds 40m. If φ9.52mm pipes are used in an installation having over 40m piping, they can cause performance degradation and/or water leaks from an indoor unit.
- Always use φ25.4mm or φ28.38mm gas pipes when the length of the main "L" exceeds 35m.
- If the φ22.22mm pipes are used in an installation having over 35m piping, they can cause performance degradation and/or water leaks from an indoor unit.

CAUTION

- For model 200V, always use $\phi 12.7\text{mm}$ liquid main pipe when the one way piping length exceeds 40m, $\phi 9.52\text{mm}$ pipes are used in an installation having over 40m piping, they can cause performance degradation and/or water leaks from an indoor unit. Use $\phi 9.52\text{mm}$ liquid main pipe when the one way piping length is less than 40m.
- Always use $\phi 25.4\text{mm}$ or $\phi 28.58\text{mm}$ gas pipes when the length of the main "L" exceeds 35m.
- If the $\phi 22.22\text{mm}$ pipes are used in an installation having over 35m piping, they can cause performance degradation and/or water leaks from an indoor unit.
- Triple type B is not allowed to use in case of 250V.
- Triple type B is not allowed to use in case of 200V.

Note (1) Triple type B is not allowed to use in case of 250V.
 Note (2) Connect the unit that is the maximum capacity with L1.

2) Determine refrigerant pipe size pursuant to the following guidelines based on the indoor unit specifications.


	Model 200V		Model 250V		Model A160V, A200V	
	Gas pipe Brazing	Liquid pipe Flare	Gas pipe Brazing	Liquid pipe Flare	Gas pipe Brazing	Liquid pipe Flare
Outdoor unit connected	$\phi 22.22$	$\phi 9.52$	$\phi 22.22$	$\phi 12.7$	$\phi 22.22$	$\phi 12.7$
Refrigerant piping (branch pipe)	$\phi 22.22$ or $\phi 25.4$ or $\phi 28.58$	$\phi 9.52$ or $\phi 12.7$	$\phi 22.22$ or $\phi 25.4$ or $\phi 28.58$	$\phi 12.7$	$\phi 22.22$ or $\phi 25.4$ or $\phi 28.58$	$\phi 12.7$
In the case of a single type						
Indoor unit connected	$\phi 25.4$	$\phi 9.52$	$\phi 25.4$	$\phi 12.7$	$\phi 25.4$	$\phi 12.7$
Refrigerant piping (branch pipe)	DS-WB15	DS-WB16	DS-WB15	DS-WB16	Model A160V, A200V	Model A160V, A200V
In the case of a twin type						
Indoor unit connected	$\phi 15.88$	$\phi 9.52$	$\phi 15.88$	$\phi 9.52$	$\phi 15.88$	$\phi 9.52$
Refrigerant piping (branch pipe)	Model 200V	Model 250V	Model 200V	Model 250V	Model A160V, A200V	Model A160V, A200V
In the case of a triple type A						
Indoor unit connected	$\phi 15.88$	$\phi 9.52$	$\phi 15.88$	$\phi 9.52$	$\phi 15.88$	$\phi 9.52$
Refrigerant piping (branch pipe)	Model 200V	Model 250V	Model 200V	Model 250V	Model A160V, A200V	Model A160V, A200V
In the case of a triple type B						
Indoor unit connected	$\phi 15.88$	$\phi 9.52$	$\phi 15.88$	$\phi 9.52$	$\phi 15.88$	$\phi 9.52$
Refrigerant piping (branch pipe)	Model 71V×3	Model 71V×2+Model 120V	Model 71V×3	Model 71V×2+Model 100V	Model 71V×2+Model 100V	Model 71V×2+Model 100V
In the case of a 4-way type						
Indoor unit connected	$\phi 15.88$	$\phi 9.52$	$\phi 15.88$	$\phi 9.52$	$\phi 15.88$	$\phi 9.52$
Refrigerant piping (branch pipe)	DS-WB15	DS-WB16	DS-WB15	DS-WB16	DS-WB15	DS-WB16
Capacity of indoor unit	$\phi 12.7$	$\phi 9.52$	$\phi 12.7$	$\phi 9.52$	$\phi 12.7$	$\phi 9.52$
Refrigerant piping (branch pipe)	Model 30V×4	Model 60V×4	Model 30V×4	Model 60V×4	Model 30V×4	Model 60V×4

CAUTION

- When the model 50V or model 60V model is connected as an indoor unit, always use a $\phi 9.52$ liquid pipe for the branch (branching pipe - indoor unit) and a different diameter joint supplied with the liquid pipe set (in the case of the model 50V or model 60V). In the case of the model 50V or model 60V, the liquid pipe set (in the case of the model 50V or model 60V) may occur, causing one of the indoor units to fall short of the rated capacity.
- A refrigerant pipe must be a part of the main. A branching pipe set should be installed horizontally at a point as close as an indoor unit as possible.
- For the details of installation work required at and near a branching area, see the installation manual supplied with your branching pipe set.

3) How to use pipe reducer.

- $\phi 22.22(OD)$ size of the refrigerant gas pipe can be used by using accessory pipe A and joint pipe C.
- $\phi 25.4(OD)$ size of the refrigerant gas pipe can be used by using accessory pipe A and joint pipe C.

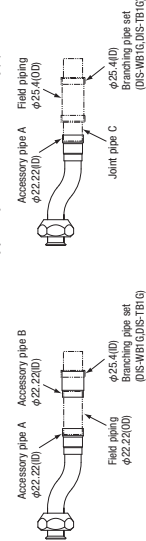

4) Refrigerant pipe wall thickness and material

- Select refrigerant pipes of the table shown on the right wall thickness and material as specified for each pipe size.
- This unit uses R410A. Always use 1/2H pipes having a 1.0mm or thicker wall for $\phi 19.05$ or larger pipes, because O-type pipes do not meet the pressure resistance requirement.

5) On-site piping work

- Take care so that installed pipes may not touch components within a unit. If touching with an internal component, it will generate abnormal sounds and/or vibrations.
- First remove screws (X mark) of the service panel and push it down into the direction of the arrow mark and then remove it by pulling it toward you.


IMPORTANT

How to remove the service panel

- The pipe can be laid in any of the following directions: side right, front, rear and downward.
- Remove a knock-out plate provided on the pipe penetration to open a minimum necessary area and attach an edging material supplied as an accessory by cutting it to an appropriate length before laying a pipe.
- Carry out the on site piping work with the service valve fully closed.
- Give sufficient protection to a pipe end (compressed and blazed, or with an adhesive tape) so that water or foreign matters may not enter the piping.
- Bend a pipe to a radius as large as practical (R100-R150). Do not bend a pipe repeatedly to correct its form.
- Flare connection is used between the unit and refrigerant pipe. Flare a pipe after engaging a flare nut onto it. Flare dimensions for R410A are different from those for conventional R407C. Although we recommend the use of flaring tools designed specifically for R410A, conventional flaring tools can also be used by adjusting the measurement of protrusion B with a protrusion control gauge.
- The pipe should be anchored every 1.5m or less to isolate the vibration.
- Tighten a flare joint securely with a double spanner.


< Triple type >

Indoor unit (The unit on which elevation difference from the outdoor unit is the largest)
 Type B

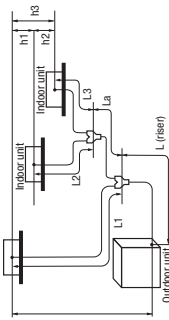

< Double twin type >


Indoor unit (The unit on which elevation difference from the outdoor unit is the largest)

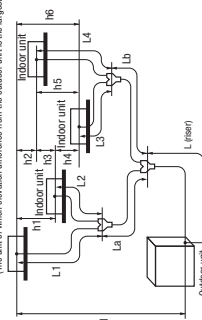

About brazing

Brazing must be performed under a nitrogen gas flow.

Without nitrogen gas, a large quantity of foreign matters (oxidized film) are created, causing a critical failure from capillary tube or expansion valve clogging.

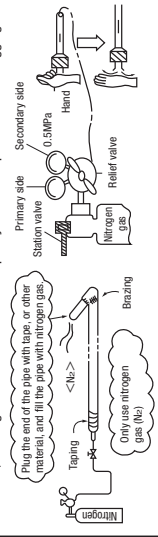


NOTE

- Select pipes having a wall thickness larger than the specified minimum pipe thickness.

Pipe diameter (mm)	$\phi 6.35$	$\phi 9.52$	$\phi 12.7$	$\phi 15.88$	$\phi 22.22$	$\phi 25.4$	$\phi 28.58$
Minimum pipe wall thickness (mm)	0.8	0.8	0.8	1.0	1.0	1.0	1.0
Pipe material*	O-type pipe	O-type pipe	O-type pipe	O-type pipe	1/2H-type pipe	1/2H-type pipe	1/2H-type pipe

*Phosphorus deoxidized seamless copper pipe C1220T, JIS H3300 <250V, A200V, A160V>

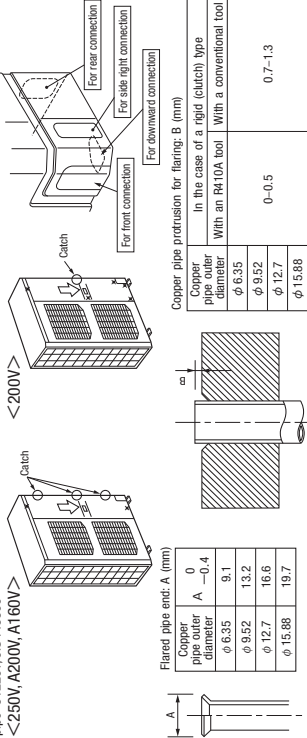

CAUTION


Do not apply force beyond proper fastening torque in tightening the flare nut.

Fix both liquid and gas service valves at the valve main bodies as illustrated on the right, and then fasten them, applying appropriate fastening torque.

6) Air tightness test


- ① Although outdoor and indoor units themselves have been tested for air tightness at the factory, check the connecting pipes after the installation work for air tightness from the gas side. Do not use a medium other than nitrogen gas under any circumstances.
- ② In conducting an air-tightness test, use nitrogen gas and pressurize the system with nitrogen gas from the gas side. Do not use a medium other than nitrogen gas under any circumstances.

Service valve size (mm)	Tightening torque (N·m)	Tightening angle (°)	Recommended length of a tool handle (mm)
φ6.35 (1/4")	14-18	45-60	150
φ9.52 (3/8")	34-42	30-45	200
φ12.7 (1/2")	49-61	30-45	250
φ15.88 (5/8")	68-82	15-20	300
φ19.05 (3/4")	100-120	15-20	450

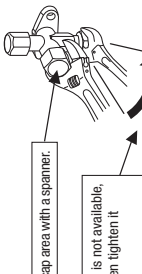

7) Evacuation

- <Work flow> When the system has remaining moisture inside or a leaky point, the vacuum gauge indicator will rise. Check the system for a leaky point and then draw air to create a vacuum again.

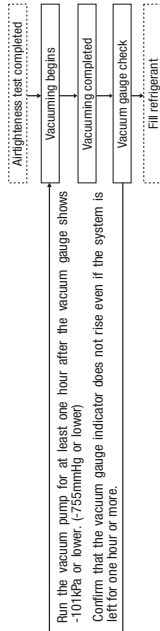

8) Additional refrigerant charge

(1) Calculate a required refrigerant charge volume from the following table.

Item	Standard refrigerant charge volume (kg)	Pipe length for standard refrigerant charge volume (m)	Refrigerant volume charged for shipment covered without additional refrigerant charge	Installation's pipe length (m) covered without additional refrigerant charge
Capacity				
200V	3.8	0	5.6	30
250V	3.6	0	7.2	30
A160V, A200V				

Item	Standard refrigerant charge volume (kg)	Pipe length for standard refrigerant charge volume (m)	Additional charge volume (kg) per meter of refrigerant piping (liquid pipe)		Refrigerant volume charged for shipment at the factory (kg)	Installation's pipe length (m) covered without additional refrigerant charge
			Main pipe	Branch pipe		
Capacity						
200V	3.8	0	0.06 (Liquid piping φ9.52)	0.06	5.6	30
250V	3.6	0	0.145 (Liquid piping φ12.7)	0.06	7.2	30
A160V, A200V						

- A standard refrigerant charge volume means a refrigerant charge volume for an installation with 0m long refrigerant piping.
- This unit contains factory charged refrigerant covering 30m of refrigerant piping and additional refrigerant on the installation site is not required for an installation with up to 30m refrigerant piping.
- When refrigerant piping exceeds 30m, additionally charge an amount calculated from the pipe length and the above table for the portion in excess of 30m.
- When refrigerant piping is shorter than 3m, reduce refrigerant by 1kg from the factory charged volume and adjust to 4.6kg or 6.2kg.
- If an existing pipe system is used, a required refrigerant charge volume will vary depending on the liquid pipe size. For further information, see "6. UTILIZATION OF EXISTING PIPING."

Formula to calculate the volume of additional refrigerant required

Model 200V: $\text{Additional charge volume (kg)} = (\text{Main pipe length (m)} - 30 \text{ (m)}) \times 0.06 \text{ (kg/m)} + \text{Total length of branch pipes (m)} \times 0.06 \text{ (kg/m)}$
 In the case of φ12.7mm main liquid piping: $\text{Additional charge volume (kg)} = (\text{Main pipe length (m)} - 30 \text{ (m)}) \times 0.145 \text{ (kg/m)} + \text{Total length of branch pipes (m)} \times 0.06 \text{ (kg/m)}$

Model 250V, A160V, A200V: $\text{Additional charge volume (kg)} = (\text{Main pipe length (m)} - 30 \text{ (m)}) \times 0.12 \text{ (kg/m)} + \text{Total length of branch pipes (m)} \times 0.06 \text{ (kg/m)}$

● To charge refrigerant again, recover refrigerant from the system first and then charge the volume calculated from the above table (Standard refrigerant charge volume + additional charge volume for total pipe length.)
 Total charge volume(kg) = Refrigerant volume charged for shipment at the factory + (Main piping length(m)-30(m))x0.145(kg/m) + Total length of branch pipes (m) x 0.06 (kg/m)


(2) Charging refrigerant

- Since R410A refrigerant must be charged in the liquid phase, you should charge it, keeping the container upside down or using a refrigerant cylinder equipped with a siphon tube.
- Charge refrigerant always from the liquid side service port with the service valve shut. When you find it difficult to charge a required amount, fully open the outdoor unit valves on both liquid and gas sides and charge refrigerant from the gas (suction) side service port while running the unit in the cooling mode. In doing so, care must be taken so that refrigerant may be discharged from the cylinder in the liquid phase all the time. When the cylinder valve is throttled down or a dedicated conversion tool to change liquid-phase refrigerant into mist is used to protect the compressor, however, adjust charge conditions so that refrigerant will gasify upon entering the unit.
- In charging refrigerant, always charge a calculated volume by using a scale to measure the charge volume.
- When refrigerant is charged with the unit being run, complete a charge operation within 30 minutes. Running the unit with an insufficient quantity of refrigerant for a long time can cause a compressor failure.

NOTE Put down the refrigerant volume calculated from the pipe length onto the label attached on the back side of the service panel.

9) Heating and condensation prevention

- (1) Dress refrigerant pipes (both gas and liquid pipes) for heat insulation and prevention of dew condensation.
 - ① Use a heat insulating material that can withstand 120°C or a higher temperature. Poor heat insulating capacity can cause heat insulation problems or cable deterioration.
 - Improper heat insulation/anti-dew dressing can result in a water leak or dripping causing damage to household effects, etc.
 - All gas pipes must be securely heat insulated in order to prevent damage from dripping water that comes from the condensation formed on them during a cooling operation or personal injury from burns because their surface can reach quite a high temperature due to discharged gas flowing inside during a heating operation.
 - Wrap indoor units' flare joints with heat insulating parts (pipe cover) for heat insulation (both gas and liquid pipes).
 - Give heat insulation to both gas and liquid side pipes. Bundle a heat insulating material and a pipe tightly together so that no gaps may be left between them and wrap them together with a connecting cable by a dressing tape.
 - Both gas and liquid pipes need to be dressed with 20 mm or thicker heat insulation materials above the ceiling where relative humidity exceeds 70%.

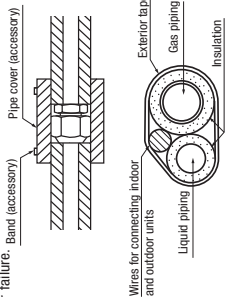


Pay attention to the following points in addition to the above for the R410A and compatible machines.


- To prevent a different oil from entering, assign dedicated tools, etc. to each refrigerant type. Under no circumstances must a gauge manifold and a charge hose in particular be shared with other refrigerant types (R22, R407C, etc.).
- Use a counterclockwise prevention adapter to prevent vacuum pump oil from entering the refrigerant system.

3. DRAIN PIPING WORK

- Execute drain piping by using a drain elbow and drain grommets supplied separately as option parts, where water drained from the outdoor unit is a problem.
- Water may drip where there is a larger amount of drain water. Seal around the drain elbow and drain grommets with putty or adequate caulking material.
- Condensed water may flow out from vicinity of service valve or connected pipes.
- Where you are likely to have several days of sub-zero temperatures in a row, do not use a drain elbow and drain grommets. (There is a risk of drain water freezing inside and blocking the drain.)
- Do not use drain elbow and grommet made of plastic for drain piping when base heater for outdoor unit is used. Plastic grommet and elbow will be damaged and burnt in worst case.
- Prepare another drain tray made of metallic material for collecting drain when base heater is used.

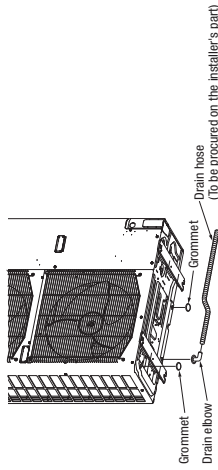


- When condensed water needs to be led to a drain, etc., install the unit on a flat base (supplied separately as an option part) or concrete blocks. Then, please secure space for the drain elbow and the drain hose.




4. ELECTRICAL WIRING WORK

For details of electrical cabling, refer to the indoor unit installation manual.

- Electrical installation work must be performed by an electrical installation service provider, qualified by a power provider of the country. Electrical installation work must be executed according to the technical standards and other regulations applicable to electrical installations in the country.
- Do not use any supply cord lighter than one specified in parentheses for each type below.
 - ordinary tough rubber sheathed cord (code designation 60245 IEC 53)
 - flat twin tinsel cord (code designation 60227 IEC 41);
 - ordinary tough rubber sheathed flexible cord (code designation 60245 IEC 57) for supply cords of parts or appliances for outdoor use.
 - Ground the unit. Do not connect the grounding wire to a gas pipe, water pipe, lightning rod or telephone grounding wire.
 - If improper grounded, an electric shock or malfunction may result.
 - A grounding wire must be connected before connecting the power cable. Provide a grounding wire longer than the power cable.
 - The installation of an impulse withstanding type earth leakage breaker is necessary. A failure to install an earth leakage breaker can result in an accident such as an electric shock or a fire.

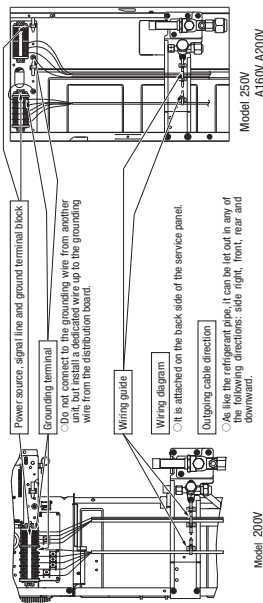

- Do not turn on the power until the electrical work is completed.
- Do not use a condensable capacitor for power factor improvement under any circumstances. (It does not improve power factor, while it can cause an abnormal overheating accident)
- For power source cables, use conduits.
- Do not lay electronic control cables (remote control and signaling wires) and other cables together outside the unit. Laying them together can result in the malfunctioning or a failure of the unit due to electric noises.
- Fasten cables so that they may not touch the piping, etc.
- When cables are connected, make sure that all electrical components within the electrical component box are free of loose connector coupling or terminal connection and then attach the cover securely. (Improper cover attachment can result in malfunctioning or a failure of the unit, if water penetrates into the box.)
- Always use a three-core cable for an indoor-outdoor connecting cable. Never use a shield cable. Separate grounding wire from indoor-outdoor connecting wire.
- Connect a pair bearing a common terminal number with an indoor-outdoor connecting wire.
- In cabling, fasten cables securely with cable clamps so that no external force may work on terminal connections.
- Grounding terminals are provided in the control box.

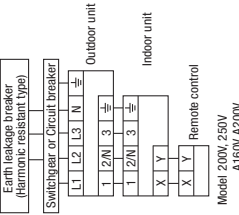

Power cable, indoor-outdoor connecting wires
 • Always perform grounding system installation work with the power cord unplugged.

CAUTION
 Always use an earth leakage circuit breaker designed for inverter circuits to prevent a faulty operation.

Model 200V

Model	Power source	Power cable thickness (mm ²)	MAX. over current (A)	Cable length (m)	Grounding wire thickness	Indoor-outdoor wire thickness number
200V	3 phase 4 wire 380-415V 50Hz 380V 60Hz	5.5	20	54	φ 1.6mm	φ 1.6mm x 3
250V, A160V, A200V			21	51		

- The specifications shown in the above table are for units without heaters. For units with heaters, refer to the installation instructions or the construction instructions of the indoor unit.
- Switchgear or Circuit breaker capacity which is calculated from MAX. over current should be chosen along the regulations in each country.
- The cable specifications are based on the assumption that a metal or plastic conduit is used with no more than three cables contained in a conduit and a voltage drop is 2%. For an installation falling outside of these conditions, follow the internal cabling regulations. Adapt it to the regulation in effect in each country.

Model 200V, 230V
A160V, A200V

Model	Power source	Power cable thickness (mm ²)	MAX. over current (A)	Cable length (m)	Grounding wire thickness	Indoor-outdoor wire thickness number
200V	3 phase 4 wire 380-415V 50Hz 380V 60Hz	5.5	25	43	φ 1.6mm	φ 1.6mm x 3
250V, A160V, A200V			27	40		

Model 200V, 230V
A160V, A200V

Model	Power source	Power cable thickness (mm ²)	MAX. over current (A)	Cable length (m)	Grounding wire thickness	Indoor-outdoor wire thickness number
200V	3 phase 4 wire 380-415V 50Hz 380V 60Hz	5.5	22	49	φ 1.6mm	φ 1.6mm x 3
250V, A160V, A200V			24	45		

5. TEST RUN

⚠ WARNING

- Before conduct a test run, make sure that the service valves are opened.
- Turn on power 6 hours prior to a test run to energize the crank case heater.
- In case of the first operation after turning on power, even if the unit does not move for 30 minutes, it is not a breakdown.
- Always give a 3-minute or longer interval before you start the unit again whenever it is stopped.
- Removing the service panel will expose high-voltage live parts and high-temperature parts, which are quite dangerous. Take utmost care not to incur an electric shock or burns. Do not leave the unit with the service panel open.

⚠ CAUTION

- When you operate switches (SW3, SW5) for on-site setting, be careful not to touch a live part.
- You cannot check discharge pressure from the liquid service valve charge port.
- The 4-way valve (2GS) is energized during a heating operation.
- When the service panel is closed, the unit will give power again. "Communication error between outdoor and indoor unit" may occur.

1) Test run method

- (1) A test run can be initiated from an outdoor unit by using SW3-3 and SW3-4 for on-site setting.
- (2) Switching SW3-3 to ON will start the compressor.
- (3) The unit will start a cooling operation, when SW3-4 is OFF or a heating operation, when SW3-4 is ON.
- (4) **Do not fail to switch SW3-3 to OFF when a test run is completed.**

2) Checking the state of the unit in operation

Use check points provided on the piping before and after the four-way valve installed inside the outdoor unit for checking discharge pressure and suction pressure. As indicated in the table shown on the right, pressure detected at each point will vary depending on whether a cooling or heating operation has been selected.

SW3-3	SW3-4	Check point of the pipe	Charge port of the gas operation valve
ON	OFF	Cooling operation	Suction pressure (High pressure)
ON	ON	Heating operation	Discharge pressure (Low pressure)
OFF	—	Normal or After the test operation	Discharge pressure (High pressure)

3) Setting SW3-1, SW3-2, on-site

- (1) Defrost control switching (SW3-1)
 - When this switch is turned ON, the unit will run in the defrost mode more frequently.
 - Set this switch to ON, when installed in a region where outdoor temperature falls below zero during the season the unit is run for a heating operation.
- (2) Snow guard fan control (SW3-2)
 - When this switch is turned on, the outdoor unit fan will run for 10 seconds in every 10 minutes, when outdoor temperature falls to 3°C or lower and the compressor is not running.
 - When the unit is used in a very snowy country, set this switch to ON.

4) Failure diagnosis in a test run

Error indicated on the remote control unit	Printed circuit board LED (the cycles of 5 seconds)	Failure event	Action
E-40	Blinking once	63HT actuation or operation with service valves shut (occurs mainly during a heating operation)	1. Check whether the service valves are open. 2. If an error has been cancelled when 3 minutes have elapsed since a compressor stop, you can restart the unit by effecting Check Reset from the remote control unit.
E-49	Blinking once		

- If an error code other than those listed above is indicated, refer to the wiring diagram of the outdoor unit and the indoor unit.

5) The state of the electronic expansion valve.

The following table illustrates the steady states of the electronic expansion valve.

Valve for a cooling operation	When power is turned on	When the unit comes to a normal stop	When the unit comes to an abnormal stop
Complete shut position	During a heating operation	During a heating operation	During a heating operation
Full open position	Complete shut position	Complete shut position	Full open position
Full open position	Full open position	Complete shut position	Full open position

6) Heed the following on the first operation after turning on the circuit breaker.

- This outdoor unit may start in the standby mode (waiting for a compressor startup), which can continue up to 30 minutes, to prevent the oil level in the compressor from lowering on the first operation after turning on the circuit breaker. If that is the case, do not suspect a unit failure.
- At the first operation of heating mode after turning on the circuit breaker, the outdoor unit may start in cooling mode a while to prevent from liquid refrigerant back to compressor. If that is the case, do not suspect a unit failure.


A failure to observe these instructions can result in a compressor breakdown.

- When you leave the outdoor unit with power supplied to it, be sure to close the panel.

Item No. used in the installation manual	Item	Check item	Check
2	Refrigerant plumbing	If brazed, was it brazed under a nitrogen gas flow? Were air-tightness test and vacuum extraction surely performed? Are heat insulation materials installed on both liquid and gas pipes? Are service valves surely opened for both liquid and gas systems? Have you recorded the additional refrigerant charge volume and refrigerant pipe length on the panel's label? Is the unit free of cabling errors such as uncompleted connection, an absent or reversed phase? Are properly rated electrical equipments used for circuit breakers and cables? Doesn't cabling, cross-connection between units, where more than one unit are installed? Are indoor-outdoor signal wires, connected to remote control wires? Do indoor-outdoor connecting cables connect between the same terminal numbers? Are either VCT cable or VCF flat cables used for indoor-outdoor connecting cables? Does grounding satisfy the D type grounding type III grounding requirements? Is the unit grounded with a dedicated grounding wire and connected to another unit's grounding wire? Are cables free of loose screws at their connection points? Are cables fast down with cable clamps so that no external force works onto terminal connections? Is indoor unit installation work completed? Where a face cover should be attached onto an indoor unit, is the face cover attached to the indoor unit?	
4	Electric Wiring		
—	Indoor unit		


Test run procedure • Always carry out a test run and check the following in order as listed.

Turn	The contents of operation	Check
①	Open the gas side service valve fully.	
②	Open the liquid side service valve fully.	
③	Close the panel.	
④	When a remote control unit is used for unit setup on the installation site, follow instructions for unit setup on the installation site with a remote control unit.	
⑤	SW3-3 ON / SW3-4 OFF: the unit will start a cooling operation. SW3-3 ON / SW3-4 ON: the unit will start a heating operation.	
⑥	When the unit starts operation, press the wind direction button provided on the remote control unit to check its operation.	
⑦	Place your hand before the indoor unit's diffuser to check whether cold (warm) winds come out in a cooling (heating) operation.	
⑧	Make sure the red LED is not blinking.	
⑨	When you complete the test run, do not forget to turn SW3-3 to the OFF position.	
⑩	If Where options are used, check their operation according to the respective instruction manuals.	

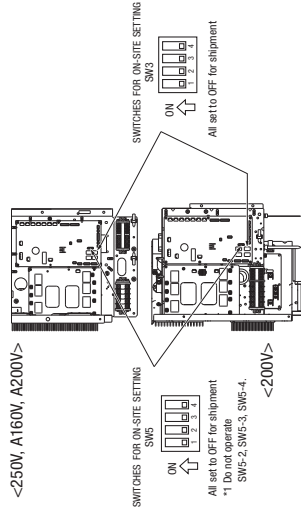

6. UTILIZATION OF EXISTING PIPING.

Check whether an existing pipe system is reusable or not by using the following flow chart.

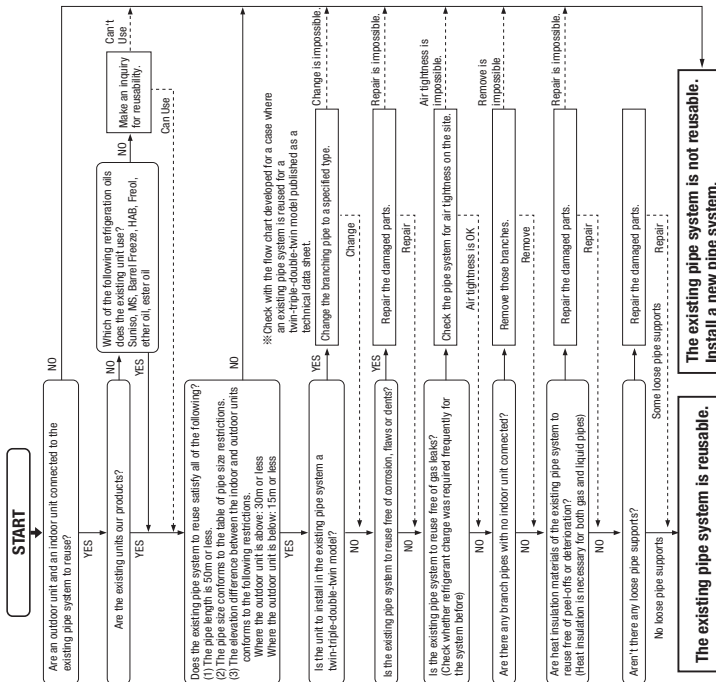

WARNING

<Where the existing unit can be run for a cooling operation.>

Carry out the following steps with the existing unit (in the order of (1), (2), (3) and (4))

- Run the unit for 30 minutes for a cooling operation.
- Stop the indoor fan and run the unit for 3 minutes for a cooling operation (returning liquid)
- Close the liquid side service valve of the outdoor unit and pump down (refrigerant recovery)
- Blow with nitrogen gas. ※ If discolored refrigeration oil or any foreign matters is discharged by the blow, wash the pipe system or install a new pipe system.
 - For the flare nut, do not use the old one, but use the one supplied with the outdoor unit.
 - Process a flare to the dimensions specified for R410A.

● Turn on-site setting switch SW5-1 to the ON position. (Where the gas pipe size is φ19.05)

<Where the existing unit cannot be run for a cooling operation.>

- Wash the pipe system or install a new pipe system.
- If you choose to wash the pipe system, contact our distributor in the area.

<Table of pipe size restrictions>

○: Standard pipe size ○: Usable
 △: Restricted to shorter pipe length limits ×: Not usable

Pipe size	0.08kg/m		0.12kg/m #15		0.2kg/m	
	φ 9.52	φ 9.52	φ 12.7	φ 12.7	φ 15.88	φ 15.88
Liquid pipe	φ 9.52	φ 9.52	φ 12.7	φ 12.7	φ 15.88	φ 15.88
Gas pipe	φ 22.22	φ 25.4	φ 28.58	φ 22.22	φ 28.58	φ 25.4
Usability	○	○※2	○	○	△	△
Maximum one-way pipe length	35	70	70	35	70	30m
Length covered without additional charge	30	30	30	16.5	16.5	9
Usability	×	×	×	○	○	△
Maximum one-way pipe length	×	×	×	35	70	35
Length covered without additional charge	×	×	×	30	30	25
						18

<Pipe system after the branching pipe>

Pipe size	After 1st branch #15		After 2nd branch	
	φ 9.52	φ 12.7	φ 9.52	φ 15.88
Liquid pipe	φ 9.52	φ 12.7	φ 9.52	φ 15.88
Gas pipe	φ 12.7	φ 15.88	φ 12.7	φ 19.05※1
Usability	○	○※2	○	○
Maximum one-way pipe length	35	70	35	30m
Length covered without additional charge	30	30	30	16.5
Usability	×	×	×	○
Maximum one-way pipe length	×	×	×	35
Length covered without additional charge	×	×	×	30
				18

※1 Because of its insufficient pressure resistance, turn the dip switch SW5-1 provided on the outdoor unit board to the ON position for φ 19.05 × 11.0. (In the case of a twin-triple-double-twin model, this also applies to the case where φ 19.05 × 11.0 is used in a pipe system after the first branching point.) However, you need not turn the dip switch SW5-1 to the ON position, if 1/2H pipes or pipes having 1.2 or thicker walls are used.

※2 When the main pipe length exceeds 40m, a significant capacity drop may be experienced due to pressure loss in the liquid pipe system. Use φ 12.7 for the liquid main.

※3 Piping size after branch should be equal or smaller than main pipe size.

※4 Piping size from first branch to indoor unit should be φ 9.52 (Liquid) / φ 15.88 (Gas).

※5 In case of 200V, change 0.145 kg/m.

● When refrigerant piping is shorter than 3m, reduce refrigerant by 1kg from factory charged volume.

● Any combinations of pipe sizes not listed in the table or marked with × in the table are not usable.

<The model types of existing units of which branching pipes are reusable.>

- FDC * * * 8 ○ ○ ○ ○
- FDC P * * * 8 ○ ○ ○ ○

The branching pipes used with models other than those listed above are not reusable because of their insufficient pressure resistance. Please use our genuine branching pipes for R410A.

● * * * are numbers representing horsepower. ○ ○ ○ ○ is an alphanumeric letter.

Formula to calculate additional charge volume

Additional charge volume (kg) = (Main pipe length (m) - Length covered without additional charge shown in the table (m)) × Total length of branch pipes (m) × Additional charge volume per meter of pipe shown in the table (kg/m)


※ If you obtain a negative figure as a result of calculation, no additional refrigerant needs to be charged.

Example) When an 250V (twin installation) is installed in a 40m long existing pipe system

(main pipe length 30m, liquid φ 15.88, gas φ 25.4; pipe length after branching pipe 5m × 2, liquid φ 9.52, gas φ 15.88), the quantity of refrigerant to charge additionally should be (30m-18m) × 0.2kg/m + 5m × 2 × 0.06kg/m = 3.0 kg.

2.9.5 Method for connecting the accessory pipe

Model FDC200VSA

PSC012D028A 

- Be sure to use the accessory pipe to connect the service valve on the gas side with the field pipe.
- Be sure to use the straight pipe (Procured at the field) shown in the table 1 applicable.
- When tightening the flare, connect the pipe securely by pressing the flared face of pipe against the service valve.
- When brazing between the pipe in place and the attached pipe, confirm that no excessive force is applied to the flare joint. Otherwise gas could leak from the flare joint.
- Connect the attached pipe according to the following steps ① - ⑤.
 - ① Referring to Table 2 and Table 3, prepare the straight pipe and the elbow in the field, which are used in the construction examples (A) - (D) applicable to the connecting direction.
 - ② Firstly, use the accessory pipe to assemble the connecting pipe assembly outside the outdoor unit.
(As shown in the figure of connecting examples (A) - (D).)
 - ③ After assembling the connecting pipe, connect it to the service valve on the gas side inside the outdoor unit. Tighten the flare nut with appropriate torque.

Proper torque	
φ 19.05	100 - 120N · m

- ④ After connection of the connecting pipe assembly to the service valve on the gas side, braze the connecting pipe assembly and the field pipe.
- ⑤ When connecting pipe contacts wiring, attach heat insulating material to the pipe in order to prevent from contacting of the pipe and wiring. (If the wiring is rubbed with the pipe and the cover of wiring is teared, there is a risk of a short circuit or an electric shock.)

About brazing

- Be sure to braze while supplying nitrogen gas.
If no nitrogen gas is supplied, a large amount of impurity (oxidized film) will be generated, which may clog the capillary tube and the expansion valve, resulting in fatal malfunction.

Table 1 Pipe specification

Refrigerant line (one way)	length (m)
≤ 35 (m)	φ 22.22 x T1.0
≤ 70 (m)	φ 25.4 x T1.0 or φ 28.58 x T1.0


- Be sure to use pipes of 1/2H material, and wall thickness above 1mm. (Pressure resistance of O-type pipe is not enough)

Table 2 Parts used for the connecting pipe assembly


No.	Name	Quantity	Remark
1	Accessory pipe A	1	Accessory
2	Straight pipe ①	1	Procured at the field
3	Straight pipe ②	1 or 0	Procured at the field (Not required for downward direction)
4	Elbow	1 or 0	Procured at the field (Not required for downward direction)

Table 3 Length and specification of straight pipe (Procured in the field)

	Ⓐ Downward	Ⓑ Forward	Ⓒ Rightward	Ⓓ Backward
Straight pipe ①	380mm or more	200mm	155mm	215mm
Straight pipe ②	—	160mm or more	160mm or more	370mm or more

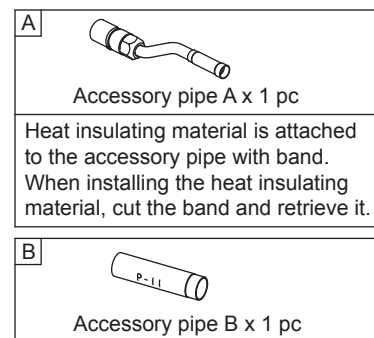


- Branching pipe set can be used by using the accessory pipe B.
When φ 22.22 (OD) size of the indoor unit gas pipe is used, the accessory pipe B is unnecessary.

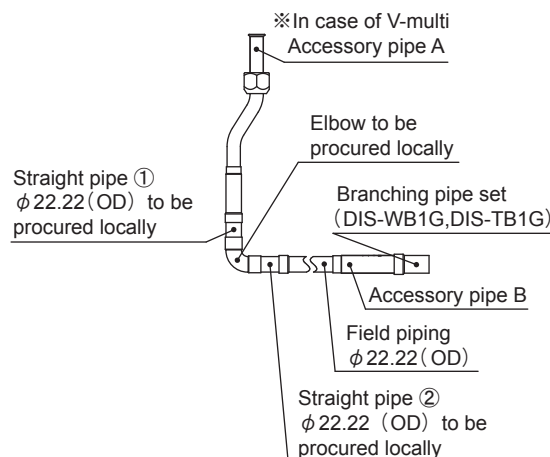


【 Connection example ① – ④ applicable to the connecting direction.】


- The piping angle shown below is an example in case of 15mm of heat insulating material.
Adjust an angle, according to the thickness of heat insulating material.
Pass the connecting pipe in a hole after angle adjustment.

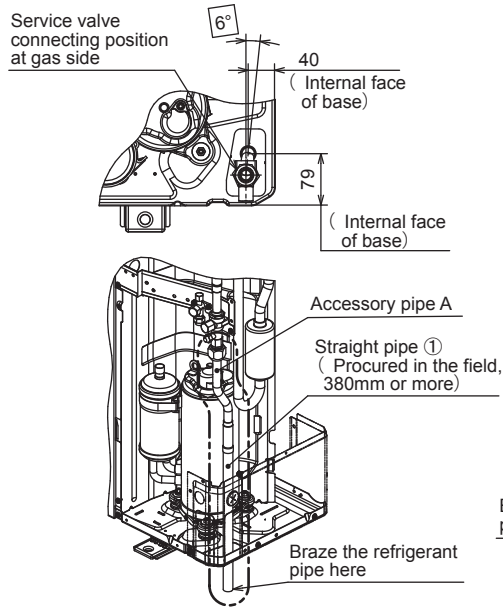


Connection example of refrigerant pipe-①
(Downward connection)

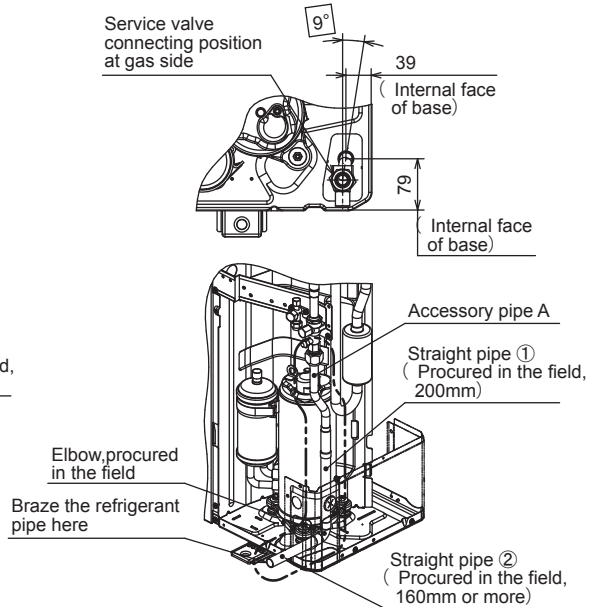

Connection example of refrigerant pipe-②
(Forward connection)

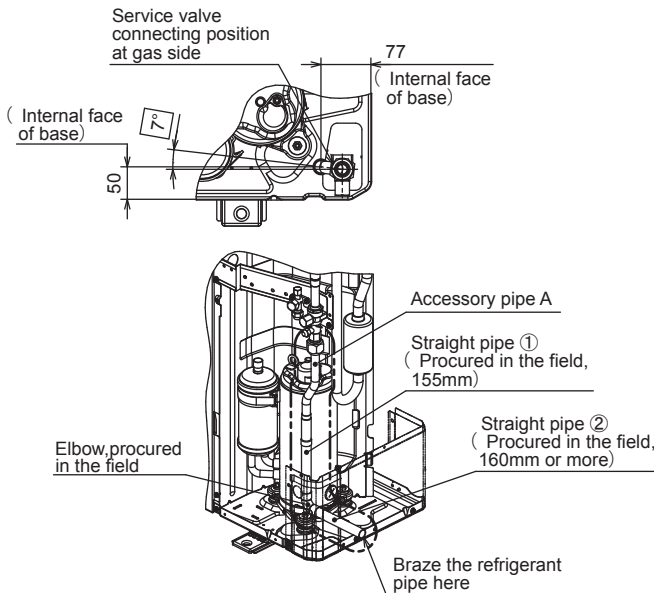


Connection example of refrigerant pipe-③
(Rightward connection)

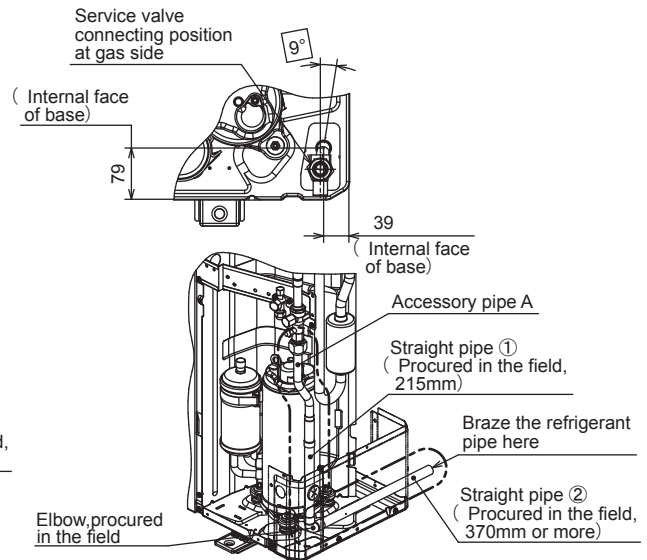

Connection example of refrigerant pipe-④
(Backward connection)

Model FDC250VSA



- Be sure to use the accessory pipe to connect the service valve on the gas side with the field pipe.
- Be sure to use the straight pipe (Procured at the field) shown in the table 1 applicable to the model of outdoor unit.
- When tightening the flare, connect the pipe securely by pressing the flared face of pipe against the service valve.
- When brazing between the pipe in place and the attached pipe, confirm that no excessive force is applied to the flare joint. Otherwise gas could leak from the flare joint.
- Connect the attached pipe according to the following steps ① – ⑤.
 - ① Referring to Table 2 and Table 3, prepare the straight pipe and the elbow in the field, which are used in the construction examples (A) – (D) applicable to the connecting direction.
 - ② Firstly, use the accessory pipe to assemble the connecting pipe assembly outside the outdoor unit. (As shown in the figure of connecting examples (A) – (D).)
 - ③ After assembling the connecting pipe, connect it to the service valve on the gas side inside the outdoor unit. Tighten the flare nut with appropriate torque.

Proper torque	
φ 19.05	100 – 120N · m

- ④ After connection of the connecting pipe assembly to the service valve on the gas side, braze the connecting pipe assembly and the field pipe.
- ⑤ When connecting pipe contacts wiring, attach heat insulating material to the pipe in order to prevent from contacting of the pipe and wiring. (If the wiring is rubbed with the pipe and the cover of wiring is teared, there is a risk of a short circuit or an electric shock.)

About brazing

- Be sure to braze while supplying nitrogen gas.
If no nitrogen gas is supplied, a large amount of impurity (oxidized film) will be generated, which may clog the capillary tube and the expansion valve, resulting in fatal malfunction.

Table 1 Pipe specification

		Refrigerant line (one way) length (m)	
Single type	FDC250V	≤35 (m)	φ 22.22 x T1.0
		≤70 (m)	φ 25.4 x T1.0 or φ 28.58 x T1.0
Multi type	FDC224KXZPE1	≤90 (m)	φ 19.05 x T1.0
		≤120 (m)	φ 22.22 x T1.0
	FDC280KXZPE1	≤90 (m)	φ 22.22 x T1.0
		≤120 (m)	φ 25.4 x T1.0 or φ 28.58 x T1.0

- Be sure to use pipes of 1/2H material, and wall thickness above 1mm. (Pressure resistance of O-type pipe is not enough)

Table 2 Parts used for the connecting pipe assembly

No.	Name	Quantity	Remark
1	Accessory pipe A	1	Accessory
2	Straight pipe ①	1	Procured at the field
3	Straight pipe ②	1 or 0	Procured at the field (Not required for downward direction)
4	Elbow	1 or 0	Procured at the field (Not required for downward direction)

Table 3 Length and specification of straight pipe (Procured in the field)

	Ⓐ Downward	Ⓑ Forward	Ⓒ Rightward	Ⓓ Backward
Straight pipe ①	400mm or more	192.5 – 202.5mm	192.5 – 202.5mm	210mm
Straight pipe ②	—	105mm or more	155mm or more	370mm or more

A


Accessory pipe A x 1 pc
(Except FDC224KXZPE1)

Heat insulating material is attached to the accessory pipe with band. When installing the heat insulating material, cut the band and retrieve it.

B



Accessory pipe B x 1 pc
(Only use for FDC250V)

- Branching pipe set can be used by using the accessory pipe B. When φ 22.22 (OD) size of the indoor unit gas pipe is used, the accessory pipe B is unnecessary.


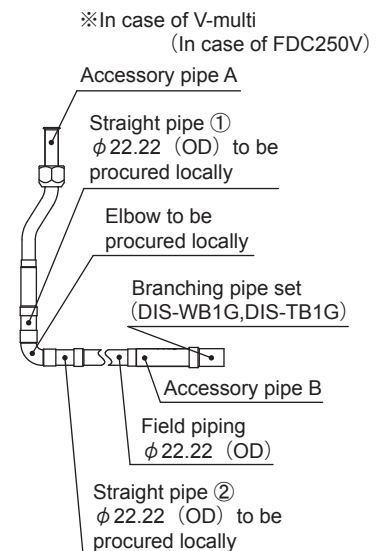


【 Connection example (A) – (D) applicable to the connecting direction.】



- The piping angle shown below is an example in case of 15mm of heat insulating material.
Adjust an angle, according to the thickness of heat insulating material.
Pass the connecting pipe in a hole after angle adjustment.

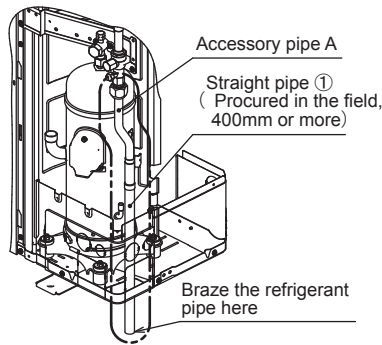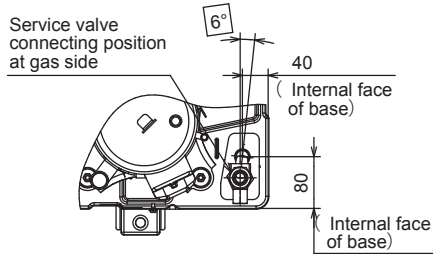



Connection example of refrigerant pipe-(A)
(Downward connection)

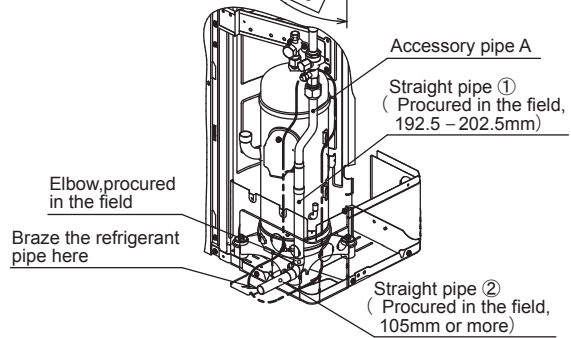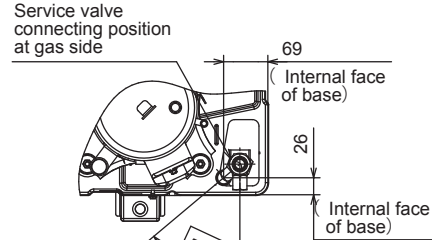

Connection example of refrigerant pipe-(B)
(Forward connection)

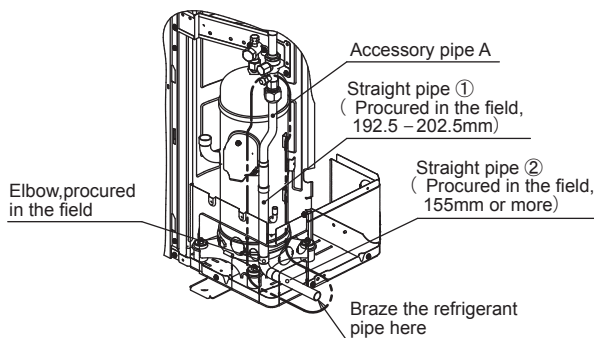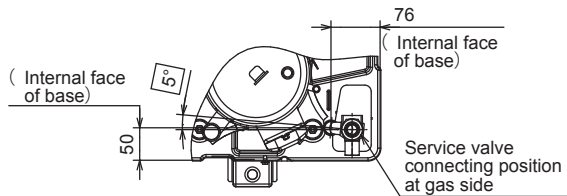

Connection example of refrigerant pipe-(C)
(Rightward connection)

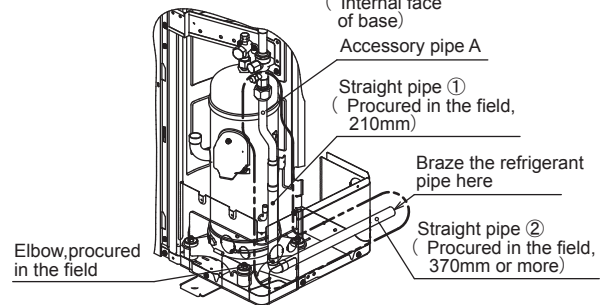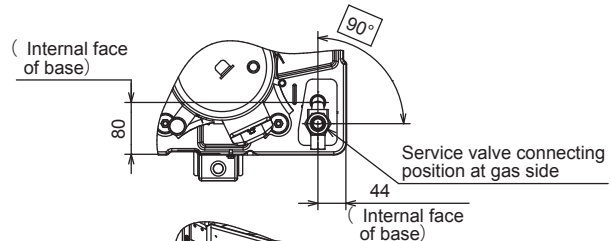

Connection example of refrigerant pipe-(D)
(Backward connection)

2.9.6 Instructions for branching pipe set (DIS-WA1, WB1, TA1, TB1)

See page 80.


2.10 TECHNICAL INFORMATION

Model FDT100VNAVH

Information to identify the model(s) to which the information relates to:				If function includes heating: Indicate the heating season the information relates to. Indicated values should relate to one heating season at a time. Include at least the heating season 'Average'.			
Indoor unit model name		FDT100VH		Average(mandatory)		Yes	
Outdoor unit model name		FDC100VNA		Warmer(if designated)		No	
Function(indicate if present)				Colder(if designated)			
cooling		Yes					
heating		Yes					
Item				Item			
symbol value unit				symbol value class			
Design load				Seasonal efficiency and energy efficiency class			
cooling		Pdesignc 10.0 kW		cooling		SEER 6.78 A++	
heating / Average		Pdesignh 8.5 kW		heating / Average		SCOP/A 4.52 A+	
heating / Warmer		Pdesignh - kW		heating / Warmer		SCOP/W - -	
heating / Colder		Pdesignh - kW		heating / Colder		SCOP/C - -	
				unit			
Declared capacity at outdoor temperature Tdesignh				Back up heating capacity at outdoor temperature Tdesignh			
heating / Average (-10°C)		Pdh 8.5 kW		heating / Average (-10°C)		elbu 0 kW	
heating / Warmer (2°C)		Pdh - kW		heating / Warmer (2°C)		elbu - kW	
heating / Colder (-22°C)		Pdh - kW		heating / Colder (-22°C)		elbu - kW	
Declared capacity for cooling, at indoor temperature 27(19)°C and outdoor temperature Tj				Declared energy efficiency ratio, at indoor temperature 27(19)°C and outdoor temperature Tj			
Tj=35°C		Pdc 10.00 kW		Tj=35°C		EERd 3.66 -	
Tj=30°C		Pdc 7.37 kW		Tj=30°C		EERd 5.20 -	
Tj=25°C		Pdc 4.74 kW		Tj=25°C		EERd 8.95 -	
Tj=20°C		Pdc 3.55 kW		Tj=20°C		EERd 12.30 -	
Declared capacity for heating / Average season, at indoor temperature 20°C and outdoor temperature Tj				Declared coefficient of performance / Average season, at indoor temperature 20°C and outdoor temperature Tj			
Tj=-7°C		Pdh 7.52 kW		Tj=-7°C		COPd 3.34 -	
Tj=2°C		Pdh 4.58 kW		Tj=2°C		COPd 4.22 -	
Tj=7°C		Pdh 2.94 kW		Tj=7°C		COPd 5.92 -	
Tj=12°C		Pdh 2.77 kW		Tj=12°C		COPd 6.93 -	
Tj=bivalent temperature		Pdh 8.50 kW		Tj=bivalent temperature		COPd 2.84 -	
Tj=operating limit		Pdh 6.77 kW		Tj=operating limit		COPd 2.51 -	
Declared capacity for heating / Warmer season, at indoor temperature 20°C and outdoor temperature Tj				Declared coefficient of performance / Warmer season, at indoor temperature 20°C and outdoor temperature Tj			
Tj=2°C		Pdh - kW		Tj=2°C		COPd - -	
Tj=7°C		Pdh - kW		Tj=7°C		COPd - -	
Tj=12°C		Pdh - kW		Tj=12°C		COPd - -	
Tj=bivalent temperature		Pdh - kW		Tj=bivalent temperature		COPd - -	
Tj=operating limit		Pdh - kW		Tj=operating limit		COPd - -	
Declared capacity for heating / Colder season, at indoor temperature 20°C and outdoor temperature Tj				Declared coefficient of performance / Colder season, at indoor temperature 20°C and outdoor temperature Tj			
Tj=-7°C		Pdh - kW		Tj=-7°C		COPd - -	
Tj=2°C		Pdh - kW		Tj=2°C		COPd - -	
Tj=7°C		Pdh - kW		Tj=7°C		COPd - -	
Tj=12°C		Pdh - kW		Tj=12°C		COPd - -	
Tj=bivalent temperature		Pdh - kW		Tj=bivalent temperature		COPd - -	
Tj=operating limit		Pdh - kW		Tj=operating limit		COPd - -	
Tj=-15°C		Pdh - kW		Tj=-15°C		COPd - -	
Bivalent temperature				Operating limit temperature			
heating / Average		Tbiv -10 °C		heating / Average		Tol -20 °C	
heating / Warmer		Tbiv - °C		heating / Warmer		Tol - °C	
heating / Colder		Tbiv - °C		heating / Colder		Tol - °C	
Cycling interval capacity				Cycling interval efficiency			
for cooling		Pcycc - kW		for cooling		EERcyc - -	
for heating		Pcyh - kW		for heating		COPcyc - -	
Degradation coefficient				Degradation coefficient			
cooling		Cdc 0.25 -		heating		Cdh 0.25 -	
Electric power input in power modes other than 'active mode'				Annual electricity consumption			
off mode		Poff 8 W		cooling		Qce 516 kWh/a	
standby mode		Psb 8 W		heating / Average		Qhe 2633 kWh/a	
thermostat-off mode		Pto(cooling) 20 W		heating / Warmer		Qhe - kWh/a	
		Pto(heating) 30 W		heating / colder		Qhe - kWh/a	
crankcase heater mode		Pck 8 W					
Capacity control(indicate one of three options)				Other items			
fixed		No		Sound power level(indoor)		Lwa 62 dB(A)	
staged		No		Sound power level(outdoor)		Lwa 70 dB(A)	
variable		Yes		Global warming potential		GWP 2088 kgCO ₂ eq.	
				Rated air flow(indoor)		- 2220 m ³ /h	
				Rated air flow(outdoor)		- 4500 m ³ /h	
Contact details for obtaining more information				Name and address of the manufacturer or of its authorised representative.			
				Mitsubishi Heavy Industries Air-Conditioning Europe, Ltd.			
				5 The Square, Stockley Park, Uxbridge, Middlesex, UB11 1ET, United kingdom			


Model FDT100VSAVH

Information to identify the model(s) to which the information relates to:		If function includes heating: Indicate the heating season the information relates to. Indicated values should relate to one heating season at a time. Include at least the heating season 'Average'.	
Indoor unit model name	FDT100VH		
Outdoor unit model name	FDC100VSA		
Function(indicate if present)		Average(mandatory)	
cooling	Yes	Warmer(if designated)	No
heating	Yes	Colder(if designated)	No
Item	symbol	value	unit
Design load			
cooling	Pdesignc	10.0	kW
heating / Average	Pdesignh	8.5	kW
heating / Warmer	Pdesignh	-	kW
heating / Colder	Pdesignh	-	kW
Declared capacity at outdoor temperature Tdesignh		Back up heating capacity at outdoor temperature Tdesignh	
heating / Average (-10°C)	Pdh	8.5	kW
heating / Warmer (2°C)	Pdh	-	kW
heating / Colder (-22°C)	Pdh	-	kW
Declared capacity for cooling, at indoor temperature 27(19)°C and outdoor temperature Tj		Declared energy efficiency ratio, at indoor temperature 27(19)°C and outdoor temperature Tj	
Tj=35°C	Pdc	10.00	kW
Tj=30°C	Pdc	7.37	kW
Tj=25°C	Pdc	4.74	kW
Tj=20°C	Pdc	3.55	kW
Declared capacity for heating / Average season, at indoor temperature 20°C and outdoor temperature Tj		Declared coefficient of performance / Average season, at indoor temperature 20°C and outdoor temperature Tj	
Tj=-7°C	Pdh	7.52	kW
Tj=2°C	Pdh	4.58	kW
Tj=7°C	Pdh	2.94	kW
Tj=12°C	Pdh	2.77	kW
Tj=bivalent temperature	Pdh	8.50	kW
Tj=operating limit	Pdh	6.77	kW
Declared capacity for heating / Warmer season, at indoor temperature 20°C and outdoor temperature Tj		Declared coefficient of performance / Warmer season, at indoor temperature 20°C and outdoor temperature Tj	
Tj=2°C	Pdh	-	kW
Tj=7°C	Pdh	-	kW
Tj=12°C	Pdh	-	kW
Tj=bivalent temperature	Pdh	-	kW
Tj=operating limit	Pdh	-	kW
Declared capacity for heating / Colder season, at indoor temperature 20°C and outdoor temperature Tj		Declared coefficient of performance / Colder season, at indoor temperature 20°C and outdoor temperature Tj	
Tj=-7°C	Pdh	-	kW
Tj=2°C	Pdh	-	kW
Tj=7°C	Pdh	-	kW
Tj=12°C	Pdh	-	kW
Tj=bivalent temperature	Pdh	-	kW
Tj=operating limit	Pdh	-	kW
Tj=-15°C	Pdh	-	kW
Bivalent temperature		Operating limit temperature	
heating / Average	Tbiv	-10	°C
heating / Warmer	Tbiv	-	°C
heating / Colder	Tbiv	-	°C
Cycling interval capacity		Cycling interval efficiency	
for cooling	Pcycc	-	kW
for heating	Pcyh	-	kW
Degradation coefficient		Degradation coefficient	
cooling	Cdc	0.25	-
Electric power input in power modes other than 'active mode'		Annual electricity consumption	
off mode	Poff	8	W
standby mode	Psb	8	W
thermostat-off mode	Pto(cooling)	20	W
	Pto(heating)	30	W
crankcase heater mode	Pck	8	W
Capacity control(indicate one of three options)		Other items	
fixed		Sound power level(indoor)	Lwa 62 dB(A)
staged	No	Sound power level(outdoor)	Lwa 70 dB(A)
variable	Yes	Global warming potential	GWP 2088 kgCO ₂ eq.
Contact details for obtaining more information		Rated air flow(indoor)	
Name and address of the manufacturer or of its authorised representative.		-	
Mitsubishi Heavy Industries Air-Conditioning Europe, Ltd.		Rated air flow(outdoor)	
5 The Square, Stockley Park, Uxbridge, Middlesex, UB11 1ET, United kingdom		-	




Model FDT125VNAVH

Model(s) : FDC125VNA / FDT125VH			
Outdoor side heat exchanger of air conditioner : air			
Indoor side heat exchanger of air conditioner : air			
Type : vapour compression			
if applicable : electric motor			
Item	Symbol	Value	Unit
Rated cooling capacity	Prated,c	12.5	kW
Declared cooling capacity for part load at given outdoor temperatures Tj and indoor 27°C/19°C(dry/wet bulb)			
Tj=+35°C	Pdc	12.5	kW
Tj=+30°C	Pdc	9.2	kW
Tj=+25°C	Pdc	5.9	kW
Tj=+20°C	Pdc	3.5	kW
Degradation coefficient for air conditioners**	Cdc	0.25	-
Power consumption in other than 'active mode'			
Off mode	P _{OFF}	0.008	kW
Thermostat-off mode	P _{TO}	0.020	kW
Other items			
Capacity control		variable	
Sound power level, outdoor	L _{WA}	71.0	dB
If engine driven: Emissions of nitrogen oxides	NOx ***	-	mg/kWh fuel input GCV
GWP of the refrigerant		2088	kgCO ₂ eq. (100years)
Seasonal space cooling energy efficiency ηs,c			
		258.0	%
Declared energy efficiency ratio or gas utilization efficiency / auxiliary energy factor for part load at given outdoor temperatures Tj			
Tj=+35°C	EERd or GUEc,bin / AEFc,bin	309.0	%
Tj=+30°C	EERd or GUEc,bin / AEFc,bin	475.0	%
Tj=+25°C	EERd or GUEc,bin / AEFc,bin	775.0	%
Tj=+20°C	EERd or GUEc,bin / AEFc,bin	1270.0	%
Crankcase heater mode			
		0.008	kW
Standby mode			
		0.008	kW
For air-to-air air conditioner: air flow-rate,outdoor measured			
		4500	m ³ /h
Contact details Mitsubishi heavy industries thermal systems,LTD			
** If Cdc is not determined by measurement then the default degradation coefficient air conditioners shall be 0,25.			
*** from 26 September 2018			
Where information relates to multi-split air conditioners,the test result and performance data be obtained on the basis of the performance of the outdoor unit, with a combination of indoor unit(s) recommended by the manufacturer or importer.			



Information to identify the model(s) to which the information relates :				FDC125VNA / FDT125VH			
Outdoor side heat exchanger of heat pump :				air			
Indoor side heat exchanger of heat pump :				air			
Indication if the heater is equipped with a supplementary heater :				No			
if applicable :				electric motor			
Parameters shall be declared for the average heating season , parameters for the warmer and colder heating seasons are optional.							
Item	Symbol	Value	Unit	Item	Symbol	Value	Unit
Rated heating capacity	Prated,h	14.0	kW	Seasonal space heating energy efficiency ηs,h		172.1	%
Declared heating capacity for part load at indoor temperature 20°C and outdoor temperature Tj				Declared coefficient of performance or gas utilization efficiency / auxiliary energy factor for part load at given outdoor temperatures Tj			
Tj=-7°C	Pdh	8.7	kW	Tj=-7°C	COPd or GUEh,bin / AEFh,bin	310.0	%
Tj=+2°C	Pdh	5.3	kW	Tj=+2°C	COPd or GUEh,bin / AEFh,bin	415.0	%
Tj=+7°C	Pdh	3.4	kW	Tj=+7°C	COPd or GUEh,bin / AEFh,bin	579.0	%
Tj=+12°C	Pdh	2.7	kW	Tj=+12°C	COPd or GUEh,bin / AEFh,bin	643.0	%
Tbiv=bivalent temperature	Pdh	9.8	kW	Tbiv=bivalent temperature	COPd or GUEh,bin / AEFh,bin	257.0	%
TOL=operation limit	Pdh	7.7	kW	TOL=operation limit	COPd or GUEh,bin / AEFh,bin	235.0	%
For air-to-water heat pumps : Tj=-15°C (if TOL < -20°C)	Pdh	-	kW	For air-to-water heat pumps:Tj=-15°C (if TOL < -20°C)	COPd or GUEh,bin / AEFh,bin	-	%
Bivalent temperature	Tbiv	-10.0	°C	For water-to-air heat pumps:Operation limit Ta temperature		-	°C
Degradation coefficient heat pumps**	Cdh	0.25	-				
Power consumption in modes other than 'active mode'				Supplementary heater back-up heating capacity			
Off mode	P _{OFF}	0.008	kW		elbu	-	kW
Thermostat-off mode	P _{TO}	0.035	kW	Type of energy input Standby mode	P _{SB}	0.008	kW
Crankcase heater mode	P _{CK}	0.008	kW				
Other items				For air-to-air heat pumps: air flow-rate,outdoor measured			
Capacity control		variable				4380	m³/h
Sound power level, outdoor measured	L _{WA}	71.0	dB	For water-/brine-to-air heat pumps : Rated brine or water flow-rate, outdoor side heat exchanger		-	m³/h
Emissions of nitrogen oxides(if applicable)	NOx ***	-	mg/kWh fuel input GCV				
GWP of the refrigerant		2088	kgCO ₂ eq. (100years)				
Contact details				Mitsubishi heavy industries thermal systems,LTD			
** If Cdh is not determined by measurement then the default degradation coefficient air conditioners shall be 0.25.							
*** from 26 September 2018							
Where information relates to multi-split air conditioners,the test result and performance data be obtained on the basis of the performance of the outdoor unit, with a combination of indoor unit(s) recommended by the manufacturer or importer.							



Model FDT125VSAVH

Model(s) : FDC125VSA / FDT125VH			
Outdoor side heat exchanger of air conditioner : air			
Indoor side heat exchanger of air conditioner : air			
Type : vapour compression			
if applicable : electric motor			
Item	Symbol	Value	Unit
Rated cooling capacity	Prated,c	12.5	kW
Declared cooling capacity for part load at given outdoor temperatures Tj and indoor 27°C/19°C(dry/wet bulb)			
Tj=+35°C	Pdc	12.5	kW
Tj=+30°C	Pdc	9.2	kW
Tj=+25°C	Pdc	5.9	kW
Tj=+20°C	Pdc	3.5	kW
Degradation coefficient for air conditioners**	Cdc	0.25	-
Power consumption in other than 'active mode'			
Off mode	P _{OFF}	0.008	kW
Thermostat-off mode	P _{TO}	0.020	kW
Other items			
Capacity control		variable	
Sound power level, outdoor	L _{WA}	71.0	dB
If engine driven: Emissions of nitrogen oxides	NOx ***	-	mg/kWh fuel input GCV
GWP of the refrigerant		2088	kgCO ₂ eq. (100years)
Seasonal space cooling energy efficiency ηs,c			
		258.0	%
Declared energy efficiency ratio or gas utilization efficiency / auxiliary energy factor for part load at given outdoor temperatures Tj			
Tj=+35°C	EERd or GUEc,bin / AEFc,bin	309.0	%
Tj=+30°C	EERd or GUEc,bin / AEFc,bin	475.0	%
Tj=+25°C	EERd or GUEc,bin / AEFc,bin	775.0	%
Tj=+20°C	EERd or GUEc,bin / AEFc,bin	1270.0	%
For air-to-air conditioner: air flow-rate,outdoor measured			
		4500	m ³ /h
Contact details Mitsubishi heavy industries thermal systems,LTD			
** If Cdc is not determined by measurement then the default degradation coefficient air conditioners shall be 0,25. *** from 26 September 2018 Where information relates to multi-split air conditioners,the test result and performance data be obtained on the basis of the performance of the outdoor unit, with a combination of indoor unit(s) recommended by the manufacturer or importer.			

Information to identify the model(s) to which the information relates :				FDC125VSA / FDT125VH			
Outdoor side heat exchanger of heat pump :				air			
Indoor side heat exchanger of heat pump :				air			
Indication if the heater is equipped with a supplementary heater :				No			
if applicable :				electric motor			
Parameters shall be declared for the average heating season , parameters for the warmer and colder heating seasons are optional.							
Item	Symbol	Value	Unit	Item	Symbol	Value	Unit
Rated heating capacity	Prated,h	14.0	kW	Seasonal space heating energy efficiency ηs,h		172.1	%
Declared heating capacity for part load at indoor temperature 20°C and outdoor temperature Tj				Declared coefficient of performance or gas utilization efficiency / auxiliary energy factor for part load at given outdoor temperatures Tj			
Tj=-7°C	Pdh	8.7	kW	Tj=-7°C	COPd or GUEh,bin / AEFh,bin	310.0	%
Tj=+2°C	Pdh	5.3	kW	Tj=+2°C	COPd or GUEh,bin / AEFh,bin	415.0	%
Tj=+7°C	Pdh	3.4	kW	Tj=+7°C	COPd or GUEh,bin / AEFh,bin	579.0	%
Tj=+12°C	Pdh	2.7	kW	Tj=+12°C	COPd or GUEh,bin / AEFh,bin	643.0	%
Tbiv=bivalent temperature	Pdh	9.8	kW	Tbiv=bivalent temperature	COPd or GUEh,bin / AEFh,bin	257.0	%
TOL=operation limit	Pdh	7.7	kW	TOL=operation limit	COPd or GUEh,bin / AEFh,bin	235.0	%
For air-to-water heat pumps : Tj=-15°C (if TOL < -20°C)	Pdh	-	kW	For air-to-water heat pumps:Tj=-15°C (if TOL < -20°C)	COPd or GUEh,bin / AEFh,bin	-	%
Bivalent temperature	Tbiv	-10.0	°C	For water-to-air heat pumps:Operation limit Ta temperature		-	°C
Degradation coefficient heat pumps**	Cdh	0.25	-				
Power consumption in modes other than 'active mode'				Supplementary heater back-up heating capacity			
Off mode	P _{OFF}	0.008	kW		elbu	-	kW
Thermostat-off mode	P _{TO}	0.035	kW	Type of energy input Standby mode	P _{SB}	0.008	kW
Crankcase heater mode	P _{CK}	0.008	kW				
Other items				For air-to-air heat pumps: air flow-rate,outdoor measured			
Capacity control		variable				4380	m³/h
Sound power level, outdoor measured	L _{WA}	71.0	dB	For water-/brine-to-air heat pumps : Rated brine or water flow-rate, outdoor side heat exchanger		-	m³/h
Emissions of nitrogen oxides(if applicable)	NOx ***	-	mg/kWh fuel input GCV				
GWP of the refrigerant		2088	kgCO ₂ eq. (100years)				
Contact details				Mitsubishi heavy industries thermal systems,LTD			
** If Cdh is not determined by measurement then the default degradation coefficient air conditioners shall be 0.25.							
*** from 26 September 2018							
Where information relates to multi-split air conditioners,the test result and performance data be obtained on the basis of the performance of the outdoor unit, with a combination of indoor unit(s) recommended by the manufacturer or importer.							

Model FDT140VNAVH

Model(s) : FDC140VNA / FDT140VH			
Outdoor side heat exchanger of air conditioner : air			
Indoor side heat exchanger of air conditioner : air			
Type : vapour compression			
if applicable : electric motor			
Item	Symbol	Value	Unit
Rated cooling capacity	Prated,c	13.6	kW
Declared cooling capacity for part load at given outdoor temperatures Tj and indoor 27°C/19°C(dry/wet bulb)			
Tj=+35°C	Pdc	13.6	kW
Tj=+30°C	Pdc	10.0	kW
Tj=+25°C	Pdc	6.4	kW
Tj=+20°C	Pdc	3.5	kW
Degradation coefficient for air conditioners**	Cdc	0.25	-
Power consumption in other than 'active mode'			
Off mode	P _{OFF}	0.008	kW
Thermostat-off mode	P _{TO}	0.020	kW
Other items			
Capacity control		variable	
Sound power level, outdoor	L _{WA}	73.0	dB
If engine driven: Emissions of nitrogen oxides	NOx ***	-	mg/kWh fuel input GCV
GWP of the refrigerant		2088	kgCO ₂ eq. (100years)
Seasonal space cooling energy efficiency ηs,c			
		243.2	%
Declared energy efficiency ratio or gas utilization efficiency / auxiliary energy factor for part load at given outdoor temperatures Tj			
Tj=+35°C	EERd or GUEc,bin / AEFc,bin	267.0	%
Tj=+30°C	EERd or GUEc,bin / AEFc,bin	450.0	%
Tj=+25°C	EERd or GUEc,bin / AEFc,bin	706.0	%
Tj=+20°C	EERd or GUEc,bin / AEFc,bin	1310.0	%
Crankcase heater mode			
		0.008	kW
Standby mode			
		0.008	kW
For air-to-air air conditioner: air flow-rate,outdoor measured			
		4500	m ³ /h
Contact details Mitsubishi heavy industries thermal systems,LTD			
** If Cdc is not determined by measurement then the default degradation coefficient air conditioners shall be 0,25.			
*** from 26 September 2018			
Where information relates to multi-split air conditioners,the test result and performance data be obtained on the basis of the performance of the outdoor unit, with a combination of indoor unit(s) recommended by the manufacturer or importer.			



Information to identify the model(s) to which the information relates :				FDC140VNA / FDT140VH			
Outdoor side heat exchanger of heat pump :				air			
Indoor side heat exchanger of heat pump :				air			
Indication if the heater is equipped with a supplementary heater :				No			
if applicable :				electric motor			
Parameters shall be declared for the average heating season , parameters for the warmer and colder heating seasons are optional.							
Item	Symbol	Value	Unit	Item	Symbol	Value	Unit
Rated heating capacity	Prated,h	15.5	kW	Seasonal space heating energy efficiency ηs,h		168.0	%
Declared heating capacity for part load at indoor temperature 20°C and outdoor temperature Tj				Declared coefficient of performance or gas utilization efficiency / auxiliary energy factor for part load at given outdoor temperatures Tj			
Tj=-7°C	Pdh	9.3	kW	Tj=-7°C	COPd or GUEh,bin / AEFh,bin	228.0	%
Tj=+2°C	Pdh	5.7	kW	Tj=+2°C	COPd or GUEh,bin / AEFh,bin	433.0	%
Tj=+7°C	Pdh	3.7	kW	Tj=+7°C	COPd or GUEh,bin / AEFh,bin	583.0	%
Tj=+12°C	Pdh	2.6	kW	Tj=+12°C	COPd or GUEh,bin / AEFh,bin	688.0	%
Tbiv=bivalent temperature	Pdh	10.5	kW	Tbiv=bivalent temperature	COPd or GUEh,bin / AEFh,bin	268.0	%
TOL=operation limit	Pdh	7.9	kW	TOL=operation limit	COPd or GUEh,bin / AEFh,bin	230.0	%
For air-to-water heat pumps : Tj=-15°C (if TOL < -20°C)	Pdh	-	kW	For air-to-water heat pumps:Tj=-15°C (if TOL < -20°C)	COPd or GUEh,bin / AEFh,bin	-	%
Bivalent temperature	Tbiv	-10.0	°C	For water-to-air heat pumps:Operation limit Ta temperature		-	°C
Degradation coefficient heat pumps**	Cdh	0.25	-				
Power consumption in modes other than 'active mode'				Supplementary heater back-up heating capacity			
Off mode	P _{OFF}	0.008	kW		elbu	-	kW
Thermostat-off mode	P _{TO}	0.035	kW	Type of energy input Standby mode	P _{SB}	0.008	kW
Crankcase heater mode	P _{CK}	0.008	kW				
Other items				For air-to-air heat pumps: air flow-rate,outdoor measured			
Capacity control		variable				4380	m³/h
Sound power level, outdoor measured	L _{WA}	73.0	dB	For water-/brine-to-air heat pumps : Rated brine or water flow-rate, outdoor side heat exchanger		-	m³/h
Emissions of nitrogen oxides(if applicable)	NOx ***	-	mg/kWh fuel input GCV				
GWP of the refrigerant		2088	kgCO ₂ eq. (100years)				
Contact details				Mitsubishi heavy industries thermal systems,LTD			
** If Cdh is not determined by measurement then the default degradation coefficient air conditioners shall be 0.25.							
*** from 26 September 2018							
Where information relates to multi-split air conditioners,the test result and performance data be obtained on the basis of the performance of the outdoor unit, with a combination of indoor unit(s) recommended by the manufacturer or importer.							

Model FDT140VSAVH

Model(s) : FDC140VSA / FDT140VH			
Outdoor side heat exchanger of air conditioner : air			
Indoor side heat exchanger of air conditioner : air			
Type : vapour compression			
if applicable : electric motor			
Item	Symbol	Value	Unit
Rated cooling capacity	Prated,c	13.6	kW
Declared cooling capacity for part load at given outdoor temperatures Tj and indoor 27°C/19°C(dry/wet bulb)			
Tj=+35°C	Pdc	13.6	kW
Tj=+30°C	Pdc	10.0	kW
Tj=+25°C	Pdc	6.4	kW
Tj=+20°C	Pdc	3.5	kW
Degradation coefficient for air conditioners**	Cdc	0.25	-
Power consumption in other than 'active mode'			
Off mode	P _{OFF}	0.008	kW
Thermostat-off mode	P _{TO}	0.020	kW
Other items			
Capacity control		variable	
Sound power level, outdoor	L _{WA}	73.0	dB
If engine driven: Emissions of nitrogen oxides	NOx ***	-	mg/kWh fuel input GCV
GWP of the refrigerant		2088	kgCO ₂ eq. (100years)
Contact details Mitsubishi heavy industries thermal systems,LTD			
** If Cdc is not determined by measurement then the default degradation coefficient air conditioners shall be 0,25.			
*** from 26 September 2018			
Where information relates to multi-split air conditioners,the test result and performance data be obtained on the basis of the performance of the outdoor unit, with a combination of indoor unit(s) recommended by the manufacturer or importer.			

Information to identify the model(s) to which the information relates :				FDC140VSA / FDT140VH			
Outdoor side heat exchanger of heat pump :				air			
Indoor side heat exchanger of heat pump :				air			
Indication if the heater is equipped with a supplementary heater :				No			
if applicable :				electric motor			
Parameters shall be declared for the average heating season , parameters for the warmer and colder heating seasons are optional.							
Item	Symbol	Value	Unit	Item	Symbol	Value	Unit
Rated heating capacity	Prated,h	15.5	kW	Seasonal space heating energy efficiency ηs,h		168.0	%
Declared heating capacity for part load at indoor temperature 20°C and outdoor temperature Tj				Declared coefficient of performance or gas utilization efficiency / auxiliary energy factor for part load at given outdoor temperatures Tj			
Tj=-7°C	Pdh	9.3	kW	Tj=-7°C	COPd or GUEh,bin / AEFh,bin	228.0	%
Tj=+2°C	Pdh	5.7	kW	Tj=+2°C	COPd or GUEh,bin / AEFh,bin	433.0	%
Tj=+7°C	Pdh	3.7	kW	Tj=+7°C	COPd or GUEh,bin / AEFh,bin	583.0	%
Tj=+12°C	Pdh	2.6	kW	Tj=+12°C	COPd or GUEh,bin / AEFh,bin	688.0	%
Tbiv=bivalent temperature	Pdh	10.5	kW	Tbiv=bivalent temperature	COPd or GUEh,bin / AEFh,bin	268.0	%
TOL=operation limit	Pdh	7.9	kW	TOL=operation limit	COPd or GUEh,bin / AEFh,bin	230.0	%
For air-to-water heat pumps : Tj=-15°C (if TOL < -20°C)	Pdh	-	kW	For air-to-water heat pumps:Tj=-15°C (if TOL < -20°C)	COPd or GUEh,bin / AEFh,bin	-	%
Bivalent temperature	Tbiv	-10.0	°C	For water-to-air heat pumps:Operation limit Ta temperature		-	°C
Degradation coefficient heat pumps**	Cdh	0.25	-				
Power consumption in modes other than 'active mode'				Supplementary heater back-up heating capacity			
Off mode	P _{OFF}	0.008	kW	Supplementary heater	elbu	-	kW
Thermostat-off mode	P _{TO}	0.035	kW	back-up heating capacity			
Crankcase heater mode	P _{CK}	0.008	kW	Type of energy input Standby mode	P _{SB}	0.008	kW
Other items				For air-to-air heat pumps: air flow-rate,outdoor measured			
Capacity control		variable		For water-/brine-to-air heat pumps : Rated brine or water flow-rate, outdoor side heat exchanger		-	m³/h
Sound power level, outdoor measured	L _{WA}	-	dB				
Emissions of nitrogen oxides(if applicable)	NOx ***	-	mg/kWh fuel input GCV				
GWP of the refrigerant		2088	kgCO ₂ eq. (100years)				
Contact details				Mitsubishi heavy industries thermal systems,LTD			
** If Cdh is not determined by measurement then the default degradation coefficient air conditioners shall be 0.25.							
*** from 26 September 2018							
Where information relates to multi-split air conditioners,the test result and performance data be obtained on the basis of the performance of the outdoor unit, with a combination of indoor unit(s) recommended by the manufacturer or importer.							

Model FDT140VNAPVH


Model(s) : FDC140VNA / FDT71VH (x2 units)			
Outdoor side heat exchanger of air conditioner : air			
Indoor side heat exchanger of air conditioner : air			
Type : vapour compression			
if applicable : electric motor			
Item	Symbol	Value	Unit
Rated cooling capacity	Prated,c	13.6	kW
Declared cooling capacity for part load at given outdoor temperatures Tj and indoor 27°C/19°C(dry/wet bulb)			
Tj=+35°C	Pdc	13.6	kW
Tj=+30°C	Pdc	10.0	kW
Tj=+25°C	Pdc	6.4	kW
Tj=+20°C	Pdc	3.7	kW
Degradation coefficient for air conditioners**	Cdc	0.25	-
Power consumption in other than 'active mode'			
Off mode	P _{OFF}	0.008	kW
Thermostat-off mode	P _{TO}	0.000	kW
Other items			
Capacity control		variable	
Sound power level, outdoor	L _{WA}	73.0	dB
If engine driven: Emissions of nitrogen oxides	NOx ***	-	mg/kWh fuel input GCV
GWP of the refrigerant		2088	kgCO ₂ eq. (100years)
Seasonal space cooling energy efficiency ηs,c			
		297.5	%
Declared energy efficiency ratio or gas utilization efficiency / auxiliary energy factor for part load at given outdoor temperatures Tj			
Tj=+35°C	EERd or GUEc,bin / AEFc,bin	330.0	%
Tj=+30°C	EERd or GUEc,bin / AEFc,bin	545.0	%
Tj=+25°C	EERd or GUEc,bin / AEFc,bin	815.0	%
Tj=+20°C	EERd or GUEc,bin / AEFc,bin	1750.0	%
Crankcase heater mode			
		0.008	kW
Standby mode			
		0.008	kW
For air-to-air air conditioner: air flow-rate,outdoor measured			
		4500	m ³ /h
Contact details Mitsubishi heavy industries thermal systems,LTD			
** If Cdc is not determined by measurement then the default degradation coefficient air conditioners shall be 0,25.			
*** from 26 September 2018			
Where information relates to multi-split air conditioners,the test result and performance data be obtained on the basis of the performance of the outdoor unit, with a combination of indoor unit(s) recommended by the manufacturer or importer.			



Information to identify the model(s) to which the information relates :				FDC140VNA / FDT71VH (x2 units)			
Outdoor side heat exchanger of heat pump :				air			
Indoor side heat exchanger of heat pump :				air			
Indication if the heater is equipped with a supplementary heater :				No			
if applicable :				electric motor			
Parameters shall be declared for the average heating season , parameters for the warmer and colder heating seasons are optional.							
Item	Symbol	Value	Unit	Item	Symbol	Value	Unit
Rated heating capacity	Prated,h	15.5	kW	Seasonal space heating energy efficiency ηs,h		192.6	%
Declared heating capacity for part load at indoor temperature 20°C and outdoor temperature Tj				Declared coefficient of performance or gas utilization efficiency / auxiliary energy factor for part load at given outdoor temperatures Tj			
Tj=-7°C	Pdh	9.3	kW	Tj=-7°C	COPd or GUEh,bin / AEFh,bin	326.0	%
Tj=+2°C	Pdh	5.7	kW	Tj=+2°C	COPd or GUEh,bin / AEFh,bin	466.0	%
Tj=+7°C	Pdh	3.7	kW	Tj=+7°C	COPd or GUEh,bin / AEFh,bin	640.0	%
Tj=+12°C	Pdh	2.6	kW	Tj=+12°C	COPd or GUEh,bin / AEFh,bin	813.0	%
Tbiv=bivalent temperature	Pdh	10.5	kW	Tbiv=bivalent temperature	COPd or GUEh,bin / AEFh,bin	277.0	%
TOL=operation limit	Pdh	7.9	kW	TOL=operation limit	COPd or GUEh,bin / AEFh,bin	246.0	%
For air-to-water heat pumps : Tj=-15°C (if TOL < -20°C)	Pdh	-	kW	For air-to-water heat pumps:Tj=-15°C (if TOL < -20°C)	COPd or GUEh,bin / AEFh,bin	-	%
Bivalent temperature	Tbiv	-10.0	°C	For water-to-air heat pumps:Operation limit TOL temperature		-	°C
Degradation coefficient heat pumps**	Cdh	0.25	-				
Power consumption in modes other than 'active mode'				Supplementary heater back-up heating capacity			
Off mode	P _{OFF}	0.008	kW		elbu	-	kW
Thermostat-off mode	P _{TO}	0.015	kW	Type of energy input Standby mode	P _{SB}	0.008	kW
Crankcase heater mode	P _{CK}	0.008	kW				
Other items				For air-to-air heat pumps: air flow-rate,outdoor measured			
Capacity control		variable				4380	m³/h
Sound power level, outdoor measured	L _{WA}	73.0	dB	For water-/brine-to-air heat pumps : Rated brine or water flow-rate, outdoor side heat exchanger		-	m³/h
Emissions of nitrogen oxides(if applicable)	NOx ***	-	mg/kWh fuel input GCV				
GWP of the refrigerant		2088	kgCO ₂ eq. (100years)				
Contact details				Mitsubishi heavy industries thermal systems,LTD			
** If Cdh is not determined by measurement then the default degradation coefficient air conditioners shall be 0.25.							
*** from 26 September 2018							
Where information relates to multi-split air conditioners,the test result and performance data be obtained on the basis of the performance of the outdoor unit, with a combination of indoor unit(s) recommended by the manufacturer or importer.							

Model FDT140VSAPVH


Model(s) : FDC140VSA / FDT71VH (x2 units)			
Outdoor side heat exchanger of air conditioner : air			
Indoor side heat exchanger of air conditioner : air			
Type : vapour compression			
if applicable : electric motor			
Item	Symbol	Value	Unit
Rated cooling capacity	Prated,c	13.6	kW
Declared cooling capacity for part load at given outdoor temperatures Tj and indoor 27°C/19°C(dry/wet bulb)			
Tj=+35°C	Pdc	13.6	kW
Tj=+30°C	Pdc	10.0	kW
Tj=+25°C	Pdc	6.4	kW
Tj=+20°C	Pdc	3.7	kW
Degradation coefficient for air conditioners**	Cdc	0.25	-
Power consumption in other than 'active mode'			
Off mode	P _{OFF}	0.008	kW
Thermostat-off mode	P _{TO}	0.000	kW
Other items			
Capacity control		variable	
Sound power level, outdoor	L _{WA}	73.0	dB
If engine driven: Emissions of nitrogen oxides	NOx ***	-	mg/kWh fuel input GCV
GWP of the refrigerant		2088	kgCO ₂ eq. (100years)
Contact details Mitsubishi heavy industries thermal systems,LTD			
** If Cdc is not determined by measurement then the default degradation coefficient air conditioners shall be 0,25.			
*** from 26 September 2018			
Where information relates to multi-split air conditioners,the test result and performance data be obtained on the basis of the performance of the outdoor unit, with a combination of indoor unit(s) recommended by the manufacturer or importer.			



Information to identify the model(s) to which the information relates :				FDC140VSA / FDT71VH (x2 units)			
Outdoor side heat exchanger of heat pump :				air			
Indoor side heat exchanger of heat pump :				air			
Indication if the heater is equipped with a supplementary heater :				No			
if applicable :				electric motor			
Parameters shall be declared for the average heating season , parameters for the warmer and colder heating seasons are optional.							
Item	Symbol	Value	Unit	Item	Symbol	Value	Unit
Rated heating capacity	Prated,h	15.5	kW	Seasonal space heating energy efficiency ηs,h		192.6	%
Declared heating capacity for part load at indoor temperature 20°C and outdoor temperature Tj				Declared coefficient of performance or gas utilization efficiency / auxiliary energy factor for part load at given outdoor temperatures Tj			
Tj=-7°C	Pdh	9.3	kW	Tj=-7°C	COPd or GUEh,bin / AEFh,bin	326.0	%
Tj=+2°C	Pdh	5.7	kW	Tj=+2°C	COPd or GUEh,bin / AEFh,bin	466.0	%
Tj=+7°C	Pdh	3.7	kW	Tj=+7°C	COPd or GUEh,bin / AEFh,bin	640.0	%
Tj=+12°C	Pdh	2.6	kW	Tj=+12°C	COPd or GUEh,bin / AEFh,bin	813.0	%
Tbiv=bivalent temperature	Pdh	10.5	kW	Tbiv=bivalent temperature	COPd or GUEh,bin / AEFh,bin	277.0	%
TOL=operation limit	Pdh	7.9	kW	TOL=operation limit	COPd or GUEh,bin / AEFh,bin	246.0	%
For air-to-water heat pumps : Tj=-15°C (if TOL < -20°C)	Pdh	-	kW	For air-to-water heat pumps:Tj=-15°C (if TOL < -20°C)	COPd or GUEh,bin / AEFh,bin	-	%
Bivalent temperature	Tbiv	-10.0	°C	For water-to-air heat pumps:Operation limit Ta temperature		-	°C
Degradation coefficient heat pumps**	Cdh	0.25	-				
Power consumption in modes other than 'active mode'				Supplementary heater back-up heating capacity			
Off mode	P _{OFF}	0.008	kW		elbu	-	kW
Thermostat-off mode	P _{TO}	0.015	kW	Type of energy input Standby mode	P _{SB}	0.008	kW
Crankcase heater mode	P _{CK}	0.008	kW				
Other items				For air-to-air heat pumps: air flow-rate,outdoor measured			
Capacity control		variable				4380	m³/h
Sound power level, outdoor measured	L _{WA}	73.0	dB	For water-/brine-to-air heat pumps : Rated brine or water flow-rate, outdoor side heat exchanger		-	m³/h
Emissions of nitrogen oxides(if applicable)	NOx ***	-	mg/kWh fuel input GCV				
GWP of the refrigerant		2088	kgCO ₂ eq. (100years)				
Contact details				Mitsubishi heavy industries thermal systems,LTD			
** If Cdh is not determined by measurement then the default degradation coefficient air conditioners shall be 0.25.							
*** from 26 September 2018							
Where information relates to multi-split air conditioners,the test result and performance data be obtained on the basis of the performance of the outdoor unit, with a combination of indoor unit(s) recommended by the manufacturer or importer.							

Model FDT200VSAPVH


Model(s) : FDC200VSA / FDT100VH (x2 units)			
Outdoor side heat exchanger of air conditioner : air			
Indoor side heat exchanger of air conditioner : air			
Type : vapour compression			
if applicable : electric motor			
Item	Symbol	Value	Unit
Rated cooling capacity	Prated,c	19.0	kW
Declared cooling capacity for part load at given outdoor temperatures Tj and indoor 27°C/19°C(dry/wet bulb)			
Tj=+35°C	Pdc	19.0	kW
Tj=+30°C	Pdc	14.0	kW
Tj=+25°C	Pdc	9.0	kW
Tj=+20°C	Pdc	4.7	kW
Degradation coefficient for air conditioners**	Cdc	0.25	-
Power consumption in other than 'active mode'			
Off mode	P _{OFF}	0.010	kW
Thermostat-off mode	P _{TO}	0.000	kW
Other items			
Capacity control		variable	
Sound power level, outdoor	L _{WA}	72.0	dB
If engine driven: Emissions of nitrogen oxides	NOx ***	-	mg/kWh fuel input GCV
GWP of the refrigerant		2088	kgCO ₂ eq. (100years)
Seasonal space cooling energy efficiency ηs,c			
		291.9	%
Declared energy efficiency ratio or gas utilization efficiency / auxiliary energy factor for part load at given outdoor temperatures Tj			
Tj=+35°C	EERd or GUEc,bin / AEFc,bin	316.0	%
Tj=+30°C	EERd or GUEc,bin / AEFc,bin	548.0	%
Tj=+25°C	EERd or GUEc,bin / AEFc,bin	935.0	%
Tj=+20°C	EERd or GUEc,bin / AEFc,bin	1190.0	%
Crankcase heater mode			
		0.010	kW
Standby mode			
		0.010	kW
For air-to-air conditioner: air flow-rate,outdoor measured			
		8100	m ³ /h
Contact details Mitsubishi heavy industries thermal systems,LTD			
** If Cdc is not determined by measurement then the default degradation coefficient air conditioners shall be 0,25.			
*** from 26 September 2018			
Where information relates to multi-split air conditioners,the test result and performance data be obtained on the basis of the performance of the outdoor unit, with a combination of indoor unit(s) recommended by the manufacturer or importer.			



Information to identify the model(s) to which the information relates :				FDC200VSA / FDT100VH (x2 units)			
Outdoor side heat exchanger of heat pump :				air			
Indoor side heat exchanger of heat pump :				air			
Indication if the heater is equipped with a supplementary heater :				No			
if applicable :				electric motor			
Parameters shall be declared for the average heating season , parameters for the warmer and colder heating seasons are optional.							
Item	Symbol	Value	Unit	Item	Symbol	Value	Unit
Rated heating capacity	Prated,h	22.4	kW	Seasonal space heating energy efficiency ηs,h		180.1	%
Declared heating capacity for part load at indoor temperature 20°C and outdoor temperature Tj				Declared coefficient of performance or gas utilization efficiency / auxiliary energy factor for part load at given outdoor temperatures Tj			
Tj=-7°C	Pdh	11.1	kW	Tj=-7°C	COPd or GUEh,bin / AEFh,bin	278.0	%
Tj=+2°C	Pdh	6.7	kW	Tj=+2°C	COPd or GUEh,bin / AEFh,bin	489.0	%
Tj=+7°C	Pdh	4.3	kW	Tj=+7°C	COPd or GUEh,bin / AEFh,bin	519.0	%
Tj=+12°C	Pdh	3.5	kW	Tj=+12°C	COPd or GUEh,bin / AEFh,bin	688.0	%
Tbiv=bivalent temperature	Pdh	12.5	kW	Tbiv=bivalent temperature	COPd or GUEh,bin / AEFh,bin	277.0	%
TOL=operation limit	Pdh	10.5	kW	TOL=operation limit	COPd or GUEh,bin / AEFh,bin	245.0	%
For air-to-water heat pumps : Tj=-15°C (if TOL < -20°C)	Pdh	-	kW	For air-to-water heat pumps:Tj=-15°C (if TOL < -20°C)	COPd or GUEh,bin / AEFh,bin	-	%
Bivalent temperature	Tbiv	-10.0	°C	For water-to-air heat pumps:Operation limit Ta temperature		-	°C
Degradation coefficient heat pumps**	Cdh	0.25	-				
Power consumption in modes other than 'active mode'				Supplementary heater back-up heating capacity			
Off mode	P _{OFF}	0.010	kW		elbu	-	kW
Thermostat-off mode	P _{TO}	0.010	kW	Type of energy input Standby mode	P _{SB}	0.010	kW
Crankcase heater mode	P _{CK}	0.015	kW				
Other items				For air-to-air heat pumps: air flow-rate,outdoor measured			
Capacity control		variable				8100	m³/h
Sound power level, outdoor measured	L _{WA}	74.0	dB	For water-/brine-to-air heat pumps : Rated brine or water flow-rate, outdoor side heat exchanger		-	m³/h
Emissions of nitrogen oxides(if applicable)	NOx ***	-	mg/kWh fuel input GCV				
GWP of the refrigerant		2088	kgCO ₂ eq. (100years)				
Contact details				Mitsubishi heavy industries thermal systems,LTD			
** If Cdh is not determined by measurement then the default degradation coefficient air conditioners shall be 0.25.							
*** from 26 September 2018							
Where information relates to multi-split air conditioners,the test result and performance data be obtained on the basis of the performance of the outdoor unit, with a combination of indoor unit(s) recommended by the manufacturer or importer.							

Model FDT250VSAPVH

Model(s) : FDC250VSA / FDT125VH (x2 units)			
Outdoor side heat exchanger of air conditioner : air			
Indoor side heat exchanger of air conditioner : air			
Type : vapour compression			
if applicable : electric motor			
Item	Symbol	Value	Unit
Rated cooling capacity	Prated,c	24.0	kW
Declared cooling capacity for part load at given outdoor temperatures Tj and indoor 27°C/19°C(dry/wet bulb)			
Tj=+35°C	Pdc	24.0	kW
Tj=+30°C	Pdc	17.7	kW
Tj=+25°C	Pdc	11.4	kW
Tj=+20°C	Pdc	7.5	kW
Degradation coefficient for air conditioners**	Cdc	0.25	-
Power consumption in other than 'active mode'			
Off mode	P _{OFF}	0.010	kW
Thermostat-off mode	P _{TO}	0.000	kW
Other items			
Capacity control		variable	
Sound power level, outdoor	L _{WA}	73.0	dB
If engine driven: Emissions of nitrogen oxides	NOx ***	-	mg/kWh fuel input GCV
GWP of the refrigerant		2088	kgCO ₂ eq. (100years)
Seasonal space cooling energy efficiency ηs,c			
		228.7	%
Declared energy efficiency ratio or gas utilization efficiency / auxiliary energy factor for part load at given outdoor temperatures Tj			
Tj=+35°C	EERd or GUEc,bin / AEFc,bin	297.0	%
Tj=+30°C	EERd or GUEc,bin / AEFc,bin	441.0	%
Tj=+25°C	EERd or GUEc,bin / AEFc,bin	702.0	%
Tj=+20°C	EERd or GUEc,bin / AEFc,bin	870.0	%
Crankcase heater mode			
		0.010	kW
Standby mode			
		0.010	kW
For air-to-air air conditioner: air flow-rate,outdoor measured			
		8580	m ³ /h
Contact details Mitsubishi heavy industries thermal systems,LTD			
** If Cdc is not determined by measurement then the default degradation coefficient air conditioners shall be 0,25.			
*** from 26 September 2018			
Where information relates to multi-split air conditioners,the test result and performance data be obtained on the basis of the performance of the outdoor unit, with a combination of indoor unit(s) recommended by the manufacturer or importer.			



Information to identify the model(s) to which the information relates :				FDC250VSA / FDT125VH (x2 units)			
Outdoor side heat exchanger of heat pump :				air			
Indoor side heat exchanger of heat pump :				air			
Indication if the heater is equipped with a supplementary heater :				No			
if applicable :				electric motor			
Parameters shall be declared for the average heating season , parameters for the warmer and colder heating seasons are optional.							
Item	Symbol	Value	Unit	Item	Symbol	Value	Unit
Rated heating capacity	Prated,h	27.0	kW	Seasonal space heating energy efficiency ηs,h		169.7	%
Declared heating capacity for part load at indoor temperature 20°C and outdoor temperature Tj				Declared coefficient of performance or gas utilization efficiency / auxiliary energy factor for part load at given outdoor temperatures Tj			
Tj=-7°C	Pdh	12.6	kW	Tj=-7°C	COPd or GUEh,bin / AEFh,bin	297.0	%
Tj=+2°C	Pdh	7.7	kW	Tj=+2°C	COPd or GUEh,bin / AEFh,bin	444.0	%
Tj=+7°C	Pdh	5.6	kW	Tj=+7°C	COPd or GUEh,bin / AEFh,bin	514.0	%
Tj=+12°C	Pdh	6.0	kW	Tj=+12°C	COPd or GUEh,bin / AEFh,bin	632.0	%
Tbiv=bivalent temperature	Pdh	14.2	kW	Tbiv=bivalent temperature	COPd or GUEh,bin / AEFh,bin	268.0	%
TOL=operation limit	Pdh	12.5	kW	TOL=operation limit	COPd or GUEh,bin / AEFh,bin	268.0	%
For air-to-water heat pumps : Tj=-15°C (if TOL < -20°C)	Pdh	-	kW	For air-to-water heat pumps:Tj=-15°C (if TOL < -20°C)	COPd or GUEh,bin / AEFh,bin	-	%
Bivalent temperature	Tbiv	-10.0	°C	For water-to-air heat pumps:Operation limit Ta temperature		-	°C
Degradation coefficient heat pumps**	Cdh	0.25	-				
Power consumption in modes other than 'active mode'				Supplementary heater back-up heating capacity			
Off mode	P _{OFF}	0.010	kW		elbu	-	kW
Thermostat-off mode	P _{TO}	0.010	kW	Type of energy input Standby mode	P _{SB}	0.010	kW
Crankcase heater mode	P _{CK}	0.015	kW				
Other items				For air-to-air heat pumps: air flow-rate,outdoor measured			
Capacity control		variable				9060	m³/h
Sound power level, outdoor measured	L _{WA}	75.0	dB	For water-/brine-to-air heat pumps : Rated brine or water flow-rate, outdoor side heat exchanger		-	m³/h
Emissions of nitrogen oxides(if applicable)	NOx ***	-	mg/kWh fuel input GCV				
GWP of the refrigerant		2088	kgCO ₂ eq. (100years)				
Contact details				Mitsubishi heavy industries thermal systems,LTD			
** If Cdh is not determined by measurement then the default degradation coefficient air conditioners shall be 0.25.							
*** from 26 September 2018							
Where information relates to multi-split air conditioners,the test result and performance data be obtained on the basis of the performance of the outdoor unit, with a combination of indoor unit(s) recommended by the manufacturer or importer.							

Model FDT200VSATVH

Model(s) : FDC200VSA / FDT71VH (x3 units)			
Outdoor side heat exchanger of air conditioner : air			
Indoor side heat exchanger of air conditioner : air			
Type : vapour compression			
if applicable : electric motor			
Item	Symbol	Value	Unit
Rated cooling capacity	Prated,c	19.0	kW
Declared cooling capacity for part load at given outdoor temperatures Tj and indoor 27°C/19°C(dry/wet bulb)			
Tj=+35°C	Pdc	19.0	kW
Tj=+30°C	Pdc	14.0	kW
Tj=+25°C	Pdc	9.0	kW
Tj=+20°C	Pdc	4.7	kW
Degradation coefficient for air conditioners**	Cdc	0.25	-
Power consumption in other than 'active mode'			
Off mode	P _{OFF}	0.010	kW
Thermostat-off mode	P _{TO}	0.000	kW
Other items			
Capacity control		variable	
Sound power level, outdoor	L _{WA}	72.0	dB
If engine driven: Emissions of nitrogen oxides	NOx ***	-	mg/kWh fuel input GCV
GWP of the refrigerant		2088	kgCO ₂ eq. (100years)
Seasonal space cooling energy efficiency ηs,c			
		291.8	%
Declared energy efficiency ratio or gas utilization efficiency / auxiliary energy factor for part load at given outdoor temperatures Tj			
Tj=+35°C	EERd or GUEc,bin / AEFc,bin	316.0	%
Tj=+30°C	EERd or GUEc,bin / AEFc,bin	548.0	%
Tj=+25°C	EERd or GUEc,bin / AEFc,bin	935.0	%
Tj=+20°C	EERd or GUEc,bin / AEFc,bin	1142.0	%
For air-to-air conditioner: air flow-rate,outdoor measured			
		8100	m ³ /h
Contact details Mitsubishi heavy industries thermal systems,LTD			
** If Cdc is not determined by measurement then the default degradation coefficient air conditioners shall be 0,25.			
*** from 26 September 2018			
Where information relates to multi-split air conditioners,the test result and performance data be obtained on the basis of the performance of the outdoor unit, with a combination of indoor unit(s) recommended by the manufacturer or importer.			

Information to identify the model(s) to which the information relates :				FDC200VSA / FDT71VH (x3 units)			
Outdoor side heat exchanger of heat pump :				air			
Indoor side heat exchanger of heat pump :				air			
Indication if the heater is equipped with a supplementary heater :				No			
if applicable :				electric motor			
Parameters shall be declared for the average heating season , parameters for the warmer and colder heating seasons are optional.							
Item	Symbol	Value	Unit	Item	Symbol	Value	Unit
Rated heating capacity	Prated,h	22.4	kW	Seasonal space heating energy efficiency ηs,h		180.1	%
Declared heating capacity for part load at indoor temperature 20°C and outdoor temperature Tj				Declared coefficient of performance or gas utilization efficiency / auxiliary energy factor for part load at given outdoor temperatures Tj			
Tj=-7°C	Pdh	11.1	kW	Tj=-7°C	COPd or GUEh,bin / AEFh,bin	278.0	%
Tj=+2°C	Pdh	6.7	kW	Tj=+2°C	COPd or GUEh,bin / AEFh,bin	489.0	%
Tj=+7°C	Pdh	4.3	kW	Tj=+7°C	COPd or GUEh,bin / AEFh,bin	519.0	%
Tj=+12°C	Pdh	3.5	kW	Tj=+12°C	COPd or GUEh,bin / AEFh,bin	688.0	%
Tbiv=bivalent temperature	Pdh	12.5	kW	Tbiv=bivalent temperature	COPd or GUEh,bin / AEFh,bin	277.0	%
TOL=operation limit	Pdh	10.5	kW	TOL=operation limit	COPd or GUEh,bin / AEFh,bin	245.0	%
For air-to-water heat pumps : Tj=-15°C (if TOL < -20°C)	Pdh	-	kW	For air-to-water heat pumps:Tj=-15°C (if TOL < -20°C)	COPd or GUEh,bin / AEFh,bin	-	%
Bivalent temperature	Tbiv	-10.0	°C	For water-to-air heat pumps:Operation limit Ta temperature		-	°C
Degradation coefficient heat pumps**	Cdh	0.25	-				
Power consumption in modes other than 'active mode'				Supplementary heater back-up heating capacity			
Off mode	P _{OFF}	0.010	kW		elbu	-	kW
Thermostat-off mode	P _{TO}	0.010	kW	Type of energy input Standby mode	P _{SB}	0.010	kW
Crankcase heater mode	P _{CK}	0.015	kW				
Other items				For air-to-air heat pumps: air flow-rate,outdoor measured			
Capacity control		variable				8100	m³/h
Sound power level, outdoor measured	L _{WA}	74.0	dB	For water-/brine-to-air heat pumps : Rated brine or water flow-rate, outdoor side heat exchanger		-	m³/h
Emissions of nitrogen oxides(if applicable)	NOx ***	-	mg/kWh fuel input GCV				
GWP of the refrigerant		2088	kgCO ₂ eq. (100years)				
Contact details				Mitsubishi heavy industries thermal systems,LTD			
** If Cdh is not determined by measurement then the default degradation coefficient air conditioners shall be 0.25.							
*** from 26 September 2018							
Where information relates to multi-split air conditioners,the test result and performance data be obtained on the basis of the performance of the outdoor unit, with a combination of indoor unit(s) recommended by the manufacturer or importer.							

Models FDT71VH, 100VH, 125VH, 140VH

Model(s) : FDT71VH							
Item	Symbol	Value	Unit	Item	Symbol	Value	Unit
Cooling capacity (sensible)	$P_{rated,c}$	6.1	kW	Total electric power input	P_{elec}	0.080	kW
Cooling capacity (latent)	$P_{rated,c}$	1.0	kW	Sound power level (per speed setting,if applicable)	L_{WA}	59.0	dB
Heating capacity	$P_{rated,h}$	8.0	kW				
Contact details	Mitsubishi heavy industries thermal systems,LTD						

Model(s) : FDT100VH							
Item	Symbol	Value	Unit	Item	Symbol	Value	Unit
Cooling capacity (sensible)	$P_{rated,c}$	8.1	kW	Total electric power input	P_{elec}	0.130	kW
Cooling capacity (latent)	$P_{rated,c}$	1.9	kW	Sound power level (per speed setting,if applicable)	L_{WA}	62.0	dB
Heating capacity	$P_{rated,h}$	11.2	kW				
Contact details	Mitsubishi heavy industries thermal systems,LTD						

Model(s) : FDT125VH							
Item	Symbol	Value	Unit	Item	Symbol	Value	Unit
Cooling capacity (sensible)	$P_{rated,c}$	9.1	kW	Total electric power input	P_{elec}	0.140	kW
Cooling capacity (latent)	$P_{rated,c}$	3.4	kW	Sound power level (per speed setting,if applicable)	L_{WA}	63.0	dB
Heating capacity	$P_{rated,h}$	14.0	kW				
Contact details							


Model(s) : FDT140VH							
Item	Symbol	Value	Unit	Item	Symbol	Value	Unit
Cooling capacity (sensible)	$P_{rated,c}$	9.8	kW	Total electric power input	P_{elec}	0.140	kW
Cooling capacity (latent)	$P_{rated,c}$	2.7	kW	Sound power level (per speed setting,if applicable)	L_{WA}	63.0	dB
Heating capacity	$P_{rated,h}$	16.0	kW				
Contact details							

3. STANDARD INVERTER PACKAGED AIR-CONDITIONERS

CONTENTS

3.1 SPECIFICATIONS	181
3.2 EXTERIOR DIMENSIONS	184
(1) Indoor units	184
(2) Outdoor units	184
(3) Remote control (Option parts)	186
3.3 ELECTRICAL WIRING	187
(1) Indoor units	187
(2) Outdoor units	187
3.4 NOISE LEVEL	190
3.5 TEMPERATURE AND VELOCITY DISTRIBUTION	191
3.6 PIPING SYSTEM	191
3.7 RANGE OF USAGE & LIMITATIONS	193
3.8 SELECTION CHART	196
3.8.1 Capacity tables	196
3.8.2 Correction of cooling and heating capacity in relation to air flow rate control (Fan speed)	201
3.8.3 Correction of cooling and heating capacity in relation to one way length of refrigerant piping	201
3.8.4 Height difference between the indoor unit and outdoor unit	201
3.9 APPLICATION DATA	202
3.9.1 Installation of indoor unit	202
3.9.2 Electric wiring work installation	202
3.9.3 Installation of wired remote control (Option parts)	202
3.9.4 Installation of outdoor unit	202
(1) Model FDC71VNP	202
(2) Model FDC90VNP1	209
(3) Model FDC100VNP	216
3.10 TECHNICAL INFORMATION	223

■ How to read the model name

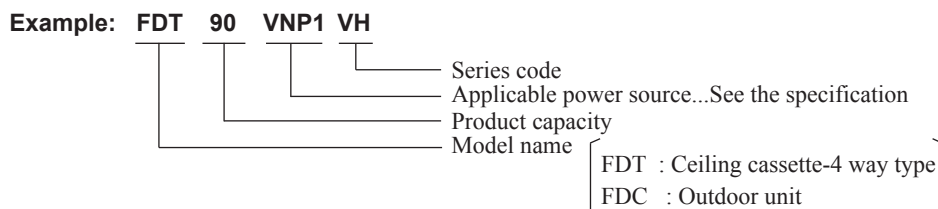

3.1 SPECIFICATIONS

Item		Model	FDT71VNPVH			
			Indoor unit FDT71VH	Outdoor unit FDC71VNP		
Power source			1 Phase, 220-240V 50Hz / 220V 60Hz			
Operation data	Nominal cooling capacity (range)	kW	7.1 [1.4(Min.) - 7.1(Max.)]			
	Nominal heating capacity (range)	kW	7.1 [1.0(Min.) - 7.1(Max.)]			
	Power consumption	Cooling	kW	2.31		
		Heating		1.73		
	Max power consumption		3.27			
	Running current	Cooling	A	10.3 / 10.8		
		Heating		7.7 / 8.1		
	Inrush current, max current		5 , 14.5			
	Power factor	Cooling	%	98 / 98		
		Heating		98 / 98		
	EER	Cooling		3.07		
	COP	Heating		4.10		
	Sound power level	Cooling	dB(A)	59		
Heating		60				
Sound pressure level	Cooling	dB(A)	P-Hi : 46 Hi : 34 Me : 31 Lo : 26			
	Heating		P-Hi : 46 Hi : 34 Me : 31 Lo : 26			
Silent mode sound pressure level			—			
Exterior dimensions (Height x Width x Depth)		mm	Unit 236 × 840 × 840 Panel 35 × 950 × 950	640×800(+71)×290		
Exterior appearance (Munsell color)			Plaster white (6.8Y8.9/0.2) near equivalent	Stucco white (4.2Y7.5/1.1) near equivalent		
Net weight		kg	Unit 21 Panel 5	45		
Compressor type & Q'ty			—	RMT5113MDE2 (Twin rotary type)×1		
Compressor motor (Starting method)		kW	—	Direct line start		
Refrigerant oil (Amount, type)		L	—	0.45 (MA68)		
Refrigerant (Type, amount, pre-charge length)		kg	R410A 1.6 in outdoor unit (Incl. the amount for the piping of 15m)			
Heat exchanger			Louver fin & inner grooved tubing	M shape fin & inner grooved tubing		
Refrigerant control			Capillary tubes + Electronic expansion valve			
Fan type & Q'ty			Turbo fan ×1	Propeller fan ×1		
Fan motor (Starting method)		W	50 < Direct line start >	34 < Direct line start >		
Air flow	Cooling	m ³ /min	P-Hi : 28 Hi : 18 Me : 15 Lo : 12			
	Heating		36			
Available external static pressure		Pa	0			
Outside air intake			Possible			
Air filter, Quality / Quantity			Pocket plastic net ×1(Washable)			
Shock & vibration absorber			Rubber sleeve(for fan motor)			
Electric heater		W	—			
Operation control	Remote control		(Option) Wired : RC-EX3A, RC-E5, RCH-E3 Wireless : RCN-T-5AW-E2			
	Room temperature control		Thermostat by electronics			
	Operation display		—			
Safety equipments			Compressor overheat protection, Overcurrent protection Frost protection, Serial signal error protection, Indoor fan motor error protection Heating overload protection(High pressure control), Cooling overload protection Abnormal discharge temperature protection			
Installation data	Refrigerant piping size (O.D.)	mm	Liquid line : I/U φ 9.52 (3/8") Pipe φ 6.35(1/4")×0.8 O/U φ 6.35 (1/4") Gas line : φ 15.88 (5/8") Pipe φ 12.7(1/2")×0.8 O/U φ 12.7 (1/2")			
	Connecting method		Flare piping			
	Attached length of piping	m	—			
	Insulation for piping		Necessary (both Liquid & Gas lines)			
	Refrigerant line (one way) length	m	Max.30m			
	Vertical height diff. between O/U and I/U	m	Max.20m (Outdoor unit is higher) Max.20m (Outdoor unit is lower)			
Drain hose		Hose connectable with VP25(O.D.32) Hole size φ 20 x 5 pcs				
Drain pump, max lift height		mm	Built-in drain pump , 850			
Recommended breaker size		A	—			
L.R.A. (Locked rotor ampere)		A	5.0			
Interconnecting wires Size x Core number			1.5mm ² x 4 cores (Including earth cable) / Terminal block (Screw fixing type)			
IP number			IPX0 IPX4			
Standard accessories			Mounting kit, Drain hose Drain elbow, Drain hole grommet			
Option parts			—			
Notes (1) The data are measured at the following conditions.			The pipe length is 7.5m.			
Operation	Item	Indoor air temperature		Outdoor air temperature		Standards
		DB	WB	DB	WB	
Cooling		27°C	19°C	35°C	24°C	ISO5151-T1
Heating		20°C	—	7°C	6°C	ISO5151-H1
(2) This air-conditioner is manufactured and tested in conformity with the ISO.						
(3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.						
(4) Select the breaker size according to the own national standard.						
(5) The operation data indicate when the air-conditioner is operated at 230V 50Hz or 220V 60Hz.						

Item		Model	FDT90VNP1VH		
			Indoor unit FDT100VH	Outdoor unit FDC90VNP1	
Power source			1 Phase, 220-240V 50Hz / 220V 60Hz		
Operation data	Nominal cooling capacity (range)	kW	9.0 [1.9(Min.) - 9.0(Max.)]		
	Nominal heating capacity (range)	kW	9.0 [1.5(Min.) - 9.0(Max.)]		
	Power consumption	Cooling	kW	2.67	
		Heating		2.19	
	Max power consumption		4.19		
	Running current	Cooling	A	12.0 / 12.5	
		Heating		9.9 / 10.4	
	Inrush current, max current		5 , 18		
	Power factor	Cooling	%	97 / 97	
		Heating		96 / 96	
	EER	Cooling		3.37	
	COP	Heating		4.11	
	Sound power level	Cooling	dB(A)	62	
Heating		69			
Sound pressure level	Cooling	dB(A)	P-Hi : 47 Hi : 39 Me : 36 Lo : 30		
	Heating		P-Hi : 47 Hi : 39 Me : 36 Lo : 29		
Silent mode sound pressure level			—		
Exterior dimensions (Height x Width x Depth)		mm	Unit 298 × 840 × 840 Panel 35 × 950 × 950	750×880(+88)×340	
Exterior appearance (Munsell color)			Plaster white (6.8Y8.9/0.2) near equivalent	Stucco white (4.2Y7.5/1.1) near equivalent	
Net weight		kg	Unit 25 Panel 5	57	
Compressor type & Q'ty			—	RMT5118MDE2 (Twin rotary type)×1	
Compressor motor (Starting method)		kW	—	Direct line start	
Refrigerant oil (Amount, type)		L	—	0.675 (MA68)	
Refrigerant (Type, amount, pre-charge length)		kg	R410A 2.1 in outdoor unit (Incl. the amount for the piping of 15m)		
Heat exchanger			Louver fin & inner grooved tubing	M shape fin & inner grooved tubing	
Refrigerant control			Capillary tubes + Electronic expansion valve		
Fan type & Q'ty			Turbo fan ×1	Propeller fan ×1	
Fan motor (Starting method)		W	140 < Direct line start >	86 < Direct line start >	
Air flow	Cooling	m ³ /min	P-Hi : 37 Hi : 26 Me : 23 Lo : 17		
	Heating		63 49.5		
Available external static pressure		Pa	0		
Outside air intake			Possible		
Air filter, Quality / Quantity			Pocket plastic net ×1(Washable)		
Shock & vibration absorber			Rubber sleeve(for fan motor)	Rubber sleeve (for fan motor & compressor)	
Electric heater		W	—		
Operation control	Remote control		(Option) Wired : RC-EX3A, RC-E5, RCH-E3 Wireless : RCN-T-5AW-E2		
	Room temperature control		Thermostat by electronics		
	Operation display		—		
Safety equipments			Compressor overheat protection, Overcurrent protection Frost protection, Serial signal error protection, Indoor fan motor error protection Heating overload protection(High pressure control), Cooling overload protection Abnormal discharge temperature protection		
Installation data	Refrigerant piping size (O.D.)	mm	Liquid line : I/U φ 9.52 (3/8") Pipe φ 6.35(1/4")×0.8 O/U φ 6.35 (1/4") Gas line : φ 15.88 (5/8") Pipe φ 15.88(5/8")×1.0 O/U φ 15.88 (5/8")		
	Connecting method		Flare piping		
	Attached length of piping	m	—		
	Insulation for piping		Necessary (both Liquid & Gas lines)		
	Refrigerant line (one way) length	m	Max.30m		
	Vertical height diff. between O/U and I/U	m	Max.20m (Outdoor unit is higher) Max.20m (Outdoor unit is lower)		
Drain hose		Hose connectable with VP25(O.D.32)			
Drain pump, max lift height	mm	Built-in drain pump , 850			
Recommended breaker size	A	—			
L.R.A. (Locked rotor ampere)	A	5.0			
Interconnecting wires	Size x Core number	1.5mm ² x 4 cores (Including earth cable) / Terminal block (Screw fixing type)			
IP number		IPX0		IPX4	
Standard accessories		Mounting kit, Drain hose		Drain elbow, Drain hole grommet	
Option parts		—			

Notes (1) The data are measured at the following conditions.

The pipe length is 7.5m.

Item	Indoor air temperature		Outdoor air temperature		Standards
	DB	WB	DB	WB	
Cooling	27°C	19°C	35°C	24°C	ISO5151-T1
Heating	20°C	—	7°C	6°C	ISO5151-H1

(2) This air-conditioner is manufactured and tested in conformity with the ISO.

(3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.

(4) Select the breaker size according to the own national standard.

(5) The operation data indicate when the air-conditioner is operated at 230V 50Hz or 220V 60Hz.

Item		Model	FDT100VNP1VH		
			Indoor unit FDT100VH	Outdoor unit FDC100VNP	
Power source			1 Phase, 220-240V 50Hz / 220V 60Hz		
Operation data	Nominal cooling capacity (range)	kW	10.0 [2.8(Min.) - 11.2(Max.)]		
	Nominal heating capacity (range)	kW	11.2 [2.5(Min.) - 12.5(Max.)]		
	Power consumption	Cooling	kW	2.76	
		Heating		2.84	
	Max power consumption		4.60		
	Running current	Cooling	A	12.1 / 12.7	
		Heating		12.5 / 13.0	
	Inrush current, max current		5 , 21		
	Power factor	Cooling	%	99	
		Heating		99	
	EER	Cooling		3.62	
	COP	Heating		3.94	
Sound power level	Cooling	dB(A)	62		
	Heating		70		
Sound pressure level	Cooling	dB(A)	P-Hi : 47 Hi : 39 Me : 36 Lo : 30		
	Heating		P-Hi : 47 Hi : 39 Me : 36 Lo : 29		
Silent mode sound pressure level			Cooling:50 / Heating:49		
Exterior dimensions (Height x Width x Depth)		mm	Unit 298 × 840 × 840 Panel 35 × 950 × 950		
Exterior appearance (Munsell color)			Plaster white (6.8Y8.9/0.2) near equivalent		
Net weight		kg	Unit 25 Panel 5		
Compressor type & Q'ty			RMT5126MCE1 (Twin rotary type)×1		
Compressor motor (Starting method)		kW	Direct line start		
Refrigerant oil (Amount, type)		L	0.90 (MA68)		
Refrigerant (Type, amount, pre-charge length)		kg	R410A 2.55 in outdoor unit (Incl. the amount for the piping of 15m)		
Heat exchanger			Louver fin & inner grooved tubing		
Refrigerant control			Capillary tubes + Electronic expansion valve		
Fan type & Q'ty			Turbo fan ×1		
Fan motor (Starting method)		W	140 < Direct line start >		
Air flow	Cooling	m³/min	P-Hi : 37 Hi : 26 Me : 23 Lo : 17		
	Heating		75		
Available external static pressure		Pa	0		
Outside air intake			Possible		
Air filter, Quality / Quantity			Pocket plastic net ×1(Washable)		
Shock & vibration absorber			Rubber sleeve(for fan motor)		
Electric heater		W	-		
Operation control	Remote control		(Option) Wired : RC-EX3A, RC-E5, RCH-E3 Wireless : RCN-T-5AW-E2		
	Room temperature control		Thermostat by electronics		
	Operation display		-		
Safety equipments			Compressor overheat protection, Overcurrent protection Frost protection, Serial signal error protection, Indoor fan motor error protection Heating overload protection(High pressure control), Cooling overload protection Abnormal discharge temperature protection		
Installation data	Refrigerant piping size (O.D.)	mm	Liquid line : I/U φ 9.52 (3/8") Pipe φ 9.52(3/8")x0.8 O/U φ 9.52 (3/8") Gas line : φ 15.88 (5/8") Pipe φ 15.88(5/8")x1.0 O/U φ 15.88 (5/8")		
	Connecting method		Flare piping		
	Attached length of piping	m	-		
	Insulation for piping		Necessary (both Liquid & Gas lines)		
	Refrigerant line (one way) length	m	Max.30m		
	Vertical height diff. between O/U and I/U	m	Max.20m (Outdoor unit is higher) Max.20m (Outdoor unit is lower)		
Drain hose		Hose connectable with VP25(O.D.32) Hole size φ 20 x 3 pcs			
Drain pump, max lift height		mm	Built-in drain pump , 850		
Recommended breaker size		A	-		
L.R.A. (Locked rotor ampere)		A	5.0		
Interconnecting wires Size x Core number			1.5mm² x 4 cores (Including earth cable) / Terminal block (Screw fixing type)		
IP number			IPX0		
Standard accessories			Mounting kit, Drain hose		
Option parts			Edging		

Notes (1) The data are measured at the following conditions.

The pipe length is 7.5m.

Operation	Indoor air temperature		Outdoor air temperature		Standards
	DB	WB	DB	WB	
Cooling	27°C	19°C	35°C	24°C	ISO5151-T1
Heating	20°C	-	7°C	6°C	ISO5151-H1

(2) This air-conditioner is manufactured and tested in conformity with the ISO.

(3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.

(4) Select the breaker size according to the own national standard.

(5) The operation data indicate when the air-conditioner is operated at 230V 50Hz or 220V 60Hz.




3.2 EXTERIOR DIMENSIONS

- (1) Indoor units See page 12.
- (2) Outdoor units
Model FDC71VNP

Notes

- (1) It must not be surrounded by walls on the four sides.
- (2) The unit must be fixed with anchor bolts. An anchor bolt must not protrude more than 15mm.
- (3) Where the unit is subject to strong winds, lay it in such a direction that the blower outlet faces perpendicularly to the dominant wind direction.
- (4) Leave 1m or more space above the unit.
- (5) A wall in front of the blower outlet must not exceed the units height.
- (6) The model name label is attached on the lower right corner of the front panel.

Symbol	Content
A	Service valve connection (gas side) $\phi 12.7 (1/2")$ (Flare)
B	Service valve connection (liquid side) $\phi 6.35 (1/4")$ (Flare)
C	Pipe / cable draw-out hole
D	Drain discharge hole
E	Anchor bolt hole

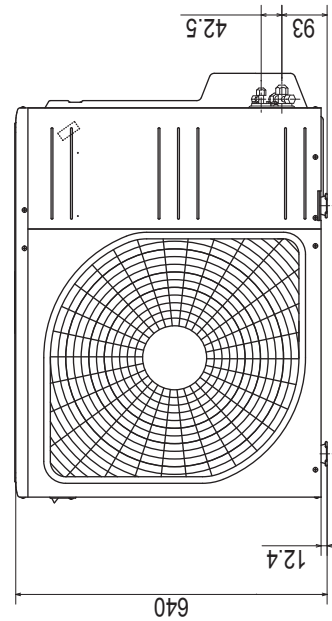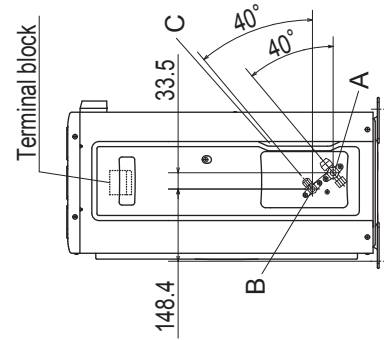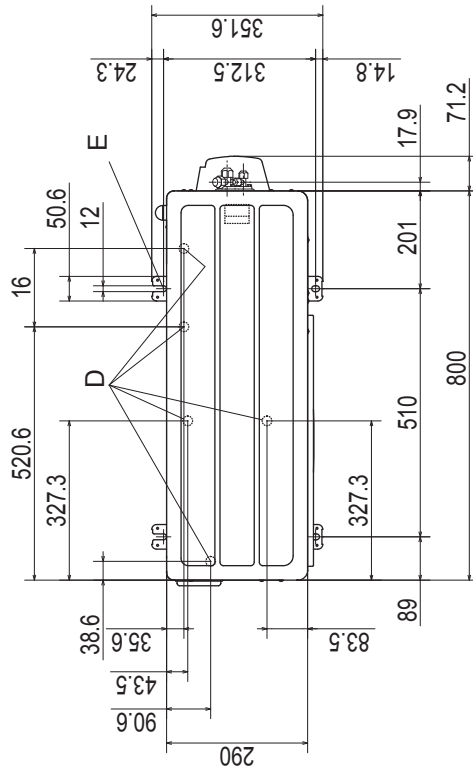

Minimum installation space



Examples of installation Dimensions	I	II	III	IV
L1	Open	280	280	180
L2	100	75	Open	Open
L3	100	80	80	80
L4	250	Open	250	Open

Unit:mm

PCA001Z713

Model FDC90VNP1

Symbol	Content
A	Service valve connection (gas side) φ 15.88 (5/8") (Flare)
B	Service valve connection (liquid side) φ 6.35 (1/4") (Flare)
C	Pipe / cable draw-out hole
D	Drain discharge hole φ 20 x 3 places
E	Anchor bolt hole M10 x 4 places

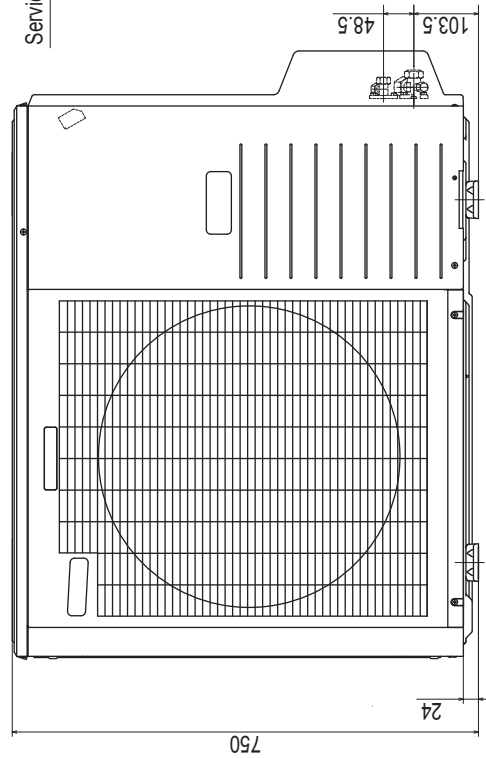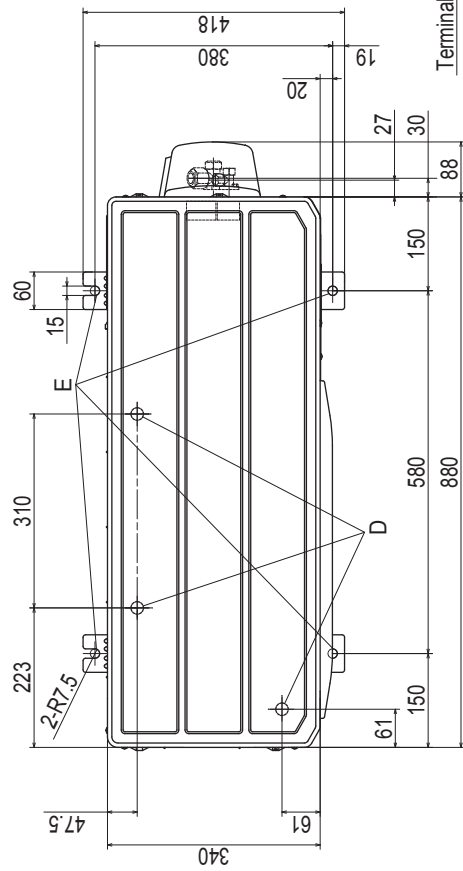


Terminal block

Service panel

Unit:mm


Notes

- (1) It must not be surrounded by walls on four sides.
- (2) The unit must be fixed with anchor bolts. An anchor bolt must not protrude more than 15mm.
- (3) Where the unit is subjected to strong winds, lay it in such a direction that the blower outlet faces perpendicularly to the dominant wind direction.
- (4) Leave 1m or more space above the unit.
- (5) A wall in front of the blower outlet must not exceed the unit's height.
- (6) The model name label is attached on the lower right corner of the front panel.

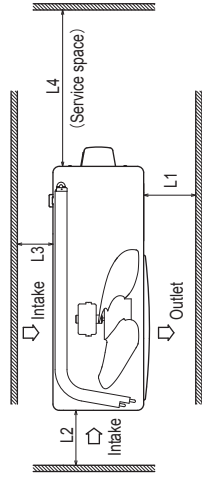

Minimum installation space

Examples of installation	I	II	III
Dimensions	Open	Open	500
L1	300	250	Open
L2	100	150	100
L3	250	250	250
L4	250	250	250

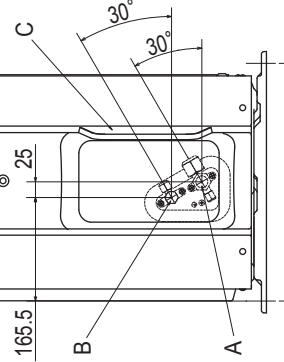


Model FDC100VNP


Notes

- (1) It must not be surrounded by walls on the four sides.
- (2) The unit must be fixed with anchor bolts. An anchor bolt must not protrude more than 15mm.
- (3) Where the unit is subject to strong winds, lay it in such a direction that the blower outlet face is perpendicular to the dominant wind direction.
- (4) Leave 1m or more space above the unit.
- (5) A wall in front of the blower outlet must not exceed the units height.
- (6) The model name label is attached on the service panel.

Symbol	Content
A	Service valve connection (gas side) $\phi 15.88 (5/8")$ (Flare)
B	Service valve connection (liquid side) $\phi 9.52 (3/8")$ (Flare)
C	Pipe/ cable draw-out hole
D	Drain discharge hole $\phi 20 \times 3$ places
E	Anchor bolt hole M10 \times 4 places
F	Cable draw-out hole $\phi 30 \times 3$ places

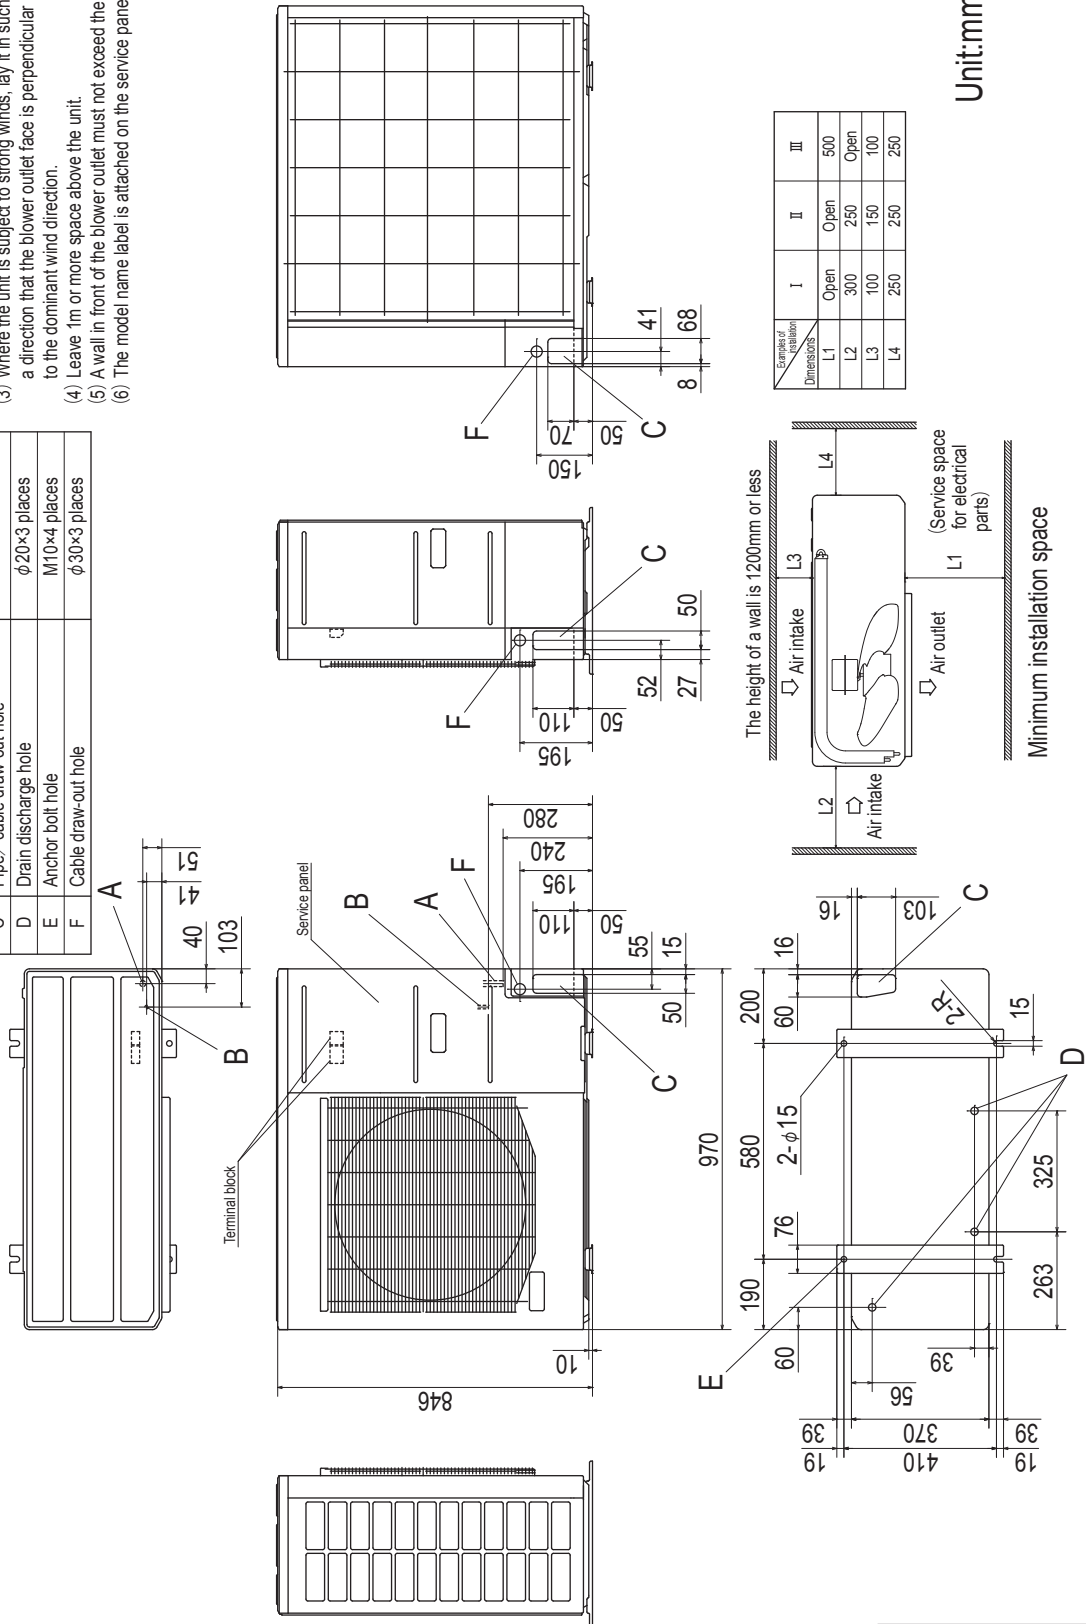


Unit:mm



3.3 ELECTRICAL WIRING

- (1) Indoor units See page 19.
- (2) Outdoor units
Model FDC71VNP

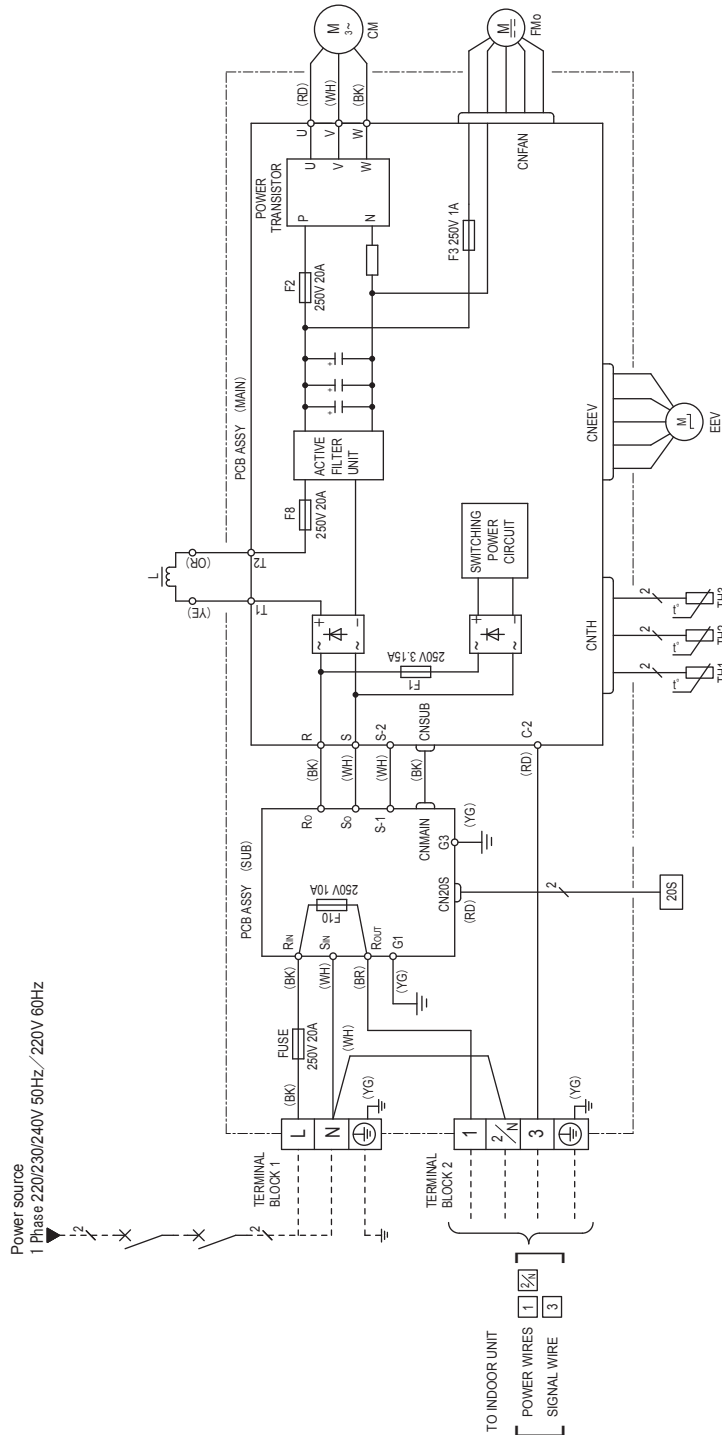

Power cable, indoor-outdoor connecting wires

Model	MAX running current (A)	Power cable size (mm ²)	Power cable length (m)	Indoor-outdoor wire size x number	Earth wire size (mm ²)
FDC71	14.5	2.0	15	1.5mm ² x 4	1.5

- The specifications shown in the above table are for units without heaters. For units with heaters, refer to the installation instructions or the construction instructions of the indoor unit.
- Switchgear of circuit breaker capacity which is calculated from MAX. over current should be chosen along the regulations in each country.
- The cable specifications are based on the assumption that a metal or plastic conduit is used with no more than three cables contained in a conduit and a voltage drop is 2%. For an installation falling outside of these conditions, please follow the internal cabling regulations. Adapt it to the regulation in effect in each country.

Meaning of marks


Item	Description
CM	Compressor motor
CN20S	Compressor
CNTH	Connector
CNEEV	Electric expansion valve (Coil)
CNFAN	Fan motor
EEV	Reactor
FMo	Heat exchanger temperature sensor (Outdoor unit)
L	Outdoor air temperature sensor
TH1	Discharge pipe temperature sensor
TH2	Solenoid coil for 4-way valve
TH3	
Z0S	

Color marks

Mark	Color
BK	Black
BR	Brown
OR	Orange
RD	Red
WH	White
YE	Yellow
YG	Yellow/Green

PCA001Z715

Model FDC90VNP1

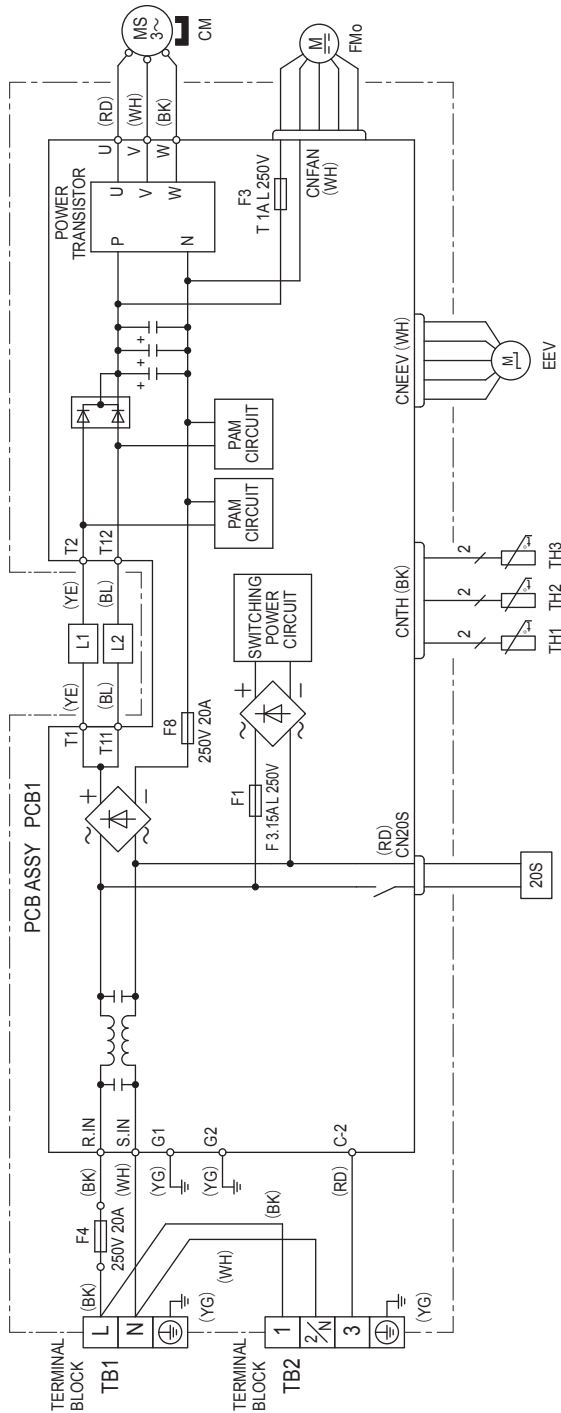

Power cable, indoor-outdoor connecting wires

Model	MAX running current (A)	Power cable size (mm ²)	indoor-outdoor wire size x number	Earth wire size (mm ²)
90	14.5	2.0	1.5mm ² x4	1.5

Meaning of marks


20S	4-WAY VALVE (COIL)
CM	COMPRESSOR MOTOR
EEV	ELECTRIC EXPANSION VALVE (COIL)
FM0	FAN MOTOR
L1,2	REACTOR
TH1	HEAT EXCHANGER TEMPERATURE SENSOR
TH2	OUTDOOR AIR TEMPERATURE SENSOR
TH3	DISCHARGE PIPE TEMPERATURE SENSOR

Color marks

Mark	Color	MARK	COLOR
BK	BLACK	YE	YELLOW
BL	BLUE	YG	YELLOW/ GREEN
RD	RED		
WH	WHITE		

- The specifications shown in the above table are for units without heaters. For units with heaters, refer to the installation instructions or the construction instructions of the indoor unit.
- Switchgear of circuit breaker capacity which is calculated from MAX. over current should be chosen along the regulations in each country.
- The cable specifications are based on the assumption that a metal or plastic conduit is used with no more than three cables contained in a conduit and a voltage drop is 2%. For an installation falling outside of these conditions, please follow the internal cabling regulations. Adapt it to the regulation in effect in each country.

Model FDC100VNP

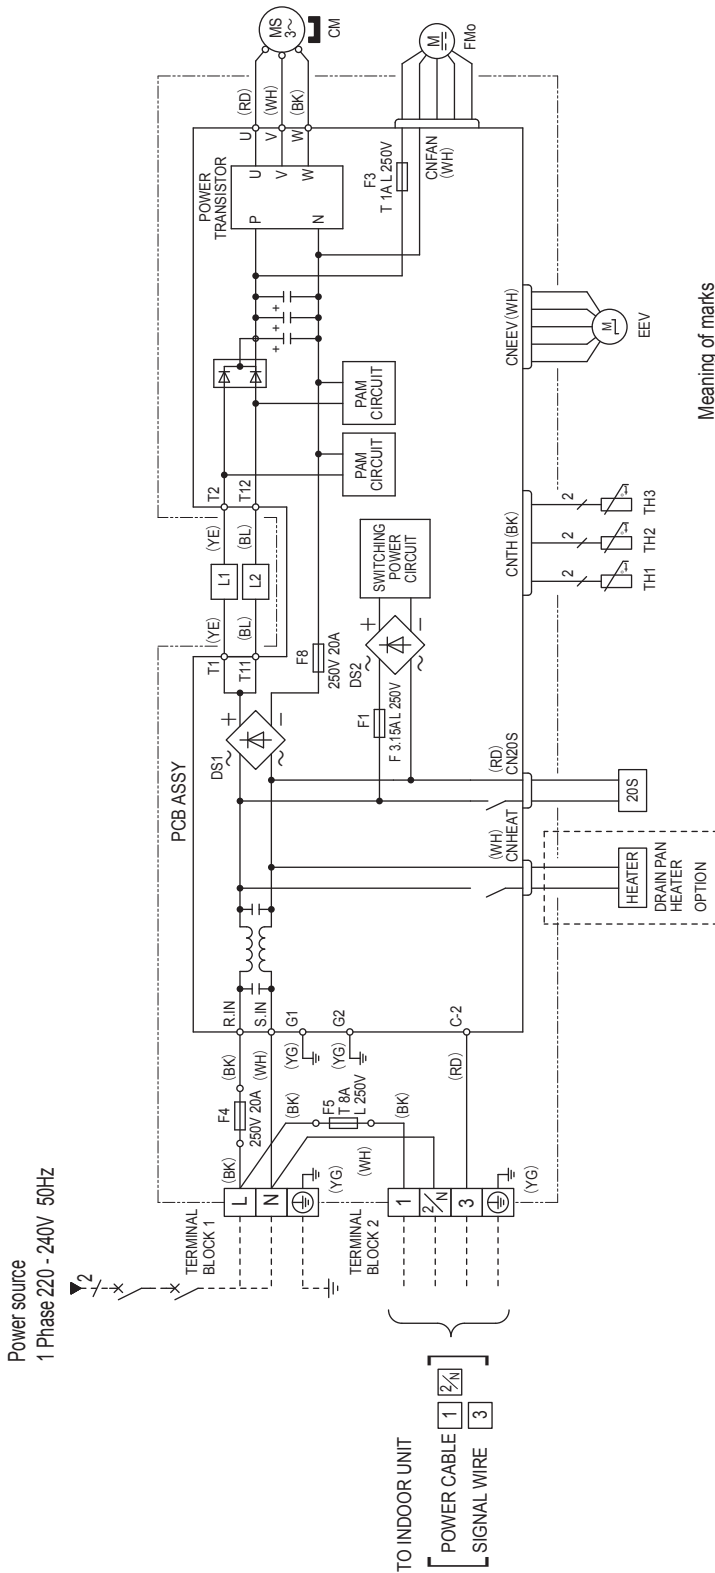

Power cable, indoor-outdoor connecting wires

MODEL NAME	MAX running current (A)	Power cable size (mm ²)	Power cable length (m)	indoor-outdoor wire size x number (mm)	Earth wire size (mm)
FDC100VNP	21	5.5	25	φ1.6 × 3	φ1.6

- The specifications shown in the above table are for units without heaters. For units with heaters, refer to the installation instructions or the construction instructions of the indoor unit.
- Switchgear of circuit breaker capacity which is calculated from MAX. over current should be chosen along the regulations in each country.
- The cable specifications are based on the assumption that a metal or plastic conduit is used with no more than three cables contained in a conduit and a voltage drop is 2%. For an installation falling outside of these conditions, please follow the internal cabling regulations. Adapt it to the regulation in effect in each country.

Color marks

Mark	Color
BK	Black
BL	Blue
RD	Red
WH	White
YE	Yellow
YG	Yellow / Green

Meaning of marks

Item	Description
20S	Solenoid coil for 4-way valve
CN20S	Connector
CNEEV	Compressor motor
CNFAN	Diode stack
CNHEAT	Electric expansion valve (Coil)
CNTH	Fan motor
CM	Reactor
DS1,2	Heat exchanger temperature sensor
EEV	Outdoor air temperature sensor
FMo	Discharge pipe temperature sensor
L1,2	Jumper (※)
TH1	
TH2	
TH3	
J2	

Note(1) ※ By cutting J2, the operation of cooling start in heating mode is disablement.

PCA001Z788

3.4 NOISE LEVEL

Notes(1) The data are based on the following conditions.

Ambient air temperature: Indoor unit 27°CWB. Outdoor unit 35°CDB.

(2) The data in the chart are measured in an anechoic room.

(3) The noise levels measured in the field are usually higher than the data because of reflection.

(1) Indoor units See page 23.

(2) Outdoor units



Measured based on ISO-T1, JIS B 8616

Mike position: at highest noise level in position as mentined below



Distance from front side 1m

Height 1m



Model FDC71VNP

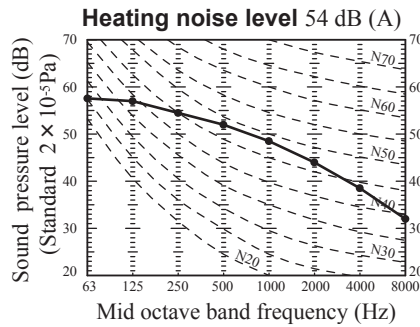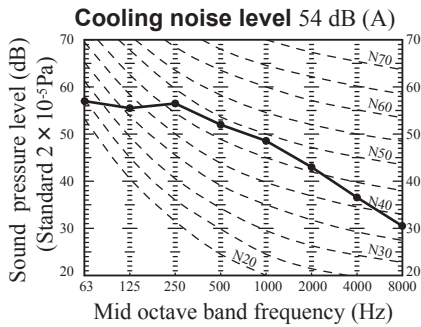

Model FDC90VNP1

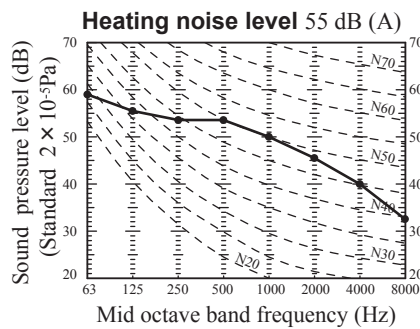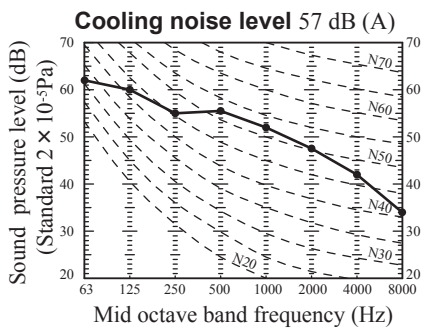

Model FDC100VNP

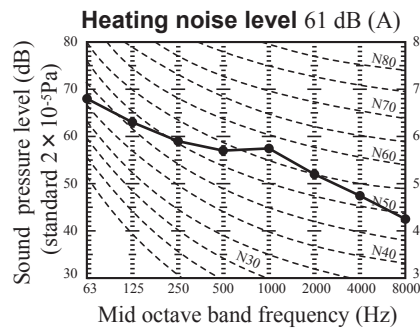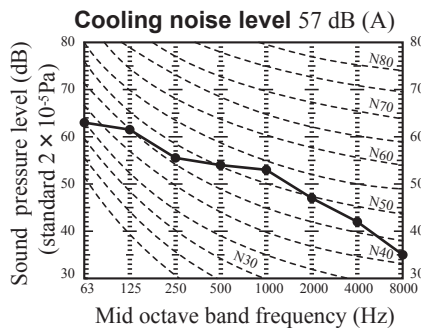


3.5 TEMPERATURE AND VELOCITY DISTRIBUTION


See page 26 of 1.5 chapter.

3.6 PIPING SYSTEM


Model FDT71

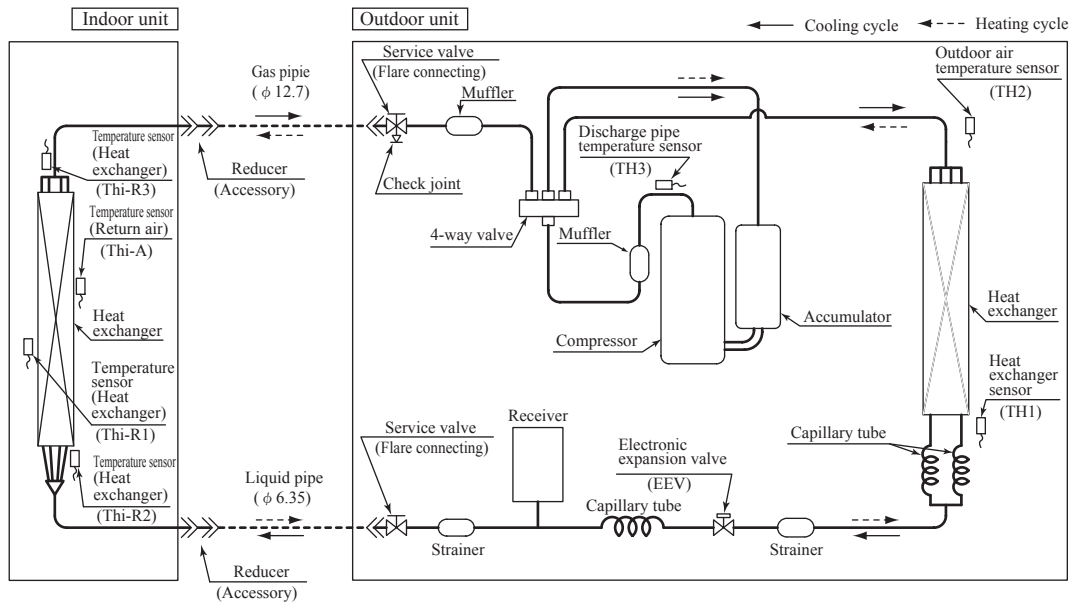

Model FDT90

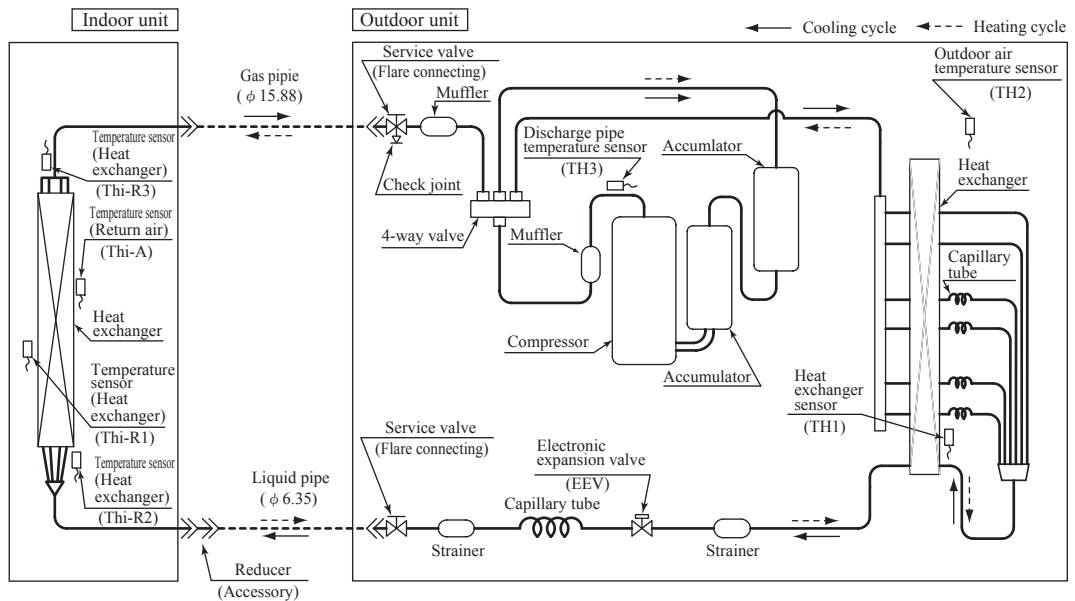

Model FDT100

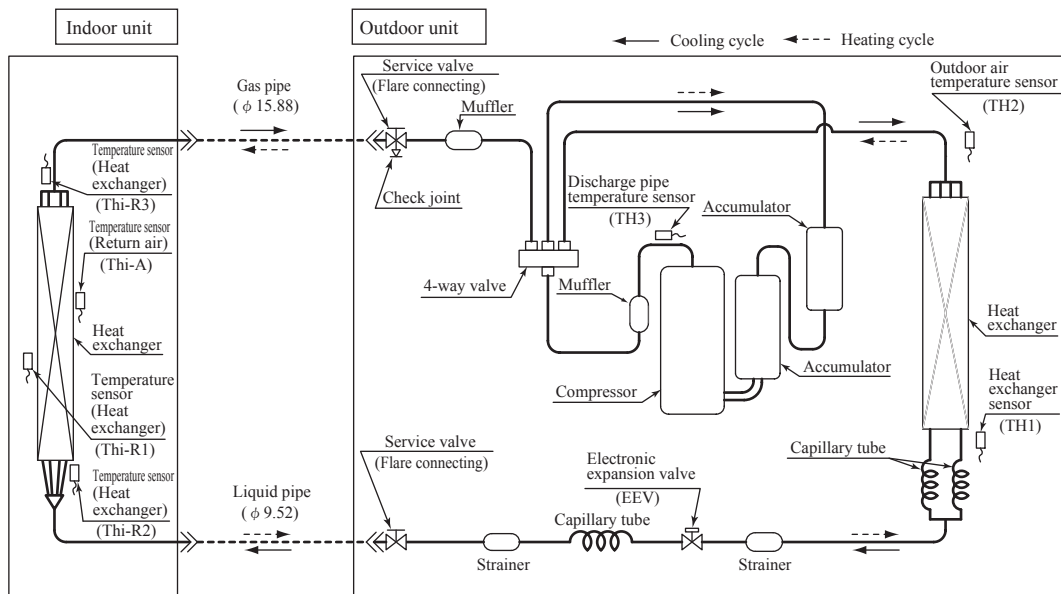

Preset point of the protective devices

Parts name	Mark	Equipped unit	All models
Temperature sensor (for protection overloading in heating)	Thi-R	Indoor unit	OFF 63°C , ON 56°C
Temperature sensor (for frost prevention)			OFF 1.0°C , ON 10°C
Temperature sensor (for protection high pressure in cooling)	TH1	Outdoor unit	OFF 63°C , ON 53°C
Temperature sensor (for detecting discharge pipe temperature)	TH3		OFF 115°C , ON 95°C

3.7 RANGE OF USAGE & LIMITATIONS

Operating temperature range		See next page.
		When used below -5°C, install a snow hood (prepared on site).
Recommendable area to install		Considering to get sufficient heating capacity, the area where the averaged lowest ambient air temperature in day time during winter is above 0°C, and it has no accumulation of snow.
Installation site		The limitations of installation space are shown in the page for exterior dimensions. Install the indoor unit at least 2.5m higher than the floor surface.
Temperature and humidity conditions surrounding the indoor unit (Note 2)		Dew point temperature : 28°C or less, relative humidity : 80% or less
Limitations on unit and piping installation		See page 195.
Compressor ON-OFF cycling	Cycle time	10 minutes or more (from OFF to OFF) or (from ON to ON)
	Stop time	3 minutes or more
Power source	Voltage range	Rating \pm 10%
	Voltage drop at start-up	Min.85% of rating
	Phase-to-phase imbalance	3% or less

Note 1. Do not install the unit in places which :

- 1) Flammable gas may leak.
- 2) Carbon fiber, metal particles, powder, etc. are floating.
- 3) Cosmetic or special sprays are used frequently.
- 4) Exposed to oil splashes or steam (e.g. kitchen and machine plant).
- 5) Exposed to sea breeze (e.g. coastal area) or calcium chloride (e.g. snow melting agent).
- 6) Exposed to ammonia substance (e.g. organic fertilizer).
- 7) Matters affecting devices, such as sulfuric gas, chlorine gas, acid, alkali, etc. may generate or accumulate.
- 8) Chimney smoke is hanging.
- 9) Sucking the exhaust gas from heat exchanger.
- 10) Adjacent to equipment generating electromagnetic waves or high frequency waves.
- 11) There is light beams that affect the receiving device of indoor unit in case of the wireless specification.
- 12) Snow falls heavily.
- 13) At an elevation of 1000 meters or higher.
- 14) On mobile machine (e.g. vehicle, ship, etc.)
- 15) Splashed with water to indoor unit (e.g. laundry room).


Note 2. If ambient temperature and humidity exceed the above conditions, add polyurethane foam insulation on the outer plate (10mm or thicker) of indoor unit.

Note 3. Both gas and liquid pipes need to be covered with 20mm or thicker heat insulation materials at the place where relative humidity exceeds 70%.


PJF000Z317

Operating temperature range

■ Cooling

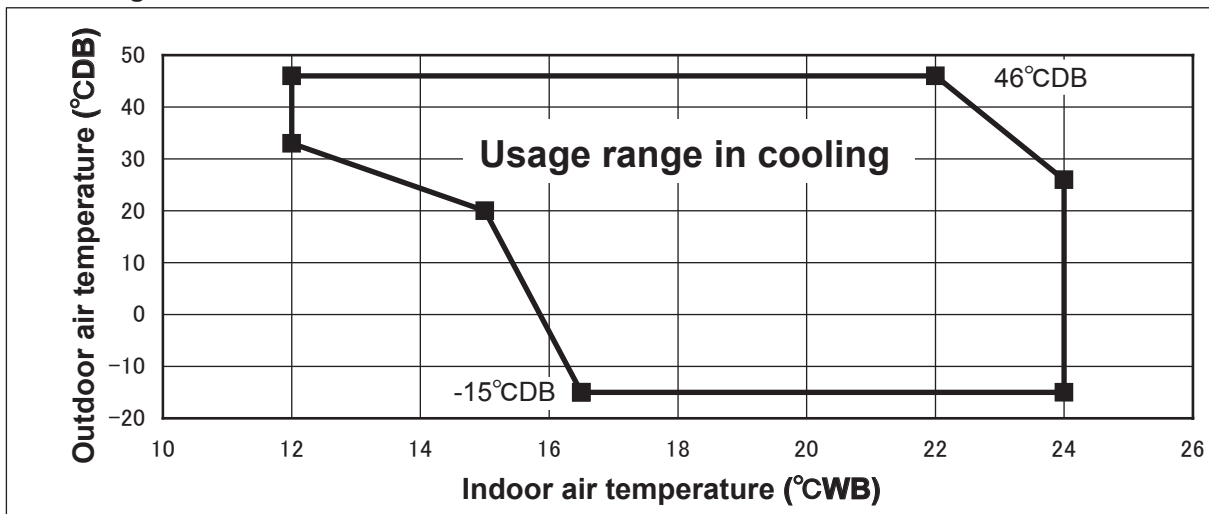

■ Heating

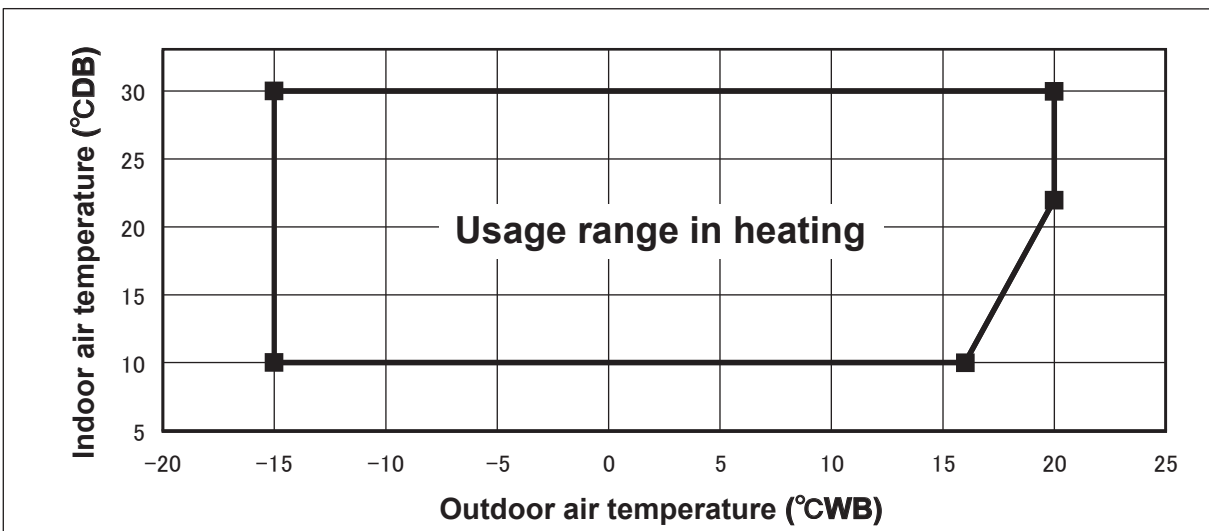

Decline in cooling and heating capacity or operation stop may occur when the outdoor unit is installed in places where natural wind can increase or decrease its design air flow rate.

PJF000Z317

“CAUTION” Cooling operation under low outdoor air temperature conditions

PAC models can be operated in cooling mode at low outdoor air temperature condition within above temperature range. However in case of severely low temperature conditions if the following precaution is not observed, it may not be operated in spite of operable temperature range mentioned above and cooling capacity may not be established under certain conditions.

[Precaution]

In case of severely low temperature condition

- 1) Install the outdoor unit at the place where strong wind cannot blow directly into the outdoor unit.
- 2) If there is no installation place where can prevent strong wind from directly blowing into the outdoor unit, mount the flex flow adapter (prepared as option part) or like such devices onto the outdoor unit in order to divert the strong wind.

[Reason]

Under the low outdoor air temperature conditions of -5°C or lower, the outdoor fan is controlled at lower or lowest speed by outdoor fan control, but if strong wind directly blow into the outdoor unit, the outdoor heat exchanger temperature will drop more.

This makes high and low pressures to drop as well. This low pressure drop makes the indoor heat exchanger temperature to drop and will activate anti-frost control at indoor heat exchanger at frequent intervals, that cooling operation may not be established for any given time.

Limitation on unit and piping installation				
Descriptions		Model for outdoor unit	Dimensional limitations	Marks appearing in the drawing
One-way pipe length		FDC71VNP FDC90VNP1 FDC100VNP	$\leq 30\text{m}$	L
Elevation difference between indoor and outdoor unit	When the outdoor unit is positioned higher		$\leq 20\text{m}$	H
	When the outdoor unit is positioned lower		$\leq 20\text{m}$	

The diagram illustrates the piping installation between an outdoor unit and an indoor unit. The outdoor unit is shown as a 3D rectangular box on the left, and the indoor unit is a 2D rectangular box on the right. A horizontal line represents the main pipe connecting the two units. A vertical line labeled 'H' indicates the elevation difference between the units. A curved line labeled 'L' indicates the one-way pipe length from the outdoor unit to the indoor unit.

PJF000Z317

3.8 SELECTION CHART

Correct the cooling and heating capacity in accordance with the operating conditions. The net cooling and heating capacity can be obtained in the following way.

Net capacity = Capacity shown in the capacity tables (3.8.1) × Correction factors shown in the table (3.8.2) (3.8.3) (3.8.4).

Caution: In case that the cooling operation during low outdoor air temperature below -5°C is expected, install the outdoor unit where it is not influenced by natural wind. Otherwise protection control by low pressure will be activated much more frequently and it will cause insufficient capacity or breakdown of the compressor in worst case.

3.8.1 Capacity tables

Model **FDT71VNPVH** Indoor unit **FDT71VH** Outdoor unit **FDC71VNP**

Cooling Mode (kW)

Outdoor air temp. °CDB	Indoor air temperature																
	18 °CDB		21 °CDB		23 °CDB		26 °CDB		27 °CDB		28 °CDB		31 °CDB		33 °CDB		
	12 °CWB	14 °CWB	16 °CWB	18 °CWB	19 °CWB	20 °CWB	22 °CWB	24 °CWB	TC	SHC	TC	SHC	TC	SHC	TC	SHC	
11				4.71	4.62	5.34	5.23	5.65	5.54	5.78	5.64	6.04	5.92	6.30	5.87		
13				5.00	4.90	5.58	5.47	5.87	5.75	5.99	5.69	6.23	6.07	6.48	5.90		
15				5.30	5.19	5.83	5.71	6.09	5.83	6.20	5.74	6.43	6.11	6.66	5.93		
17				5.59	5.37	6.07	5.94	6.31	5.89	6.41	5.79	6.62	6.15	6.83	5.96		
19				5.73	5.41	6.13	5.96	6.34	5.89	6.48	5.81	6.76	6.18	7.04	5.99		
21				5.80	5.43	6.20	5.98	6.36	5.90	6.54	5.82	6.89	6.20	7.25	6.03		
23				6.23	5.57	6.63	6.10	6.81	6.02	6.96	5.93	7.26	6.28	7.56	6.09		
25			6.26	5.94	6.67	5.71	7.07	6.22	7.26	6.14	7.38	6.03	7.63	6.36	7.88	6.14	
27			6.72	6.11	7.11	5.86	7.51	6.35	7.71	6.26	7.91	6.17	8.31	6.51			
29			6.60	6.06	6.98	5.81	7.36	6.31	7.56	6.22	7.75	6.12	8.13	6.47			
31			6.47	6.02	6.85	5.77	7.22	6.27	7.40	6.18	7.59	6.08	7.95	6.43			
33	6.01	5.54	6.27	5.95	6.72	5.73	7.08	6.22	7.25	6.14	7.43	6.04	7.77	6.39			
35	5.89	5.49	6.15	5.90	6.59	5.69	6.94	6.18	7.10	6.09	7.26	6.00	7.59	6.35			
37	5.62	5.39	5.86	5.74	6.27	5.58	6.59	6.09	6.75	6.00	6.91	5.91	7.23	6.27			
39	5.35	5.24	5.57	5.46	5.95	5.48	6.25	5.99	6.40	5.91	6.55	5.83	6.86	6.20			
41	5.08	4.97	5.29	5.18	5.62	5.38	5.90	5.78	6.05	5.82	6.20	5.74	6.50	6.12			
43	4.99	4.89	5.18	5.07	5.47	5.34	5.73	5.62	5.88	5.77	6.04	5.71	6.35	6.09			

Heating Mode : HC (kW)

Outdoor air temp. °CDB	°CWB	Indoor air temperature °CDB				
		16	18	20	22	24
-19.8	-20					
-17.7	-18					
-15.7	-16					
-13.5	-14	4.23	4.21	4.19	4.17	4.14
-11.5	-12	4.35	4.33	4.31	4.29	4.26
-9.5	-10	4.47	4.45	4.43	4.40	4.38
-7.5	-8	4.59	4.57	4.55	4.52	4.50
-5.5	-6	4.94	4.92	4.89	4.87	4.84
-3.0	-4	5.29	5.26	5.24	5.21	5.18
-1.0	-2	5.64	5.61	5.58	5.55	5.52
1.0	0	5.99	5.96	5.93	5.89	5.86
2.0	1	6.16	6.13	6.10	6.06	6.03
3.0	2	6.37	6.33	6.30	6.26	6.22
5.0	4	6.77	6.74	6.70	6.66	6.62
7.0	6	7.18	7.14	7.10	7.05	7.01
9.0	8	7.28	7.24	7.19	7.14	7.09
11.5	10	7.38	7.33	7.29	7.23	7.17
13.5	12	7.34	7.29	7.24	7.18	7.12
15.5	14	7.30	7.25	7.19	7.13	7.07
16.5	16	7.28	7.23	7.17	7.10	7.04

PJF000Z587

Model **FDT90VNP1VH** Indoor unit **FDT100VH** Outdoor unit **FDC90VNP1**

Cooling Mode (kW)

Outdoor air temp. °CDB	Indoor air temperature																
	18 °CDB		21 °CDB		23 °CDB		26 °CDB		27 °CDB		28 °CDB		31 °CDB		33 °CDB		
	18 °CWB	14 °CWB	16 °CWB	18 °CWB	19 °CWB	20 °CWB	22 °CWB	24 °CWB	TC	SHC	TC	SHC	TC	SHC	TC	SHC	
11				8.35	7.28	8.93	7.97	9.21	7.87	9.59	7.78	10.34	8.30	11.09	8.06		
13				8.42	7.30	8.94	7.98	9.20	7.87	9.55	7.77	10.25	8.28	10.96	8.04		
15				8.48	7.32	8.96	7.98	9.19	7.86	9.52	7.77	10.17	8.26	10.83	8.02		
17				8.54	7.34	8.97	7.98	9.18	7.86	9.49	7.76	10.09	8.25	10.70	7.99		
19				8.51	7.33	8.96	7.98	9.19	7.86	9.48	7.76	10.06	8.24	10.63	7.98		
21				8.32	7.27	8.96	7.98	9.20	7.87	9.47	7.75	10.02	8.23	10.57	7.97		
23				8.52	7.33	9.04	8.00	9.21	7.87	9.47	7.76	10.00	8.23	10.52	7.96		
25			8.10	7.68	8.72	7.40	9.13	8.03	9.23	7.87	9.48	7.76	9.97	8.22	10.47	7.96	
27			8.38	7.78	8.92	7.46	9.22	8.05	9.24	7.88	9.27	7.71	9.31	8.09			
29			8.25	7.73	8.77	7.41	9.11	8.02	9.18	7.86	9.26	7.70	9.41	8.11			
31			8.11	7.69	8.62	7.36	9.00	7.99	9.12	7.85	9.25	7.70	9.50	8.13			
33	7.53	7.07	7.88	7.61	8.46	7.32	8.88	7.96	9.06	7.83	9.24	7.70	9.59	8.15			
35	7.41	7.02	7.74	7.56	8.31	7.27	8.77	7.93	9.00	7.82	9.23	7.70	9.68	8.16			
37	7.15	6.92	7.47	7.32	8.00	7.18	8.44	7.84	8.66	7.73	8.88	7.62	9.33	8.09			
39	6.89	6.75	7.20	7.05	7.70	7.08	8.11	7.75	8.32	7.65	8.54	7.54	8.97	8.03			
41	6.63	6.49	6.92	6.78	7.39	6.99	7.77	7.62	7.98	7.57	8.20	7.46	8.62	7.96			
43	6.36	6.24	6.65	6.52	7.08	6.91	7.44	7.29	7.65	7.49	7.85	7.39	8.26	7.89			

Heating Mode : HC (kW)

Outdoor air temp. °CDB	°CWB	Indoor air temperature °CDB				
		16	18	20	22	24
-19.8	-20					
-17.7	-18					
-15.7	-16					
-13.5	-14	5.38	5.35	5.32	5.29	5.26
-11.5	-12	5.61	5.58	5.55	5.52	5.49
-9.5	-10	5.84	5.81	5.78	5.74	5.71
-7.5	-8	6.07	6.04	6.00	5.97	5.93
-5.5	-6	6.25	6.21	6.17	6.13	6.09
-3.0	-4	6.42	6.37	6.33	6.29	6.25
-1.0	-2	6.59	6.54	6.50	6.45	6.41
1.0	0	6.76	6.71	6.66	6.61	6.56
2.0	1	6.84	6.79	6.74	6.69	6.64
3.0	2	7.30	7.25	7.19	7.14	7.08
5.0	4	8.22	8.16	8.10	8.04	7.97
7.0	6	9.13	9.07	9.00	8.93	8.86
9.0	8	9.61	9.54	9.47	9.39	9.32
11.5	10	10.09	10.01	9.93	9.85	9.77
13.5	12	10.26	10.18	10.10	10.01	9.93
15.5	14	10.42	10.34	10.26	10.17	10.08
16.5	16	10.51	10.42	10.34	10.25	10.16

PJF000Z587

Notes(1) These data show average statuses.

Depending on the system control, there may be ranges where the operation is not conducted continuously.

These data show the case where the operation frequency of a compressor is fixed.(Cooling only)

(2) Capacities are based on the following conditions.

Corresponding refrigerant piping length : 7.5m

Level difference of Zero.

(3) Symbols are as follows.

TC : Total cooling capacity (kW)

SHC : Sensible heat capacity (kW)

HC : Heating capacity (kW)

Model **FDT100VNP1VH** Indoor unit FDT100VH Outdoor unit FDC100VNP

Cooling Mode

(kW)

Heating Mode : HC

(kW)

Outdoor air temp.	Indoor air temperature															
	18 °CDB		21 °CDB		23 °CDB		26 °CDB		27 °CDB		28 °CDB		31 °CDB		33 °CDB	
	12 °CWB		14 °CWB		16 °CWB		18 °CWB		19 °CWB		20 °CWB		22 °CWB		24 °CWB	
°CDB	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC
11					9.71	7.71	10.21	8.33	10.46	8.19	10.66	8.04	11.06	8.45	11.46	8.12
13					9.71	7.71	10.21	8.33	10.46	8.19	10.66	8.04	11.06	8.45	11.46	8.12
15					9.71	7.71	10.21	8.33	10.46	8.19	10.66	8.04	11.06	8.45	11.46	8.12
17					9.71	7.71	10.21	8.33	10.46	8.19	10.66	8.04	11.06	8.45	11.46	8.12
19					9.65	7.69	10.18	8.32	10.45	8.19	10.66	8.04	11.08	8.45	11.51	8.13
21					9.59	7.67	10.16	8.31	10.44	8.19	10.67	8.04	11.11	8.46	11.56	8.14
23					9.60	7.67	10.17	8.32	10.46	8.19	10.69	8.05	11.14	8.46	11.60	8.15
25			9.03	8.01	9.60	7.67	10.19	8.32	10.48	8.20	10.71	8.05	11.17	8.47	11.63	8.16
27			9.02	8.01	9.61	7.68	10.20	8.33	10.51	8.21	10.81	8.08	11.41	8.52		
29			8.92	7.97	9.49	7.64	10.08	8.29	10.38	8.17	10.68	8.05	11.28	8.49		
31			8.81	7.93	9.38	7.60	9.96	8.26	10.25	8.14	10.55	8.01	11.14	8.46		
33	8.24	7.34	8.61	7.86	9.26	7.57	9.83	8.22	10.13	8.11	10.42	7.98	11.01	8.43		
35	8.08	7.28	8.47	7.81	9.14	7.53	9.71	8.19	10.00	8.07	10.29	7.95	10.87	8.41		
37	7.85	7.19	8.23	7.73	8.84	7.43	9.37	8.09	9.67	7.99	9.96	7.87	10.54	8.34		
39	7.62	7.10	7.98	7.64	8.54	7.34	9.03	8.00	9.33	7.90	9.62	7.79	10.21	8.27		
41	7.39	7.01	7.74	7.56	8.24	7.25	8.70	7.91	8.99	7.81	9.29	7.71	9.89	8.20		
43	7.16	6.93	7.10	6.96	7.54	7.04	7.93	7.71	8.66	7.73	8.47	7.52	9.00	8.03		

Outdoor air temp.	Indoor air temperature						
	°CDB		°CDB				
	°CDB	°CWB	16	18	20	22	24
-19.8	-20						
-17.7	-18						
-15.7	-16						
-13.5	-14	6.26	6.23	6.21	6.19	6.16	
-11.5	-12	6.36	6.34	6.31	6.29	6.26	
-9.5	-10	6.47	6.44	6.42	6.39	6.36	
-7.5	-8	6.58	6.55	6.52	6.49	6.46	
-5.5	-6	7.16	7.13	7.10	7.06	7.02	
-3.0	-4	7.75	7.71	7.67	7.63	7.59	
-1.0	-2	8.33	8.29	8.24	8.20	8.15	
1.0	0	8.92	8.87	8.81	8.77	8.72	
2.0	1	9.21	9.15	9.10	9.05	9.00	
3.0	2	9.63	9.58	9.52	9.47	9.41	
5.0	4	10.48	10.42	10.36	10.30	10.24	
7.0	6	11.33	11.26	11.20	11.14	11.07	
9.0	8	11.49	11.42	11.36	11.29	11.22	
11.5	10	11.64	11.58	11.51	11.44	11.36	
13.5	12	10.42	10.35	10.29	10.22	10.14	
15.5	14	9.20	9.13	9.06	8.99	8.92	
16.5	16	8.58	8.52	8.45	8.38	8.31	

- Notes(1) These data show average statuses.
 Depending on the system control, there may be ranges where the operation is not conducted continuously.
 These data show the case where the operation frequency of a compressor is fixed.(Cooling only)
- (2) Capacities are based on the following conditions.
 Corresponding refrigerant piping length :7.5m
 Level difference of Zero.
- (3) Symbols are as follows.
 TC : Total cooling capacity (kW)
 SHC : Sensible heat capacity (kW)
 HC : Heating capacity (kW)




[References data]


Capacity variation against outdoor and indoor temperature at the maximum compressor speed capacity compensation coefficient shows the ratio to nominal capacity.

(I) Model FDC71VNP

① Cooling

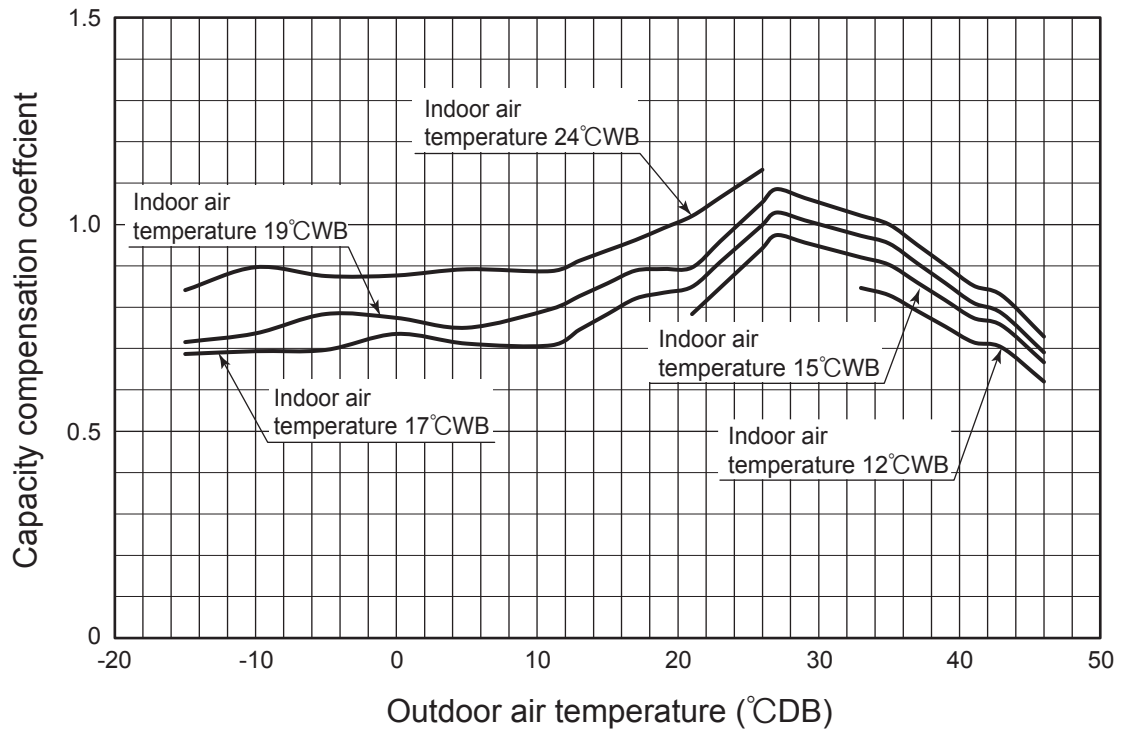


② Heating

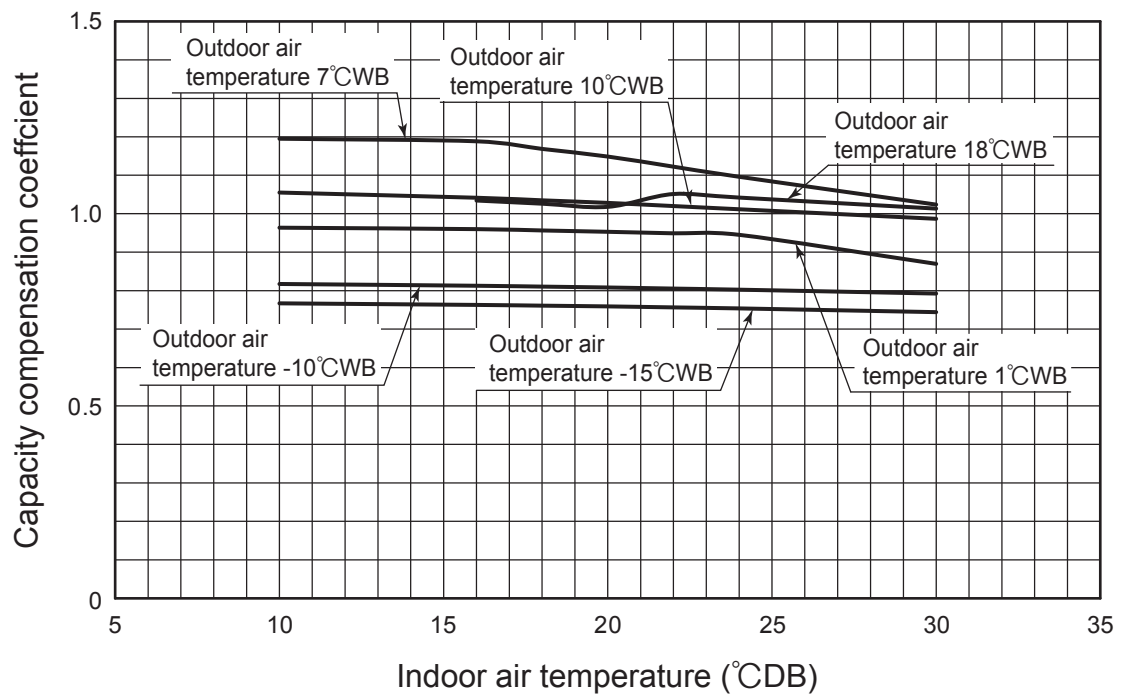


(II) Model FDC90VNP1

① Cooling

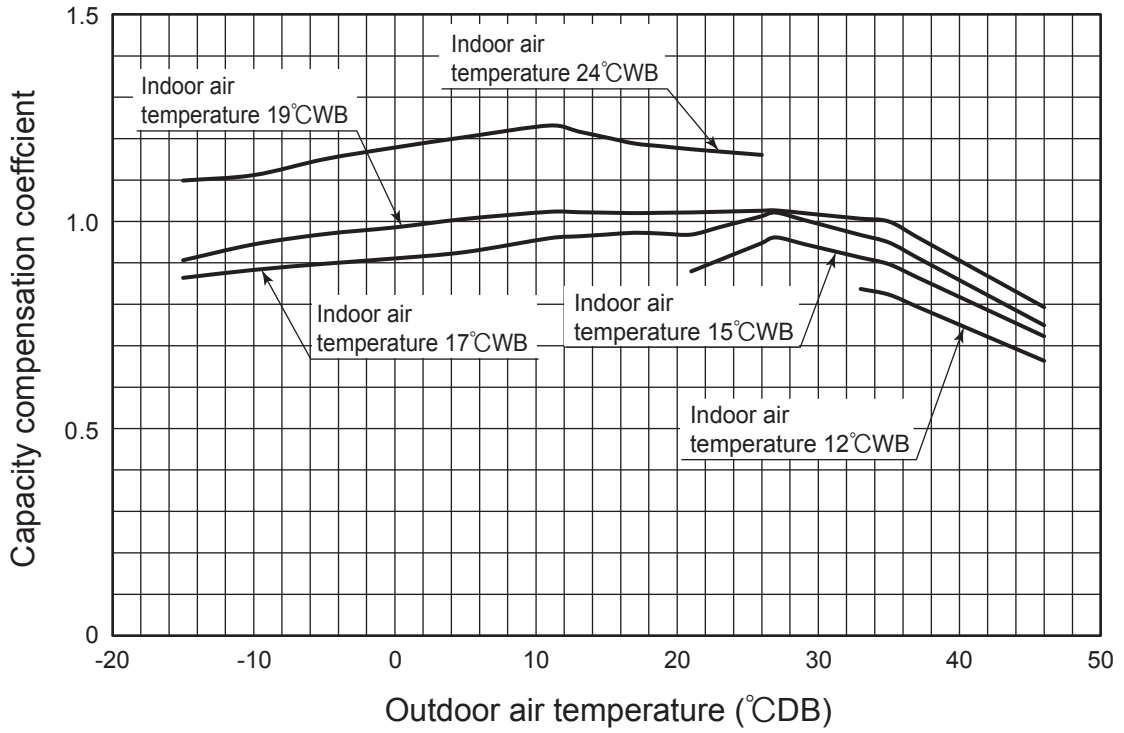


② Heating

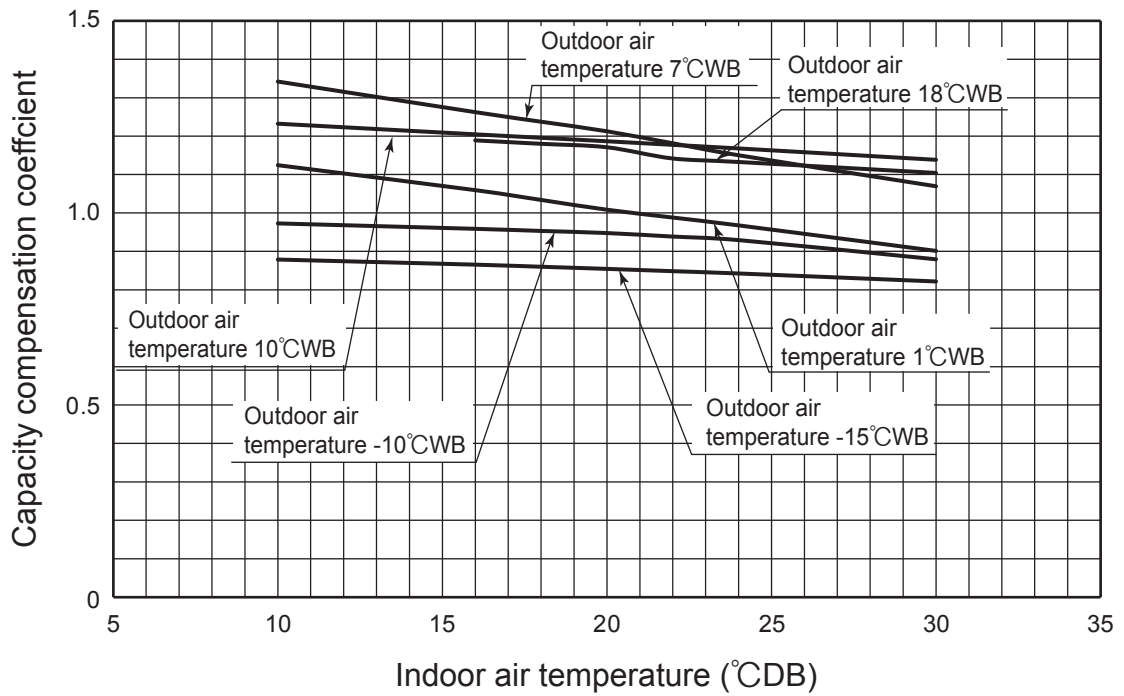


(III) Model FDC100VNP

① Cooling

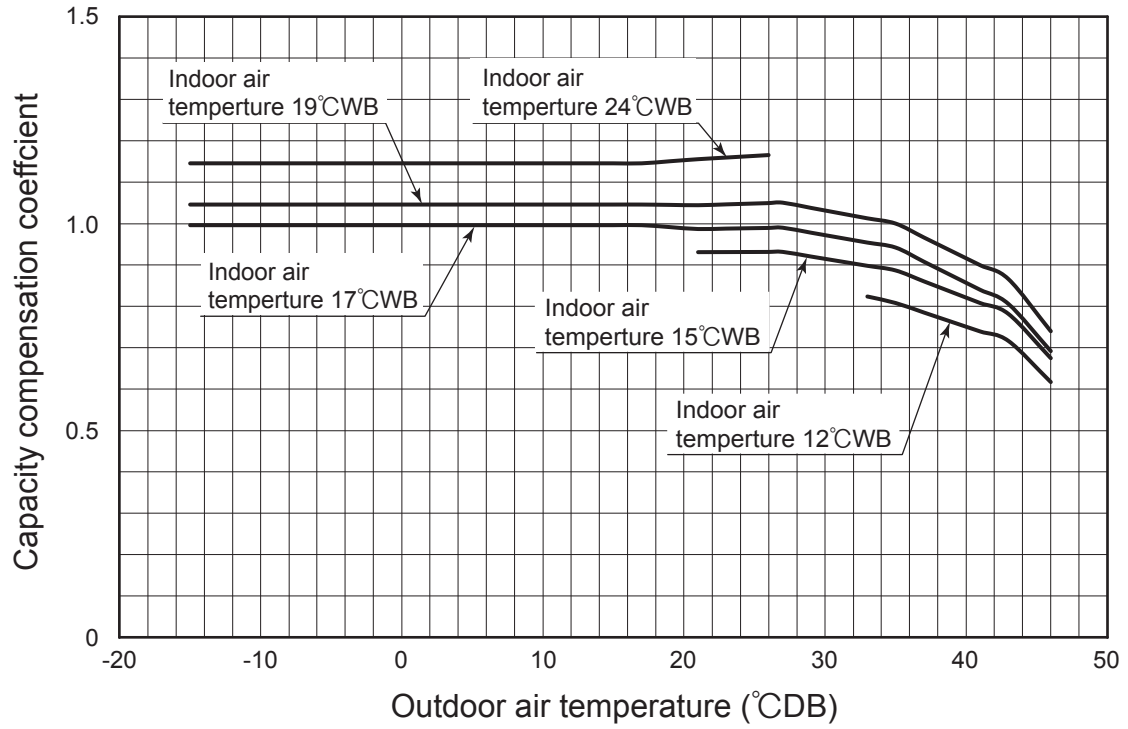

② Heating

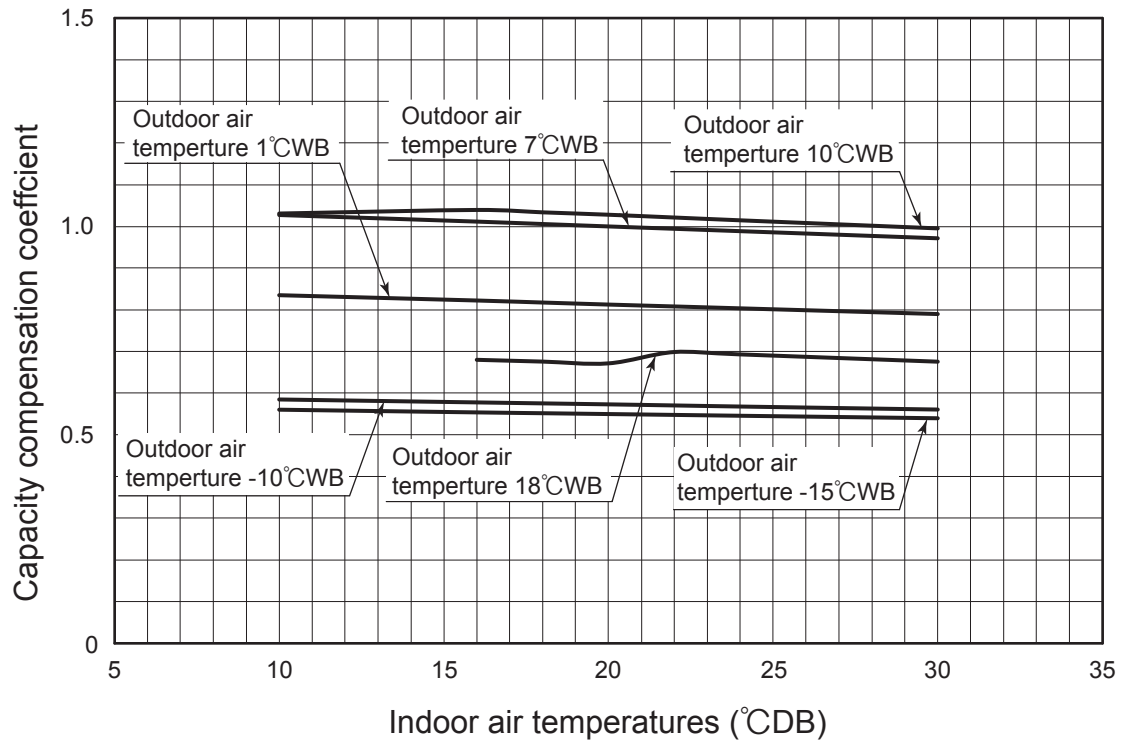

3.8.2 Correction of cooling and heating capacity in relation to air flow rate control (Fan speed)

Fan speed		P-Hi	Hi	Me	Lo
Coefficient	Cooling	1.00	0.95	0.93	0.90
	Heating	1.00	0.97	0.96	0.94

3.8.3 Correction of cooling and heating capacity in relation to one way length of refrigerant piping

It is necessary to correct the cooling and heating capacity in relation to the one way equivalent piping length between the indoor and outdoor units.

Equivalent piping length (m)	7.5	10	15	20	25	30
Cooling	1	0.99	0.97	0.96	0.94	0.92
Heating	1	1	1	1	1	1

3.8.4 Height difference between the indoor unit and outdoor unit

When the outdoor unit is located below indoor units in cooling mode, or when the outdoor unit is located above indoor units in heating mode, the correction coefficient mentioned in the below table should be subtracted from the value in the above table.

Height difference between the indoor unit and outdoor unit in the vertical height difference	5m	10m	15m	20m
Adjustment coefficient	0.99	0.98	0.97	0.96

Piping length limitations

Item	Model	All models
Max. one way piping length		30m
Max. vertical height difference		Outdoor unit is higher 20m Outdoor unit is lower 20m

Note (1) Values in the table indicate the one way piping length between the indoor and outdoor units.

How to obtain the cooling and heating capacity

Example : The net cooling capacity of the model FDT100VNP1VH with the air flow "P-Hi", the piping length of 15m, the outdoor unit located 5m lower than the indoor unit, indoor wet-bulb temperature at 19.0°C and outdoor dry-bulb temperature 35°C is

$$\text{Net cooling capacity} = 10.0 \times 1.00 \times 0.97 \times 0.99 = 9.6 \text{ kW}$$

↑
↑
↑
↑

Net cooling total capacity of FDT100VNP1VH (Outdoor temp. : 35°CDB Indoor temp. : 19°CWB) shown in table 3.8.1

Air flow : P-Hi shown in table 3.8.2

Piping length : 15m (Gas pipe size is φ 15.88) shown in table 3.8.3

Height difference : 5m (Outdoor unit : below) shown in table 3.8.4

3.9 APPLICATION DATA

- 3.9.1 Installation of indoor unit
 - 3.9.2 Electric wiring work installation
 - 3.9.3 Installation of wired remote control (Option parts)
 - 3.9.4 Installation of outdoor unit
- (1) Model FDC71VNP

See page 42.
See page 48.
See page 52.

PSC012D053

R410A REFRIGERANT USED

- This installation manual deals with outdoor units and general installation specifications only. For indoor units, refer to page 42.
- When install the unit, be sure to check whether the selection of installation place, power source specifications, usage limitation (piping length, height differences between indoor and outdoor units, power source voltage and etc.) and installation spaces.
- Read the "SAFETY PRECAUTIONS" carefully first of all and strictly follow it during the installation work in order to protect yourself.
- The precautionary items mentioned below are distinguished into two levels. **⚠ WARNING** and **⚠ CAUTION**.
- **⚠ WARNING**: Wrong installation would cause serious consequences such as injuries or death.
- **⚠ CAUTION**: Wrong installation might cause serious consequences depending on circumstances.
- Both mentions the important items to protect your health and safety so strictly follow them by any means.
- Be sure to confirm no anomaly on the equipment by commissioning after completed installation and explain the operating methods as well as the maintenance methods of this equipment to the user according to the owner's manual.
- Keep the installation manual together with owner's manual at a place where any user can read at any time. Moreover if necessary, ask to hand them to a new user.
- For installing qualified personnel, take precautions in respect to themselves by using suitable protective clothing, gloves, etc., and then perform the installation works.
- Please pay attention not to fall down the tools, etc. when installing the unit at the high position.
- If unusual noise can be heard during operation, consult the dealer.
- The meanings of "Marks", used here are shown as follows:

⊘ Never do it under any circumstances. Always do it according to the instruction.

SAFETY PRECAUTIONS

⚠ WARNING	
<p>If the refrigerant comes into contact with naked flames, poisonous gas is produced.</p> <ul style="list-style-type: none"> • Use the prescribed pipes, flare nuts and tools for R410A. Using existing parts (for R22 or R407C) can cause the unit failure and serious accidents due to burst of the refrigerant circuit. • Tighten the flare nut by torque wrench with specified method. If the flare nut were tightened with excess torque, this may cause burst and refrigerant leakage after a long period. • Do not open the service valves for liquid line and gas line until completed refrigerant piping work, air tightness test and evacuation. If the compressor is operated in state of opening service valves before completed connection of refrigerant piping work, air can be sucked into refrigerant circuit, which can cause burst or personal injury due to anomalously high pressure in the refrigerant. • The electrical installation must be carried out by the qualified electrician in accordance with "the norm for electrical work" and "national wiring regulation", and the system must be connected to the dedicated circuit. Power source with insufficient capacity and incorrect function done by improper work can cause electric shocks and fire. • Be sure to shut off the power before starting electrical work. Failure to shut off the power can cause electric shocks, unit failure or incorrect function of equipment. • Be sure to use the cables conformed to safety standard and cable ampacity for power distribution work. Unconformable cables can cause electric leak, anomalous heat production or fire. • This appliance must be connected to main power source by means of a circuit breaker or switch (fuse:20A) with a contact separation of at least 3mm. • Arrange the wiring in the control box so that it cannot be pushed up further into the box. Install the service panel correctly. 	<p>Incorrect installation may result in overheating and fire.</p> <ul style="list-style-type: none"> • Use the prescribed cables for electrical connection, tighten the cables securely in terminal block and relieve the cables correctly to prevent overloading the terminal blocks. Loose connections or cable mountings can cause anomalous heat production or fire. • Be sure to fix up the service panels. Incorrect fixing can cause electric shocks or fire due to intrusion of dust or water. • Be sure to switch off the power source in the event of installation, inspection or servicing. If the power source is not shut off, there is a risk of electric shocks, unit failure or personal injury due to the unexpected start of fan. • Stop the compressor before removing the pipe after shutting the service valve on pump down work. If the pipe is removed when the compressor is in operation with the service valve open, air would be mixed in the refrigeration circuit and it could cause explosion and injuries due to abnormal high pressure in the cooling cycle. • Only use prescribed option parts. The installation must be carried out by the qualified installer. If you install the system by yourself, it can cause serious trouble such as water leaks, electric shocks, fire. • Be sure to wear protective goggles and gloves while at work. • Earth leakage breaker must be installed. • If the earth leakage breaker is not installed, it can cause electric shocks. • Appliance is not to be used by children or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction. Children being supervised not to play with appliance.
<p>• Installation must be carried out by the qualified installer. If you install the system by yourself, it may cause serious trouble such as water leaks, electric shocks, fire and personal injury, as a result of a system malfunction. Do not carry out the installation and maintenance work except by the qualified installer.</p> <ul style="list-style-type: none"> • Install the system in full accordance with the installation manual. Incorrect installation may cause bursts, personal injury, water leaks, electric shocks and fire. • Be sure to use only for household and residence. If this appliance is installed in inferior environment such as machine shop and etc., it can cause malfunction. • When installing in small rooms, take prevention measures not to exceed the density limit of refrigerant in the event of leakage, referred by the formula (accordance with ISO5149). If the density of refrigerant exceeds the limit, please consult the dealer and install the ventilation system, otherwise lack of oxygen can occur, which can cause serious accident. • Use the original accessories and the specified components for installation. If parts other than those prescribed by us are used, it may cause water leaks, electric shocks, fire and personal injury. • Install the unit in a location with good support. Unsuitable installation locations can cause the unit to fall and cause material damage and personal injury. • Ensure the unit is stable when installed, so that it can withstand earthquakes and strong winds. Unsuitable installation locations can cause the unit to fall and cause material damage and personal injury. • Ventilate the working area well in the event of refrigerant leakage during installation. 	<p>• Do not bundling, winding or processing for the power cord. Or, do not deforming the power plug due to treat it. This may cause fire or heating.</p> <ul style="list-style-type: none"> • Do not run the unit with removed panels or protections. Touching rotating equipments, hot surfaces or high voltage parts can cause personal injury due to entrapment, burn or electric shocks.
<p>• Ensure that no air enters in the refrigerant circuit when the unit is installed and removed. If air enters in the refrigerant circuit, the pressure in the refrigerant circuit becomes too high, which can cause burst and personal injury.</p> <ul style="list-style-type: none"> • Do not processing, splice the power cord, or share a socket with other power plugs. This may cause fire or electric shock due to defecting contact, defecting insulation and over-current etc. 	<p>• Do not perform any change of protective device itself or its setup condition. The forced operation by short-circuiting protective device of pressure switch and temperature controller or the use of non specified component can cause fire or burst.</p>

CAUTION	
	<p>• Carry out the electrical work for ground lead with care. Do not connect the ground lead to the gas line, water line, lightning conductor or telephone line's ground lead. Incorrect grounding can cause unit faults such as electric shocks due to short-circuiting.</p>
	<p>• Take care when carrying the unit by hand. If the unit weighs more than 20kg, it must be carried by two or more persons. Do not carry by the plastic straps, always use the carry handle when carrying the unit by hand. Use gloves to minimize the risk of cuts by the aluminum fins.</p> <p>• Dispose of any packing materials correctly. Any remaining packing materials can cause personal injury as it contains nails and wood. And to avoid danger of suffocation, be sure to keep the plastic wrapper away from children and to dispose after tear it up.</p> <p>• Be sure to insulate the refrigerant pipes so as not to condense the ambient air moisture on them. Insufficient insulation can cause condensation, which can lead to moisture damage on the ceiling, floor, furniture and any other valuables.</p>
	<p>• Do not install the outdoor unit in the locations listed below.</p> <ul style="list-style-type: none"> • Locations where carbon fiber, metal powder or any powder is floating. • Locations where any substances that can affect the unit such as sulphide gas, chloride gas, acid and alkaline can occur. • Vehicles and ships. • Locations where cosmetic or special sprays are often used. • Locations with direct exposure of oil mist and steam such as kitchen and machine plant. • Locations where any machines which generate high frequency harmonics are used. • Locations with salty atmospheres such as coastlines. • Locations with heavy snow (if installed, be sure to provide base flame and snow hood mentioned in the manual). • Locations where the unit is exposed to chimney smoke. • Locations at high altitude (more than 1 000m high). • Locations with ammoniac atmospheres. (e.g. organic fertilizer) • Locations with calcium chloride (e.g. snow melting agent). • Locations where heat radiation from other heat source can affect the unit. • Locations without good air circulation. • Locations with any obstacles which can prevent inlet and outlet air of the unit. • Locations where short circuit of air can occur (in case of multiple units installation). • Locations where strong air blows against the air outlet of outdoor unit. • Locations where something located above the unit could fall. <p>It can cause remarkable decrease in performance, corrosion and damage of components, malfunction and fire.</p>
	<p>• When perform the air-conditioner operation (cooling or drying operation) in which ventilator is installed in the room. In this case, using the air-conditioner in parallel with the ventilator, there is the possibility that drain water may backflow in accordance with the room lapse into the negative pressure status. Therefore, set up the opening port such as incorporate the air into the room that may appropriate to ventilation (For example; Open the door a little). In addition, just as above, so set up the opening port if the room lapse into negative pressure status due to register of the wind for the high rise apartment etc.</p> <p>• Do not install the outdoor unit in a location where insects and small animals can inhabit. Insects and small animals can enter the electric parts and cause damage or fire. Instruct the user to keep the surroundings clean.</p> <p>• Do not use the base flame for outdoor unit which is corroded or damaged due to long periods of operation. Using an old and damage base flame can cause the unit falling down and cause personal injury.</p> <p>• Do not use any materials other than a fuse with the correct rating in the location where fuses are to be used. Connecting the circuit with copper wire or other metal thread can cause unit failure and fire.</p> <p>• Do not touch any buttons with wet hands. It can cause electric shocks.</p> <p>• Do not touch any refrigerant pipes with your hands when the system is in operation. During operation the refrigerant pipes become extremely hot or extremely cold depending the operating condition, and it can cause burn injury or frost injury.</p> <p>• Do not touch the suction or aluminum fin on the outdoor unit. This may cause injury.</p> <p>• Do not put anything on the outdoor unit and operating unit. This may cause damage the objects or injury due to falling to the object.</p> <p>• Do not use the unit for special purposes such as storing foods, cooling precision instruments and preservation of animals, plants or art.</p> <p>• Do not clean up the unit with water.</p>

Notabilia as a unit designed for R410A

- Do not use any refrigerant other than R410A. R410A will rise to pressure about 1.6 times higher than that of a conventional refrigerant.
- A cylinder containing R410A has a pink indication mark on the top.
- A unit designed for R410A has adopted a different size indoor unit service valve charge port and a different size check joint provided in the unit to prevent the charging of a wrong refrigerant by mistake.
- The processed dimension of the flange part of a refrigerant pipe and a flare nut's parallel side measurement have also been altered to raise strength against pressure.

Accordingly, you are required to arrange dedicated R410A tools listed in the table on the left before installing, servicing this unit.

- Do not use a charge cylinder. The use of a charge cylinder will cause the refrigerant composition to change, which results in performance degradation.
- In charging refrigerant, always take it out from a cylinder in the liquid phase.
- All indoor units must be models designed exclusively for R410A. Check connectable indoor unit models in a catalog, etc. (A wrong indoor unit, if connected to the system, will impair proper system operation)

Check before installation work	
• Model name and power source	
• Refrigerant piping length	
• Piping, wiring and miscellaneous small parts	
• Indoor unit installation manual	

Accessories for outdoor unit	
① Grommet (Heat pump type only)	4
② Drain elbow (Heat pump type only)	1
③ Reducer set φ9.52 φ6.35	1
④ Reducer set φ15.8φ φ12.7	1

Option parts	
③ Sealing plate	1
④ Sleeve	1
⑤ Inclination plate	1
⑥ Putty	1
⑦ Drain hose (extension hose)	1
⑧ Piping cover (for insulation of connection piping)	1

Necessary tools for the installation work	
1 Plus headed driver	9 Wrench key (Hexagon) [4mm]
2 Knife	10 Vacuum pump
3 Saw	11 Vacuum pump adapter (Anti-reverse flow type) (Designed specifically for R410A)
4 Tape measure	12 Gauge manifold (Designed specifically for R410A)
5 Hammer	13 Charge hose (Designed specifically for R410A)
6 Spanner wrench	14 Flaring tool set (Designed specifically for R410A)
7 Torque wrench [1.4—82.0N·m (1.4—8.2kgf·m)]	15 Gas leak detector (Designed specifically for R410A) Gauge for projection adjustment
8 Hole core drill (φ5mm in diameter)	16 Gauge for projection adjustment (Used when flare is made by using conventional flare tool)


1. HAULAGE AND INSTALLATION (Take particular care in carrying in or moving the unit, and always perform such an operation with two or more persons.)

CAUTION

When a unit is hoisted with slings for haulage, take into consideration the offset of its gravity center position. If not properly balanced the unit can be thrown off-balance and fall.

1) Delivery

- Deliver the unit as close as possible to the installation site before removing it from the packaging.
- When you have to unpack the unit for a compelling reason before you haul it to the installation point, hoist the unit with nylon slings or ropes and protection pads so that you may not damage the unit.

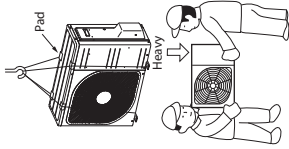

2) Portage

- The right hand side of the unit as viewed from the front (diffuser side) is heavier. A person carrying the right hand side must take heed of this fact. A person carrying the left hand side must hold with his right hand the handle provided on the front panel of the unit and with his left hand the corner column section.

3) Selection of installation location for the outdoor unit

Be sure to select a suitable installation place in consideration of following conditions.




- A place where it is horizontal, stable and can endure the unit weight and will not allow vibration transmittance of the unit.
- A place where it can be free from possibility of bothering neighbors due to noise or exhaust air from the unit.
- A place where the unit is not exposed to oil splashes.
- A place where it can be free from danger of flammable gas leakage.
- A place where drain water can be disposed without any trouble.
- A place where the unit will not be affected by heat radiation from other heat source.
- A place where snow will not accumulate.
- A place where the unit can be kept away 5m or more from TV set and/or radio receiver in order to avoid any radio or TV interference.
- A place where good air circulation can be secured, and enough service space can be secured for maintenance and service of the unit safely.
- A place where the unit will not be affected by electromagnetic waves and/or high-harmonic waves generated by other equipment.
- A place where chemical substances like sulfuric gas, chloric gas, acid and alkali (including ammonia), which can harm the unit, will not be generated and not remain.
- If a operation is conducted when the outdoor air temperature is -5°C lower, the outdoor unit should be installed at a place where it is not influenced by natural wind.
- A place where strong wind will not blow against the outlet air blow of the unit.
- Do not install the unit in places which exposed to sea breeze (e.g. coastal area) or calcium chloride (e.g. snow melting agent), exposed to ammonia substance (e.g. organic fertilizer).

4) Caution about selection of installation location

- (1) If the unit is installed in the area where the snow will accumulate, following measures are required.

The bottom plate of unit and intake, outlet may be blocked by snow.

- 1 Install the unit on the base so that the bottom is higher than snow cover surface, and draining water is secured.
- 2 Provide a snow hood to the outdoor unit on site.
- 3 Install the unit under eaves or provide the roof on site.

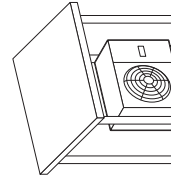
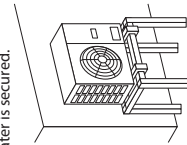


Since drain water generated by defrost control may freeze, following measures are required.

- Don't execute drain piping work by using a drain elbow and drain grommets (accessories). [Refer to Drain piping work.]
- Attached heater on a base plate on site, if there is possibility to freeze drain water. In case that the product has a corrective drainage system, the drainage paths should have suitable threatment against freezing but be sure not to melt the material of drainage paths with heat.

- (2) If the unit can be affected by strong wind, following measures are required.
Strong wind can cause damage of fan (fan motor), or can cause performance degradation, or can trigger anomalous stop of the unit due to rising of high pressure.


- 1 Install the outlet air blow side of the unit to face a wall of building, or provide a fence or a windbreak screen, to the direction of wind.
- 2 Install the outlet air blow side of the unit in a position perpendicular to the direction of wind.
- 3 The unit should be installed on the stable and level foundation. If the foundation is not level, the down the unit with wires.



5) Installation space

- Walls surrounding the unit in the four sides are not acceptable.
- There must be a 1-meter or larger space in the above.
- When more than one unit are installed side by side, provide a 250mm or wider interval between them as a service space. In order to facilitate servicing of controllers, please provide a sufficient space between units so that their top plates can be removed easily.
- Where a danger of short-circuiting exists, install guide louvers.
- When more than one unit are installed, provide sufficient intake space consciously so that short-circuiting may not occur.
- Where piling snow can bury the outdoor unit, provide proper snow guards.


The height of a wall is 1200mm or less.

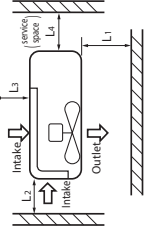


Size	I	II	III	IV
Example installation	Open	280	280	180
L1	Open	75	Open	Open
L2	100	75	Open	Open
L3	100	80	80	80
L4	250	Open	250	Open

6) Installation

- ① Anchor bolt fixed position

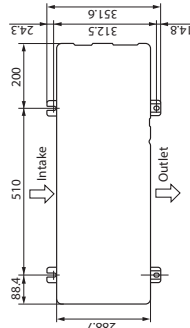

- ② Notabifia for installation

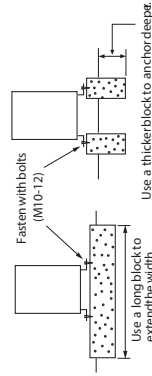

- In installing the unit, fix the unit's legs with bolts specified on the above.
- The protrusion of an anchor bolt on the front side must be kept within 15 mm.
- Securely install the unit so that it does not fall over during earthquakes or strong winds, etc.
- Refer to the above illustrations for information regarding concrete foundations.
- Install the unit in a level area. (With a gradient of 5 mm or less.)
Improper installation can result in a compressor failure, broken piping within the unit and abnormal noise generation.

7) To run the unit for a cooling operation,

when the outdoor temperature is -5°C or lower.

- When the outdoor air temperature is -5°C or lower, provide a snow hood to the outdoor unit on site. So that strong wind will not blow against the outdoor heat exchanger directly.

2. REFRIGERANT PIPING WORK

1) Restrictions on unit installation and use

- Check the following points in light of the indoor unit specifications and the installation site.
- Observe the following restrictions on unit installation and use. Improper installation can result in a compressor failure or performance degradation.

Restrictions	Dimensional restrictions	Marks appearing in the drawing on the right
Indoor unit	30m or less	L
Elevation difference between indoor and outdoor units	23m or less 20m or less	L H

● The use restrictions appearing in the table above are applicable to the standard pipe size combinations shown in the table below. Where an existing pipe system is utilized, different one-way pipe length restrictions should apply depending on its pipe size. For more information, please see "5. UTILIZATION OF EXISTING PIPING."

2) Determination of pipe size

- Determine refrigerant pipe size pursuant to the following guidelines based on the indoor unit specifications.

	Gas pipe	Liquid pipe
Outdoor unit connected	ø12.7 Flare	ø6.35 Flare
Refrigerant piping (branch pipe)	ø12.7	ø6.35
Indoor unit connected	FDT, FDBN, FDU, FDUIM, FDF, SRK	ø15.88 ø15.88


When pipe is brazing.

About brazing

Brazing must be performed under a nitrogen gas flow.

Without nitrogen gas, a large quantity of foreign matters (oxidized film) are created, causing a critical failure from capillary tube or expansion valve clogging.

If the refrigerant is existing in the pipe at brazing, poisonous gas is produced.

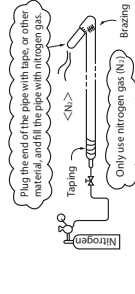

3) Refrigerant pipe wall thickness and material

- Select refrigerant pipes of the table shown on the right wall thickness and material as specified for each pipe size.

NOTE ● Select pipes having a wall thickness larger than the specified minimum pipe thickness.

Pipe diameter (mm)	ø6.35	ø12.7
Minimum pipe wall thickness (mm)	0.8	0.8
Pipe material*	O-type pipe	O-type pipe

*Phosphorus deoxidized seamless copper pipe (CS 23,040.15, JCS 77.150.30)

[Usage of reducer set]

(Except SRK) Liquid side joint (ø9.52)
(SRK) Liquid side joint (ø6.35)

(Except SRK) Reducer (L=15mm) (ø5.52-ø6.35)
(SRK) Reducer is not used

Flare nut

Gas side joint (ø15.88)

Indoor unit

ø6.35 pipe

ø12.7 pipe

Reducer (L=124mm) (ø15.88-ø12.7)

Reducer set (ø12.7) is included in the outdoor unit as accessory

Flared pipe end : A(mm)

Copper pipe protrusion for flaring : B(mm)

In the case of a rigid (clutch) type

With an R410A tool

With a conventional tool

0 - 0.5

1.0 - 1.5

ø6.35

ø12.7

0

A - 0.4

ø6.35

9.1

ø12.7

16.6

Indoor unit

Outdoor unit

Side cover

The screw of the side cover is tightened securely.

Do not hold the valve cap area with a spanner.

Use a torque wrench. If a torque wrench is not available, fasten the flare nut manually first and then tighten it further, using the left table as a guide.

4) On-site piping work

- Take care so that installed pipes may not touch components within a unit. If touching with an internal component will generate abnormal sounds and/or vibrations.

IMPORTANT

- (Except SRK) Regarding the change in the size of liquid/gas pipe: Use the reducer at indoor unit side. Reducer set is available in the outdoor unit as accessory.
- (SRK) Regarding the change in the size of gas pipe: Use the reducer at indoor unit side. Reducer set is available in the outdoor unit as accessory.

How to remove the side cover


- Please remove the screw of a side cover and remove to the front.
- Carry out the on site piping work with the service valve fully closed.
- Give sufficient protection to a pipe end (compressed and brazed, or with an adhesive tape) so that water or foreign matters may not enter the piping.
- Bend a pipe to a radius as large as practical (R100-R150). Do not bend a pipe repeatedly to correct its form.
- Flare connection is used between the unit and refrigerant pipe. Flare a pipe after engaging a flare nut onto it. Flare dimensions for R410A are different from those for conventional R407C. Although we recommend the use of flaring tools designed specifically for R410A, conventional flaring tools can also be used by adjusting the measurement of protrusion B with a protrusion control gauge.
- The pipe should be anchored every 1.5m or less to isolate the vibration.
- Tighten a flare joint securely with a double spanner.

CAUTION

- Do not apply force beyond proper fastening torque in tightening the flare nut.

Fix both liquid and gas service valves at the valve main bodies as illustrated on the right, and then fasten them, applying appropriate fastening torque.


Service valve size (mm)	Tightening torque (Nm)	Tightening angle (°)	Recommended length of a tool handle (mm)
ø6.35	14 - 18	45 - 60	150
ø9.52	34 - 42	30 - 45	200
ø12.7	49 - 61	30 - 45	250
ø15.88	68 - 82	15 - 20	300

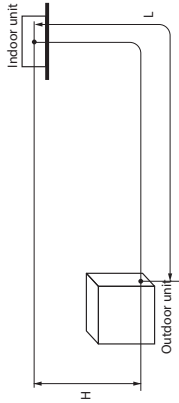

5) Air tightness test

- ① Although outdoor and indoor units themselves have been tested for air tightness at the factory, check the connecting pipes after the installation work for air tightness from the service valve's check joint equipped on the outdoor unit side. While conducting a test, keep the service valve shut all the time.
 - a) Raise the pressure to 0.5 MPa, and then stop. Leave it for five minutes to see if the pressure drops.
 - b) Then raise the pressure to 1.5 MPa, and stop. Leave it for five more minutes to see if the pressure drops.
 - c) Then raise the pressure to the specified level (4.15 MPa), and record the ambient temperature and the pressure.
 - d) If no pressure drop is observed with an installation pressurized to the specified level and left for about one day, it is acceptable. When the ambient temperature fall 1°C, the pressure also fall approximately 0.01 MPa. The pressure, if changed, should be compensated for.
 - e) If a pressure drop is observed in checking e) and a) - d), a leak exists somewhere. Find a leak by applying bubble test liquid to welded parts and flare joints and repair it. After repair, conduct an air-tightness test again.
- ② In conducting an air-tightness test, use nitrogen gas and pressurize the system with nitrogen gas from the gas side. Do not use a medium other than nitrogen gas under any circumstances.

6) Evacuation

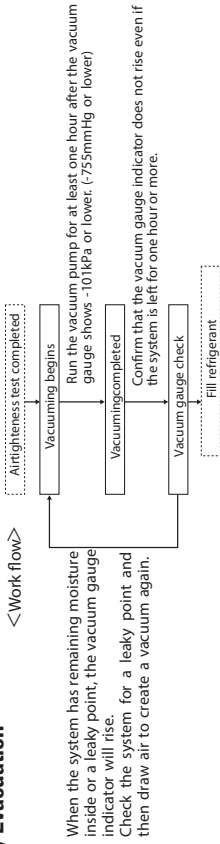

Pay attention to the following points in addition to the above for the R410A and compatible machines.

- To prevent a different oil from entering, assign dedicated tools, etc. to each refrigerant type. Under no circumstances must a gauge manifold and a charge hose in particular be shared with other refrigerant types (R22, R407C, etc.).
- Use a counterflow prevention adapter to prevent vacuum pump oil from entering the refrigerant system.

7) Additional refrigerant charge

(1) Calculate a required refrigerant charge volume from the following table.

Indoor unit	Additional charge volume (kg) per meter of refrigerant piping (liquid pipe ø6.35)	Refrigerant volume charged for shipment at the factory (kg) without additional refrigerant charge	Installation's pipe length (m) covered
FDT, FDEN	0.02	1.6	15
FDU, FDUM, SRK	0.02	1.6	8

- This unit contains factory charged refrigerant covering 15m/8m of refrigerant piping and additional refrigerant charge on the installation site is not required for an installation with up to 15m/8m refrigerant piping. When refrigerant piping exceeds 15m/8m, additionally charge an amount calculated from the pipe length and the above table for the portion in excess of 15m/8m.
- If an existing pipe system is used, a required refrigerant charge volume will vary depending on the liquid pipe size. For further information, please see "5. UTILIZATION OF EXISTING PIPING."

Formula to calculate the volume of additional refrigerant required


$$\text{Additional charge volume (kg)} = \{ \text{Main length (m)} - \text{Factory charged volume} \} \times 0.02 \text{ (kg/m)}$$

*When an additional charge volume calculation result is negative, it is not necessary to charge refrigerant additionally.

- For an installation measuring 1.5m/8m or shorter in pipe length, please charge the refrigerant volume charged for shipment at the factory, when you recharge refrigerant after servicing etc.


8) Heating and condensation prevention

- (1) Dress refrigerant pipes (both gas and liquid pipes) for heat insulation and prevention of dew condensation.
 - Improper heat insulation/anti-dew dressing can result in a water leak or dripping causing damage to household effects, etc.
- (2) Use a heat insulating material that can withstand 120°C or a higher temperature. Poor heat insulating capacity can cause heat insulation problems or cable deterioration.
 - All gas pipes must be securely heat insulated in order to prevent damage from dripping water that comes from the condensation formed on them during a cooling operation or personal injury from burns because their surface can reach quite a high temperature due to discharged gas flowing inside during a heating operation.
 - Wrap indoor units' flare joints with heat insulating parts (pipe cover) for heat insulation (both gas and liquid pipes).
 - Give heat insulation to both gas and liquid side pipes. Bundle a heat insulating material and a pipe tightly together so that no gaps may be left between them and wrap them together with a connecting cable by a dressing tape.
 - Both gas and liquid pipes need to be dressed with 20 mm or thicker heat insulation materials above the ceiling where relative humidity exceeds 70%.

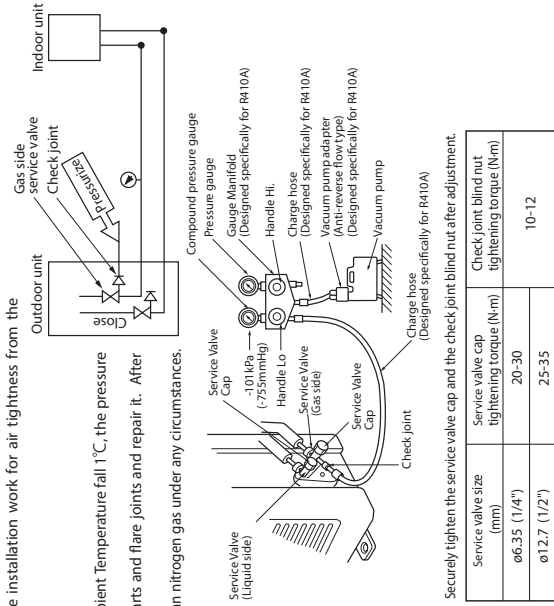

- (2) Charging refrigerant
 - Since R410A refrigerant must be charged in the liquid phase, you should charge it, keeping the container cylinder upside down or using a refrigerant cylinder equipped with a siphon tube.
 - Charge refrigerant always from the liquid side service port with the service valve shut. When you find it difficult to charge a required amount, fully open the outdoor unit valves on both liquid and gas sides and charge refrigerant from the gas (suction) side service port, while running the unit in the cooling mode. In doing so, care must be taken so that refrigerant may be discharged from the cylinder in the liquid phase all the time. When the cylinder valve is throttled down or a dedicated conversion tool to change liquid-phase refrigerant into mist is used to protect the compressor, however, adjust charge conditions so that refrigerant will gasify upon entering the unit.
 - In charging refrigerant, always charge a calculated volume by using a scale to measure the charge volume.
 - When refrigerant is charged with the unit being run, complete a charge operation within 30 minutes. Running the unit with an insufficient quantity of refrigerant for a long time can cause a compressor failure.

NOTE Put down the refrigerant volume calculated from the pipe length onto the caution label attached on the back side of the service panel.

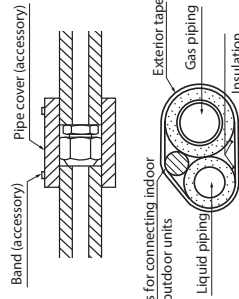


Wires for connecting indoor and outdoor units

Liquid piping

Insulation

3. DRAIN PIPING WORK


- Execute drain piping by using a drain elbow and drain grommets supplied separately as accessories, where water drained from the outdoor unit is a problem.
- Water may drip where there is a larger amount of drain water. Seal around the drain elbow and drain grommets with putty or adequate caulking material.
- Condensed water may flow out from vicinity of service valve or connected pipes.
- Where you are likely to have several days of sub-zero temperatures in a row, do not use a drain elbow and drain grommets. (There is a risk of drain water freezing inside and blocking the drain.)

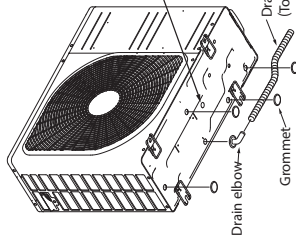

CAUTION

Do not put a grommet on this hole. This is a supplementary drain hole to discharge drain water, when a large quantity of it is gathered.

○ When condensed water needs to be led to a drain, etc., install the unit on a flat base or concrete blocks.
Then, please secure space for the drain elbow and the drain hose.



4. ELECTRICAL WIRING WORK

For details of electrical cabling, refer to the indoor unit installation manual.

Electrical installation work must be performed by an electrical installation service provider qualified by a power provider of the country. Electrical installation work must be executed according to the technical standards and other regulations applicable to electrical installations in the country.

- Do not use any supply cord lighter than one specified in parentheses for each type below.
 - braided cord (code designation 60245 IEC 51).
 - ordinary tough rubber sheathed cord (code designation 60245 IEC 53)
 - flat twin tinsel cord (code designation 60227 IEC 41).
- Use polychloroprene sheathed flexible cord (code designation 60245 IEC57) for supply cords of parts of appliances for outdoor use.
- Ground the unit. Do not connect the grounding wire to a gas pipe, water pipe, lightning rod or telephone grounding wire.
- If improperly grounded, an electric shock or malfunction may result.
- A grounding wire must be connected before connecting the power cable. Provide a grounding wire longer than the power cable.
- The installation of an impulse withstanding type earth leakage breaker is necessary. A failure to install an earth leakage breaker can result in an accident such as an electric shock or a fire.
- Do not turn on the power until the electrical work is completed.
- Do not use a condensive capacitor for power factor improvement under any circumstances. (It dose not improve power factor, while it can cause an abnormal overheat accident)
- For power source cables, use conduits.
- Do not lay electronic control cables (remote control and signaling wires) and other cables together outside the unit. Laying them together can result in the malfunctioning or a failure of the unit due to electric noises.
- Fasten cables so that they may not touch the piping, etc.
- When cables are connected, make sure that all electrical components within the electrical component box are free of loose connector coupling or terminal connection and then attach the cover securely. (Improper cover attachment can result in malfunctioning or a failure of the unit, if water penetrates into the box.)
- Always use a three-core cable for an indoor-outdoor connecting cable. Never use a shield cable.

CAUTION

In case of faulty wiring connection, the indoor unit stops, and then the run lamp turns on and the timer lamp blinks.


Use cables for interconnection wiring to avoid loosening of the wires. CENELEC code for cables Required field cables.

- H05RN4G1.5 (Example) or 245IEC57
- H Harmonized cable type
- 05 300/500 volts
- R Natural-and/or synth. rubber wire insulation
- N Polychloroprene rubber conductors insulation
- R Stranded core
- 4or5 Number of conductors
- G One conductor of the cable is the earth conductor (yellow/green)
- 1.5 Section of copper wire (mm²)

Main fuse specification

Specification	Part No.
250V/20A	SSA564A136A

Power cable, indoor-outdoor connecting wires

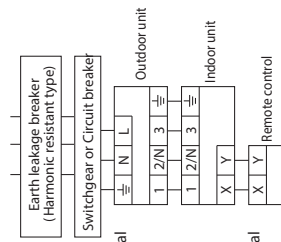

- It holds cables in place and protect the terminal connection from external force.
- This clamp is for the cable in the outside diameter 9-15mm. Please adjust it when not suitable.
- It holds cables in place and protect the terminal connection from external force.
- Please be sure to carry out D-type (type II) grounding work.

- Always perform grounding system installation work with the power cord unplugged.
- Connect a pair bearing a common terminal number with an indoor-outdoor connecting wire.
- In cabling, fasten cables securely with cable clamps so that no external force may work on terminal connections.
- Grounding terminals are provided in the control box.

Always use an earth leakage circuit breaker designed for inverter circuits to prevent a faulty operation.


CAUTION

Phase	Earth leakage breaker	Switchgear or Circuit Breaker		Power source (minimum)	Interconnecting and grounding wires (minimum)
		Switch breaker	Over current protector rated capacity		
Single-phase	20A,30mA, 0.1 sec or less	30A	20A	2.0mm ²	1.5mm ² x4

- The specifications shown in the above table are for units without heaters. For units with heaters, refer to the installation instructions or the construction instructions of the indoor unit.
- Switchgear or Circuit breaker capacity which is calculated from MAX. over current should be chosen along the regulations in each country.
- The cable specifications are based on the assumption that a metal or plastic conduit is used with no more than three cables contained in a conduit and a voltage drop is 2%. For an installation falling outside of these conditions, please follow the internal cabling regulations. Adapt it to the regulation in effect in each country.

5. UTILIZATION OF EXISTING PIPING

Check whether an existing pipe system is reusable or not by using the following flow chart.

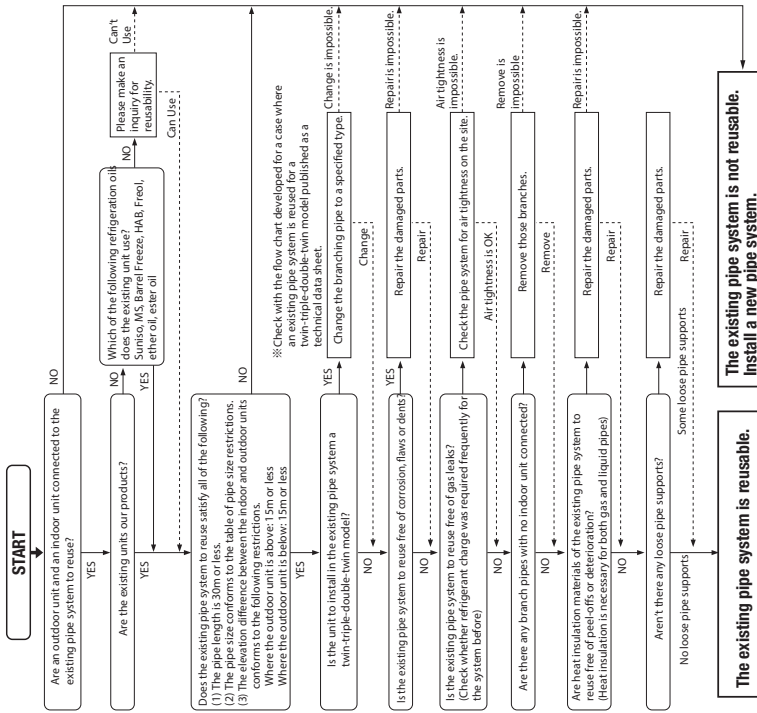

<Table of pipe size restrictions>

◎Standard pipe size ○Usable △Restricted to shorter pipe length limits

Indoor unit	Additional charge volume per meter of pipe		0.025kg/m		0.06kg/m	
	Pipe size	Liquid pipe	Gas pipe	Usability	0.025kg/m	0.06kg/m
FDT, FDEEN FDU, FDUM, SRK	Maximum one-way pipe length	30	24	10	10	10
	Length covered without additional charge	◎	○	△	△	△
PDF	Maximum one-way pipe length	15	12	5	5	5
	Length covered without additional charge	◎	○	△	△	△
	Length covered without additional charge	23	18	8	8	8
		8	6	3	3	3

- Please consult with our distributor in the area, if you need to recover refrigerant and change it again.
- Any combinations of pipe sizes not listed in the table are not usable.

Formula to calculate additional charge volume

Additional charge volume (kg) = (Main pipe length (m) - Length covered without additional charge shown in the table (m)) × Additional charge volume per meter of pipe shown in the table (kg/m)

※ If you obtain a negative figure as a result of calculation, no additional refrigerant needs to be charged.

Example When FDT is installed in a 10m long existing pipe system (liquid ø9.52, gas ø12.7), the quantity of refrigerant to charge additionally should be (10m-5m) x 0.06kg/m = 0.3 kg.

WARNING

<Where the existing unit can be run for a cooling operation.>

Carry out the following steps with the existing unit. (in the order of (1), (2), (3) and (4))

- Run the unit for 30 minutes for a cooling operation.
- Stop the indoor fan and run the unit for 3 minutes for a cooling operation (returning liquid)
- Close the liquid side service valve of the outdoor unit and pump down (refrigerant recovery)
- Blow with nitrogen gas. ※ If discolored refrigeration oil or any foreign matters is discharged by the blow, wash the pipe system or install a new pipe system.

- For the flare nut, do not use the old one, but use the one supplied with the outdoor unit. Process a flare to the dimensions specified for R410A.

<Where the existing unit cannot be run for a cooling operation.>

- Wash the pipe system or install a new pipe system.
- If you choose to wash the pipe system, please contact our distributor in the area.

INSTALLATION TEST CHECK POINTS

Check the following points again after completion of the installation, and before turning on the power. Conduct a test run again and ensure that the unit operates properly. Explain to the customer how to use the unit and how to take care of the unit following the instruction manual.

After installation

- Power cables and connecting wires are securely fixed to the terminal block.
- The power source voltage is correct as the rating.
- The drain hose is fixed securely.
- Service valve is fully open.
- No gas leaks from the joints of the service valve and joint.
- The pipe joints for indoor and outdoor pipes have been insulated.
- The reverse flow check cap is attached.
- The cover of the pipe cover (A) faces downward to prevent rain from entering.
- Gaps are properly sealed between the pipe covers (A) (B) and the wall surface / pipes.
- The screw of the side cover is tightened securely.

The existing pipe system is reusable. Install a new pipe system.

The existing pipe system is not reusable. Install a new pipe system.

(2) Model FDC90VNP1

PSC012D054

R410A REFRIGERANT USED

- This installation manual deals with outdoor units and general installation specifications only. For indoor units, refer to page 42.
- When install the unit, be sure to check whether the selection of installation place, power source specifications, usage limitation (piping length, height differences between indoor and outdoor units, power source voltage and etc.) and installation spaces.

SAFETY PRECAUTIONS

- Read the "SAFETY PRECAUTIONS" carefully first of all and strictly follow it during the installation work in order to protect yourself.
- The precautionary items mentioned below are distinguished into two levels. **⚠ WARNING** and **⚠ CAUTION**.
⚠ WARNING : Wrong installation would cause serious consequences such as injuries or death.
⚠ CAUTION : Wrong installation might cause serious consequences depending on circumstances.
- Both mentions the important items to protect your health and safety so strictly follow them by any means.
- Be sure to confirm no anomaly on the equipment by commissioning after completed installation and explain the operating methods as well as the maintenance methods of this equipment to the user according to the owner's manual.







 Never do it under any circumstances. Always do it according to the instruction.

⚠ WARNING

- If the refrigerant comes into contact with naked flames, poisonous gas is produced.
- **Installation must be carried out by the qualified installer.**
 If you install the system by yourself, it may cause serious trouble such as water leaks, electric shocks, fire and personal injury, as a result of a system malfunction. Do not carry out the installation and maintenance work except by the qualified installer.
 - **Use the prescribed pipes, flare nuts and tools for R410A.**
 Using existing parts (for R22 or R407C) can cause the unit failure and serious accidents due to burst of the refrigerant circuit.
 - **Tighten the flare nut by torque wrench with specified method.**
 If the flare nut were tightened with excess torque, this may cause burst and refrigerant leakage after a long period.
 - **Do not open the operation valves for liquid line and gas line until completed refrigerant piping work, air tightness test and evacuation.**
 If the compressor is operated in state of opening operation valves before completed connection of refrigerant piping work, air can be sucked into refrigerant circuit, which can cause burst or personal injury due to anomalously high pressure in the refrigerant.
 - **The electrical installation must be carried out by the qualified electrician in accordance with "the norm for electrical work" and "national wiring regulation", and the system must be connected to the dedicated circuit.**
 Power source with insufficient capacity and incorrect function done by improper work can cause electric shocks and fire.
 - **Be sure to shut off the power before starting electrical work.**
 Failure to shut off the power can cause electric shocks, unit failure or incorrect function of equipment.
 - **Be sure to use the cables conformed to safety standard and cable ampacity for power distribution work.**
 Unconformable cables can cause electric leak, anomalous heat production or fire.
 - **This appliance must be connected to main power source by means of a circuit breaker or switch (fuse:20A) with a contact separation of at least 3mm.**
 Arrange the wiring in the control box so that it cannot be pushed up further into the box. Install the service panel correctly.
- If parts other than those prescribed by us are used, it may cause water leaks, electric shocks, fire and personal injury.
- **Use the original accessories and the specified components for installation.**
 Unsuitable installation locations can cause the unit to fall and cause material damage and personal injury.
 - **Install the unit in a location with good support.**
 Unsuitable installation locations can cause the unit to fall and cause material damage and personal injury.
 - **Ensure the unit is stable when installed, so that it can withstand earthquakes and strong winds.**
 Unsuitable installation locations can cause the unit to fall and cause material damage and personal injury.
 - **Ventilate the working area well in the event of refrigerant leakage during installation.**
- If the density of refrigerant exceeds the limit, please consult the dealer and install the ventilation system, otherwise lack of oxygen can occur, which can cause serious accident.
- **Ensure that no air enters in the refrigerant circuit when the unit is installed and removed.**
 If air enters in the refrigerant circuit, the pressure in the refrigerant circuit becomes too high, which can cause burst and personal injury.
 - **Do not processing, splice the power cord, or share a socket with other power plugs.**
 This may cause fire or electric shock due to defecting contact, defecting insulation and over-current etc.
- Incorrect installation may result in overheating and fire.
- **Use the prescribed cables for electrical connection, tighten the cables securely in terminal block and relieve the cables correctly to prevent overloading the terminal blocks.**
 Loose connections or cable mountings can cause anomalous heat production or fire.
 - **Be sure to fix up the service panels.**
 Incorrect fixing can cause electric shocks or fire due to intrusion of dust or water.
 - **Be sure to switch off the power source in the event of installation, inspection or servicing.**
 If the power source is not shut off, there is a risk of electric shocks, unit failure or personal injury due to the unexpected start of fan.
 - **Stop the compressor before removing the pipe after shutting the service valve on pump down work.**
 If the pipe is removed when the compressor is in operation with the service valve open, air would be mixed in the refrigeration circuit and it could cause explosion and injuries due to abnormal high pressure in the cooling cycle.
 - **Only use prescribed option parts. The installation must be carried out by the qualified installer.**
 If you install the system by yourself, it can cause serious trouble such as water leaks, electric shocks, fire.
 - **Be sure to wear protective goggles and gloves while at work.**
 If the earth leakage breaker is not installed, it can cause electric shocks.
 - **Earth leakage breaker must be installed.**
 Appliance is not to be used by children or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction. Children being supervised not to play with appliance.

- **Do not perform any change of protective device itself or its setup condition.**
 The forced operation by short-circuiting protective device or pressure switch and temperature control or the use of non specified component can cause fire or burst.

CAUTION

	<p>• Carry out the electrical work for ground lead with care. Do not connect the ground lead to the gas line, water line, lightning conductor or telephone line's ground lead. Incorrect grounding can cause unit faults such as electric shocks due to short-circuiting.</p>
	<p>• Use the circuit breaker for all pole correct capacity. Circuit breaker should be the one that disconnect all poles under over current. Using the incorrect circuit breaker, it can cause the unit malfunction and fire.</p> <p>• Install isolator or disconnect switch on the power source wiring in accordance with the local codes and regulations. The isolator should be locked in OFF state in accordance with EN60204-1.</p> <p>• After maintenance, all wiring, wiring ties and the like, should be returned to their original state and wiring route, and the necessary clearance from all metal parts should be secured.</p> <p>• Secure a space for installation, inspection and maintenance specified in the manual. Insufficient space can result in accident such as personal injury due to falling from the installation place.</p>
	<p>• Do not install the unit in the locations listed below.</p> <ul style="list-style-type: none"> • Locations where carbon fiber, metal powder or any powder is floating. • Locations where any substances that can affect the unit such as sulphide gas, chloride gas, acid and alkaline can occur. • Vehicles and ships. • Locations where cosmetic or special sprays are often used. • Locations with direct exposure of oil mist and steam such as kitchen and machine plant. • Locations where any machines which generate high frequency harmonics are used. • Locations with salty atmospheres such as coastlines. • Locations with heavy snow (if installed, be sure to provide base flame and snow hood mentioned in the manual). • Locations where the unit is exposed to chimney smoke. • Locations at high altitude (more than 1000m high). • Locations with ammoniac atmospheres. (e.g. organic fertilizer) • Locations with calcium chloride (e.g. snow melting agent) • Locations where heat radiation from other heat source can affect the unit. • Locations without good air circulation. • Locations with any obstacles which can prevent inlet and outlet air of the unit. • Locations where short circuit of air can occur (in case of multiple units installation). • Locations where strong air blows against the air outlet of outdoor unit. • Locations where something located above the unit could fall. <p>It can cause remarkable decrease in performance, corrosion and damage of components, malfunction and fire.</p>

Notabilia as a unit designed for R410A

- Do not use any refrigerant other than R410A. R410A will rise to pressure about 1.6 times higher than that of a conventional refrigerant.
- A cylinder containing R410A has a pink indication mark on the top.
- A unit designed for R410A has adopted a different size indoor unit operation valve charge port and a different size check joint provided in the unit to prevent the charging of a wrong refrigerant by mistake. The processed dimension of the flared part of a refrigerant pipe and a flare nut's parallel side measurement have also been altered to raise strength against pressure.
- Accordingly, you are required to arrange dedicated R410A tools listed in the table on the left before installing or servicing this unit.
- In charging refrigerant, always take it out from a cylinder in the liquid phase.
- All indoor units must be models designed exclusively for R410A. Check connectable indoor unit models in a catalog, etc. (A wrong indoor unit, if connected into the system, will impair proper system operation.)

Check before installation work

- Model name and power source
- Refrigerant piping length
- Piping, wiring and miscellaneous small parts
- Indoor unit installation manual

Accessories for outdoor unit	Qty
① Grommet (Heat pump type only)	2
② Drain elbow (Heat pump type only)	1
③ Reducer set ø9.52 → ø6.35	1

Option parts	Qty
Ⓐ Sealing plate	1
Ⓑ Sleeve	1
Ⓒ Inclination plate	1
Ⓓ Putty	1
Ⓔ Drain hose (extension hose)	1
Ⓕ Piping cover (for insulation of connection piping)	1

Necessary tools for the installation work	
1 Plus headed driver	
2 Knife	
3 Saw	
4 Tape measure	
5 Hammer	
6 Spanner wrench	
7 Torque wrench [14.0-82.0N·m (1.4-8.2kgf·m)]	
8 Hole core drill (65mm in diameter)	

9 Wrench key (Hexagon) [4mm]	
10 Vacuum pump	
11 Vacuum pump adapter (Anti-reverse flow type) (Designed specifically for R410A)	
12 Gauge manifold (Designed specifically for R410A)	
13 Charge hose (Designed specifically for R410A)	
14 Flaring tool set (Designed specifically for R410A)	
15 Gas leak detector (Designed specifically for R410A)	
16 Gauge for projection adjustment (Used when flare is made by using conventional flare tool)	

- **When perform the air-conditioner operation (cooling or drying operation) in which ventilator is installed in the room. In this case, using the air-conditioner in parallel with the ventilator, there is the possibility that drain water may backflow in accordance with the room lapse into the negative pressure status. Therefore, set up the opening port such as incorporate the air into the room that may appropriate to ventilation (For example; Open the door a little). In addition, just as above, so set up the opening port if the room lapse into negative pressure status due to register of the wind for the high rise apartment etc.**
- **Do not install the outdoor unit in a location where insects and small animals can inhabit.**
Insects and small animals can enter the electric parts and cause damage or fire. Instruct the user to keep the surroundings clean.
- **Do not use the base flame for outdoor unit which is corroded or damaged due to long periods of operation.**
Using an old and damage base flame can cause the unit falling down and cause personal injury.
- **Do not use any materials other than a fuse with the correct rating in the location where fuses are to be used.**
Connecting the circuit with copper wire or other metal thread can cause unit failure and fire.
- **Do not touch any buttons with wet hands.**
It can cause electric shocks.
- **Do not touch any refrigerant pipes with your hands when the system is in operation.**
During operation the refrigerant pipes become extremely hot or extremely cold depending the operating condition, and it can cause burn injury or frost injury.
- **Do not touch the suction or aluminum fin on the outdoor unit.**
This may cause injury.
- **Do not put anything on the outdoor unit and operating unit.**
This may cause damage the objects or injury due to falling to the object.
- **Do not use the unit for special purposes such as storing foods, cooling precision instruments and preservation of animals, plants or art.**
Do not clean up the unit with water.

- **Take care when carrying the unit by hand.**
If the unit weights more than 20kg, it must be carried by two or more persons. Do not carry by the plastic straps, always use the carry handle when carrying the unit by hand. Use gloves to minimize the risk of cuts by the aluminum fins.
- **Dispose of any packing materials correctly.**
Any remaining packing materials can cause personal injury as it contains nails and wood. And to avoid danger of suffocation, be sure to keep the plastic wrapper away from children and to dispose after tear it up.
- **Be sure to insulate the refrigerant pipes so as not to condense the ambient air moisture on them.**
Insufficient insulation can cause condensation, which can lead to moisture damage on the ceiling, floor, furniture and any other valuables.
- **Do not install the outdoor unit in the locations listed below.**
 - Locations where discharged hot air or operating sound of the outdoor unit can bother neighborhood.
 - Locations where outlet air of the outdoor unit blows directly to an animal or plants. The outlet air can affect adversely to the plant etc.
 - Locations where vibration can be amplified and transmitted due to insufficient strength of structure.
 - Locations where vibration and operation sound generated by the outdoor unit can affect seriously (on the wall or at the place near bed room).
 - Locations where an equipment affected by high harmonics is placed (TV set or radio receiver is placed within 5m).
 - Locations where drainage cannot run off safely.
 - It can affect surrounding environment and cause a claim.
- **Do not install the unit near the location where leakage of combustible gases can occur.**
If leaked gases accumulate around the unit, it can cause fire.
- **Do not install the unit where corrosive gas (such as sulfuric acid gas etc.) or combustible gas (such as thinner and petroleum gases) can accumulate or collect, or where volatile combustible substances are handled.**
Corrosive gas can cause corrosion of heat exchanger, breakage of plastic parts and etc. And combustible gas can cause fire.
- **Do not install nor use the system close to the equipment that generates electromagnetic fields or high frequency harmonics.**
Equipment such as inverters, standby generators, medical high frequency equipments and telecommunication equipments can affect the system, and cause malfunctions and breakdowns. The system can also affect medical equipment and telecommunication equipment, and obstruct its function or cause jamming.


1. HAULAGE AND INSTALLATION (Take particular care in carrying in or moving the unit, and always perform such an operation with two or more persons.)

CAUTION

When a unit is hoisted with slings for haulage, take into consideration the offset of its gravity center position. If not properly balanced, the unit can be thrown off-balance and fall.


1) Delivery

- Deliver the unit as close as possible to the installation site before removing it from the packaging.
- When you have to unpack the unit for a compelling reason before you haul it to the installation point, hoist the unit with nylon slings or ropes and protection pads so that you may not damage the unit.

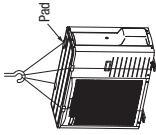

2) Portage

- The right hand side of the unit as viewed from the front (diffuser side) is heavier. A person carrying the right hand side must take heed of this fact. A person carrying the left hand side must hold with his right hand the handle provided on the front panel of the unit and with his left hand the corner column section.



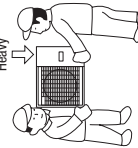


3) Selection of installation location for the outdoor unit

- Be sure to select a suitable installation place in consideration of following conditions.
- A place where it is horizontal, stable and can endure the unit weight and will not allow vibration transmittance of the unit.
 - A place where it can be free from possibility of bothering neighbors due to noise or exhaust air from the unit.
 - A place where the unit is not exposed to oil splashes.
 - A place where it can be free from danger of flammable gas leakage.
 - A place where drain water can be disposed without any trouble.
 - A place where the unit will not be affected by heat radiation from other heat source.
 - A place where the unit can be kept away 5m or more from TV set and/or radio receiver in order to avoid any radio or TV interference.
 - A place where good air circulation can be secured, and enough service space can be secured for maintenance and service of the unit safely.
 - A place where the unit will not be affected by electromagnetic waves and/or high-harmonic waves generated by other equipment.
 - A place where chemical substances like sulfuric gas, chloric gas, acid and alkali (including ammonia), which can harm the unit, will not be generated and not remain.
 - If a operation is conducted when the outdoor air temperature is -5°C lower, the outdoor unit should be installed at a place where it is not influenced by natural wind.
 - A place where strong wind will not blow against the outlet air blow of the unit.
- Do not install the unit in places which exposed to sea breeze (e.g. coastal area) or calcium chloride (e.g. snow melting agent), exposed to ammonia substance (e.g. organic fertilizer).

4) Caution about selection of installation location

- (1) If the unit is installed in the area where the snow will accumulate, following measures are required.
 - The bottom plate of unit and intake, outlet may be blocked by snow.
- 1 Install the unit on the base so that the bottom is higher than snow cover surface, and draining water is secured.
- 2 Provide a snow hood to the outdoor unit on site.
- 3 Install the unit under eaves or provide the roof on site.

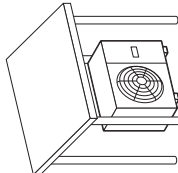
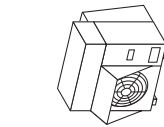
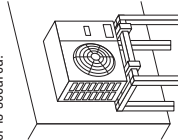


Since drain water generated by defrost control may freeze, following measures are required.

- Don't execute drain piping work by using a drain elbow and drain grommets (accessories). [Refer to DRAIN PIPING WORK.]
- Attached heater on a base plate on site, if there is possibility to freeze drain water. In case that the product has a corrective drainage system, the drainage paths should have suitable threatment against freezing but be sure not to melt the material or drainage paths with heat.

- (2) If the unit can be affected by strong wind, following measures are required. Strong wind can cause damage of fan (fan motor), or can cause performance degradation, or can trigger anomalous stop of the unit due to rising of high pressure.


1. Install the outlet air blow side of the unit to face a wall of building, or provide a fence or a windbreak screen.
2. Install the outlet air blow side of the unit in a position perpendicular to the direction of wind.
3. The unit should be installed on the stable and level foundation. If the foundation is not level, the down the unit with wires.



5) Installation space


- Walls surrounding the unit in the four sides are not acceptable.
- There must be a 1-meter or larger space in the above.
- When more than one unit are installed side by side, provide a 250mm or wider interval between them as a service space. In order to facilitate servicing of controls, please provide a sufficient space between units so that their top plates can be removed easily.
- Where a danger of short-circuiting exists, install guide ladders.
- When more than one unit are installed, provide sufficient intake space consciously so that short-circuiting may not occur.
- Where piling snow can bury the outdoor unit, provide proper snow guards.

Size	I	II	III
L1	Open	Open	500
L2	300	250	Open
L3	100	150	100
L4	250	250	250

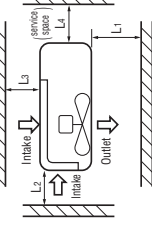

6) Installation

- ① Anchor bolt fixed position
 - Fasten with bolts (M10-12)
 - Use a long block to extend the width.
 - Use a thicker block to anchor deeper.
- ② Notabilia for installation

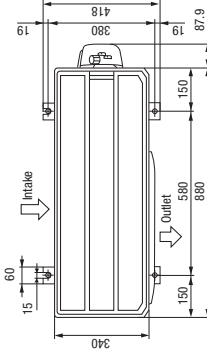

- In installing the unit, fix the unit's legs with bolts specified on the above.
 - The protrusion of an anchor bolt on the front side must be kept within 15 mm.
 - Securely install the unit so that it does not fall over during earthquakes or strong winds, etc.
 - Refer to the above illustrations for information regarding concrete foundations.
 - Install the unit in a level area. (With a gradient of 5 mm or less.)
- Improper installation can result in a compressor failure, broken piping within the unit and abnormal noise generation.

7) To run the unit for a cooling operation, when the outdoor temperature is -5°C or lower.

- When the outdoor air temperature is -5°C or lower, provide a snow hood to the outdoor unit on site. So that strong wind will not blow against the outdoor heat exchanger directly.

2. REFRIGERANT PIPING WORK

1) Restrictions on unit installation and use

- Check the following points in light of the indoor unit specifications and the installation site.
- Observe the following restrictions on unit installation and use. Improper installation can result in a compressor failure or performance degradation.

Restrictions	Dimensional restrictions		Marks appearing in the drawing on the right
	FDT, FDE, FDU, FDUIM, FDF	Main pipe length	
Indoor unit	30m or less	L	
Elevation difference between indoor and outdoor units	When the outdoor unit is positioned higher 20m or less	H	
	When the outdoor unit is positioned lower 20m or less	H	

- The use restrictions appearing in the table above are applicable to the standard pipe size combinations shown in the table below. Where an existing pipe system is utilized, different one-way pipe length restrictions should apply depending on its pipe size. For more information, please see '5. UTILIZATION OF EXISTING PIPING.'

CAUTION

2) Determination of pipe size

- Determine refrigerant pipe size pursuant to the following guidelines based on the indoor unit specifications.

	Gas pipe	Liquid pipe
Outdoor unit connected	ø15.88 Flare	ø6.35 Flare
Refrigerant piping (branch pipe)	ø15.88	ø6.35
Indoor unit connected	ø15.88	ø9.52

3) Refrigerant pipe wall thickness and material

- Select refrigerant pipes of the table shown on the right wall thickness and material as specified for each pipe size.

NOTE ● Select pipes having a wall thickness larger than the specified minimum pipe thickness.

Pipe diameter [mm]	ø6.35	ø15.88
Minimum pipe wall thickness [mm]	0.8	1.0
Pipe material*	O-type pipe	O-type pipe


* Phosphorus deoxidized seamless copper pipe ICS 23.040.15, ICS 77.150.30

When pipe is brazing.

About brazing

Brazing must be performed under a nitrogen gas flow.

Without nitrogen gas, a large quantity of foreign matters (oxidized film) are created, causing a critical failure from capillary tube or expansion valve clogging. If the refrigerant is existing in the pipe at brazing, poisonous gas is produced.

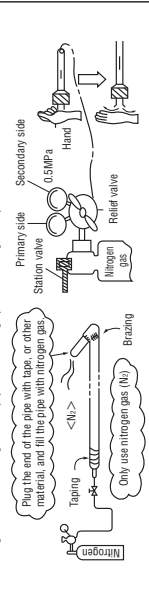

4) On-site piping work

- Take care so that installed pipes may not touch components within a unit. If touching with an internal component, it will generate abnormal sounds and/or vibrations.
- Regarding the change in the size of liquid pipe:
Use the reducer at indoor unit side. Reducer set is available in the outdoor unit as accessory.

IMPORTANT

- Please remove the screw of a side cover and remove to the front.
- Carry out the on-site piping work with the operation valve fully closed.
- Give sufficient protection to a pipe end (compressed and blazed, or with an adhesive tape) so that water or foreign matters may not enter the piping.
- Bend a pipe to a radius as large as practical (R100-R150). Do not bend a pipe repeatedly to correct its form.
- Flare connection is used between the unit and refrigerant pipe. Flare a pipe after engaging a flare nut onto it. Flare dimensions for R410A are different from those for conventional R407C. Although we recommend the use of flaring tools designed specifically for R410A, conventional flaring tools can also be used by adjusting the measurement of protrusion B with a protrusion control gauge.
- The pipe should be anchored every 1.5m or less to isolate the vibration.
- Tighten a flare joint securely with a double spanner.

How to remove the side cover

- Please remove the screw of a side cover and remove to the front.


- Carry out the on-site piping work with the operation valve fully closed.
- Give sufficient protection to a pipe end (compressed and blazed, or with an adhesive tape) so that water or foreign matters may not enter the piping.
- Bend a pipe to a radius as large as practical (R100-R150). Do not bend a pipe repeatedly to correct its form.
- Flare connection is used between the unit and refrigerant pipe. Flare a pipe after engaging a flare nut onto it. Flare dimensions for R410A are different from those for conventional R407C. Although we recommend the use of flaring tools designed specifically for R410A, conventional flaring tools can also be used by adjusting the measurement of protrusion B with a protrusion control gauge.
- The pipe should be anchored every 1.5m or less to isolate the vibration.
- Tighten a flare joint securely with a double spanner.

CAUTION

Do not apply force beyond proper fastening torque in tightening the flare nut.

Fix both liquid and gas service valves at the valve main bodies as illustrated on the right, and then fasten them, applying appropriate fastening torque.

Service valve size (mm)	Tightening torque (N·m)	Tightening angle (°)	Recommended length of a tool handle (mm)
ø6.35	14-18	45-60	150
ø9.52	34-42	30-45	200
ø12.7	49-61	30-45	250
ø15.88	68-82	15-20	300

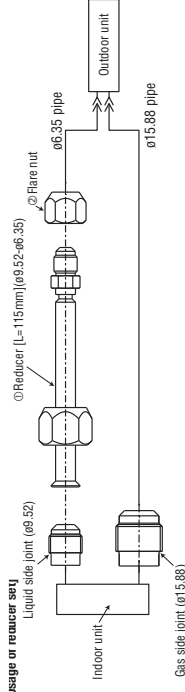


Reducer set (①, ②) is included in the outdoor unit as accessory

Flared pipe end : A (mm)	
Copper pipe outer diameter	A
ø6.35	0~0.4
ø6.35	9.1
ø15.88	19.7

Copper pipe protrusion for flaring : B (mm)

Copper pipe protrusion for flaring : B (mm)	
Copper pipe outer diameter	B
ø6.35	0~0.5
ø15.88	1.0~1.5

In the case of a rigid (clutch) type
With an R410A tool
With a conventional tool

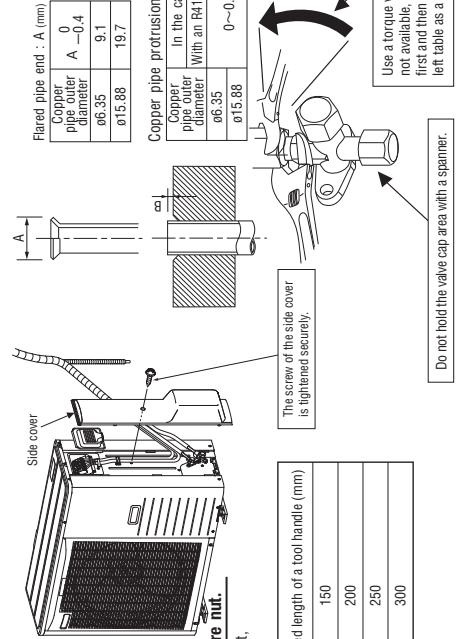

The screw of the side cover is tightened securely.


Use a torque wrench. If a torque wrench is not available, fasten the flare nut manually first and then tighten it further, using the left table as a guide.

Do not hold the valve cap area with a spanner.

5) Air tightness test

- ① Although outdoor and indoor units themselves have been tested for air tightness at the factory, check the connecting pipes after the installation work for air tightness from the service valve's check joint equipped on the outdoor unit side. While conducting a test, keep the service valve shut all the time.
 - a) Raise the pressure to 0.5 MPa, and then stop. Leave it for five minutes to see if the pressure drops.
 - b) Then raise the pressure to 1.5 MPa, and stop. Leave it for five more minutes to see if the pressure drops.
 - c) If no pressure drop is observed with an installation pressurized to the specified level and left for about one day, it is acceptable. When the ambient temperature fall 1°C, the pressure also fall approximately 0.01 MPa. The pressure, if changed, should be compensated for.
 - d) If a pressure drop is observed in checking e) and a) - d), a leak exists somewhere. Find a leak by applying bubble test liquid to welded parts and flare joints and repair it. After repair, conduct an air-tightness test again.
- ② In conducting an air-tightness test, use nitrogen gas and pressurize the system with nitrogen gas from the gas side. Do not use a medium other than nitrogen gas under any circumstances.

6) Evacuation

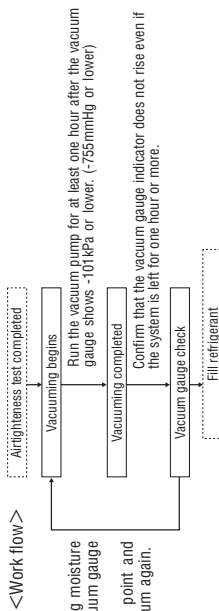

When the system has remaining moisture inside or a leaky point, the vacuum gauge indicator will rise. Check the system for a leaky point and then draw air to create a vacuum again.

7) Additional refrigerant charge

- (1) Calculate a required refrigerant charge volume from the following table.
 - To prevent a different oil from entering, assign dedicated tools, etc. to each refrigerant type. Under no circumstances must a gauge manifold and a charge hose in particular be shared with other refrigerant types (R22, R407C, etc.)
 - Use a counterflow prevention adapter to prevent vacuum pump oil from entering the refrigerant system.

Indoor unit	Additional charge volume (kg) per meter of refrigerant piping (liquid pipe ø6.35)	Refrigerant volume charged for shipment at the factory (kg)	Installation's pipe length (m) covered without additional refrigerant charge
FDT, FDE, FDU, FDUIM	0.025	2.1	15
FDE	0.025	2.1	8

- (2) This unit contains factory charged refrigerant covering 15m/8m of refrigerant piping and additional refrigerant charge on the installation site is not required for an installation with up to 15m/8m refrigerant piping. When refrigerant piping exceeds 15m/8m, additionally charge an amount calculated from the pipe length and the above table for the portion in excess of 15m/8m.
 - If an existing pipe system is used, a required refrigerant charge volume will vary depending on the liquid pipe size. For further information, please see "5. UTILIZATION OF EXISTING PIPING."

Formula to calculate the volume of additional refrigerant required

$$\text{Additional charge volume (kg)} = (\text{Main length (m)} - \text{Factory charged volume}) \times 0.025 \text{ (kg/m)}$$


*When an additional charge volume calculation result is negative, it is not necessary to charge refrigerant additionally.

- (1) Dress refrigerant pipes (both gas and liquid pipes) for heat insulation and prevention of dew condensation.
 - Improper heat insulation/anti-dew dressing can result in a water leak or dripping causing damage to household effects, etc.
- (2) Use a heat insulating material that can withstand 120°C or a higher temperature. Poor heat insulating capacity can cause heat insulation problems or cable deterioration.
 - All gas pipes must be securely heat insulated in order to prevent damage from dripping water that comes from the condensation formed on them during a cooling operation or personal injury from burns because their surface can reach quite a high temperature due to discharged gas flowing inside during a heating operation.
 - Wrap indoor units' flare joints with heat insulating parts (pipe cover) for heat insulation (both gas and liquid pipes).
 - Give heat insulation to both gas and liquid side pipes. Bundle a heat insulating material and a pipe tightly together so that no gaps may be left between them and wrap them together with a connecting cable by a dressing tape.
 - **Both gas and liquid pipes need to be dressed with 20 mm or thicker heat insulation materials above the ceiling where relative humidity exceeds 70%.**

8) Heating and condensation prevention


- (1) Since R410A refrigerant must be charged in the liquid phase, you should charge it, keeping the container cylinder upside down or using a refrigerant cylinder equipped with a siphon tube.
 - Charge refrigerant always from the liquid side service port with the service valve shut. When you find it difficult to charge a required amount, fully open the outdoor unit valves on both liquid and gas sides and charge refrigerant from the gas (suction) side service port, while running the unit in the cooling mode. In doing so, care must be taken so that refrigerant may be discharged from the cylinder in the liquid phase all the time. When the cylinder valve is throttled down or a dedicated conversion tool to change liquid-phase refrigerant into mist is used to protect the compressor, however, adjust charge conditions so that refrigerant will gasify upon entering the unit.
 - In charging refrigerant, always charge a scale to measure the charge volume.
 - When refrigerant is charged with the unit being run, complete a charge operation within 30 minutes. Running the unit with an insufficient quantity of refrigerant for a long time can cause a compressor failure.

NOTE Put down the refrigerant volume calculated from the pipe length onto the caution label attached on the back side of the service panel.

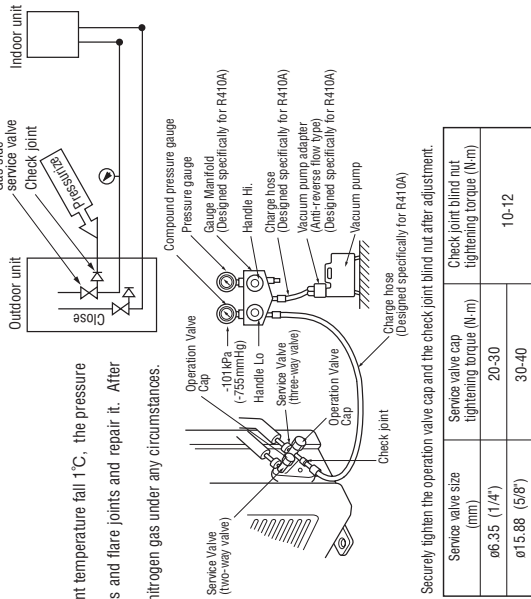


(2) Charging refrigerant

- (1) Although outdoor and indoor units themselves have been tested for air tightness at the factory, check the connecting pipes after the installation work for air tightness from the service valve's check joint equipped on the outdoor unit side. While conducting a test, keep the service valve shut all the time.
 - a) Raise the pressure to 0.5 MPa, and then stop. Leave it for five minutes to see if the pressure drops.
 - b) Then raise the pressure to 1.5 MPa, and stop. Leave it for five more minutes to see if the pressure drops.
 - c) If no pressure drop is observed with an installation pressurized to the specified level and left for about one day, it is acceptable. When the ambient temperature fall 1°C, the pressure also fall approximately 0.01 MPa. The pressure, if changed, should be compensated for.
 - d) If a pressure drop is observed in checking e) and a) - d), a leak exists somewhere. Find a leak by applying bubble test liquid to welded parts and flare joints and repair it. After repair, conduct an air-tightness test again.
- (2) In conducting an air-tightness test, use nitrogen gas and pressurize the system with nitrogen gas from the gas side. Do not use a medium other than nitrogen gas under any circumstances.

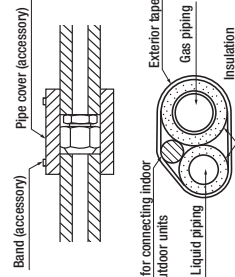

3. DRAIN PIPING WORK

- Execute drain piping by using a drain elbow and drain grommets supplied separately as accessories, where water drained from the outdoor unit is a problem.
- Water may drip where there is a larger amount of drain water. Seal around the drain elbow and drain grommets with putty or adequate caulking material.
- Condensed water may flow out from vicinity of operation valve or connected pipes.
- Where you are likely to have several days of sub-zero temperatures in a row, do not use a drain elbow and drain grommets. (There is a risk of drain water freezing inside and blocking the drain.)

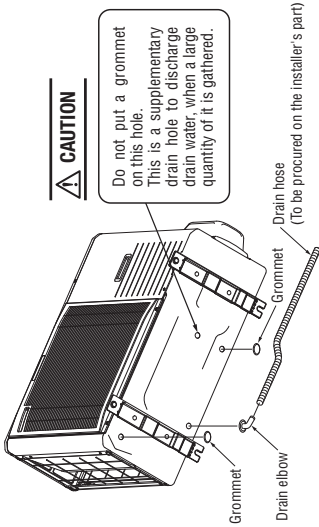

- When condensed water needs to be led to a drain, etc., install the unit on a flat base or concrete blocks. Then, please secure space for the drain elbow and the drain hose.



4. ELECTRICAL WIRING WORK

For details of electrical cabling, refer to the indoor unit installation manual.

Electrical installation work must be performed by an electrical installation service provider, qualified by a power provider of the country. Electrical installation work must be executed according to the technical standards and other regulations applicable to electrical installations in the country.

- Do not use any supply cord lighter than one specified in parentheses for each type below.
 - braided cord (code designation 60245 IEC 51).
 - ordinary tough rubber sheathed cord (code designation 60227 IEC 41).
 - flat twin tinsel cord (code designation 60227 IEC 41).
- Use polychloroprene sheathed flexible cord (code designation 60245 IEC57) for supply cords of parts of appliances for outdoor use.
- Ground the unit. Do not connect the grounding wire to a gas pipe, water pipe, lightning rod or telephone grounding wire.
- If improper grounded, an electric shock or malfunction may result.
- A grounding wire must be connected before connecting the power cable. Provide a grounding wire longer than the power cable.
- The installation of an impulse withstanding type earth leakage breaker is necessary. A failure to install an earth leakage breaker can result in an accident such as an electric shock or a fire.
- Do not turn on the power until the electrical work is completed.
- Do not use a condensive capacitor for power factor improvement under any circumstances. (It does not improve power factor, while it can cause an abnormal overheat accident)
- For power source cables, use conduits.
- Do not lay electronic control cables (remote control and signaling wires) and other cables together outside the unit. Laying them together can result in the malfunctioning or a failure of the unit due to electric noises.
- Fasten cables so that they may not touch the piping, etc.
- When cables are connected, make sure that all electrical components within the electrical component box are free of loose connector coupling or terminal connection and then attach the cover securely. (Improper cover attachment can result in malfunctioning or a failure of the unit, if water penetrates into the box.)
- Always use a three-core cable for an indoor-outdoor connecting cable. Never use a shield cable.

CAUTION

In case of faulty wiring connection, the indoor unit stops, and then the run lamp turns on and the timer lamp blinks.

Use cables for interconnection wiring to avoid loosening of the wires.
CENELEC code for cables Required field cables.



H05RN4G1.5 (Example) or 245IEC57

- H Harmonized cable type
- 05 300/500 volts
- R Natural-and/or synth. rubber wire insulation
- N Polychloroprene rubber conductors insulation
- R Stranded core
- 4or5 Number of conductors
- G One conductor of the cable is the earth conductor (yellow/green)
- 1.5 Section of copper wire (mm²)

Main fuse specification

Specification	Part No.
250V 20A	SSA564A136A

Power cable, indoor-outdoor connecting wires

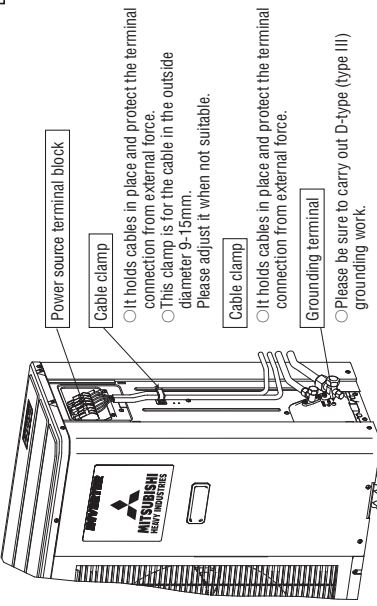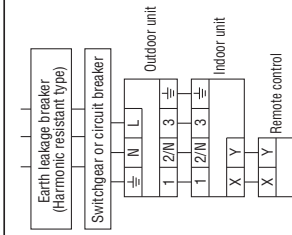

- Always perform grounding system installation work with the power cable unplugged.
- Connect a pair bearing a common terminal number with an indoor-outdoor connecting wire.
- In cabling, fasten cables securely with cable clamps so that no external force may work on terminal connections.
- Grounding terminals are provided in the control box.

Always use an earth leakage circuit breaker designed for inverter circuits to prevent a faulty operation.


CAUTION

Phase	Earth leakage breaker	Switchgear or circuit breaker		Interconnecting and grounding wires (minimum)
		Switch breaker	Over current protector rated capacity	
Single-phase	20A, 30mA, 0.1sec or less	30A	20A	2.5mm ² 1.5mm ² ×4

- The specifications shown in the above table are for units without heaters. For units with heaters, refer to the installation instructions or the construction instructions of the indoor unit.
- Switchgear or circuit breaker capacity which is calculated from MAX. over current should be chosen along the regulations in each country.
- The cable specifications are based on the assumption that a metal or p plastic conduit is used with no more than three cables contained in a conduit and a voltage drop is 2%. For an installation falling outside of these conditions, please follow the internal cabling regulations. Adapt it to the regulation in effect in each country.

5. UTILIZATION OF EXISTING PIPING

Check whether an existing pipe system is reusable or not by using the following flow chart.

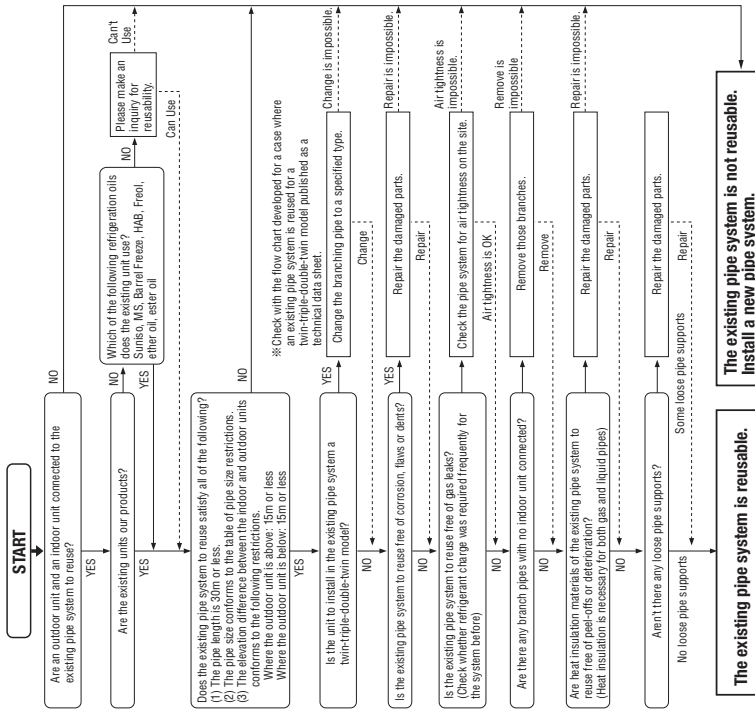

<Table of pipe size restrictions>

◎:Standard pipe size ○:Usable △:Restricted to shorter pipe length limits

Indoor unit	Additional charge volume per meter of pipe		0.025kg/m	0.06kg/m
	Liquid pipe	Gas pipe		
FDT, FDE FDU, FDUM	Pipe size	φ6.35	φ9.52	φ9.52
	Usability	◎	△	△
FDF	Maximum one-way pipe length	30	12	12
	Length covered without additional charge	15	6	6
FDF	Usability	◎	△	△
	Maximum one-way pipe length	23	10	10
FDF	Length covered without additional charge	8	3	3

- Please consult with our distributor in the area, if you need to recover refrigerant and charge it again.
- Any combinations of pipe sizes not listed in the table are not usable.

Formula to calculate additional charge volume

Additional charge volume (kg) = (Main pipe length (m) - Length covered without additional charge shown in the table (m)) × Additional charge volume per meter of pipe shown in the table (kg/m)

※ If you obtain a negative figure as a result of calculation, no additional refrigerant needs to be charged.

Example) When FDT is installed in a 10m long existing pipe system (liquid φ9.52, gas φ12.7), the quantity of refrigerant to charge additionally should be (10m-6m) × 0.06kg/m = 0.24 kg.

WARNING

<Where the existing unit can be run for a cooling operation.>

Carry out the following steps with the existing unit (in the order of (1), (2), (3) and (4))

- Run the unit for 30 minutes for a cooling operation.
- Stop the indoor fan and run the unit for 3 minutes for a cooling operation (returning liquid)
- Close the liquid side operation valve of the outdoor unit and pump down (refrigerant recovery)
- Blow with nitrogen gas. ※ If discolored refrigeration oil or any foreign matters is discharged by the blow, wash the pipe system or install a new pipe system.
 - For the flare nut, do not use the old one, but use the one supplied with the outdoor unit. Process a flare to the dimensions specified for R410A.

<Where the existing unit cannot be run for a cooling operation.>

- Wash the pipe system or install a new pipe system.
- If you choose to wash the pipe system, please contact our distributor in the area.

INSTALLATION TEST CHECK POINTS

Check the following points again after completion of the installation, and before turning on the power. Conduct a test run again and ensure that the unit operates properly. Explain to the customer how to use the unit and how to take care of the unit following the instruction manual.

After installation

- Power cables and connecting wires are securely fixed to the terminal block.
- The power source voltage is correct as the rating.
- The drain hose is fixed securely.
- Service valve is fully open.
- No gas leaks from the joints of the service valve and joint.
- The pipe joints for indoor and outdoor pipes have been insulated.
- The reverse flow check cap is attached.
- The cover of the pipe cover (A) faces downward to prevent rain from entering.
- Gaps are properly sealed between the pipe covers (A) (B) and the wall surface / pipes.
- The screw of the side cover is tightened securely.

(3) Model FDC100VNP

PSC012D055



R410A REFRIGERANT USED

- This installation manual deals with outdoor units and general installation specifications only. For indoor units, refer to page 42.
- While install the unit, be sure to check the selection of installation place, power source specifications, usage limitation (piping length, height differences between indoor and outdoor units, power source voltage etc.) and installation spaces.

SAFETY PRECAUTIONS

- Before installation, read the "SAFETY PRECAUTIONS" carefully and strictly follow it during the installation work in order to protect yourself.
 - The precautionary items mentioned below are distinguished into two levels, **WARNING** and **CAUTION**.
 - **WARNING**: Wrong installation would cause serious consequences such as injuries or death.
 - **CAUTION**: Wrong installation might cause serious consequences depending on circumstances.
- Both mention the important items to protect your health and safety so strictly follow them by any means.
- Be sure to confirm no anomaly on the equipment by commissioning after completing installation and explain the operating methods as well as the maintenance methods of this equipment to the user according to the owner's manual.
 - Keep the installation manual together with owner's manual at a place where any user can read at any time.
 - Moreover if necessary, ask to hand them to a new user.
 - Before starting the installation work, proper precautions (using suitable protective clothing, groves etc.) should be taken by qualified installer.
 - Pay attention not to fall down the tools, etc. when installing the unit at the high position.
 - If unusual noise can be heard during operation, consult the dealer.
 - The meanings of "Marks" used here are shown as follows:

	Never do it under any circumstances.
	Always do it according to the instruction.

 WARNING	
<p>connection of refrigerant piping work, air can be sucked into refrigerant circuit, which can cause burst or personal injury due to anomalously high pressure in the refrigerant.</p> <ul style="list-style-type: none"> • The electrical installation must be carried out by the qualified electrician in accordance with "the norm for electrical work" and "national wiring regulation", and the system must be connected to the dedicated circuit. <p>Power source with insufficient capacity and incorrect function done by improper work can cause electric shocks and fire.</p> <ul style="list-style-type: none"> • Be sure to shut off the power before starting electrical work. <p>Failure to shut off the power can cause electric shocks, unit failure or incorrect function of equipment.</p> <ul style="list-style-type: none"> • Be sure to use the cables conformed to safety standard and cable ampacity for power distribution work. <p>Unconformable cables can cause electric leak, anomalous heat production or fire.</p> <ul style="list-style-type: none"> • This appliance must be connected to main power source by means of a circuit breaker or switch (fuse: 30A) with a contact separation of at least 3mm. • Arrange the wiring in the control box so that it cannot be pushed up further into the box. Install the service panel correctly. <p>Incorrect installation may result in overheating and fire.</p> <ul style="list-style-type: none"> • Use the prescribed cables for electrical connection, tighten the cables securely in terminal block and relieve the cables correctly to prevent overloading the terminal blocks. • Loose connections or cable mountings can cause anomalous heat production or fire. • Be sure to fix up the service panels. • Incorrect wiring can cause electric shocks or fire due to intrusion of dust or water. • Be sure to switch off the power source in the event of installation, inspection or servicing. <p>If the power source is not shut off, there is a risk of electric shocks, unit failure or personal injury due to the unexpected start of fan.</p> <ul style="list-style-type: none"> • Stop the compressor before removing the pipe after shutting the service valve on pump down work. 	<p>If the power source is not shut off, there is a risk of electric shocks, unit failure or personal injury due to the unexpected start of fan.</p> <ul style="list-style-type: none"> • Stop the compressor before removing the pipe after shutting the service valve on pump down work.
<ul style="list-style-type: none"> • Installation must be carried out by the qualified installer. If you install the system by yourself, it may cause serious trouble such as water leaks, electric shocks, fire and personal injury, as a result of a system malfunction. Do not carry out the installation and maintenance work except the by qualified installer. • Install the system in full accordance with the installation manual. Incorrect installation may cause bursts, personal injury, water leaks, electric shocks and fire. • When installing in small rooms, take prevention measures not to exceed the density limit of refrigerant in the event of leakage, referred by the formula (accordance with ISO5149). If the density of refrigerant exceeds the limit, consult the dealer and install the ventilation system, otherwise lack of oxygen can occur, which can cause serious accident. • Use the original accessories and the specified components for installation. If parts other than those prescribed by us are used, it may cause water leaks, electric shocks, fire and personal injury. • Install the unit in a location with good support. Unsuitable installation locations can cause the unit to fall resulting in material damage and personal injury. • Ensure the unit is stable when installed, so that it can withstand earthquakes and strong winds. Unsuitable installation locations can cause the unit to fall and cause material damage and personal injury. • Ventilate the working area well in the event of refrigerant leakage during installation. If the refrigerant comes into contact with naked flames, poisonous gas is produced. • Use the prescribed pipes, flare nuts and tools for R410A. Using existing parts (for R22 or R407C) can cause the unit failure and serious accidents, due to burst of the refrigerant circuit. • Do not open the service valves for liquid line and gas line until completed refrigerant piping work, air tightness test and evacuation. If the compressor is operated in state of opening service valves before completing 	<ul style="list-style-type: none"> • Ensure that no air enters in the refrigerant circuit when the unit is installed and removed. If air enters in the refrigerant circuit, the pressure in the refrigerant circuit becomes too high, which can cause burst and personal injury. • Do not process or splice the power cord, or share the socket with other power plugs. This may cause fire or electric shock due to deflecting contact, deflecting insulation and over-current etc.
<p>If the pipes is removed when the compressor is in operation with the service valve open, air would be mixed in the refrigeration circuit and it could cause explosion and injuries due to anomalous high pressure in the cooling cycle.</p> <ul style="list-style-type: none"> • Only use prescribed option parts. The installation must be carried out by the qualified installer. If you install the system by yourself, it can cause serious trouble such as water leaks, electric shocks, fire. • Be sure to wear protective goggles and gloves while at work. • Earth leakage breaker must be installed. If the earth leakage breaker is not installed, it can cause electric shocks. • Do not perform any change of protective device itself or its setup condition. The forced operation by short-circuiting protective device of pressure switch and temperature controller or the use of non specified component can cause fire or burst. • After completed installation, check that no refrigerant leaks from the system. If refrigerant leaks into the room and comes into contact with an oven or other hot surface, poisonous gas is produced. • Hang up the unit at the specified points with ropes which can support the weight in lifting for portage. And to avoid jolting out of alignment, be sure to hang up the unit at 4-point support. An improper manner of portage such as 3-point support can cause death or serious personal injury due to falling of the unit. • Do not perform brazing work in the airtight room It can cause lack of oxygen. • Tighten the flare nut by using double spanners and torque wrench according to prescribed method. Be sure not to tighten the flare nut too much. Loose flare connection or damage on the flare part by tightening with excess torque can cause burst or refrigerant leaks which may result in lack of oxygen. • Consult the dealer or an expert regarding removal of the unit. Incorrect installation can cause water leaks, electric shocks or fire. 	<ul style="list-style-type: none"> • Do not perform any repairs or modifications by yourself. Consult the dealer if the unit requires repair. If you repair or modify the unit, it can cause water leaks, electric shocks or fire.

CAUTION	
	<p>Carry out the electrical work for ground lead with care.</p> <p>Do not connect the ground lead to the gas line, water line, lightning conductor or telephone line's ground lead. Incorrect grounding can cause unit faults such as electric shocks due to short-circuiting. Never connect the grounding wire to a gas pipe because if gas leaks, it could cause explosion or ignition.</p>
	<p>Use the circuit breaker for all pole correct capacity. Circuit breaker should be able to disconnect all poles under over current.</p> <p>Using the incorrect circuit breaker, it can cause the unit malfunction and fire.</p> <ul style="list-style-type: none"> Install isolator or disconnect switch on the power source wiring in accordance with the local codes and regulations. The isolator should be locked in OFF state in accordance with EN60204-1. After maintenance, all wiring, wiring ties and the like, should be returned to their original state and wiring route, and the necessary clearance from all metal parts should be secured. Secure a space for installation, inspection and maintenance specified in the manual. <p>Insufficient space can result in accident such as personal injury due to falling from the installation place.</p>
	<p>Do not install the unit in the locations listed below.</p> <ul style="list-style-type: none"> Locations where carbon fiber, metal powder or any powder is floating. Locations where any substances that can affect the unit such as sulphide gas, chloride gas, acid and alkaline can occur. Vehicles and ships. Locations where cosmetic or special sprays are often used. Locations with direct exposure of oil mist and steam such as kitchen and machine plant. Locations where any machines which generate high frequency harmonics are used. Locations with salty atmospheres such as coastlines. Locations with heavy snow (if installed, be sure to provide base flame and snow hood mentioned in the manual). Locations where the unit is exposed to chimney smoke. Locations at high altitude (more than 1000m high). Locations with ammoniac atmospheres (e.g. organic fertilizer). Locations with calcium chloride (e.g. snow melting agent). Locations where heat radiation from their heat source can affect the unit. Locations without good air circulation. Locations with any obstacles which can prevent inlet and outlet air of the unit. Locations where short circuit of air can occur (In case of multiple units installation). Locations where strong air blows against the air outlet of outdoor unit. Locations where something located above the unit could fall. <p>It can cause remarkable decrease in performance, corrosion and damage of components, malfunction and fire.</p> <ul style="list-style-type: none"> Do not install the outdoor unit in the locations listed below. Locations where discharged hot air or operating sound of the outdoor unit can bother neighborhood. Locations where outlet air of the outdoor unit blows directly to an animal or plants.

Check before installation work	
Model name and power source	
Refrigerant piping length	
Piping, wiring and miscellaneous small parts	
Indoor unit installation manual	
Accessories for outdoor unit	
① Edging	Qty 1
Necessary tools for the installation work	
1 Plus headed driver	Qty 1
2 Knife	1
3 Saw	1
4 Tape measure	1
5 Hammer	1
6 Spanner wrench [14.0-82.0N·m (1.4-8.2kgf·m)]	1
7 Torque wrench [14.0-82.0N·m (1.4-8.2kgf·m)]	1
8 Hole core drill (65mm in diameter)	2
9 Wrench key (Hexagon) [4m/m]	
10 Vacuum pump	
11 Vacuum pump adapter (Anti-reverse flow type) (Designed specifically for R410A)	
12 Gauge manifold (Designed specifically for R410A)	
13 Charge hose (Designed specifically for R410A)	
14 Flaring tool set (Designed specifically for R410A)	
15 Gas leak detector (Designed specifically for R410A)	
16 Gauge for projection adjustment (Used when flare is made by using conventional flare tool)	

Note as a unit designed for R410A

- Do not use any refrigerant other than R410A. R410A will rise to pressure about 1.6 times higher than that of a conventional refrigerant.
- A cylinder containing R410A has a pink indication mark on the top.
- A unit designed for R410A has adopted a different size indoor unit service valve charge port and a flare nut's parallel side measurement have also been altered to raise strength against pressure. Accordingly, you are required to arrange dedicated R410A tools listed in the table on the left before installing or servicing this unit.
- Do not use a charge cylinder. The use of a charge cylinder will cause the refrigerant composition to change, which results in performance degradation.
- In charging refrigerant, always take it out from a cylinder in the liquid phase.
- All indoor units must be models designed exclusively for R410A. Check connectable indoor unit models in a catalog, etc. (A wrong indoor unit, if connected into the system, will impair proper system operation)

Head the following the heating operation


- In the case when this unit has stopped for a long time, heating operation may start and operate in cooling mode by 7 minutes, after that, heating operation keep oil quality in compressor by preventing liquid refrigerant come into compressor. If that is the case, do not suspect a unit failure. (In this case, remote control displays "DEFROST" or "In operation for defrosting".)

1. HAULAGE AND INSTALLATION (Take particular care in carrying in or moving the unit, and always perform such an operation with two or more persons.)

CAUTION When a unit is hoisted with slings for haulage, take into consideration the offset of its gravity center position. If not properly balanced, the unit can be thrown off-balance and fall.


1) Delivery

- Deliver the unit as close as possible to the installation site before removing it from the packaging.
- When you have to unpack the unit for a compelling reason before you haul it to the installation point, hoist the unit with nylon slings or ropes and protection pads so that you may not damage the unit.



2) Portage

- The right hand side of the unit as viewed from the front (fan side) is heavier. A person carrying the right hand side must take heed of this fact. A person carrying the left hand side must hold with his right hand the handle provided on the front panel of the unit and with his left hand the corner column section.

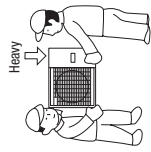

3) Selecting the installation location

- Be sure to select a suitable installation place in consideration of following conditions.
 - A place where it is horizontal, stable and can endure the unit weight and will not allow vibration transmittance of the unit.
 - A place where it can be free from possibility of bothering neighbors due to noise or exhaust air from the unit.
 - A place where the unit is not exposed to oil splashes.
 - A place where it can be free from danger of flammable gas leakage.
 - A place where drain water can be disposed without any trouble.
 - A place where the unit will not be affected by heat radiation from other heat source.
 - A place where snow will not accumulate.
 - A place where the unit can be kept away 5m or more from TV set and/or radio receiver in order to avoid any TV set or radio receiver interference.
 - A place where good air circulation can be secured, and enough service space can be secured for maintenance and service of the unit safely.
 - A place where the unit will not be affected by electromagnetic waves and/or high-harmonic waves generated by other equipment.
 - A place where chemical substances like sulfuric gas, chloric gas, acid and alkali (including ammonia), which can harm the unit, will not be generated and not remain.
 - If a operation is conducted when the outdoor air temperature is -5 or lower, the outdoor unit should be installed at a place where it is not influenced by natural wind.
 - A place where strong wind will not blow against the outlet air blow of the unit.
 - A place where stringent regulation of electric noises is not applicable.
- Do not install the unit in places which exposed to sea breeze (e.g. coastal area) or calcium chloride (e.g. snow melting agent), exposed to ammonia substance (e.g. organic fertilizer).

4) Caution about selection of installation location

- (1) If the unit is installed in the area where the snow will accumulate, following measures are required.
 - The bottom plate of unit and intake, outlet may be blocked by snow.

1. Install the unit on the base so that the bottom is higher than snow cover surface.
2. Provide a snow hood to the outdoor unit on site. Regarding outline of a snow hood, refer to our technical manual.
3. Install the unit under eaves or provide the roof on site.

- Since drain water generated by defrost control may freeze, following measures are required.
- Don't execute drain piping work by using a drain elbow and drain grommets (optional parts). (Refer to Drain piping work.)

- Attach heater on a base plate on site, if there is possibility to freeze drain water. In case that the product has a corrective drainage system, the drainage paths should have suitable measure against freezing but be sure not to melt the material of drainage paths with heat.

- (2) If the unit can be affected by strong wind, following measures are required. Strong wind can cause damage of fan (fan motor), or can cause performance degradation, or can trigger anomalous stop of the unit due to rising of high pressure.

1. Install the outlet air blow side of the unit to face a wall of building, or provide a fence or a windbreak screen.
2. Install the unit in a position perpendicular to the direction of wind.
3. The unit should be installed on the stable and level foundation. If the foundation is not level, tie down the unit with wires.




5) Installation space

- Walls surrounding the unit in the four sides are not acceptable.
- There must be a 1-meter or larger space in the above.
- When more than one unit are installed side by side, provide a 250mm or wider interval between them as a service space. In order to facilitate servicing of controllers, provide a sufficient space between units so that their top plates can be removed easily.
- Where a danger of short-circuiting exists, install guide louvers.
- When more than one unit are installed, provide sufficient intake space consciously so that short-circuiting may not occur.
- Where piling snow can bury the outdoor unit, provide proper snow guards.


Example installation Size	I	II	III
L1	Open	Open	500
L2	300	250	Open
L3	100	150	100
L4	250	250	250

The height of a wall is 1200mm or less.

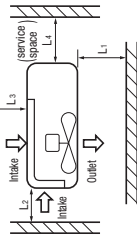


6) Installation

- ① Anchor bolt fixed position

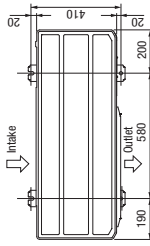

- ② Notes for installation

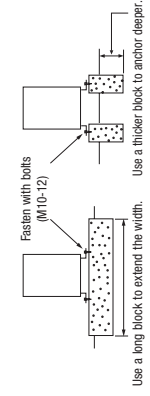

- In installing the unit, fix the unit's legs with bolts specified on the above.
- The protrusion of an anchor bolt on the front side must be kept within 15mm.
- Securely install the unit so that it does not fall over during earthquakes or strong winds, etc.
- Refer to the above illustrations for information regarding concrete foundations.
- Install the unit in a level area. (With a gradient of 5mm or less.) Improper installation can result in a compressor failure, broken piping within the unit and abnormal noise generation.

7) To run the unit for a cooling operation, when the outdoor temperature is -5°C or lower.


- When the outdoor air temperature is -5°C or lower, provide a snow hood to the outdoor unit on site. So that strong wind will not blow against the outdoor heat exchanger directly. Regarding outline of a snow hood, refer to our technical manual.

2. REFRIGERANT PIPING WORK

1) Restrictions on unit installation and use

- Check the following points in light of the indoor unit specifications and the installation site.
- Observe the following restrictions on unit installation and use. Improper installation can result in a compressor failure or performance degradation.

Restrictions	Dimensional restrictions	Marks appearing in the drawing on the right
Main pipe length	30m or less	L
Elevation difference between indoor and outdoor units	When the outdoor unit is positioned higher,	H
	When the outdoor unit is positioned lower,	H

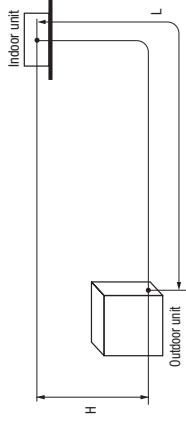

- The use restrictions appearing in the table above are applicable to the standard pipe size combinations shown in the table below. Where an existing pipe system is utilized, different one-way pipe length restrictions should apply depending on its pipe size. For more information, see "5. UTILIZATION OF EXISTING PIPING."

CAUTION

2) Determination of pipe size

Determine refrigerant pipe size according to the following guidelines based on the indoor unit specifications.

Gas pipe	Liquid pipe
Outdoor unit connected	ø9.52 Flare
Refrigerant piping (branch pipe L)	ø9.52
Indoor unit connected	ø15.88

3) Refrigerant pipe wall thickness and material

- Select refrigerant pipes of the table shown on the right wall thickness and material as specified for each pipe size.

Pipe diameter [mm]	ø9.52	ø15.88
Minimum pipe wall thickness [mm]	0.8	1.0
Pipe material*	O-type pipe	O-type pipe

*Phosphorus deoxidized seamless copper pipe (S 23.040.15, (CS 77.150.30

NOTE Select pipes having a wall thickness larger than the specified minimum pipe thickness.

4) On-site piping work

IMPORTANT

Take care so that installed pipes may not touch components within a unit. If pipes touch internal components, abnormal sounds and/or vibrations.

First remove the five screws (X mark) of the service panel and push it down into the direction of the arrow mark and then remove it by pulling it toward you.

How to remove the side cover

- The pipe can be laid in any of the following directions: side-right, front, rear and downward.
- Remove a knock-out plate provided on the pipe penetration to open a minimum necessary area and attach an edging material supplied as an accessory by cutting it to an appropriate length before laying a pipe.
- Carry out the on site piping work with the service valve fully closed.
- Give sufficient protection to a pipe end (compressed and brazed, or with an adhesive tape) so that water or foreign matters may not enter the piping.
- Bend a pipe to a radius as large as practical (R100-R150). Do not bend a pipe repeatedly to correct its form.
- Flare connection is used between the unit and refrigerant pipe. Flare a pipe after engaging a flare nut onto it. Flare dimensions for R410A are different from those for conventional R407C. Although we recommend the use of flaring tools designed specifically for R410A, conventional flaring tools can also be used by adjusting the measurement of protrusion B with a protrusion control gauge.
- The pipe should be anchored every 1.5m or less to isolate the vibration.
- Tighten the flare joint securely with a double spanner.

CAUTION

Do not apply force beyond proper fastening torque in tightening the flare nut.





Fix both liquid and gas service valves at the valve main bodies as illustrated on the right, and then fasten them, applying appropriate fastening torque.

Service valve size (mm)	Tightening torque (N·m)	Tightening angle (°)	Recommended length of a bolt handle (mm)
ø9.52 (3/8")	34-42	30-45	200
ø15.88 (5/8")	68-82	15-20	300

Pipe brazing


Brazing must be performed under a nitrogen gas flow.

Without nitrogen gas, a large quantity of foreign matters (oxidized film) are created, causing a critical failure from capillary tube or expansion valve clogging.

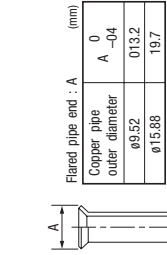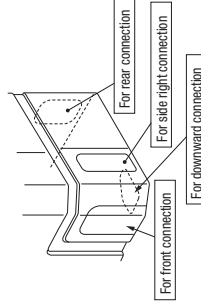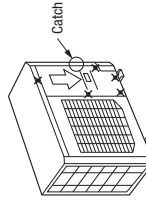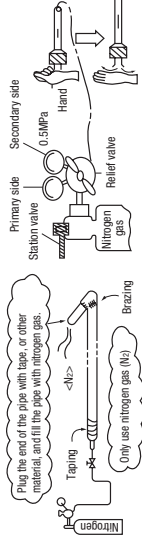

Flared pipe end : A	(mm)
Copper pipe outer diameter	0
ø9.52	-04
ø15.88	013.2
	19.7

Copper pipe protrusion for flaring : B	(mm)
In the case of a rigid (clutch) type	
With an R410A tool	0-0.5
With a conventional tool	1.0-1.5

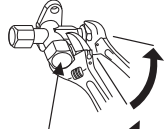


Do not hold the valve cap area with a spanner.


Use a torque wrench. If a torque wrench is not available, fasten the flare nut manually first and then tighten it further, using the left table as a guide.

5) Air tightness test

- ① Although outdoor and indoor units themselves have been tested for air tightness at the factory, check the connecting pipes after the installation work for air tightness from the service valve's check joint equipped on the outdoor unit side. While conducting a test, keep the service valve shut all the time.
 - a) Raise the pressure to 0.5MPa, and then stop. Leave it for five minutes to see if the pressure drops.
 - b) Then raise the pressure to 1.5MPa, and stop. Leave it for five more minutes to see if the pressure drops.
 - c) Then raise the pressure to the specified level (4.15MPa), and record the ambient temperature and the pressure.
 - d) If no pressure drop is observed with an installation pressurized to the specified level and left for about one day, it is acceptable. When the ambient temperature fall 1°C, the pressure also fall approximately 0.01MPa. The pressure, if changed, should be compensated for.
 - e) If a pressure drop is observed in checking e) and a)~d), a leak exists somewhere. Find a leak by applying bubble test liquid to welded parts and flare joints and repair it. After repair, conduct an air tightness test again.
- ② In conducting an air tightness test, use nitrogen gas and pressurize the system with nitrogen gas from the gas side. Do not use a medium other than nitrogen gas under any circumstances.

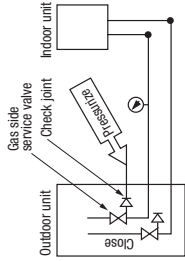

6) Evacuation

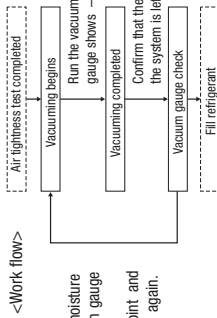

When the system has remaining moisture inside or a leaky point, the vacuum gauge indicator will rise. Check the system for a leaky point and then draw air to create a vacuum again.

Pay attention to the following points in addition to the above for the R410A and compatible machines.

- To prevent a different oil from entering, use dedicated tools, etc. to each refrigerant type. Under no circumstances must a gauge manifold and a charge hose in particular be shared with other refrigerant types (R22, R407C, etc.).
- Use a counterflow prevention adapter to prevent vacuum pump oil from entering the refrigerant system.

7) Additional refrigerant charge

(1) Calculate a required refrigerant charge volume from the following table.

Additional charge volume (g) per meter of refrigerant piping (liquid pipe ø9.52)	Refrigerant volume charged for shipment at the factory (kg)	Installation's pipe length (m) covered without additional refrigerant charge
60	2.55	15

- This unit contains factory charged refrigerant covering 15m of refrigerant piping and additional refrigerant charge on the installation site is not required for an installation with up to 15m refrigerant piping. When refrigerant piping exceeds 15m, additionally charge an amount calculated from the pipe length and the above table for the portion in excess of 15m.
- If an existing pipe system is used, required refrigerant charge volume will vary depending on the liquid pipe size. For further information, see "5. UTILIZATION OF EXISTING PIPING."


Formula to calculate the volume of additional refrigerant required

$$\text{Additional charge volume (g)} = (\text{Main length (m)} - \text{Factory charged volume 15 (m)}) \times 60 \text{ (g/m)}$$

- * When an additional charge volume calculation result is negative, it is not necessary to charge refrigerant additionally.
- For an installation measuring 15m or shorter in pipe length, charge the refrigerant volume charged for shipment at the factory, when you recharge refrigerant after servicing etc.

8) Heating and condensation prevention

- (1) Dress refrigerant pipes (both gas and liquid pipes) for heat insulation and prevention of dew condensation.
 - Improper heat insulation/anti-dew dressing can result in a water leak or dripping causing damage to household effects, etc.
- (2) Use a heat insulating material that can withstand 120°C or a higher temperature. Poor heat insulating capacity can cause heat insulation problems or cable deterioration.
 - All gas pipes must be securely heat insulated in order to prevent damage from dripping water that comes from the condensation formed on them during a cooling operation or personal injury from burns because their surface can reach quite a high temperature due to discharged gas flowing inside during a heating operation.
 - Wrap indoor units' flare joints with heat insulating parts (pipe cover) for heat insulation (both gas and liquid pipes).
 - Give heat insulation to both gas and liquid side pipes. Bundle a heat insulating material and a pipe tightly together so that no gaps may be left between them and wrap them together with a connecting cable by a dressing tape.
 - **Both gas and liquid pipes need to be dressed with 20mm or thicker heat insulation materials above the ceiling where relative humidity exceeds 70%.**

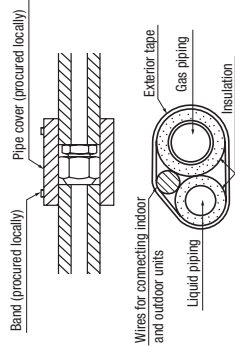


(2) Charging refrigerant

- Since R410A refrigerant must be charged in the liquid phase, you should charge it keeping the container cylinder upside down or using a refrigerant cylinder equipped with a siphon tube
- Charge refrigerant always from the liquid side service port with the service valve shut. When you find it difficult to charge a required amount, fully open the outdoor unit valves on both liquid and gas sides and discharge refrigerant from the gas (suction) side service port, while running the unit in the cooling mode. In doing so, care must be taken so that refrigerant may be discharged from the cylinder in the liquid phase all the time. When the cylinder valve is throttled down or a dedicated conversion tool to change liquid phase refrigerant into mist is used to protect the compressor, however, adjust charge conditions so that refrigerant will gassy upon entering the unit.
- In charging refrigerant, always charge a calculated volume by using a scale to measure the charge volume.
- When refrigerant is charged with the unit being run, complete a charge operation within 30minutes. Running the unit with an insufficient quantity of refrigerant for a long time can cause a compressor failure.

NOTE Put down the refrigerant volume calculated from the pipe length onto the caution label attached on the service panel.


Service valve size (mm)	Service valve cap tightening torque (N·m)	Check joint blind nut tightening torque (N·m)
ø9.52 (3/8")	20~30	10~12
ø15.88 (5/8")	30~40	

Securely tighten the service valve cap and the check joint blind nut after adjustment.

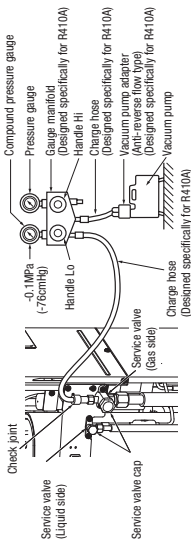


3. DRAIN PIPING WORK

- Execute drain piping by using a drain elbow and drain grommets supplied separately as accessories, where water drained from the outdoor unit is a problem.
- Water may drip where there is a larger amount of drain water. Seal around the drain elbow and drain grommets with putty or adequate caulking material.
- Condensed water may flow out from vicinity of service valve or connected pipes.
- Where you are likely to have several days of sub-zero temperatures in a row, do not use a drain elbow and drain grommets. (There is a risk of drain water freezing inside and blocking the drain.)
- Do not use drain elbow and grommet made of plastic for drain piping when base heater for outdoor unit is used. Plastic grommet and elbow will be damaged and burnt in worst case.
- Prepare another drain tray made of metallic material for collecting drain when base heater is used.

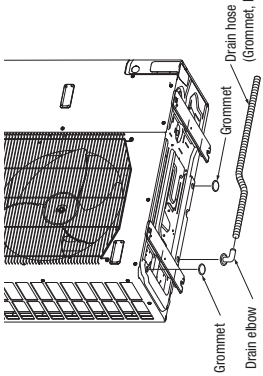

- When condensed water needs to be led to a drain, etc., install the unit on a flat base (supplied separately as a locally procured part) or concrete blocks. Then, secure space for the drain elbow and the drain hose.

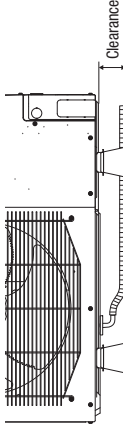

4. ELECTRICAL WIRING WORK

For details of electrical cabling, refer to the indoor unit installation manual.

Electrical installation work must be performed by an electrical installation service provider qualified by a power provider of the country.

- Electrical installation work must be executed according to the technical standards and other regulations applicable to electrical installations in the country.
- Do not lay electronic control cables (remote control and signaling wires) and other cables together outside the unit. Laying them together can result in the malfunctioning or a failure of the unit due to electric noises.
- Fasten the cables so that those may not touch the piping, etc.
- When cables are connected, make sure that all electrical components within the electrical component box are free of loose connector coupling or terminal connection and then attach the cover securely. (Improper cover attachment can result in malfunctioning or a failure of the unit, if water penetrates into the box.)
- Never use a shield cable.
- Always use a three-core cable for an indoor-outdoor connecting cable. Never use a shield cable.
- Connect a pair bearing a common terminal number with an indoor-outdoor connecting wire.
- In cabling, fasten cables securely with cable clamps so that no external force may work on terminal connections.
- Do not use any power cable lighter than one specified in parentheses for each type below.
 - braided cord (code designation 60245 IEC 51)
 - ordinary tough rubber sheathed cord (code designation 60245 IEC 53)
 - flat twin tinsel cord (code designation 60227 IEC 41)
- Use polychloroprene sheathed flexible cord (code designation 60245 IEC57) for power cables of parts of appliances for outdoor use.
- Ground the unit. Do not connect the grounding wire to a gas pipe, water pipe, lightning rod or telephone grounding wire.
- If improperly grounded, an electric shock or malfunction may result.
- A grounding wire must be connected before connecting the power cable. Provide a grounding wire longer than the power cable.
- The installation of an impulse withstanding type earth leakage breaker is necessary.
- A failure to install an earth leakage breaker can result in an accident such as an electric shock or a fire.
- Do not turn on the power until the electrical work is completed.
- Do not use a condensive capacitor for power factor improvement under any circumstances. (It does not improve power factor, while it can cause an abnormal overheating accident)
- For power cables, use conduits.

In case of faulty wiring connection, indoor unit does not operate. Then, run lamp turns on and timer lamp blinks.


Use cables for interconnection wiring to avoid loosening of the wires. CENELEC code for cables Required field cables.

- H05RN4RG1.5 (Example) or 245IEC57
- H Hermonized cable type
- O5 300/500 volts
- R Natural-and/or synth. rubber wire insulation
- N Polychloroprene rubber conductors insulation
- R Stranded core
- 4x0.5 Number of conductors
- G One conductor of the cable is the earth conductor (yellow/green)
- 1.5 Section of copper wire (mm²)


Main fuse specification

Specification	Part No.
250V 20A	SSA564A136A


Power cable, indoor - outdoor connecting wire circuit diagram

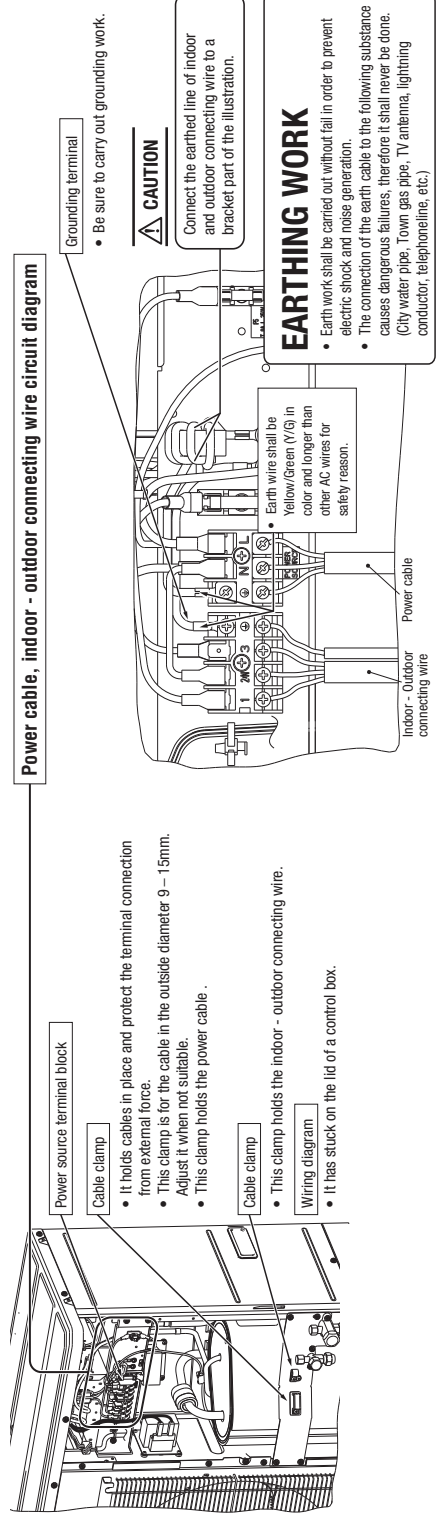

Power cable, indoor-outdoor connecting wires

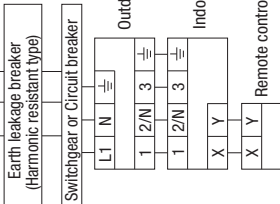


How to remove the top panel

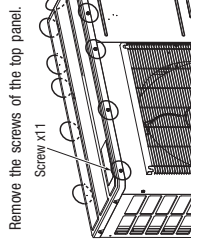

- Always perform grounding system installation work with the power cable unplugged.
- Connect a pair bearing a common terminal number with an indoor-outdoor connecting wire.
- In cabling, fasten cables securely with cable clamps so that no external force may work on terminal connections.
- Grounding terminals are provided in the terminal block.

5. UTILIZATION OF EXISTING PIPING

Check whether an existing pipe system is reusable or not by using the following flow chart.

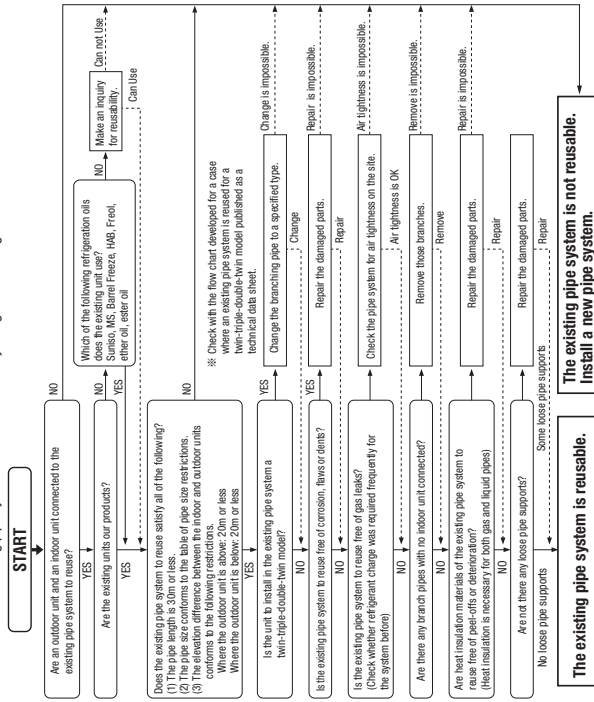


INSTALLATION TEST CHECK POINTS

Check the following points again after completion of the installation, and before turning on the power. Conduct a test run again and ensure that the unit operates properly. Explain to the customer how to use the unit and how to take care of the unit following the instruction manual.

After installation

- Power cables and connecting wires are securely fixed to the terminal block.
- The power source voltage is correct as the rating.
- The drain hose is fixed securely.
- Service valve is fully open.



CAUTION

Always use an earth leakage circuit breaker designed for inverter circuits to prevent a faulty operation.

Power source	Power cable thickness (mm ²)	Cable length (m)	Grounding wire thickness	Indoor-outdoor wire thickness × number
Single phase 3 wire 220-240V/50Hz (2N)/60Hz	5.5	25	φ1.6	φ1.6x3
Single phase 3 wire 220-240V/50Hz (2N)/60Hz	5.5	22	φ1.6	φ1.6x3

- The specifications shown in the above table are for units without heaters. For units with heaters, refer to the installation instructions or the construction instructions of the indoor unit.
- Switchgear or Circuit breaker capacity which is calculated from maximum over current should be chosen along the regulations in each country.
- The cable specifications are based on the assumption that a metal or plastic conduit is used with no more than three cables contained in a conduit and a voltage drop is 2%. For an installation falling outside of these conditions, follow the internal cabling regulations. Adapt it to the regulation in effect in each country.

<Table of pipe size restrictions>

Standard pipe size	Usable	Restricted to shorter pipe length limits
Additional charge volume per meter of pipe	60g/m	80g/m
Liquid pipe	φ9.52	φ12.7
Gas pipe	φ15.88	φ15.88
Usability	○	△
Maximum one-way pipe length	30	15
Length covered without additional charge	15	7

Formula to calculate additional charge volume

Additional charge volume (g) = (Main pipe length (m) - Length covered without additional charge shown in the table (m)) X Additional charge volume per meter of pipe shown in the table (g/m)

WARNING

- If you obtain a negative figure as a result of calculation, no additional refrigerant needs to be charged.
- Example) When an R410A is installed in a 10m long existing pipe system (liquid φ12.7, gas φ15.88), the quantity of refrigerant to charge additionally should be (10m-7m) × 80g/m = 240g.
- Where the existing unit can be run for a cooling operation -> Carry out the following steps with the existing unit (in the order of (1), (2), (3) and (4))
 - Run the unit for 30 minutes for a cooling operation.
 - Stop the indoor fan and run the unit for 3 minutes for a cooling operation (returning liquid)
 - Close the liquid side service valve of the outdoor unit and pump down (refrigerant recovery)
 - Flow with nitrogen gas. If discolored refrigeration oil or any foreign matters is discharged by the blow, wash the pipe system or install a new pipe system.
- For the flare nut, do not use the old one, but use the one supplied with the outdoor unit. Process a flare to the dimensions specified for R410A.
- Where the existing unit cannot be run for a cooling operation -> Wash the pipe system or install a new pipe system.
- If you choose to wash the pipe system, contact our distributor in the area.

3.10 TECHNICAL INFORMATION

Model FDT71VNPVH

Information to identify the model(s) to which the information relates to:				If function includes heating: Indicate the heating season the information relates to. Indicated values should relate to one heating season at a time. Include at least the heating season 'Average'.					
Indoor unit model name		FDT71VH		Average(mandatory)		Yes			
Outdoor unit model name		FDC71VNP		Warmer(if designated)		No			
Function(indicate if present)				Colder(if designated)				No	
cooling		Yes							
heating		Yes							
Item	symbol	value	unit	Item	symbol	value	class		
Design load				Seasonal efficiency and energy efficiency class					
cooling	Pdesignc	7.1	kW	cooling	SEER	6.14	A++		
heating / Average	Pdesignh	5.7	kW	heating / Average	SCOP/A	4.27	A+		
heating / Warmer	Pdesignh	-	kW	heating / Warmer	SCOP/W	-	-		
heating / Colder	Pdesignh	-	kW	heating / Colder	SCOP/C	-	-		
				unit					
Declared capacity at outdoor temperature Tdesignh				Back up heating capacity at outdoor temperature Tdesignh					
heating / Average (-10°C)	Pdh	5.7	kW	heating / Average (-10°C)	elbu	0	kW		
heating / Warmer (2°C)	Pdh	-	kW	heating / Warmer (2°C)	elbu	-	kW		
heating / Colder (-22°C)	Pdh	-	kW	heating / Colder (-22°C)	elbu	-	kW		
Declared capacity for cooling, at indoor temperature 27(19)°C and outdoor temperature Tj				Declared energy efficiency ratio, at indoor temperature 27(19)°C and outdoor temperature Tj					
Tj=35°C	Pdc	7.10	kW	Tj=35°C	EERd	3.07	-		
Tj=30°C	Pdc	5.20	kW	Tj=30°C	EERd	4.70	-		
Tj=25°C	Pdc	3.40	kW	Tj=25°C	EERd	7.35	-		
Tj=20°C	Pdc	1.50	kW	Tj=20°C	EERd	11.20	-		
Declared capacity for heating / Average season, at indoor temperature 20°C and outdoor temperature Tj				Declared coefficient of performance / Average season, at indoor temperature 20°C and outdoor temperature Tj					
Tj=-7°C	Pdh	5.00	kW	Tj=-7°C	COPd	2.70	-		
Tj=2°C	Pdh	3.00	kW	Tj=2°C	COPd	4.12	-		
Tj=7°C	Pdh	2.00	kW	Tj=7°C	COPd	5.80	-		
Tj=12°C	Pdh	1.30	kW	Tj=12°C	COPd	6.60	-		
Tj=bivalent temperature	Pdh	5.70	kW	Tj=bivalent temperature	COPd	2.50	-		
Tj=operating limit	Pdh	5.10	kW	Tj=operating limit	COPd	2.30	-		
Declared capacity for heating / Warmer season, at indoor temperature 20°C and outdoor temperature Tj				Declared coefficient of performance / Warmer season, at indoor temperature 20°C and outdoor temperature Tj					
Tj=2°C	Pdh	-	kW	Tj=2°C	COPd	-	-		
Tj=7°C	Pdh	-	kW	Tj=7°C	COPd	-	-		
Tj=12°C	Pdh	-	kW	Tj=12°C	COPd	-	-		
Tj=bivalent temperature	Pdh	-	kW	Tj=bivalent temperature	COPd	-	-		
Tj=operating limit	Pdh	-	kW	Tj=operating limit	COPd	-	-		
Declared capacity for heating / Colder season, at indoor temperature 20°C and outdoor temperature Tj				Declared coefficient of performance / Colder season, at indoor temperature 20°C and outdoor temperature Tj					
Tj=-7°C	Pdh	-	kW	Tj=-7°C	COPd	-	-		
Tj=2°C	Pdh	-	kW	Tj=2°C	COPd	-	-		
Tj=7°C	Pdh	-	kW	Tj=7°C	COPd	-	-		
Tj=12°C	Pdh	-	kW	Tj=12°C	COPd	-	-		
Tj=bivalent temperature	Pdh	-	kW	Tj=bivalent temperature	COPd	-	-		
Tj=operating limit	Pdh	-	kW	Tj=operating limit	COPd	-	-		
Tj=-15°C	Pdh	-	kW	Tj=-15°C	COPd	-	-		
Bivalent temperature				Operating limit temperature					
heating / Average	Tbiv	-10	°C	heating / Average	Tol	-15	°C		
heating / Warmer	Tbiv	-	°C	heating / Warmer	Tol	-	°C		
heating / Colder	Tbiv	-	°C	heating / Colder	Tol	-	°C		
Cycling interval capacity				Cycling interval efficiency					
for cooling	Pcyc	-	kW	for cooling	EERcyc	-	-		
for heating	Pcyc	-	kW	for heating	COPcyc	-	-		
Degradation coefficient				Degradation coefficient					
cooling	Cdc	0.25	-	heating	Cdh	0.25	-		
Electric power input in power modes other than 'active mode'				Annual electricity consumption					
off mode	Poff	10	W	cooling	Qce	405	kWh/a		
standby mode	Psb	10	W	heating / Average	Qhe	1867	kWh/a		
thermostat-off mode	Pto(cooling)	13	W	heating / Warmer	Qhe	-	kWh/a		
crankcase heater mode	Pto(heating)	27	W	heating / colder	Qhe	-	kWh/a		
	Pck	0	W						
Capacity control(indicate one of three options)				Other items					
fixed		No		Sound power level(indoor)	Lwa	59	dB(A)		
staged		No		Sound power level(outdoor)	Lwa	67	dB(A)		
variable		Yes		Global warming potential	GWP	2088	kgCO ₂ eq.		
				Rated air flow(indoor)	-	1680	m ³ /h		
				Rated air flow(outdoor)	-	2160	m ³ /h		
Contact details for obtaining more information				Name and address of the manufacturer or of its authorised representative. Mitsubishi Heavy Industries Air-Conditioning Europe, Ltd. 5 The Square, Stockley Park, Uxbridge, Middlesex, UB11 1ET, United kingdom					

Model FDT90VNP1VH

Information to identify the model(s) to which the information relates to:		If function includes heating: Indicate the heating season the information relates to. Indicated values should relate to one heating season at a time. Include at least the heating season 'Average'.	
Indoor unit model name	FDT100VH		
Outdoor unit model name	FDC90VNP1		
Function(indicate if present)		Average(mandatory)	
cooling	Yes	Yes	
heating	Yes	Warmer(if designated)	
		No	
		Colder(if designated)	
		No	
Item	symbol	value	unit
Design load			
cooling	Pdesignc	9.0	kW
heating / Average	Pdesignh	8.1	kW
heating / Warmer	Pdesignh	-	kW
heating / Colder	Pdesignh	-	kW
Declared capacity at outdoor temperature Tdesignh		Back up heating capacity at outdoor temperature Tdesignh	
heating / Average (-10°C)	Pdh	8.1	kW
heating / Warmer (2°C)	Pdh	-	kW
heating / Colder (-22°C)	Pdh	-	kW
Declared capacity for cooling, at indoor temperature 27(19)°C and outdoor temperature Tj		Declared energy efficiency ratio, at indoor temperature 27(19)°C and outdoor temperature Tj	
Tj=35°C	Pdc	9.00	kW
Tj=30°C	Pdc	6.60	kW
Tj=25°C	Pdc	4.30	kW
Tj=20°C	Pdc	2.20	kW
Declared capacity for heating / Average season, at indoor temperature 20°C and outdoor temperature Tj		Declared coefficient of performance / Average season, at indoor temperature 20°C and outdoor temperature Tj	
Tj=-7°C	Pdh	7.10	kW
Tj=2°C	Pdh	4.30	kW
Tj=7°C	Pdh	2.70	kW
Tj=12°C	Pdh	1.36	kW
Tj=bivalent temperature	Pdh	8.10	kW
Tj=operating limit	Pdh	7.10	kW
Declared capacity for heating / Warmer season, at indoor temperature 20°C and outdoor temperature Tj		Declared coefficient of performance / Warmer season, at indoor temperature 20°C and outdoor temperature Tj	
Tj=2°C	Pdh	-	kW
Tj=7°C	Pdh	-	kW
Tj=12°C	Pdh	-	kW
Tj=bivalent temperature	Pdh	-	kW
Tj=operating limit	Pdh	-	kW
Declared capacity for heating / Colder season, at indoor temperature 20°C and outdoor temperature Tj		Declared coefficient of performance / Colder season, at indoor temperature 20°C and outdoor temperature Tj	
Tj=-7°C	Pdh	-	kW
Tj=2°C	Pdh	-	kW
Tj=7°C	Pdh	-	kW
Tj=12°C	Pdh	-	kW
Tj=bivalent temperature	Pdh	-	kW
Tj=operating limit	Pdh	-	kW
Tj=-15°C	Pdh	-	kW
Bivalent temperature		Operating limit temperature	
heating / Average	Tbiv	-10	°C
heating / Warmer	Tbiv	-	°C
heating / Colder	Tbiv	-	°C
heating / Average		Tol	
		-15	
heating / Warmer		Tol	
		-	
heating / Colder		Tol	
		-	
Cycling interval capacity		Cycling interval efficiency	
for cooling	Pcycc	-	kW
for heating	Pcych	-	kW
for cooling		EERcyc	
		-	
for heating		COPcyc	
		-	
Degradation coefficient		Degradation coefficient	
cooling	Cdc	0.25	-
heating		Cdh	
		0.25	
Electric power input in power modes other than 'active mode'		Annual electricity consumption	
off mode	Poff	9	W
standby mode	Psb	9	W
thermostat-off mode	Pto(cooling)	25	W
	Pto(heating)	39	W
crankcase heater mode	Pck	0	W
cooling		Qce	
		465	
heating / Average		Qhe	
		2754	
heating / Warmer		Qhe	
		-	
heating / colder		Qhe	
		-	
Capacity control(indicate one of three options)		Other items	
fixed	No	Sound power level(indoor)	
staged	No	Lwa	
variable	Yes	62	
		dB(A)	
		Sound power level(outdoor)	
		Lwa	
		69	
		dB(A)	
		Global warming potential	
		GWP	
		2088	
		kgCO ₂ eq.	
		Rated air flow(indoor)	
		-	
		2220	
		m ³ /h	
		Rated air flow(outdoor)	
		-	
		3780	
		m ³ /h	
Contact details for obtaining more information	Name and address of the manufacturer or of its authorised representative. Mitsubishi Heavy Industries Air-Conditioning Europe, Ltd. 5 The Square, Stockley Park, Uxbridge, Middlesex, UB11 1ET, United kingdom		

Model FDT100VNP1VH

Information to identify the model(s) to which the information relates to:		If function includes heating: Indicate the heating season the information relates to. Indicated values should relate to one heating season at a time. Include at least the heating season 'Average'.	
Indoor unit model name	FDT100VH		
Outdoor unit model name	FDC100VNP		
Function(indicate if present)		Average(mandatory)	
cooling	Yes	Warmer(if designated)	No
heating	Yes	Colder(if designated)	No
Item	symbol	value	unit
Design load			
cooling	Pdesignc	10.0	kW
heating / Average	Pdesignh	8.1	kW
heating / Warmer	Pdesignh	-	kW
heating / Colder	Pdesignh	-	kW
Item	symbol	value	class
Seasonal efficiency and energy efficiency class			
cooling	SEER	6.78	A++
heating / Average	SCOP/A	4.53	A+
heating / Warmer	SCOP/W	-	-
heating / Colder	SCOP/C	-	-
Declared capacity at outdoor temperature Tdesignh		Back up heating capacity at outdoor temperature Tdesignh	
heating / Average (-10°C)	Pdh	8.1	kW
heating / Warmer (2°C)	Pdh	-	kW
heating / Colder (-22°C)	Pdh	-	kW
heating / Average (-10°C)	elbu	0	kW
heating / Warmer (2°C)	elbu	-	kW
heating / Colder (-22°C)	elbu	-	kW
Declared capacity for cooling, at indoor temperature 27(19)°C and outdoor temperature Tj		Declared energy efficiency ratio, at indoor temperature 27(19)°C and outdoor temperature Tj	
Tj=35°C	Pdc	10.00	kW
Tj=30°C	Pdc	7.37	kW
Tj=25°C	Pdc	4.80	kW
Tj=20°C	Pdc	3.50	kW
Tj=35°C	EERd	3.62	-
Tj=30°C	EERd	5.30	-
Tj=25°C	EERd	8.07	-
Tj=20°C	EERd	12.07	-
Declared capacity for heating / Average season, at indoor temperature 20°C and outdoor temperature Tj		Declared coefficient of performance / Average season, at indoor temperature 20°C and outdoor temperature Tj	
Tj=-7°C	Pdh	7.10	kW
Tj=2°C	Pdh	4.24	kW
Tj=7°C	Pdh	2.80	kW
Tj=12°C	Pdh	2.85	kW
Tj=bivalent temperature	Pdh	8.10	kW
Tj=operating limit	Pdh	7.15	kW
Tj=-7°C	COPd	2.96	-
Tj=2°C	COPd	4.46	-
Tj=7°C	COPd	5.83	-
Tj=12°C	COPd	6.95	-
Tj=bivalent temperature	COPd	2.66	-
Tj=operating limit	COPd	2.50	-
Declared capacity for heating / Warmer season, at indoor temperature 20°C and outdoor temperature Tj		Declared coefficient of performance / Warmer season, at indoor temperature 20°C and outdoor temperature Tj	
Tj=2°C	Pdh	-	kW
Tj=7°C	Pdh	-	kW
Tj=12°C	Pdh	-	kW
Tj=bivalent temperature	Pdh	-	kW
Tj=operating limit	Pdh	-	kW
Tj=2°C	COPd	-	-
Tj=7°C	COPd	-	-
Tj=12°C	COPd	-	-
Tj=bivalent temperature	COPd	-	-
Tj=operating limit	COPd	-	-
Declared capacity for heating / Colder season, at indoor temperature 20°C and outdoor temperature Tj		Declared coefficient of performance / Colder season, at indoor temperature 20°C and outdoor temperature Tj	
Tj=-7°C	Pdh	-	kW
Tj=2°C	Pdh	-	kW
Tj=7°C	Pdh	-	kW
Tj=12°C	Pdh	-	kW
Tj=bivalent temperature	Pdh	-	kW
Tj=operating limit	Pdh	-	kW
Tj=-15°C	Pdh	-	kW
Tj=-7°C	COPd	-	-
Tj=2°C	COPd	-	-
Tj=7°C	COPd	-	-
Tj=12°C	COPd	-	-
Tj=bivalent temperature	COPd	-	-
Tj=operating limit	COPd	-	-
Tj=-15°C	COPd	-	-
Bivalent temperature		Operating limit temperature	
heating / Average	Tbiv	-10	°C
heating / Warmer	Tbiv	-	°C
heating / Colder	Tbiv	-	°C
heating / Average	Tol	-15	°C
heating / Warmer	Tol	-	°C
heating / Colder	Tol	-	°C
Cycling interval capacity		Cycling interval efficiency	
for cooling	Pcycc	-	kW
for heating	Pcyh	-	kW
for cooling	EERcyc	-	-
for heating	COPcyc	-	-
Degradation coefficient		Degradation coefficient	
cooling	Cdc	0.25	-
heating	Cdh	0.25	-
Electric power input in power modes other than 'active mode'		Annual electricity consumption	
off mode	Poff	9	W
standby mode	Psb	9	W
thermostat-off mode	Pto(cooling)	25	W
	Pto(heating)	39	W
crankcase heater mode	Pck	0	W
cooling	Qce	517	kWh/a
heating / Average	Qhe	2508	kWh/a
heating / Warmer	Qhe	-	kWh/a
heating / colder	Qhe	-	kWh/a
Capacity control(indicate one of three options)		Other items	
fixed		Sound power level(indoor)	Lwa 62 dB(A)
staged	No	Sound power level(outdoor)	Lwa 70 dB(A)
variable	No	Global warming potential	GWP 2088 kgCO ₂ eq.
	Yes	Rated air flow(indoor)	- 2220 m ³ /h
		Rated air flow(outdoor)	- 4500 m ³ /h
Contact details for obtaining more information	Name and address of the manufacturer or of its authorised representative. Mitsubishi Heavy Industries Air-Conditioning Europe, Ltd. 5 The Square, Stockley Park, Uxbridge, Middlesex, UB11 1ET, United Kingdom		

4. V MULTI SYSTEM

TABLE OF CONTENTS

4.1 HYPER INVERTER PACKAGED AIR-CONDITIONERS	226
4.2 MICRO INVERTER PACKAGED AIR-CONDITIONERS	239



4.1 HYPER INVERTER PACKAGED AIR-CONDITIONERS

CONTENTS

4.1.1 GENERAL INFORMATION	227
(1) How to read the model name.....	227
(2) Table of models	227
(3) Table of system combinations	227
4.1.2 SPECIFICATIONS	228
(1) Indoor units	228
(2) Outdoor units	230
(3) Operation chart	234
4.1.3 EXTERIOR DIMENSIONS	237
4.1.4 ELECTRICAL WIRING	237
4.1.5 NOISE LEVEL	237
4.1.6 TEMPERATURE AND VELOCITY DISTRIBUTION	237
4.1.7 PIPING SYSTEM	237
4.1.8 RANGE OF USAGE & LIMITATIONS	237
4.1.9 SELECTION CHART	237
4.1.10 APPLICATION DATA	237
4.1.11 TECHNICAL INFORMATION	238

4.1.1 GENERAL INFORMATION

(1) How to read the model name

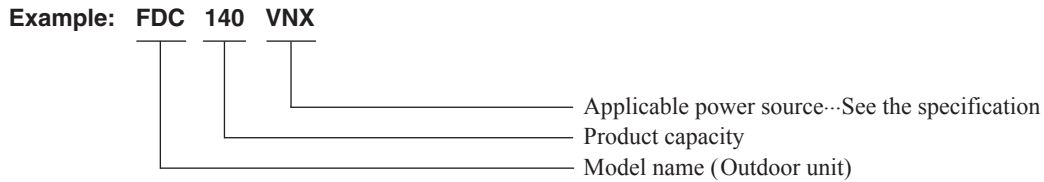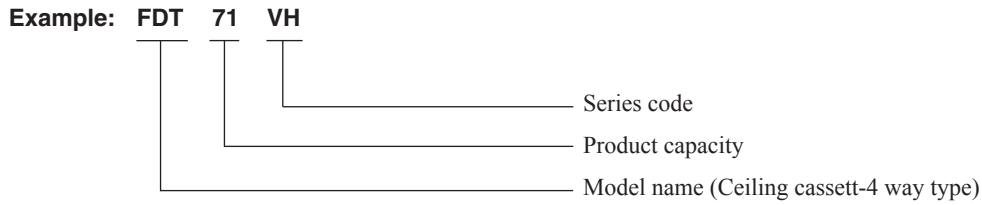

(2) Table of models

Model \ Capacity	50	71
Ceiling cassette-4 way type (FDT)	○	○
Outdoor unit to be combined (FDC)	FDC125VNX FDC125VSX	FDC140VNX FDC140VSX

(3) Table of system combinations

Outdoor unit	Type	Indoor unit assembly capacity	Branch pipe set (Option)
FDC125VNX FDC125VSX	Twin	50+71	DIS-WA1
FDC140VNX FDC140VSX	Twin	71+71	

Notes(1) Always use the branch piping set (option) at branches in the refrigerant piping.
 (2) If wireless specifications are used, use 1 wireless indoor unit in combination with wired indoor units.
 (3) The combinations except the above table forbids.

4.1.2 SPECIFICATIONS

(1) Indoor unit

Item		Model		FDT50VH		
Power source		1 Phase 220-240V 50Hz / 220V 60Hz				
Operation data	Nominal cooling capacity	kW	5.0			
	Nominal heating capacity	kW	5.4			
	Sound power level	Cooling	dB(A)	55		
		Heating		56		
	Sound pressure level	Cooling	P-Hi : 41 Hi : 33 Me : 30 Lo : 26			
		Heating	P-Hi : 42 Hi : 33 Me : 28 Lo : 20			
Silent mode sound pressure level		—				
Exterior dimensions (Height x Width x Depth)		mm	Unit 236 × 840 × 840 Panel 35 × 950 × 950			
Exterior appearance (Munsell color)		Plaster white (6.8Y8.9/0.2) near equivalent				
Net weight		kg	Unit 19 Panel 5			
Heat exchanger		Louver fin & inner grooved tubing				
Fan type & Q'ty		Turbo fan ×1				
Fan motor (Starting method)		W	50 < Direct line start >			
Air flow	Cooling	m ³ /min	P-Hi : 20 Hi : 16 Me : 13 Lo : 10			
	Heating					
Available external static pressure		Pa	0			
Outside air intake		Possible				
Air filter, Quality / Quantity		Pocket plastic net ×1(Washable)				
Shock & vibration absorber		Rubber sleeve(for fan motor)				
Electric heater		W	—			
Operation control	Remote control	(Option) Wired : RC-EX3A , RC-E5 , RCH-E3 Wireless : RCN-T-5AW-E2				
	Room temperature control	Thermostat by electronics				
	Operation display	—				
Safety equipments		Internal thermostat for fan motor Frost protection thermostat				
Installation data	Refrigerant piping size (O.D.)	mm	Liquid line: ø6.35 (1/4") Gas line: ø12.7 (1/2")			
	Connecting method	Flare piping				
	Attached length of piping	m	—			
	Insulation for piping	Necessary (both Liquid & Gas lines)				
	Drain hose	Hose connectable VP25(O.D.32)				
Drain pump, max lift height		mm	Built-in drain pump, 850			
IP number		IPX0				
Standard accessories		Mounting kit, Drain hose				
Option parts		—				

Notes (1) The data are measured at the following conditions.

Item	Indoor air temperature		Outdoor air temperature		Standards
	DB	WB	DB	WB	
Cooling	27°C	19°C	35°C	24°C	ISO5151-T1
Heating	20°C	—	7°C	6°C	ISO5151-H1

(2) This air-conditioner is manufactured and tested in conformity with the ISO.

(3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.

(4) The operation data indicate when the air-conditioner is operated at 230V 50Hz or 220V 60Hz.

Item		Model		FDT71VH		
Power source		1 Phase 220-240V 50Hz / 220V 60Hz				
Operation data	Nominal cooling capacity (range)	kW	7.1			
	Nominal heating capacity (range)	kW	8.0			
	Sound power level	Cooling	dB(A)	59		
		Heating		60		
	Sound pressure level	Cooling		P-Hi : 46 Hi : 34 Me : 31 Lo : 26		
Heating		P-Hi : 46 Hi : 34 Me : 31 Lo : 26				
Silent mode sound pressure level		—				
Exterior dimensions (Height x Width x Depth)		mm	Unit 236 × 840 × 840 Panel 35 × 950 × 950			
Exterior appearance (Munsell color)			Plaster white (6.8Y8.9/0.2) near equivalent			
Net weight		kg	Unit 21 Panel 5			
Heat exchanger			Louver fin & inner grooved tubing			
Fan type & Q'ty			Turbo fan ×1			
Fan motor (Starting method)		W	50 < Direct line start >			
Air flow	Cooling	m ³ /min	P-Hi : 28 Hi : 18 Me : 15 Lo : 12			
	Heating					
Available external static pressure		Pa	0			
Outside air intake			Possible			
Air filter, Quality / Quantity			Pocket plastic net ×1(Washable)			
Shock & vibration absorber			Rubber sleeve(for fan motor)			
Electric heater		W	—			
Operation control	Remote control		(Option) Wired : RC-EX3A , RC-E5 , RCH-E3 Wireless : RCN-T-5AW-E2			
	Room temperature control		Thermostat by electronics			
	Operation display		—			
Safety equipments			Internal thermostat for fan motor Frost protection thermostat			
Installation data	Refrigerant piping size (O.D.)	mm	Liquid line: ø9.52 (3/8") Gas line: ø15.88 (5/8")			
	Connecting method		Flare piping			
	Attached length of piping	m	—			
	Insulation for piping		Necessary (both Liquid & Gas lines)			
Drain hose			Hose connectable VP25(O.D.32)			
Drain pump, max lift height		mm	Built-in drain pump, 850			
IP number			IPX0			
Standard accessories			Mounting kit, Drain hose			
Option parts			—			

Notes (1) The data are measured at the following conditions.

Operation	Item	Indoor air temperature		Outdoor air temperature		Standards
		DB	WB	DB	WB	
Cooling		27°C	19°C	35°C	24°C	ISO5151-T1
Heating		20°C	—	7°C	6°C	ISO5151-H1

(2) This air-conditioner is manufactured and tested in conformity with the ISO.

(3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.

(4) The operation data indicate when the air-conditioner is operated at 230V 50Hz or 220V 60Hz.

(2) Outdoor units

Item		Model	FDC125VNX			
Power source			1 Phase 220-240V 50Hz / 220V 60Hz			
Operation data	Nominal cooling capacity (range)	kW	12.5 [5.0(Min.)-14.0(Max.)]			
	Nominal heating capacity (range)	kW	14.0 [4.0(Min.)-17.0(Max.)]			
	Sound power level	Cooling	dB(A)	70		
		Heating				
	Sound pressure level	Cooling		48		
Heating		50				
Silent mode sound pressure level		—				
Exterior dimensions (Height x Width x Depth)		mm	1300×970×370			
Exterior appearance (Munsell color)			Stucco white (4.2Y7.5/1.1) near equivalent			
Net weight		kg	105			
Compressor type & Q'ty			RMT5134MDE2(Twin rotary type)×1			
Compressor motor (Starting method)		kW	Direct line start			
Refrigerant oil (Amount, type)		L	0.9 (M-MA68)			
Refrigerant (Type, amount, pre-charge length)		kg	R410A 4.5 in outdoor unit (Incl. the amount for the piping of 30m)			
Heat exchanger			M shape fin & inner grooved tubing			
Refrigerant control			Electronic expansion valve			
Fan type & Q'ty			Propeller fan ×2			
Fan motor (Starting method)		W	86 x 2 < Direct line start >			
Air flow	Cooling	m ³ /min	100			
	Heating					
Shock & vibration absorber			Rubber sleeve(for compressor)			
Electric heater		W	20(Crank case heater)			
Safety equipments			Internal thermostat for fan motor Abnormal discharge temperature protection			
Installation data	Refrigerant piping size (O.D.)	mm	Liquid line: ϕ 9.52 (3/8") Gas line: ϕ 15.88 (5/8")			
	Connecting method		Flare piping			
	Attached length of piping	m	—			
	Insulation for piping		Necessary (both Liquid & Gas lines)			
	Refrigerant line (one way) length	m	Max.100m			
	Vertical height diff. between O/U and I/U	m	Max.30m (Outdoor unit is higher) Max.15m (Outdoor unit is lower)			
Drain hose			Hole size ϕ 20 x 3 pcs			
IP number			IP24			
Standard accessories			Edging			
Option parts			—			
Notes		(1) The data are measured at the following conditions. The pipe length is 7.5m.				
	Item	Indoor air temperature		Outdoor air temperature		Standards
Operation		DB	WB	DB	WB	
	Cooling	27°C	19°C	35°C	24°C	ISO5151-T1
	Heating	20°C	—	7°C	6°C	ISO5151-H1
(2) This air-conditioner is manufactured and tested in conformity with the ISO.						
(3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.						
(4) The operation data indicate when the air-conditioner is operated at 230V 50Hz or 220V 60Hz.						

Item		Model		FDC125VSX		
Power source		3 Phase 380-415V 50Hz / 380V 60Hz				
Operation data	Nominal cooling capacity (range)	kW	12.5 [5.0(Min.)-14.0(Max.)]			
	Nominal heating capacity (range)	kW	14.0 [4.0(Min.)-18.0(Max.)]			
	Sound power level	Cooling	dB(A)	70		
		Heating		48		
	Sound pressure level	Cooling		50		
Heating		—				
Silent mode sound pressure level		—				
Exterior dimensions (Height x Width x Depth)		mm	1300×970×370			
Exterior appearance (Munsell color)		Stucco white (4.2Y7.5/1.1) near equivalent				
Net weight		kg	105			
Compressor type & Q'ty		RMT5134MDE3 (Twin rotary type)×1				
Compressor motor (Starting method)		kW	Direct line start			
Refrigerant oil (Amount, type)		L	0.9 (M-MA68)			
Refrigerant (Type, amount, pre-charge length)		kg	R410A 4.5 in outdoor unit (Incl. the amount for the piping of 30m)			
Heat exchanger		M shape fin & inner grooved tubing				
Refrigerant control		Electronic expansion valve				
Fan type & Q'ty		Propeller fan ×2				
Fan motor (Starting method)		W	86 x 2 < Direct line start >			
Air flow	Cooling	m ³ /min	100			
	Heating		—			
Shock & vibration absorber		Rubber sleeve(for compressor)				
Electric heater		W	20(Crank case heater)			
Safety equipments		Internal thermostat for fan motor Abnormal discharge temperature protection				
Installation data	Refrigerant piping size (O.D.)	mm	Liquid line: ϕ 9.52 (3/8") Gas line: ϕ 15.88 (5/8")			
	Connecting method	Flare piping				
	Attached length of piping	m	—			
	Insulation for piping	Necessary (both Liquid & Gas lines)				
	Refrigerant line (one way) length	m	Max.100m			
	Vertical height diff. between O/U and I/U	m	Max.30m (Outdoor unit is higher)		Max.15m (Outdoor unit is lower)	
Drain hose		Hole size ϕ 20 x 3 pcs				
IP number		IP24				
Standard accessories		Edging				
Option parts		—				
Notes		(1) The data are measured at the following conditions. The pipe length is 7.5m.				
Operation	Item	Indoor air temperature		Outdoor air temperature		Standards
		DB	WB	DB	WB	
	Cooling	27°C	19°C	35°C	24°C	
Heating	20°C	—	7°C	6°C	ISO5151-H1	
(2) This air-conditioner is manufactured and tested in conformity with the ISO.						
(3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.						
(4) The operation data indicate when the air-conditioner is operated at 400V 50Hz or 380V 60Hz.						



Item		Model	FDC140VNX			
Power source			1 Phase 220-240V 50Hz / 220V 60Hz			
Operation data	Nominal cooling capacity (range)	kW	14.0 [5.0(Min.)-16.0(Max.)]			
	Nominal heating capacity (range)	kW	16.0 [4.0(Min.)-18.0(Max.)]			
	Sound power level	Cooling	dB(A)	72		
		Heating		49		
	Sound pressure level	Cooling		52		
Heating		—				
Silent mode sound pressure level			—			
Exterior dimensions (Height x Width x Depth)		mm	1300×970×370			
Exterior appearance (Munsell color)			Stucco white (4.2Y7.5/1.1) near equivalent			
Net weight		kg	105			
Compressor type & Q'ty			RMT5134MDE2(Twin rotary type)×1			
Compressor motor (Starting method)		kW	Direct line start			
Refrigerant oil (Amount, type)		L	0.9 (M-MA68)			
Refrigerant (Type, amount, pre-charge length)		kg	R410A 4.5 in outdoor unit (Incl. the amount for the piping of 30m)			
Heat exchanger			M shape fin & inner grooved tubing			
Refrigerant control			Electronic expansion valve			
Fan type & Q'ty			Propeller fan ×2			
Fan motor (Starting method)		W	86 x 2 < Direct line start >			
Air flow	Cooling	m ³ /min	100			
	Heating					
Shock & vibration absorber			Rubber sleeve(for compressor)			
Electric heater		W	20(Crank case heater)			
Safety equipments			Internal thermostat for fan motor Abnormal discharge temperature protection			
Installation data	Refrigerant piping size (O.D.)	mm	Liquid line: ϕ 9.52 (3/8") Gas line: ϕ 15.88 (5/8")			
	Connecting method		Flare piping			
	Attached length of piping	m	—			
	Insulation for piping		Necessary (both Liquid & Gas lines)			
	Refrigerant line (one way) length	m	Max.100m			
	Vertical height diff. between O/U and I/U	m	Max.30m (Outdoor unit is higher) Max.15m (Outdoor unit is lower)			
Drain hose			Hole size ϕ 20 x 3 pcs			
IP number			IP24			
Standard accessories			Edging			
Option parts			—			
Notes		(1) The data are measured at the following conditions. The pipe length is 7.5m.				
Operation	Item	Indoor air temperature		Outdoor air temperature		Standards
		DB	WB	DB	WB	
	Cooling	27°C	19°C	35°C	24°C	
Heating	20°C	—	7°C	6°C	ISO5151-H1	
(2) This air-conditioner is manufactured and tested in conformity with the ISO.						
(3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.						
(4) The operation data indicate when the air-conditioner is operated at 230V 50Hz or 220V 60Hz.						

Item		Model		FDC140VSX		
Power source		3 Phase 380-415V 50Hz / 380V 60Hz				
Operation data	Nominal cooling capacity (range)	kW	14.0 [5.0(Min.)-16.0(Max.)]			
	Nominal heating capacity (range)	kW	16.0 [4.0(Min.)-20.0(Max.)]			
	Sound power level	Cooling	dB(A)	72		
		Heating		49		
	Sound pressure level	Cooling		52		
Heating		—				
Silent mode sound pressure level		—				
Exterior dimensions (Height x Width x Depth)		mm	1300×970×370			
Exterior appearance (Munsell color)		Stucco white (4.2Y7.5/1.1) near equivalent				
Net weight		kg	105			
Compressor type & Q'ty		RMT5134MDE3(Twin rotary type)×1				
Compressor motor (Starting method)		kW	Direct line start			
Refrigerant oil (Amount, type)		L	0.9 (M-MA68)			
Refrigerant (Type, amount, pre-charge length)		kg	R410A 4.5 in outdoor unit (Incl. the amount for the piping of 30m)			
Heat exchanger		M shape fin & inner grooved tubing				
Refrigerant control		Electronic expansion valve				
Fan type & Q'ty		Propeller fan ×2				
Fan motor (Starting method)		W	86 x 2 < Direct line start >			
Air flow	Cooling	m ³ /min	100			
	Heating		—			
Shock & vibration absorber		Rubber sleeve(for compressor)				
Electric heater		W	20(Crank case heater)			
Safety equipments		Internal thermostat for fan motor Abnormal discharge temperature protection				
Installation data	Refrigerant piping size (O.D.)	mm	Liquid line: ϕ 9.52 (3/8") Gas line: ϕ 15.88 (5/8")			
	Connecting method	Flare piping				
	Attached length of piping	m	—			
	Insulation for piping	Necessary (both Liquid & Gas lines)				
	Refrigerant line (one way) length	m	Max.100m			
	Vertical height diff. between O/U and I/U	m	Max.30m (Outdoor unit is higher)		Max.15m (Outdoor unit is lower)	
Drain hose		Hole size ϕ 20 x 3 pcs				
IP number		IP24				
Standard accessories		Edging				
Option parts		—				
Notes		(1) The data are measured at the following conditions. The pipe length is 7.5m.				
Operation	Item	Indoor air temperature		Outdoor air temperature		Standards
		DB	WB	DB	WB	
	Cooling	27°C	19°C	35°C	24°C	
Heating	20°C	—	7°C	6°C	ISO5151-H1	
(2) This air-conditioner is manufactured and tested in conformity with the ISO.						
(3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.						
(4) The operation data indicate when the air-conditioner is operated at 400V 50Hz or 380V 60Hz.						

(3) Operation chart

The V Multi is a system that allows for different models and capacities of indoor units to be connected so the individual operating characteristics of the indoor and outdoor are provided. Use the procedure shown in Item (c) to calculate the combined operating characteristics.

(a) Operating characteristic of outdoor unit

(220-240V 50Hz/220V 60Hz)

Item	Model		FDC125VNX	FDC140VNX
Cooling power consumption	kW		3.11	4.02
Heating power consumption				3.26
Cooling running current	A		13.7/14.3	17.6/18.4
Heating running current				14.3/15.0
Inrush current <Max. running current>	A		5 <26>	

(380-415V 50Hz/380V 60Hz)

Item	Model		FDC125VSX	FDC140VSX
Cooling power consumption	kW		3.11	4.02
Heating power consumption				3.26
Cooling running current	A		7.9/8.3	10.1/10.7
Heating running current				8.2/8.7
Inrush current <Max. running current>	A		5 <15>	

Note(1) This packaged air-conditioner is manufactured and tested in conformity with the following standard.
ISO5151-T1 "UNITARY AIR-CONDITIONERS"

(b) Operating characteristic of indoor unit

(220-240V 50Hz/220V 60Hz)

Item	Model		FDT50VH	FDT71VH
Cooling power consumption	kW		0.04-0.04/0.04	0.08-0.08/0.08
Heating power consumption				0.04-0.04/0.04
Cooling running current	A		0.36-0.33/0.36	0.70-0.64/0.70
Heating running current				0.36-0.33/0.36

Notes(1) This packaged air-conditioner is manufactured and tested in conformity with the following standard.
ISO5151-T1 "UNITARY AIR-CONDITIONERS"

(2) The values shown in the above table are common to both cooling and heating operations.

(c) Calculation of total operation characteristics

Since the operation characteristics of V Multi system depend on combination of indoor unit, calculate the total operation characteristics of the system by using the formulas below according to specifications of each indoor unit or outdoor unit.

1) 1 Phase models**a) Total power consumption**

Total power consumption (kW) = Power consumption of outdoor unit + Σ (Power consumption of indoor unit)

b) Total running current

Total running current (A) = Running current of outdoor unit + Σ (Running current of indoor unit)

c) Total power factor

Total power factor (%) = [Total power consumption (W) / Total running current (A) \times Power source] \times 100

Total operation characteristics = Operation characteristic value of outdoor unit + Operation characteristic value of indoor unit

[Example]

(Conditions) Operation voltage Indoor unit: 220V, 50Hz
 Outdoor unit: 220V, 50Hz
 Operation mode Cooling and Heating
 Unit..... Outdoor unit: FDC140VNX \times 1 unit
 Indoor unit: FDT71VH \times 2 units

Operation characteristics of each unit

(Cooling/Heating)

Item \ Model	FDC140VNX	FDT71VH
Power consumption (kW)	4.02/4.03	0.08/0.08
Running current (A)	17.6/17.6	0.70/0.70

① Total power consumption (kW)

(Cooling) $4.02 + (0.08 \times 2) = 4.18$

(Heating) $4.03 + (0.08 \times 2) = 4.19$

② Total running current (A)

(Cooling) $17.6 + (0.70 \times 2) = 19.0$

(Heating) $17.6 + (0.70 \times 2) = 19.0$

③ Total power factor (%)

(Cooling) $\frac{4.18 \times 1000}{19.0 \times 220} \times 100 \approx 99\%$

(Heating) $\frac{4.19 \times 1000}{19.0 \times 220} \times 100 \approx 99\%$

2) 3 Phase models**a) Total power consumption**

Total power consumption (kW) = Power consumption of outdoor unit + Σ (Power consumption of indoor unit)

b) Total running current

Total running current (A) = Running current of outdoor unit + [Σ (Running current of indoor unit) \times 1/3]

c) Total power factor

Total power factor (%) = [Total power consumption (W) / $\sqrt{3} \times$ Total running current (A) \times Power source] \times 100

Total operation characteristics = Operation characteristic value of outdoor unit + Operation characteristic value of indoor unit

4.1.3 EXTERIOR DIMENSIONS

- (1) Indoor units See page 12
- (2) Outdoor units See page 14
- (3) Remote control (Option parts) See page 16

4.1.4 ELECTRICAL WIRING

- (1) Indoor units See page 19
- (2) Outdoor units See page 20

4.1.5 NOISE LEVEL

- (1) Indoor units See page 23
- (2) Outdoor units See page 24

4.1.6 TEMPERATURE AND VELOCITY DISTRIBUTION See page 26

4.1.7 PIPING SYSTEM See page 28

4.1.8 RANGE OF USAGE & LIMITATIONS See page 30

4.1.9 SELECTION CHART See page 33

4.1.10 APPLICATION DATA

- (1) Installation of indoor unit See page 42
- (2) Electric wiring work installation See page 48
- (3) Installation of wired remote control (Option parts) See page 52
- (4) Installation of outdoor unit
 - (a) Models FDC125, 140VNX,125, 140VSX See page 72
- (5) Instructions for branching pipe set (DIS-WA1,WB1,TA1,TB1) See page 80

4.1.11 TECHNICAL INFORMATION

Models FDT50VH, 71VH

Model(s) : FDT50VH							
Item	Symbol	Value	Unit	Item	Symbol	Value	Unit
Cooling capacity (sensible)	$P_{rated,c}$	4.4	kW	Total electric power input	P_{elec}	0.040	kW
Cooling capacity (latent)	$P_{rated,c}$	0.6	kW	Sound power level (per speed setting,if applicable)	L_{WA}	55.0	dB
Heating capacity	$P_{rated,h}$	5.4	kW				
Contact details	Mitsubishi heavy industries thermal systems,LTD						

Model(s) : FDT71VH							
Item	Symbol	Value	Unit	Item	Symbol	Value	Unit
Cooling capacity (sensible)	$P_{rated,c}$	6.1	kW	Total electric power input	P_{elec}	0.080	kW
Cooling capacity (latent)	$P_{rated,c}$	1.0	kW	Sound power level (per speed setting,if applicable)	L_{WA}	59.0	dB
Heating capacity	$P_{rated,h}$	8.0	kW				
Contact details	Mitsubishi heavy industries thermal systems,LTD						

4.2 MICRO INVERTER PACKAGED AIR-CONDITIONERS


CONTENTS

4.2.1 GENERAL INFORMATION	240
(1) How to read the model name	240
(2) Table of models	240
(3) Table of system combinations	240
4.2.2 SPECIFICATIONS	241
(1) Indoor units	241
(2) Outdoor units	246
(3) Operation chart	252
4.2.3 EXTERIOR DIMENSIONS	255
4.2.4 ELECTRICAL WIRING	255
4.2.5 NOISE LEVEL	255
4.2.6 TEMPERATURE AND VELOCITY DISTRIBUTION	255
4.2.7 PIPING SYSTEM	255
4.2.8 RANGE OF USAGE & LIMITATIONS	255
4.2.9 SELECTION CHART	255
4.2.10 APPLICATION DATE	255
4.2.11 TECHNICAL INFORMATION	256


4.2.1 GENERAL INFORMATION

(1) How to read the model name

Example: **FDT 50 VH**

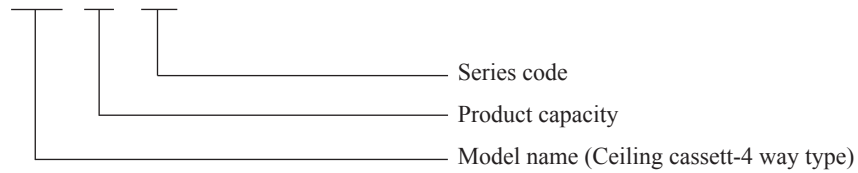

Example: **FDC 125 VNA**

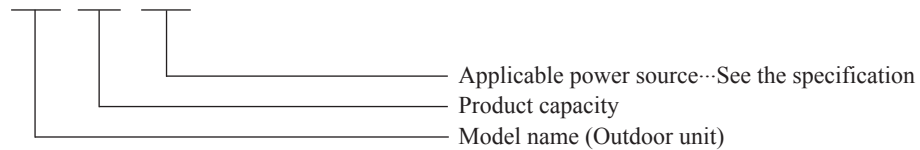

(2) Table of models

Model \ Capacity	50	60	71	100	125
Ceiling cassette-4 way type (FDT)	○	○	○	○	○
Outdoor unit to be combined (FDC)	FDC125VNA FDC125VSA	FDC140VNA FDC140VSA	FDC200VSA	FDC250VSA	

(3) Table of system combinations

Outdoor unit	Type	Indoor unit assembly capacity	Branch pipe set (Option)
FDC125VNA FDC125VSA	Twin	50+71	DIS-WA1
	Twin	71+71	
FDC140VNA FDC140VSA	Twin	100+100	DIS-WB1
	Twin	71+125	
FDC200VSA	Triple	71+71+71	DIS-TB1 or DIS-WA1 × 1set DIS-WB1 × 1set
	Twin	125+125	DIS-WB1
FDC250VSA	Triple	60+60+125	DIS-TB1 or DIS-WA1 × 1set DIS-WB1 × 1set
	Triple	71+71+100	

Notes(1) Always use the branch piping set (option) at branches in the refrigerant piping.

(2) If wireless specifications are used, use 1 wireless indoor unit in combination with wired indoor units.

(3) The combinations except the above table forbids.

4.2.2 SPECIFICATIONS

(1) Indoor units

Item			Model	FDT50VH																							
Power source				1 Phase 220-240V 50Hz / 220V 60Hz																							
Operation data	Sound power level	Cooling	dB(A)	55																							
		Heating		56																							
	Sound pressure level	Cooling		P-Hi : 41 Hi : 33 Me : 30 Lo : 26																							
		Heating		P-Hi : 42 Hi : 33 Me : 28 Lo : 20																							
Silent mode sound pressure level				—																							
Exterior dimensions (Height × Width × Depth)			mm	Unit 236 × 840 × 840 Panel 35 × 950 × 950																							
Exterior appearance (Munsell color)				Plaster white (6.8Y8.9/0.2) near equivalent																							
Net weight			kg	Unit 19 Panel 5																							
Heat exchanger				Louver fin & inner grooved tubing																							
Fan type & Q'ty				Turbo fan ×1																							
Fan motor (Starting method)			W	50 < Direct line start >																							
Air flow		Cooling	m ³ /min	P-Hi : 22 Hi : 16 Me : 13 Lo : 10																							
		Heating																									
Available external static pressure			Pa	0																							
Outside air intake				Possible																							
Air filter, Quality / Quantity				Pocket plastic net ×1 (Washable)																							
Shock & vibration absorber				Rubber sleeve (for fan motor)																							
Electric heater			W	—																							
Operation control	Remote control			(Option) Wired : RC-EX3A , RC-E5 , RCH-E3 Wireless : RCN-T-5AW-E2																							
	Room temperature control			Thermostat by electronics																							
	Operation display			—																							
Safety equipments				Internal thermostat for fan motor Frost protection thermostat																							
Installation data	Refrigerant piping size (O.D.)	mm		Liquid line: φ 6.35 (1/4") Gas line: φ 12.7 (1/2")																							
	Connecting method			Flare piping																							
	Attached length of piping	m		—																							
	Insulation for piping			Necessary (both Liquid & Gas lines)																							
Drain hose				Hose connectable VP25 (O.D.32)																							
Drain pump, max lift height			mm	Built-in drain pump, 850																							
IP number				IPX0																							
Standard accessories				Mounting kit, Drain hose																							
Option parts				—																							
Notes (1) The data are measured at the following conditions.				The pipe length is 7.5m.																							
<table border="1"> <thead> <tr> <th rowspan="2">Operation</th> <th colspan="2">Indoor air temperature</th> <th colspan="2">Outdoor air temperature</th> <th rowspan="2">Standards</th> </tr> <tr> <th>DB</th> <th>WB</th> <th>DB</th> <th>WB</th> </tr> </thead> <tbody> <tr> <td>Cooling</td> <td>27°C</td> <td>19°C</td> <td>35°C</td> <td>24°C</td> <td>ISO5151-T1</td> </tr> <tr> <td>Heating</td> <td>20°C</td> <td>—</td> <td>7°C</td> <td>6°C</td> <td>ISO5151-H1</td> </tr> </tbody> </table>						Operation	Indoor air temperature		Outdoor air temperature		Standards	DB	WB	DB	WB	Cooling	27°C	19°C	35°C	24°C	ISO5151-T1	Heating	20°C	—	7°C	6°C	ISO5151-H1
Operation	Indoor air temperature		Outdoor air temperature		Standards																						
	DB	WB	DB	WB																							
Cooling	27°C	19°C	35°C	24°C	ISO5151-T1																						
Heating	20°C	—	7°C	6°C	ISO5151-H1																						
(2) This air-conditioner is manufactured and tested in conformity with the ISO.																											
(3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.																											
(4) The operation data indicate when the air-conditioner is operated at 230V 50Hz or 220V 60Hz.																											

Item		Model		FDT60VH		
Power source		1 Phase 220-240V 50Hz / 220V 60Hz				
Operation data	Sound power level	Cooling	dB(A)	58		
		Heating		59		
	Sound pressure level	Cooling		P-Hi : 44 Hi : 34 Me : 30 Lo : 27		
		Heating		P-Hi : 44 Hi : 34 Me : 30 Lo : 23		
Silent mode sound pressure level		—				
Exterior dimensions (Height × Width × Depth)		mm	Unit 236 × 840 × 840 Panel 35 × 950 × 950			
Exterior appearance (Munsell color)		Plaster white (6.8Y8.9/0.2) near equivalent				
Net weight		kg	Unit 21 Panel 5			
Heat exchanger		Louver fin & inner grooved tubing				
Fan type & Q'ty		Turbo fan ×1				
Fan motor (Starting method)		W	50 < Direct line start >			
Air flow		Cooling Heating	m ³ /min	P-Hi : 26 Hi : 17 Me : 14 Lo : 11		
Available external static pressure		Pa	0			
Outside air intake		Possible				
Air filter, Quality / Quantity		Pocket plastic net ×1 (Washable)				
Shock & vibration absorber		Rubber sleeve (for fan motor)				
Electric heater		W	—			
Operation control	Remote control	(Option) Wired : RC-EX3A , RC-E5 , RCH-E3 Wireless : RCN-T-5AW-E2				
	Room temperature control	Thermostat by electronics				
	Operation display	—				
Safety equipments		Internal thermostat for fan motor Frost protection thermostat				
Installation data	Refrigerant piping size (O.D.)	mm	Liquid line: φ 6.35 (1/4") Gas line: φ 12.7 (1/2")			
	Connecting method	Flare piping				
	Attached length of piping	m	—			
	Insulation for piping	Necessary (both Liquid & Gas lines)				
Drain hose		Hose connectable VP25 (O.D.32)				
Drain pump, max lift height		mm	Built-in drain pump, 850			
IP number		IPX0				
Standard accessories		Mounting kit, Drain hose				
Option parts		—				
Notes (1) The data are measured at the following conditions. The pipe length is 7.5m.						
Item		Indoor air temperature		Outdoor air temperature		Standards
Operation		DB	WB	DB	WB	
	Cooling	27°C	19°C	35°C	24°C	
	Heating	20°C	—	7°C	6°C	
(2) This air-conditioner is manufactured and tested in conformity with the ISO.						
(3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.						
(4) The operation data indicate when the air-conditioner is operated at 230V 50Hz or 220V 60Hz.						

Item		Model		FDT71VH		
Power source				1 Phase 220-240V 50Hz / 220V 60Hz		
Operation data	Sound power level	Cooling	dB(A)	59		
		Heating		60		
	Sound pressure level	Cooling		P-Hi : 46 Hi : 34 Me : 31 Lo : 26		
		Heating		P-Hi : 46 Hi : 34 Me : 31 Lo : 26		
Silent mode sound pressure level				—		
Exterior dimensions (Height × Width × Depth)		mm		Unit 236 × 840 × 840 Panel 35 × 950 × 950		
Exterior appearance (Munsell color)				Plaster white (6.8Y8.9/0.2) near equivalent		
Net weight		kg		Unit 21 Panel 5		
Heat exchanger				Louver fin & inner grooved tubing		
Fan type & Q'ty				Turbo fan ×1		
Fan motor (Starting method)		W		50 < Direct line start >		
Air flow		Cooling	m ³ /min	P-Hi : 28 Hi : 18 Me : 15 Lo : 12		
		Heating				
Available external static pressure		Pa		0		
Outside air intake				Possible		
Air filter, Quality / Quantity				Pocket plastic net ×1 (Washable)		
Shock & vibration absorber				Rubber sleeve (for fan motor)		
Electric heater		W		—		
Operation control	Remote control			(Option) Wired : RC-EX3A , RC-E5 , RCH-E3 Wireless : RCN-T-5AW-E2		
	Room temperature control			Thermostat by electronics		
	Operation display			—		
Safety equipments				Internal thermostat for fan motor Frost protection thermostat		
Installation data	Refrigerant piping size (O.D.)	mm		Liquid line: φ 9.52 (3/8") Gas line: φ 15.88 (5/8")		
	Connecting method			Flare piping		
	Attached length of piping	m		—		
	Insulation for piping			Necessary (both Liquid & Gas lines)		
	Drain hose			Hose connectable VP25 (O.D.28)		
Drain pump, max lift height		mm		Built-in drain pump, 850		
IP number				IPX0		
Standard accessories				Mounting kit, Drain hose		
Option parts				—		
Notes		(1) The data are measured at the following conditions.		The pipe length is 7.5m.		
Operation	Cooling	Indoor air temperature		Outdoor air temperature		Standards
		DB	WB	DB	WB	
	27°C	19°C	35°C	24°C	ISO5151-T1	
Heating		20°C	—	7°C	6°C	ISO5151-H1
(2) This air-conditioner is manufactured and tested in conformity with the ISO.						
(3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.						
(4) The operation data indicate when the air-conditioner is operated at 230V 50Hz or 220V 60Hz.						

Item		Model		FDT100VH	
Power source				1 Phase 220-240V 50Hz / 220V 60Hz	
Operation data	Sound power level	Cooling	dB(A)	62	
		Heating		P-Hi : 47 Hi : 39 Me : 36 Lo : 30	
	Sound pressure level	Cooling		P-Hi : 47 Hi : 39 Me : 36 Lo : 29	
		Heating		—	
Silent mode sound pressure level				—	
Exterior dimensions (Height × Width × Depth)		mm		Unit 298 × 840 × 840 Panel 35 × 950 × 950	
Exterior appearance (Munsell color)				Plaster white (6.8Y8.9/0.2) near equivalent	
Net weight		kg		Unit 25 Panel 5	
Heat exchanger				Louver fin & inner grooved tubing	
Fan type & Q'ty				Turbo fan ×1	
Fan motor (Starting method)		W		140 < Direct line start >	
Air flow		Cooling	m ³ /min	P-Hi : 37 Hi : 26 Me : 23 Lo : 17	
		Heating			
Available external static pressure		Pa		0	
Outside air intake				Possible	
Air filter, Quality / Quantity				Pocket plastic net ×1 (Washable)	
Shock & vibration absorber				Rubber sleeve (for fan motor)	
Electric heater		W		—	
Operation control	Remote control			(Option) Wired : RC-EX3A , RC-E5 , RCH-E3 Wireless : RCN-T-5AW-E2	
	Room temperature control			Thermostat by electronics	
	Operation display			—	
Safety equipments				Internal thermostat for fan motor Frost protection thermostat	
Installation data	Refrigerant piping size (O.D.)	mm		Liquid line: φ 9.52 (3/8") Gas line: φ 15.88 (5/8")	
	Connecting method			Flare piping	
	Attached length of piping	m		—	
	Insulation for piping			Necessary (both Liquid & Gas lines)	
	Drain hose			Hose connectable VP25 (O.D.32)	
Drain pump, max lift height		mm		Built-in drain pump, 850	
IP number				IPX0	
Standard accessories				Mounting kit, Drain hose	
Option parts				—	
Notes (1) The data are measured at the following conditions. The pipe length is 7.5m.					
Item		Indoor air temperature		Outdoor air temperature	
Operation		DB	WB	DB	WB
	Cooling	27°C	19°C	35°C	24°C
	Heating	20°C	—	7°C	6°C
				Standards	
				ISO5151-T1	
				ISO5151-H1	
(2) This air-conditioner is manufactured and tested in conformity with the ISO.					
(3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.					
(4) The operation data indicate when the air-conditioner is operated at 230V 50Hz or 220V 60Hz.					

Item		Model		FDT125VH		
Power source		1 Phase 220-240V 50Hz / 220V 60Hz				
Operation data	Sound power level	Cooling	dB(A)	63		
		Heating		64		
	Sound pressure level	Cooling		P-Hi : 48 Hi : 41 Me : 39 Lo : 31		
		Heating		P-Hi : 48 Hi : 41 Me : 38 Lo : 31		
Silent mode sound pressure level		—				
Exterior dimensions (Height × Width × Depth)		mm	Unit 298 × 840 × 840 Panel 35 × 950 × 950			
Exterior appearance (Munsell color)		Plaster white (6.8Y8.9/0.2) near equivalent				
Net weight		kg	Unit 25 Panel 5			
Heat exchanger		Louver fin & inner grooved tubing				
Fan type & Q'ty		Turbo fan ×1				
Fan motor (Starting method)		W	140 < Direct line start >			
Air flow		Cooling	m ³ /min	P-Hi : 38 Hi : 28 Me : 25 Lo : 18		
		Heating				
Available external static pressure		Pa	0			
Outside air intake		Possible				
Air filter, Quality / Quantity		Pocket plastic net ×1 (Washable)				
Shock & vibration absorber		Rubber sleeve (for fan motor)				
Electric heater		W	—			
Operation control	Remote control	(Option) Wired : RC-EX3A , RC-E5 , RCH-E3 Wireless : RCN-T-5AW-E2				
	Room temperature control	Thermostat by electronics				
	Operation display	—				
Safety equipments		Internal thermostat for fan motor Frost protection thermostat				
Installation data	Refrigerant piping size (O.D.)	mm	Liquid line: φ 9.52 (3/8") Gas line: φ 15.88 (5/8")			
	Connecting method	Flare piping				
	Attached length of piping	m	—			
	Insulation for piping	Necessary (both Liquid & Gas lines)				
Drain hose		Hose connectable VP25 (O.D.32)				
Drain pump, max lift height		mm	Built-in drain pump, 850			
IP number		IPX0				
Standard accessories		Mounting kit, Drain hose				
Option parts		—				
Notes (1) The data are measured at the following conditions. The pipe length is 7.5m.						
	Item	Indoor air temperature		Outdoor air temperature		Standards
Operation		DB	WB	DB	WB	
	Cooling	27°C	19°C	35°C	24°C	ISO5151-T1
	Heating	20°C	—	7°C	6°C	ISO5151-H1
(2) This air-conditioner is manufactured and tested in conformity with the ISO.						
(3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.						
(4) The operation data indicate when the air-conditioner is operated at 230V 50Hz or 220V 60Hz.						

(2) Outdoor units

Item		Model	FDC125VNA				
Power source			1 Phase 220-240V 50Hz / 220V 60Hz				
Operation data	Nominal cooling capacity (range)	kW	12.5 [5.0(Min.)-14.0(Max.)]				
	Nominal heating capacity (range)	kW	14.0 [4.0(Min.)-16.0(Max.)]				
	Sound power level	Cooling	dB(A)	71			
		Heating					
	Sound pressure level	Cooling	55				
Heating		57					
Silent mode sound pressure level			51/45 (Normal/Silent)				
Exterior dimensions (Height × Width × Depth)		mm	845×970×370				
Exterior appearance (Munsell color)			Stucco white (4.2Y7.5/1.1) near equivalent				
Net weight		kg	80				
Compressor type & Q'ty			RMT5126MCE3 (Twin rotary type)×1				
Compressor motor (Starting method)		kW	Direct line start				
Refrigerant oil (Amount, type)		L	0.9 (M-MA68)				
Refrigerant (Type, amount, pre-charge length)		kg	R410A 3.8 in outdoor unit (Incl. the amount for the piping of 30m)				
Heat exchanger			Straight fin & inner grooved tubing				
Refrigerant control			Electronic expansion valve				
Fan type & Q'ty			Propeller fan ×1				
Fan motor (Starting method)		W	86 < Direct line start >				
Air flow	Cooling	m ³ /min	75				
	Heating		73				
Shock & vibration absorber			Rubber sleeve (for compressor)				
Electric heater		W	20 (Crank case heater)				
Safety equipments			Internal thermostat for fan motor Abnormal discharge temperature protection				
Installation data	Refrigerant piping size (O.D.)	mm	Liquid line: φ 9.52 (3/8") Gas line: φ 15.88 (5/8")				
	Connecting method		Flare piping				
	Attached length of piping	m	—				
	Insulation for piping		Necessary (both Liquid & Gas lines)				
	Refrigerant line (one way) length	m	Max.50m				
	Vertical height diff. between O/U and I/U	m	Max.50m (Outdoor unit is higher) Max.15m (Outdoor unit is lower)				
Drain hose			Hole size φ 20 × 3 pcs				
IP number			IP24				
Standard accessories			—				
Option parts			—				
Notes		(1) The data are measured at the following conditions. The pipe length is 7.5m.					
	Item	Indoor air temperature		Outdoor air temperature		Standards	
Operation		DB	WB	DB	WB		
Cooling		27°C	19°C	35°C	24°C		ISO5151-T1
Heating		20°C	—	7°C	6°C		ISO5151-H1
(2) This air-conditioner is manufactured and tested in conformity with the ISO.							
(3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.							
(4) The operation data indicate when the air-conditioner is operated at 230V 50Hz or 220V 60Hz.							

Item		Model	FDC125VSA			
Power source			3 Phase 380-415V 50Hz / 380V 60Hz			
Operation data	Nominal cooling capacity (range)	kW	12.5 [5.0(Min.)-14.0(Max.)]			
	Nominal heating capacity (range)	kW	14.0 [4.0(Min.)-16.0(Max.)]			
	Sound power level	Cooling	dB(A)	71		
		Heating		55		
	Sound pressure level	Cooling		57		
Heating		51/45 (Normal/Silent)				
Silent mode sound pressure level			51/45 (Normal/Silent)			
Exterior dimensions (Height × Width × Depth)		mm	845×970×370			
Exterior appearance (Munsell color)			Stucco white (4.2Y7.5/1.1) near equivalent			
Net weight		kg	82			
Compressor type & Q'ty			RMT5126MCE4 (Twin rotary type)×1			
Compressor motor (Starting method)		kW	Direct line start			
Refrigerant oil (Amount, type)		L	0.9 (M-MA68)			
Refrigerant (Type, amount, pre-charge length)		kg	R410A 3.8 in outdoor unit (Incl. the amount for the piping of 30m)			
Heat exchanger			Straight fin & inner grooved tubing			
Refrigerant control			Electronic expansion valve			
Fan type & Q'ty			Propeller fan ×1			
Fan motor (Starting method)		W	86 < Direct line start >			
Air flow	Cooling Heating	m ³ /min	75			
			73			
Shock & vibration absorber			Rubber sleeve (for compressor)			
Electric heater		W	20 (Crank case heater)			
Safety equipments			Internal thermostat for fan motor Abnormal discharge temperature protection			
Installation data	Refrigerant piping size (O.D.)	mm	Liquid line: ϕ 9.52 (3/8") Gas line: ϕ 15.88 (5/8")			
	Connecting method		Flare piping			
	Attached length of piping	m	—			
	Insulation for piping		Necessary (both Liquid & Gas lines)			
	Refrigerant line (one way) length	m	Max.50m			
	Vertical height diff. between O/U and I/U	m	Max.50m (Outdoor unit is higher) Max.15m (Outdoor unit is lower)			
Drain hose			Hole size ϕ 20 × 3 pcs			
IP number			IP24			
Standard accessories			—			
Option parts			—			
Notes		(1) The data are measured at the following conditions. The pipe length is 7.5m.				
	Item	Indoor air temperature		Outdoor air temperature		Standards
Operation		DB	WB	DB	WB	
	Cooling	27°C	19°C	35°C	24°C	
Heating	20°C	—	7°C	6°C	ISO5151-H1	
(2) This air-conditioner is manufactured and tested in conformity with the ISO.						
(3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.						
(4) The operation data indicate when the air-conditioner is operated at 400V 50Hz or 380V 60Hz.						

Item		Model	FDC140VNA			
Power source			1 Phase 220-240V 50Hz / 220V 60Hz			
Operation data	Nominal cooling capacity (range)	kW	13.6 [5.0(Min.)-14.5(Max.)]			
	Nominal heating capacity (range)	kW	15.5 [4.0(Min.)-16.5(Max.)]			
	Sound power level	Cooling	dB(A)	73		
		Heating		57		
	Sound pressure level	Cooling		59		
Heating		53/47 (Normal/Silent)				
Silent mode sound pressure level			53/47 (Normal/Silent)			
Exterior dimensions (Height × Width × Depth)		mm	845×970×370			
Exterior appearance (Munsell color)			Stucco white (4.2Y7.5/1.1) near equivalent			
Net weight		kg	80			
Compressor type & Q'ty			RMT5126MCE3 (Twin rotary type)×1			
Compressor motor (Starting method)		kW	Direct line start			
Refrigerant oil (Amount, type)		L	0.9 (M-MA68)			
Refrigerant (Type, amount, pre-charge length)		kg	R410A 3.8 in outdoor unit (Incl. the amount for the piping of 30m)			
Heat exchanger			Straight fin & inner grooved tubing			
Refrigerant control			Electronic expansion valve			
Fan type & Q'ty			Propeller fan ×1			
Fan motor (Starting method)		W	86 < Direct line start >			
Air flow	Cooling Heating	m ³ /min	75			
			73			
Shock & vibration absorber			Rubber sleeve (for compressor)			
Electric heater		W	20 (Crank case heater)			
Safety equipments			Internal thermostat for fan motor Abnormal discharge temperature protection			
Installation data	Refrigerant piping size (O.D.)	mm	Liquid line: ϕ 9.52 (3/8") Gas line: ϕ 15.88 (5/8")			
	Connecting method		Flare piping			
	Attached length of piping	m	—			
	Insulation for piping		Necessary (both Liquid & Gas lines)			
	Refrigerant line (one way) length	m	Max.50m			
	Vertical height diff. between O/U and I/U	m	Max.50m (Outdoor unit is higher) Max.15m (Outdoor unit is lower)			
Drain hose			Hole size ϕ 20 × 3 pcs			
IP number			IP24			
Standard accessories			—			
Option parts			—			
Notes		(1) The data are measured at the following conditions. The pipe length is 7.5m.				
	Item	Indoor air temperature		Outdoor air temperature		Standards
Operation		DB	WB	DB	WB	
	Cooling	27°C	19°C	35°C	24°C	
	Heating	20°C	—	7°C	6°C	ISO5151-H1
(2) This air-conditioner is manufactured and tested in conformity with the ISO.						
(3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.						
(4) The operation data indicate when the air-conditioner is operated at 230V 50Hz or 220V 60Hz.						

Item		Model		FDC140VSA		
Power source		3 Phase 380-415V 50Hz / 380V 60Hz				
Operation data	Nominal cooling capacity (range)	kW	13.6 [5.0(Min.)-14.5(Max.)]			
	Nominal heating capacity (range)	kW	15.5 [4.0(Min.)-16.5(Max.)]			
	Sound power level	Cooling	dB(A)	73		
		Heating		57		
	Sound pressure level	Cooling		59		
Heating		53/47 (Normal/Silent)				
Silent mode sound pressure level		53/47 (Normal/Silent)				
Exterior dimensions (Height × Width × Depth)		mm	845×970×370			
Exterior appearance (Munsell color)		Stucco white (4.2Y7.5/1.1) near equivalent				
Net weight		kg	82			
Compressor type & Q'ty		RMT5126MCE4 (Twin rotary type)×1				
Compressor motor (Starting method)		kW	Direct line start			
Refrigerant oil (Amount, type)		L	0.9 (M-MA68)			
Refrigerant (Type, amount, pre-charge length)		kg	R410A 3.8 in outdoor unit (Incl. the amount for the piping of 30m)			
Heat exchanger		Straight fin & inner grooved tubing				
Refrigerant control		Electronic expansion valve				
Fan type & Q'ty		Propeller fan ×1				
Fan motor (Starting method)		W	86 < Direct line start >			
Air flow	Cooling	m ³ /min	75			
			73			
Shock & vibration absorber		Rubber sleeve (for compressor)				
Electric heater		W	20 (Crank case heater)			
Safety equipments		Internal thermostat for fan motor Abnormal discharge temperature protection				
Installation data	Refrigerant piping size (O.D.)	mm	Liquid line: φ 9.52 (3/8") Gas line: φ 15.88 (5/8")			
	Connecting method	Flare piping				
	Attached length of piping	m	—			
	Insulation for piping	Necessary (both Liquid & Gas lines)				
	Refrigerant line (one way) length	m	Max.50m			
	Vertical height diff. between O/U and I/U	m	Max.50m (Outdoor unit is higher)	Max.15m (Outdoor unit is lower)		
Drain hose		Hole size φ 20 × 3 pcs				
IP number		IP24				
Standard accessories		—				
Option parts		—				
Notes		(1) The data are measured at the following conditions. The pipe length is 7.5m.				
Operation	Cooling	Indoor air temperature		Outdoor air temperature		Standards
		DB	WB	DB	WB	
	27°C	19°C	35°C	24°C	ISO5151-T1	
Heating	20°C	—	7°C	6°C	ISO5151-H1	
(2) This air-conditioner is manufactured and tested in conformity with the ISO.						
(3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.						
(4) The operation data indicate when the air-conditioner is operated at 400V 50Hz or 380V 60Hz.						

Item		Model	FDC200VSA	
Power source			3 Phase 380-415V 50Hz / 380V 60Hz	
Operation data	Nominal cooling capacity (range)	kW	19.0 [5.2(Min.)-22.4(Max.)]	
	Nominal heating capacity (range)	kW	22.4 [3.3(Min.)-25.0(Max.)]	
	Sound power level	Cooling	dB(A)	72
		Heating		74
	Sound pressure level	Cooling		58
		Heating		59
Silent mode sound pressure level		52		
Exterior dimensions (Height × Width × Depth)		mm		1,300×970×370
Exterior appearance (Munsell color)			Stucco white (4.2Y7.5/1.1) near equivalent	
Net weight		kg	115	
Compressor type & Q'ty			RMT5134MDE3 (Twin rotary type)×1	
Compressor motor (Starting method)		kW	Direct line start	
Refrigerant oil (Amount, type)		L	0.9 (compressor) + 0.6 (unit) (M-MA32R)	
Refrigerant (Type, amount, pre-charge length)		kg	R410A 5.6 in outdoor unit (Incl. the amount for the piping of 30m)	
Heat exchanger			M shape fin & inner grooved tubing	
Refrigerant control			Electronic expansion valve	
Fan type & Q'ty			Propeller fan ×2	
Fan motor (Starting method)		W	86x2 < Direct line start >	
Air flow	Cooling	m ³ /min	135	
	Heating			
Shock & vibration absorber			Rubber sleeve (for compressor)	
Electric heater		W	20 (Crank case heater)	
Safety equipments			Internal thermostat for fan motor Abnormal discharge temperature protection	
Installation data	Refrigerant piping size (O.D.)	mm	Liquid line: ϕ 9.52 (3/8") Gas line: ϕ 22.22 (7/8")	
	Connecting method		Liquid line : Flare / Gas : Brazing	
	Attached length of piping	m	—	
	Insulation for piping		Necessary (both Liquid & Gas lines)	
	Refrigerant line (one way) length	m	Max.70m (Liquid piping : ϕ 12.7, Gas piping ϕ 25.4 or ϕ 28.58), Max.40m (Liquid piping : ϕ 9.52, Max.35m (Gas piping : ϕ 22.22).	
	Vertical height diff. between O/U and I/U	m	Max.30m (Outdoor unit is higher) Max.15m (Outdoor unit is lower)	
Drain hose			Hole size ϕ 20 × 3 pcs	
IP number			IP24	
Standard accessories			Connecting pipe, Edging	
Option parts			—	
Notes (1) The data are measured at the following conditions.			The pipe length is 7.5m.	
	Item	Indoor air temperature	Outdoor air temperature	Standards
Operation		DB WB	DB WB	
Cooling		27°C 19°C	35°C 24°C	
Heating		20°C —	7°C 6°C	
(2) This air-conditioner is manufactured and tested in conformity with the ISO.				
(3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.				
(4) The operation data indicate when the air-conditioner is operated at 400V 50Hz or 380V 60Hz.				

Item		Model	FDC250VSA			
Power source			3 Phase 380-415V 50Hz / 380V 60Hz			
Operation data	Nominal cooling capacity (range)	kW	24.0 [6.9(Min.)-28.0(Max.)]			
	Nominal heating capacity (range)	kW	27.0 [5.5(Min.)-31.5(Max.)]			
	Sound power level	Cooling	dB(A)	73		
		Heating		75		
	Sound pressure level	Cooling		59		
		Heating		62		
Silent mode sound pressure level		54				
Exterior dimensions (Height × Width × Depth)		mm		1,505×970×370		
Exterior appearance (Munsell color)			Stucco white (4.2Y7.5/1.1) near equivalent			
Net weight		kg	143			
Compressor type & Q'ty			GTC5150NC40KF (Scroll type)×1			
Compressor motor (Starting method)		kW	Direct line start			
Refrigerant oil (Amount, type)		L	1.45 (M-MA32R)			
Refrigerant (Type, amount, pre-charge length)		kg	R410A 7.2 in outdoor unit (Incl. the amount for the piping of 30m)			
Heat exchanger			M shape & inner grooved tubing			
Refrigerant control			Electronic expansion valve			
Fan type & Q'ty			Propeller fan ×2			
Fan motor (Starting method)		W	86x2 < Direct line start >			
Air flow	Cooling Heating	m ³ /min	143			
			151			
Shock & vibration absorber			Rubber sleeve (for compressor)			
Electric heater		W	20 (Crank case heater)			
Safety equipments			Internal thermostat for fan motor Abnormal discharge temperature protection			
Installation data	Refrigerant piping size (O.D.)	mm	Liquid line: ϕ 12.7 (1/2") Gas line: ϕ 22.22 (7/8")			
	Connecting method		Liquid line : Flare / Gas : Brazing			
	Attached length of piping	m	—			
	Insulation for piping		Necessary (both Liquid & Gas lines)			
	Refrigerant line (one way) length	m	Max.70m (Gas piping : ϕ 25.4 or ϕ 28.58, Max.35m (Gas piping : ϕ 22.22)			
	Vertical height diff. between O/U and I/U	m	Max.30m (Outdoor unit is higher) Max.15m (Outdoor unit is lower)			
Drain hose			Hole size ϕ 20 × 3 pcs			
IP number			IP24			
Standard accessories			Connecting pipe, Edging			
Option parts			—			
Notes (1) The data are measured at the following conditions.			The pipe length is 7.5m.			
	Item	Indoor air temperature	Outdoor air temperature	Standards		
Operation	Cooling	DB	WB	DB	WB	ISO5151-T1
		27°C	19°C	35°C	24°C	
	Heating	20°C	—	7°C	6°C	ISO5151-H1
(2) This air-conditioner is manufactured and tested in conformity with the ISO.						
(3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.						
(4) The operation data indicate when the air-conditioner is operated at 400V 50Hz or 380V 60Hz.						

(3) Operation chart

The V Multi is a system that allows for different models and capacities of indoor units to be connected so the individual operating characteristics of the indoor and outdoor are provided. Use the procedure shown in item (c) to calculate the combined operating characteristics.

(a) Operating characteristic of outdoor unit

(220-240V 50Hz/220V 60Hz)

Item		Model	FDC125VNA	FDC140VNA
Cooling power consumption	kW		3.91/3.91	4.70/4.70
Heating power consumption			3.60/3.60	4.29/4.29
Cooling running current	A		18.5-16.9/18.5	21.6-19.8/21.6
Heating running current			17.2-15.8/17.2	19.4-17.8/19.4
Inrush current (L.R.A) <Max. running current>	A		5 <24>	

(380-415V 50Hz/380V 60Hz)

Item		Model	FDC125VSA	FDC140VSA
Cooling power consumption	kW		3.91/3.91	4.70/4.70
Heating power consumption			3.60/3.60	4.29/4.29
Cooling running current	A		5.9-5.4/5.9	7.2-6.6/7.2
Heating running current			5.4-4.9/5.4	6.8-6.2/6.8
Inrush current (L.R.A) <Max. running current>	A		5 <15>	

(380-415V 50Hz/380V 60Hz)

Item		Model	FDC200VSA	FDC250VSA
Cooling power consumption	kW		7.05/7.05	8.22/8.16
Heating power consumption			7.02/7.02	7.42/7.38
Cooling running current	A		10.2/10.5	11.8/12.3
Heating running current			10.0/10.5	10.8/11.2
Inrush current (L.R.A) <Max. running current>	A		5 <20>	5 <21>

Note(1) This packaged air-conditioner is manufactured and tested in conformity with the following standard.
ISO-T1 "UNITARY AIR-CONDITIONERS"

(b) Operating characteristic of indoor unit

(220-240V 50Hz/220V 60Hz)

Item		Model	FDT50VH	FDT60VH	FDT71VH	FDT100VH	FDT125VH
Cooling power consumption	kW		0.04-0.04/0.04	0.07-0.07/0.07	0.08-0.08/0.08	0.13-0.13/0.13	0.14-0.14/0.14
Heating power consumption			0.04-0.04/0.04	0.07-0.07/0.07	0.08-0.08/0.08	0.13-0.13/0.13	0.14-0.14/0.14
Cooling running current	A		0.36-0.33/0.36	0.62-0.57/0.62	0.70-0.64/0.70	1.05-0.96/1.05	1.12-1.02/1.12
Heating running current			0.36-0.33/0.36	0.62-0.57/0.62	0.70-0.64/0.70	1.05-0.96/1.05	1.12-1.02/1.12

Notes(1) This packaged air-conditioner is manufactured and tested in conformity with the following standard.
ISO-T1 "UNITARY AIR-CONDITIONERS"

(2) The values shown in the above table are common to both cooling and heating operations.

[Example]

(Conditions) Operation Voltage Indoor unit: 220 V, 50 Hz
 Outdoor unit: 380 V, 50 Hz
 Operation mode Cooling and Heating
 Unit Outdoor unit: FDC200VSA × 1 unit
 Indoor unit: FDT71VH × 1 unit, FDT125VH × 1 unit

Operation characteristics of each unit

(Cooling/Heating)

Item \ Model	FDC200VSA	FDT71VH	FDT125VH
Power consumption (kW)	7.05/7.02	0.08/0.08	0.14/0.14
Running current (A)	10.2/10.0	0.70/0.70	1.12/1.12

① Total power consumption (kW)

$$\text{(Cooling)} \quad 7.05 + 0.08 + 0.14 = 7.27 \text{ (kW)}$$

$$\text{(Heating)} \quad 7.02 + 0.08 + 0.14 = 7.24 \text{ (kW)}$$

② Total running current (A)

$$\text{(Cooling)} \quad 10.2 + \left[(0.70 + 1.12) \times \frac{1}{3} \right] \approx 10.8 \text{ (A)}$$

$$\text{(Heating)} \quad 10.0 + \left[(0.70 + 1.12) \times \frac{1}{3} \right] \approx 10.6 \text{ (A)}$$

③ Total power factor (%)

$$\text{(Cooling)} \quad \frac{7.27 \times 1000}{\sqrt{3} \times 10.8 \times 380} \times 100 \approx 99 \%$$

$$\text{(Heating)} \quad \frac{7.24 \times 1000}{\sqrt{3} \times 10.6 \times 380} \times 100 \approx 99 \%$$

4.2.3 EXTERIOR DIMENSIONS

- (1) Indoor units See page 111
- (2) Outdoor units See page 111
- (3) Remote control (Option parts) See page 113

4.2.4 ELECTRICAL WIRING

- (1) Indoor units See page 114
- (2) Outdoor units See page 114

4.2.5 NOISE LEVEL

- (1) Indoor units See page 118
- (2) Outdoor units See page 118

4.2.6 TEMPERATURE AND VELOCITY DISTRIBUTION See page 119

4.2.7 PIPING SYSTEM See page 120

4.2.8 RANGE OF USAGE & LIMITATIONS See page 123

4.2.9 SELECTION CHART See page 127

4.2.10 APPLICATION DATE

- (1) Installation of indoor unit See page 138
- (2) Electric wiring work installation See page 138
- (3) Installation of wired remote control (Option parts) See page 138
- (4) Installation of outdoor unit
 - (a) Models FDC125,140VNA,125,140VSA See page 138
 - (b) Models FDC200,250VSA See page 147
 - (c) Method for connecting the accessory pipe
 (Models FDC200,250VSA) See page 155
- (5) Instructions for branching pipe set (DIS-WA1,WB1,TA1,TB1) See page 158

4.2.11 TECHNICAL INFORMATION

Models FDT50VH, 60VH, 71VH, 100VH, 125VH

Model(s) : FDT50VH							
Item	Symbol	Value	Unit	Item	Symbol	Value	Unit
Cooling capacity (sensible)	$P_{rated,c}$	4.4	kW	Total electric power input	P_{elec}	0.040	kW
Cooling capacity (latent)	$P_{rated,c}$	0.6	kW	Sound power level (per speed setting,if applicable)	L_{WA}	55.0	dB
Heating capacity	$P_{rated,h}$	5.4	kW				
Contact details	Mitsubishi heavy industries thermal systems,LTD						

Model(s) : FDT60VH							
Item	Symbol	Value	Unit	Item	Symbol	Value	Unit
Cooling capacity (sensible)	$P_{rated,c}$	5.5	kW	Total electric power input	P_{elec}	0.070	kW
Cooling capacity (latent)	$P_{rated,c}$	0.1	kW	Sound power level (per speed setting,if applicable)	L_{WA}	58.0	dB
Heating capacity	$P_{rated,h}$	6.7	kW				
Contact details	Mitsubishi heavy industries thermal systems,LTD						

Model(s) : FDT71VH							
Item	Symbol	Value	Unit	Item	Symbol	Value	Unit
Cooling capacity (sensible)	$P_{rated,c}$	6.1	kW	Total electric power input	P_{elec}	0.080	kW
Cooling capacity (latent)	$P_{rated,c}$	1.0	kW	Sound power level (per speed setting,if applicable)	L_{WA}	59.0	dB
Heating capacity	$P_{rated,h}$	8.0	kW				
Contact details	Mitsubishi heavy industries thermal systems,LTD						

Model(s) : FDT100VH							
Item	Symbol	Value	Unit	Item	Symbol	Value	Unit
Cooling capacity (sensible)	$P_{rated,c}$	8.1	kW	Total electric power input	P_{elec}	0.130	kW
Cooling capacity (latent)	$P_{rated,c}$	1.9	kW	Sound power level (per speed setting,if applicable)	L_{WA}	62.0	dB
Heating capacity	$P_{rated,h}$	11.2	kW				
Contact details	Mitsubishi heavy industries thermal systems,LTD						

Model(s) : FDT125VH							
Item	Symbol	Value	Unit	Item	Symbol	Value	Unit
Cooling capacity (sensible)	$P_{rated,c}$	9.1	kW	Total electric power input	P_{elec}	0.140	kW
Cooling capacity (latent)	$P_{rated,c}$	3.4	kW	Sound power level (per speed setting,if applicable)	L_{WA}	63.0	dB
Heating capacity	$P_{rated,h}$	14.0	kW				
Contact details	Mitsubishi heavy industries thermal systems,LTD						

5. OPTION PARTS

CONTENTS

5.1 WIRELESS KIT (RCN-T-5AW-E2)	258
5.2 MOTION SENSOR KIT (LB-T-5W-E)	266
5.3 SIMPLE WIRED REMOTE CONTROL (RCH-E3)	270
5.4 BASE HEATER KIT (CW-H-E1)	276
5.5 SUPERLINK E BOARD (SC-ADNA-E)	284

5.1 WIRELESS KIT (RCN-T-5AW-E2)

Notes:

Following function of FDT indoor unit series are not able to be set with this wireless remote control (RCN-T-5AW-E2).

1. Individual flap control system

PJF012D035 













Safety precautions

- Please read this manual carefully before starting installation work to install the unit properly. Every one of the followings is important information to be observed strictly.
- ⚠ **WARNING** Failure to follow these instructions properly may result in serious consequences such as death, severe injury, etc.
- ⚠ **CAUTION** Failure to follow these instructions properly may cause injury or property damage. It could have serious consequences depending on the circumstances.
- The following pictograms are used in the text.

	Never do.		Always follow the instructions given.
---	-----------	---	---------------------------------------

- Keep this manual at a safe place where you can consult with whenever necessary. Show this manual to installers when moving or repairing the unit. When the ownership of the unit is transferred, this manual should be given to a new owner.

WARNING

-  • **Consult your dealer or a professional contractor to install the unit.**
Improper installation made on your own may cause electric shocks, fire or dropping of the unit.
-  • **Installation work should be performed properly according to this installation manual.**
Improper installation work may result in electric shocks, fire or break-down.
-  • **Be sure to use accessories and specified parts for installation work.**
Use of unspecified parts may result in drop, fire or electric shocks.
-  • **Install the unit properly to a place with sufficient strength to hold the weight.**
If the place is not strong enough, the unit may drop and cause injury.
-  • **Be sure to have the electrical wiring work done by qualified electrical installer, and use exclusive circuit.**
Power source with insufficient and improper work can cause electric shock and fire.
-  • **Shut OFF the main power source before starting electrical work.**
Otherwise, it could result in electric shocks, break-down or malfunction.
-  • **Do not modify the unit.**
It could cause electric shocks, fire, or break-down.
-  • **Be sure to turn OFF the power circuit breaker before repairing/inspecting the unit.**
Repairing/inspecting the unit with the power circuit breaker turned ON could cause electric shocks or injury.
-  • **Do not install the unit in appropriate environment or where inflammable gas could generate, flow in, accumulate or leak.**
If the unit is used at places where air contains dense oil mist, steam, organic solvent vapor, corrosive gas (ammonium, sulfuric compound, acid, etc) or where acidic or alkaline solution, special spray, etc. are used, it could cause electric shocks, break-down, smoke or fire as a result of significant deterioration of its performance or corrosion.
-  • **Do not install the unit where water vapor is generated excessively or condensation occurs.**
It could cause electric shocks, fire, or break-down.
-  • **Do not use the unit in a place where it gets wet, such as laundry room.**
It could cause electric shocks, fire, or break-down.
-  • **Do not operate the unit with wet hands.**
It could cause electric shocks.

⚠ WARNING



• **Do not wash the unit with water.**
It could cause electric shocks, fire, or break-down.



• **Use the specified cables for wiring, and connect them securely with care to protect electronic parts from external forces.**
Improper connections or fixing could cause heat generation, fire, etc.



• **When installing the unit at a hospital, telecommunication facility, etc., take measures to suppress electric noises.**
It could cause malfunction or break-down due to hazardous effects on the inverter, private power generator, high frequency medical equipment, radio communication equipment, etc. The influences transmitted from the remote control to medical or communication equipment could disrupt medical activities, video broadcasting or cause noise interference.



• **Do not leave the remote control with its PCB case removed.**
If dew, water, insect, etc. enters through the hole, it could cause electric shocks, fire or break-down.

⚠ CAUTION



• Do not install the wireless kit at the following places in order to avoid malfunction. It could cause break-down or deformation of remote control.

(1) Places exposed to direct sunlight	(8) Places where the receiver is influenced by the fluorescent lamp (especially inverter type) or sunlight
(2) Places near heat devices	(9) Places where the receiver is affected by infrared rays of any other communication devices
(3) High humidity places	(10) Places where some object may obstruct the communication with the remote control
(4) Hot surface or cold surface enough to generate condensation	
(5) Places exposed to oil mist or steam directly	
(6) Uneven surface	
(7) Places affected by the direct air flow of the AC unit	

① Accessories

Please make sure that you have all of the following accessories.

① Receiver		1	① Wireless remote control(RCN-E2)		1
② Parts set (A)		1	② Remote control holder		1
③ Installation manual		1	③ Screw for holder		2
			④ AAA dry cell battery (LR03)		2
			⑤ User's manual		1

② Preparation before installation

Setting on site


PCB on the receiver has the following switches to set the function.
Default setting is shown with mark.

SW1	Prevents interference during plural setting	<input checked="" type="checkbox"/> ON : Normal	<input type="checkbox"/> OFF : Customized
SW2	Receiver master/slave setting	<input checked="" type="checkbox"/> ON : Master	<input type="checkbox"/> OFF : Slave
SW3	Buzzer	<input checked="" type="checkbox"/> ON : Valid	<input type="checkbox"/> OFF : Invalid
SW4	Auto restart	<input checked="" type="checkbox"/> ON : Valid	<input type="checkbox"/> OFF : Invalid

② Preparation before installation (continued)

To change setting

1. Remove the cover by unscrewing two screws from the back of receiver.
2. Change the setting by the switch on PCB.

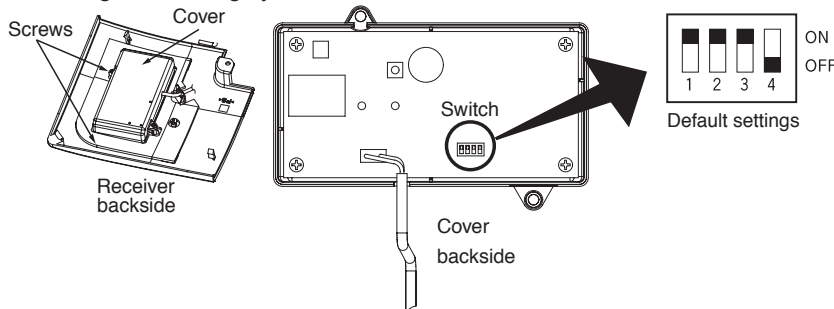

Master/Slave setting when using plural remote controls

Up to two receiver or wired remote control can be installed in one indoor unit group. When two receiver or wired remote control are used, it is necessary to change SW on the PCB to set it as slave.

3. When SW1 is turned to OFF position, change the wireless remote control setting. For the method of changing the setting, refer to **Setting to avoid mixed communication** of

④ Wireless remote control .


*The receivable area of the signal refer to ⑤ Receiver .

③ How to install the receiver

The receiver can be installed by replacing with a corner panel on the applicable decorative panel.

Preparation before installation


- ① Attach the decorative panel onto the air-conditioner according to the installation manual for the panel.
- ② Remove the air return grille.
- ③ Remove a corner panel located on the refrigerant pipes side.
- ④ Remove three screws and detach the cover (indicated as shadowed area) from the control box of the air-conditioner.

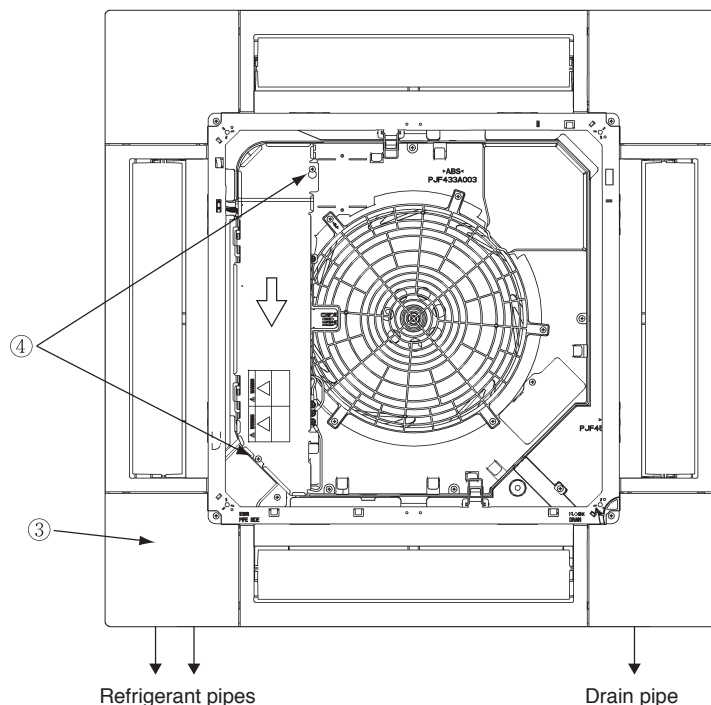

③ How to install the receiver(continued)

Installation of the receiver

- ① Loosen the bolts which fix the panel and make a gap between the panel and the indoor unit.
- ② Put the wiring of the receiver through the opening.
- ③ Put the wiring on the notch on the control box so as not to be pinched by the control box and lid as shown below.
- ④ Connect the wiring to the terminal block provided in the control box. (No polarity)
- ⑤ Attach the receiver to the panel according to the panel installation manual.
- ⑥ Fix the wiring with the clamp so that the wiring do not contact the edge of control box's metal sheet.
- ⑦ Reattach the control box lid with 3 screws removed.

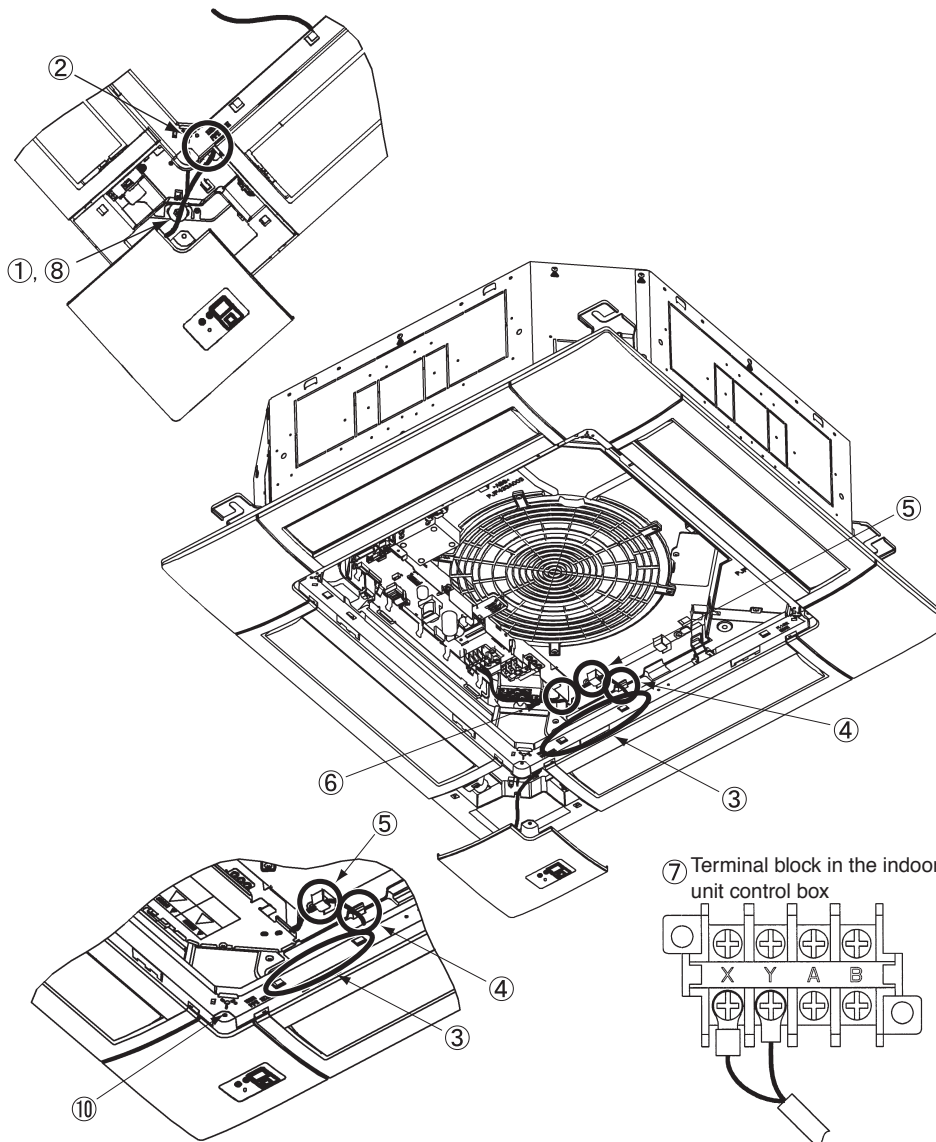


4 Wireless remote control

Installation tips for the remote control holder

Fix the remote control holder using the screws supplied with this product.


* Precautions for installing the holder

- Adjust the position so that it is upright.
- Ensure that the screw heads are not protruding.
- Do not attach the holder on plaster wall

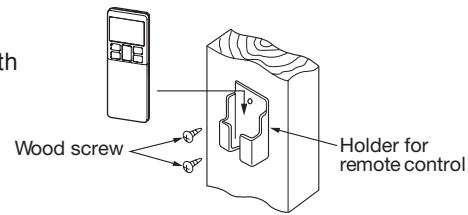


How to insert batteries

1. Detach the back lid.
2. Insert the batteries. (two AAA batteries)
3. Reattach the back lid.

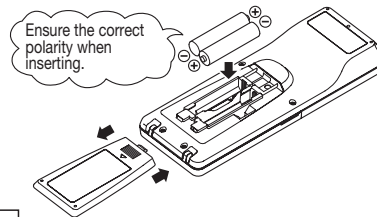

Setting to avoid mixed communication

1. Detach the back lid, and remove the batteries.
2. Cut off the switching wire in the battery compartment using nippers.
3. Insert the batteries, and attach the back lid.



Changing the remote control setting


How to change the Auto Run setting

The Auto Run mode is not available on the building air-conditioning and gas heat pump series (excluding the cooling/heating free multi system).

When using the remote control to operate those models, set the remote control to disable the Auto Run mode.

To disable the Auto Run mode, press the **[ACL]** switch while holding down the **[MODE]** button, or insert batteries while holding down the **[MODE]** button.


* Note: Once the batteries are removed, the setting is reset to the factory default. When the batteries are removed, repeat the steps described above.

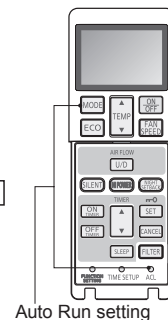

Indoor function settings

1. How to set indoor functions
 - ① Press the ON/OFF button to stop the unit.
 - ② Press the desired one of the buttons shown item 2. while holding down the FUNCTION SETTING switch.
 - ③ Use the selection buttons, ▲ and ▼, to change the setting.
 - ④ Press the SET button.

The buzzer on the remote control signal receiver beeps twice, and the LED lamp flashes four times at two-second intervals.

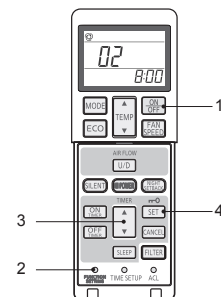

4 Wireless remote control (continued)

2. Setting details

The following functions can be set.

Button	Number indicator	Function setting
FAN SPEED	00	Fan speed setting : Standard
	01	Fan speed setting : Setting 1 *
	02	Fan speed setting : Setting 2 *
MODE	00	Room heating temperature adjustment : Disable
	01	Room heating temperature adjustment : +1°C
	02	Room heating temperature adjustment : +2°C
	03	Room heating temperature adjustment : +3°C
FILTER	00	Filter sign display : OFF
	01	Filter sign display : 180 hours
	02	Filter sign display : 600 hours
	03	Filter sign display : 1000 hours
	04	Filter sign display : Operation stop after 1000 hours have elapsed
U/P	00	Anti draft setting : Disable
	01	Anti draft setting : Enable
SILENT	00	Infrared sensor setting (Motion sensor setting) : Disable
	01	Infrared sensor setting (Motion sensor setting) : Enable
HI POWER	00	Infrared sensor control (Motion sensor control) : Disable
	01	Infrared sensor control (Motion sensor control) : Power control only
	02	Infrared sensor control (Motion sensor control) : Auto OFF only
	03	Infrared sensor control (Motion sensor control) : Power control and Auto OFF
ON TIMER	00	Cooling fan residual-period running : Disable
	01	Cooling fan residual-period running : 0.5 hours
	02	Cooling fan residual-period running : 2 hours
	03	Cooling fan residual-period running : 6 hours
OFF TIMER	00	Heating fan residual-period running : Disable
	01	Heating fan residual-period running : 0.5 hours
	02	Heating fan residual-period running : 2 hours
	03	Heating fan residual-period running : 6 hours
NIGHT SETBACK	00	Remote control signal receiver LED : Brightness High
	01	Remote control signal receiver LED : Brightness Low
	02	Remote control signal receiver LED : OFF

* Refer to service manual.

5 Receiver

1 Control plural indoor units with one remote control

Up to 16 indoor units can be connected.


1. Connect the XY terminal with 2 cores wire. As for the size, refer to the following note.
2. For Packaged air-conditioner series, set the indoor unit address with SW2 on the indoor unit PCB from [0] to [F] so as not to duplicate.

Restrictions on the thickness and length of wire
(Maximum total extension 600m.)

Standard	Within	0.3 mm ² × 100m
	Within	0.5 mm ² × 200m
	Within	0.75mm ² × 300m
	Within	1.25mm ² × 400m
	Within	2.0 mm ² × 600m

For the shop series

For VRF series, set the indoor unit address with SW1, SW2 and SW5-2 on the indoor unit PCB from [000] to [127] so as not to duplicate.

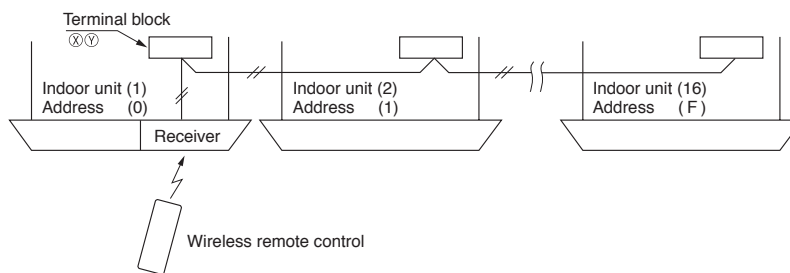


For the building air-conditioning and gas heat pump series

Set the indoor unit and outdoor unit numbers by manually specifying the addresses. Use the rotary switches SW1 and SW2 provided on the indoor unit PCB (printed circuit board) to set the indoor unit numbers so that they are not duplicated.

Master/Slave setting when using plural remote control


Up to two receivers can be installed in one indoor unit group.

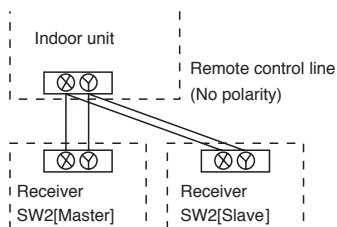

Switch	Setting	Function
SW2	ON	Master
	OFF	Slave


Wireless remote control's operable area

1. Standard reachable area of the signal
[condition] Illuminance at the receiver: 300lux
(when no lighting is installed within 1m of the receiver in an ordinary office.)

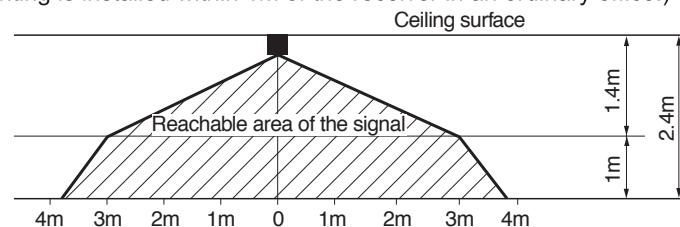

⑤ Receiver (continued)

2. Correlation between illuminance at the receiver and reachable area of the signal in a plain view. The drawing in the right shows the correlation between the reachable area of the signal and illuminance at the receiver when the remote control is operated at 1.0m high under the condition of ceiling height of 2.4m. When the illuminance becomes double, the area is narrowed down to two thirds.

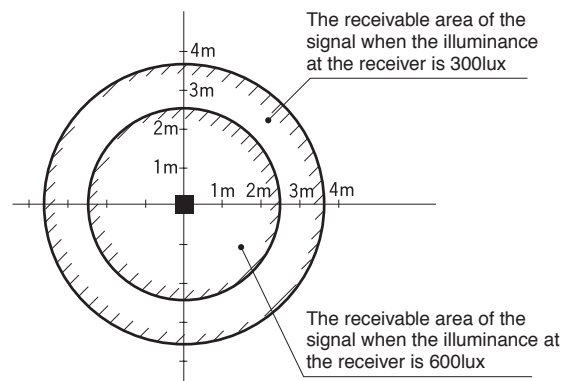


3. Installation tips when several receivers are installed close
 Minimum distance between the indoor units which can avoid cross communication is 5m under the condition of 300lux of illuminance at the receiver.
 (When no lighting is installed within 1m of the receiver in an ordinary office)

Backup switch

A backup switch is provided on the receiver. Even when the operation from the wireless remote control is not possible (due to flat batteries, control lost, or control failure), still it possible to operate as temporary means. Press the switch directly when operating it.

1. The air-conditioner starts the operation with the condition of Auto mode, 23°C of set point, High fan speed and horizontal louver position.
2. The air-conditioner stops the operation when the switch is pressed when in operation.

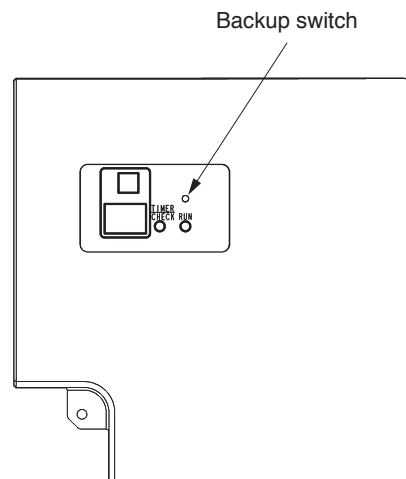

Cooling test run operation

- After safety confirmation, turn on the power.
- Transmit a cooling operation command with the wireless remote control unit, while the backup switch on the receiver is depressed.
- If the backup switch on the receiver is pressed during a test run, it will end the test run.
- If you cannot operate the unit properly during a test run, please check wiring by consulting with inspection guides.

How to read the 2-digit display



On the receiver of a wireless kit, a two-digit (7-segment) display is provided.

1. An indication will be displayed for one hour after power on.
2. An indication will be displayed for 3.5 seconds after transmitting a "STOP" command from the wireless remote control or the operation of the backup switch to stop the unit.
3. An indication appearing in (1) or (2) above will go off as soon as the unit starts operation.
4. When there are no error records to indicate, addresses of all the connected units are displayed.
5. When there are some error records remaining, the error records are displayed.
6. Error records can be cleared by transmitting a "STOP" command from the wireless remote control, while the backup button is pressed.

5.2 MOTION SENSOR KIT (LB-T-5W-E)

PJF012D036 



WARNING

- Connect the wiring to the PCB in the control box on the indoor unit and hold the wiring securely so as not to apply unexpected stress on the PCB.
Loose connection or hold will cause abnormal heat generation or fire. 
- Make sure the power source is turned off when electric wiring work.
Otherwise, electric shock, malfunction and improper running may occur. 

CAUTION

- Do not install the motion sensor kit at the following places in order to avoid malfunction.

<ul style="list-style-type: none"> (1) Places exposed to direct sunlight (2) Places near heat devices (3) High humidity places (4) Hot surface or cold surface enough to generate condensation (5) Places exposed to oil mist or steam directly (6) Places affected by the direct air flow of the Indoor unit 	<ul style="list-style-type: none"> (7) Places where the motion sensor is influenced by the fluorescent lamp or sunlight (8) Places where the motion sensor is affected by infrared rays of any other communication devices (9) Places where some object may obstruct the motion sensor
---	---



- Do not leave the motion sensor without the cover.
In case the cover needs to be detached, protect the motion sensor with a packaging or bag.
In order to keep it away from water and dust. 

Attention

- Instruct the customer how to operate it correctly referring to the instruction manual.
- For the installation method of the air-conditioner itself, refer to the installation manual enclosed in the package.

① Accessories


Please make sure that you have the motion sensor.

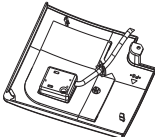Motion sensor		1
---------------	---	---

② Installing the motion sensor

It is possible to install the motion sensor by replacing with a corner lid on the panel.


Aim of the detectable scope

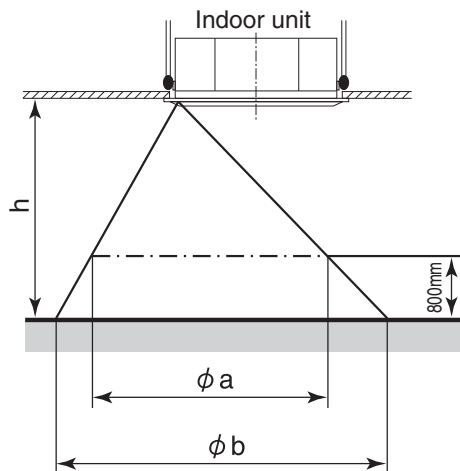

Hight of the ceiling	h [m]	2.7	3.5	4.0
Detectable scope①	ϕa [m]	about 4.5	about 6.4	about 7.6
Detectable scope②	ϕb [m]	about 6.4	about 8.3	about 9.5





Preparation before installation

- ① Install the panel onto the indoor unit according to the installation manual for the panel.
- ② Remove the inlet grille.
- ③ Remove the corner lid (A) located on the panel.
- ④ Loosen 2 screws for the control lid. (It is unnecessary to remove the screws.)
- ⑤ Slide the control lid, and open and remove it.

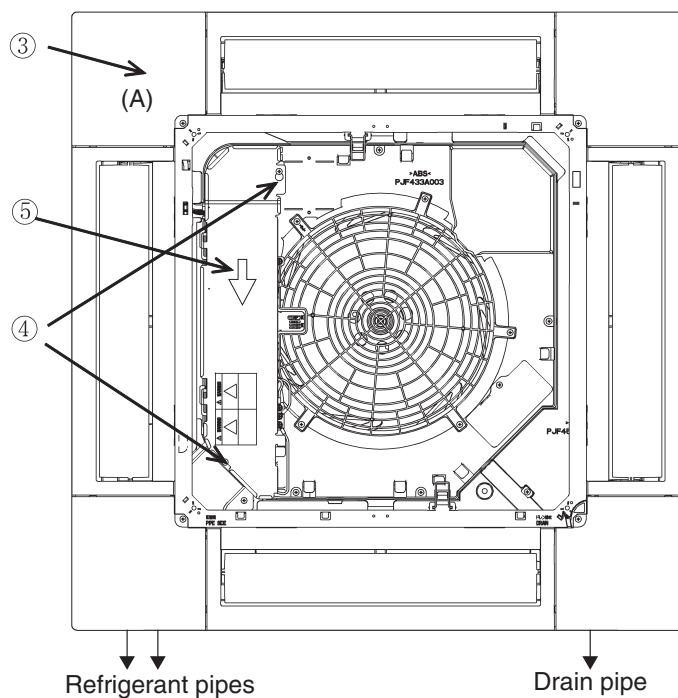

Installation of the motion sensor

- ① Loosen the bolts which fix the panel, and make a gap between the panel and the indoor unit.
- ② Pass the wiring of the motion sensor through the opening of the panel.
- ③ Hang the wiring on the hook which is on the panel's inside.
- ④ Pass the wiring through the opening of the control box.
- ⑤ Connect the connector to CNL(3P,Black) on PWB in the control box.
- ⑥ Tighten the bolts which fix the panel.
- ⑦ Install the motion sensor on the panel.
- ⑧ Fix the motion sensor by the screw.
- ⑨ Reinstall the control lid, and tighten 2 screws.

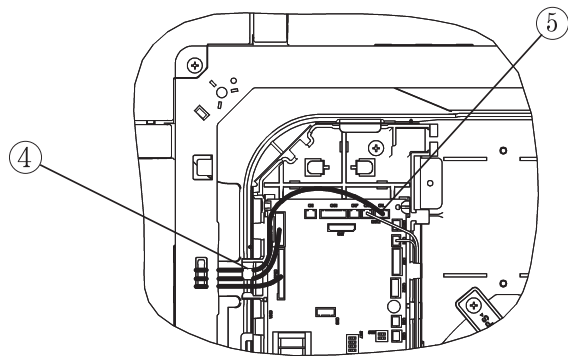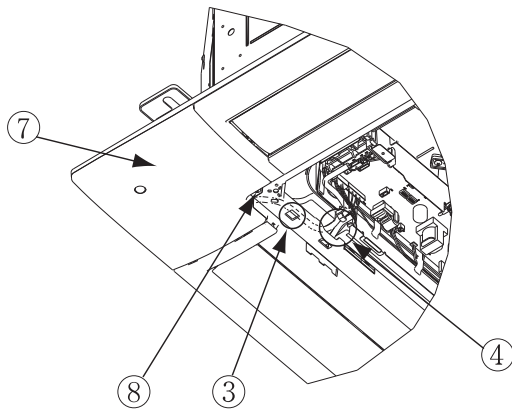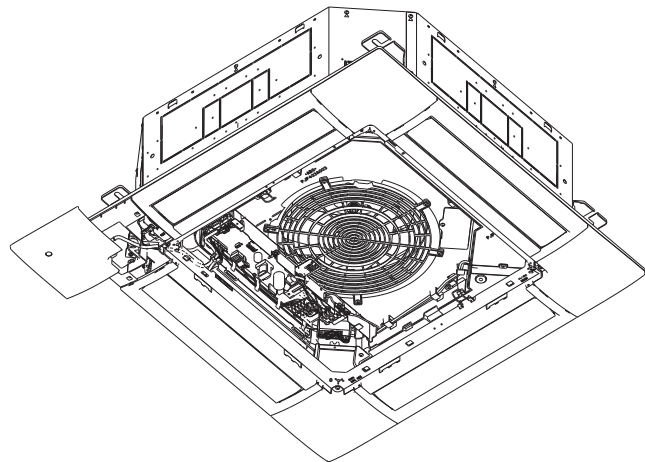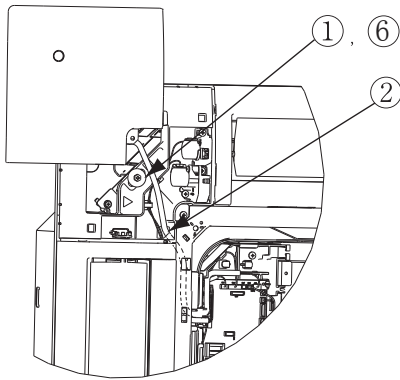

③ Setting the motion sensor

The motion sensor will not function if it is only installed.

Set the function of the motion sensor by the wired or wireless remote control.

Refer to the manual instruction of each remote control for the setting procedure.

Note: It is not possible to set by the following remote control models or older.

Wired: RC-EX1A, RC-E5, RCH-E3

Wireless: RCN-E1R



5.3 SIMPLE WIRED REMOTE CONTROL (RCH-E3)

Note:

Following functions of FDU indoor unit series are not able to be set with this simple wired remote control (RCH-E3).

1. 4-fan speed setting (P-Hi/Hi/Me/Lo) → 3-fan speed setting (Hi/Me/Lo)

Names and functions of sections

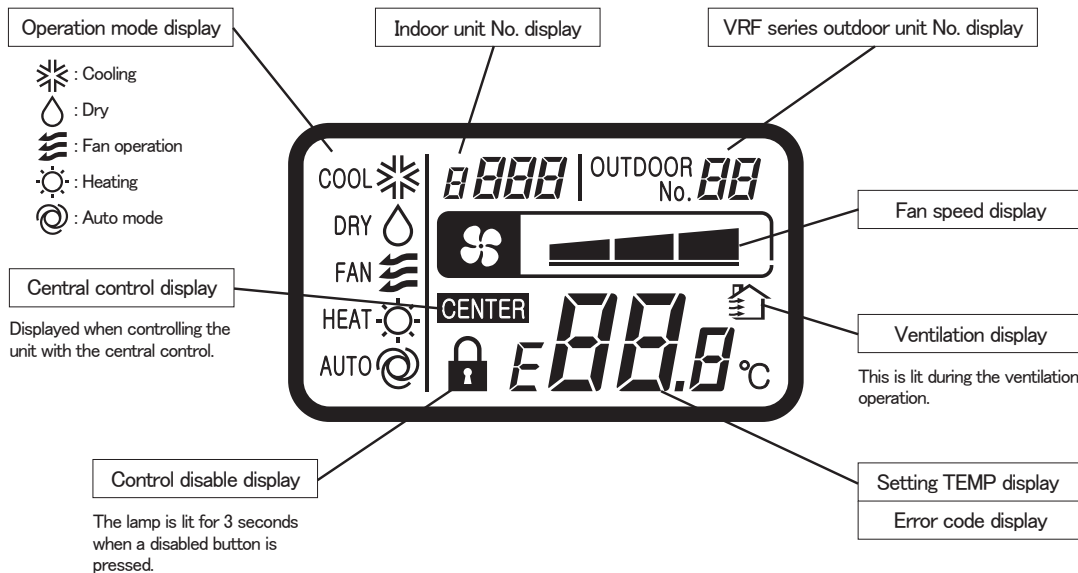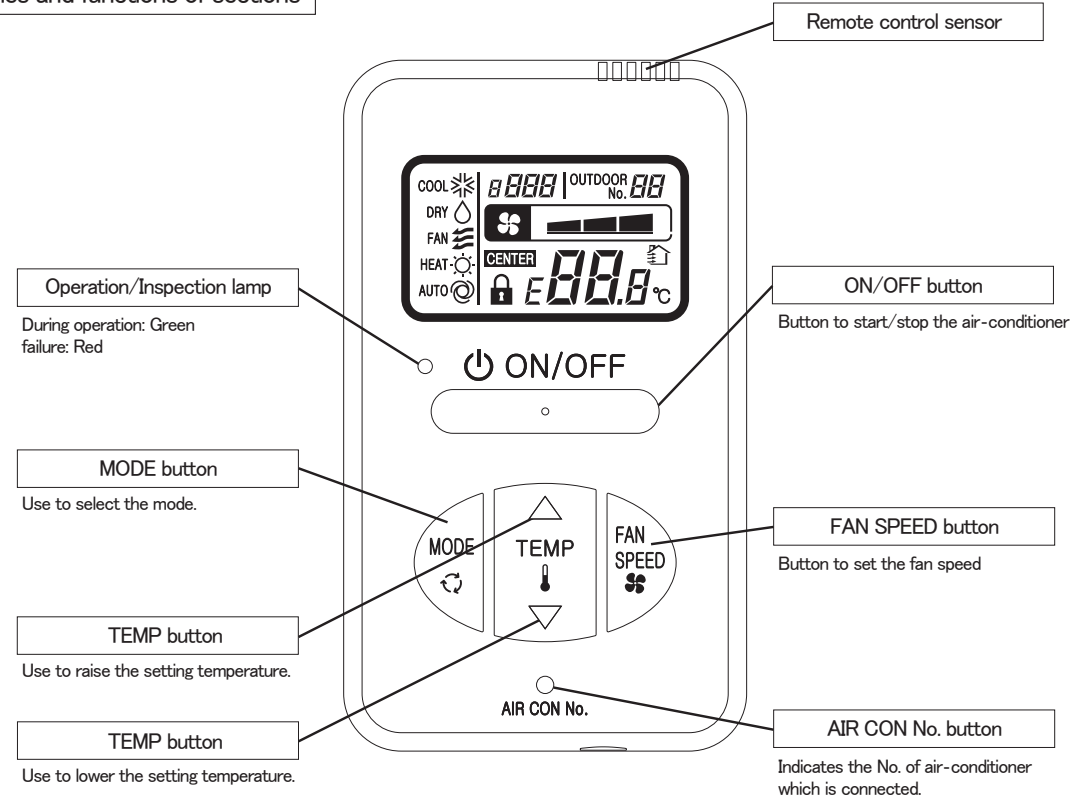


Installation of remote control

Do not install the remote control at the following places in order to avoid malfunction.

- (1) Places exposed to direct sunlight
- (2) Places near heat devices
- (3) High humidity places
- (4) Hot surface or cold surface enough to generate condensation
- (5) Places exposed to oil mist or steam directly
- (6) Uneven surface


PJZ000Z272

Remote control installation dimensions

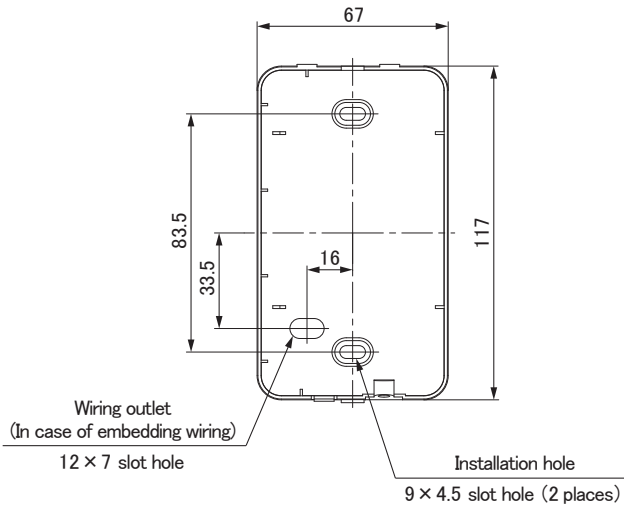


Note: Installation screw for remote control
M4 screw (2 pieces)


In case of embedding wiring

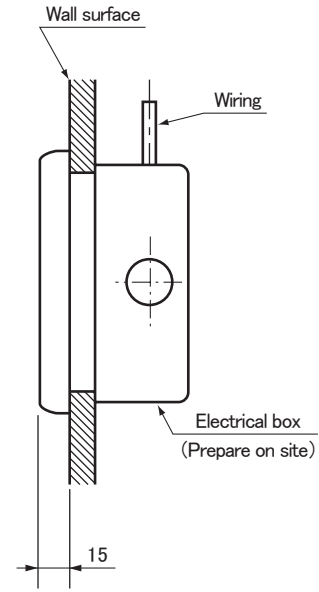

In case of exposing wiring

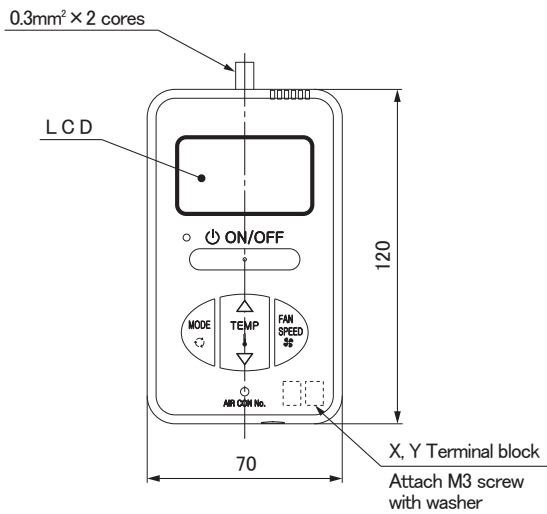


The remote control wiring can be extracted from the upper center.
After the thin part in the upper side of the remote control upper case is scraped with a nipper or knife, remove burr with a file.

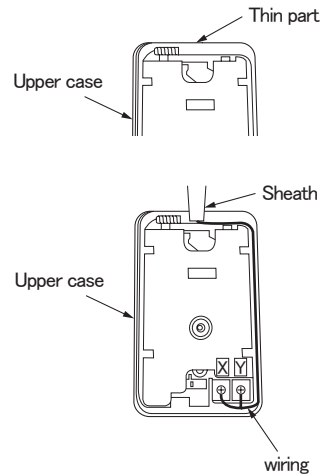

The peeling length of each wiring is as follows:

X wiring : 160mm
Y wiring : 150mm



Wiring specifications

- (1) Wiring of remote control should use 0.3mm² × 2 cores wires or cables. (on-site configuration)
- (2) Maximum prolongation of remote control wiring is 600m.
If the prolongation is over 100m, change to the size below.
But, the wiring in the remote control case should be 0.3mm² (recommended) to 0.5mm².
Change the wire size outside of the case according to wire connecting. Waterproof treatment is necessary at the wire connecting section. Be careful about contact failure.

Unit:mm

Length	Wiring thickness
100 to 200m	0.5mm ² × 2 cores
Under 300m	0.75mm ² × 2 cores
Under 400m	1.25mm ² × 2 cores
Under 600m	2.0mm ² × 2 cores

Adapted to **RoHS** directive

Simple Remote Control Installation Manual

PJZ012D069

Read together with indoor unit's installation manual.

⚠ WARNING

- **Fasten the wiring to the terminal securely and hold the cable securely so as not to apply unexpected stress on the terminal.**
Loose connection or hold will cause abnormal heat generation or fire.
- **Make sure the power source is turned off when electric wiring work.**
Otherwise, electric shock, malfunction and improper running may occur.





⚠ CAUTION


- **Do not install the remote control at the following places in order to avoid malfunction.**
 - (1) Places exposed to direct sunlight
 - (2) Places near heat devices
 - (3) High humidity places
 - (4) Hot surface or cold surface enough to generate condensation
 - (5) Places exposed to oil mist or steam directly
 - (6) Uneven surface
- **Do not leave the remote control without the upper case.**
In case the upper case needs to be detached, protect the remote control with a packaging box or bag in order to keep it away from water and dust.

Accessories	Remote control, wood screw (φ 3.5×16) 2 pieces
Prepare on site	Remote control cord (2 cores) (Refer to [2. Installation and wiring of remote control]) [In case of embedding cord] Electrical box, M4 screw (2 pieces) [In case of exposing cord] Cord clamp (if needed)

1. Installation procedure







In case of embedding cord

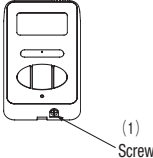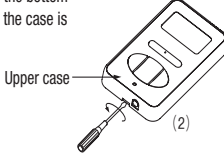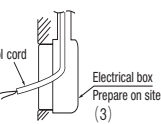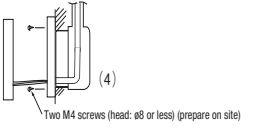- (1) **Make certain to remove** the screw on the bottom surface of the remote control. 
- (2) Remove the upper case of the remote control. Insert a flat-blade screwdriver to a concave portion of the bottom surface of the remote control and slightly twist it, and the case is removed. 
- (3) Pre-bury the electrical box and remote control cord. 
- (4) Prepare two M4 screws (recommended length: 12 – 16mm), and install the lower case to the electrical box. Do not use a screw whose screw head is larger than the height of the wall around the screw hole. 

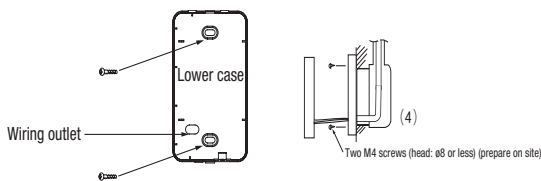

- (5) Connect the remote control cord to the terminal block. Connect the terminals (X and Y) of the remote control and the terminals (X and Y) of the indoor unit. (No polarity of X and Y)
- (6) Mount the upper case for restoring to its former state so as not to crimp the remote control cord, and secure with the removed screw.

In case of exposing cord

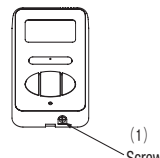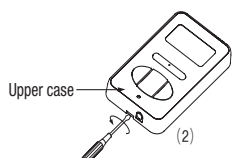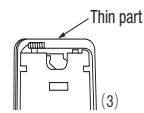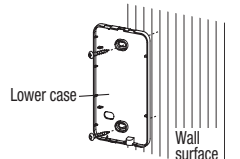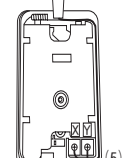
- (1) **Make certain to remove** a screw on the bottom surface of the remote control. 
 - (2) Remove the upper case of the remote control. Insert a flat-blade screwdriver to a concave portion of the bottom surface of the remote control and slightly twist it, and the case is removed. 
 - (3) The remote control cord can be extracted from the upper center. After the thin part in the upper side of the remote control upper case is scraped with a nipper or knife, remove burr with a file. 
 - (4) The lower case of the remote control is mounted to a flat wall with two accessory wood screws. 
 - (5) Connect the remote control cord to the terminal block. Connect the terminals (X and Y) of the remote control and the terminals (X and Y) of the indoor unit. (No polarity of X and Y)
The wiring route is as shown in the right. 
- The wiring in the remote control case should be 0.3 mm² (recommended) to 0.5 mm² at maximum.
Further, peel off the sheath.
The peeling length of each wiring is as follows:
- | |
|------------------|
| X wiring : 160mm |
| Y wiring : 150mm |
- 
- (6) Mount the upper case for restoring to its former state so as not to crimp the remote control cord, and secure with the removed screw.
 - (7) In the case of exposing installation, secure the remote control cord to the wall surface with a cord clamp so as not to loosen the remote control cord.

2. Installation and wiring of remote control

- (1) Wiring of remote control should use 0.3mm² × 2 cores wires or cables. (on-site configuration)
 - (2) Maximum prolongation of remote control wiring is 600 m.
If the prolongation is over 100m, change to the size below.
But, the wiring in the remote control case should be 0.3mm² (recommended) to 0.5mm².
Change the wire size outside of the case according to wire connecting. Waterproof treatment is necessary at the wire connecting section. Be careful about contact failure.
- | | |
|------------|-------------------------------|
| 100 - 200m | 0.5mm ² × 2 cores |
| Under 300m | 0.75mm ² × 2 cores |
| Under 400m | 1.25mm ² × 2 cores |
| Under 600m | 2.0mm ² × 2 cores |

3. Master/ slave setting when more than one remote control are used


- (1) Up to two remote controls can be connected to one unit (or one group) of indoor unit.

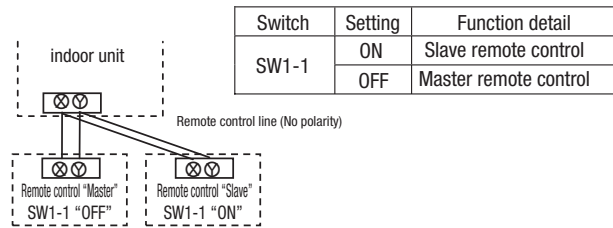

- (2) Set the switch SW1-1 of the slave remote control is "Slave" (ON). The factory default is set as "Master" (OFF).

(Note) • The remote control temperature sensor enabled setting can be set only to the master remote control.


- Install the master remote control at the position to detect room temperature.
- The air-conditioner operation follows the last operation of the remote control in case of the master / slave setting.

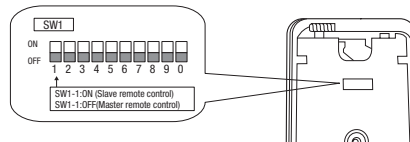

4. The indication when power source is supplied

- (1) At the time of turning the power source on, after the light is on for the first 2 seconds, the display becomes as shown below.

The number displayed on the upper side of LCD in the remote control is the software number, and this is not an error code.

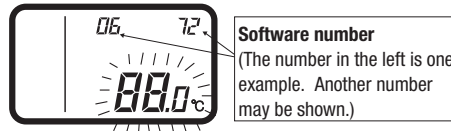

- (2) Then, "88.0 °C" blinks on the remote control until the communication between the remote control and the indoor unit is established.
- (3) In the case of connecting one remote control with one unit (or one group) of indoor unit, make certain to set the master remote control (factory default). If the slave remote control is set, a communication cannot be established.
- (4) If a state where the communication between the remote control and the indoor unit cannot be established continues about for 30 minutes, "E" is displayed. Confirm the wiring of the indoor unit and the outdoor unit and master/slave setting of the remote control.



5. Confirmation method for return air temperature

Return air temperature can be confirmed by the remote control operation.

- (1) Press **AIR CON No.** button for over 5 seconds.

"88" blinks on the temperature setting indicator.
("88" blinks for approximately 2 seconds while data is read.)



Then, the return air temperature is displayed.

(Example) return air temperature: "27 °C" (blinking)

(Note) For the return air temperature, in the normal case, the return air temperature of the indoor unit is displayed; however, in the case that the remote control temperature sensor is effective, detected temperature by the remote control temperature sensor is displayed.

- (2) Press **ON/OFF** button.
End.

[In the case that the remote temperature sensor is ineffective and plural indoor units are connected to one remote control.]

- (1) Press **AIR CON No.** button for over 5 seconds.

indoor unit No. indicator: "U 000" (blinking)
(Among the connected indoor units, the lowest number is displayed.)



- (2) Press **TEMP Δ** or **TEMP ∇** button.
Select the indoor unit No.

- (3) Press **MODE** button.
Decider the indoor unit No.

(Example) indoor unit No. indicator: "U 000"

"88" blinks on the temperature setting indicator. (blinking for approximately 2 to 10 seconds while data is read) Then, the return air temperature is displayed. When **AIR CON No.** is pressed, return to the indoor unit selection display (example, "U 000").

- (4) Press **ON/OFF** button.
End.


6. Function setting

Each function of the remote control and the indoor unit is automatically set to the initial setting, which is the standard use, on the occasion of connecting the remote control with the indoor unit. In the case of the standard use, the setting change is unnecessary. However, if you would like to change the initial setting "○", change the setting for only the item of the function number. **Record the setting contents and stored them.**

(1) Function setting item by switch on PCB

Switch No.	Setting	Setting detail	Initial setting
SW1-1	ON	Slave remote control	
	OFF	Master remote control	○
SW1-2	ON	Remote control temperature sensor enabled	
	OFF	Remote control temperature sensor disabled	○
SW1-3	ON	"MODE" button prohibited	
	OFF	"MODE" button enabled	○
SW1-4	ON	"ON/OFF" button prohibited	
	OFF	"ON/OFF" button enabled	○

Switch No.	Setting	Setting detail	Initial setting
SW1-5	ON	"TEMP" button prohibited	
	OFF	"TEMP" button enabled	○
SW1-6	ON	"FAN SPEED" button prohibited	※ Note 1
	OFF	"FAN SPEED" button enabled	※ Note 1
SW1-7	ON	Auto restart function enabled	
	OFF	Auto restart function disabled	○
SW1-8, 9, 0	ON	Not used	○
	OFF		

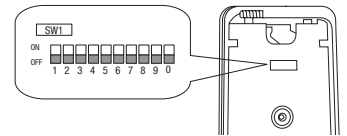

- As for the slave remote control, function setting is impossible other than SW1-1.
- In the indoor unit with only one fan speed, "FAN SPEED" button cannot be enabled.

(2) Function setting item by button operation

Classification	Function No.	Function	Setting No.	Setting	Initial setting	Remarks
Remote control function	01	Indoor unit fan speed	01	Fan speed: three steps	※ Note 1	The fan speed is three steps, 0000 - 0000 - 0000 .
			02	Fan speed: two steps (Hi-Lo)	※ Note 1	The fan speed is two steps, 0000 - 0000 .
			03	Fan speed: two steps (Hi-Me)		The fan speed is two steps, 0000 - 0000 .
			04	Fan: one step	※ Note 1	The fan speed is fixed to one step.
	03	Remote control thermostat at the time of cooling	01	Remote control temperature sensor: no offset	○	
			02	Remote control temperature sensor: +3.0 °C		At the time of cooling, in the case of remote control temperature sensor enabled, offset temperature at +3.0°C.
			03	Remote control temperature sensor: +2.0 °C		At the time of cooling, in the case of remote control temperature sensor enabled, offset temperature at +2.0°C.
			04	Remote control temperature sensor: +1.0 °C		At the time of cooling, in the case of remote control temperature sensor enabled, offset temperature at +1.0°C.
			05	Remote control temperature sensor: -1.0 °C		At the time of cooling, in the case of remote control temperature sensor enabled, offset temperature at -1.0°C.
			06	Remote control temperature sensor: -2.0 °C		At the time of cooling, in the case of remote control temperature sensor enabled, offset temperature at -2.0°C.
			07	Remote control temperature sensor: -3.0 °C		At the time of cooling, in the case of remote control temperature sensor enabled, offset temperature at -3.0°C.
	04	Remote control thermostat at the time of heating	01	Remote control temperature sensor: no offset	○	
			02	Remote control temperature sensor: +3.0 °C		At the time of heating, in the case of remote control temperature sensor enabled, offset temperature at +3.0°C.
			03	Remote control temperature sensor: +2.0 °C		At the time of heating, in the case of remote control temperature sensor enabled, offset temperature at +2.0°C.
			04	Remote control temperature sensor: +1.0 °C		At the time of heating, in the case of remote control temperature sensor enabled, offset temperature at +1.0°C.
			05	Remote control temperature sensor: -1.0 °C		At the time of heating, in the case of remote control temperature sensor enabled, offset temperature at -1.0°C.
			06	Remote control temperature sensor: -2.0 °C		At the time of heating, in the case of remote control temperature sensor enabled, offset temperature at -2.0°C.
			07	Remote control temperature sensor: -3.0 °C		At the time of heating, in the case of remote control temperature sensor enabled, offset temperature at -3.0°C.
	05	Ventilator setting	01	No ventilator connection	○	
			02	Ventilator links air-conditioner		In case of Single split series, by connecting ventilator device to CNT of the indoor printed circuit board (in case of VRF series, by connecting it to CND of the indoor printed circuit board), the operation of ventilator device is linked with the operation of indoor unit.
	06	"Auto" operation setting	01	"Auto" operation enabled	※ Note 1	
02			"Auto" operation disabled	※ Note 1	"Auto" operation disabled	
07	Operation permission/prohibition	01	Disabled	○		
		02	Enabled		Operation permission/prohibition control is enabled.	
08	External input	01	Level input	○		
		02	Pulse input			
09	Fan speed setting	01	Standard	Note2		
		02	High speed 1	Note2		
		03	High speed 2	Note2		
10	Fan remaining operation at the time of cooling	01	No remaining operation	○	After cooling stopped, no fan remaining operation	
		02	0.5 hours		After cooling stopped, fan remaining operation for 0.5 hours	
		03	1 hour		After cooling stopped, fan remaining operation for 1 hour	
		04	6 hours		After cooling stopped, fan remaining operation for 6 hours	
11	Fan remaining operation at the time of heating	01	No remaining operation	○	After heating stopped or after heating thermostat OFF, no fan remaining operation	
		02	0.5 hours		After heating stopped or after heating thermostat OFF, fan remaining operation for 0.5 hours	
		03	2 hours		After heating stopped or after heating thermostat OFF, fan remaining operation for 2 hours	
		04	6 hours		After heating stopped or after heating thermostat OFF, fan remaining operation for 6 hours	
12	Setting temperature offset at the time of heating	01	No offset	○		
		02	Setting temperature offset + 3.0 °C		The setting temperature at the time of heating is offset by +3.0 °C.	
		03	Setting temperature offset + 2.0 °C		The setting temperature at the time of heating is offset by +2.0 °C.	
		04	Setting temperature offset + 1.0 °C		The setting temperature at the time of heating is offset by +1.0 °C.	
13	Heating fan controller	01	Low fan speed	※ Note 1	At the time of heating thermostat OFF, operate with low fan speed.	
		02	Setting fan speed		At the time of heating thermostat OFF, operate with the setting fan speed.	
		03	Intermittent operation	※ Note 1	At the time of heating thermostat OFF, intermittently operate.	
		04	Fan off		At the time of heating thermostat OFF, a fan will be stopped. When the remote control thermostat is enabled, automatically set to "Fan off". Do not set at the time of the indoor unit temperature sensor.	
14	Return air temperature offset	01	No offset	○		
		02	Return air temperature offset +2.0 °C		Offset the return air temperature of the indoor unit by +2.0 °C.	
		03	Return air temperature offset +1.5 °C		Offset the return air temperature of the indoor unit by +1.5 °C.	
		04	Return air temperature offset +1.0 °C		Offset the return air temperature of the indoor unit by +1.0 °C.	
		05	Return air temperature offset -1.0 °C		Offset the return air temperature of the indoor unit by -1.0 °C.	
		06	Return air temperature offset -1.5 °C		Offset the return air temperature of the indoor unit by -1.5 °C.	
		07	Return air temperature offset -2.0 °C		Offset the return air temperature of the indoor unit by -2.0 °C.	

Note 1: The symbol "※" in the initial setting varies depending upon the indoor unit and the outdoor unit to be connected, and this is automatically determined as follows:

Switch No. / Function No.	Function	Setting	Product model
SW1-6	"FAN SPEED" button	"FAN SPEED" button prohibited	Product model whose indoor fan speed is only one step
		"FAN SPEED" button enabled	Product model whose indoor fan speed is two steps or three steps
Remote control function 01	Indoor unit fan speed	Fan speed: three steps	Product model whose indoor unit fan speed is three steps
		Fan speed: two steps (Hi-Lo)	Product model whose indoor unit fan speed is two steps
		Fan speed: two steps (Hi-Me)	Product model whose indoor unit fan speed is only one step
Remote control function 06	"Auto" operation setting	"Auto" operation enabled	Product model where "Auto" mode is selectable
		"Auto" operation disabled	Product model without "Auto" mode
Indoor unit function 13	Heating fan control	Low fan speed	Product model except FDUS
		Intermittent operation	FDUS

Note 2: Fan speed of "High speed" setting


Fan speed setting	Indoor unit fan speed setting		
	0000 - 0000 - 0000	0000 - 0000	0000 - 0000
Standard	Hi - Mid - Lo	Hi - Lo	Hi - Mid
High speed 1 + 2	UHi - Hi - Mid	UHi - Mid	UHi - Hi

Initial setting of some indoor unit is "High speed".

Note 3: As for plural indoor unit, set indoor functions to each master and slave indoor unit. But only master indoor unit is received the setting change of indoor unit function "07 Operation permission/prohibition" and "08 External input".


7. How to set functions by button operation

- (1) Stop air-conditioner, and simultaneously press **AIR CON No.** and **MODE** buttons at the same time for over three seconds.
The function number "01" blinks in the upper right.

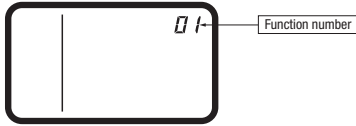

- (2) Press **TEMP▲** or **TEMP▼** button.
Select the function number.
- (3) Press **MODE** button.
Decide the function number.

- (4) [In the case of selecting the remote control function (01-06)]
- ① The current setting number of the selected function number blinks (Example)
Function number: "01" (lighting)
Setting number: "01" (blinking)

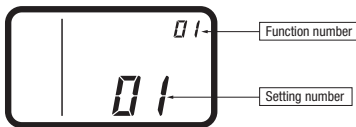


- ② Press **TEMP▲** or **TEMP▼** button.
Select the setting number.

- ③ Press **MODE** button.
The setting is completed.

Light is on for approximately 3 to 20 seconds while data of the decided function No. and setting No. is transmitted.


(Example)

Function number: "01" (lighting for 3 to 20 seconds)
Setting number: "01" (lighting for 3 to 20 seconds)

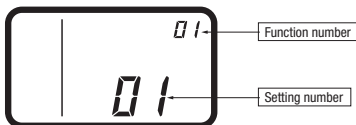

Then, the screen goes back to the function number blinking indication (1), if the setting is sequentially conducted, continue with the same procedures. If the setting is finished, proceed to (5).

- (5) Press **ON/OFF** button.
The setting is completed.

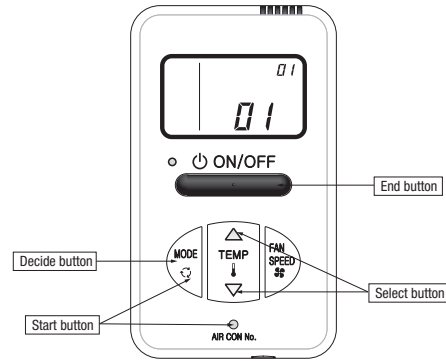

[In the case of selecting the indoor unit function (07-14)]


- ① "88" blinks on the temperature setting indicators.
(blinking for approximately 2 to 10 seconds while data are read)



After that, the current setting number of the selected function number blinks.

(Example)

Function number: "07" (lighting)
Setting number: "01" (blinking)

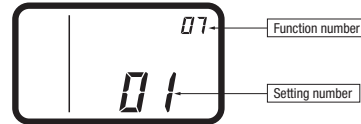


Proceed to ②.

[Note]

a. In the case of connecting one remote control to plural indoor units, the display will be as follows:

Indoor unit No. display: "U 000" (blinking)

(Display the lowest number among the connected indoor units.)

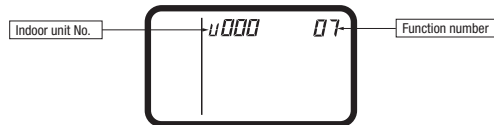

b. Press **TEMP▲** or **TEMP▼** button.

Select the indoor unit No. to be set.

If "U ALL" is selected, the same setting can be set to all units.

c. Press **MODE** button.

Decide the indoor unit No.

"88" blinks on the temperature setting indicators. (blinking for 2 to 10 seconds while data is read)

When **AIR CON No.** button is pressed, go back to the indoor unit selection display (for example, "U 000" blinking).

- ② Press **TEMP▲** or **TEMP▼** button.
Select the setting number

- ③ Press **MODE** button.

The setting is completed.


Light is on for approximately 3 to 20 seconds while data of the decided function No. and setting No. is transmitted.

(Example)

Indoor unit No.: "U 000" (lighting for 3 to 20 seconds)

Function number: "07" (lighting for 3 to 20 seconds)

Setting number: "01" (lighting for 3 to 20 seconds)

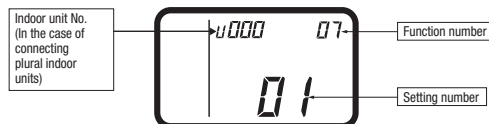


Then, the screen goes back to the function number blinking indication (1), if the setting is sequentially conducted, continue with the same procedures. If the setting is finished, proceed to (5).

- Even if **ON/OFF** button is pressed during setting, the setting is ended. However, any details where the setting has not been completed will be ineffective.
- The setting contents are stored in the control, and even if the power failure occur, this will not be lost.

[Confirmation method for current setting]

According to the operation, the "setting number" displayed first after selecting "function number" and pressing **MODE** button is the currently set content. (However, in the case of selecting "U ALL" (all units), the setting number of the lowest number among the indoor units is displayed.)

5.4 BASE HEATER KIT (CW-H-E1)

PCZ012D007A 


Model Name: CW-H-E1

WARNING

- Follow the instruction and installation manual for outdoor unit when installing the heater.
- This heater must be installed by authorized personnel.
- Turn off the power source when the kit is installed.
- Failure to follow the above will result in serious accident like electrical shock or fire.

AREAS TO BE APPLIED

This kit is to be used in an area where the lowest temperature drops below zero.


 **Caution:** In case the heater is not applied on the unit which is installed in an area mentioned above, it may be regarded as installation failure and warranty may not be given.

CAUTION

- Follow the law or regulation of the country where it is installed.
- Do not alter the heater.
- Lay down the heater so that the edge of the sheet metal does not damage the heater.
- Bending radius must be bigger than 25mm.
- Do not use the heater near flammable substances.
- Be sure to check the electrical insulation before use.
- Be sure to check the drain is not trapped by the heater.
- Do not leave refrigerant oil on the base.

Components


- Heater : 1pc
- Bracket A : 4pcs
- Bracket B : 1pcs
- Bracket C : 1pcs
- Tapping screw (OD5) : 4pcs
- Tapping screw (OD4) : 4pcs
- Plastic band with clip : 2pcs
- Plastic band : 5pcs

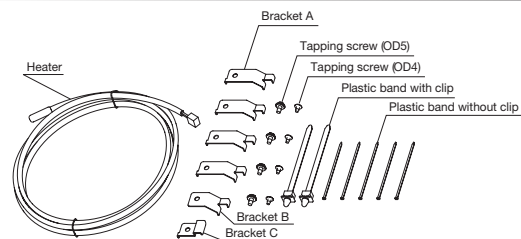

Applicable model


This heater kit is applicable for 3 different models.

<Model A>
Single fan with plastic fan guard model

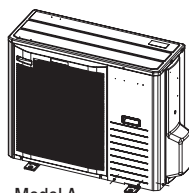


Model A

<Model B>
Single fan model

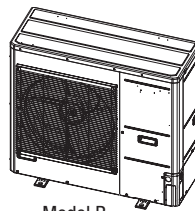

Model B

<Model C>
Double fan model

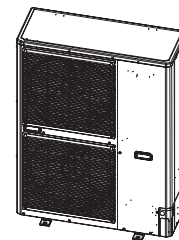


Model C


Installation procedure

Step 1


1. Remove the top panel of the outdoor unit.

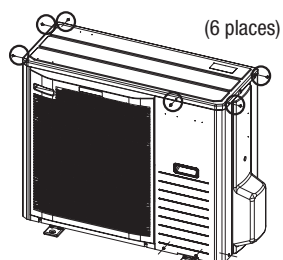

Model A



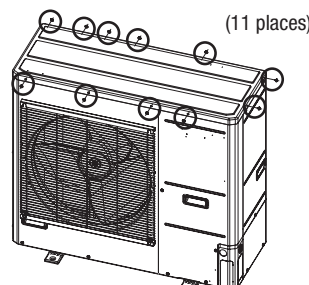


Model B



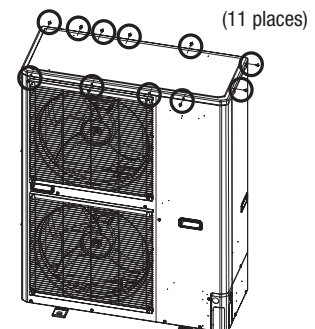


Model C

Step 2 2. Remove the service panel.

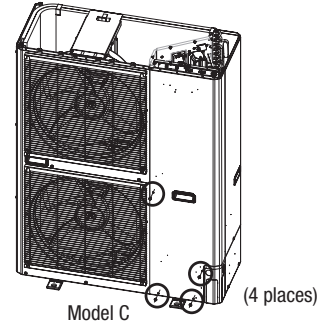
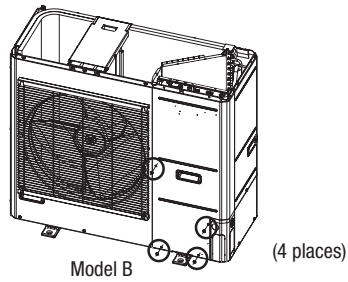
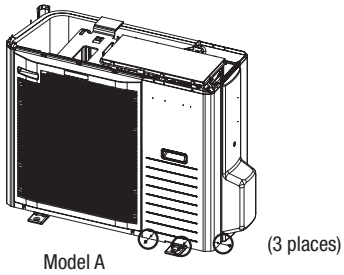


Step 3 3. Remove the front panel.
Pull the panel straightforward so that the panel doesn't touch the fan blade.


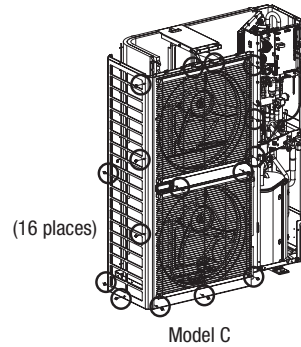
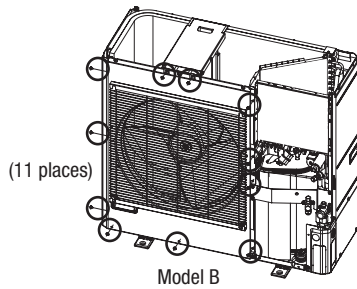
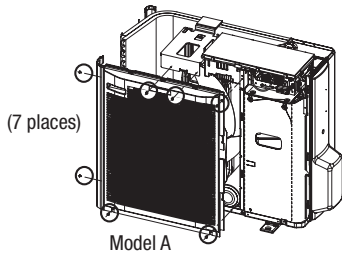


Step 4 4. Remove the fan blade if necessary. **<Note>**

Do not rotate the axis of fan motor when removing the fan blade. It may cause malfunction of the fan motor.

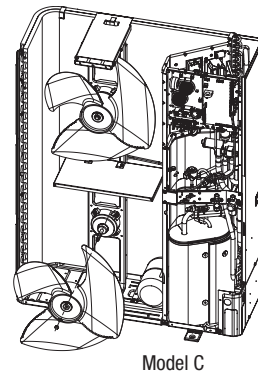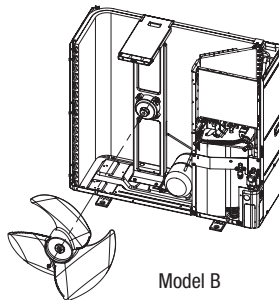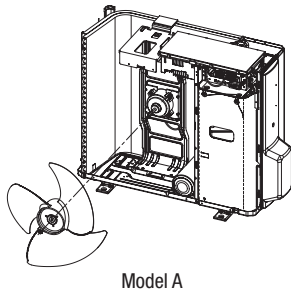


Step 5 5. Lay down the drain pan heater on the base.
For model A, put the cables rear the fan motor bracket.

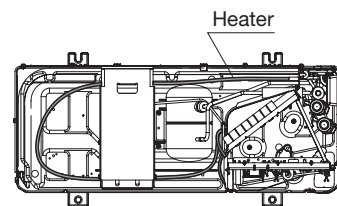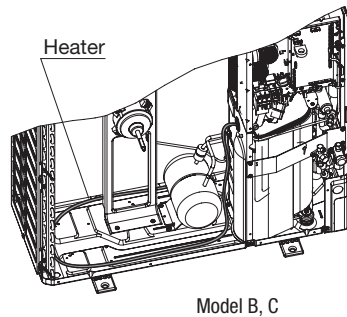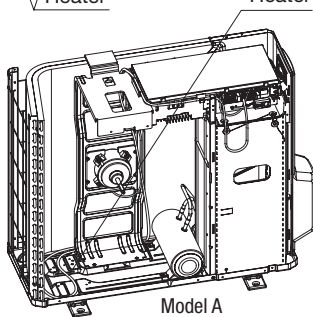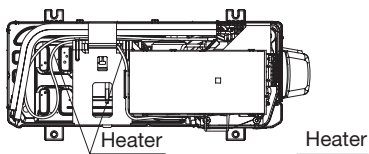


Step 6

6. Put the heater underneath the heat exchanger and align the end of heater with the end plate of heat exchanger.

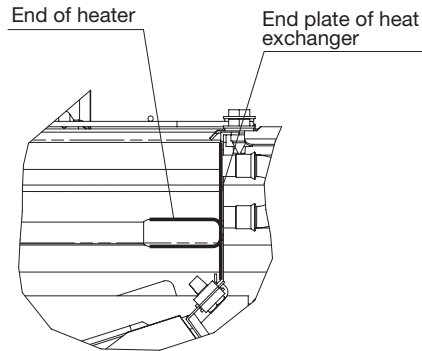


Step 7


7. Fix the heater with brackets.

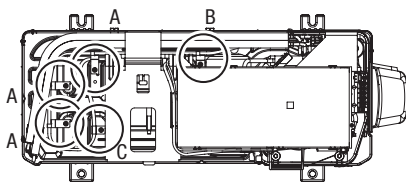

For model A, use 3 pcs of bracket A, 1pc of bracket B and C. Fix bracket A and C with the attached screw (OD4), and fix bracket B with the removed screw which is fastened at the same place.

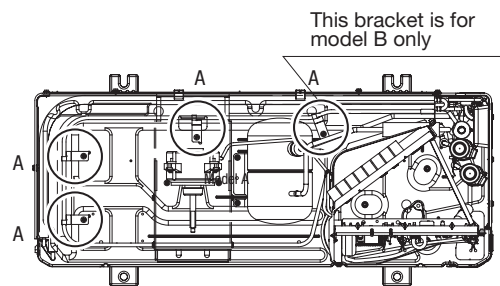


For model B and C, fix bracket A with the attached screw (OD5).

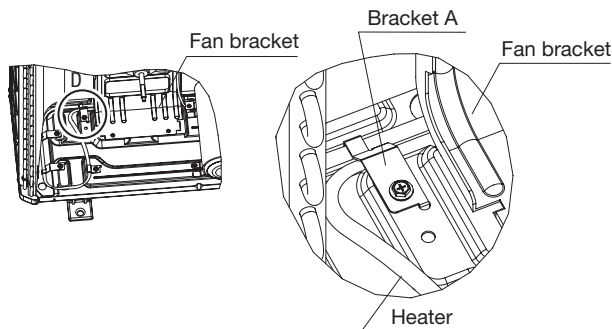

Model A

Detail view D

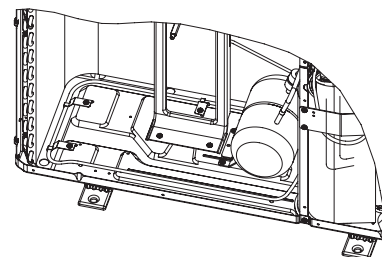


Model B, C

<Note for model A>

- 1) Put the end of heating part just after the bracket C.
- 2) Fix the incoming and out going cable with one bracket A on the left of fan bracket as figure shows.

<Note>

- 1) Fix the heater so that the bracket doesn't pinch the heater as figure shows.
- 2) Place the heater so as to touch the base completely.
- 3) In bending position, twist the heater to make it easier to bend, and get back to be able to fix it with bracket.
- 4) Be careful not to be injured by aluminum fin when fixing the heater with screw.

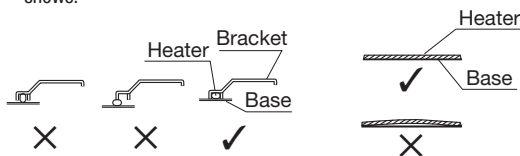



Step 8

8. Insert the plastic band with clip on the designated place (2 places), and fix the heater.(Model B,C only)



<Note>

1) Do not fasten the heating part with the plastic band.
There is a marking on the end of heating part.

2) When the heater is laid down correctly, the end of heating part comes to the corner of the base.

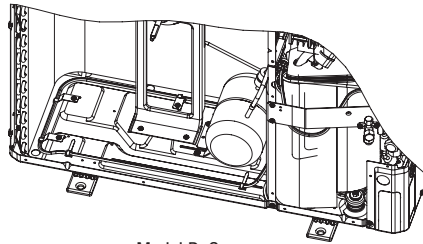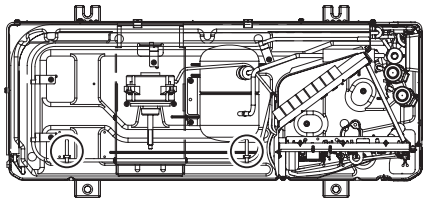

Model B, C

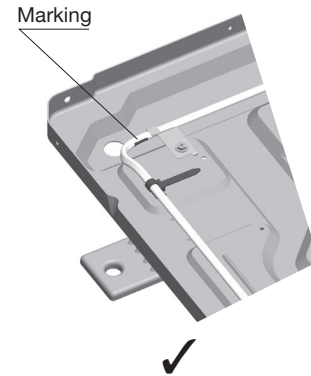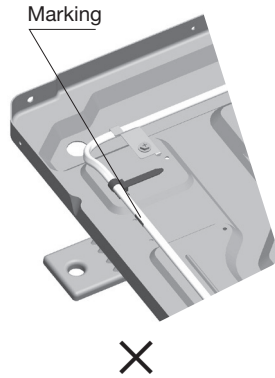







Step 9

9. Lay down the wiring on the same route of fan motor wiring, and fix the wire with attached plastic band at the same place where the fan motor wiring is banded.

Model A

Model B

Model C

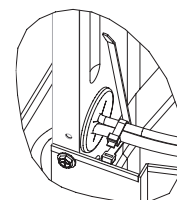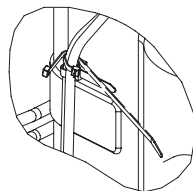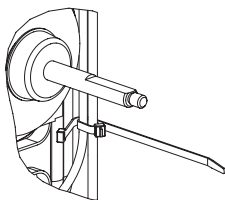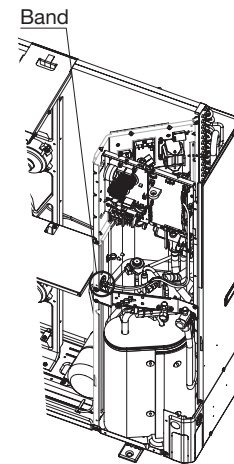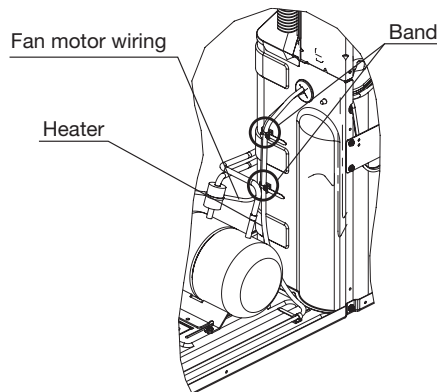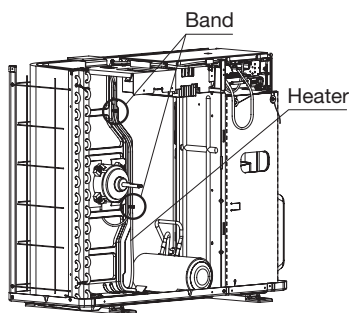

<Note>


Fan motor wiring is banded on the bracket so that it doesn't loosen.
Do not loose the band for the motor wiring to band the heater wire together but use the attached plastic band.

Step 10

10. Insert the connector to the port (Model A: CNN, Model B,C:CNF) on the PCB, and fix the wire with bands. Excess part of the wire should be dropped naturally.

<Note>

Be sure to cut the excess part of plastic band. It may cause abnormal noise when hit by fan blade or misassembling of panels. Do not bundle excess part of the wire. It may damage the heater.

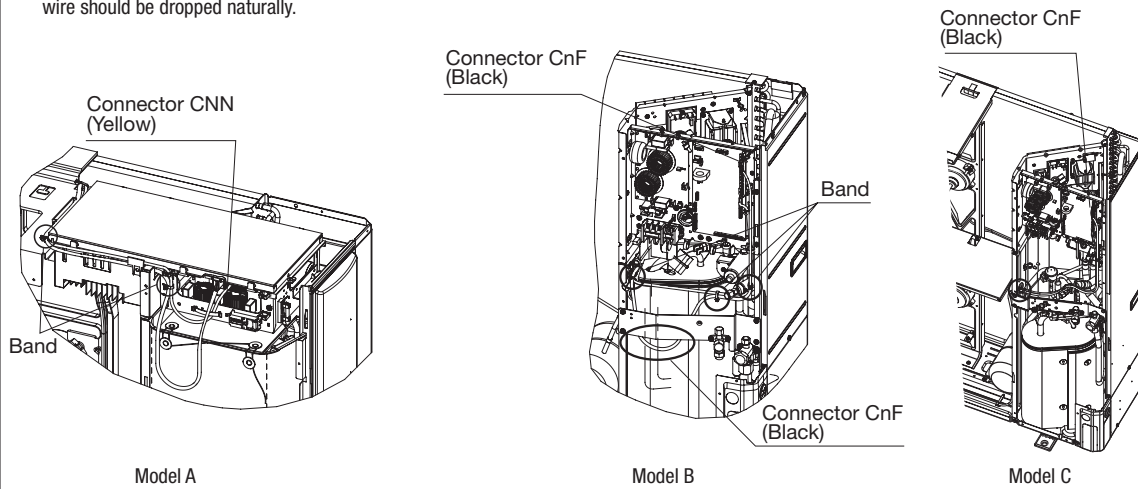


Step 11

11. Reassemble the fan blade.

Take care to align the D-cut of motor shaft and the fan blade. ∇ mark on the center of the fan shows the position of D-cut.

<Note>

1. Tightening torque of the nut is 4.0-4.9 N·m.
2. Do not rotate the axis of fan motor when tightening the nut. It may cause malfunction of the fan motor.

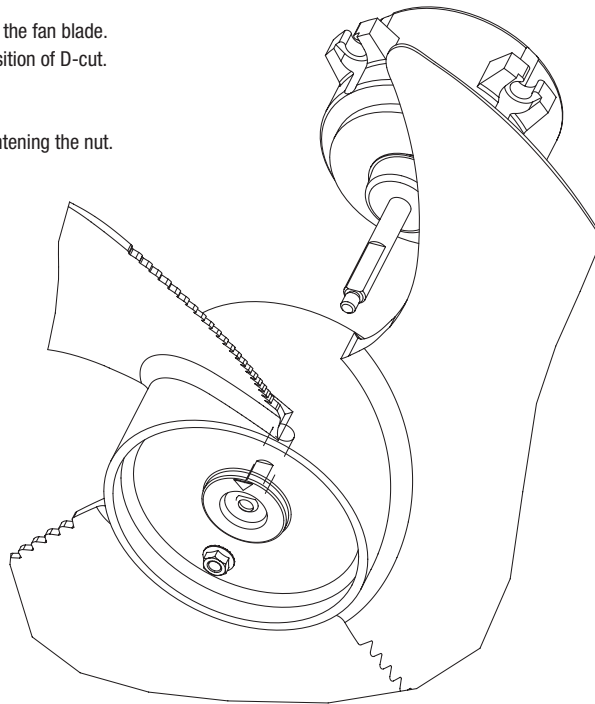


<Note>

- This heater should have bending radius of at least 25mm including non-heating part. Do not bundle the excess part of the wire. It may cause disconnection of the heater or insufficient capacity.
- Be sure to prevent the heater from touching any refrigerant piping. Especially, pay close attention not to make it touch with pipes which are close to the wiring route such as suction pipe, check valve and check joint.


Step 12

12. Reassemble the panels.


[Model A]

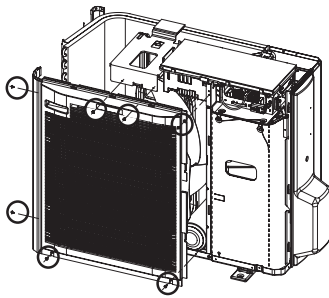

Front panel

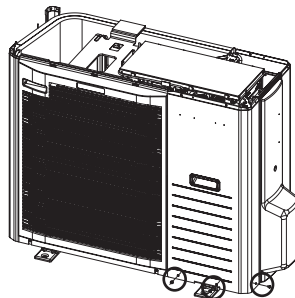


Service panel

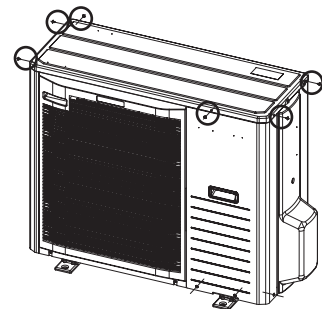


Top panel


[Model B]

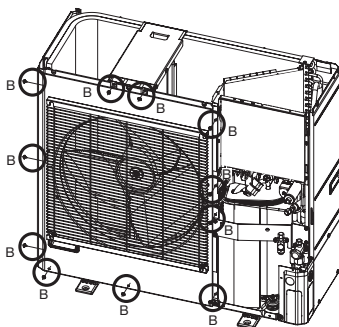

Front panel

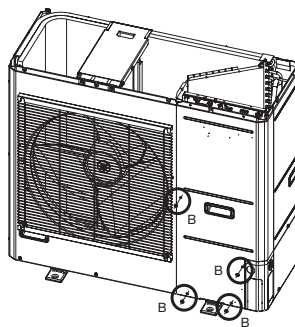


Service panel

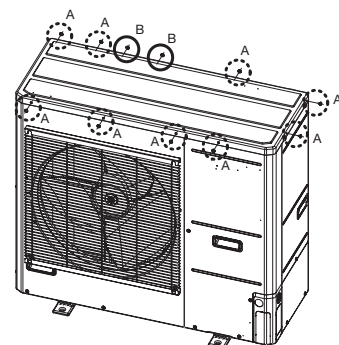


Top panel


[Model C]

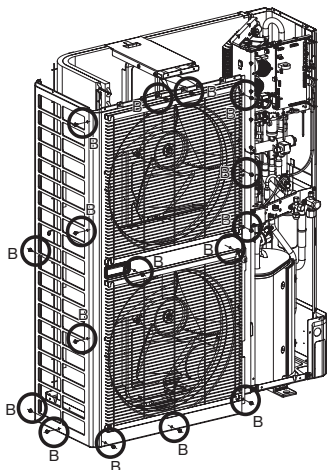

Front panel

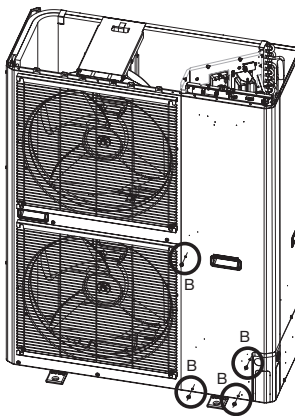

Service panel

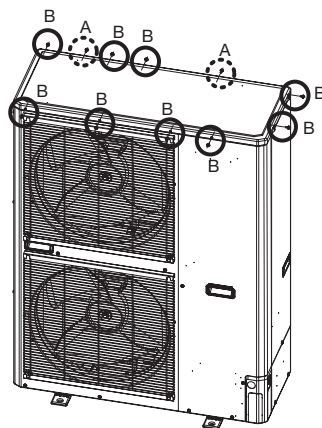

Top panel

<Note>

- 1) When reassembling the service panel, take care not to damage the front panel with the edge.
- 2) Top panel of model B and model C is fixed with two different screws.
Be sure to use correct screw as figure shows.




A



B


Applicable model

Model name : FDC100VNP
 <Model D>
 Single fan model

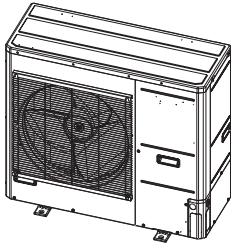

Components

- Heater : 1pc
- Bracket A : 4pcs
- Bracket B : 1pcs (※1)
- Bracket C : 1pcs (※1)
- Tapping screw (OD5) : 4pcs
- Tapping screw (OD4) : 4pcs
- Plastic band with clip ① : 2pcs
- Plastic band with clip ② : 2pcs (※2)
- Plastic band : 5pcs

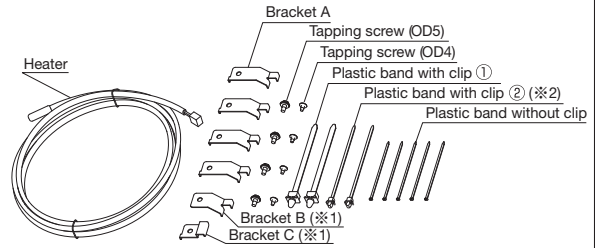


※1 This part is not used for FDC 100VNP
 ※2 These parts are equipped with FDC 100VNP as accessory part

Installation procedure

Step 1


1. Remove the top panel of the outdoor unit (11 pcs of tapping screws).

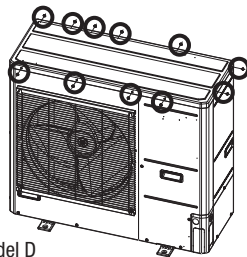

Model D

Step 2


2. Remove the service panel (4 pcs of tapping screws).

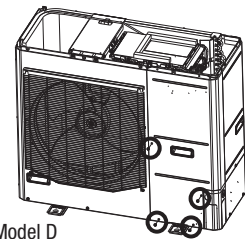

Model D

Step 3

3. Remove the front panel (11 pcs of tapping screws). Pull the panel straightforward so that the panel doesn't touch the fan blade.

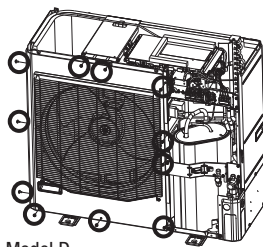


Model D

Step 4

4. Remove the fan blade if necessary.

<Note>


Do not rotate the axis of fan motor when removing the fan blade. It may cause malfunction of the fan motor.

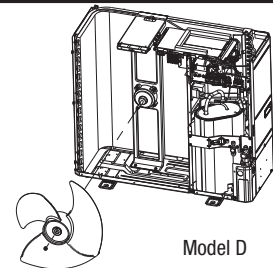

Model D

Step 5


5. Lay down the drain pan heater on the base.

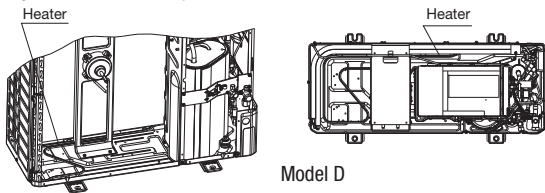

Model D

Step 6

6. Put the heater underneath the heat exchanger and align the end of heater with the end plate of heat exchanger.

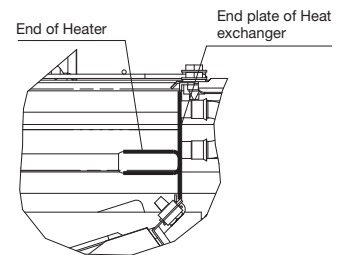


Step 7



7. Fix the heater with 4 brackets.

<Note>

- 1) Fix the heater so that the bracket doesn't pinch the heater as figure shows.
- 2) Place the heater so as to touch the base completely.
- 3) In bending position, twist the heater to make it easier to bend, and get back to be able to fix it with bracket.

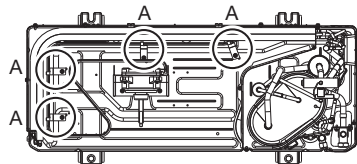

Model D

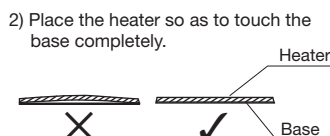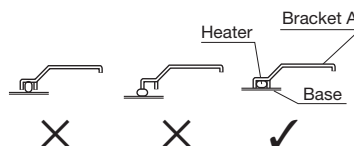

- 4) Be careful not to be injured by aluminum fin when fixing the heater with screw.




Step 8

8. Insert the plastic band with clip on the designated place (3 places), and fix the heater.

<Note>

1) Do not fasten the heating part with the plastic band. There is a marking on the end of heating part.


2) When the heater is laid down correctly, the end of heating part comes to the corner of the base.

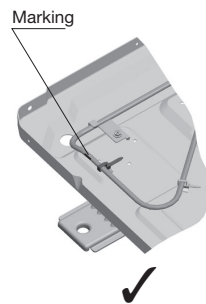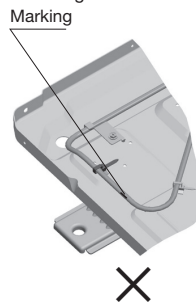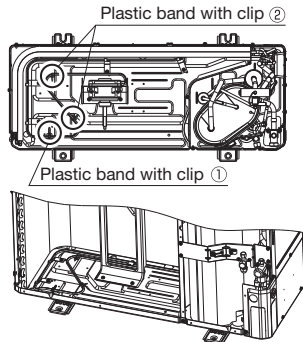

Model D

Step 9


9. Lay down the wiring on the same route of fan motor wiring.

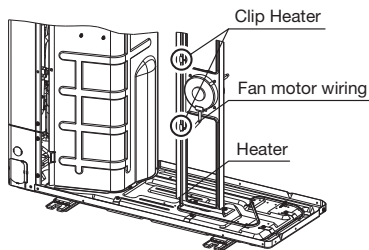

Model D

Step 10

10. Insert the connector to the port CnF (White).

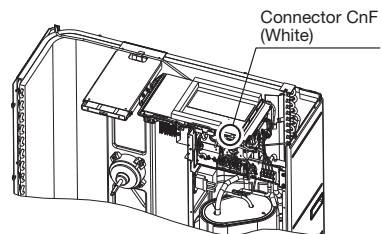

Model D


Step 11

11. Reassemble the fan blade.

Take care to align the D-cut of motor shaft and the fan blade. ▽ mark on the center of the fan shows the position of D-cut.

<Note>

1. Tightening torque of the nut is 4.0-4.9 N·m.
2. Do not rotate the axis of fan motor when tightening the nut. It may cause malfunction of the fan motor.

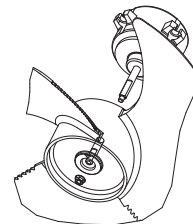


Step 12

12. Reassemble the panels.

1) Front panel


Use screw B for all places.

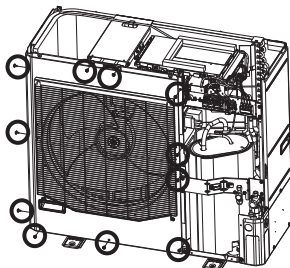


Model D

2) Service panel

Use screw B for all places.

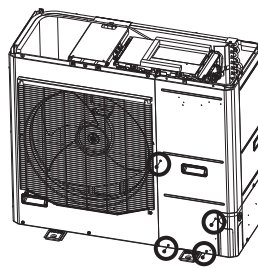

3) Top panel

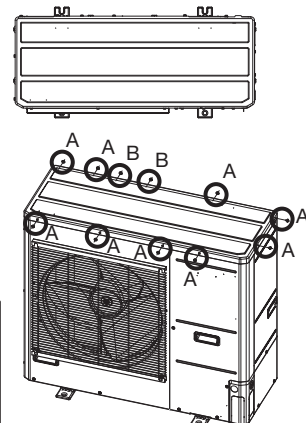

<Note>

- 1) When reassembling the service panel, take care not to damage the front panel with the edge.
- 2) There are two different length of screws. Be sure to use correct screw.
Long screw A: used for Top panel other than fixing fan bracket.
Short screw B: other place than A.



<Note>

- This heater should have bending radius of at least 25mm including non-heating part. Do not bundle the excess part of the wire. It may cause disconnection of the heater or insufficient capacity.
- Be sure to prevent the heater from touching any refrigerant piping. Especially, pay close attention not to make it touch with pipes which are close to the wiring route such as suction pipe, check valve and check joint.

5.5 SUPERLINK E BOARD (SC-ADNA-E)

PJZ012D029K 

- Read and understand the instructions completely before starting installation.
- Refer to the instructions for both indoor and outdoor units.

Safety precautions

- Carefully read "Safety precautions" first. Follow the instructions for installation.
- Precautions are grouped into "Warning⚠️" and "Caution⚠️". The "Warning⚠️" group includes items that may lead to serious injury or death if not observed. The items included in the "Caution⚠️" group also may lead to serious results under certain conditions. Both groups are crucial for safety installation. Read and understand them carefully.
- After installation, conduct the test operation of the device to check for any abnormalities. Describe how to operate the device to the customer following the installation instruction manual. Instruct the customer to keep this installation instruction for future reference.

⚠️Warning

- This device should be installed by the dealer where you purchase the device or a licensed professional shop. If the device is incorrectly installed by the customer, it may result in electric shock or fire.
- Install the device carefully following the installation instruction. If the device is incorrectly installed, it may result in electric shock or fire.
- Use the accessory parts and specified parts for installation. If any parts that do not match the specifications are used, it may result in electric shock or fire.
- A person with the electrical service certification should conduct the service based on the "Technical standards for electrical facilities", "Electrical Wiring Code", and the installation instruction. If the work is done incorrectly, it may result in electric shock or fire.
- Wiring should be securely connected using the specified types of wire. No external force on the wire should be applied to any terminals. If a secure connection is not achieved, it may result in electric shock or fire.









⚠️Caution

- Provide ground connection.
The ground line should never be connected to the gas supply piping, the water supply piping, the lightning conductor rod, nor the telephone ground. If the grounding is improper, it may result in electric shock.
- Do not install the device in the following locations.
 1. Where there is mist/spray of oil or steam such as kitchens.
 2. Where there is corrosive gases such as sulfuric acid gas.
 3. Where there is a device generating electromagnetic waves.
These may interfere with the control system resulting in the device becoming uncontrollable.
 4. Where flammable volatile materials such as paint thinner and gasoline may exist or where they are handled. This may cause a fire.

1 Application

Indoor-to-outdoor three core communication specification type 3 (since October 2007)


2 Accessories

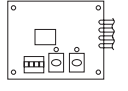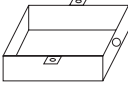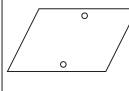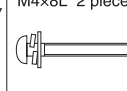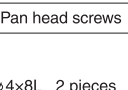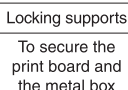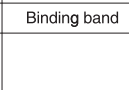SL E board 	Metal box 	Metal cover 	Screw for ground M4x8L 2 pieces 
Pan head screws φ4x8L 2 pieces 	Locking supports To secure the print board and the metal box Made of nylon 4 pieces 	Binding band 	Grommet 

5 Connection outline

Note for setting the address

- Set the address between 00 and 47 for the previous Superlink connection and between 000 and 127 for the new Superlink connection. (*1)
- Do not set the address overlapping with those of the other devices in the network. (The default is 000)

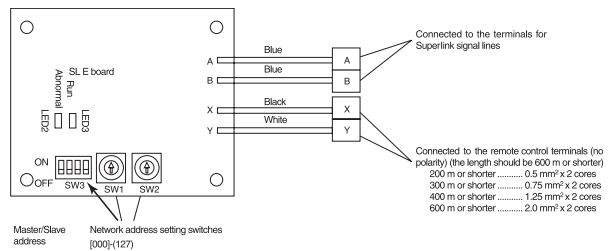

(*1) Whether the actual link is either the new Superlink or the previous Superlink depends on the models of the connected outdoor and indoor units. Consult the agent or the dealer.

3 Function

Allowing the central control SL1N-E, SL2NA-E, and SL4-AE/BE to control and monitor the commercial air-conditioner unit.

4 Control switching

Settings can be changed by the DIP switch SW3 on the SL E board as in the following.

Switch	Symbol	Switch	Remarks
SW3	1	ON	Master
		OFF (default)	Slave
	2	ON	Fixed previous protocol
		OFF (default)	Automatic adjustment of Superlink protocol
	3	ON	Indicates the forced operation stop when abnormality has occurred.
		OFF (default)	Indicates the status of running/stop as it is, when abnormality has occurred.
	4	ON	The hundredth address activated "1"
		OFF (default)	The hundredth address activated "0"


Signal line specification

Communication method	Previous Superlink	New Superlink
Line type	MVVS	MVVS
Line diameter	0.75 - 1.25mm ²	0.75/1.25mm ²
Signal line (total length)	up to 1000m	up to 1500/1000m (*2)
Signal line (maximum length)	up to 1000m	up to 1000m


(*2) Up to 1500 m for 0.75 mm², and up to 1000 m for 1.25 mm². Do not use 2.0 mm². It may cause an error.

(*3) Connect grounding on both ends of the shielding wire. For the grounding method, refer to the section "6 Installation".


- (1) Set the Superlink network address with SW1 (tens place), SW2 (ones place), and SW3 (hundreds place).
- (2) Set the SL E board SW3-1 to be ON (Master) when using this without any remote control (no wired remote controller nor wireless remote control).
- (3) Set up the plural master/slave device using the DIP switches on the indoor unit board.
- (4) Set up the remote control master/slave device using the slide switch on the remote control board.
- (5) Set up "0" to "F" using the address rotary switch on the indoor unit board when controlling the indoor unit with the multiple remote control.

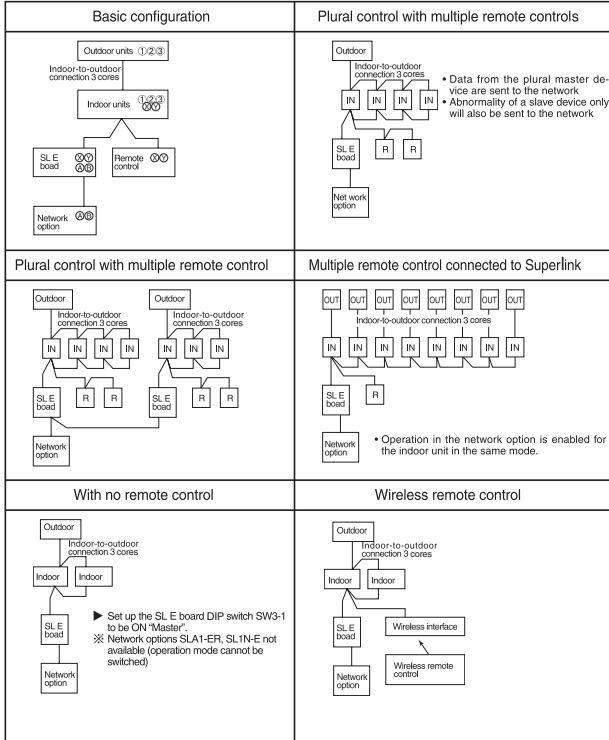

Connect grounding. Connect grounding for the power line to Ground ①, and grounding for the signal line to Ground ② or to the Ground on the indoor unit control box.

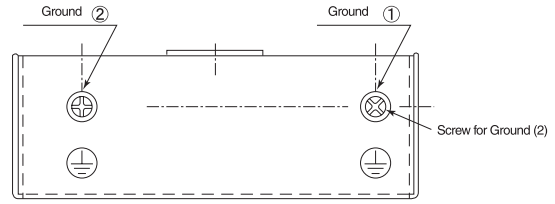

2. When connecting to the indoor unit control box (ceiling-concealed type and FDT type only):
 - (1) Mount the SL E board in the control box using the locking supports.
 - (2) Remove 6 bands from the box and put the wiring through the bands to be secured.

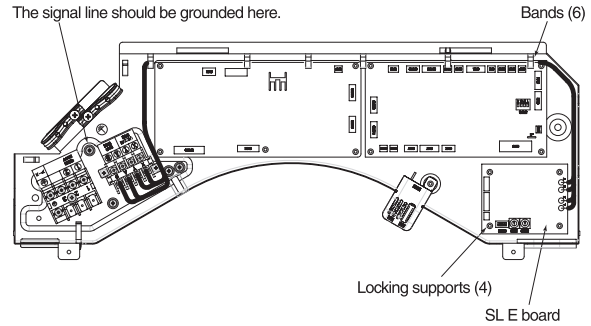

Electrical shock hazard! make sure to turn the power off for servicing. Be cautious so that no abnormal force should be applied to the wiring. Do not let the SL E board hung by the wiring. Do not damage the board with a screw driver. The board is sensitive to static electricity. Release the static electricity of your body before servicing. (You can do this by touching the control board which is grounded).


Location of installation

Install the device at the location where there are no electromagnetic waves nor where there is water and dust. The specified temperature range of the device is 0 to 40°C. Install the device at the location where the ambient temperature stays within the range. If it exceeds the specification, make sure to provide solution such as installing a cooling fan. When used outside of the range, it may cause abnormal operation.


6 Installation

1. When using the metal box (mounted on the indoor unit / mounted on the back of the remote control):


- (1) Mount the SL E board in the metal box using the locking supports.
- (2) Wiring should go through the provided grommet since then through the wiring to the hole on the Metal box. Secure the grommet after inserting the grommet into the Metal box as shown in below figure, then tie the wiring at the outlet of the unit using a binding band.

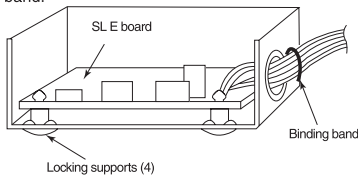

▲ When installed outside the indoor unit, put the metal cover on.

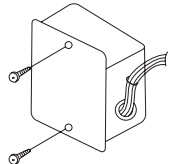

▲ When installed on the back of the remote control, mount it directly on the remote control bottom case.

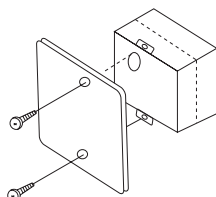

7 Indicator display

Check the LED 3 (green) and LED 2 (red) on the SL E board for flashing.

SL E board LEDs		Inspection mode	Display on the integrated network control device
Red	Green		
Off	Flashing	Normal communication	
Off	Off	<ul style="list-style-type: none"> Disconnection in the remote control communication line (X or Y) Short-circuit in the remote control communication line (between X and Y) Faulty indoor unit remote control power Faulty remote control communication circuit Faulty CPU on SL E board 	No corresponding unit number
One flash	Flashing	<ul style="list-style-type: none"> Disconnection in the Superlink signal line (A or B) Short-circuit in the Superlink signal line (between A and B) Faulty Superlink signal circuit 	
Two flashes	Flashing	<ul style="list-style-type: none"> Faulty address setting for the SL E board (Set up the address for previous SL E board : more than 48 new SL E board : more than 128) 	
Three flashes	Flashing	<ul style="list-style-type: none"> SL E board parent not set up when used without a remote control Faulty remote control communication circuit 	E1
Four flashes	Flashing	<ul style="list-style-type: none"> Address overlapping for the SL E board and the Superlink network connected indoor unit 	E2
Off	Flashing	<ul style="list-style-type: none"> Number of connected devices exceeds the specification for the multiple indoor unit control 	E10

INVERTER PACKAGED AIR-CONDITIONERS



MITSUBISHI HEAVY INDUSTRIES THERMAL SYSTEMS, LTD.

2-3, Marunouchi 3-chome, Chiyoda-ku, Tokyo, 100-8332, Japan
<http://www.mhi-mth.co.jp/en/>

Because of our policy of continuous improvement, we reserve the right to make changes in all specifications without notice.

© Copyright MITSUBISHI HEAVY INDUSTRIES THERMAL SYSTEMS, LTD.